




# Assembly Instructions

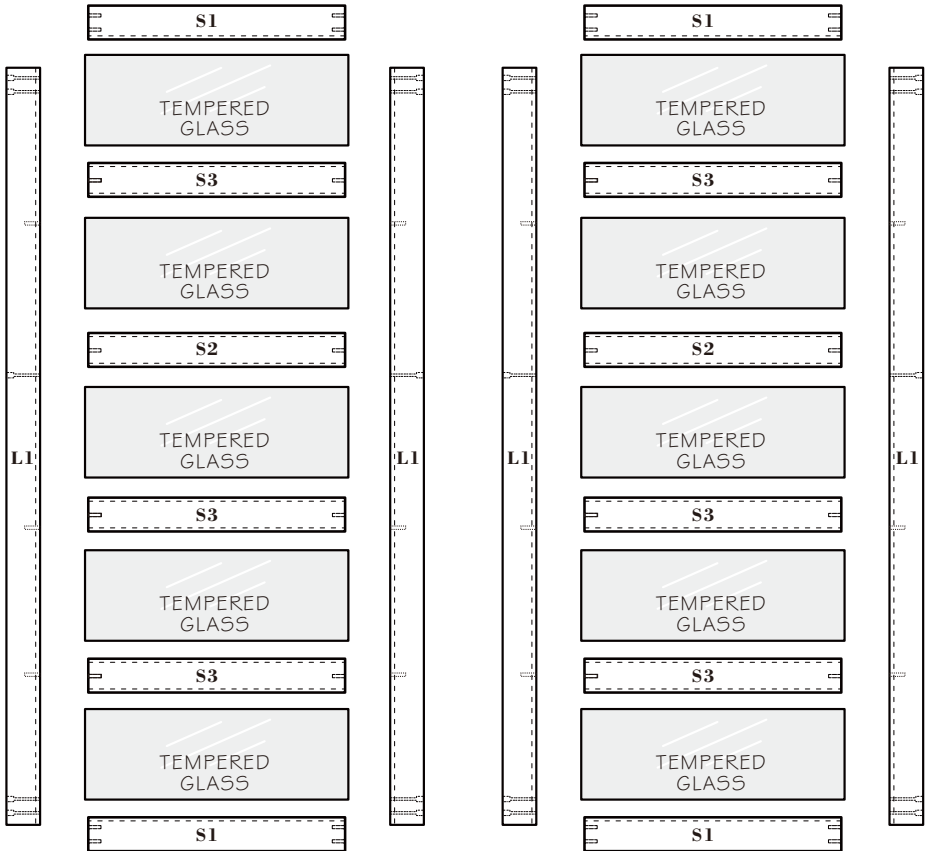


\*Note: S1 S2 S3 must be the same place as above

# Assembly Instructions

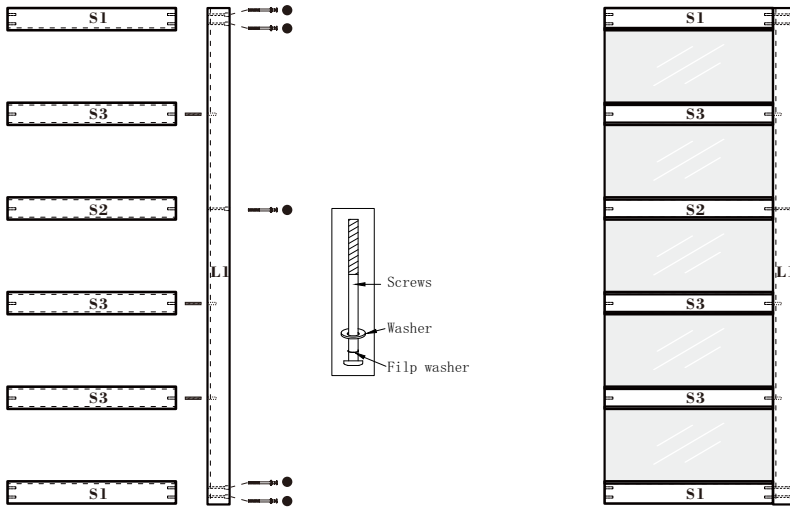


① Connet the rails S1, S2 with L1 by using bolts and then cover the bolt holes with stickers F.


② Put all the tempered glass in

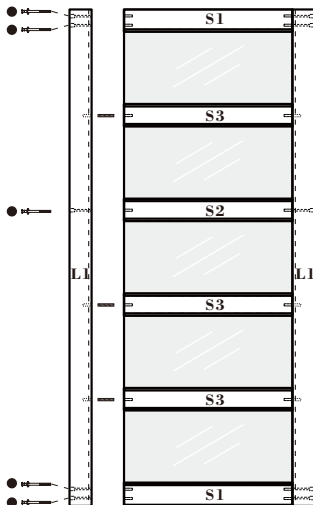

③ Connet the L1 with wood pins and bolts, cover the bolt holes with stickers F

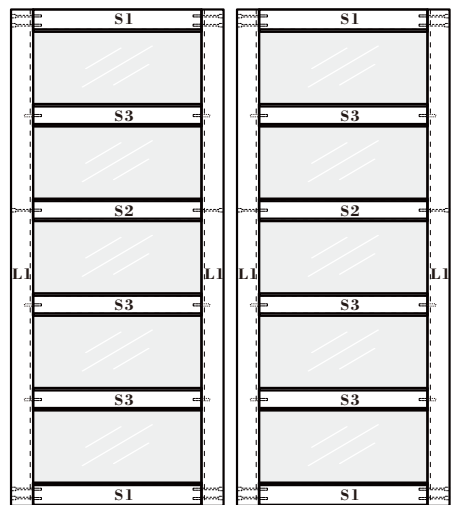

④ Repeat the preceding steps twice.

 X 20 pcs