

Media Console


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



Part List

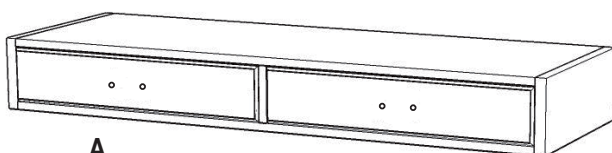

**A.
Cabinet**
1 pc.

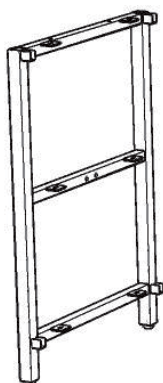

**D.
Side Frame**
2 pcs.




**B.
Stretcher**
3 pcs.



**B1.
Stretcher**
1 pc.



**C.
Stretcher**
1 pc.

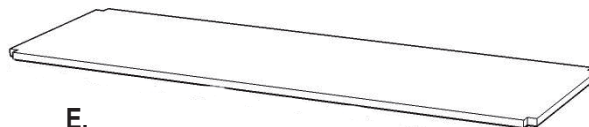

**E.
Shelf**
2 pcs.

Hardware List



Hex Wrench
1 pc.




**Small
Hex Wrench**
1 pc.



**M6x19
Head Cap Bolt**
24 pcs. (+1 extra)



Spring Washer
24 pcs. (+1 extra)



Flat Washer
24 pcs. (+1 extra)



**M4x32
Wood Screw**
27 pcs. (+1 extra)


Tools required for assembly : Phillips screwdriver, Drill, 3/8" Drill Bit, Level

Assembly Instructions 2/5

IMPORTANT

- * Do not tighten all the Head Cap Bolts until each part is properly assembled.
- * You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly. Use the included adjustable levelers to level.

Flat Washer
Spring Washer
Head Cap Bolt

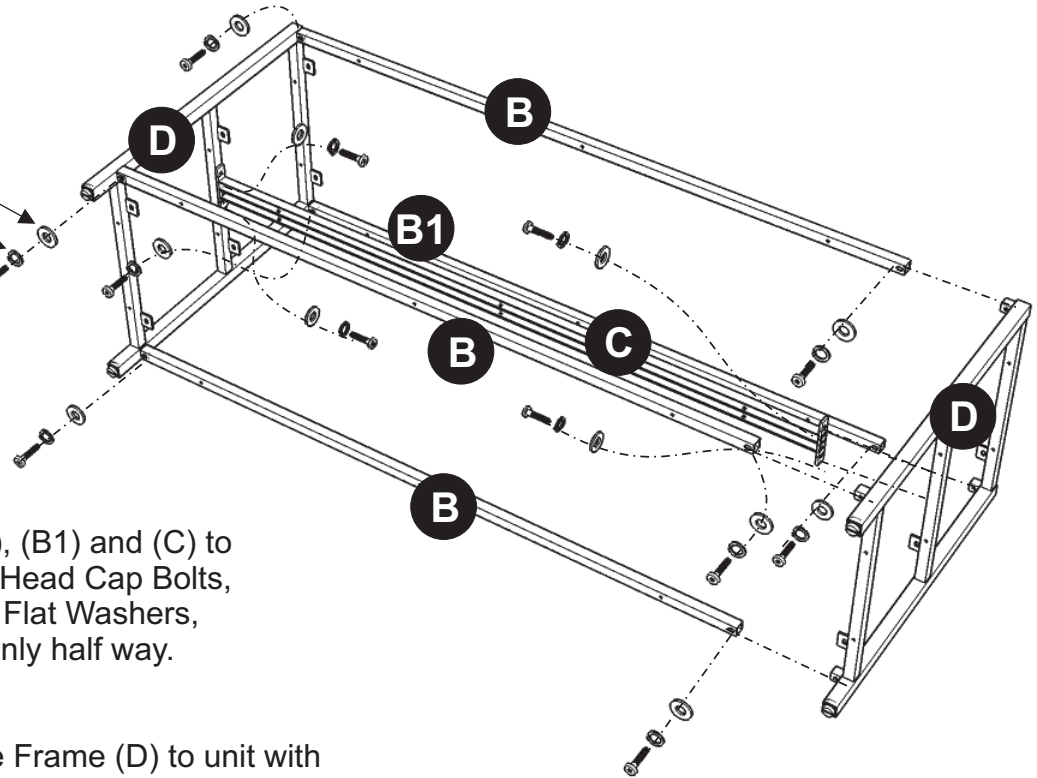

STEP 1

Attach Stretchers (B), (B1) and (C) to Side Frame (D) with Head Cap Bolts, Spring Washers and Flat Washers, tightening the bolts only half way.
(See Figure 1)

Attach the other Side Frame (D) to unit with Head Cap Bolts, Spring Washers and Flat Washers, tightening the bolts only half way.

Tighten all Head Cap Bolts.

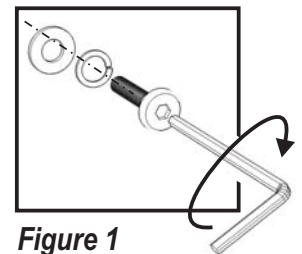



Figure 1

STEP 2

Slide Shelf (E) into the middle of unit.

Attach with Head Cap Bolts, Spring Washers and Flat Washers.

Attach with 7X Wood Screws.


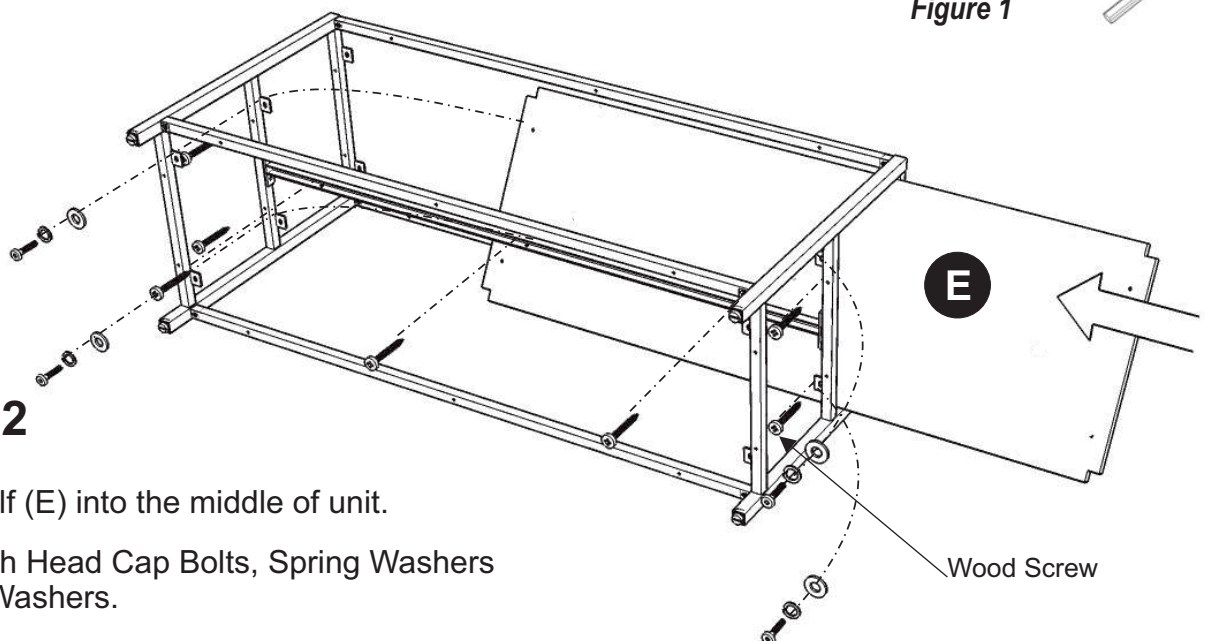


STEP 3

Slide Shelf (E) into position.


Attach with Head Cap Bolts, Spring Washers and Flat Washers.

Attach with 10X Wood Screws.

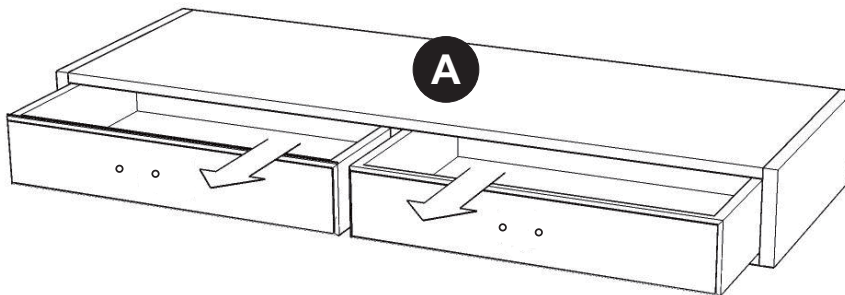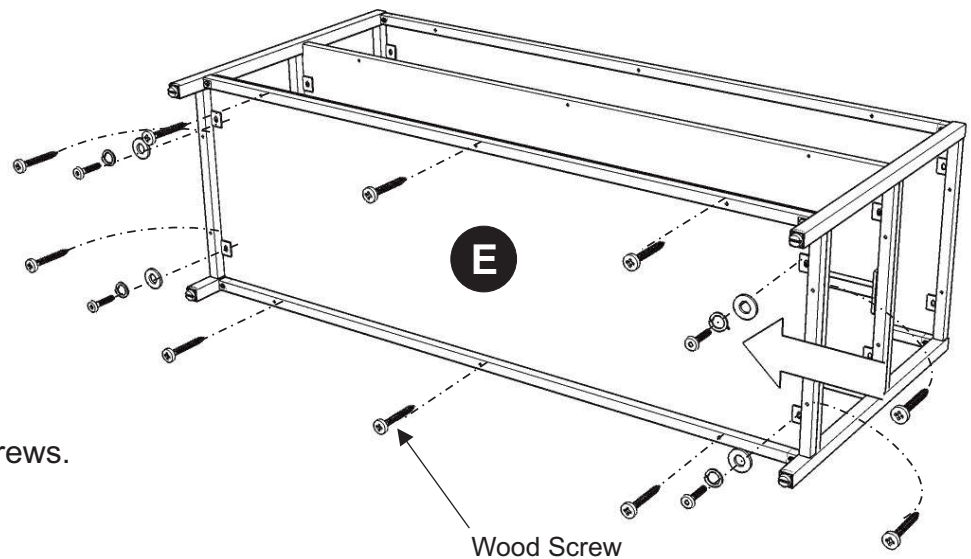

STEP 4


Remove the drawers, then place Cabinet (A) upside down on a soft cloth.

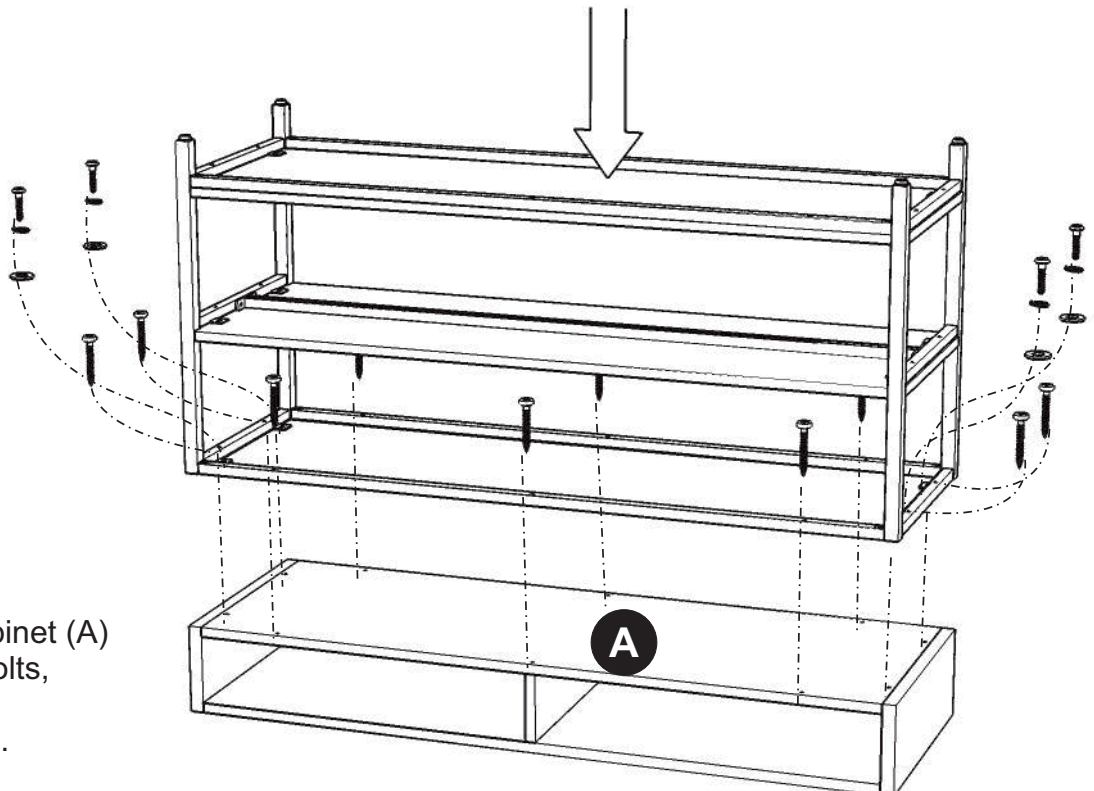

STEP 5

Attach unit to Cabinet (A) with Head Cap Bolts, Spring Washers and Flat Washers.

Attach with 10X Wood Screws.

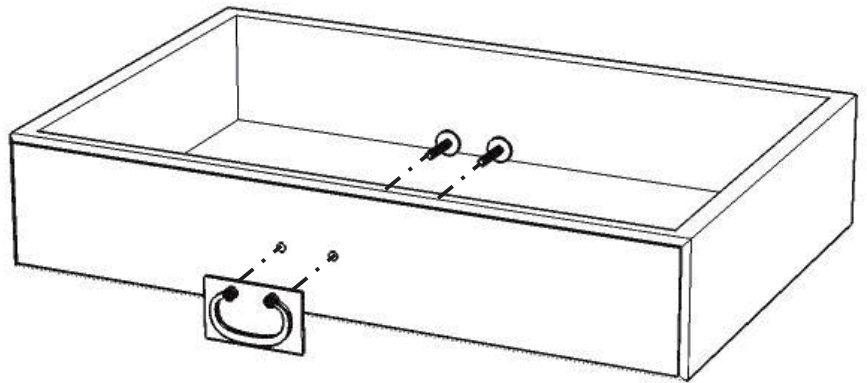

STEP 6

Remove the Pull Handles that are installed on the inside of the drawers and re-install them on the outside of the drawer.

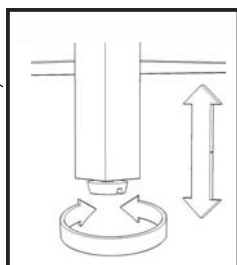
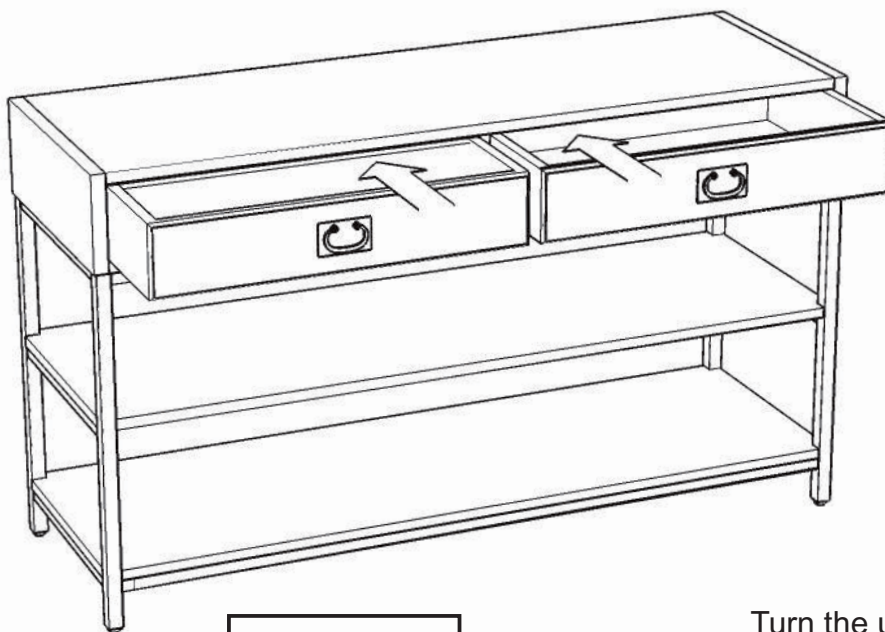


Figure 2

STEP 7

Turn the unit over to its' upright position.

Slide the drawers into position.

To level the unit, adjust the adjustable levelers on the bottom of unit. (See figure 2)

Attention!

To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly!

Place unit at desired location.



Drill a 3/8" hole in wall at the appropriate location.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.


Attach Bracket at pre-drilled hole at top of unit with Machine Screw.

Use Tipover Restraint to secure Bracket on unit to Bracket on wall.


Put tie end of Tipover Restraint into loop end of Tipover Restraint and pull until tight.

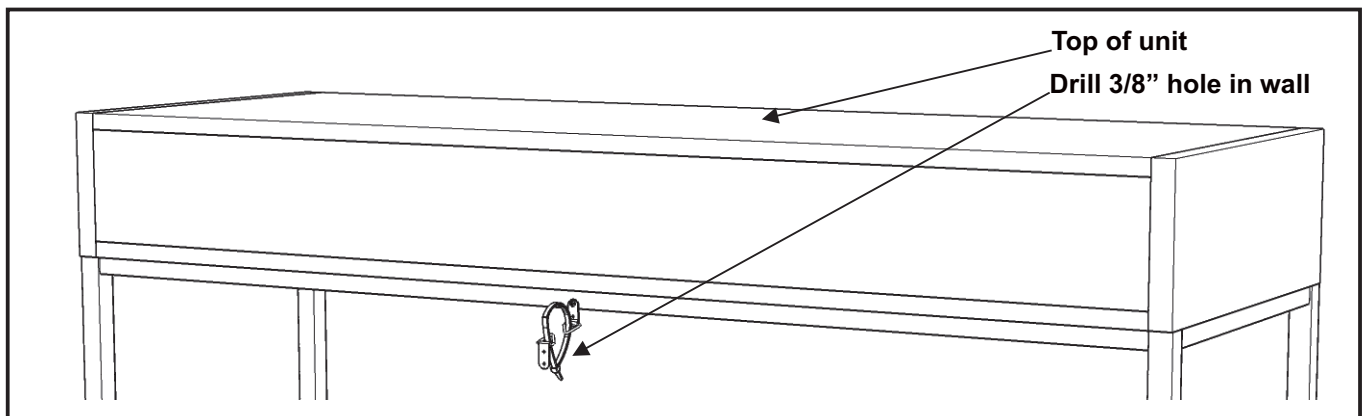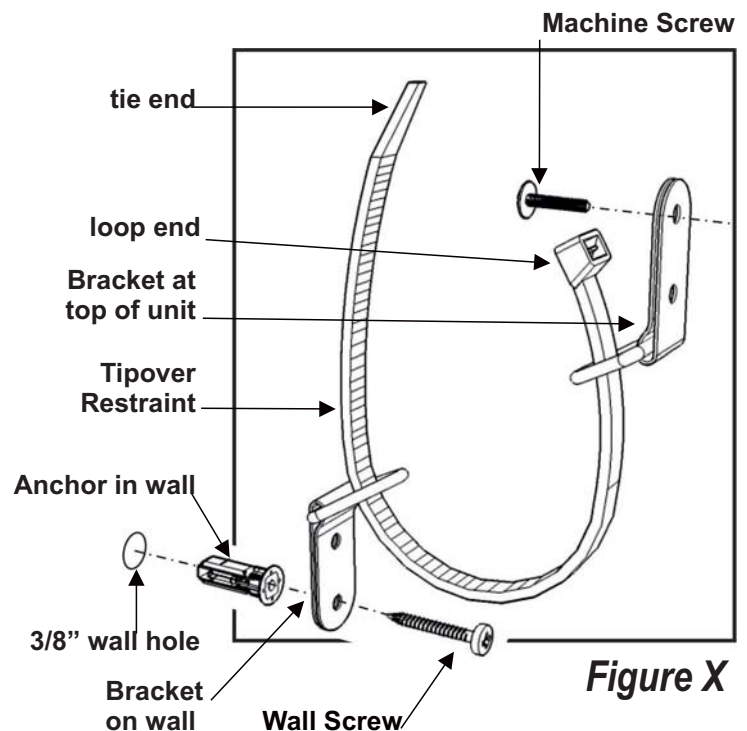


Hardware List

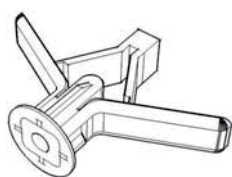

Anchor
1 pc.(+1 extra)

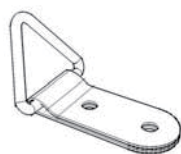

Bracket
2 pcs.(+1 extra)

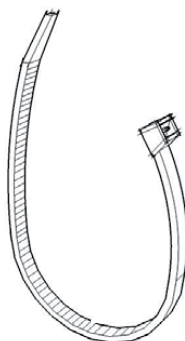

Tipover Restraint
1 pc.(+1 extra)



**M3.5x40
Wall Screw**
1 pc.(+1 extra)



**M4x16
Machine Screw**
1 pc.(+1 extra)