


ASSEMBLY INSTRUCTIONS

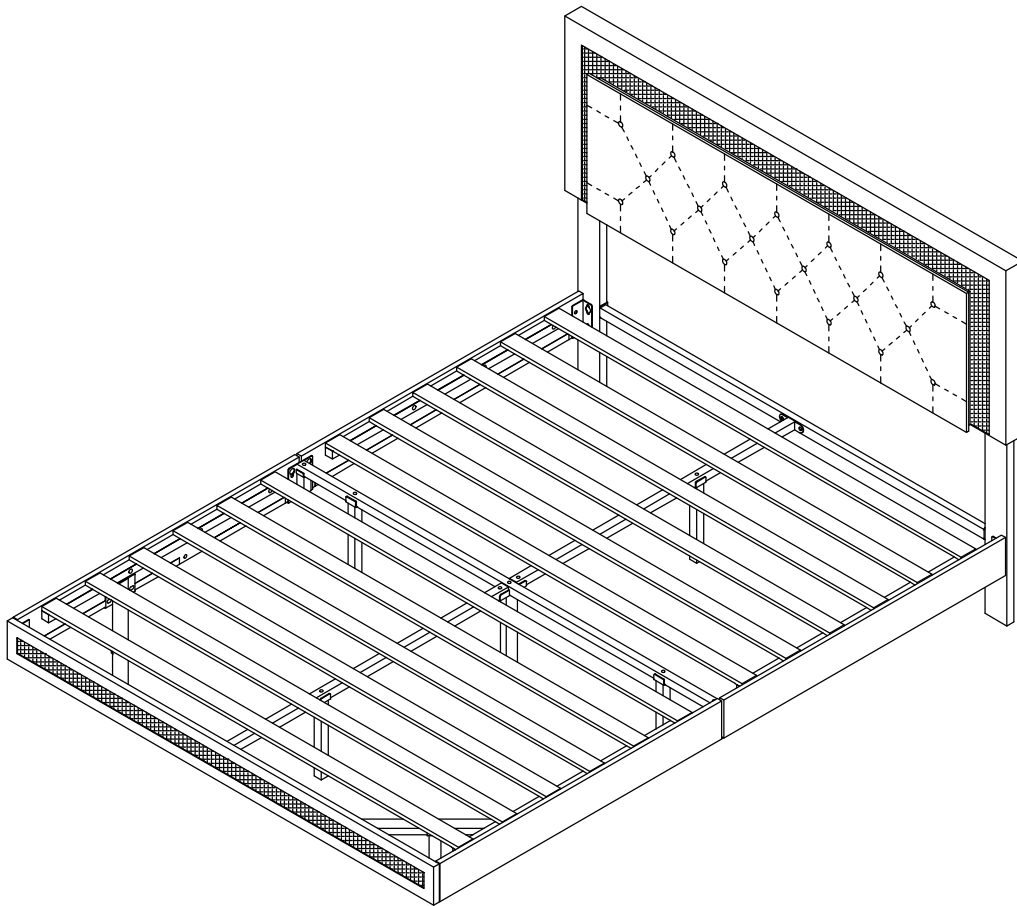


Note:

Should be assembled on flat ground to keep balance.

It needs at least two people to install.


Before starting the assembly, you must read the whole manual and follow the instructions.

EXPLODED VIEW

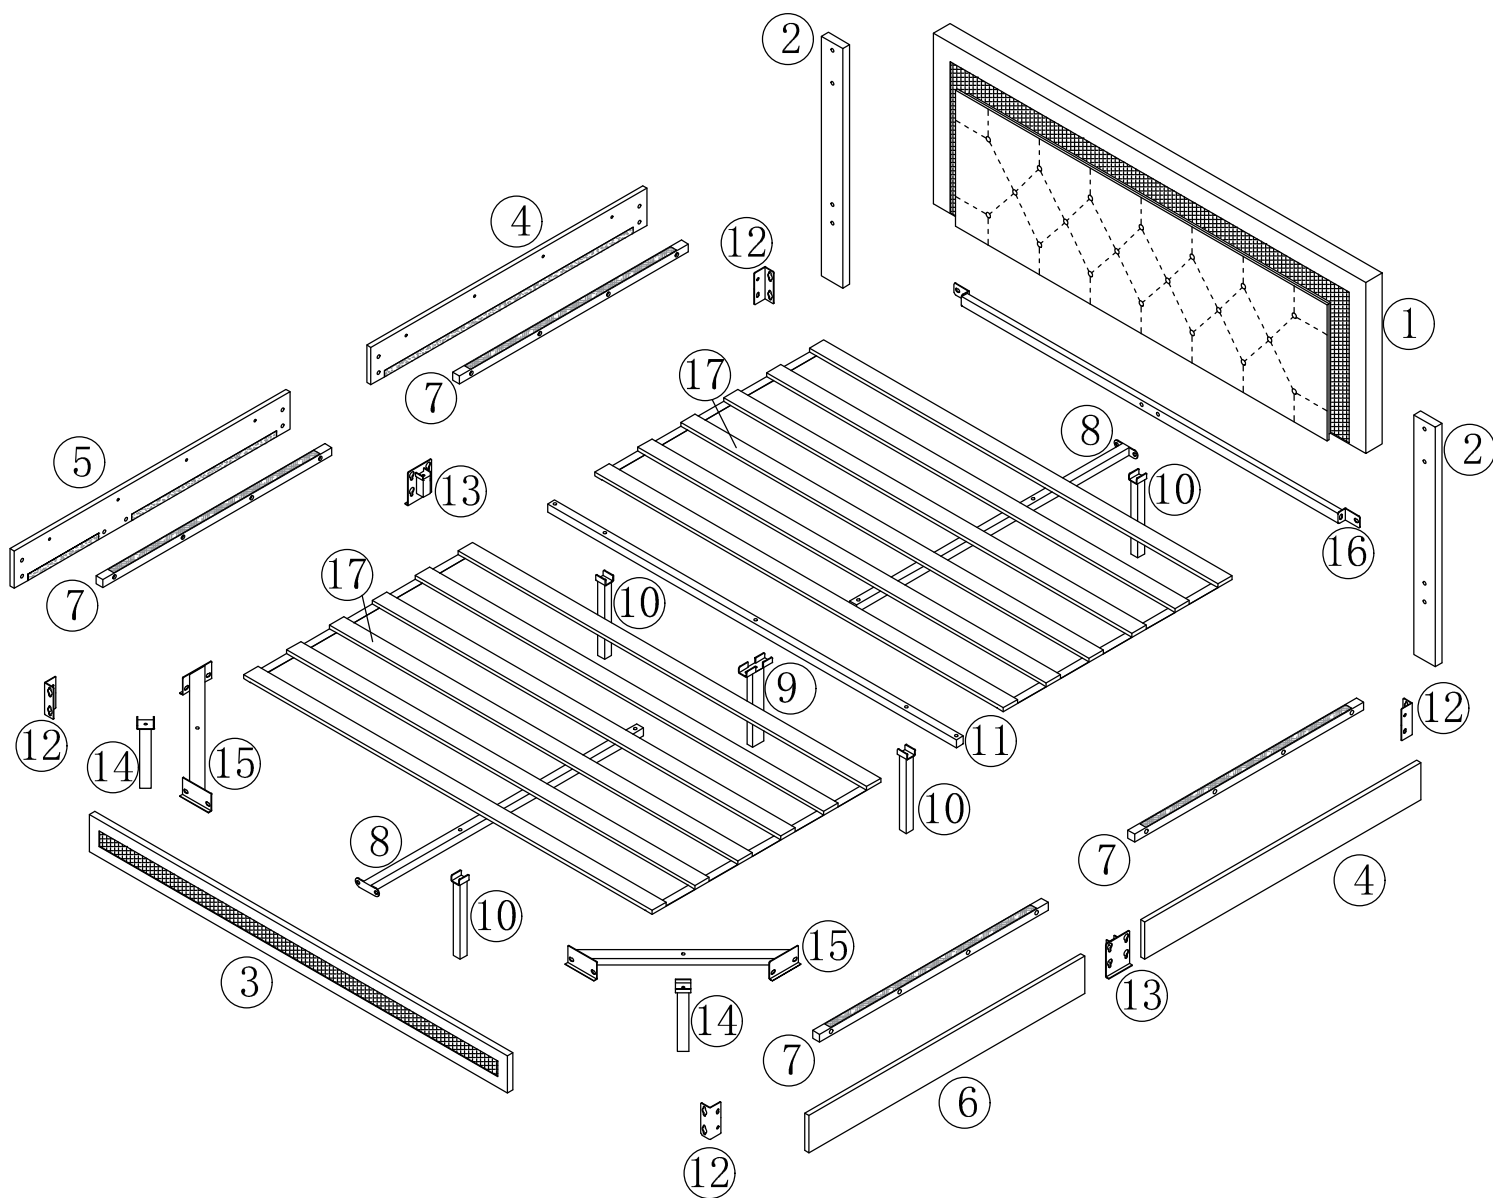





Pls make sure all the accessories are complete!

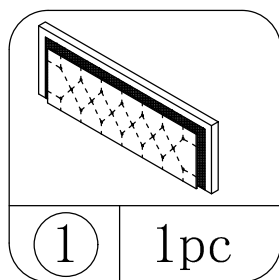


① 1pc

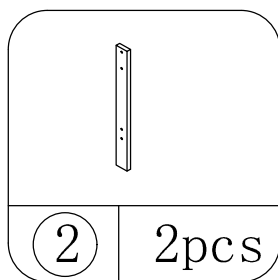


② 2pcs

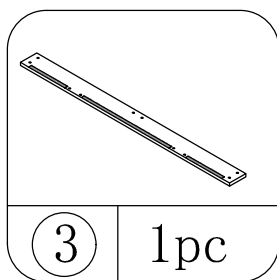


③ 1pc

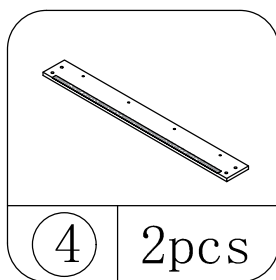


④ 2pcs

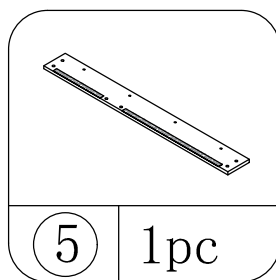


⑤ 1pc

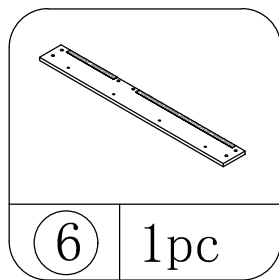


⑥ 1pc

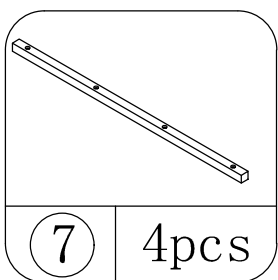


⑦ 4pcs

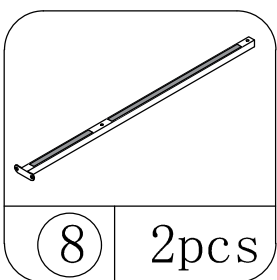


⑧ 2pcs

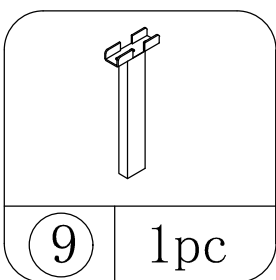


⑨ 1pc

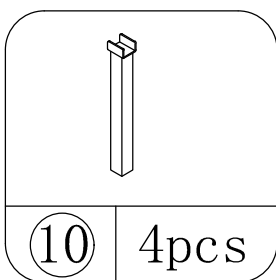


⑩ 4pcs

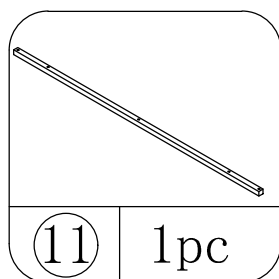


⑪ 1pc

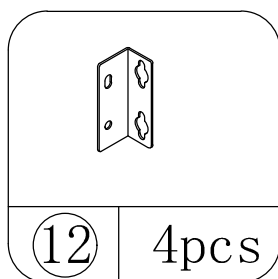


⑫ 4pcs

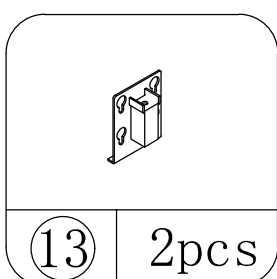


⑬ 2pcs

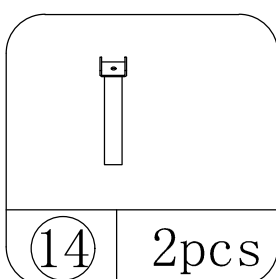


⑭ 2pcs

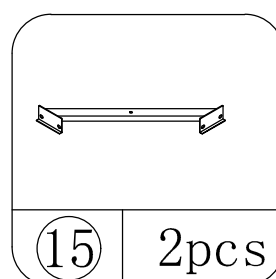


⑮ 2pcs

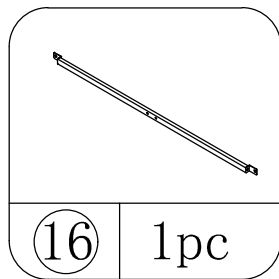


⑯ 1pc

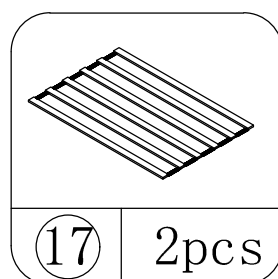


⑰ 2pcs

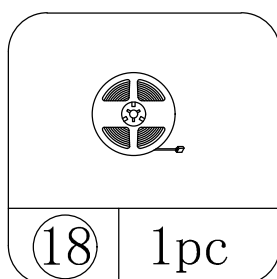


⑱ 1pc

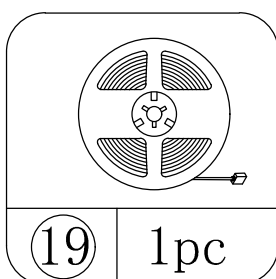


⑲ 1pc

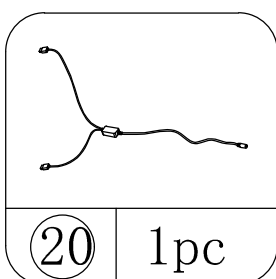

⑳ 1pc

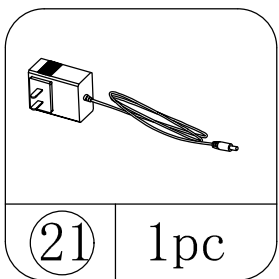

㉑ 1pc

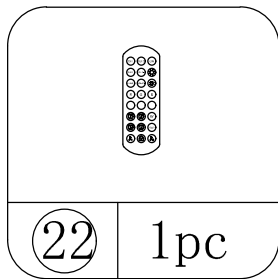

㉒ 1pc



M8x40mm

① 15pcs



M8x16mm

② 34pcs



M8x45mm

③ 2pcs



M8

④ 2pcs



M6x35mm


⑤ 16pcs



S5
1pc



S4
1pc



M8
1pc


Step1

A




M8x40mm


4pcs

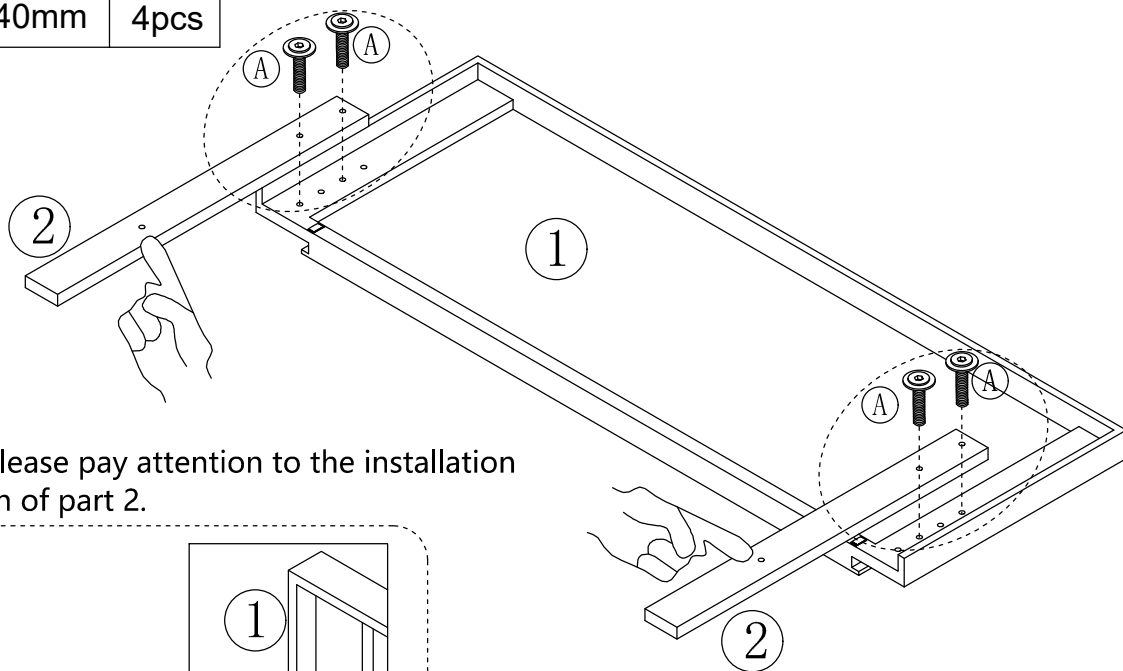

NOTE: Please pay attention to the installation direction of part 2.

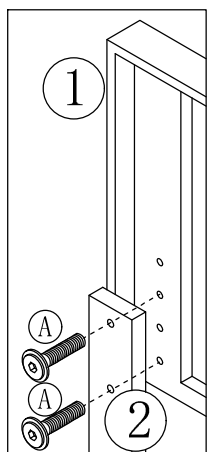

Screws can adjust the height of two stops

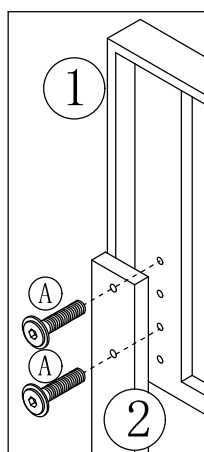


Step2

E



M6x35mm

16pcs

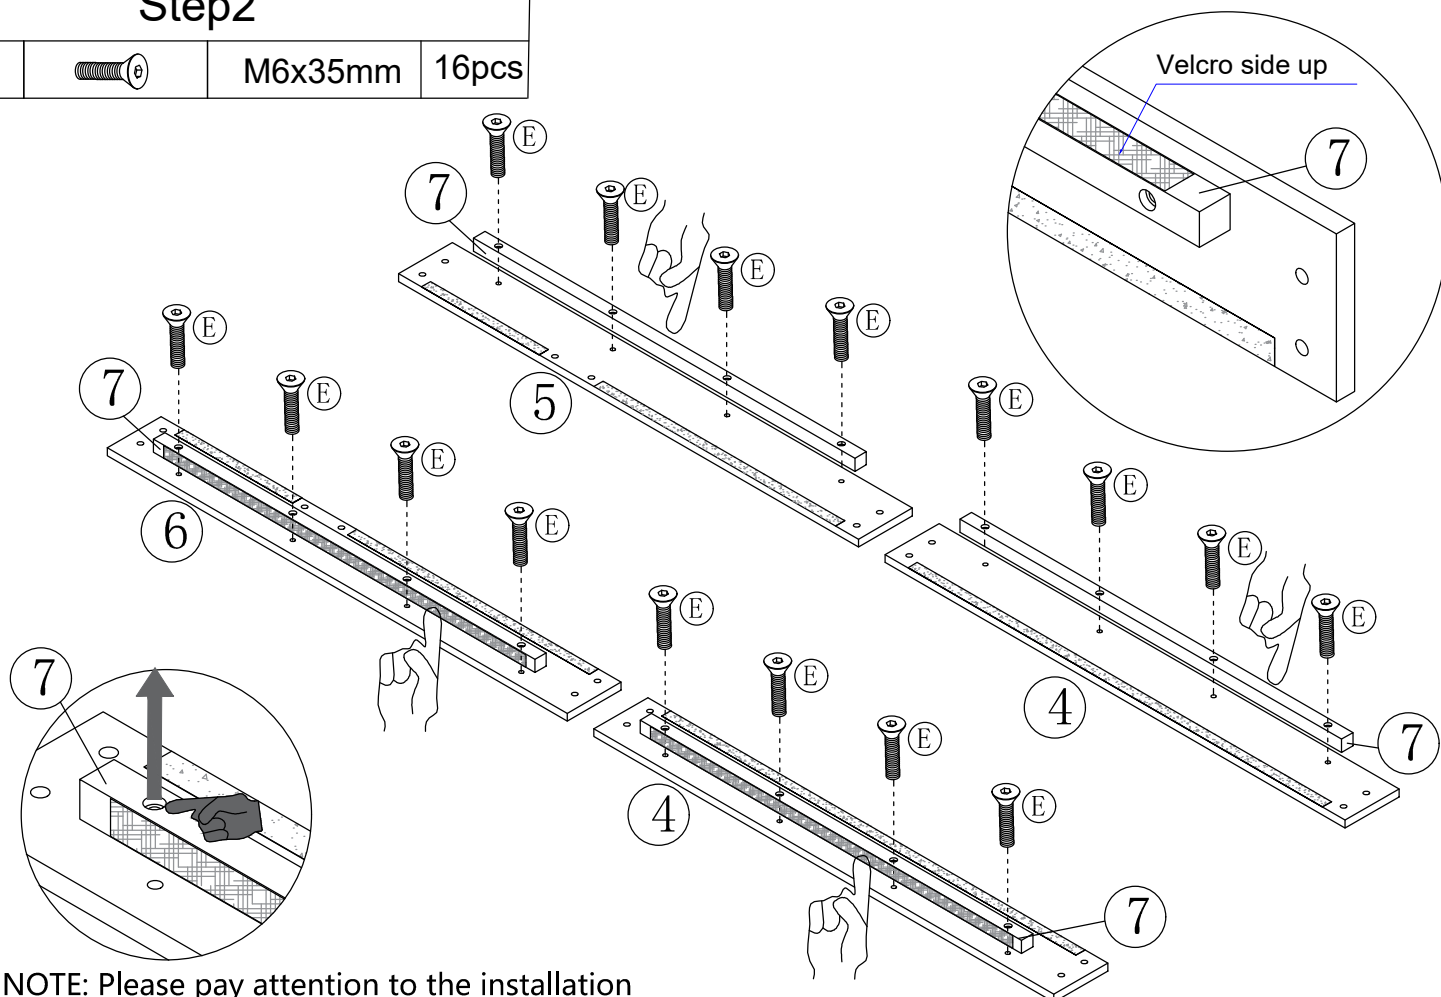

NOTE: Please pay attention to the installation direction of part 7.


Step3

B



M8x16mm

8pcs

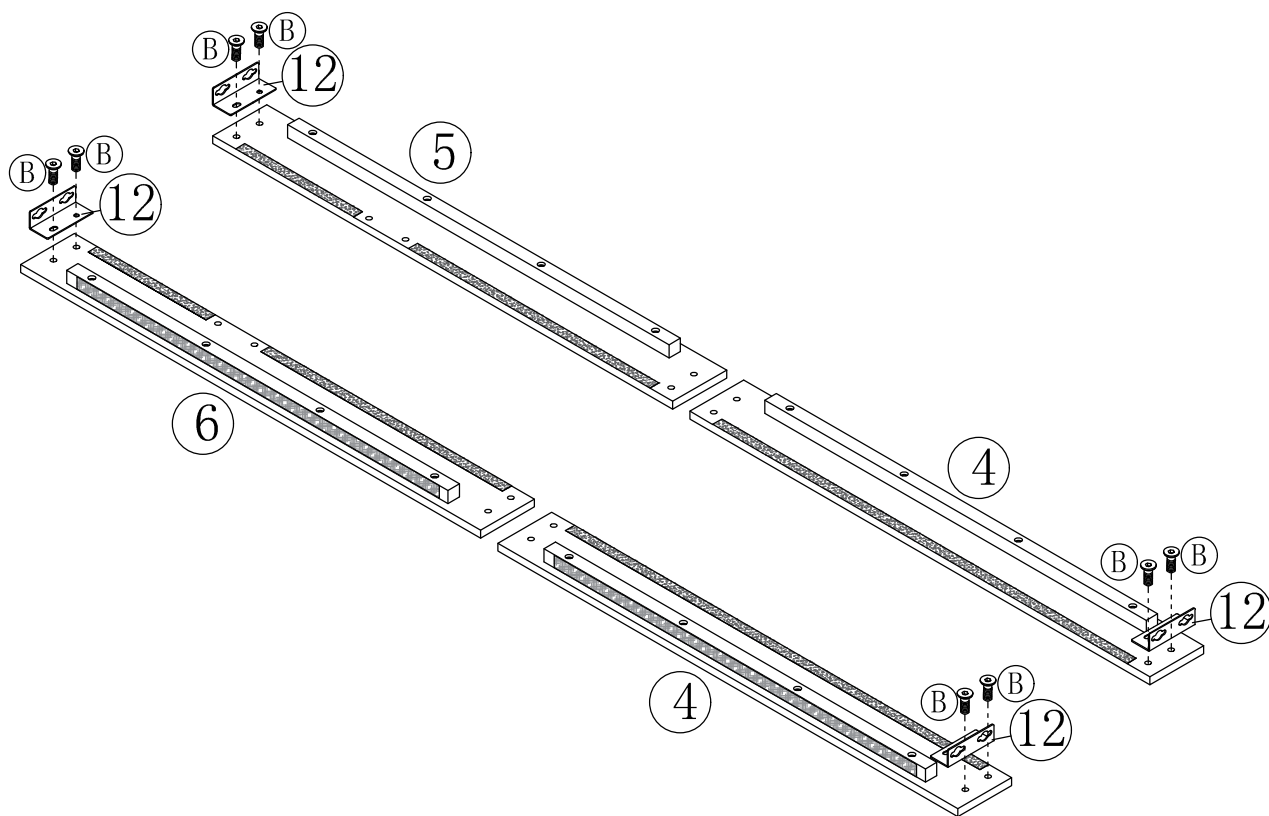


Step4

B



M8x16mm

8pcs

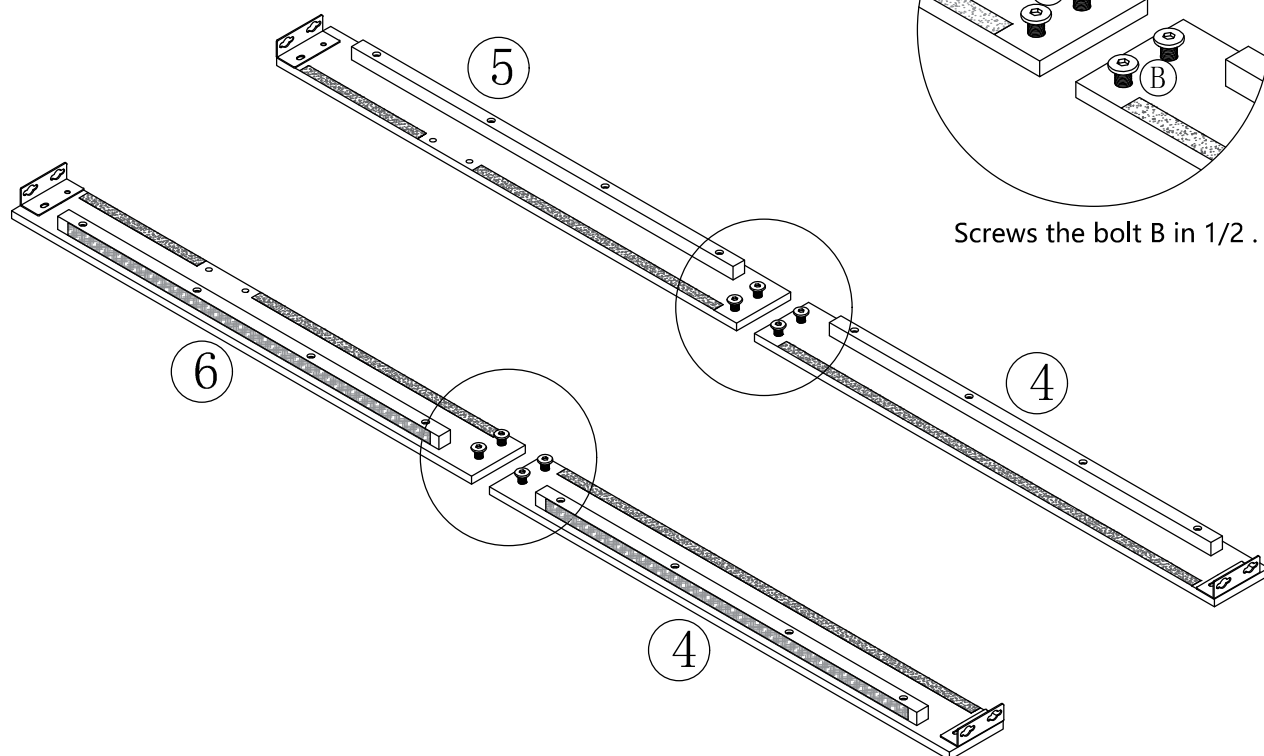

Step5


A



M8x40mm

4pcs

Please note that the side with EVA is upward during installation.

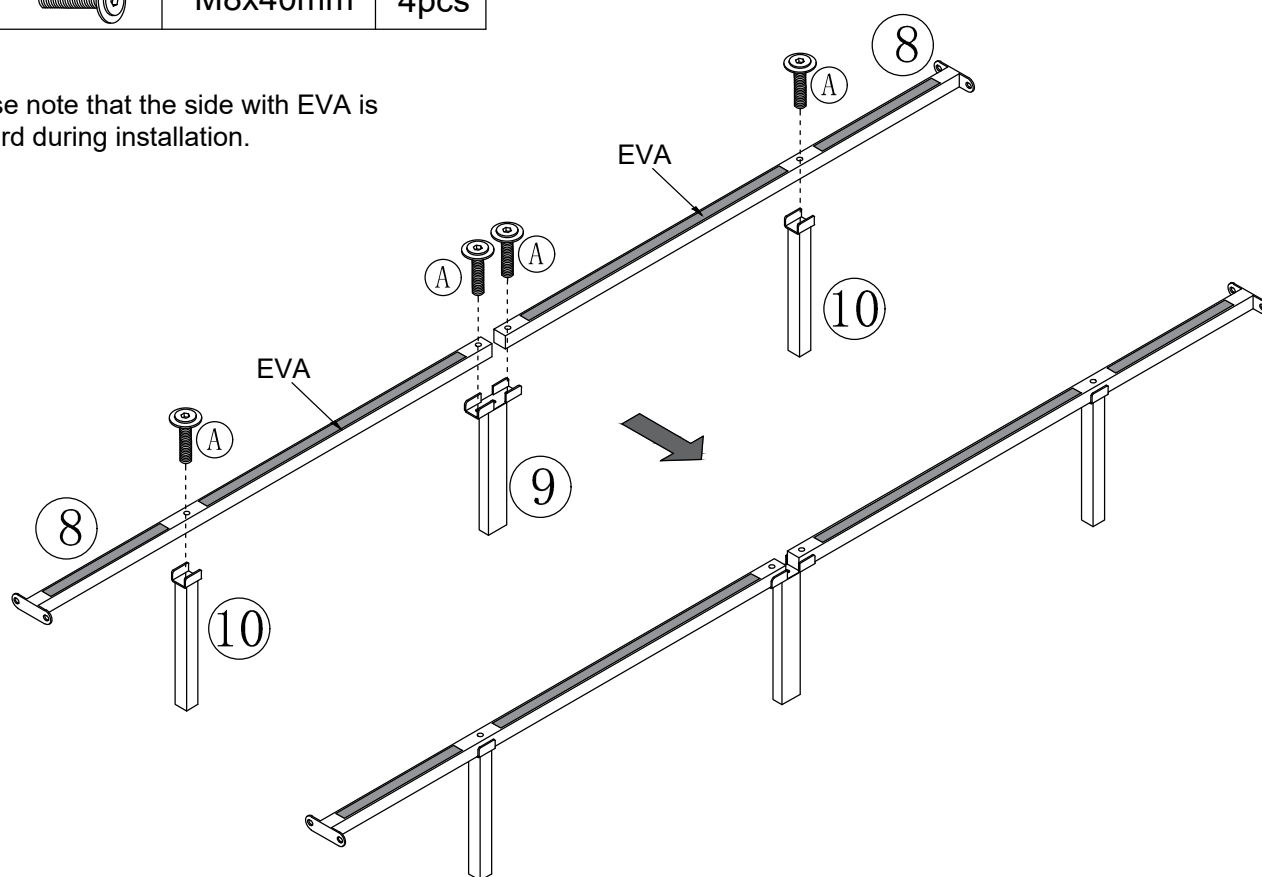


Step6

A



M8x40mm

4pcs

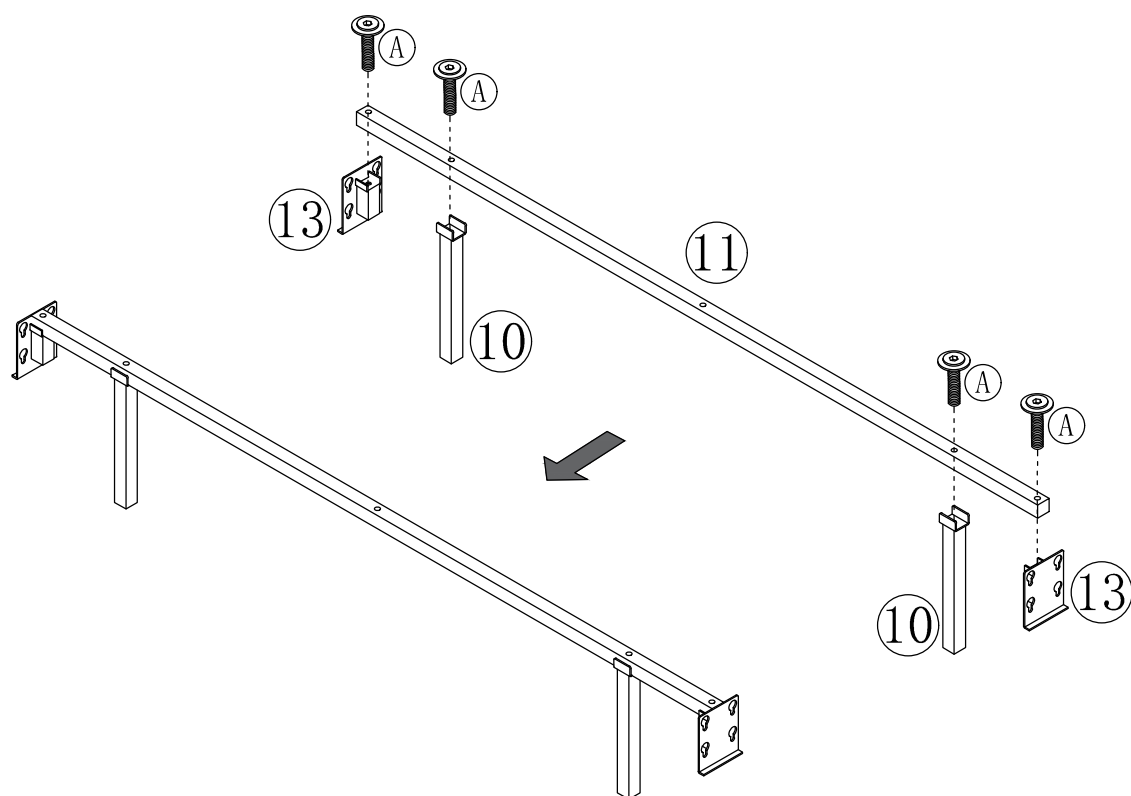


Step7

A



M8x40mm

1pc

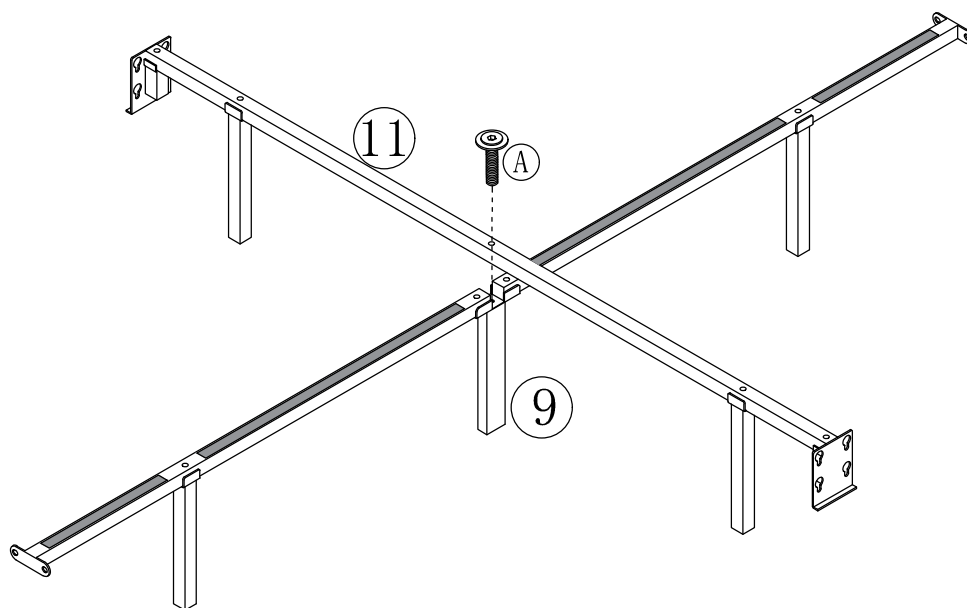

Step8

C



M8x45mm



2pcs

B





M8x16mm



2pcs

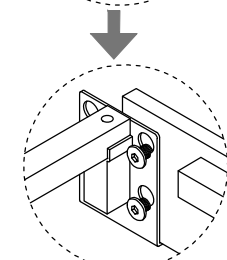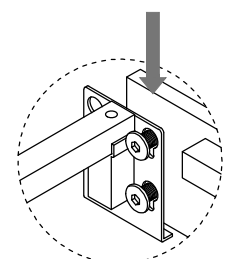

Tighten the screws.

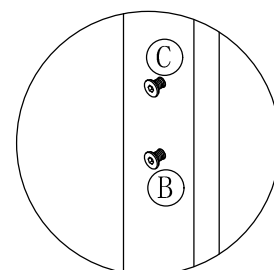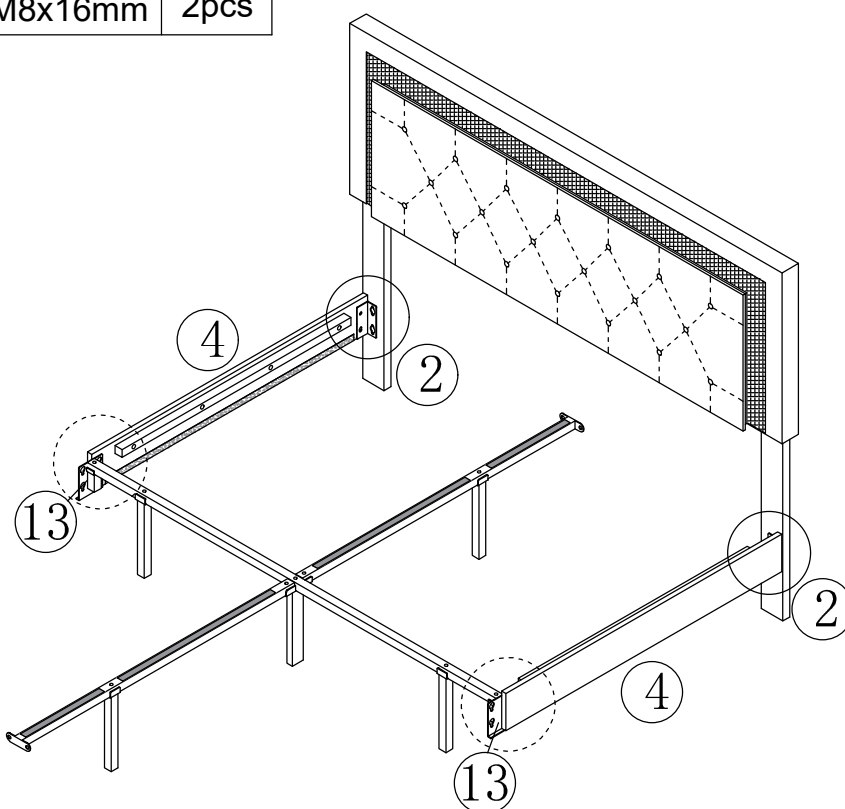

Screws the bolt C&B in 1/2 .

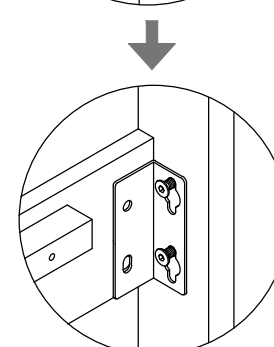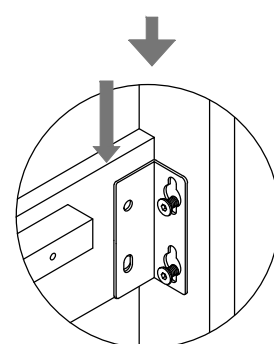

Tighten the screws.





Step9

D



M8

2pcs

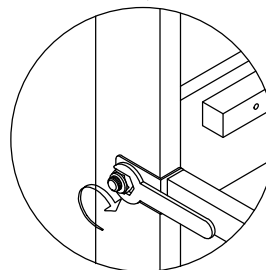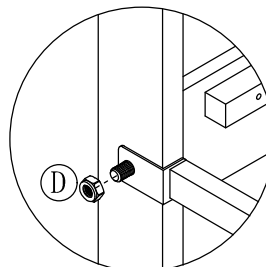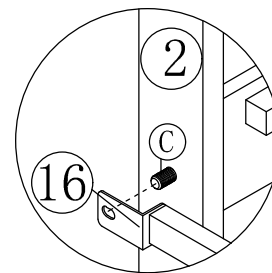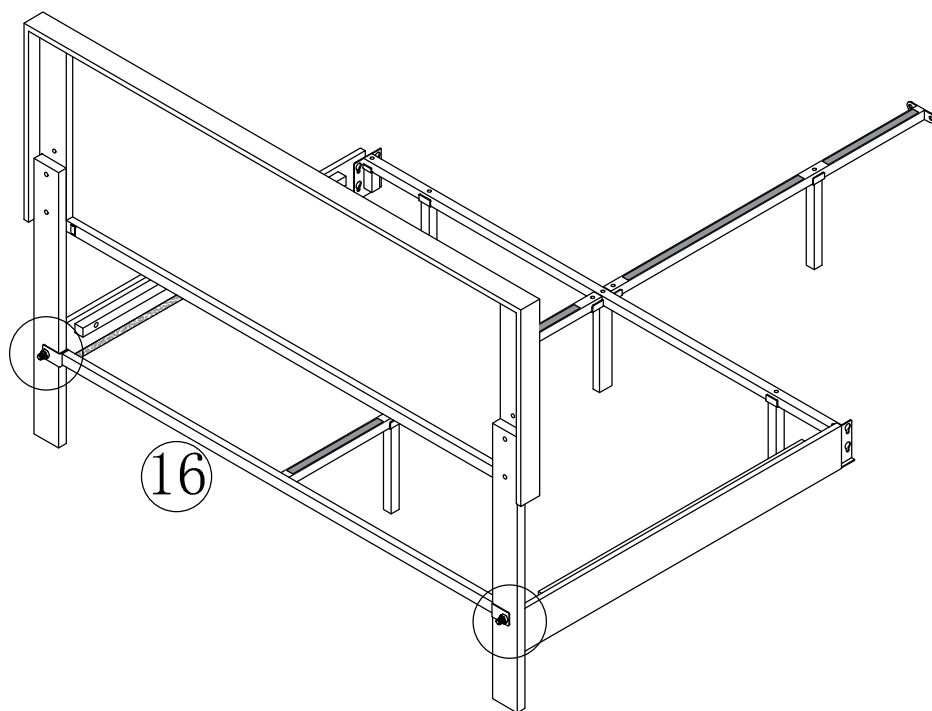



Step10

B





M8x16mm

4pcs

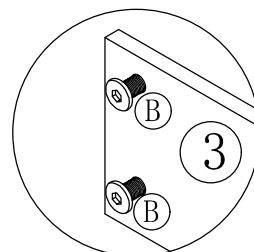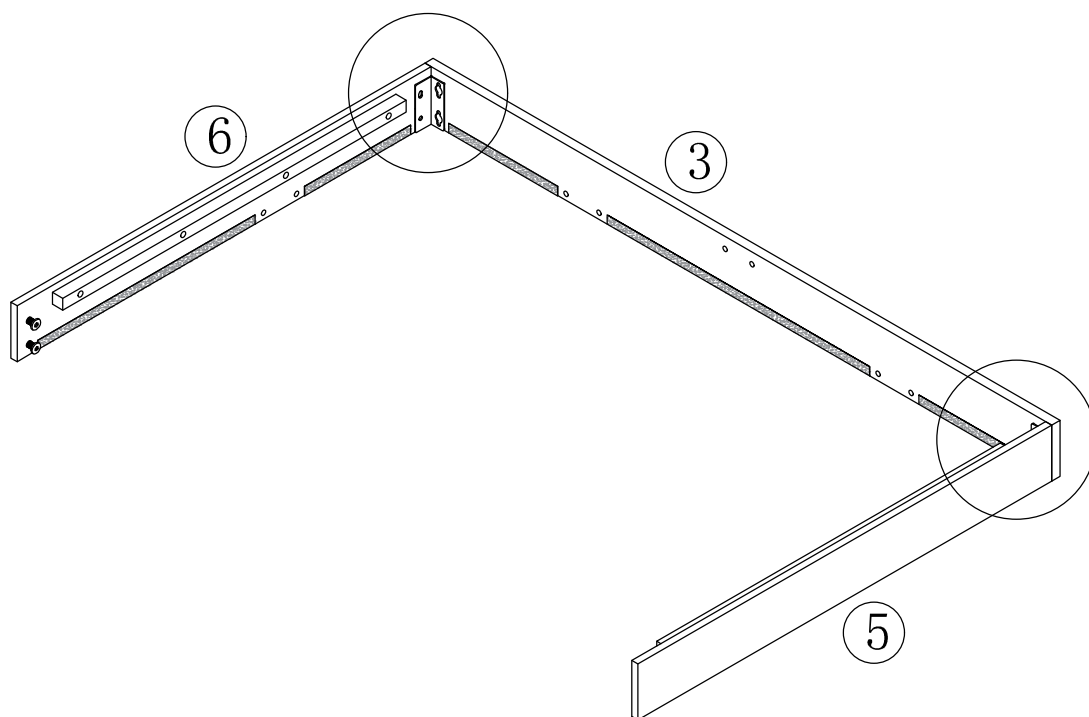



Screws the bolt B in 1/2 .

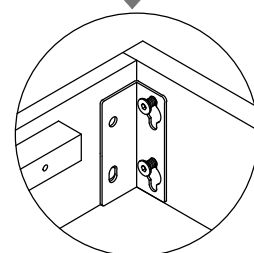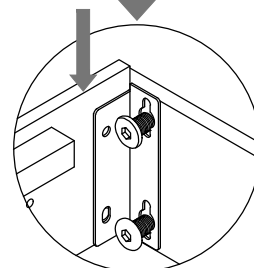

Tighten the screws.

Step11



B		M8x16mm	2pcs
---	---	---------	------

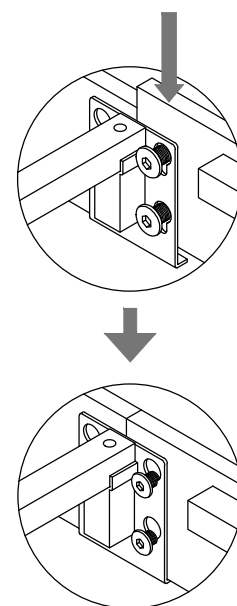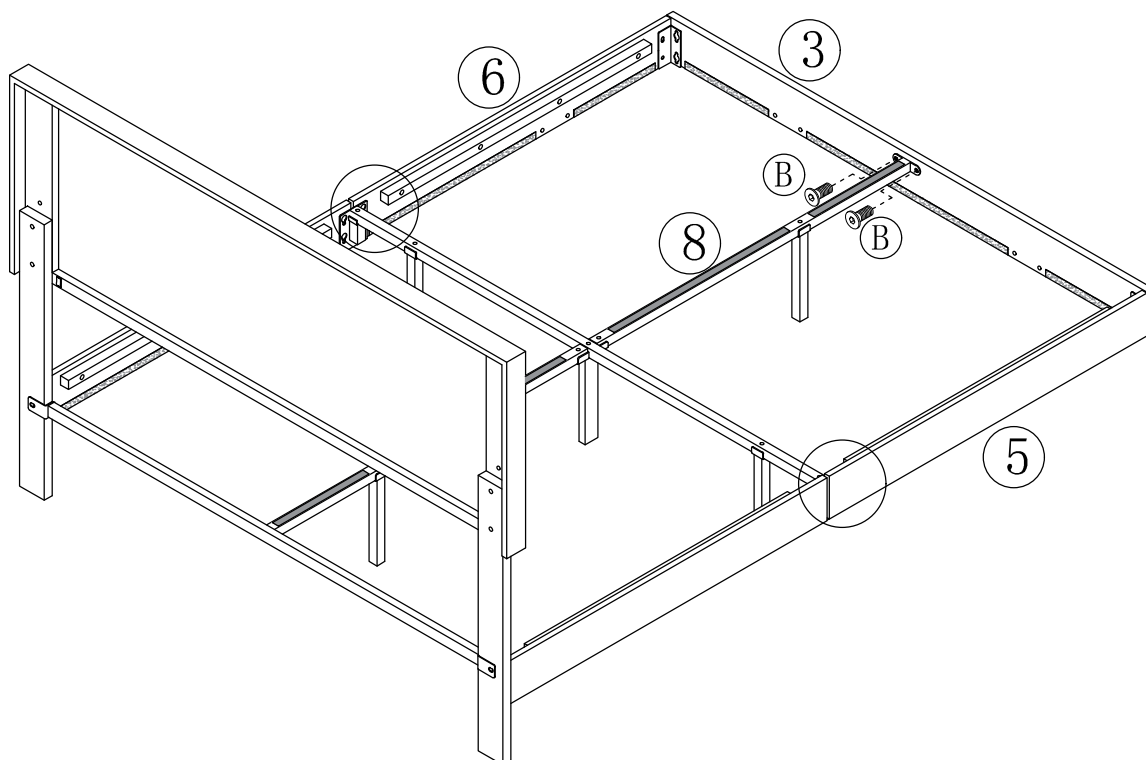

Tighten the screws.


Step12

B		M8x16mm	8pcs
---	---	---------	------

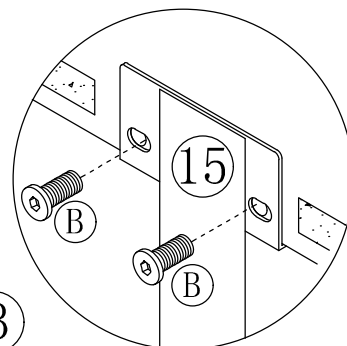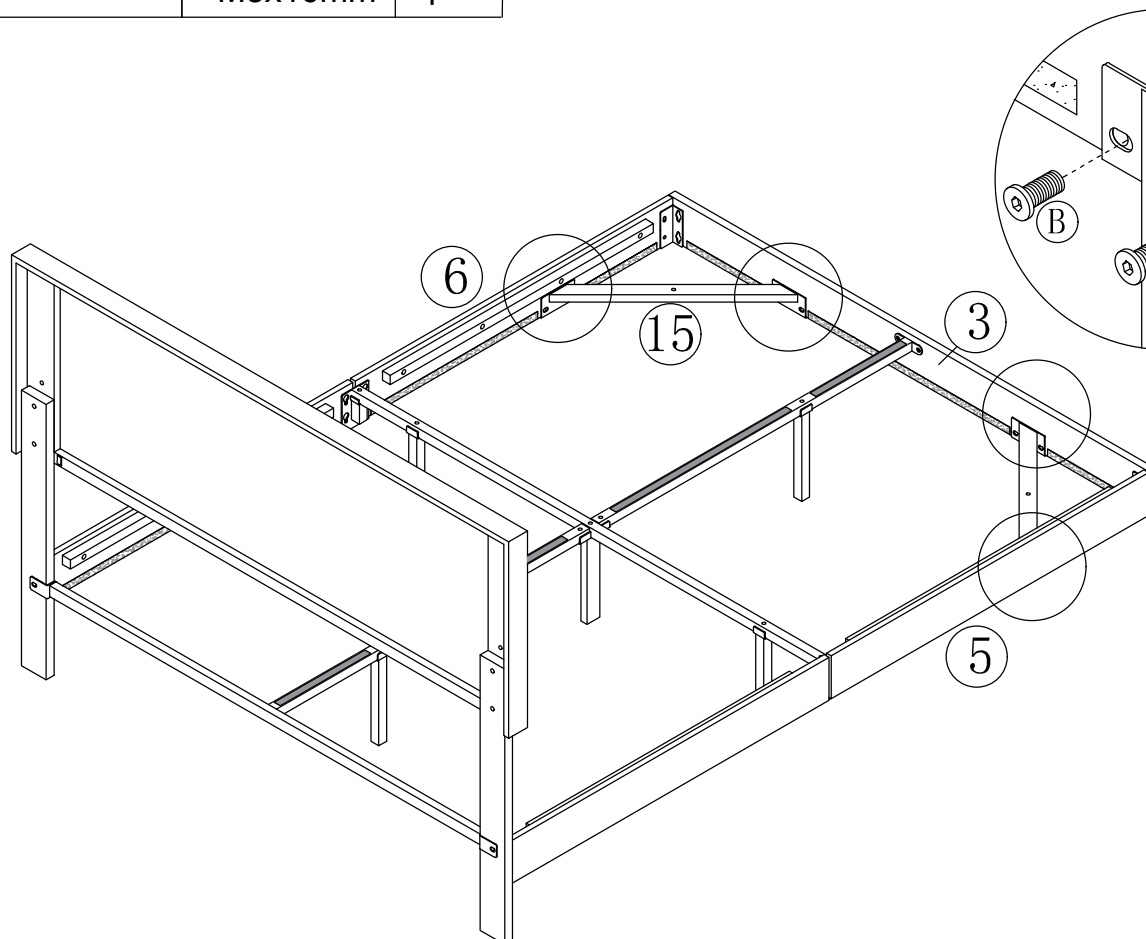


Step13			
A		M8x40mm	2pcs

2pcs

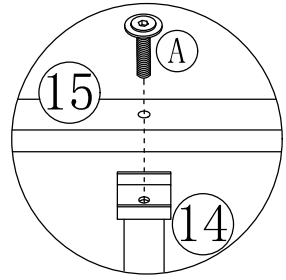


Step14			
B		M8x16mm	2pcs


2pcs

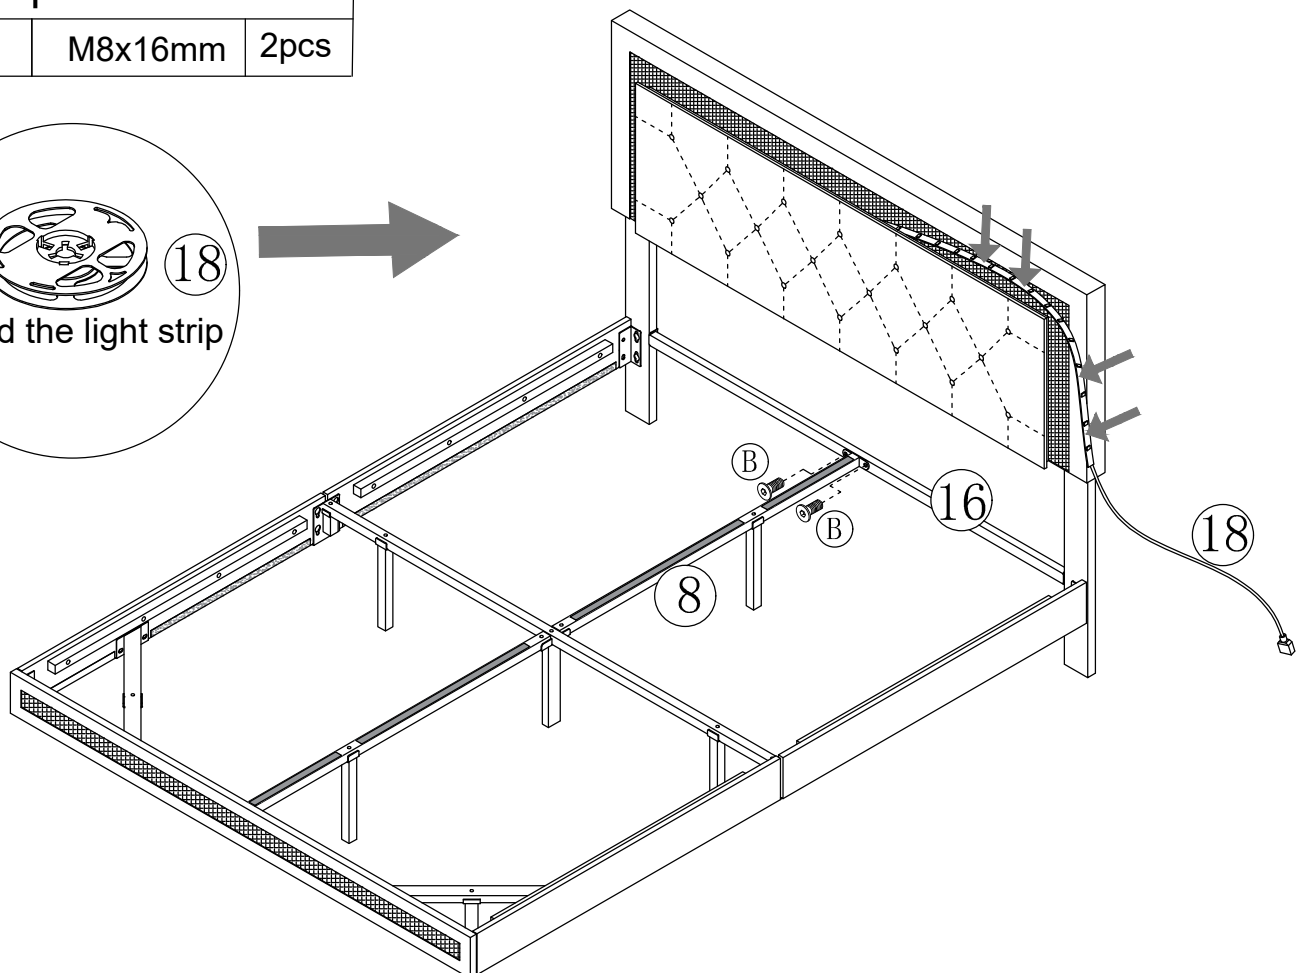


Step15

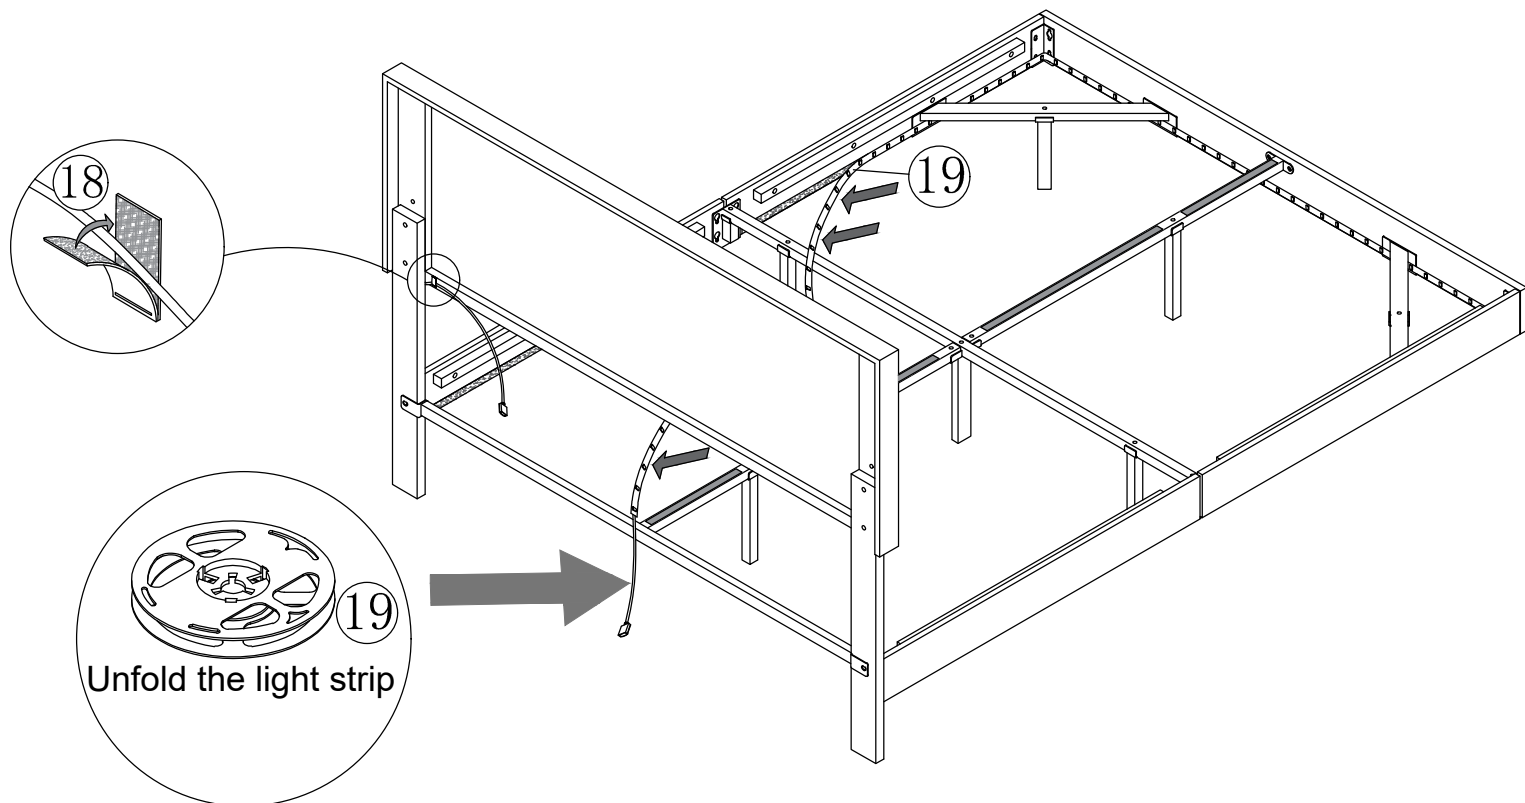


Step16

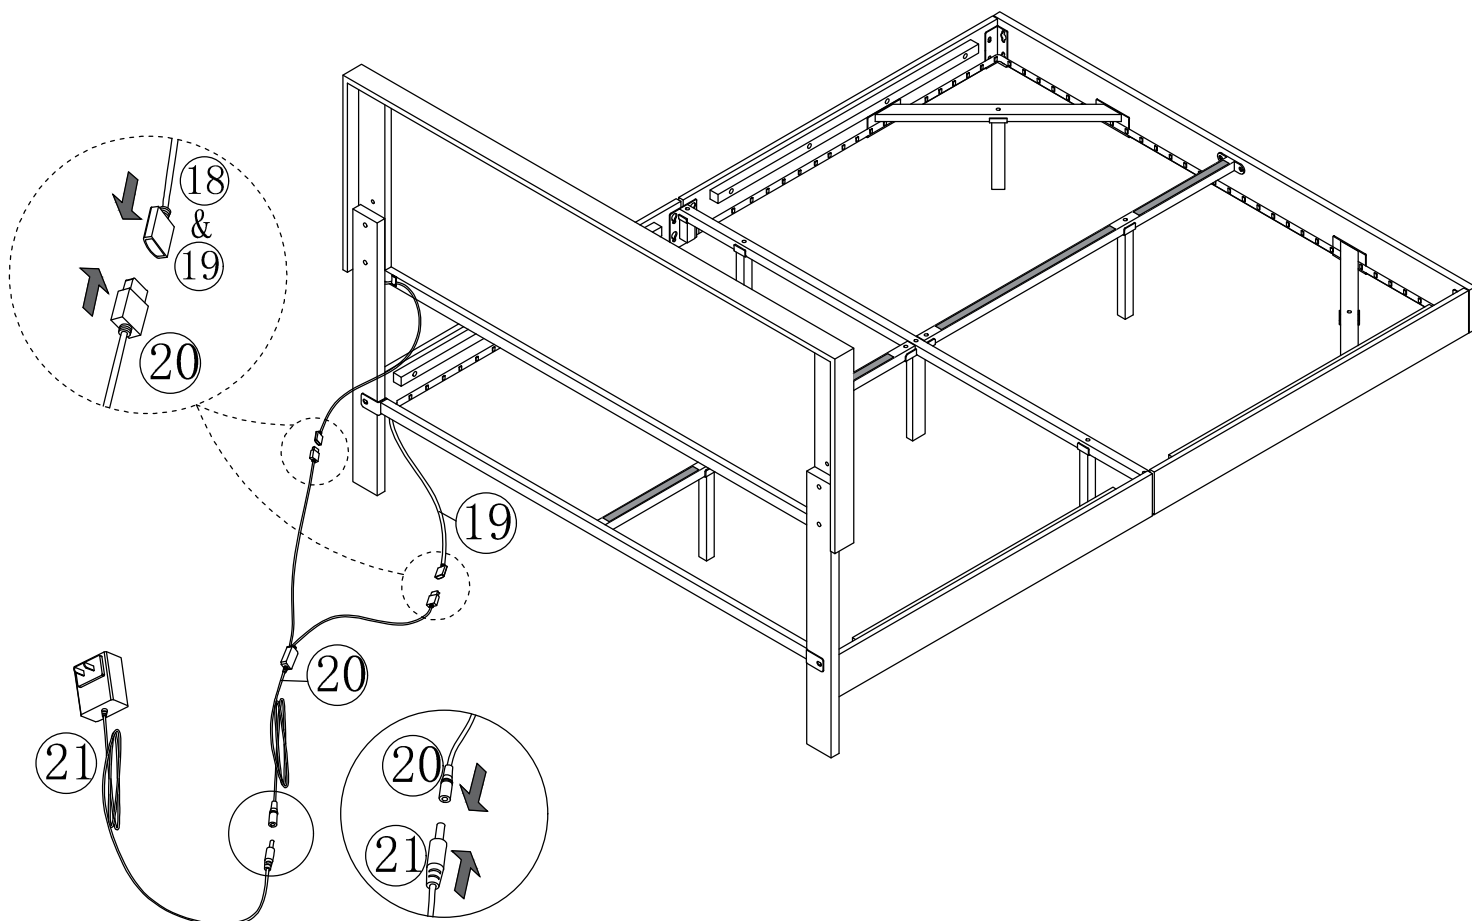

Step17

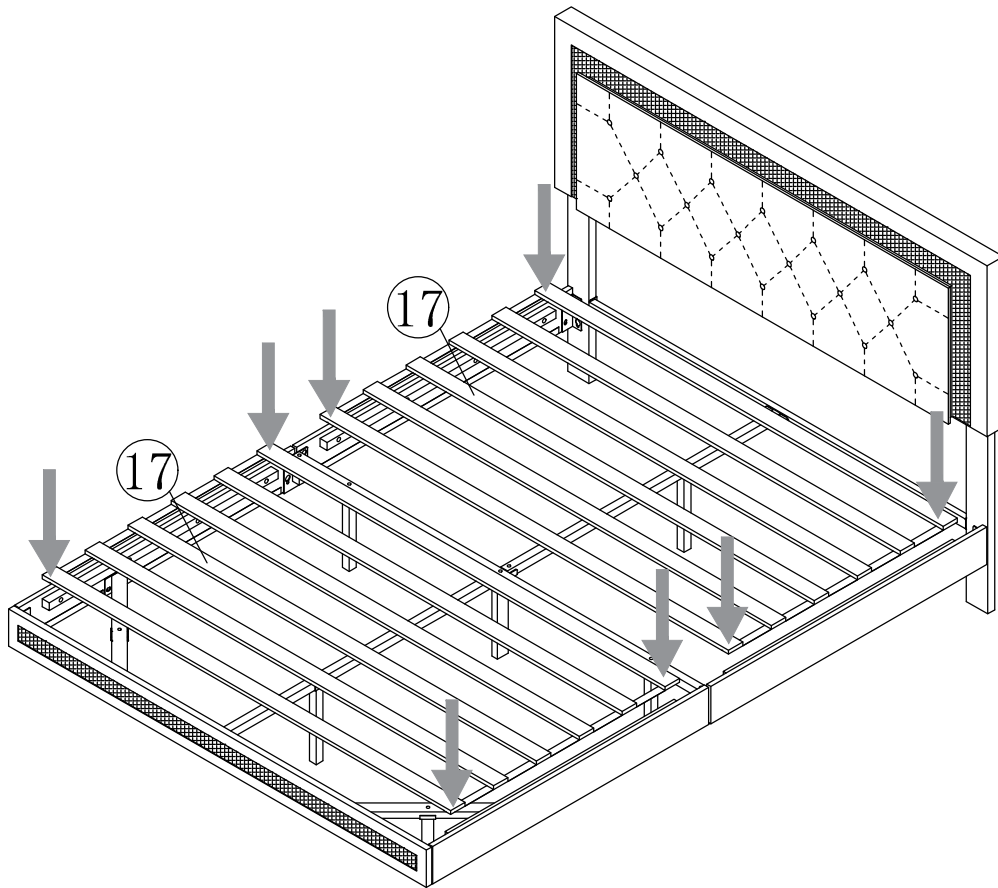

Step18

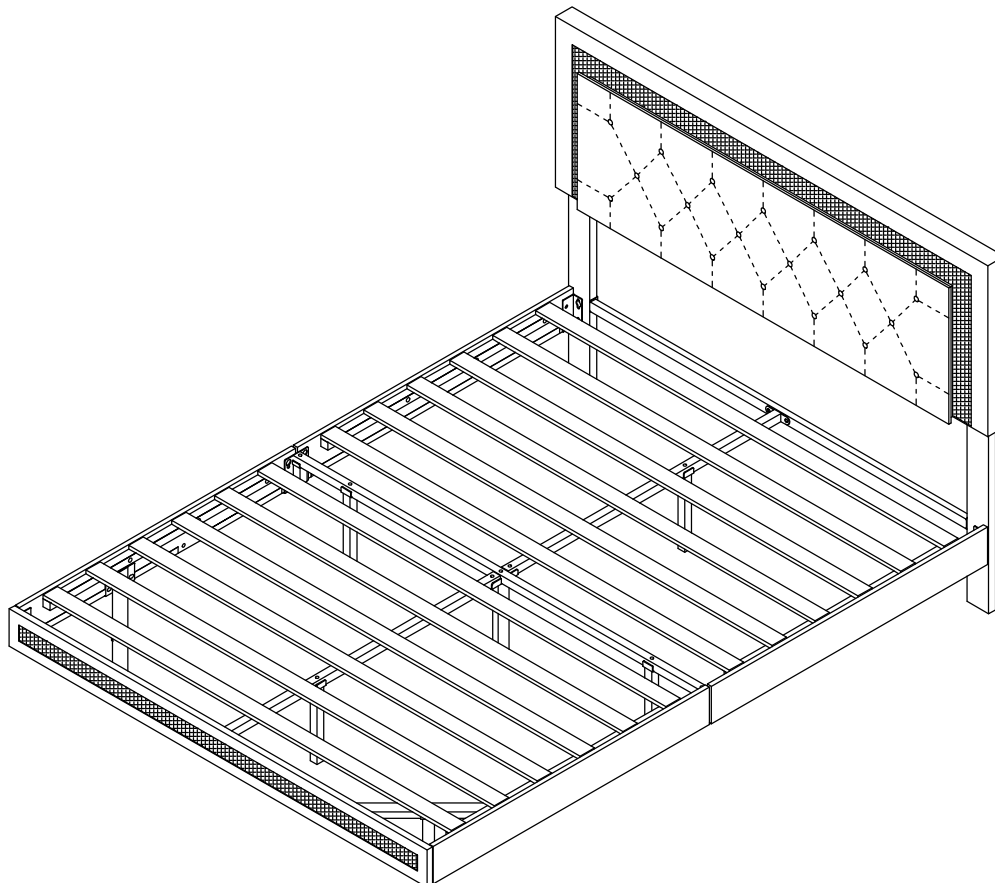

COMPLETE