


Installation Manual




















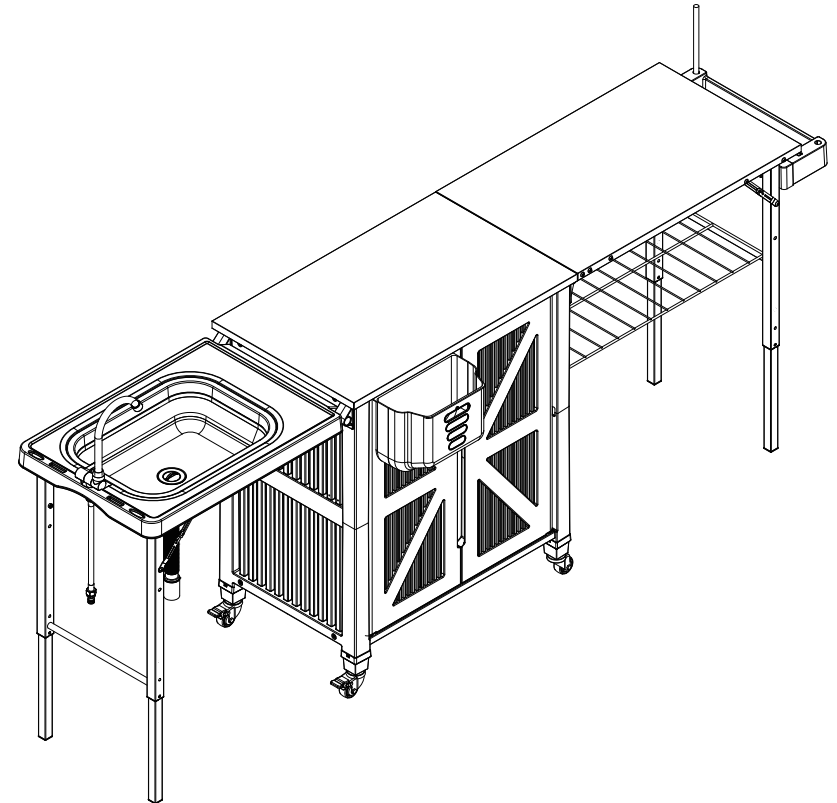


Outdoor Grill Cart

Thanks to choose our product. Missing parts, Quality, Installation Questions, please contact with us.



















Part List

Note identification

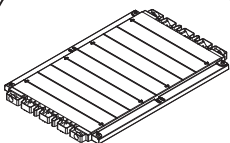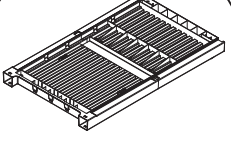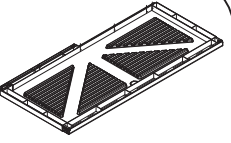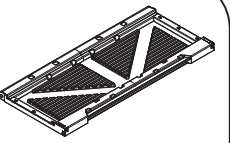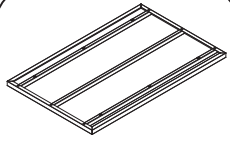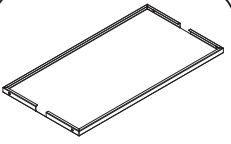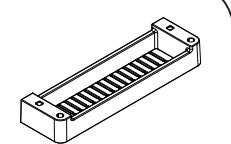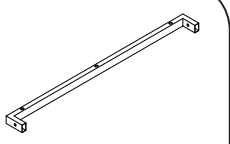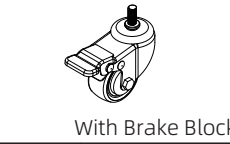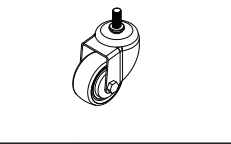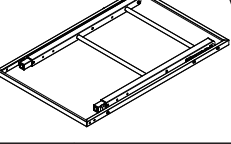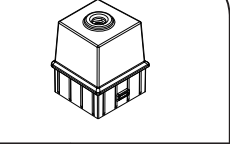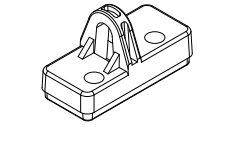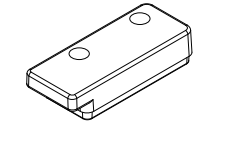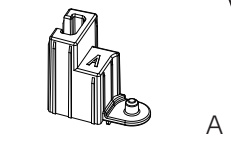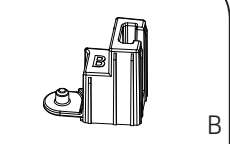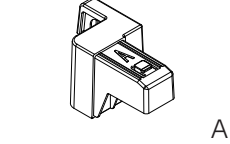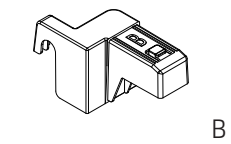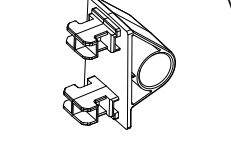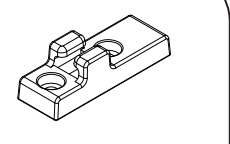			
A x1	B x2	C x2	D x2
			
E x1	F x1	G x1	H x2
			
I With Brake Block x2	J x2	K x1	LA x4
			
LB x1	LC x1	LD x2 A	LE x2 B
			
LF x1 A	LG x1 B	LH x2	LI x2



Part List

Note identification

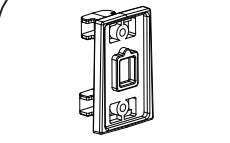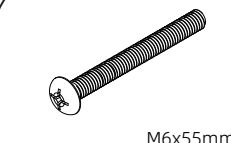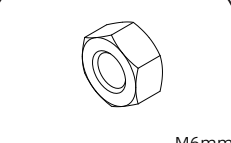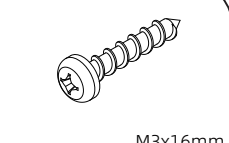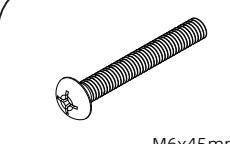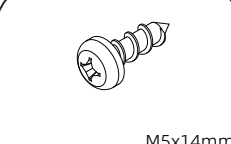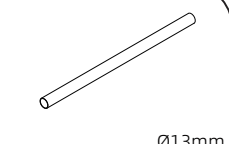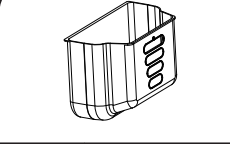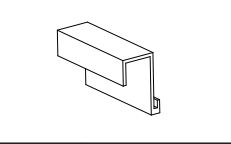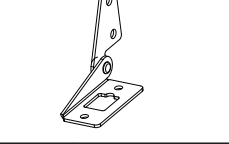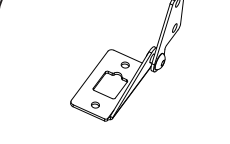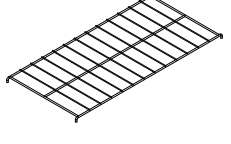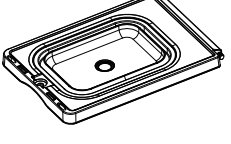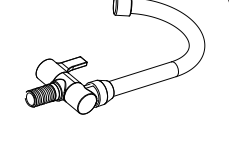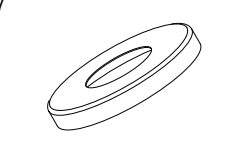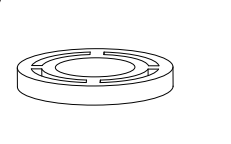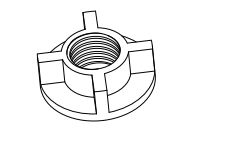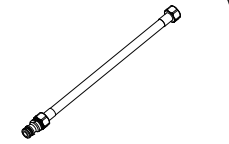
			
LJ x2	MA M6x55mm x8	MB M6mm x12	MC M3x16mm x8
			
MD M6x45mm x6	ME M5x14mm x12	MF M6x25mm x4	NA Ø13mm x1
			
NB x1	NC x1	ND x1	OA x1
			
OB x1	P x1	Q x1	RA x1
			
RB x1	RC x1	RD x1	RE x1

Part List


Note identification

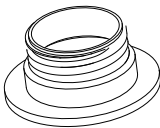	SA	x1		SB	x1		SC	x1		SD	x2
									$\phi 68 \times 3 \text{mm}$		
	SE	x1		SF	x1		SG	x1		SH	x1
									$\phi 45 \times 2 \text{mm}$		

Board Identification

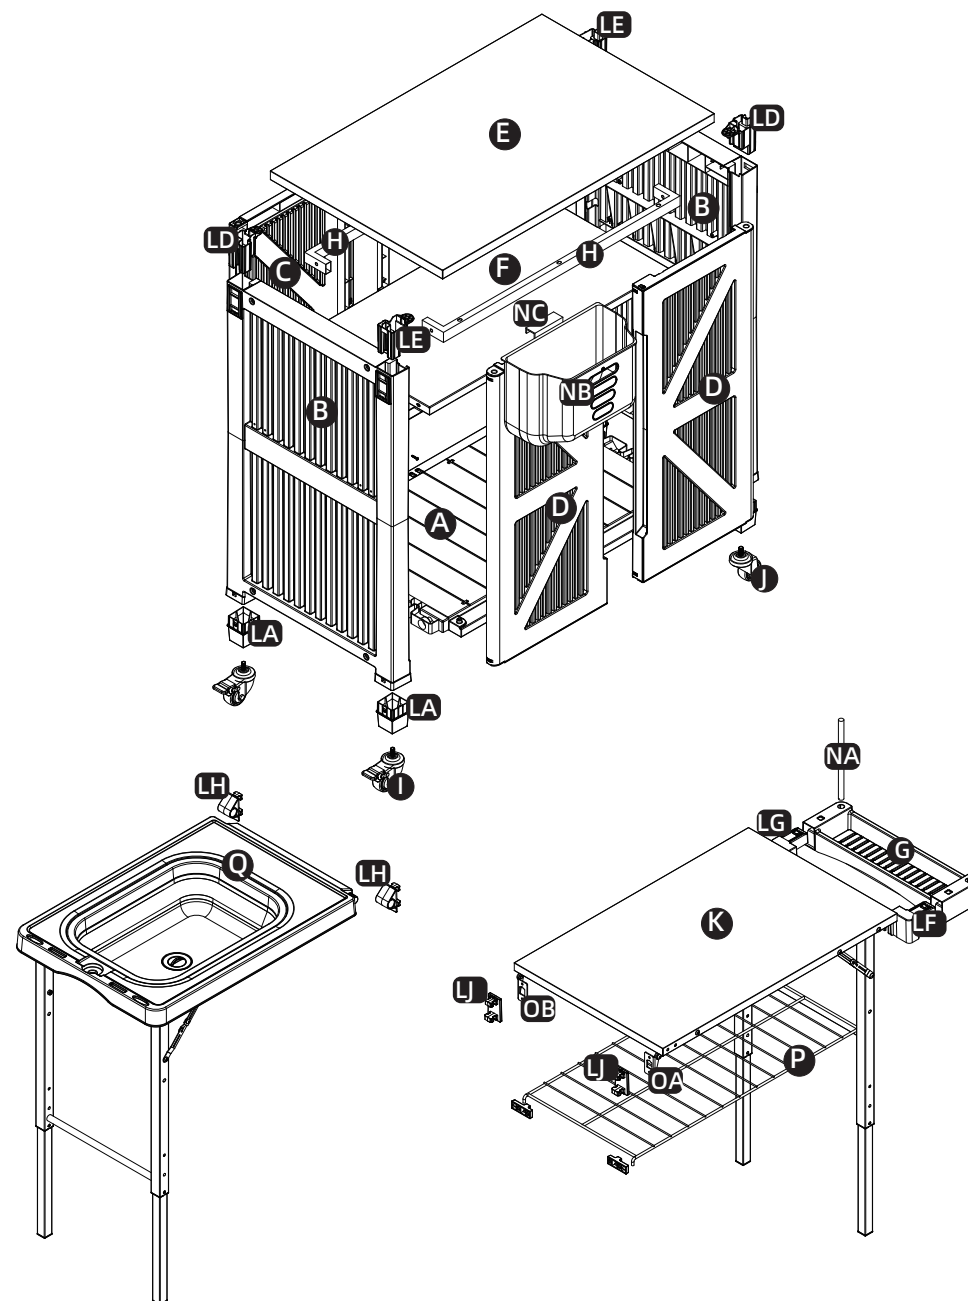


STEP1

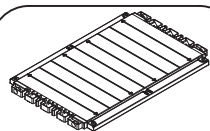


A

x1

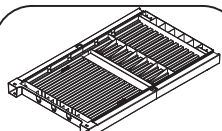


B

x2

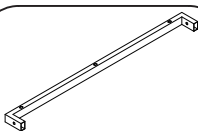

H

x2



M6x55mm

MA


x8



M6mm


MB

x8

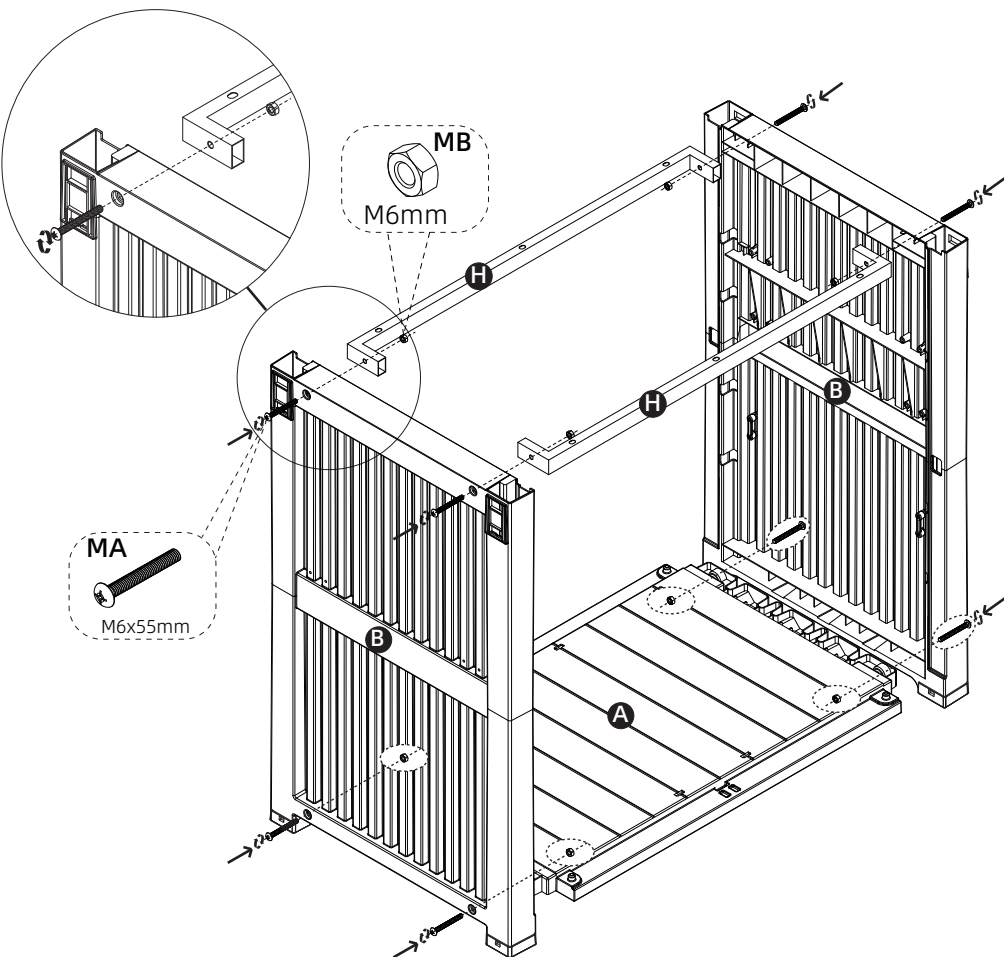

5


STEP2



With Brake Block


I

x2



J

x2



LA

x4




ND

x1




Flip Over

Tighten the wheels by "ND" into the bottom thread("ND" should be inserted from the arrow position)

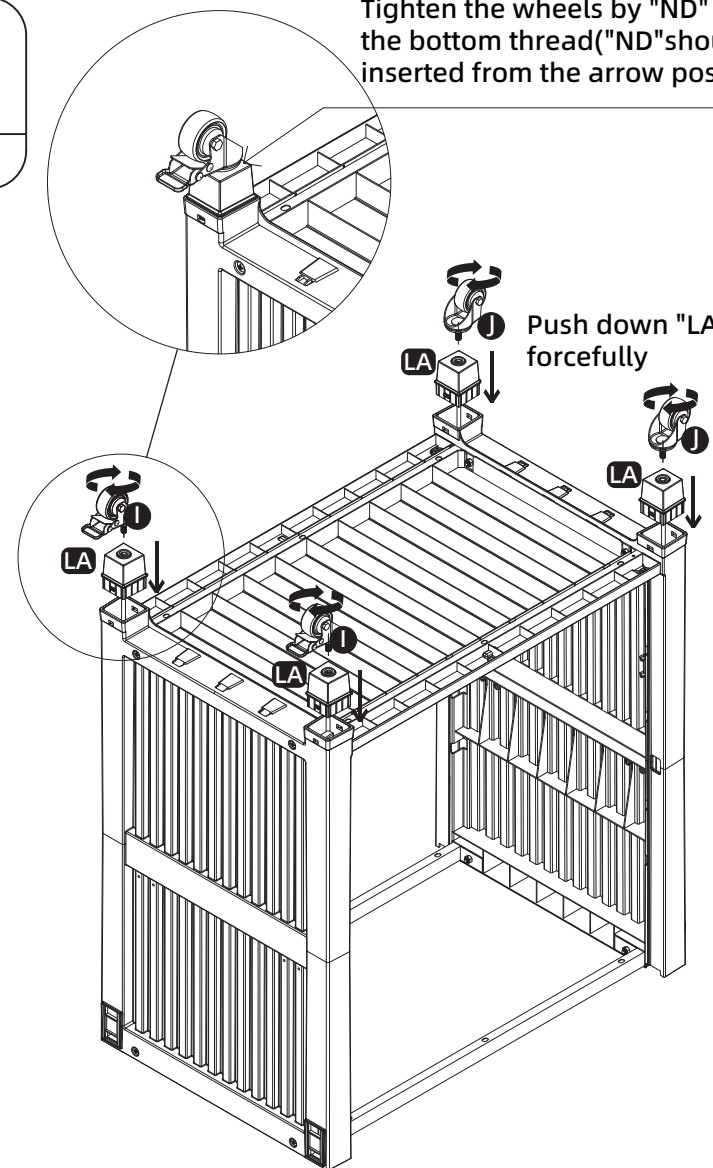


6

STEP3

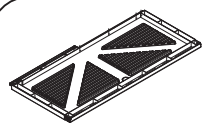


C

x2

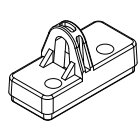


LB

x1

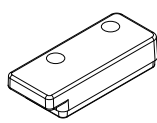

LC

x1



M3x16mm



MC

x8

MC




M3x16mm

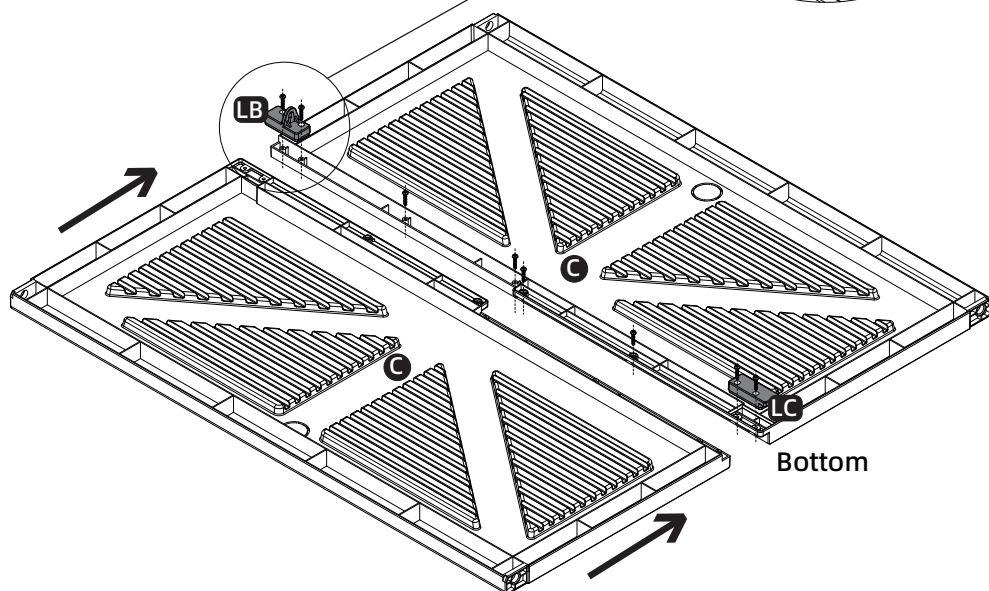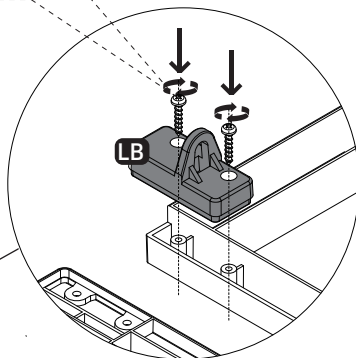

Bottom


STEP4

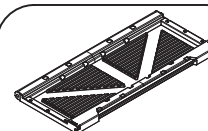


D

x2


Flip Over

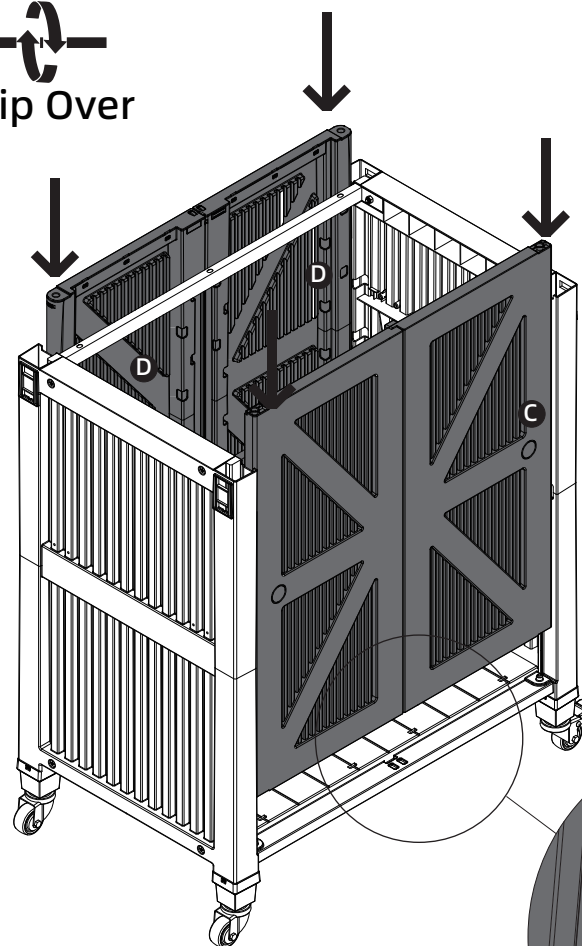

Note: Insert the raised part "LC" into the slot hole "A"

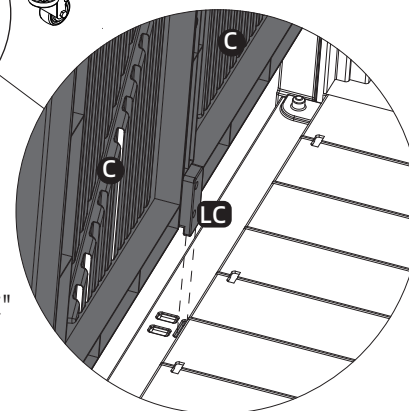


STEP5

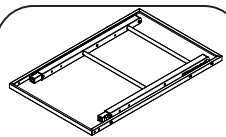


K

x1

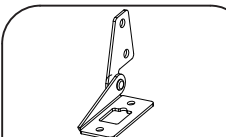

OA

x1

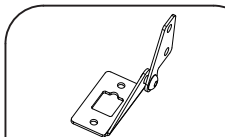

OB

x1



M6mm

MB


x4



M6x25mm

MF

x4



LJ


x2




M5x14mm

ME

x4

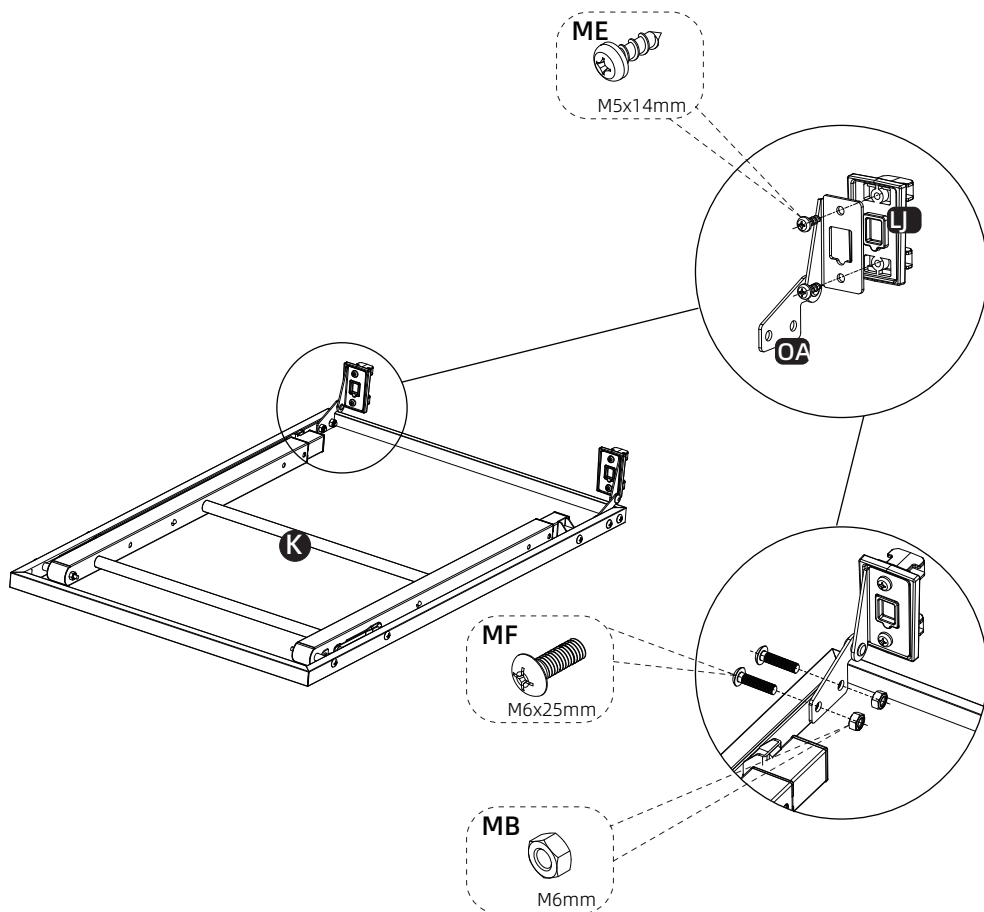


STEP6

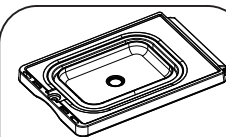


Q

x1

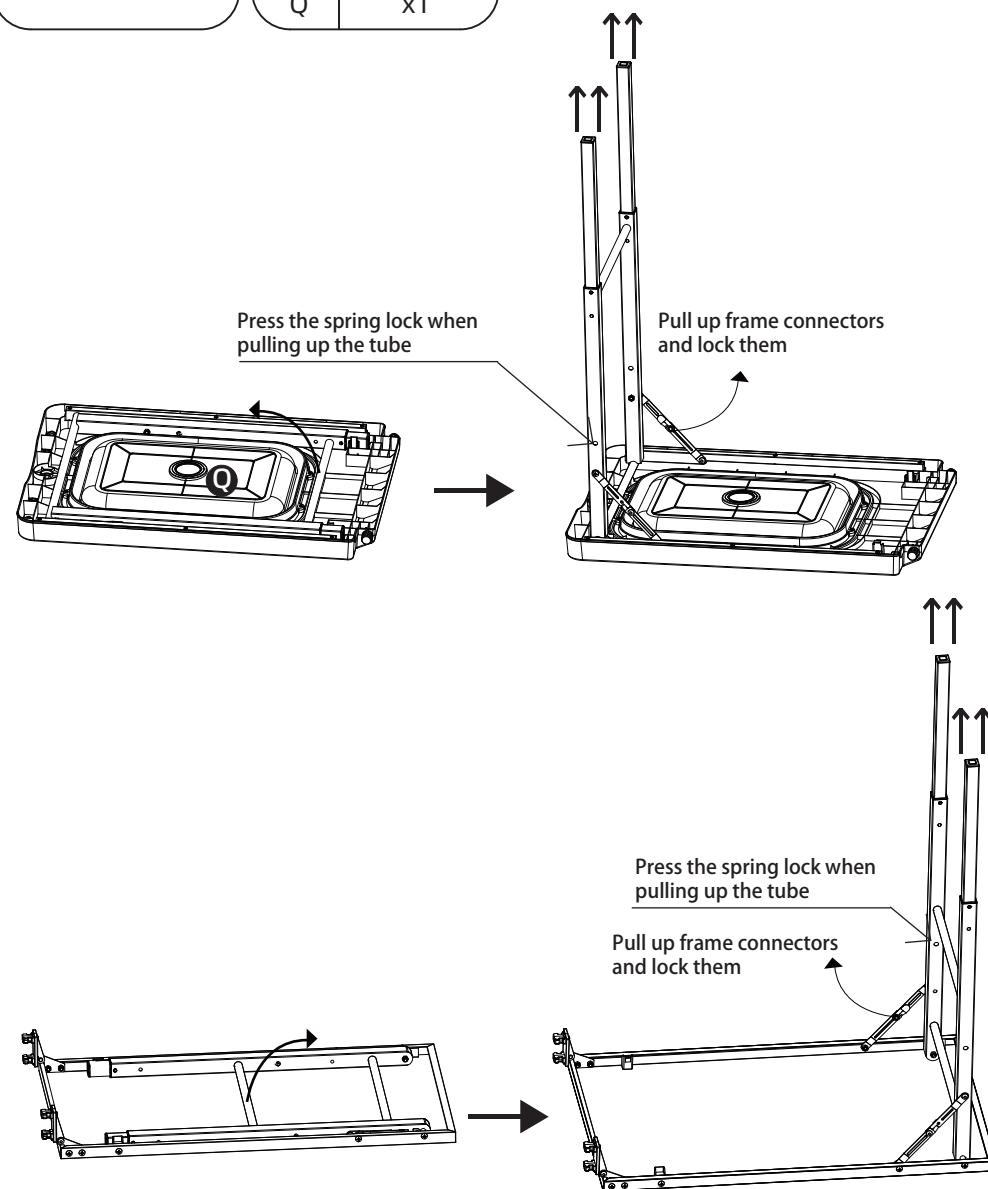

STEP7




LD

x2



LE


x2




LH

x2

1. Insert "K" & "Q" first
2. From top to bottom, insert "LD", "LE", "LD" and "LE"

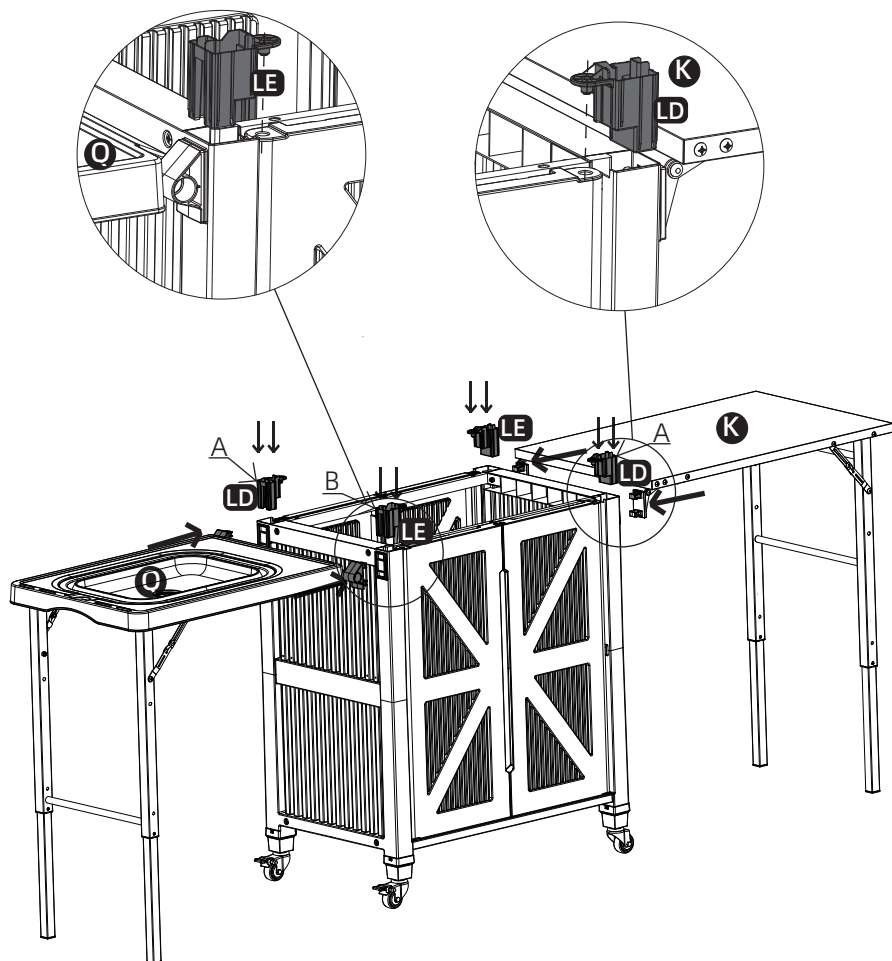


STEP8

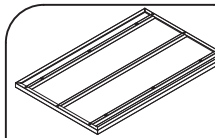

E

x1

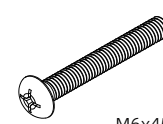



MD

M6x45mm


x6

Remove the protection film before installation.

Place "E" on the relevant area and fix it by screws.

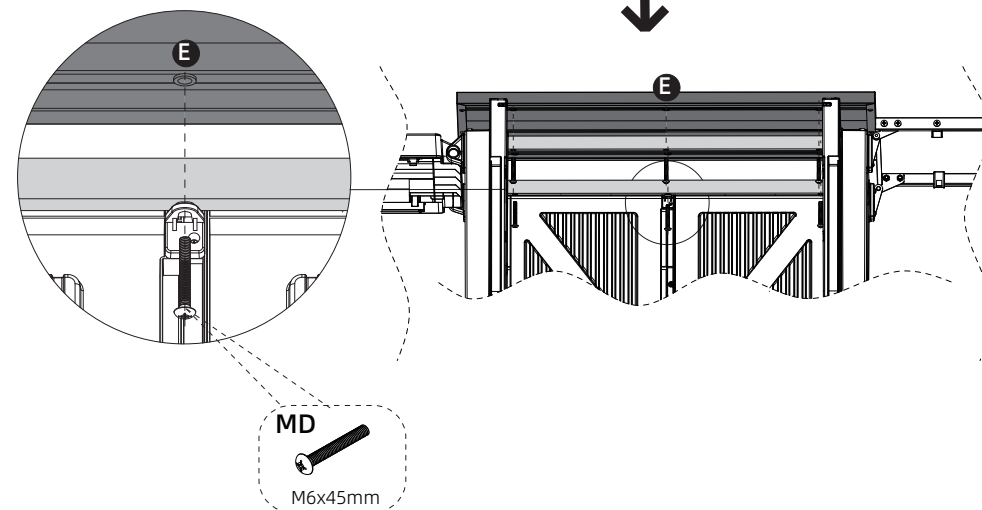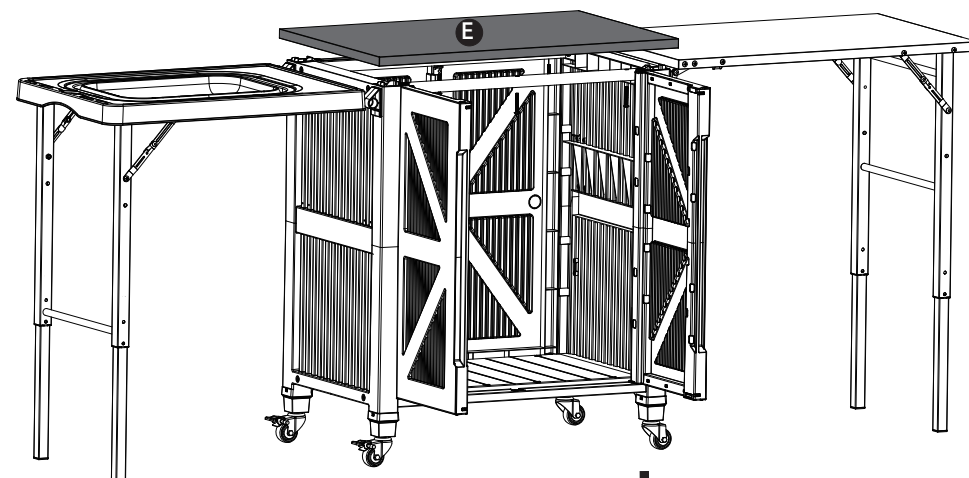


STEP9

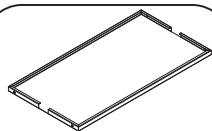

F


x1



M5x14mm

ME

x4

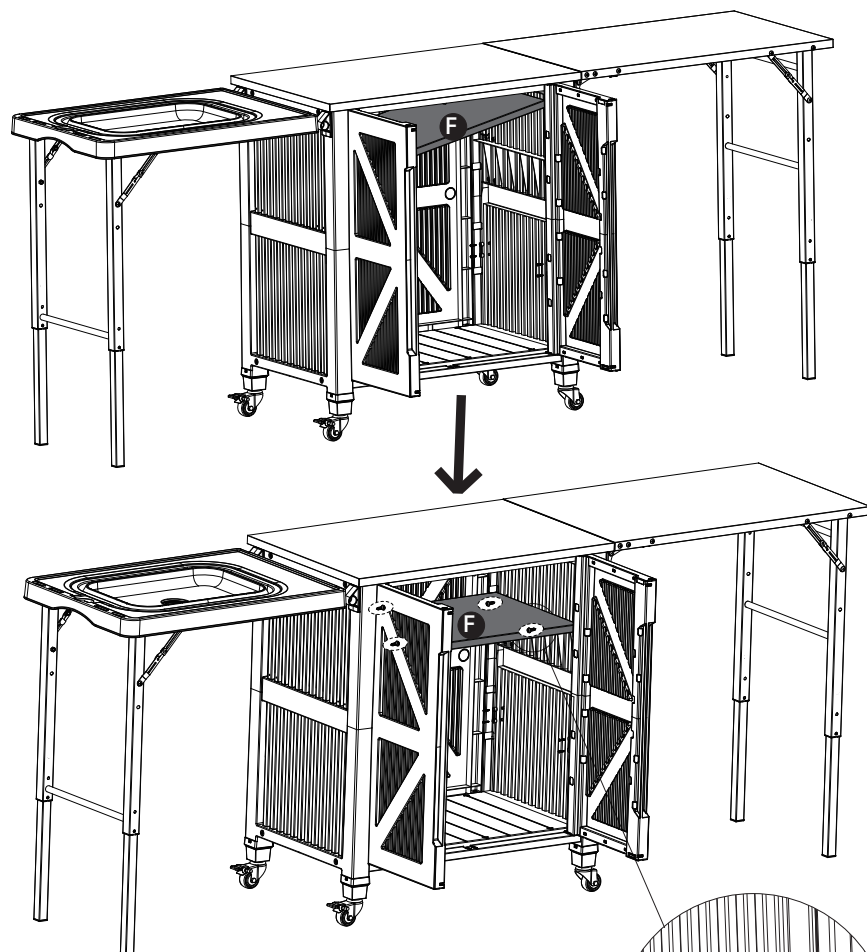


1. Place the "F" at an inclined angle in the cabinet first.
2. Put down the "F" and align with the installation holes
3. Fix the "F" with 4pcs screws.




M5x14mm

STEP10

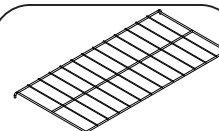


P

x1



LI


x2



M5x14mm

ME

x4

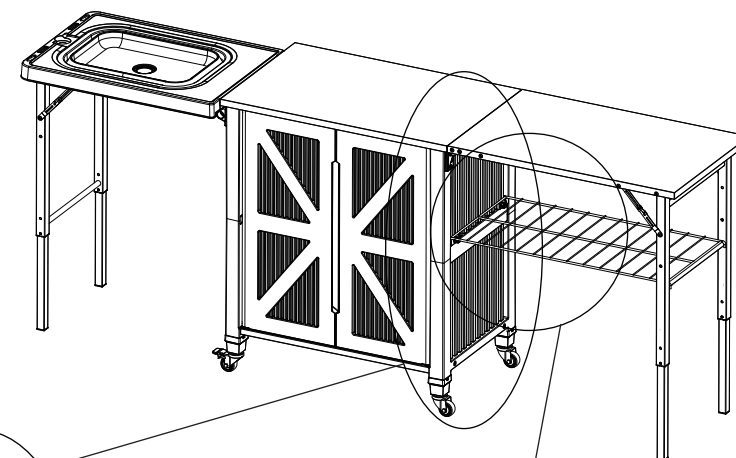


Storage


Hang here

ME

M5x14mm


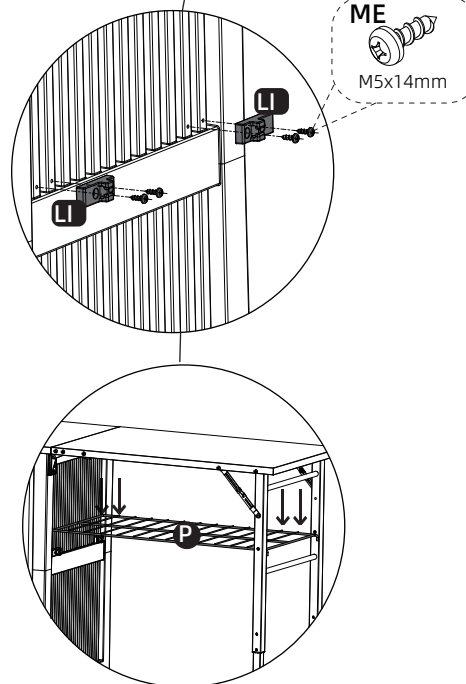


STEP11

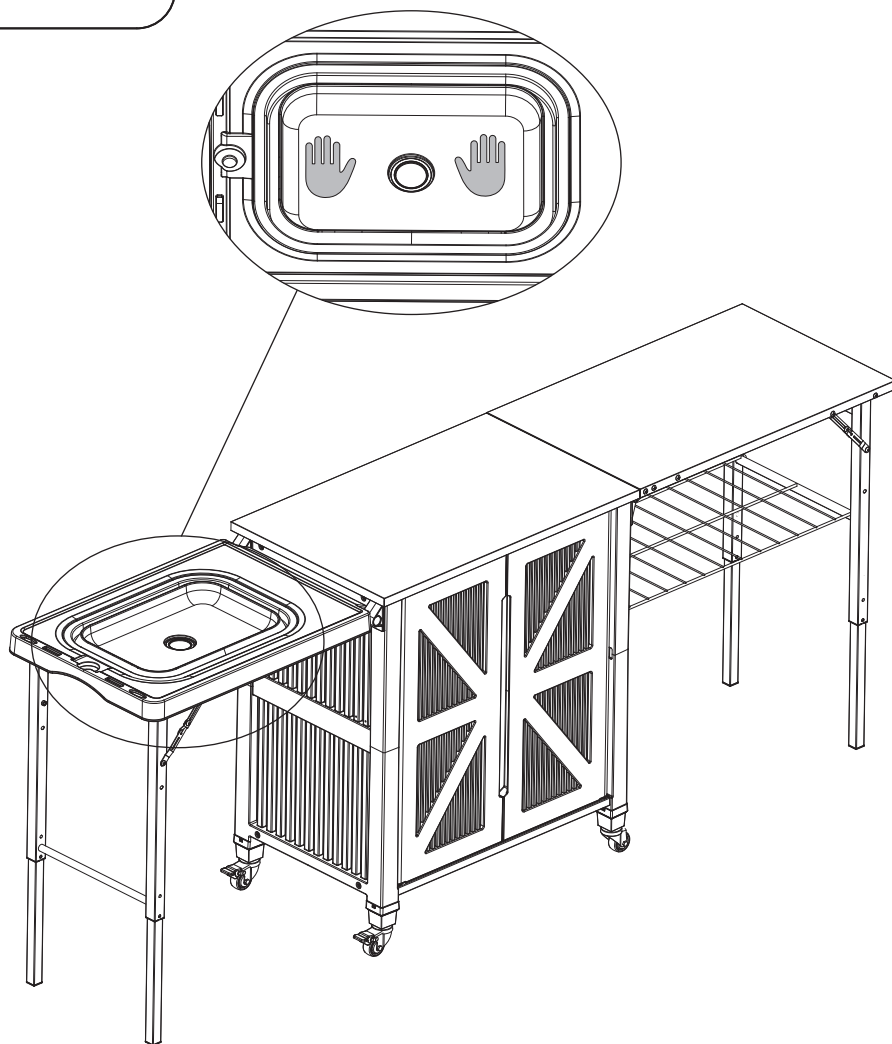

Push the inside bottom of the folding basin by hands until it is fully open. Push the outside of the basin by hands until it is folded

STEP12

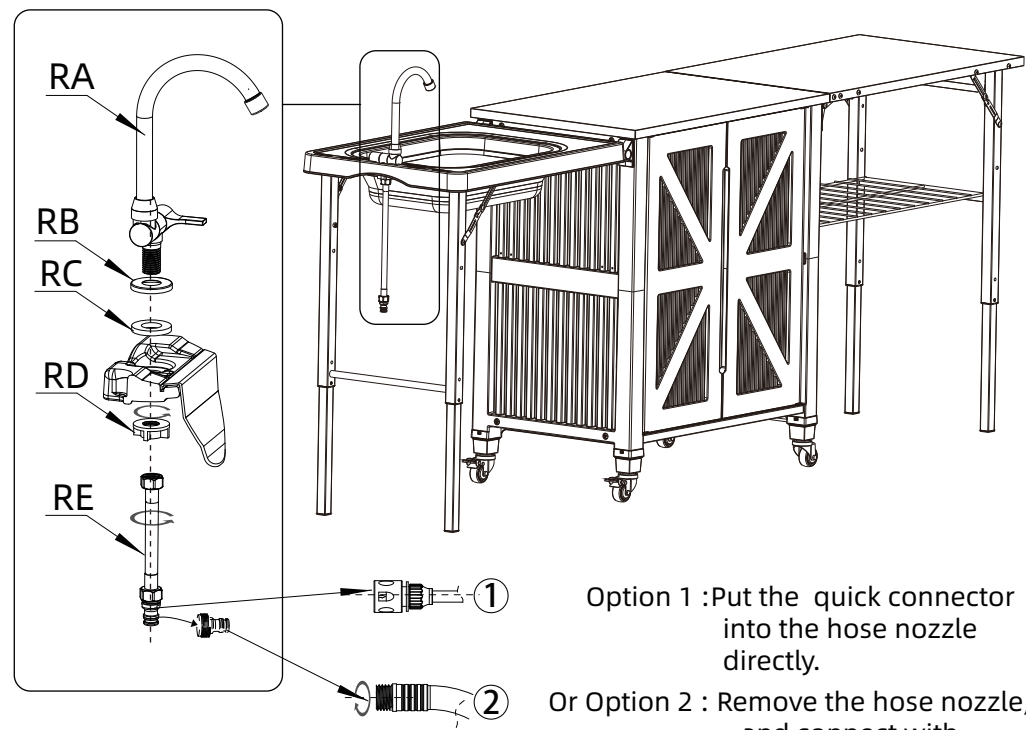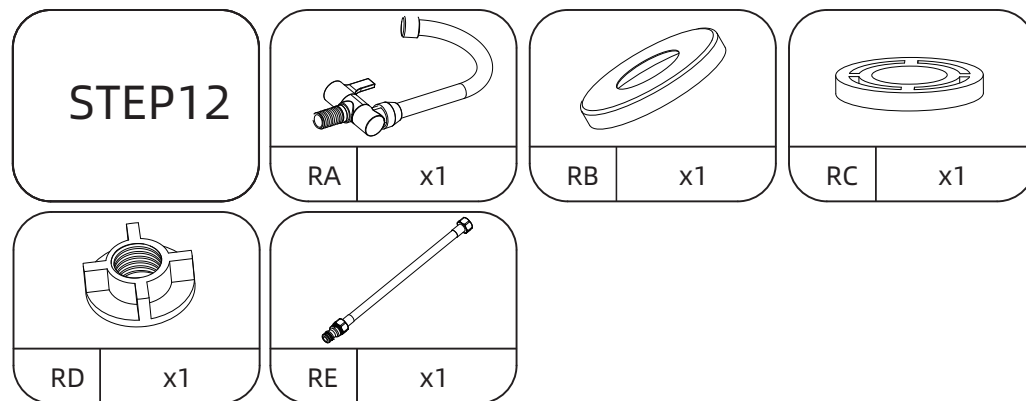

Option 1 :Put the quick connector into the hose nozzle directly.

Or Option 2 : Remove the hose nozzle, and connect with 1/2" Male fitting

STEP13

SA

x1

SB

x1

SC

x1



φ68x3mm

SD

x2



SE

x1




SF

x1





SG

x1



SH

x1

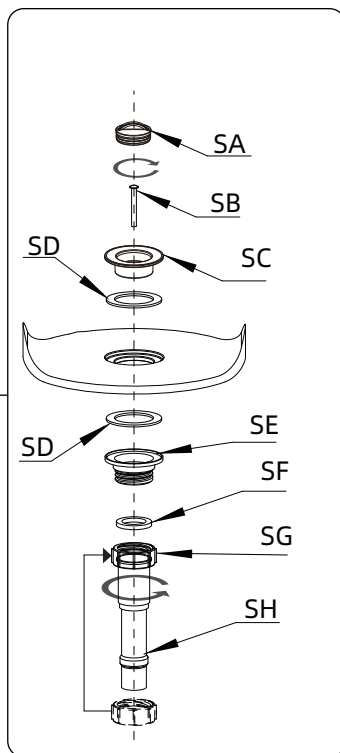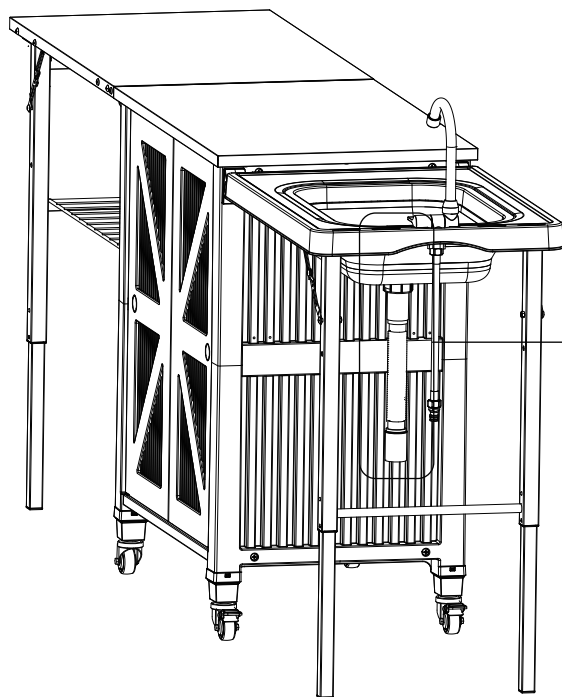

STEP14

G


x1

LF

x1

LG



x1




Ø13mm

NA


x1

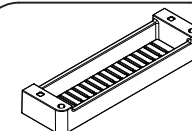


A

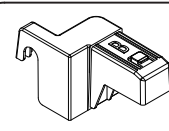


B

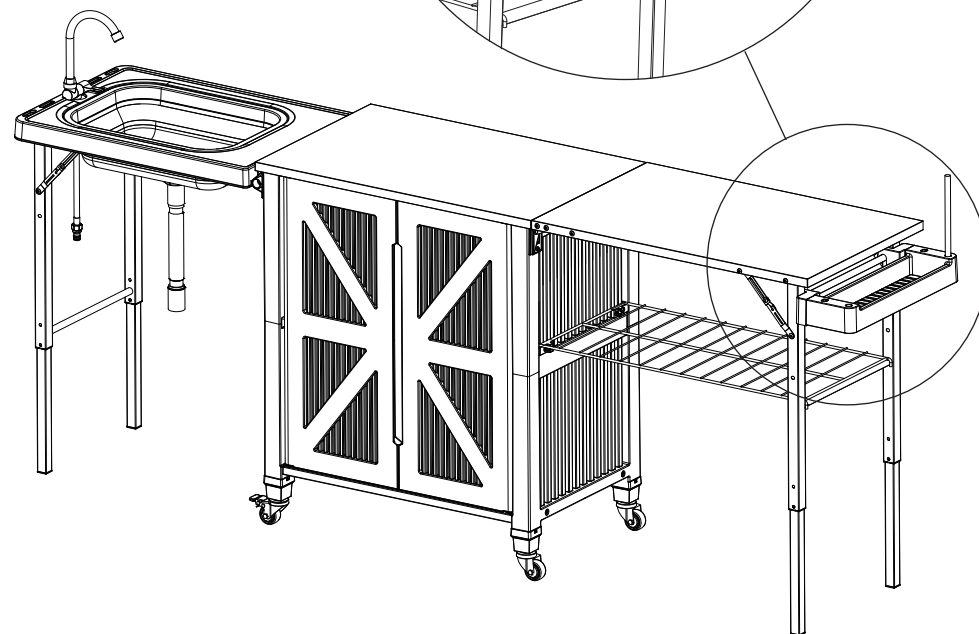


STEP15

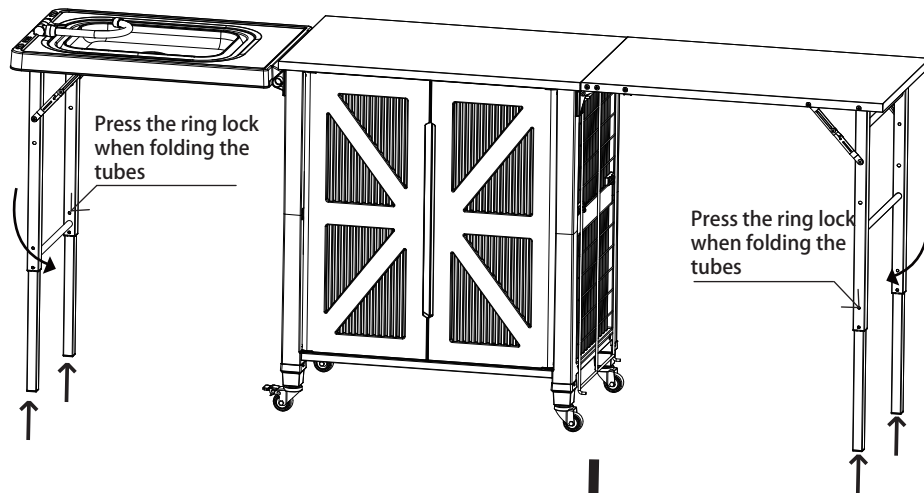

1. Take off other assessories
2. Fold up the steel frame "P"
3. Fold the tubes under the plates.
4. Put down the plates besides the cabinet.

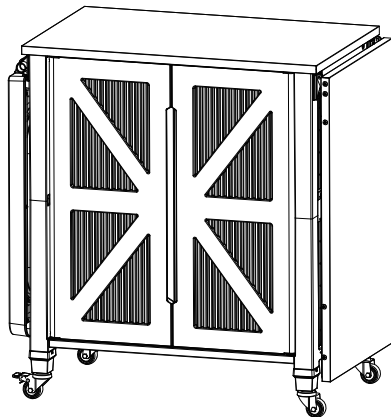


STEP16

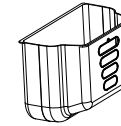


NB

x1



NC

x1

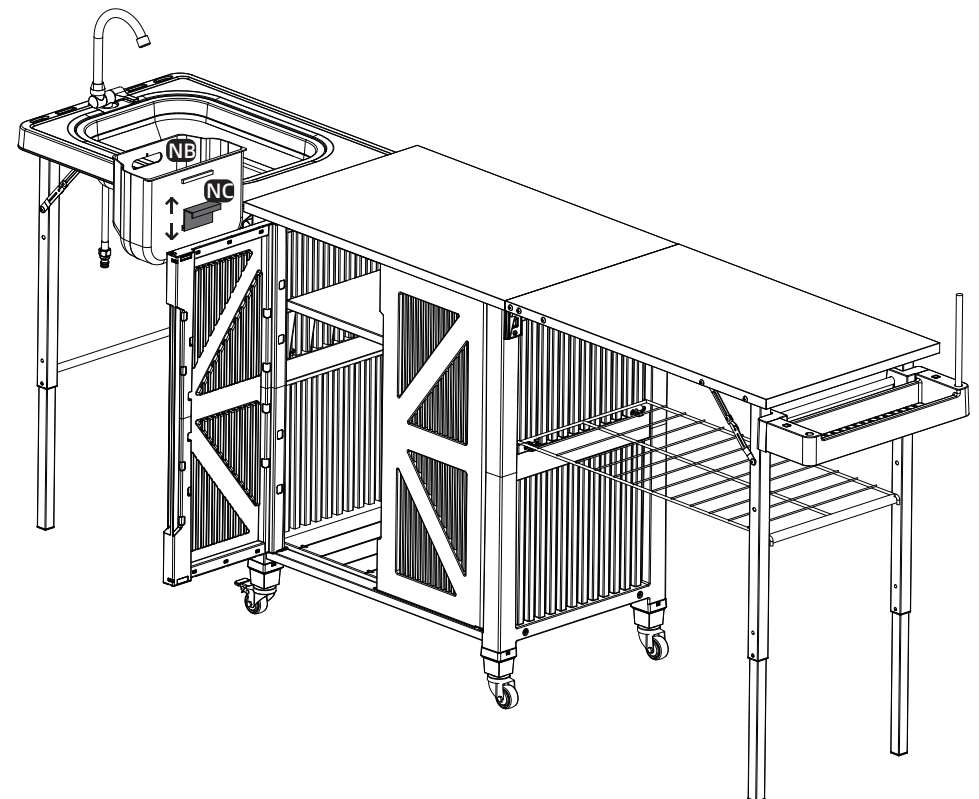

Congratulations! You have completed
the installation of the dining car.

