

















CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
The use of steam or water-based cleaners may cause excessive shrinking or staining.

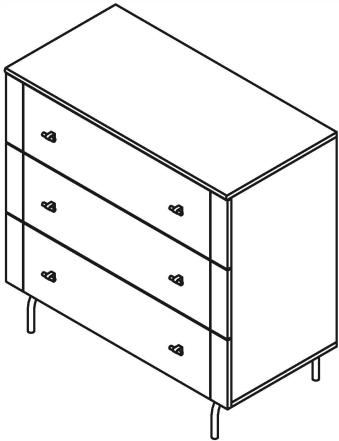
NOTICE











- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	TOP PANEL		1X
B	LEFT ASSEMBLY		1X
C	RIGHT ASSEMBLY		1X
D	FRONT APRON		1X
E	BOTTOM PANEL		1X
F	UPPER BACK PANEL		1X
G	LOWER BACK PANEL		1X
H	LEG FRAME		2X
I	LEG STRETCHER		2X
J	DRAWER FRONT		3X
K	DRAWER LEFT		3X
L	DRAWER RIGHT		3X
M	DRAWER BACK		3X
N	DRAWER BASE		3X
O	DRAWER SUPPORT		6X
P	FRONT FRAME		2X

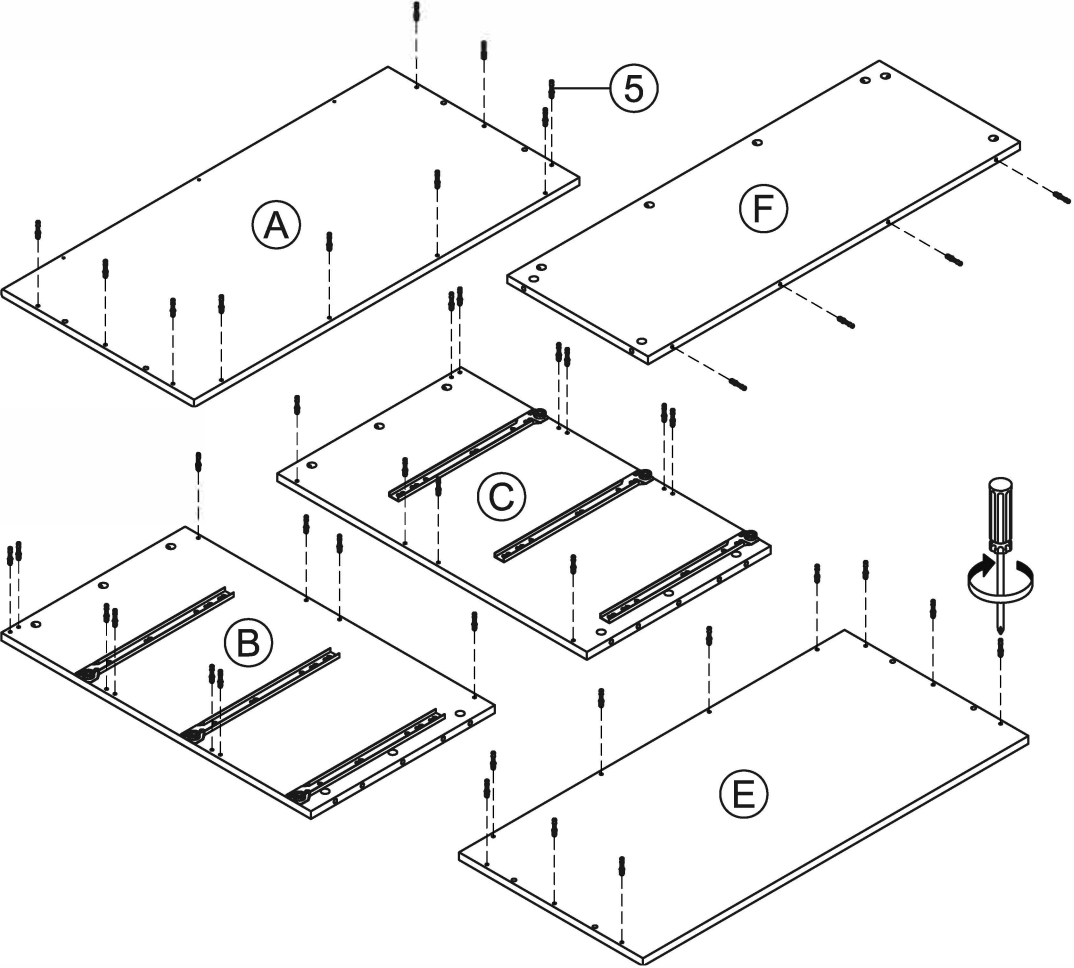
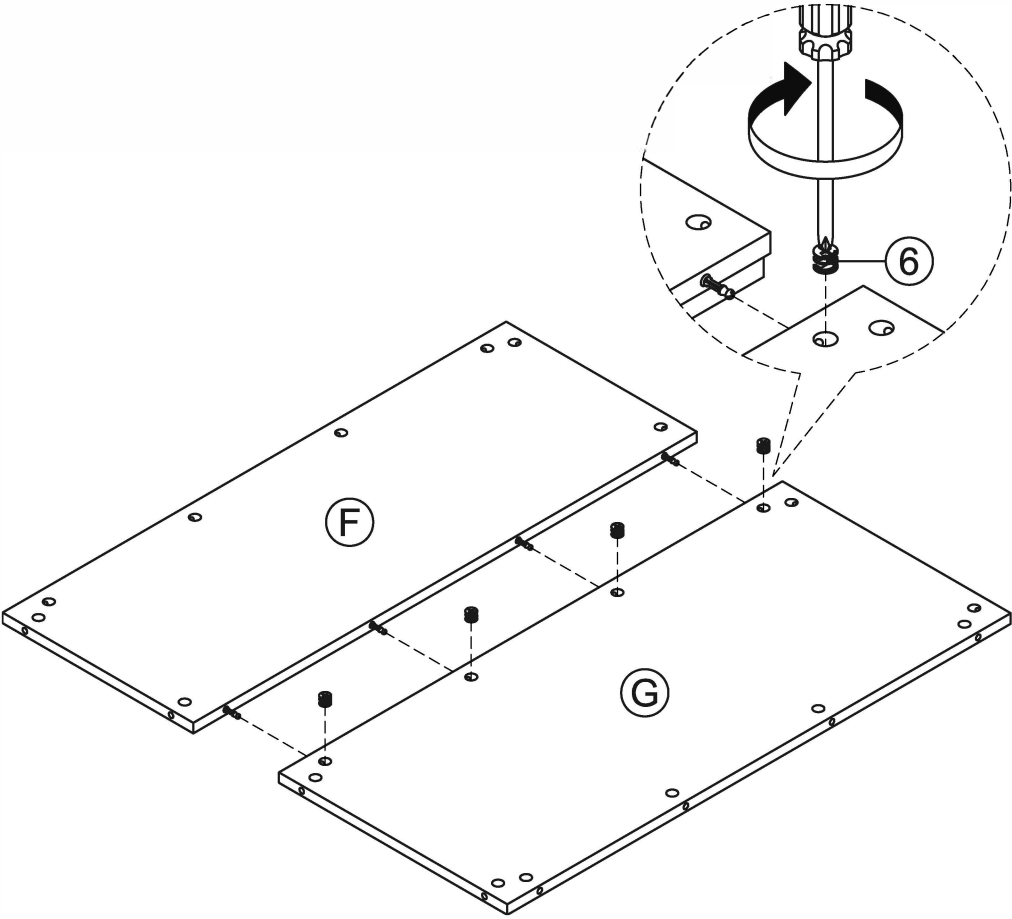
Product Dimenions: 36"W x 18"D x 36"H



PIECE	DESCRIPTION	PICTURE	QUANTITY
1	40 MM BOLT	M6x40mm 	4X
2	1" ROUND HEAD SCREW	M4x25mm 	13X
3	1 1/4" FLAT HEAD SCREW	M3x32mm 	54X
4	3/4" FLAT HEAD SCREW	M3x19mm 	18X
5	CAMBOLT		44X
6	CAMLOCK		44X
7	HANDLE		6X
8	MACHINE SCREW	M4x22mm 	6X
9	WOODEN DOWEL		8X
10	ALLEN KEY		1X

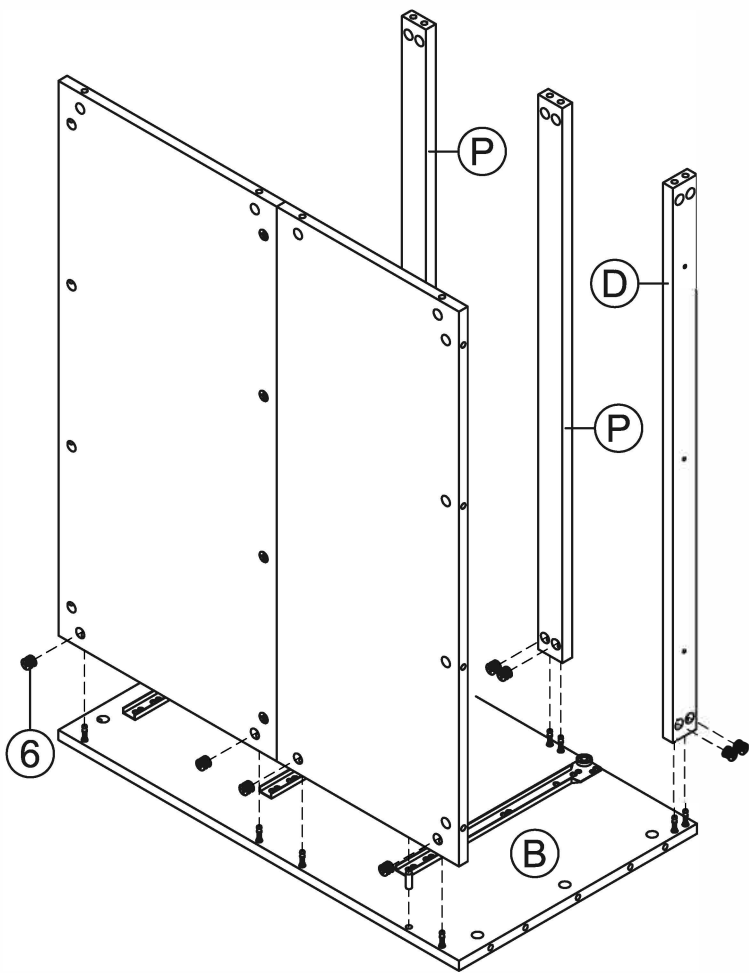
PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver

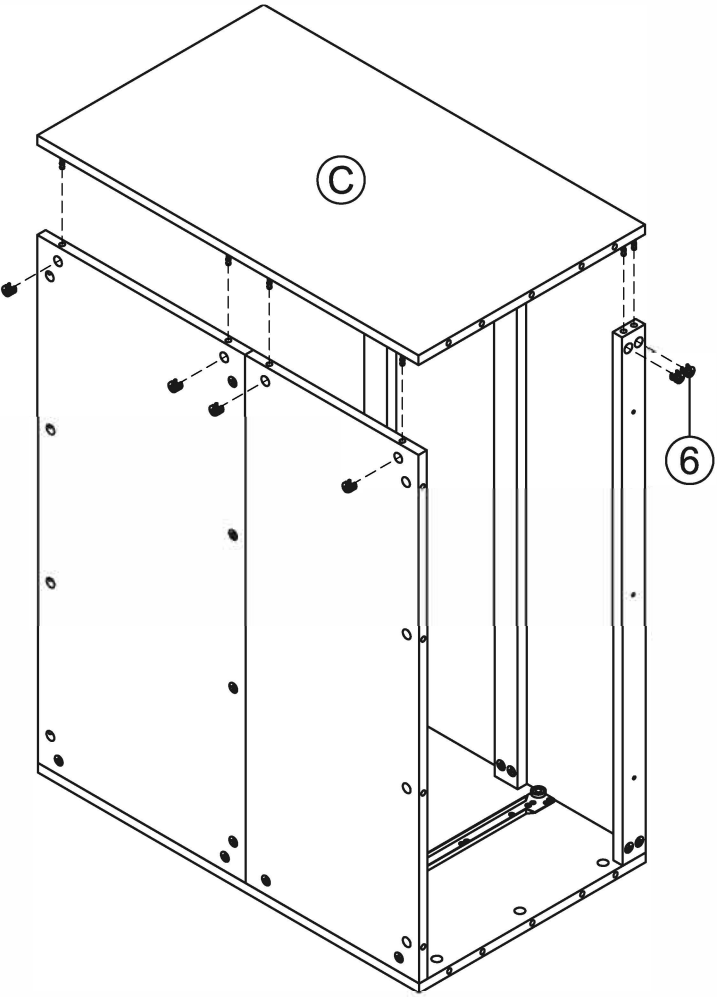
 <p>This diagram illustrates the first step of assembly. It shows five panels: a top panel (A), a left side panel (B), a right side panel (C), a bottom panel (E), and an upper back panel (F). Each panel has dashed lines indicating the placement of cambolts (5). A Phillips screwdriver is shown with a cambolt being inserted into one of the panels.</p>	 <p>This diagram illustrates the second step of assembly. It shows the upper back panel (F) and the lower back panel (G) being aligned. A camlock (6) is shown being inserted into the lower back panel (G) and turned, as indicated by the circular arrow, to secure the panels together. A circular inset provides a close-up view of the camlock mechanism.</p>
<p>STEP 1 ATTACH CAMBOLT TO TOP PANEL, LEFT AND RIGHT ASSEMBLIES, BOTTOM PANEL AND UPPER BACK PANEL.</p>	<p>STEP 2 ATTACH LOWER BACK PANEL TO UPPER BACK PANEL USING CAMLOCK.</p>

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver



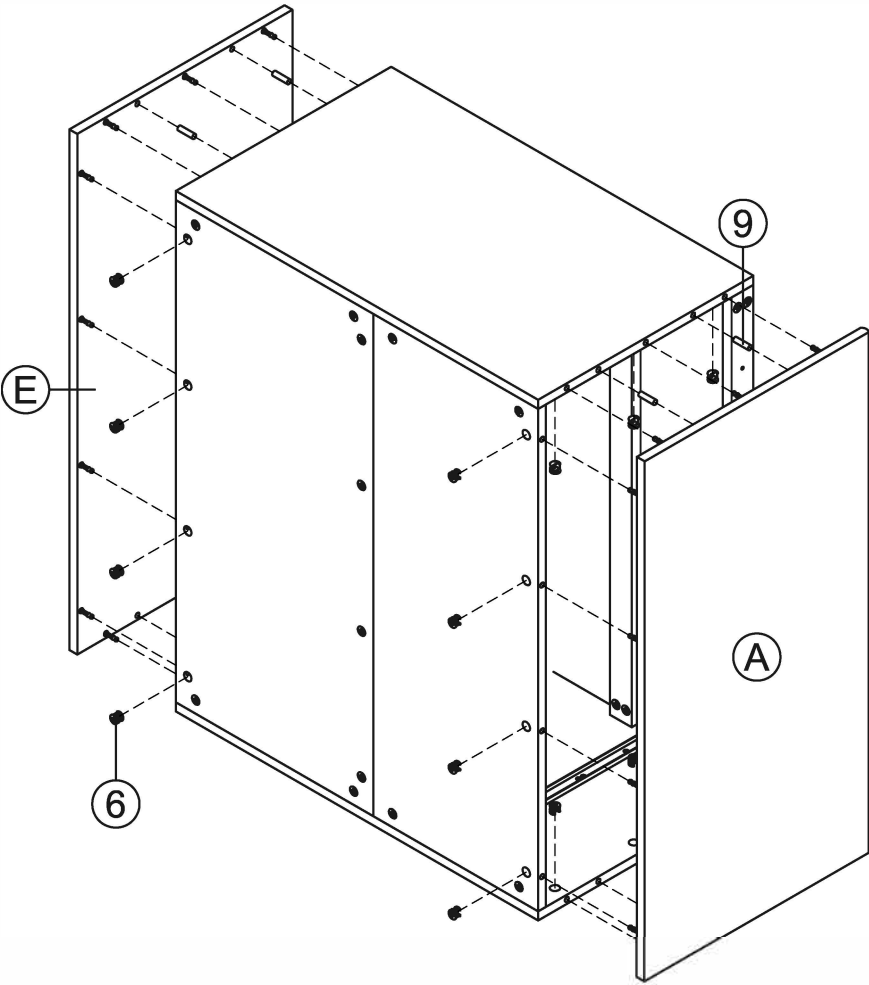
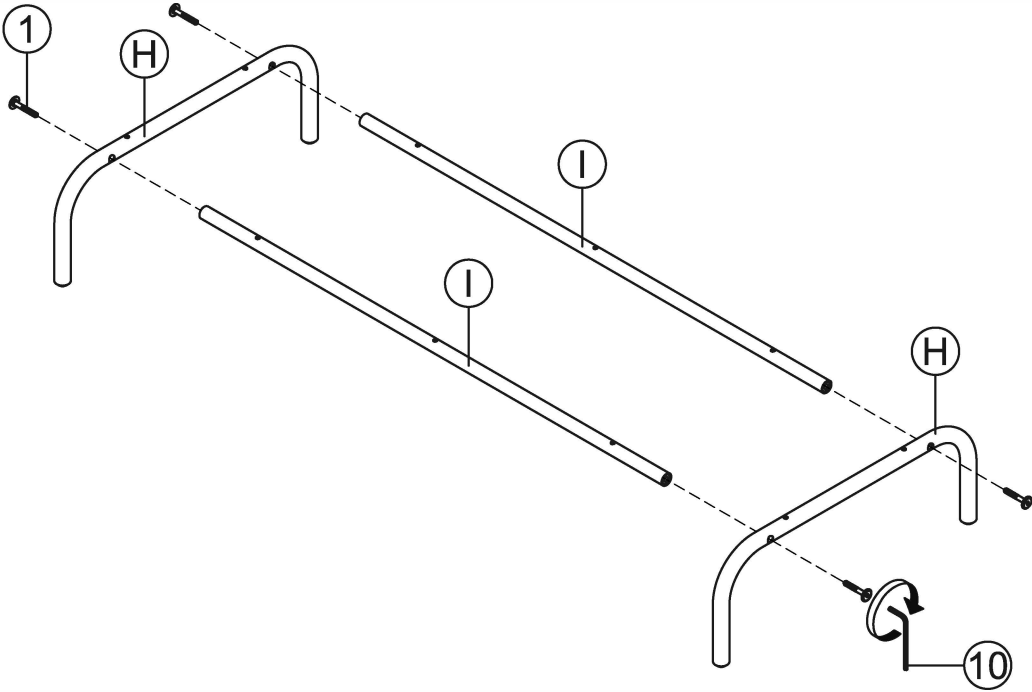
STEP 3 ATTACH FRONT FRAME, FRONT APRON AND UNIT FROM STEP 2 TO LEFT ASSEMBLY USING CAMLOCK.



STEP 4 ATTACH RIGHT ASSEMBLY TO UNIT USING CAMLOCK.

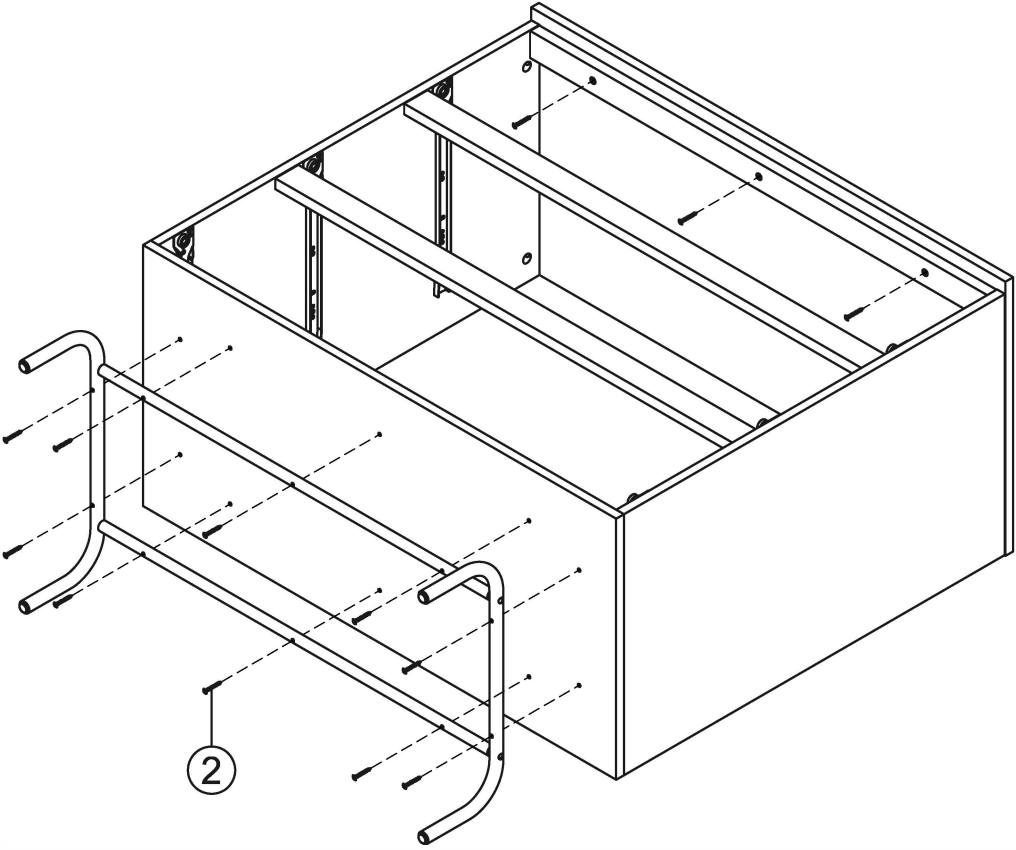
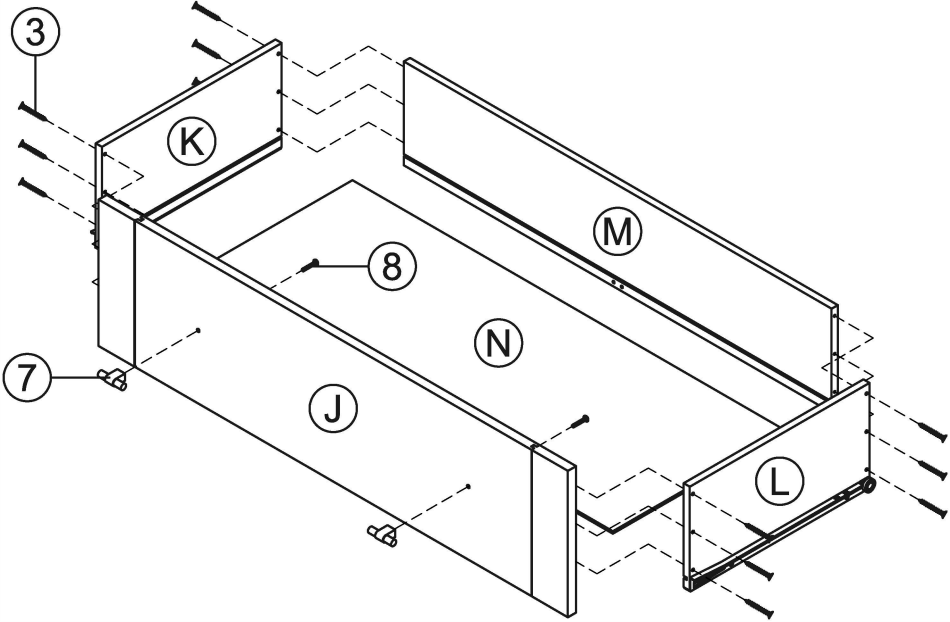
PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver

	
<p>STEP 5 ATTACH TOP AND BOTTOM PANEL TO UNIT USING CAMLOCK AND WOODEN DOWEL.</p>	<p>STEP 6 ATTACH LEG STRETCHER TO LEG FRAME USING 40 MM BOLT. TIGHTEN IT USING ALLEN KEY.</p>

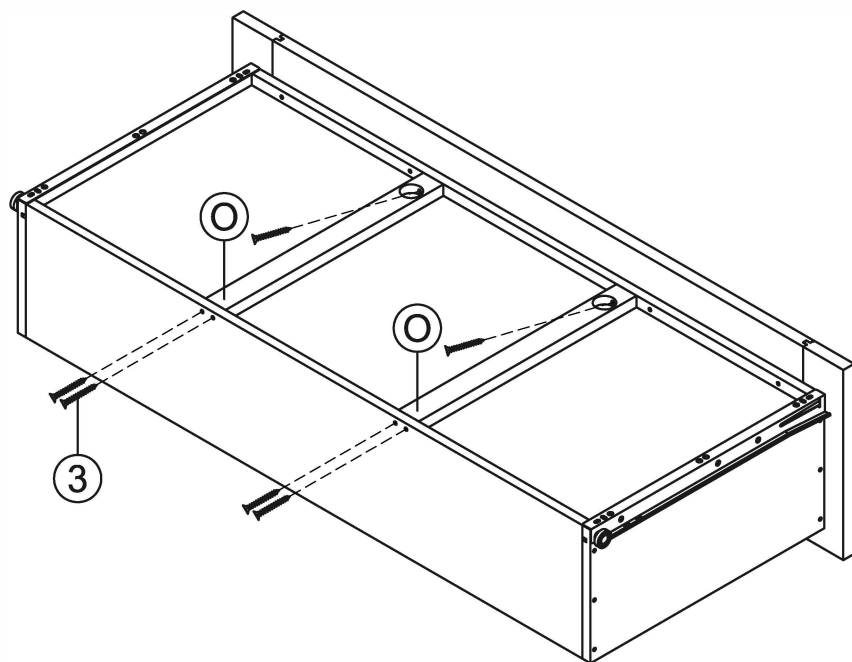
PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver

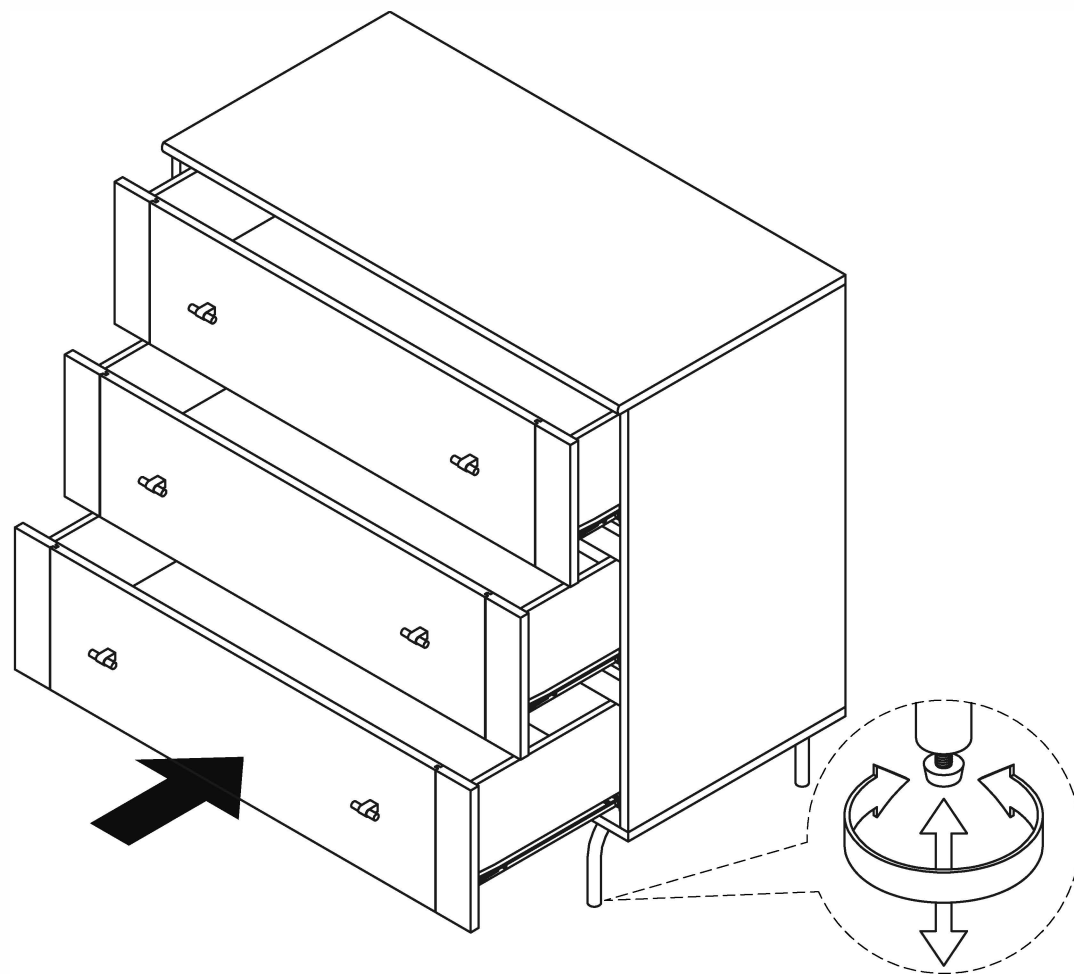
	
<p>STEP 7 ATTACH UNIT FROM STEP 6 TO UNIT FROM STEP 5 USING 1" ROUND HEAD SCREW. ATTACH 1" ROUND HEAD SCREW THROUGH FRONT APRON TO STRENGTHEN ITS CONSTRUCTION.</p>	<p>STEP 8 ATTACH HANDLE TO DRAWER FRONT USING MACHINE SCREW. ATTACH DRAWER LEFT AND RIGHT TO DRAWER BACK USING 1 1/4" FLAT HEAD SCREWS. SLIDE DRAWER BASE INTO THE GROOVE. ATTACH DRAWER FRONT TO DRAWER LEFT AND RIGHT USING 1 1/4" FLAT HEAD SCREWS.</p>

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver



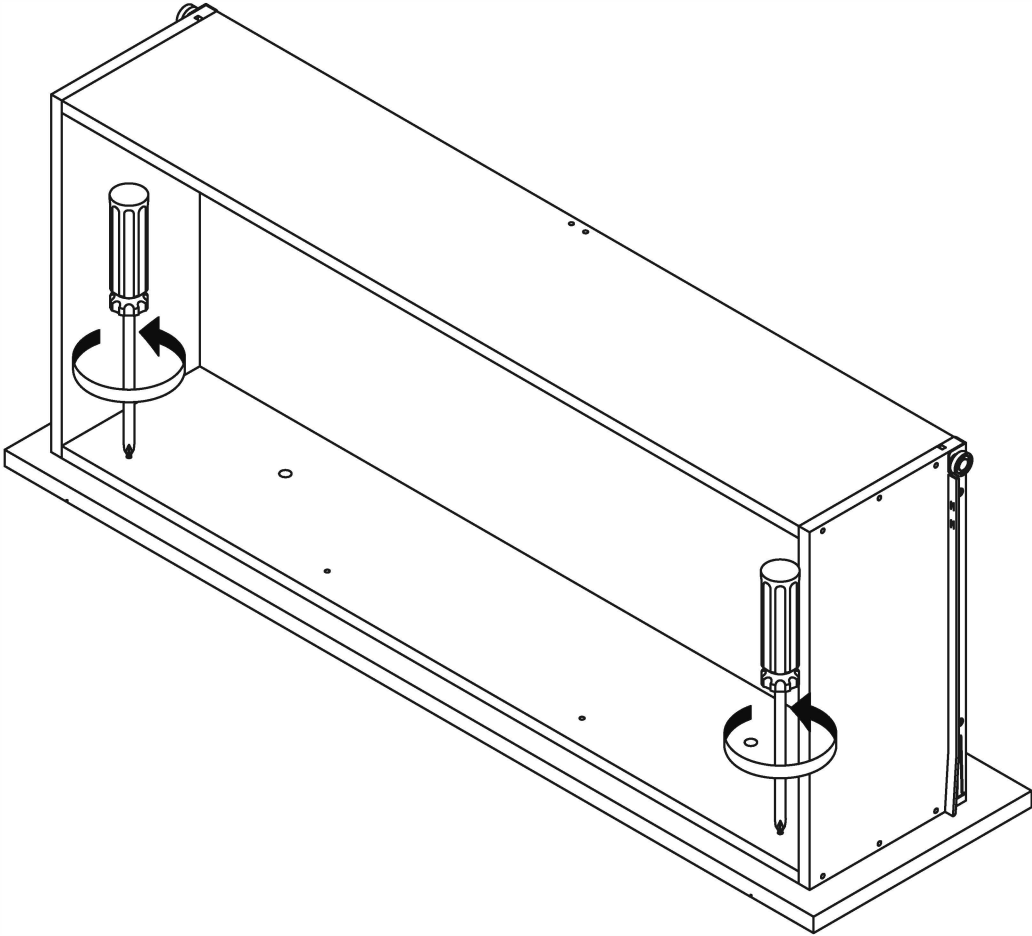
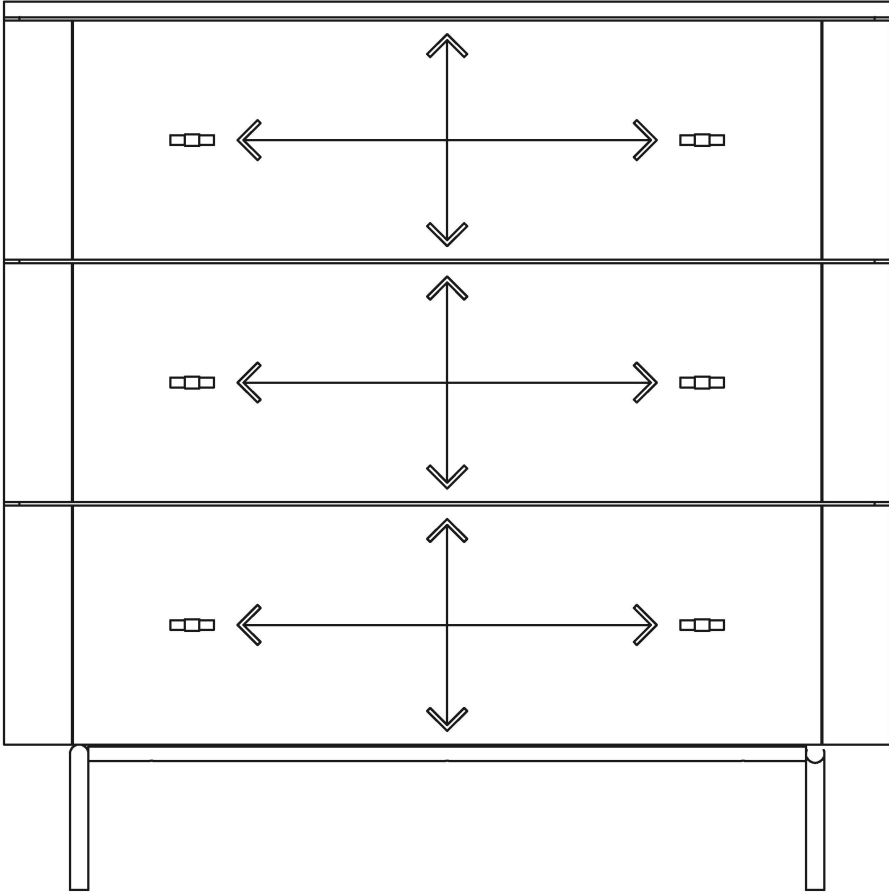
STEP 9 ATTACH DRAWER SUPPORT TO UNIT USING 1 1/4" FLAT HEAD SCREWS.



STEP 10 SLIDE THE DRAWERS INTO UNIT. ADJUST THE ADJUSTER THAT HAS ALREADY BEEN ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT.

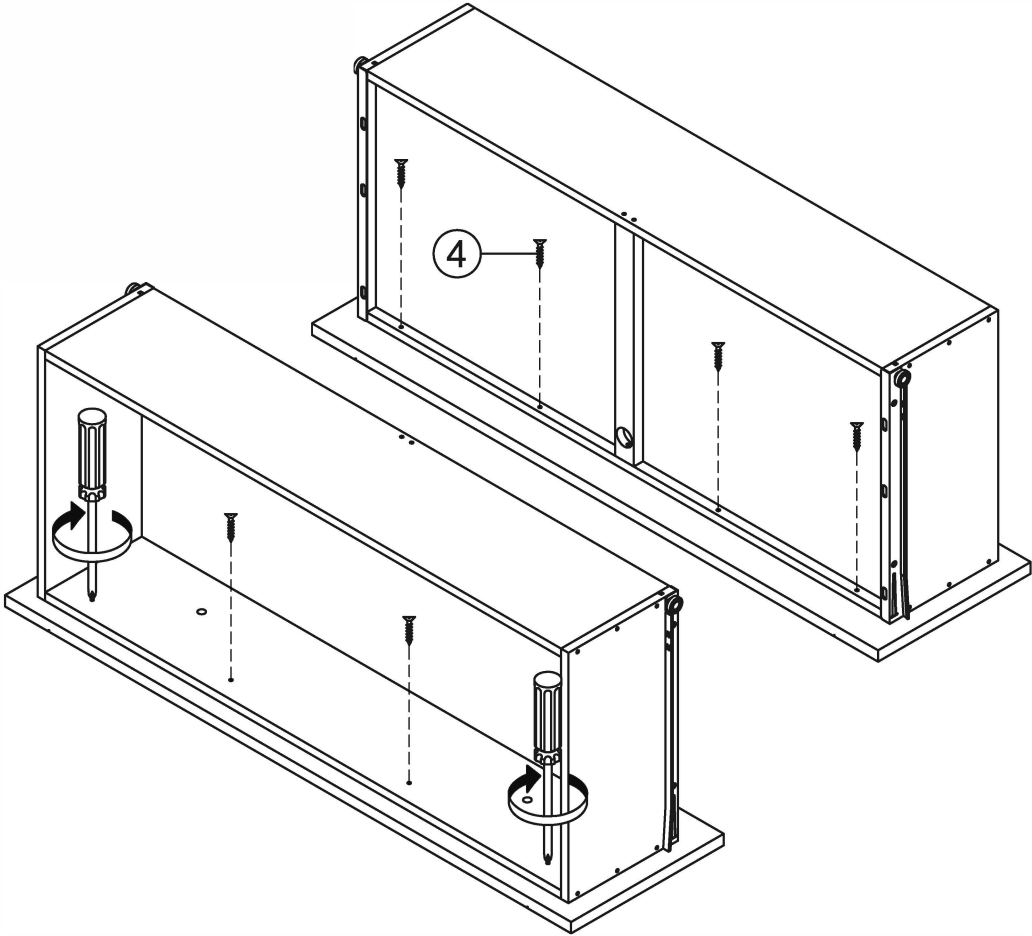
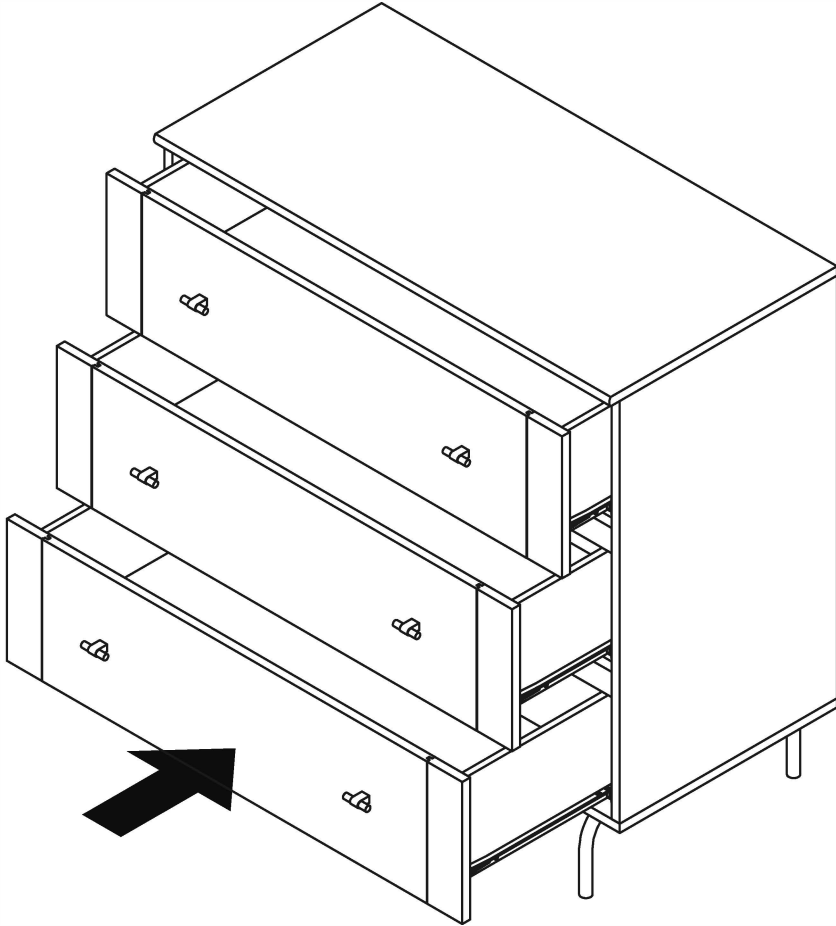
PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver

	
<p>STEP 11 REMOVE DRAWERS FROM UNIT. LOOSEN SLIGHTLY THE SCREWS PRE-INSTALLED ON THE BACK OF THE DRAWER FRONTS.</p>	<p>STEP 12 INSERT THE DRAWER INTO THE UNIT, THEN ADJUST THE DRAWER FRONT PANEL LEFT OR RIGHT AND UP OR DOWN UNTIL THE DRAWER GAPS LOOK PROPORTIONAL.</p>

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver

 <p>The diagram shows two drawers of a unit. The top drawer is partially open, and a screwdriver is shown tightening a screw on its front panel. A circled number '4' points to a screw on the side of the top drawer. Dashed lines indicate the positions of other screws on the drawers.</p>	 <p>The diagram shows a three-drawer unit with all drawers partially inserted. A large black arrow points towards the drawers, indicating the direction to slide them into the unit.</p>
<p>STEP 13 PULL THE DRAWER OPEN SLOWLY AND RE-TIGHTEN THE SCREWS FROM STEP 12. MAKE SURE THE FRONT PANEL DOES NOT MOVE AND LOCK THE DRAWER FRONT PANEL INTO POSITION WITH 3/4" FLAT HEAD SCREWS.</p>	<p>STEP 14 SLIDE THE DRAWERS INTO UNIT.</p>