


INSTALLATION & ASSEMBLY

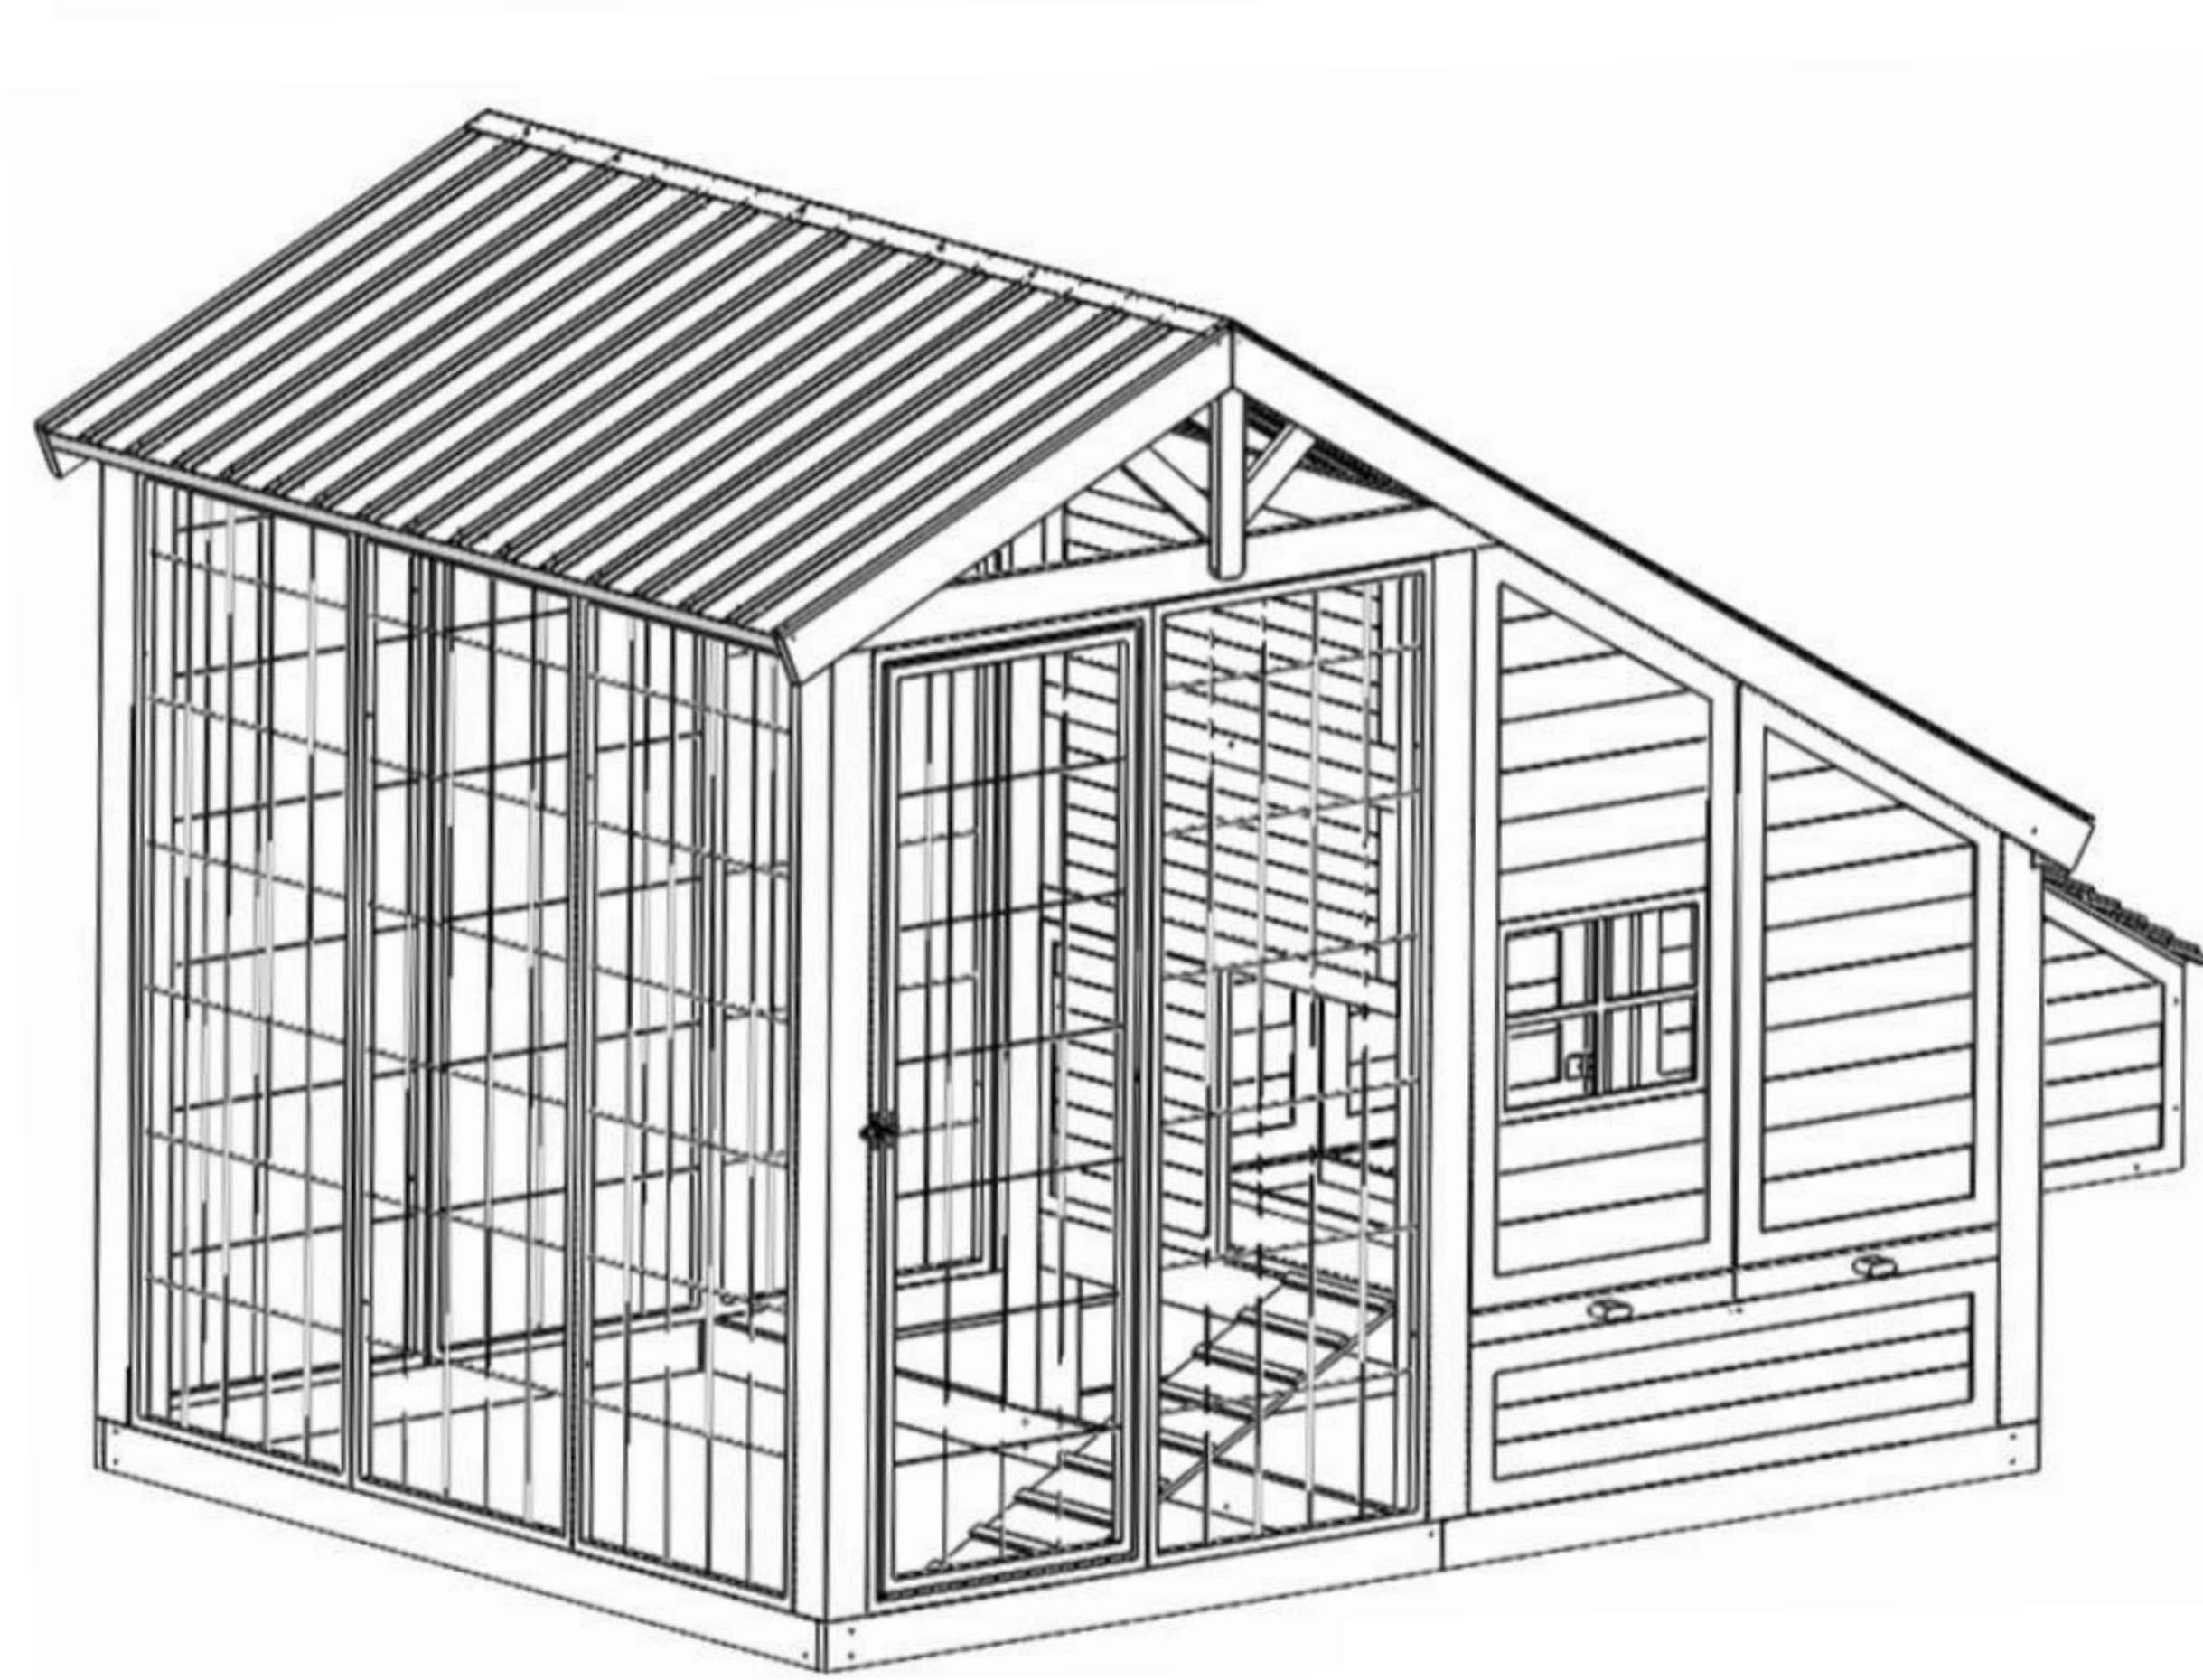

ASSEMBLY TIPS

IMPORTANT! PLEASE READ THESE ASSEMBLY INSTRUCTIONS IN ENTIRETY BEFORE ASSEMBLING YOUR PRODUCT

IV. Safety considerations

Wear gloves during installation to avoid cuts from the wire mesh or edges of the wooden boards.

If using a power drill, pay attention to safety procedures and wear protective goggles if necessary.

V. Inspect material quality

Check that the wire mesh is undamaged.

Ensure that the wooden boards have no cracks or damage to guarantee the overall stability of the structure.




VI. Inspect material quality

Tighten all screws securely to prevent the chicken coop from becoming loose during use.

After installation, check all connections to ensure the entire structure is stable.




By following these precautions, you can ensure a smooth and safe installation process for the wooden wire chicken cage, while also providing a comfortable and secure resting space for your dog.

PART LIST




BOX A			
STAMP ID	QTY REQ	DESCRIPTION	IMAGE
A1	1		
A2	1		
A3	1		
A4	1		
A5	3		
B1	2		
B2	3		
B3	1		
B4	1		
B5	2		
B6	2		
B7	2		
F1	5		
F2	2		
F3	2		
K	3		
T	2		
W	1		

PARTS LIST

BOX B

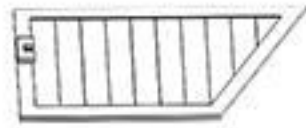STAMP ID	QTY REQ	DESCRIPTION	IMAGE
C1	5		
D1	13		
E1	2		
E2	2		
F4	1		
G1	4		
G2	2		
J	1		
J2	1		
K1	1		
L	2		
N1	1		
N2	1		
T3	1		
T4	1		
T5	1		
T6	1		
J1	1		
U	2		
V	1		
T2	1		
L2	1		

BOX A


STAMP ID	QTY REQ	DESCRIPTION	IMAGE
1	23		
2	7		
3	174		 M4*20
4	172		 M4*40
5	8		 M4*30
6	7		 M4*70
7	85		 M4*35
8	3		 M6*30
9	15		 M6*10
		Single pack without Mark	
	55		


BOX C


STAMP ID	QTY REQ	DESCRIPTION	IMAGE
O	6		
P	1		
Q	1		
R	1		
S	12		
M1	1		
M2	1		
F5	1		
X	1		

ASSEMBLY INSTRUCTION


STEP 1

STAMP ID	QTY REQ	BOX	IMAGE
B1	2	A	
B2	1	A	
4	4	A	 M4*40
B7	2	A	

STAMP ID	QTY REQ	BOX	IMAGE
A1	1	A	
A2	1	A	
B2	1	A	
4	8	A	 M4*40

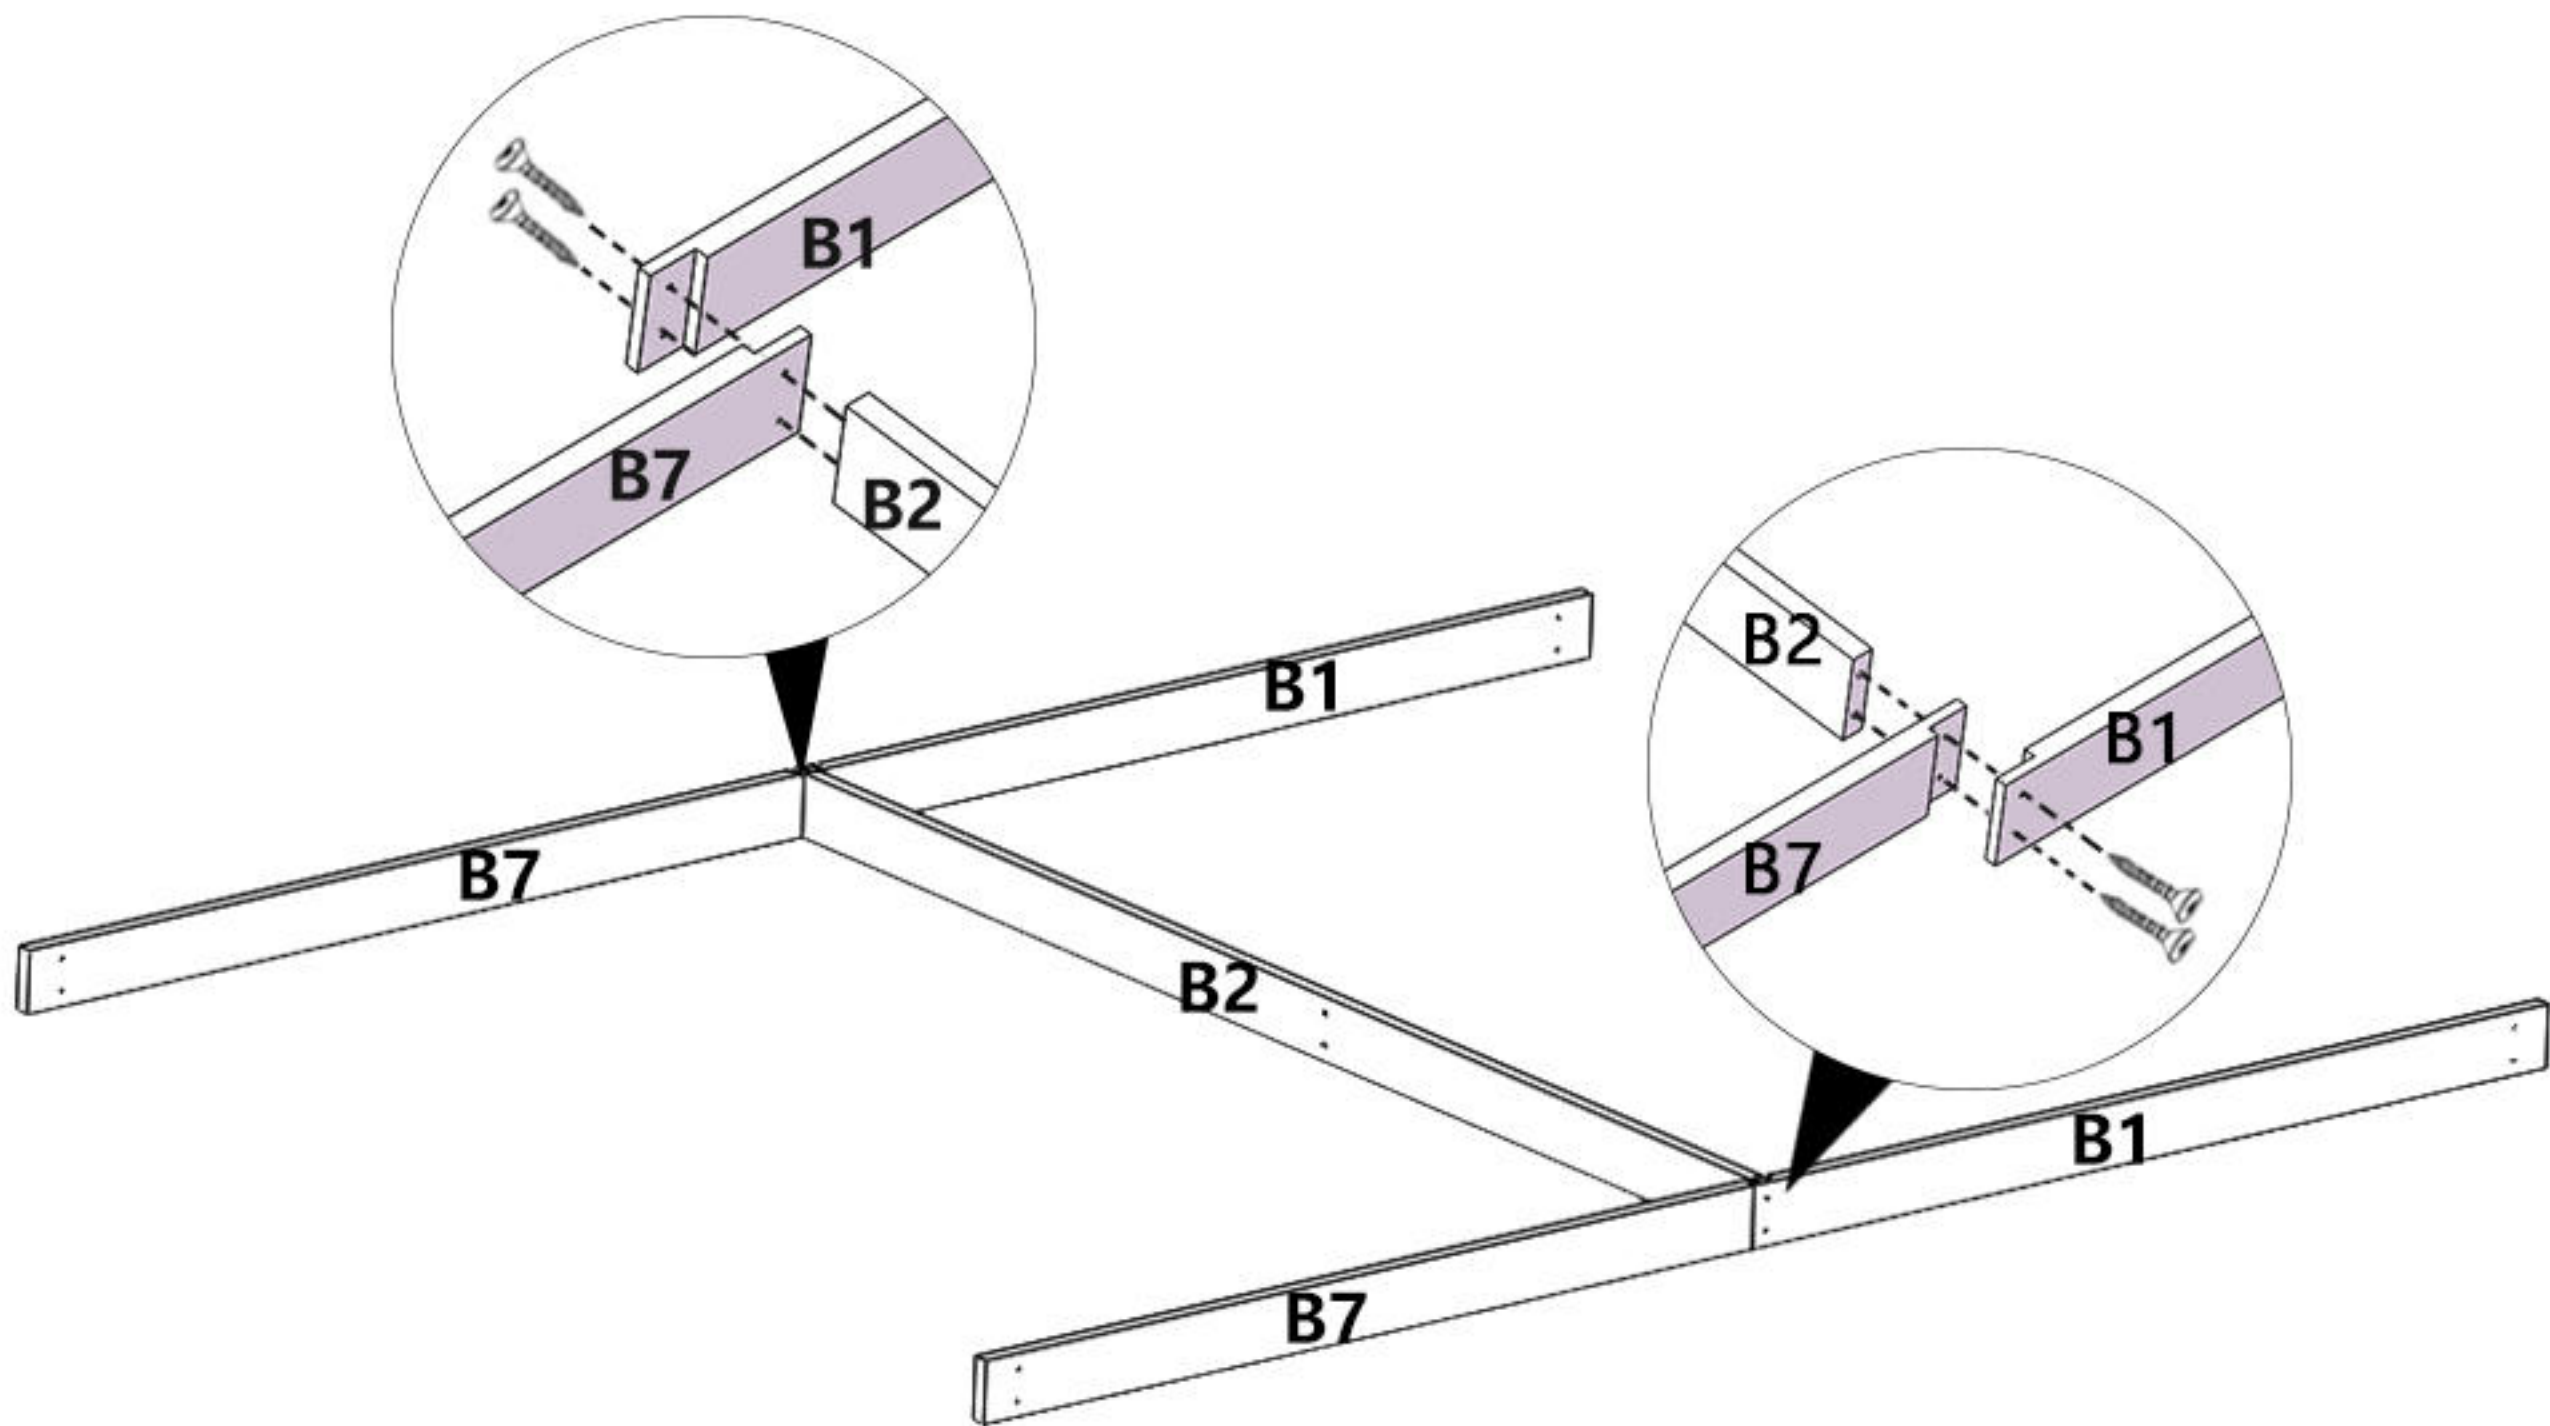


Place 2 B1, 2 B7, and 1 B2 in the order shown in the diagram to form a horizontally oriented H-shape. There are 2 connection points, each secured with 2 No. 4 screws.

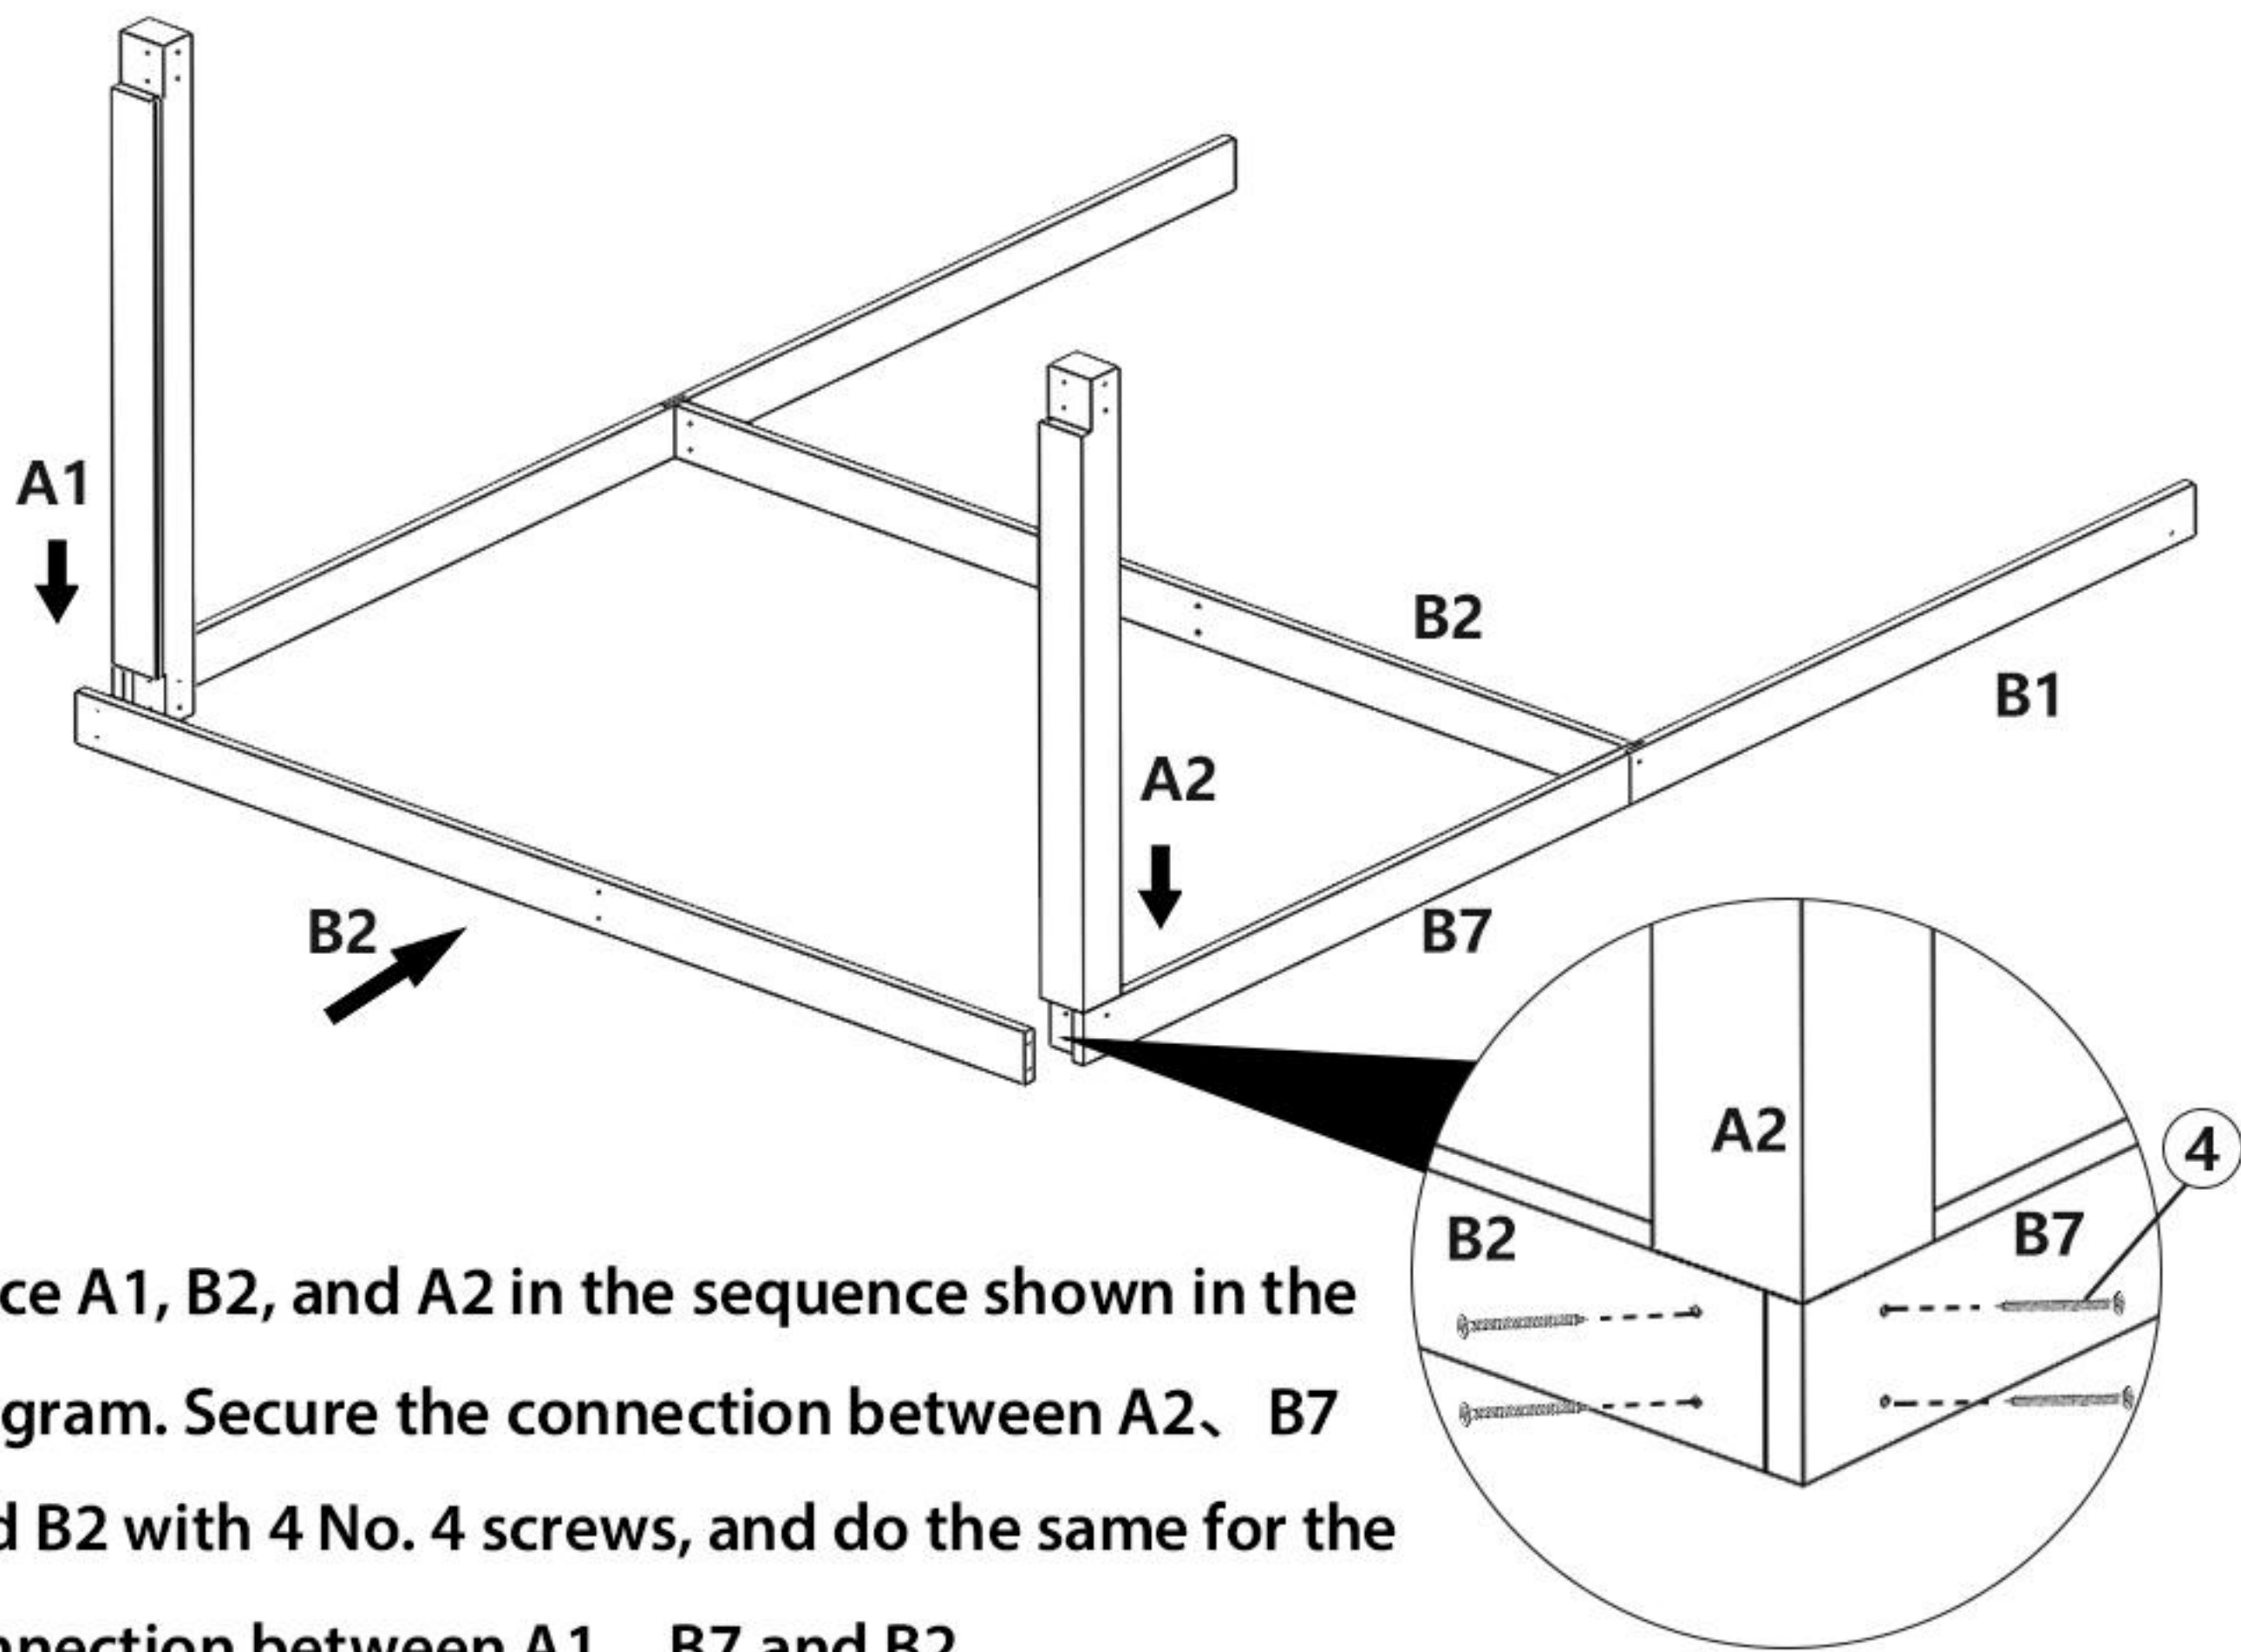


Place A1, B2, and A2 in the sequence shown in the diagram. Secure the connection between A2, B7 and B2 with 4 No. 4 screws, and do the same for the connection between A1, B7 and B2.


ASSEMBLY INSTRUCTION

STEP 2



STAMP ID	QTY REQ	BOX	IMAGE
C1	1	B	
A3	1	A	
D1	1	B	
4	2	A	 M4*40

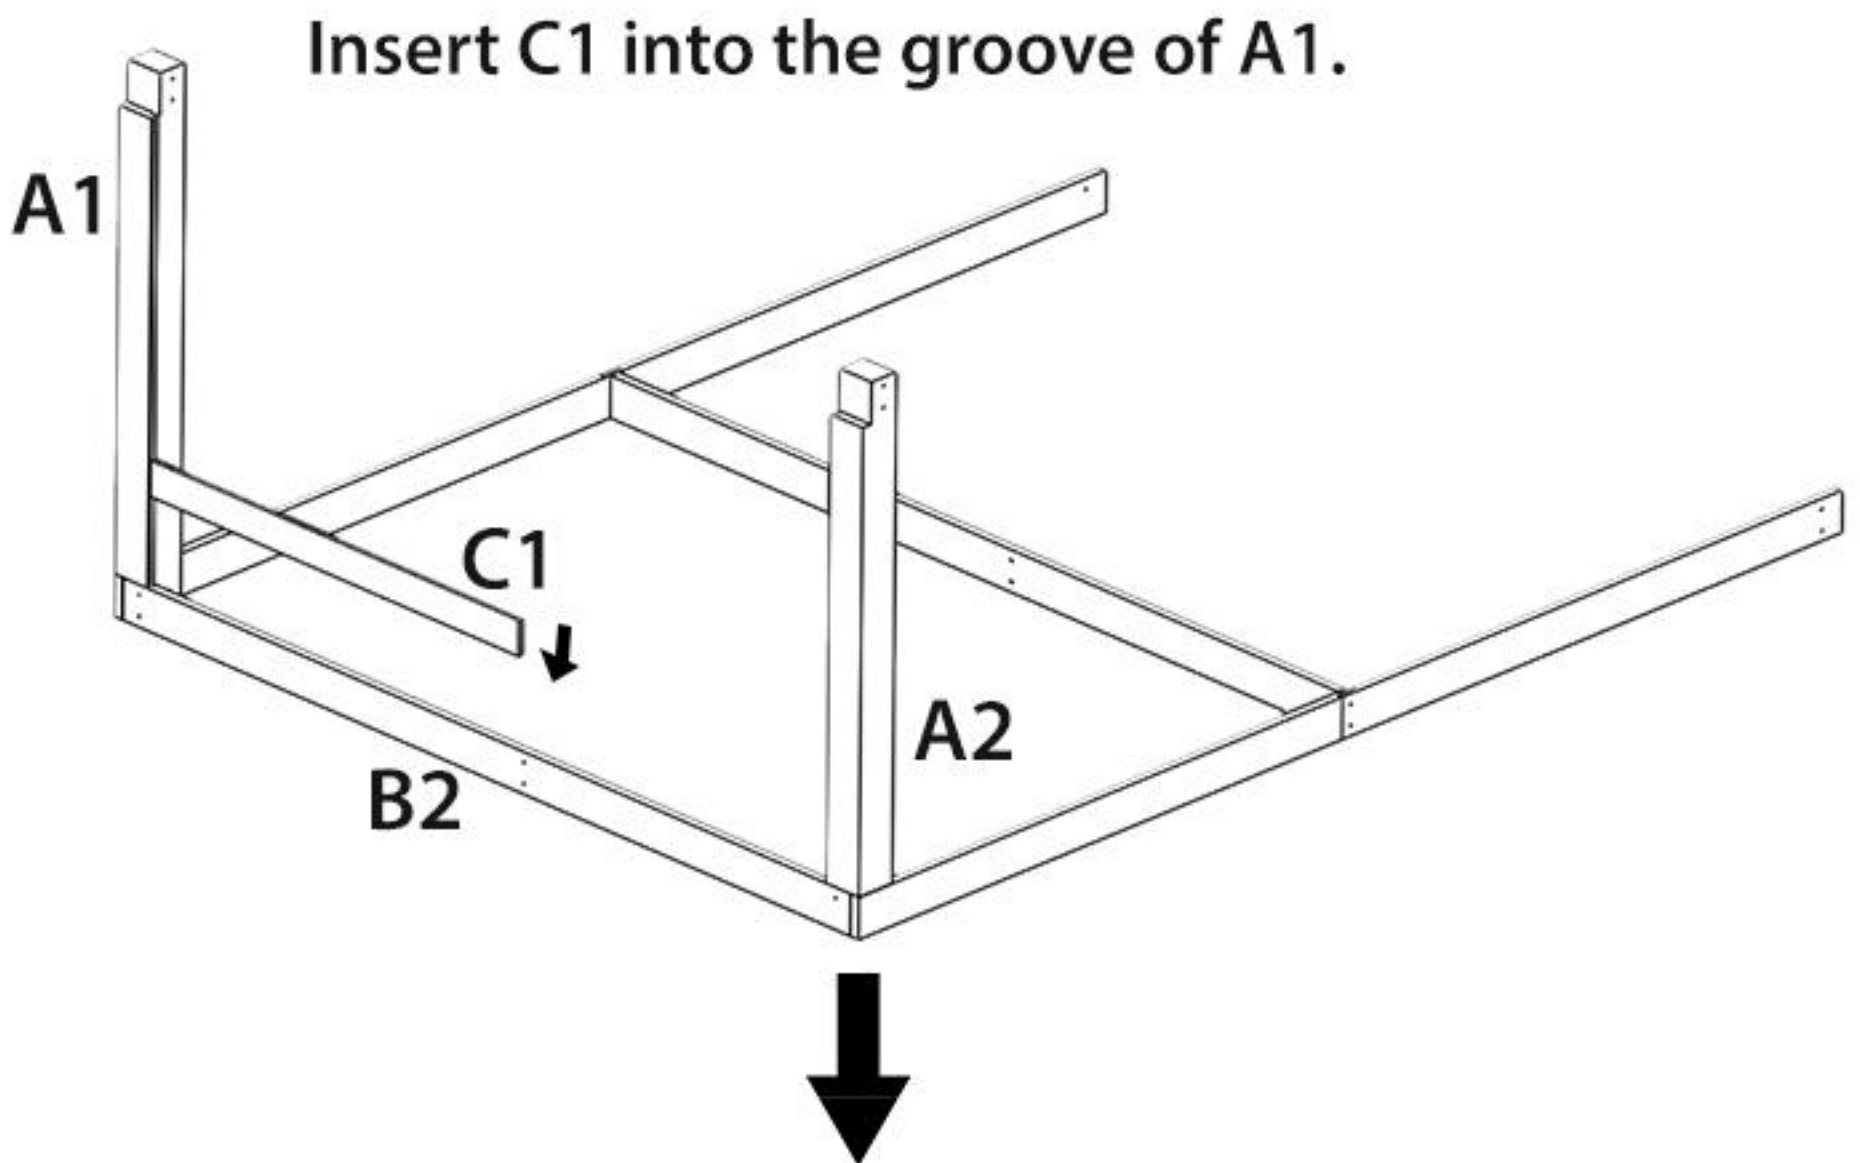

Place A3 downward.

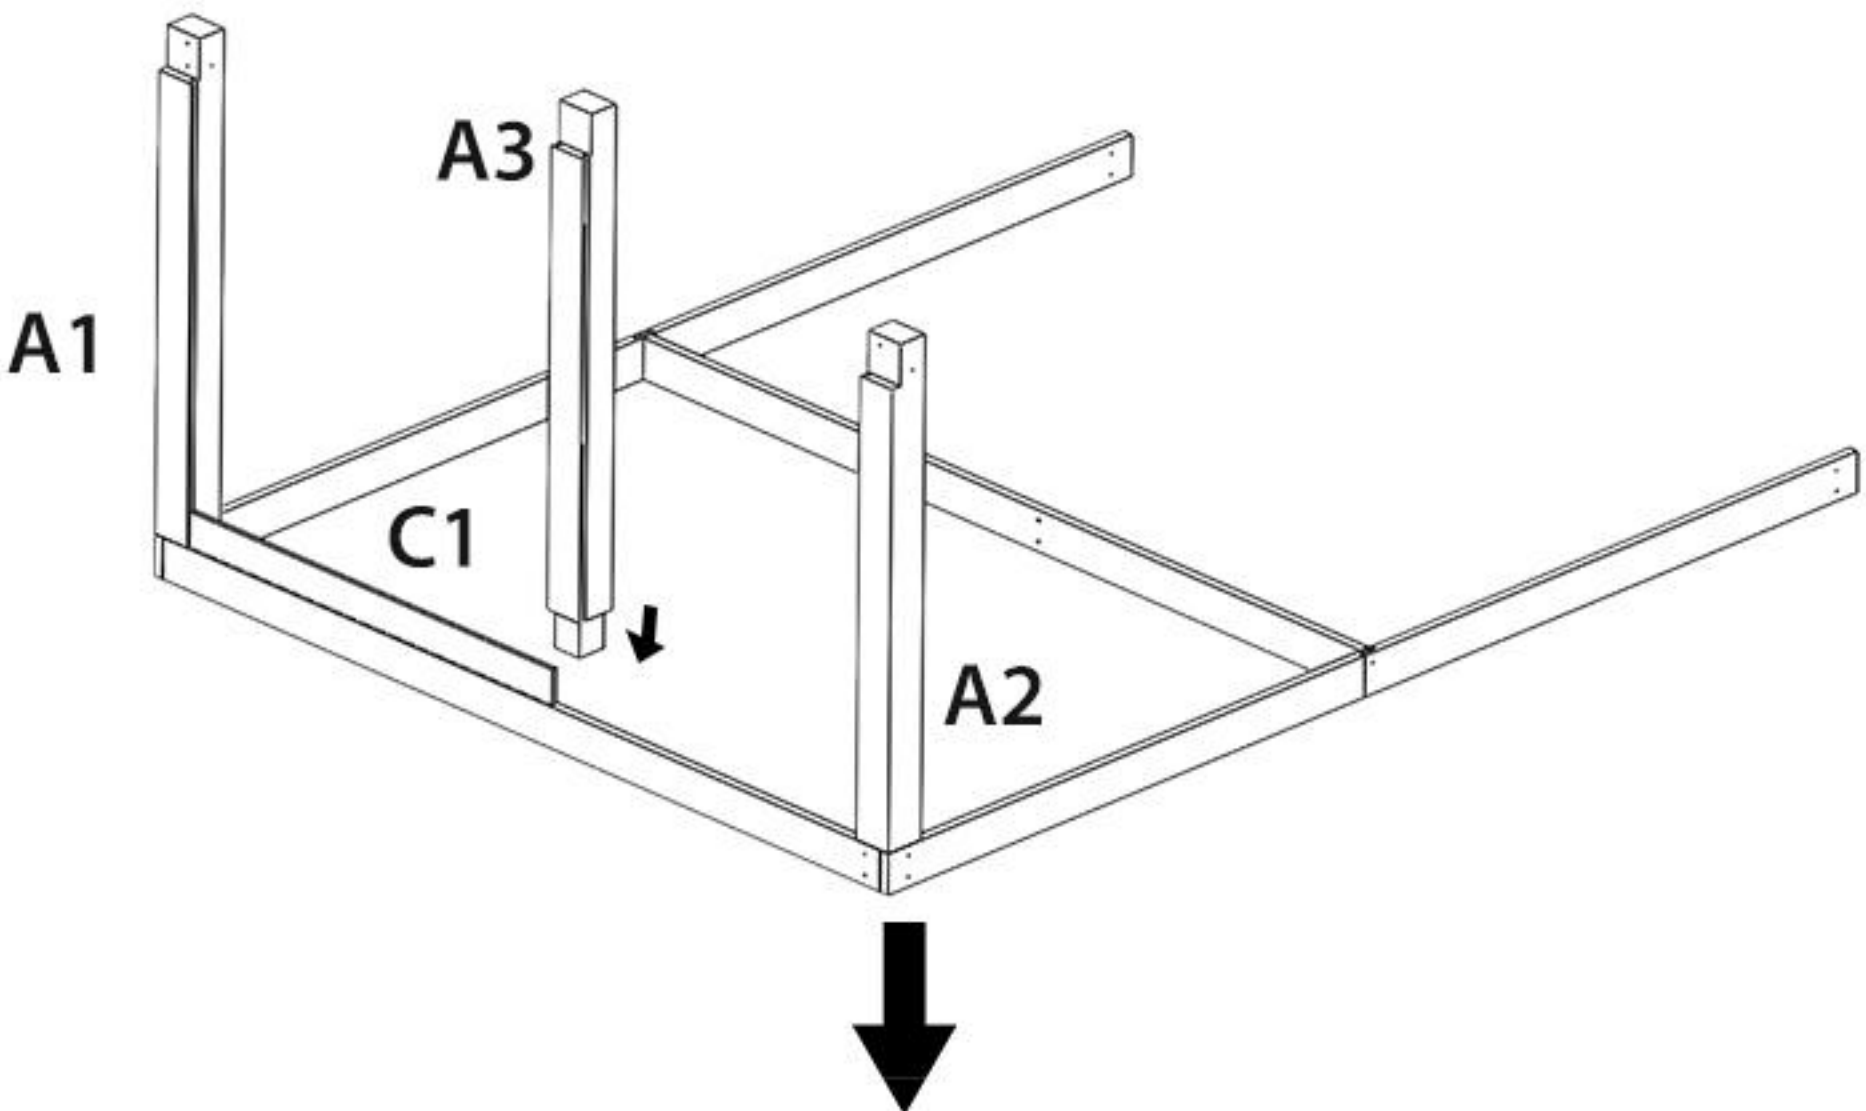

Insert D1 downward into the grooves of A3 and A2.

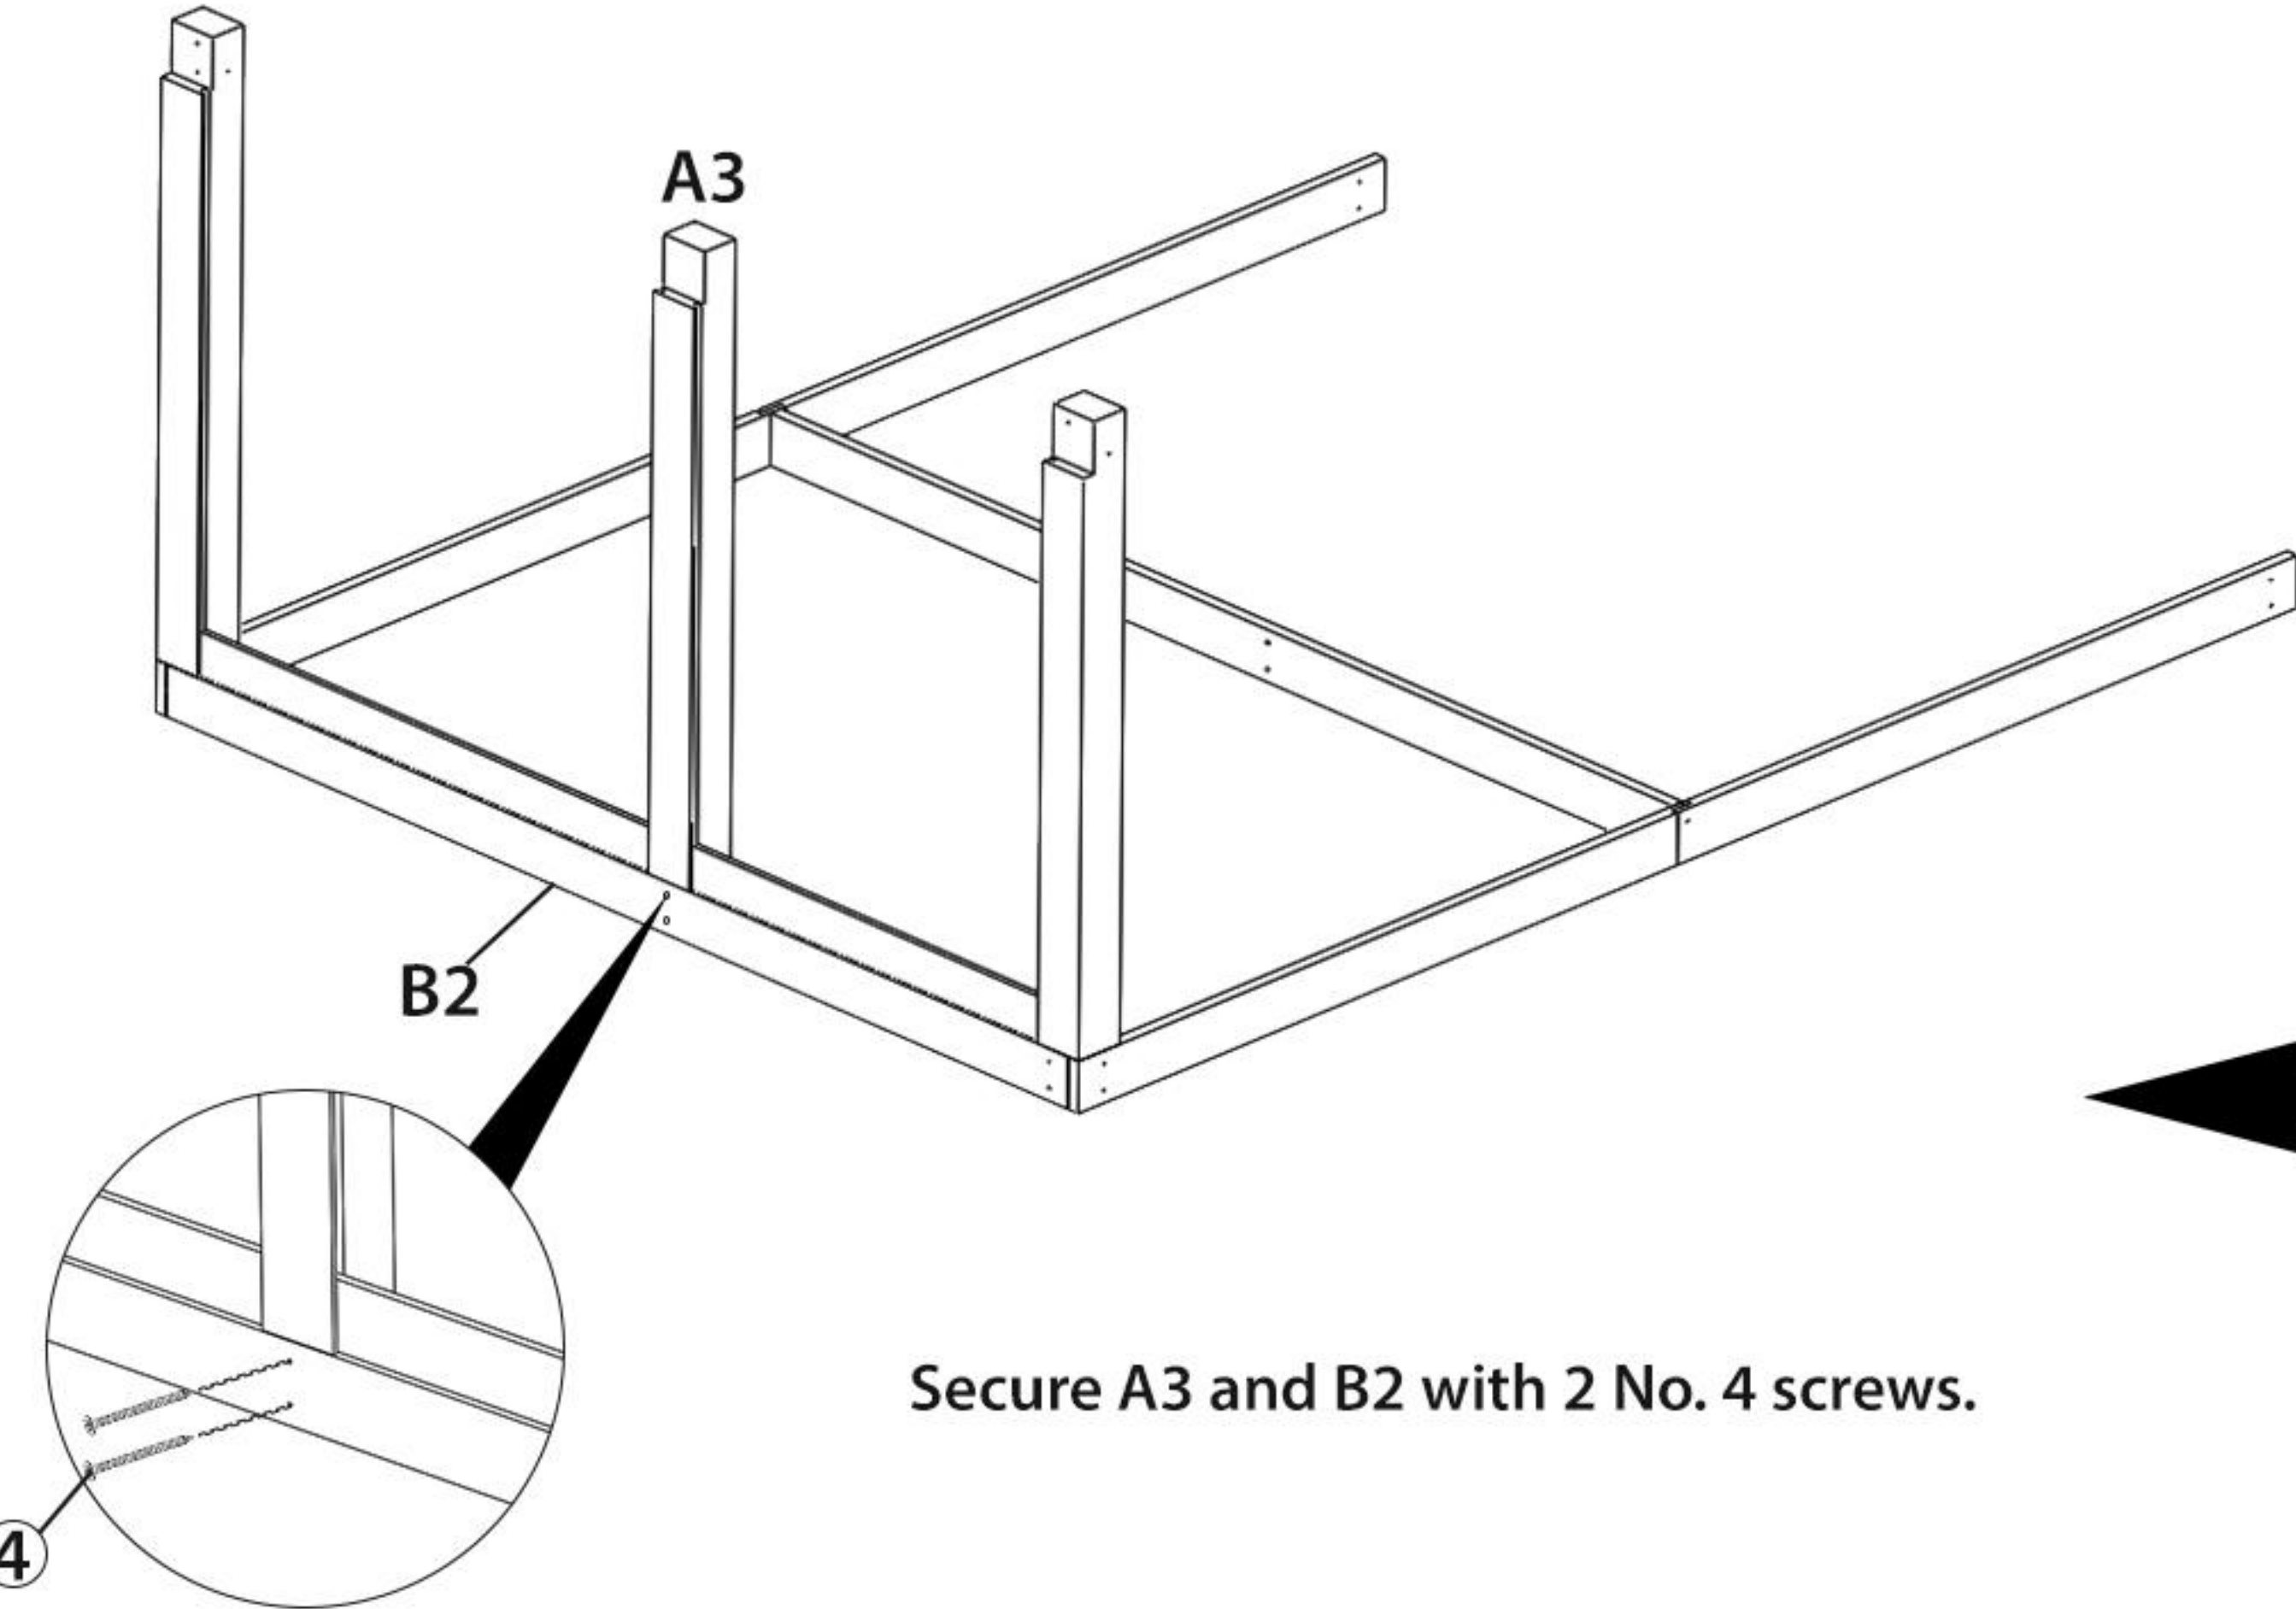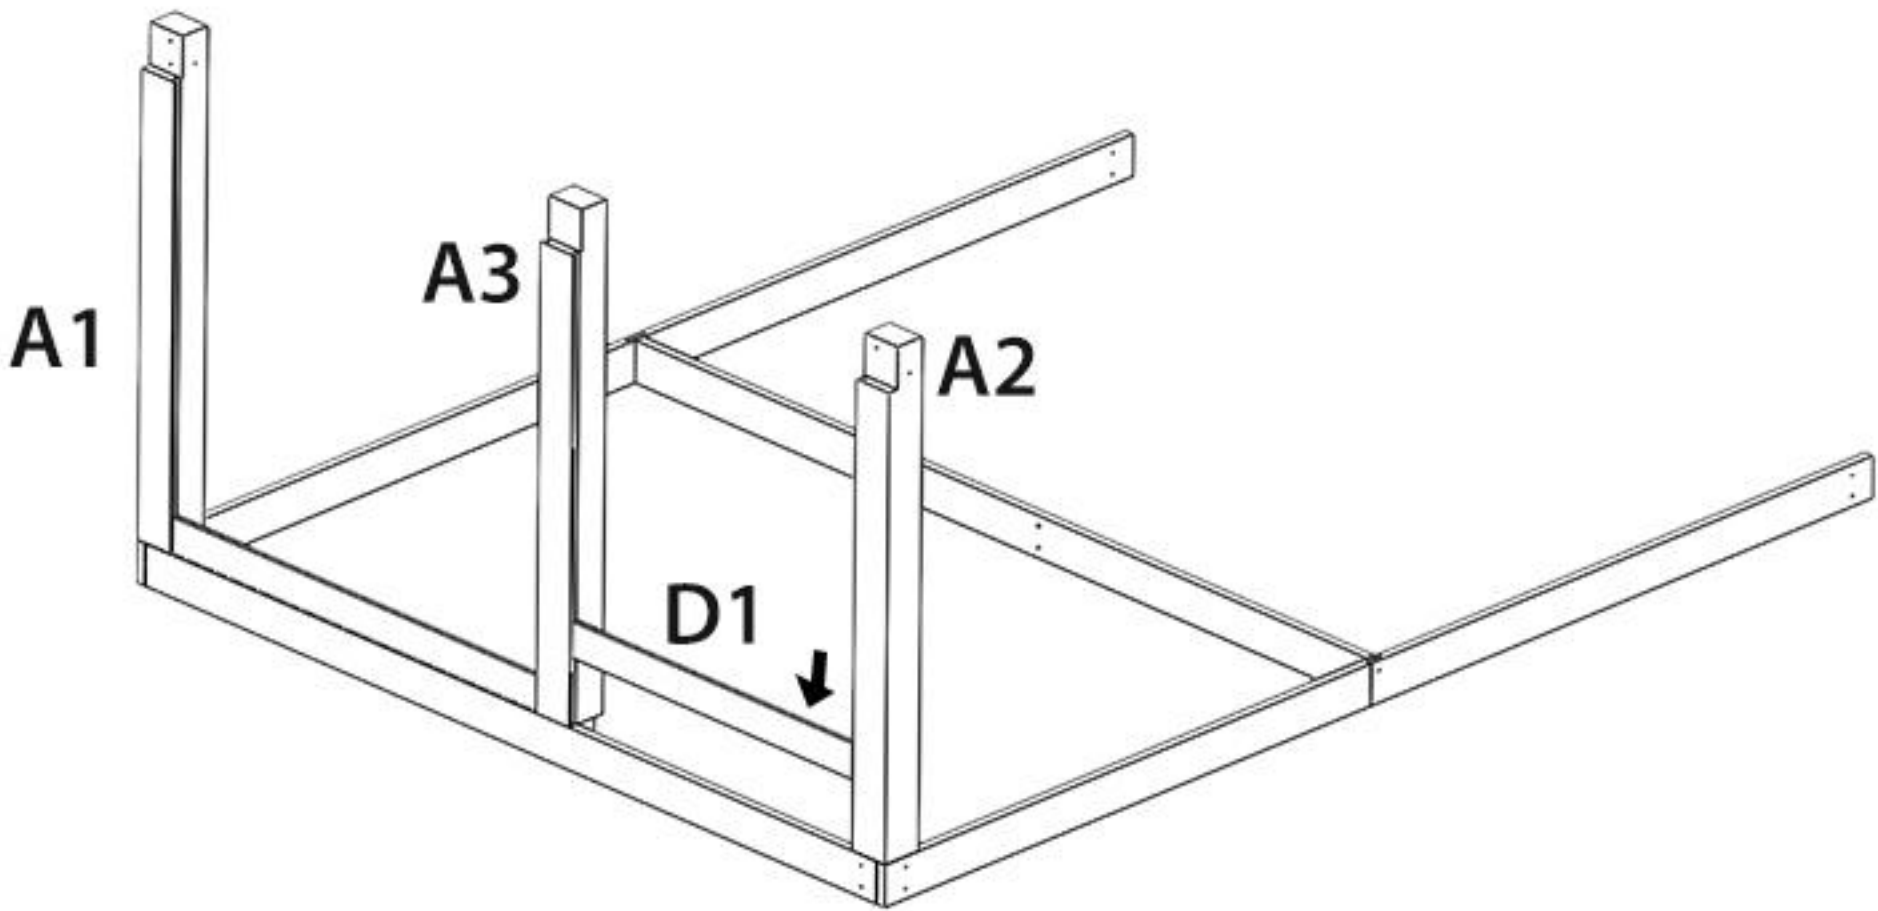


Secure A3 and B2 with 2 No. 4 screws.

ASSEMBLY INSTRUCTION



STEP 3

STAMP ID	QTY REQ	BOX	IMAGE
C1	4	B	
D1	12	B	
B3	1	A	
4	6	A	M4*40

Secure B3 to A1, A2, and A3 using 6 No. 4 screws.

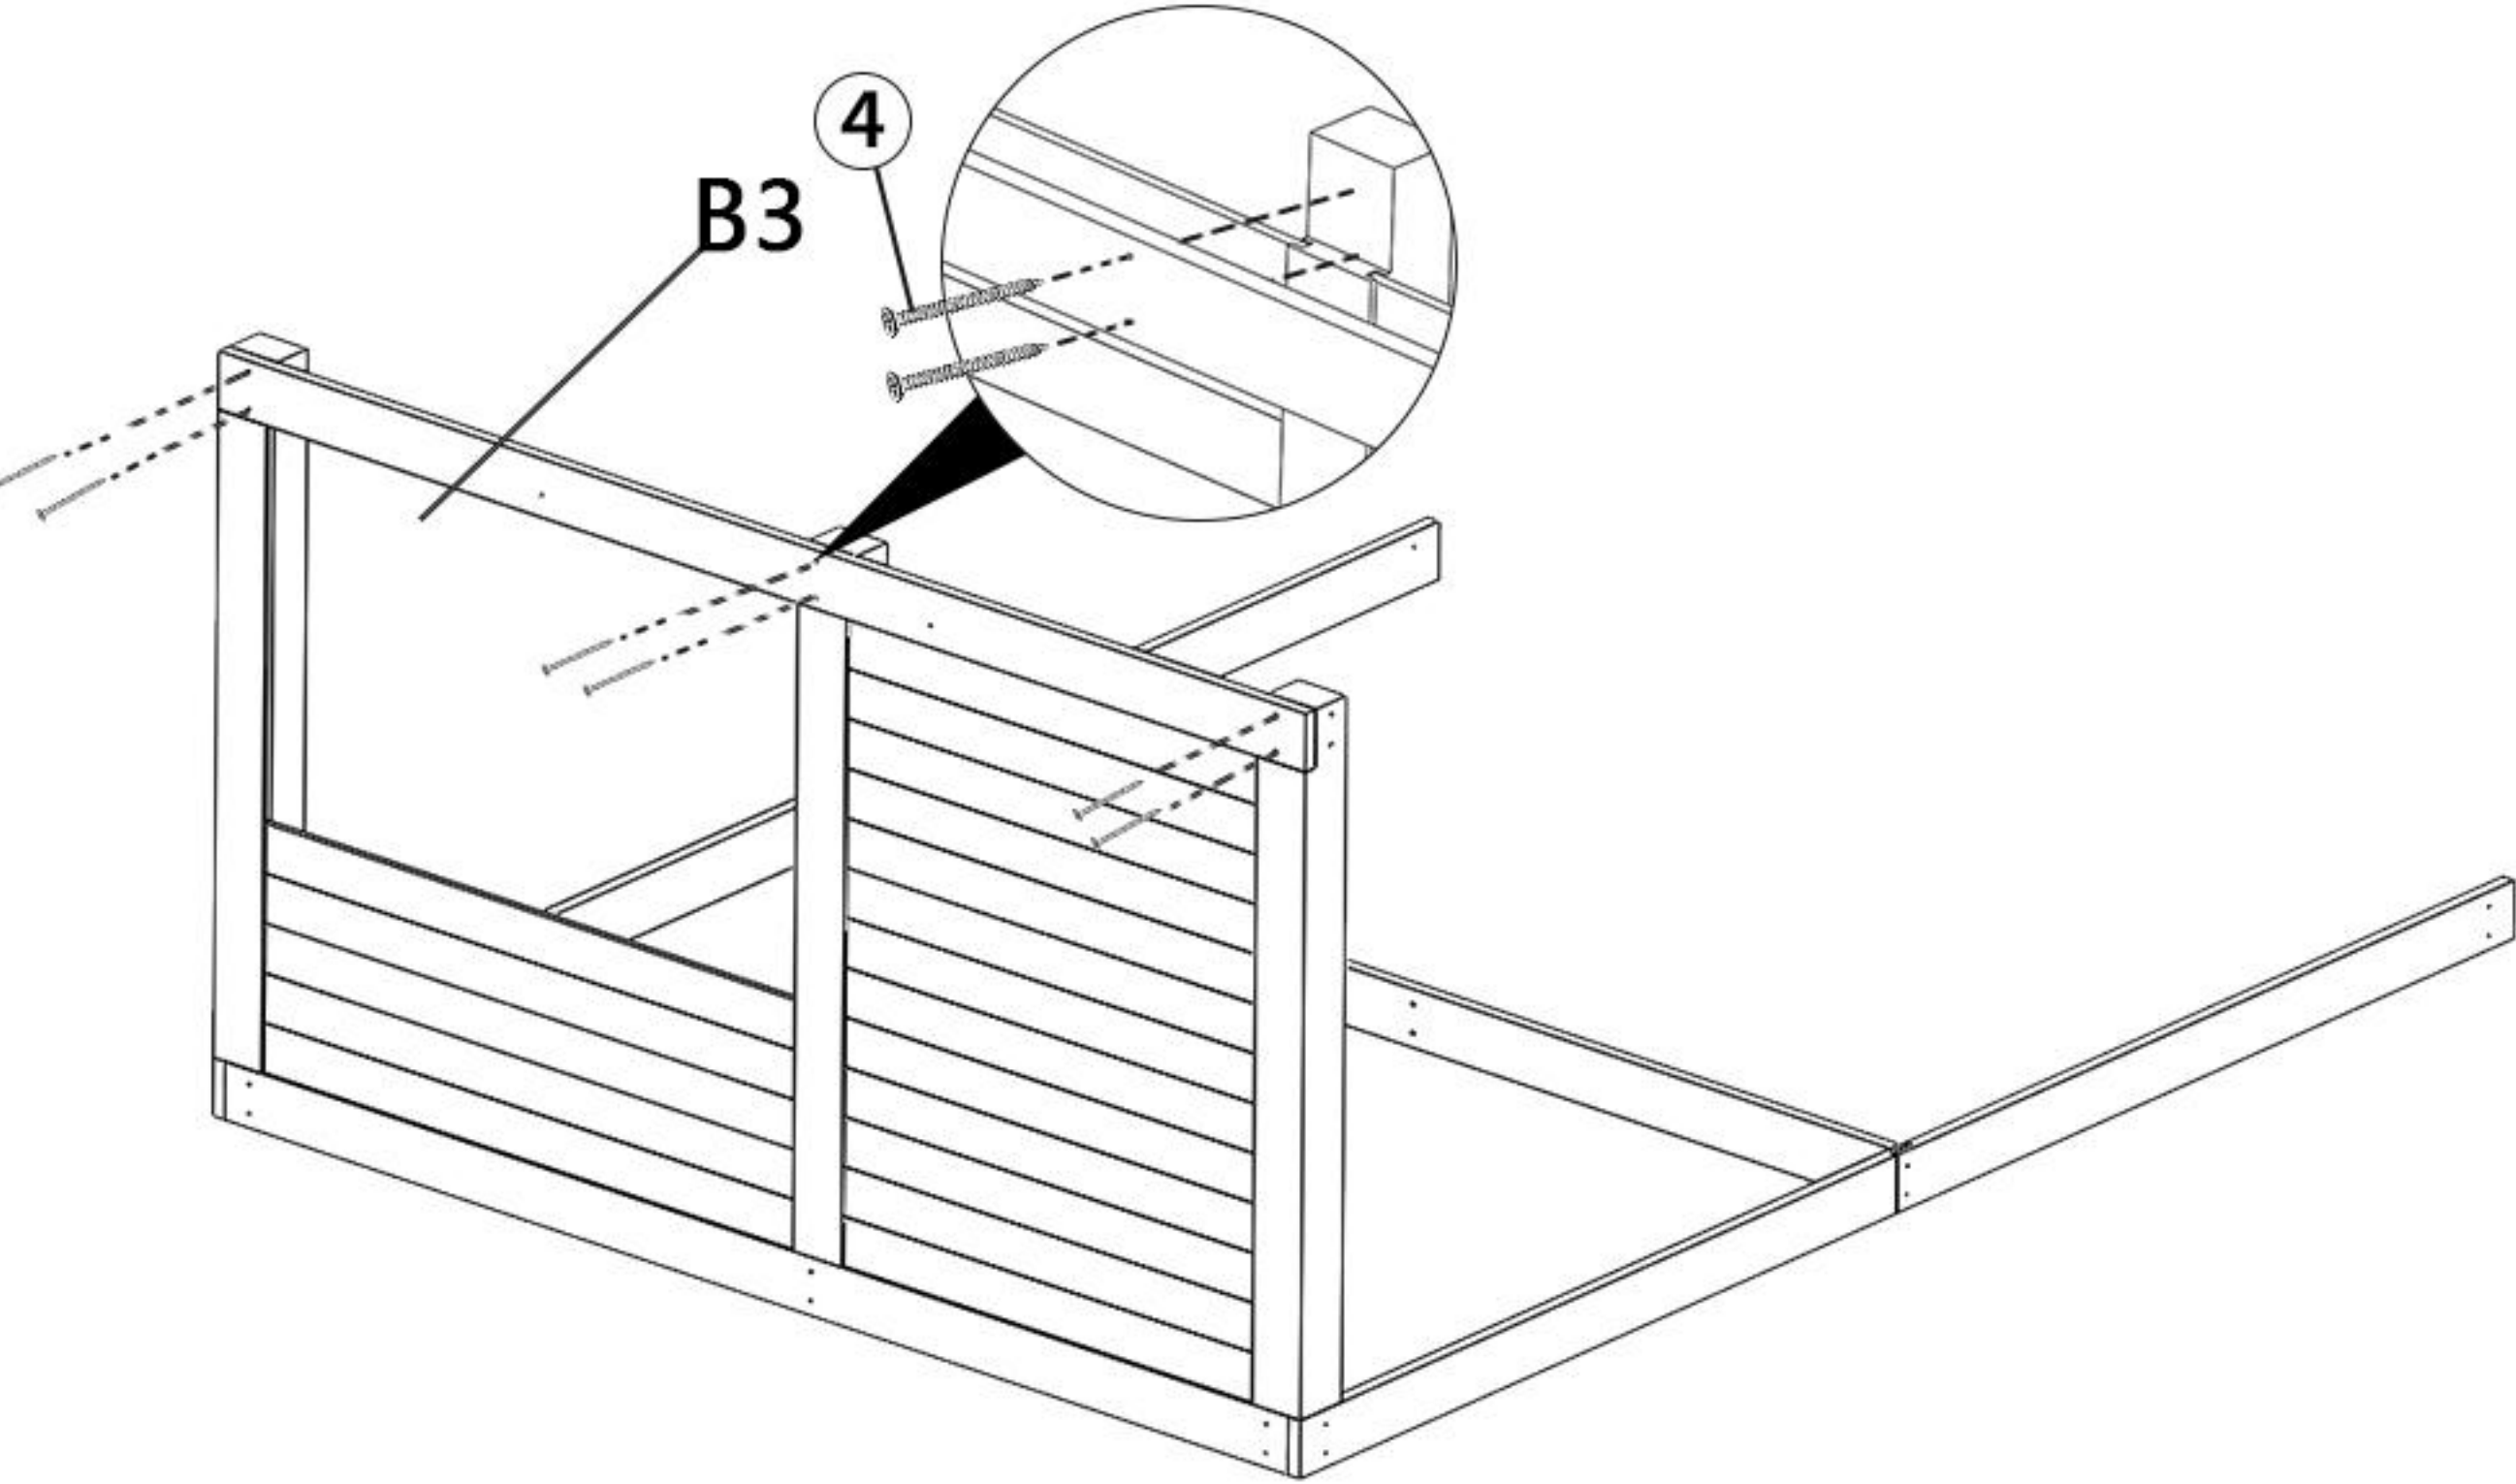

Insert 4 pieces of C1 along the grooves of A1 and A3.
Insert 12 pieces of D1 along the grooves of A3 and A2.

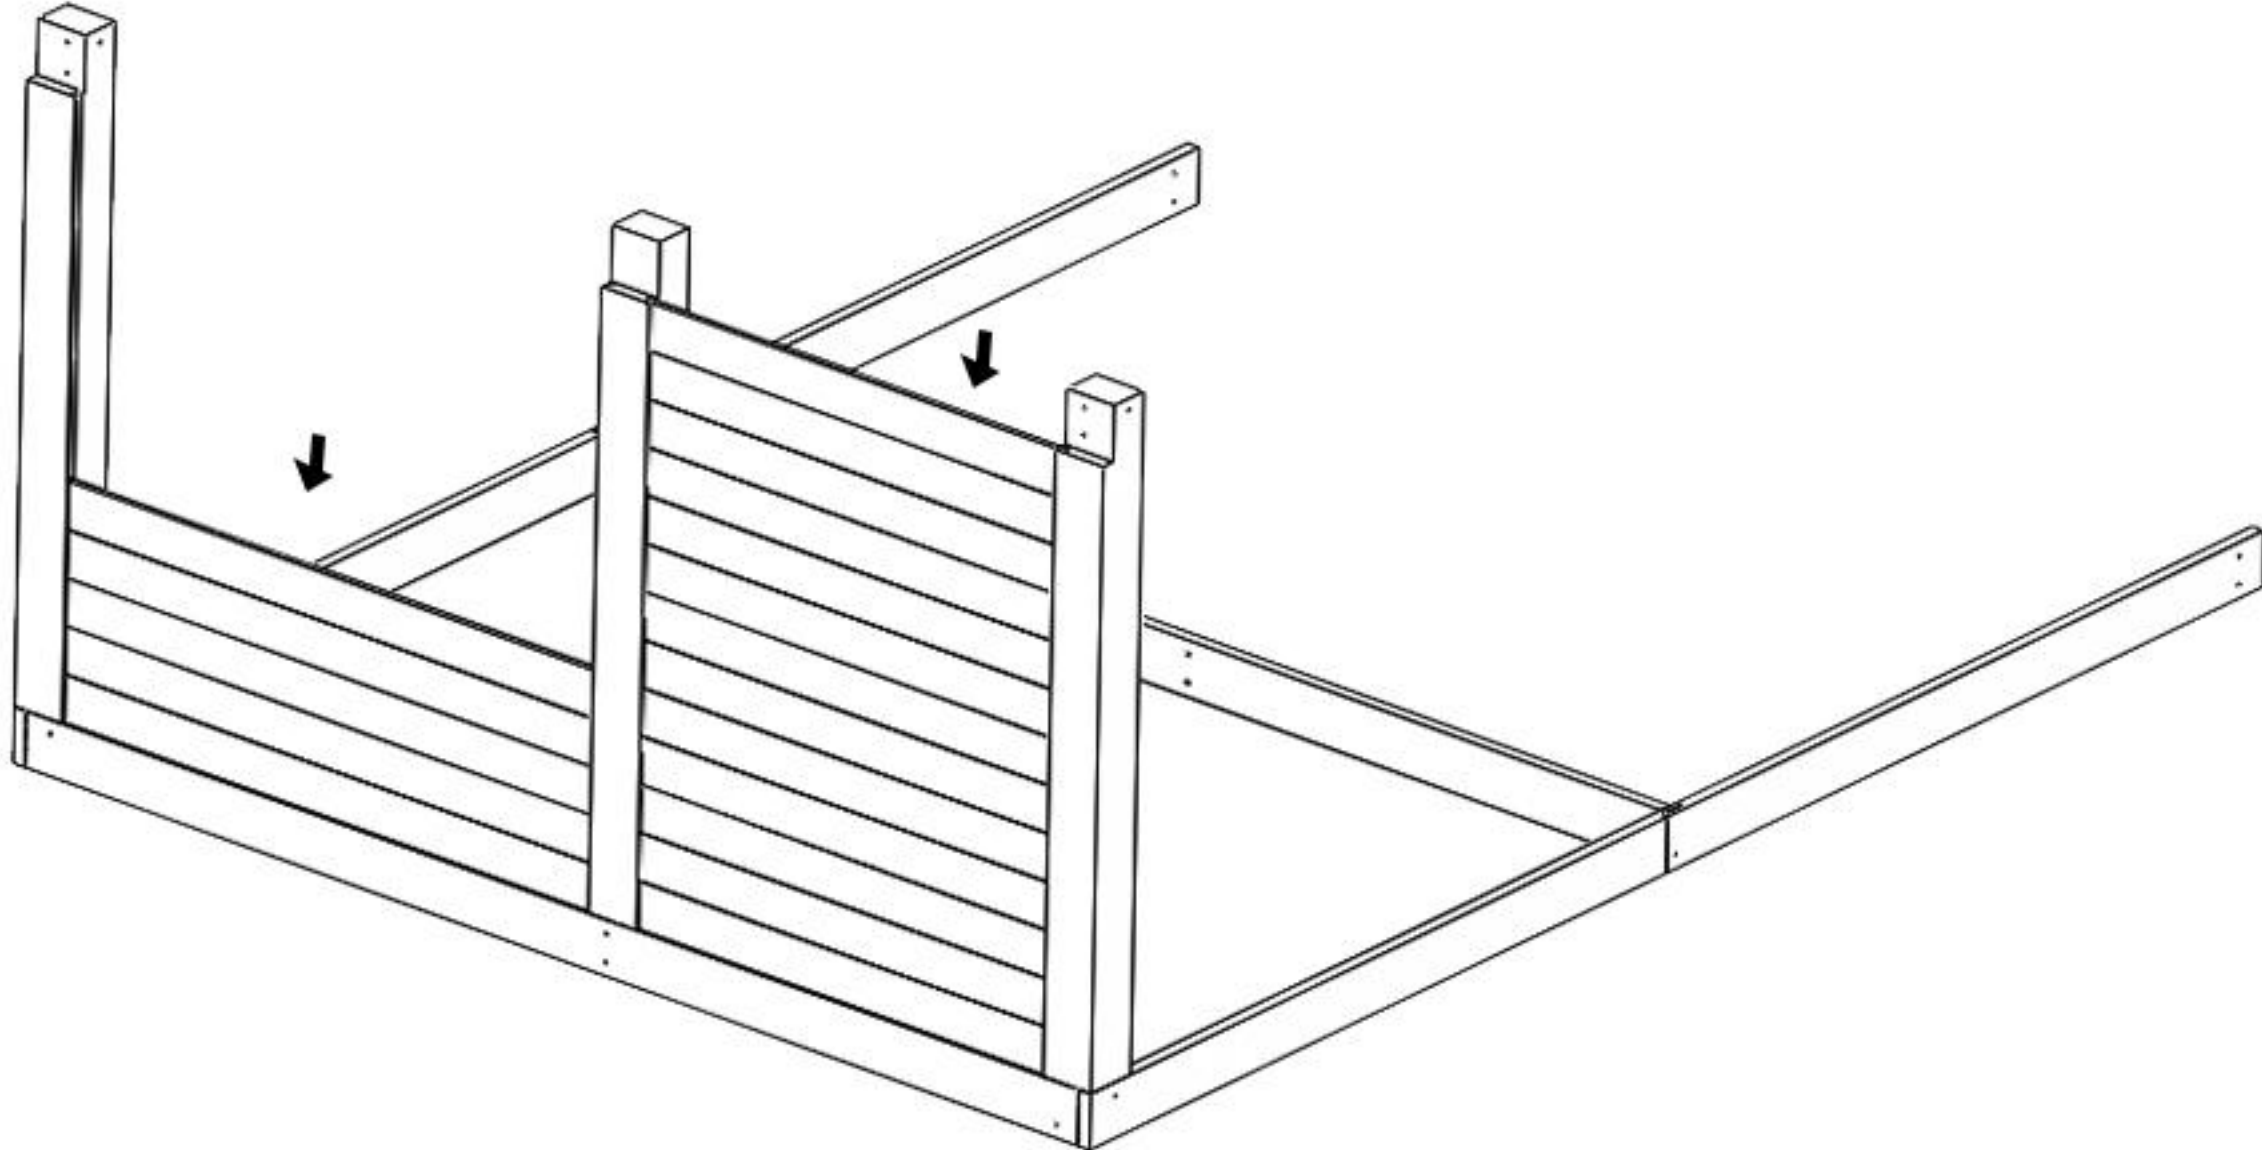
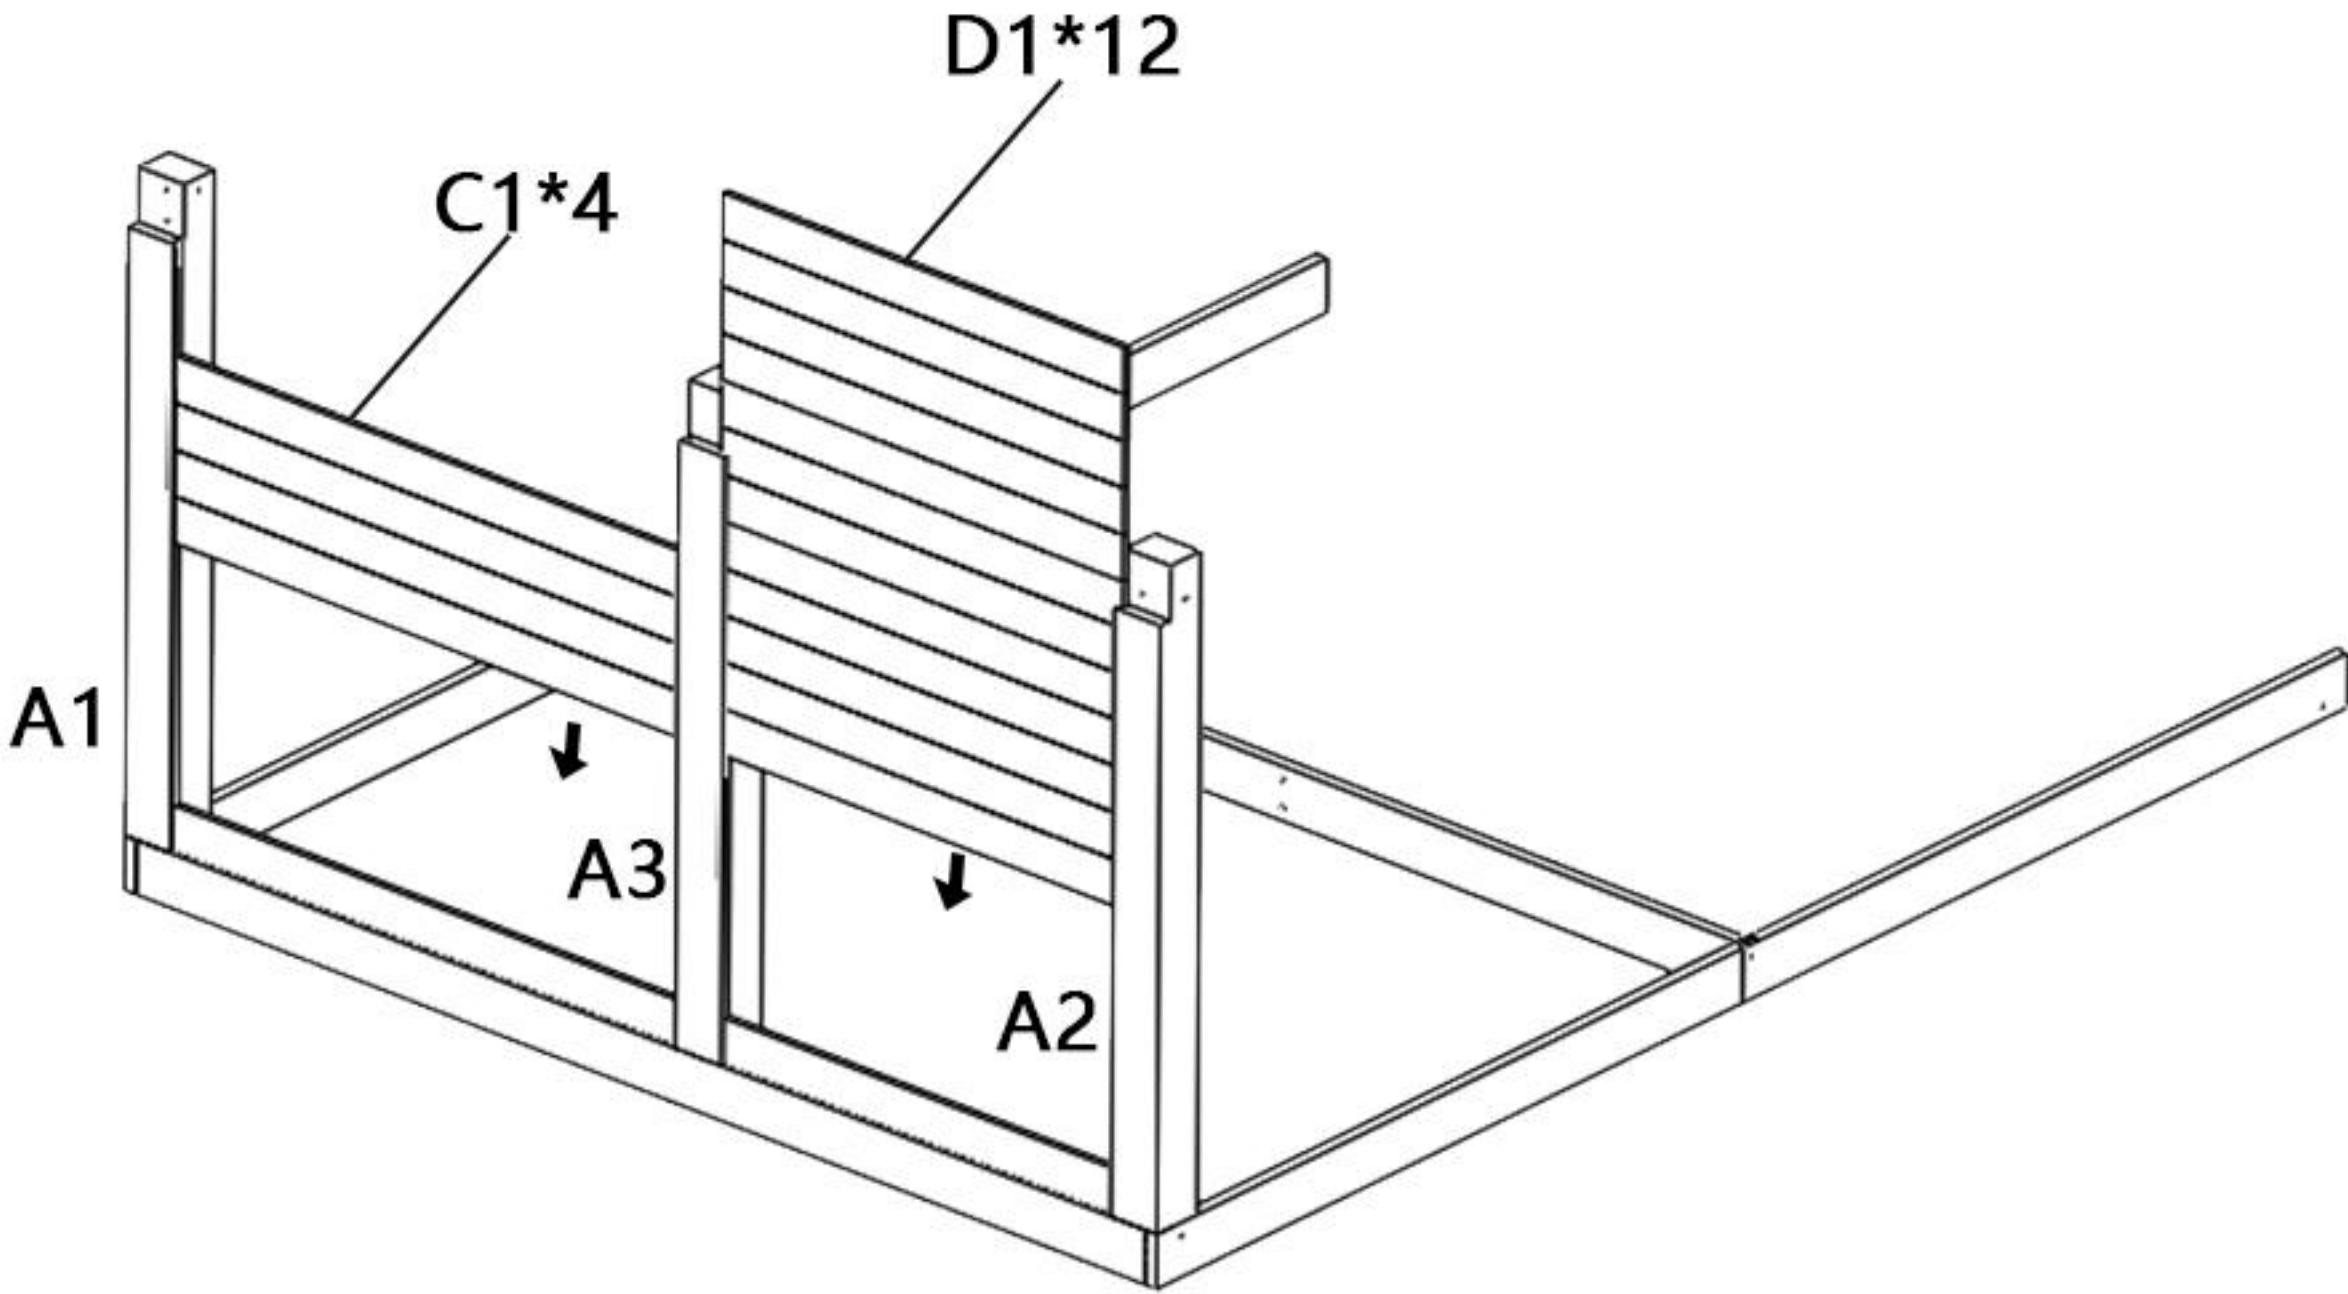


ASSEMBLY INSTRUCTION


STEP 4

STAMP ID	QTY REQ	BOX	IMAGE
A4	1	A	
A5	3	A	
B4	1	A	
B5	1	A	
4	16	A	M4*40

Place B4 horizontally, aligning it with the bottom of A3.
Secure B4 to A3 using 2 No.4 screws.

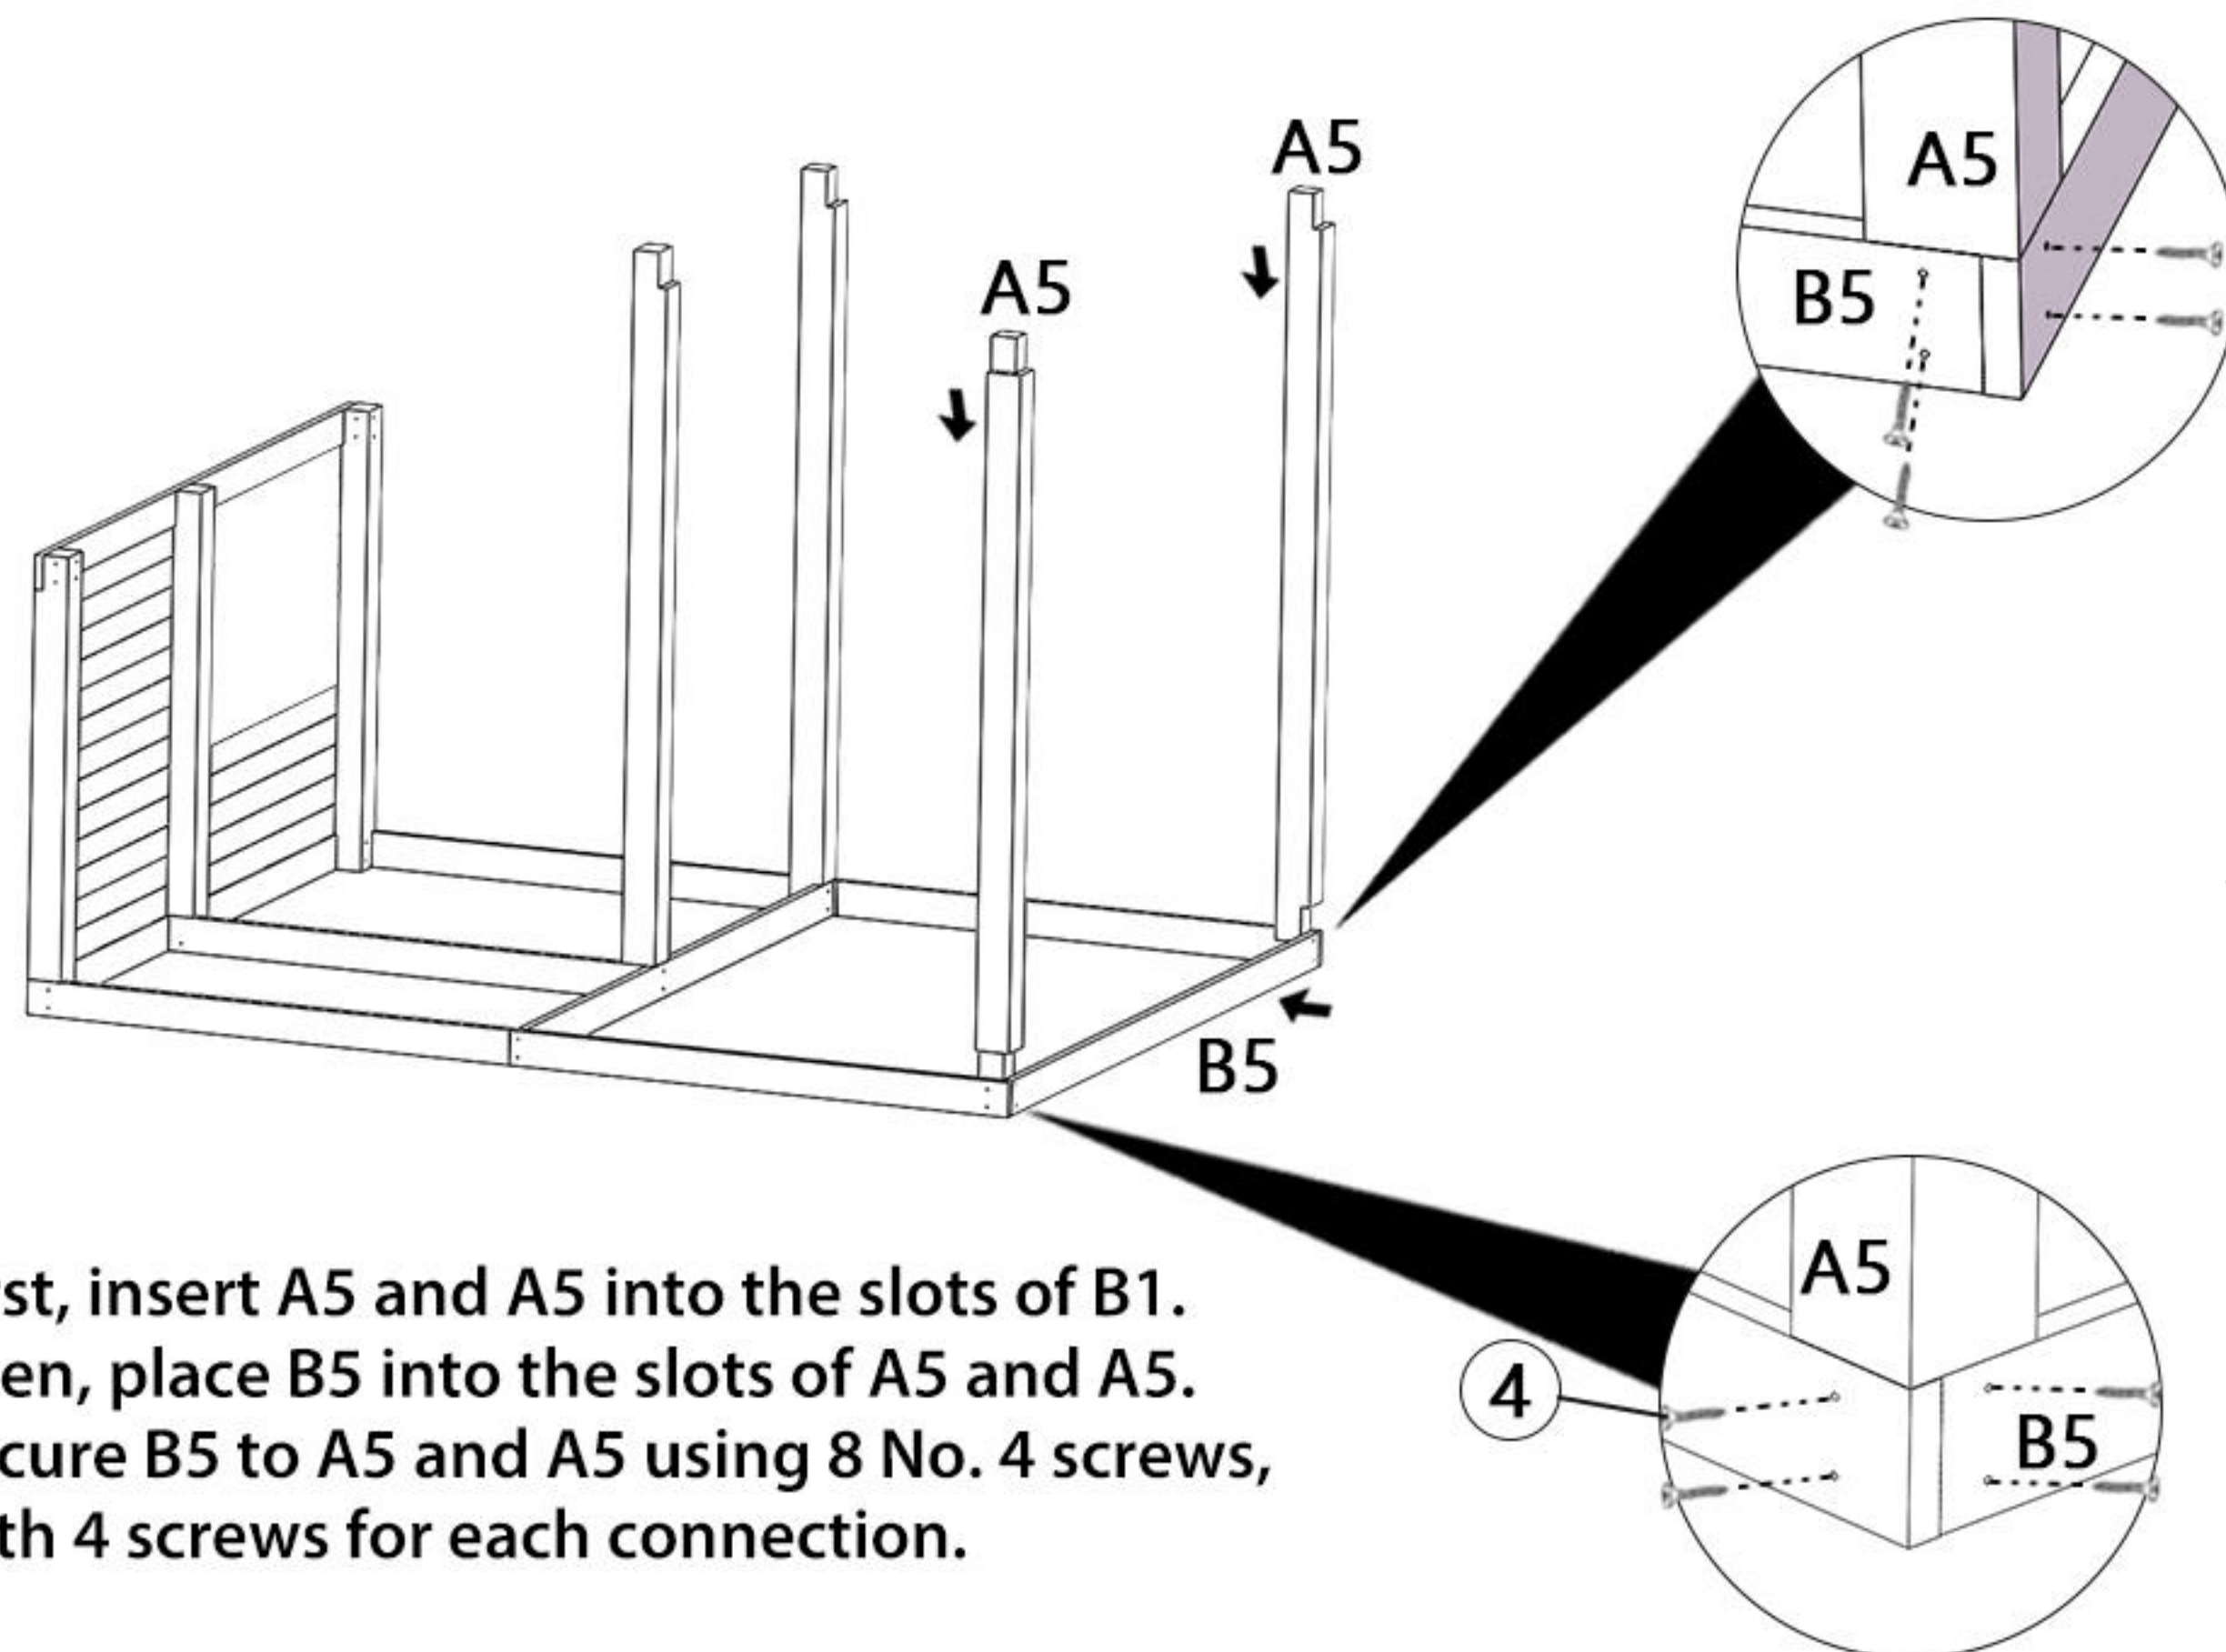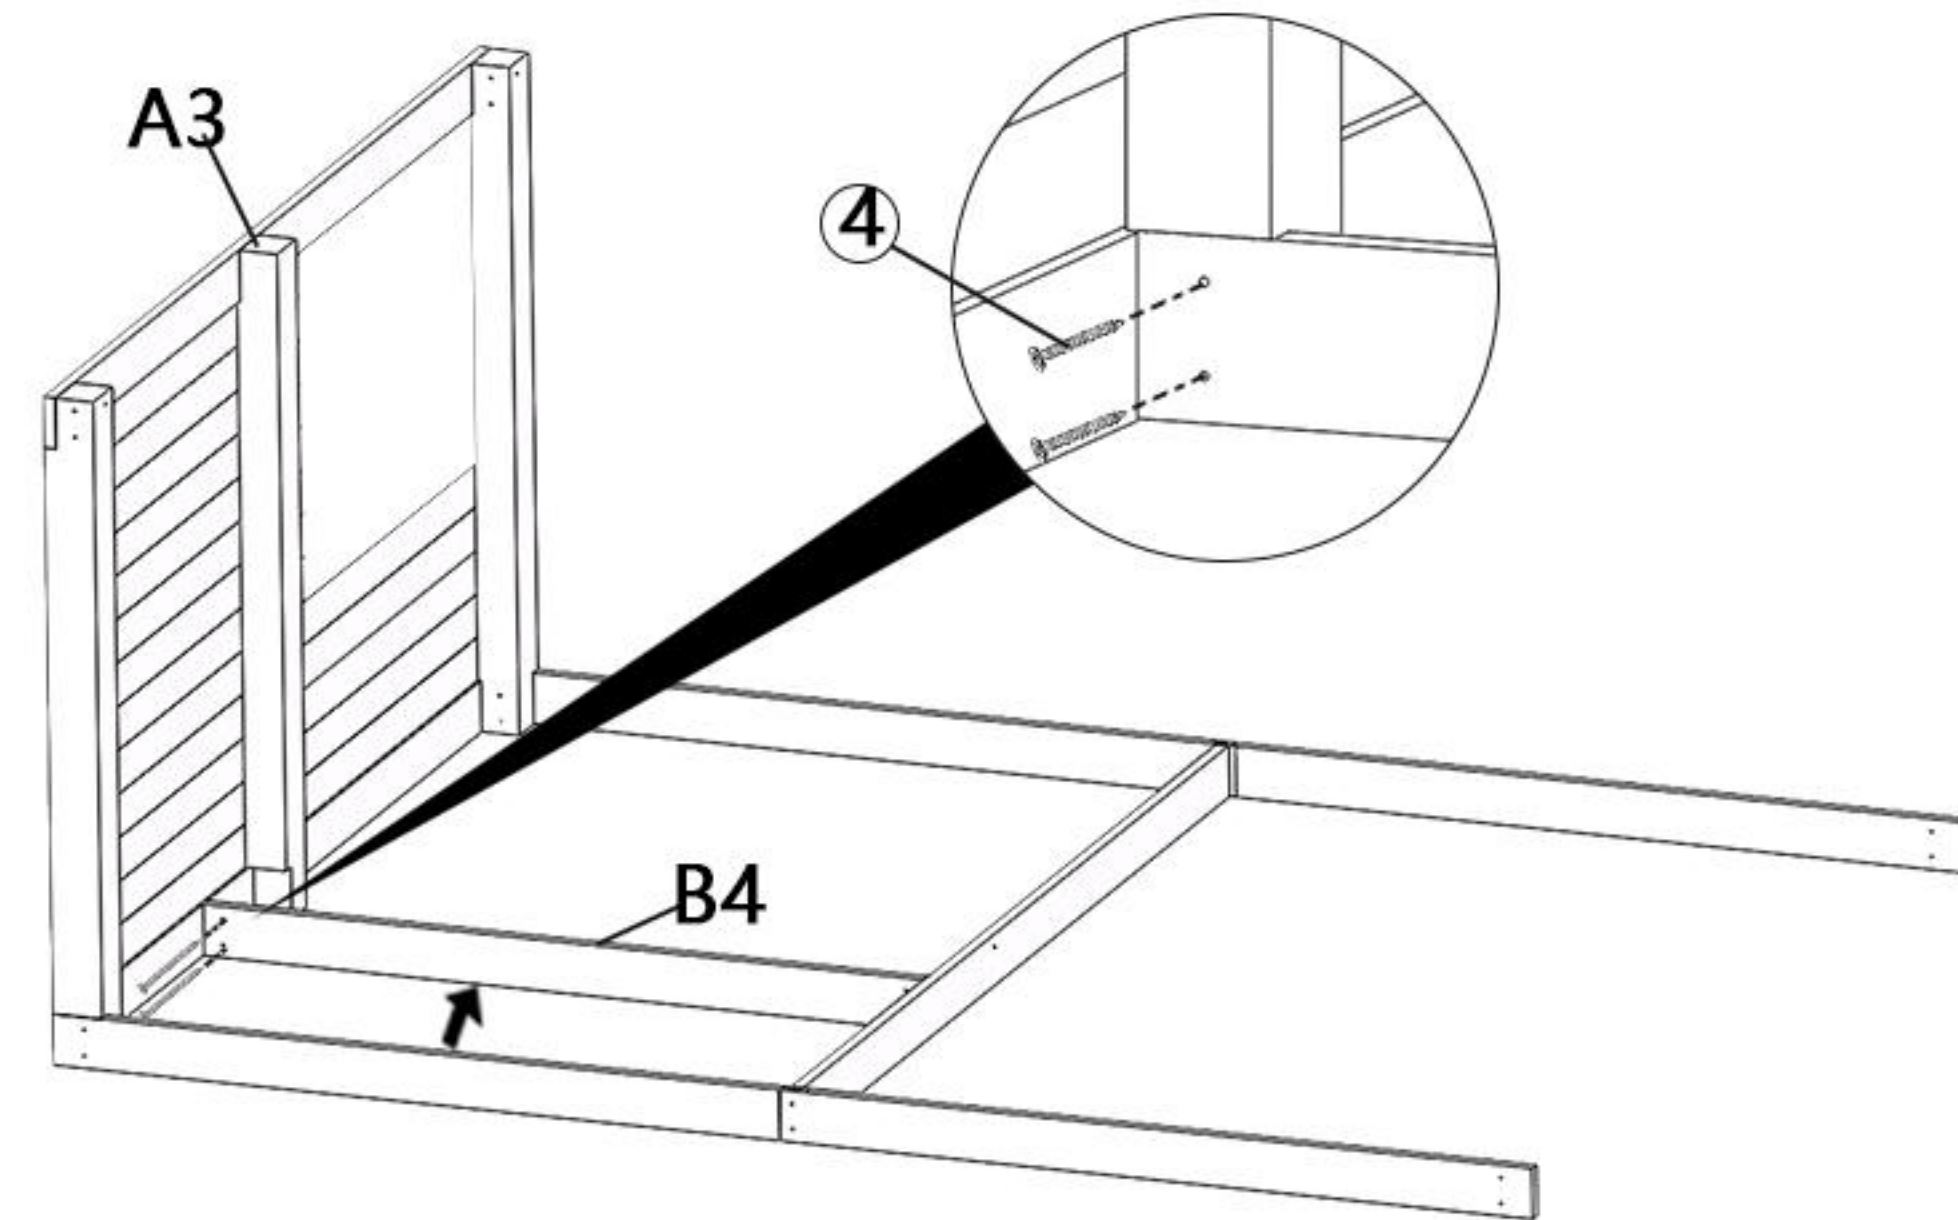

First, insert A5 and A5 into the slots of B1.
Then, place B5 into the slots of A5 and A5.
Secure B5 to A5 and A5 using 8 No. 4 screws,
with 4 screws for each connection.

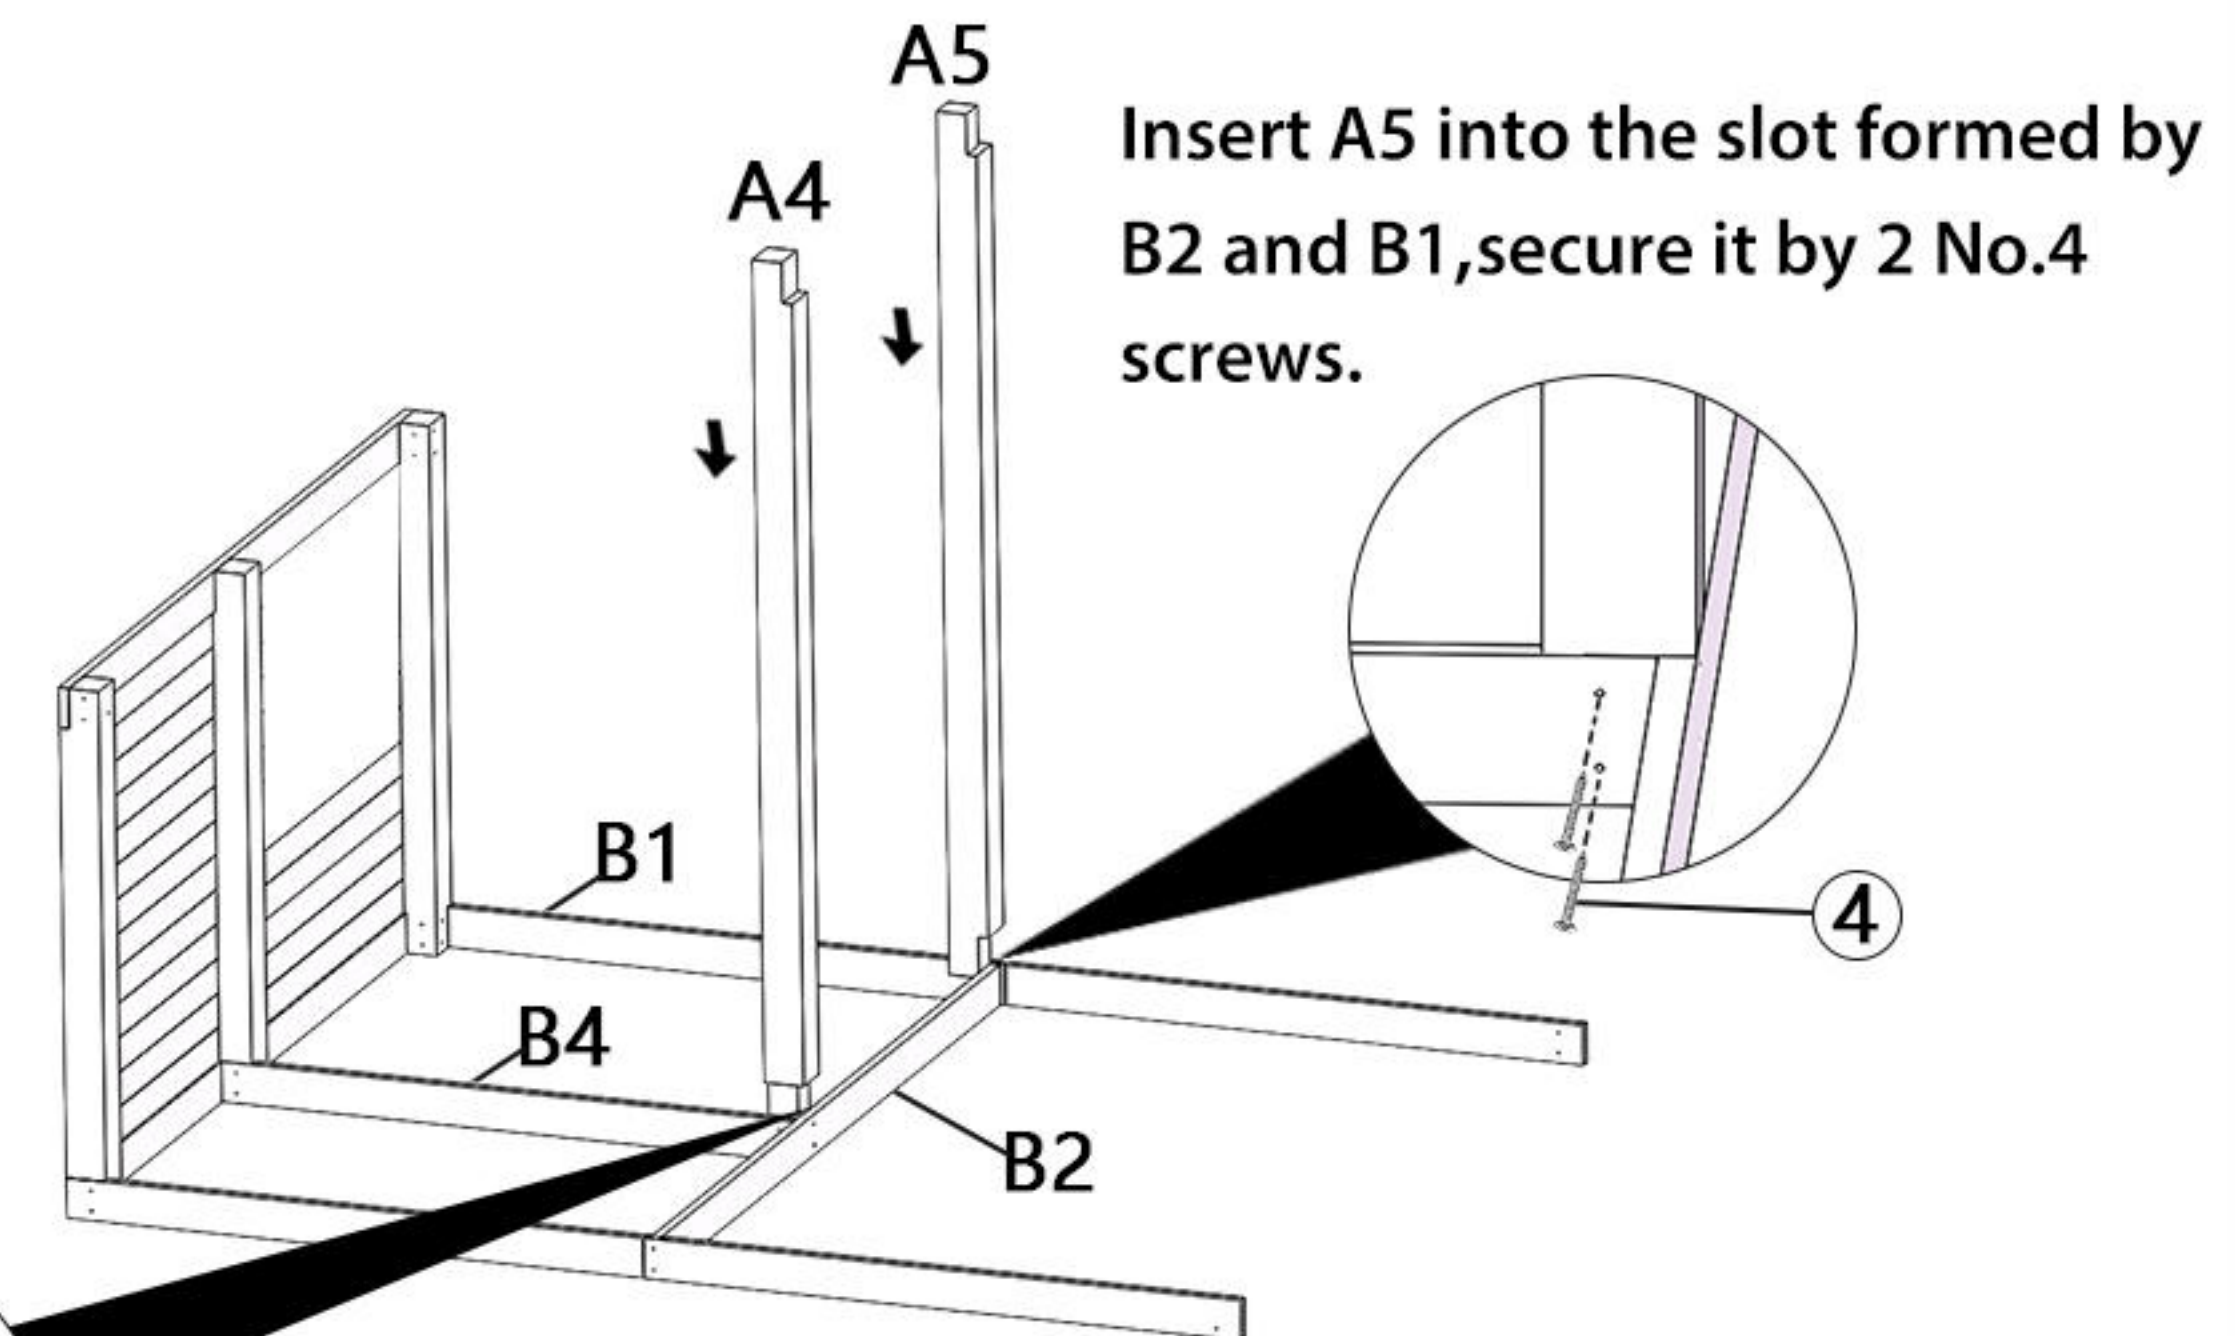


Insert A4 into the slot formed by B4 and B2,
secure it by 4 No.4 screws.


Insert A5 into the slot formed by
B2 and B1, secure it by 2 No.4
screws.

ASSEMBLY INSTRUCTION


STEP 5

STAMP ID	QTY REQ	BOX	IMAGE
B2	1	A	
B5	1	A	
B6	2	A	
4	16	A	 M4*40


After completing the previous assembly steps, you will have constructed a basic framework.

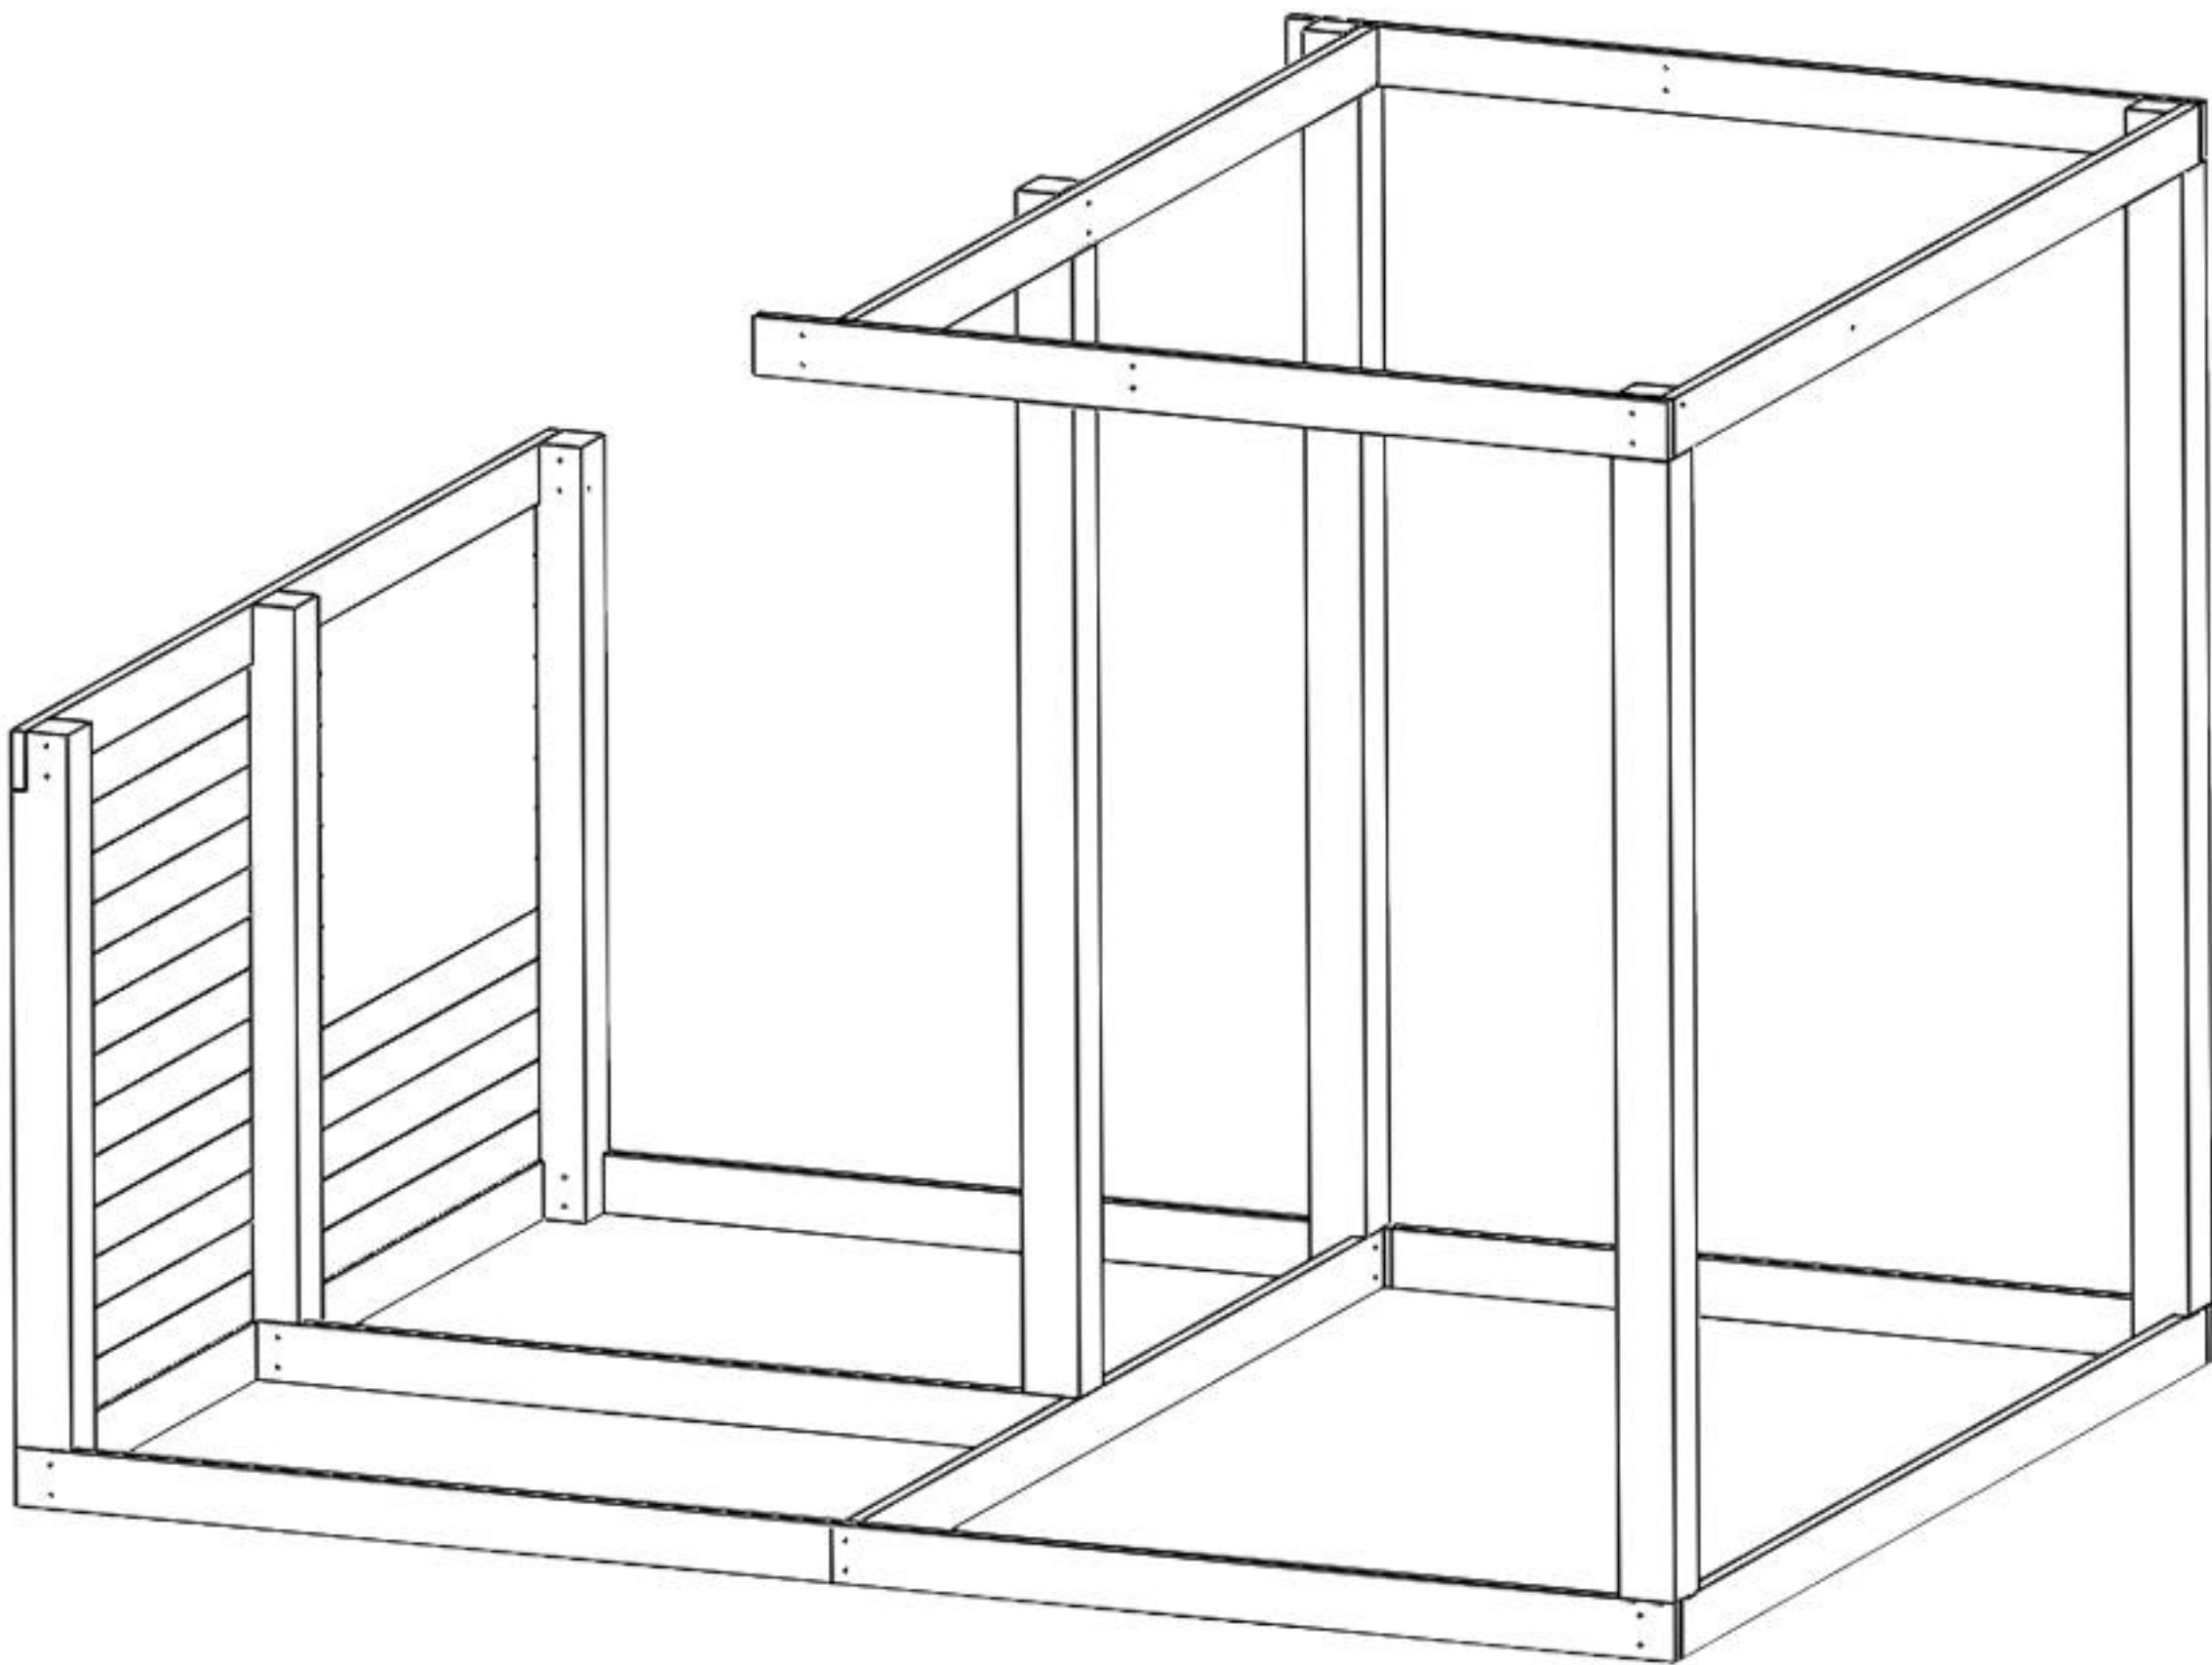

Secure B2 to A4 and A5 using 4 No. 4 screws, and secure B5 to A5 and A5 using another 4 No. 4 screws.

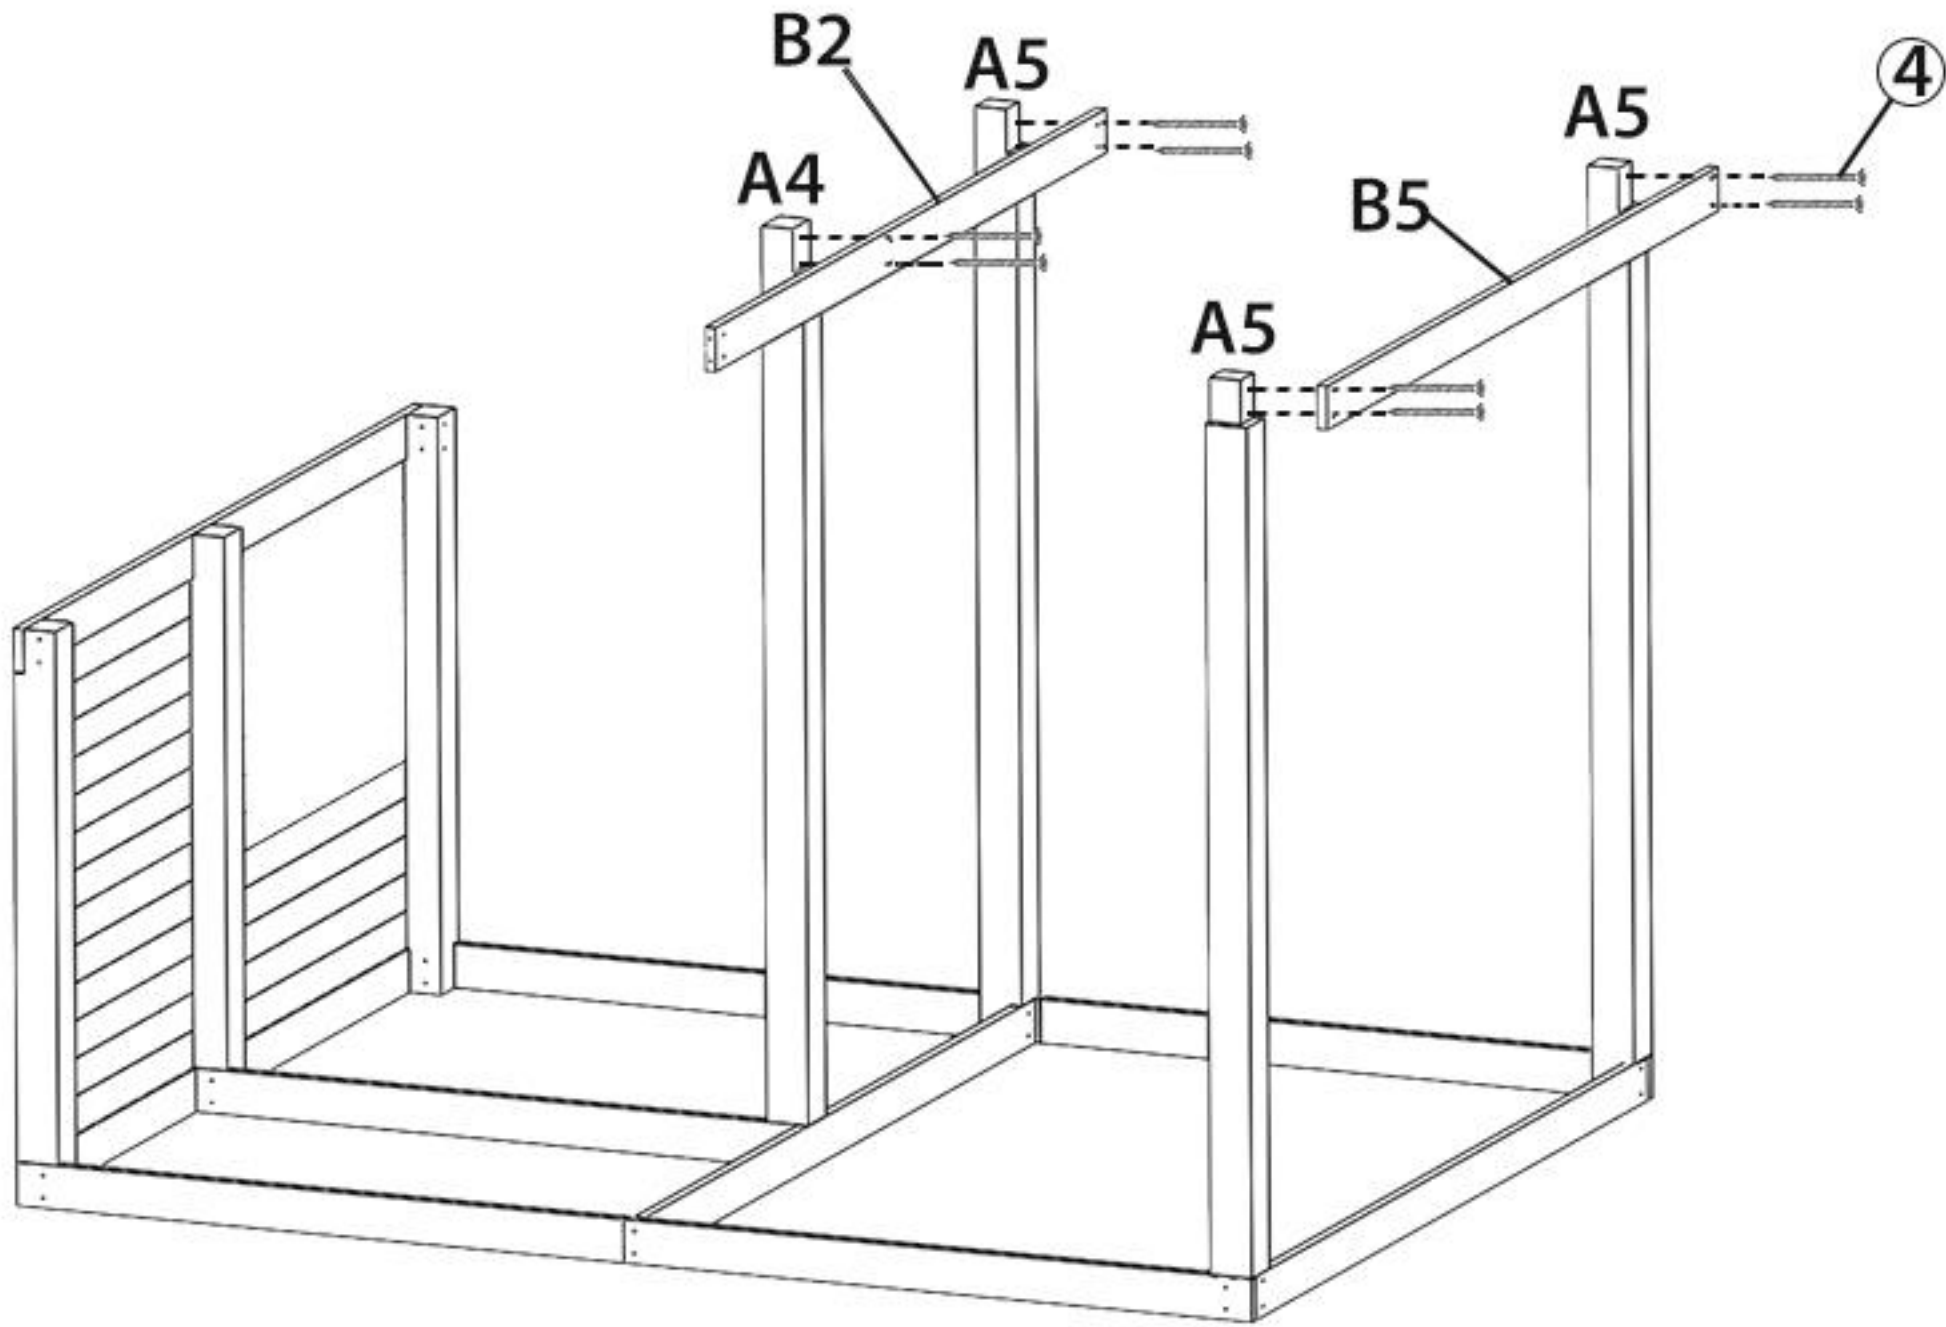



Attach B6 to A5 and A5 using 4 No. 4 screws, and secure B6 to A5 and B2 using 4 No. 4 screws.

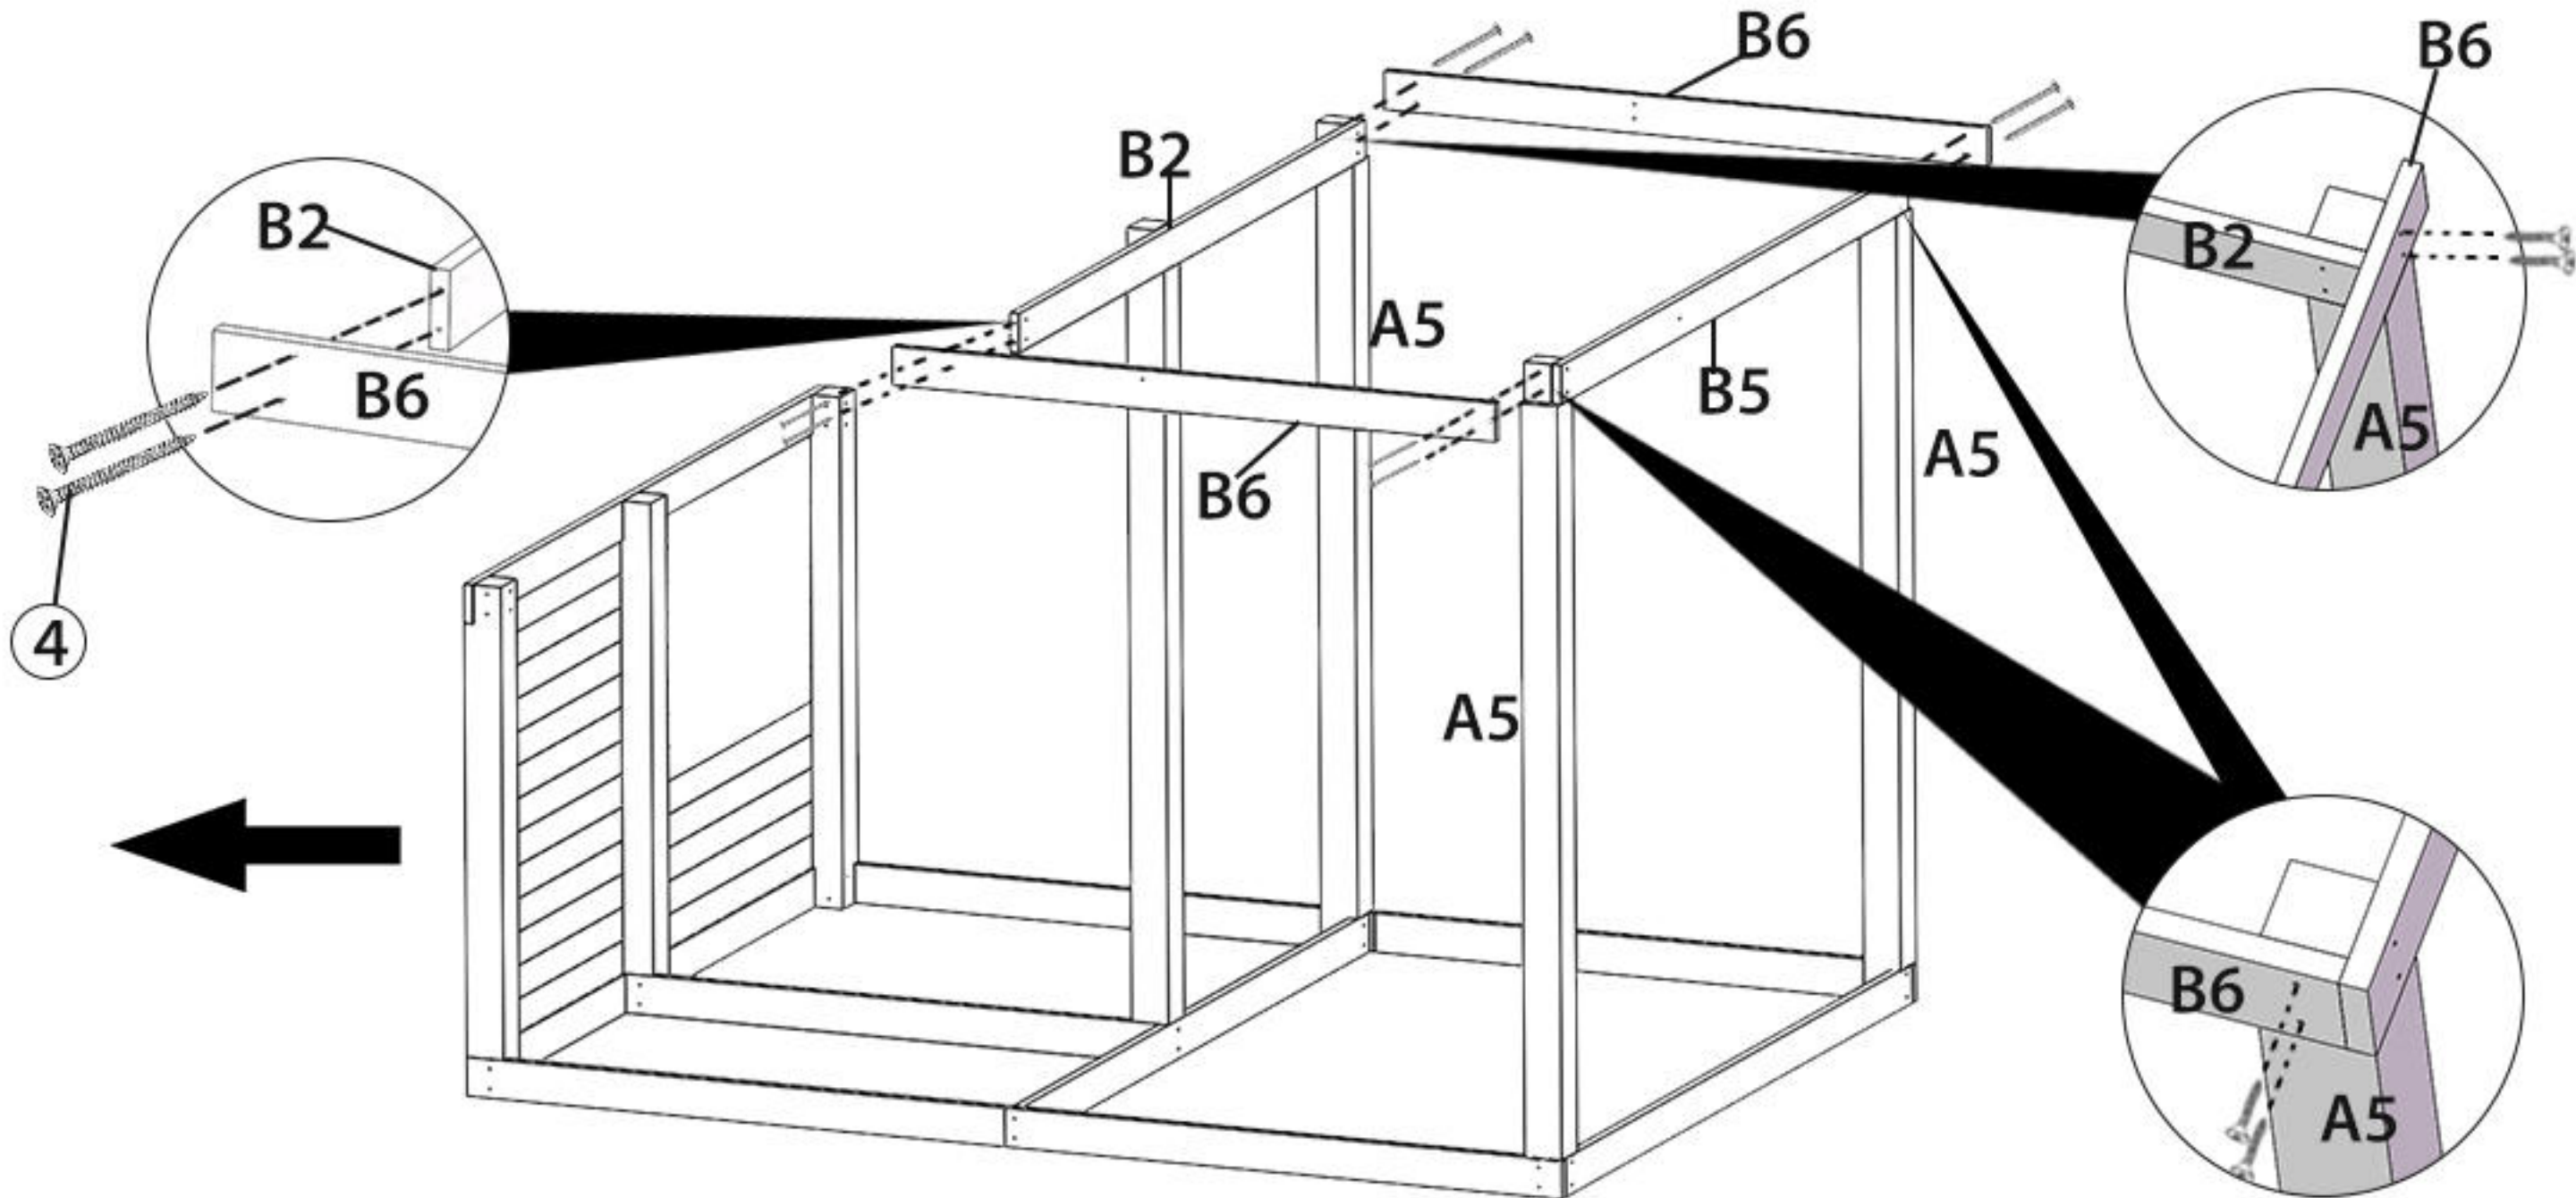



ASSEMBLY INSTRUCTION

STEP 6-1

STAMP ID	QTY REQ	BOX	IMAGE
E1	1	B	
E2	1	B	
4	7	A	 M4*40

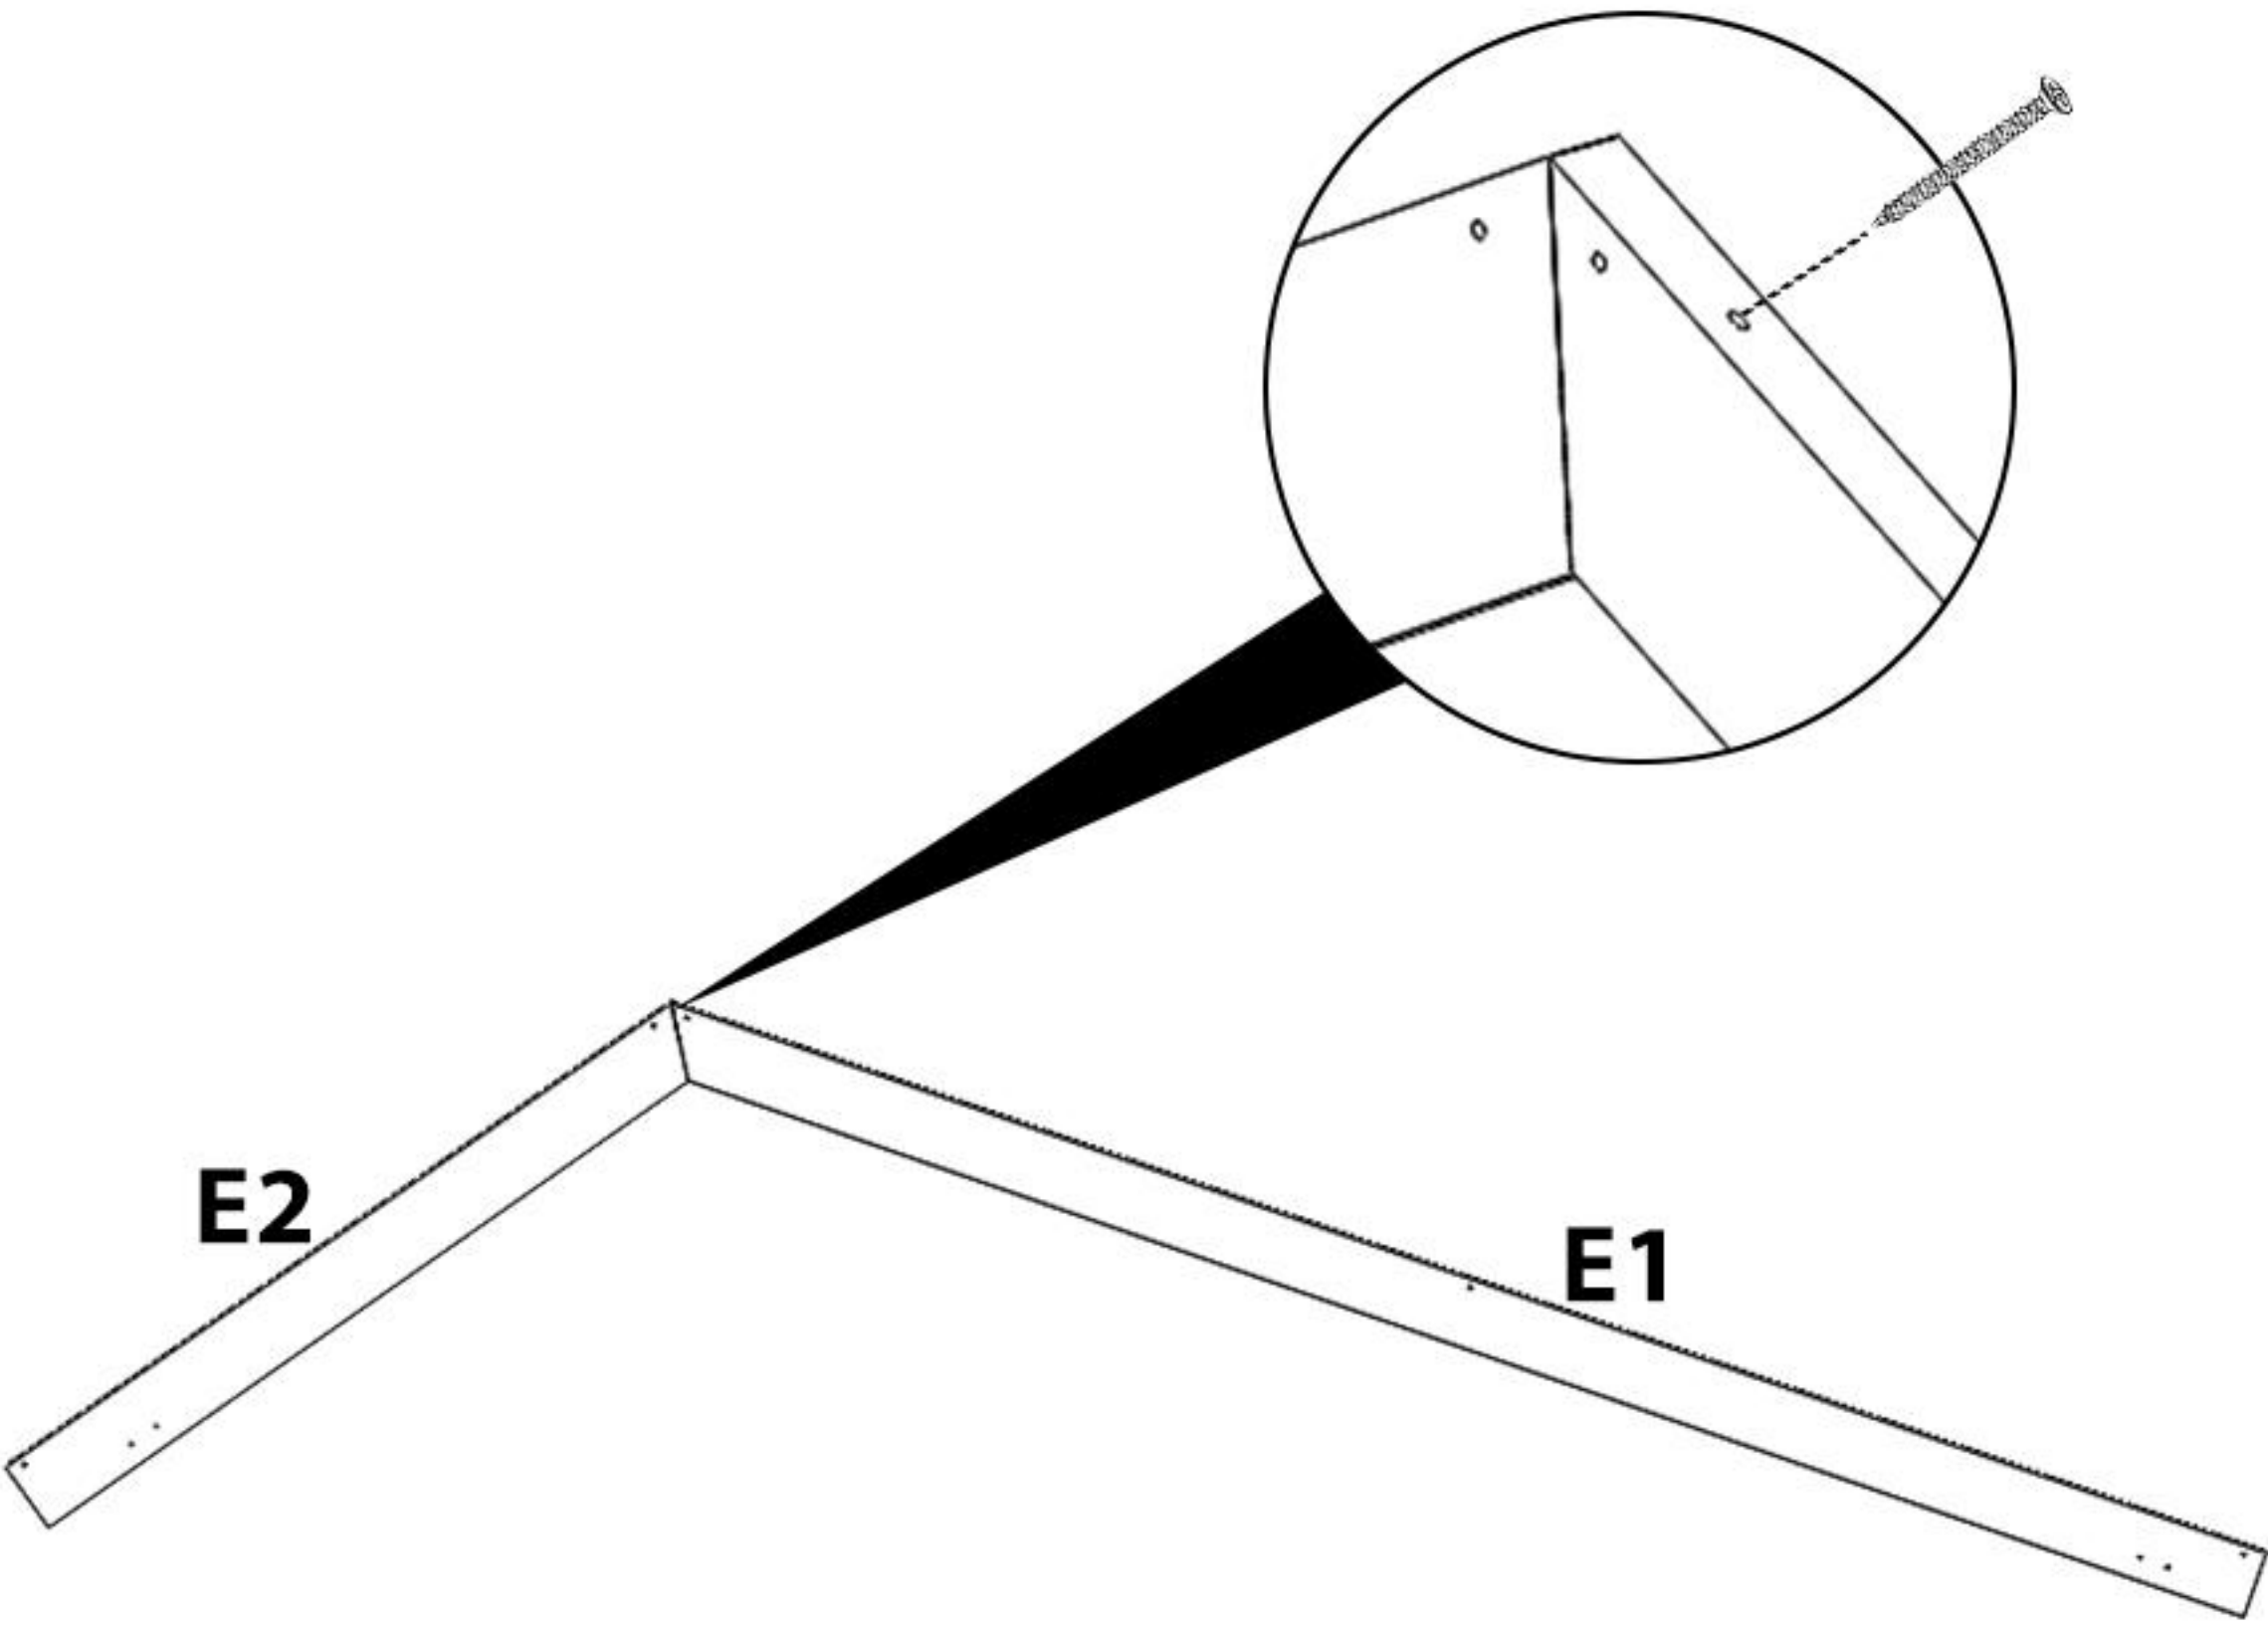


Using 1 No.4 screw to fix E1 and E2 together

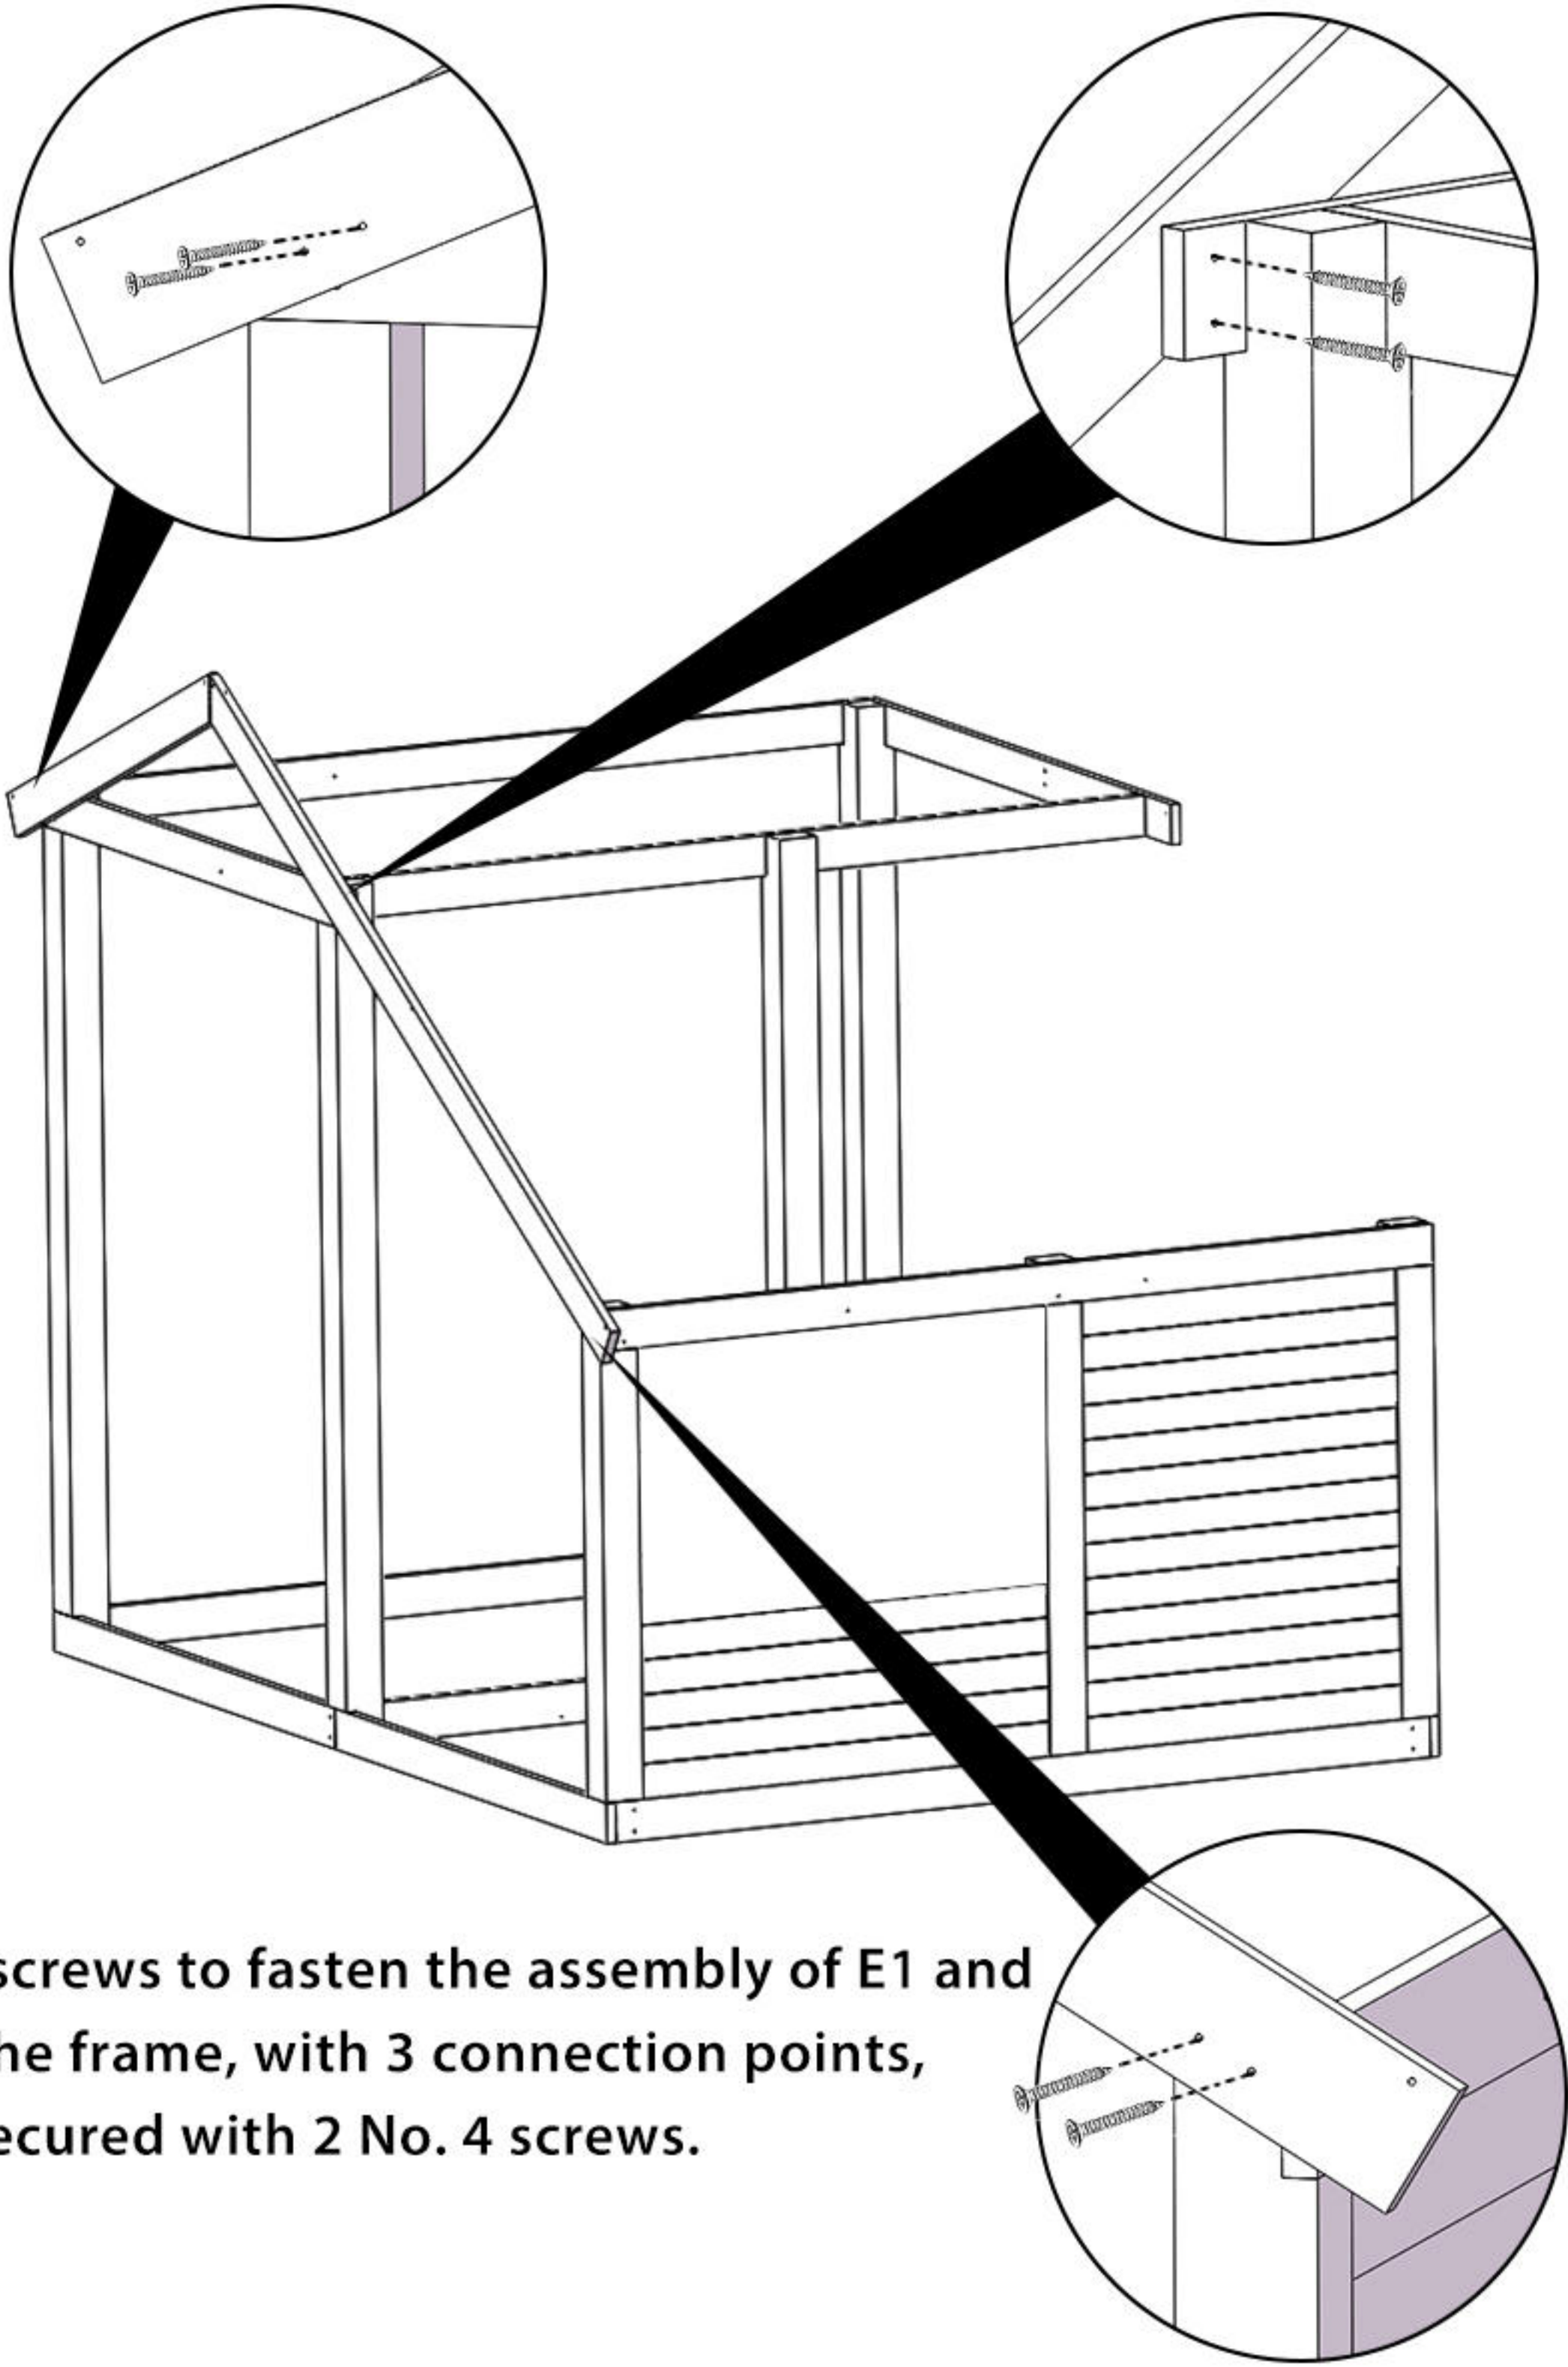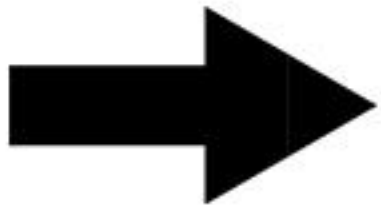


Using screws to fasten the assembly of E1 and E2 to the frame, with 3 connection points, each secured with 2 No. 4 screws.



ASSEMBLY INSTRUCTION

STEP 6-2

STAMP ID	QTY REQ	BOX	IMAGE
E1	1	B	
E2	1	B	
4	7	A	 M4*40

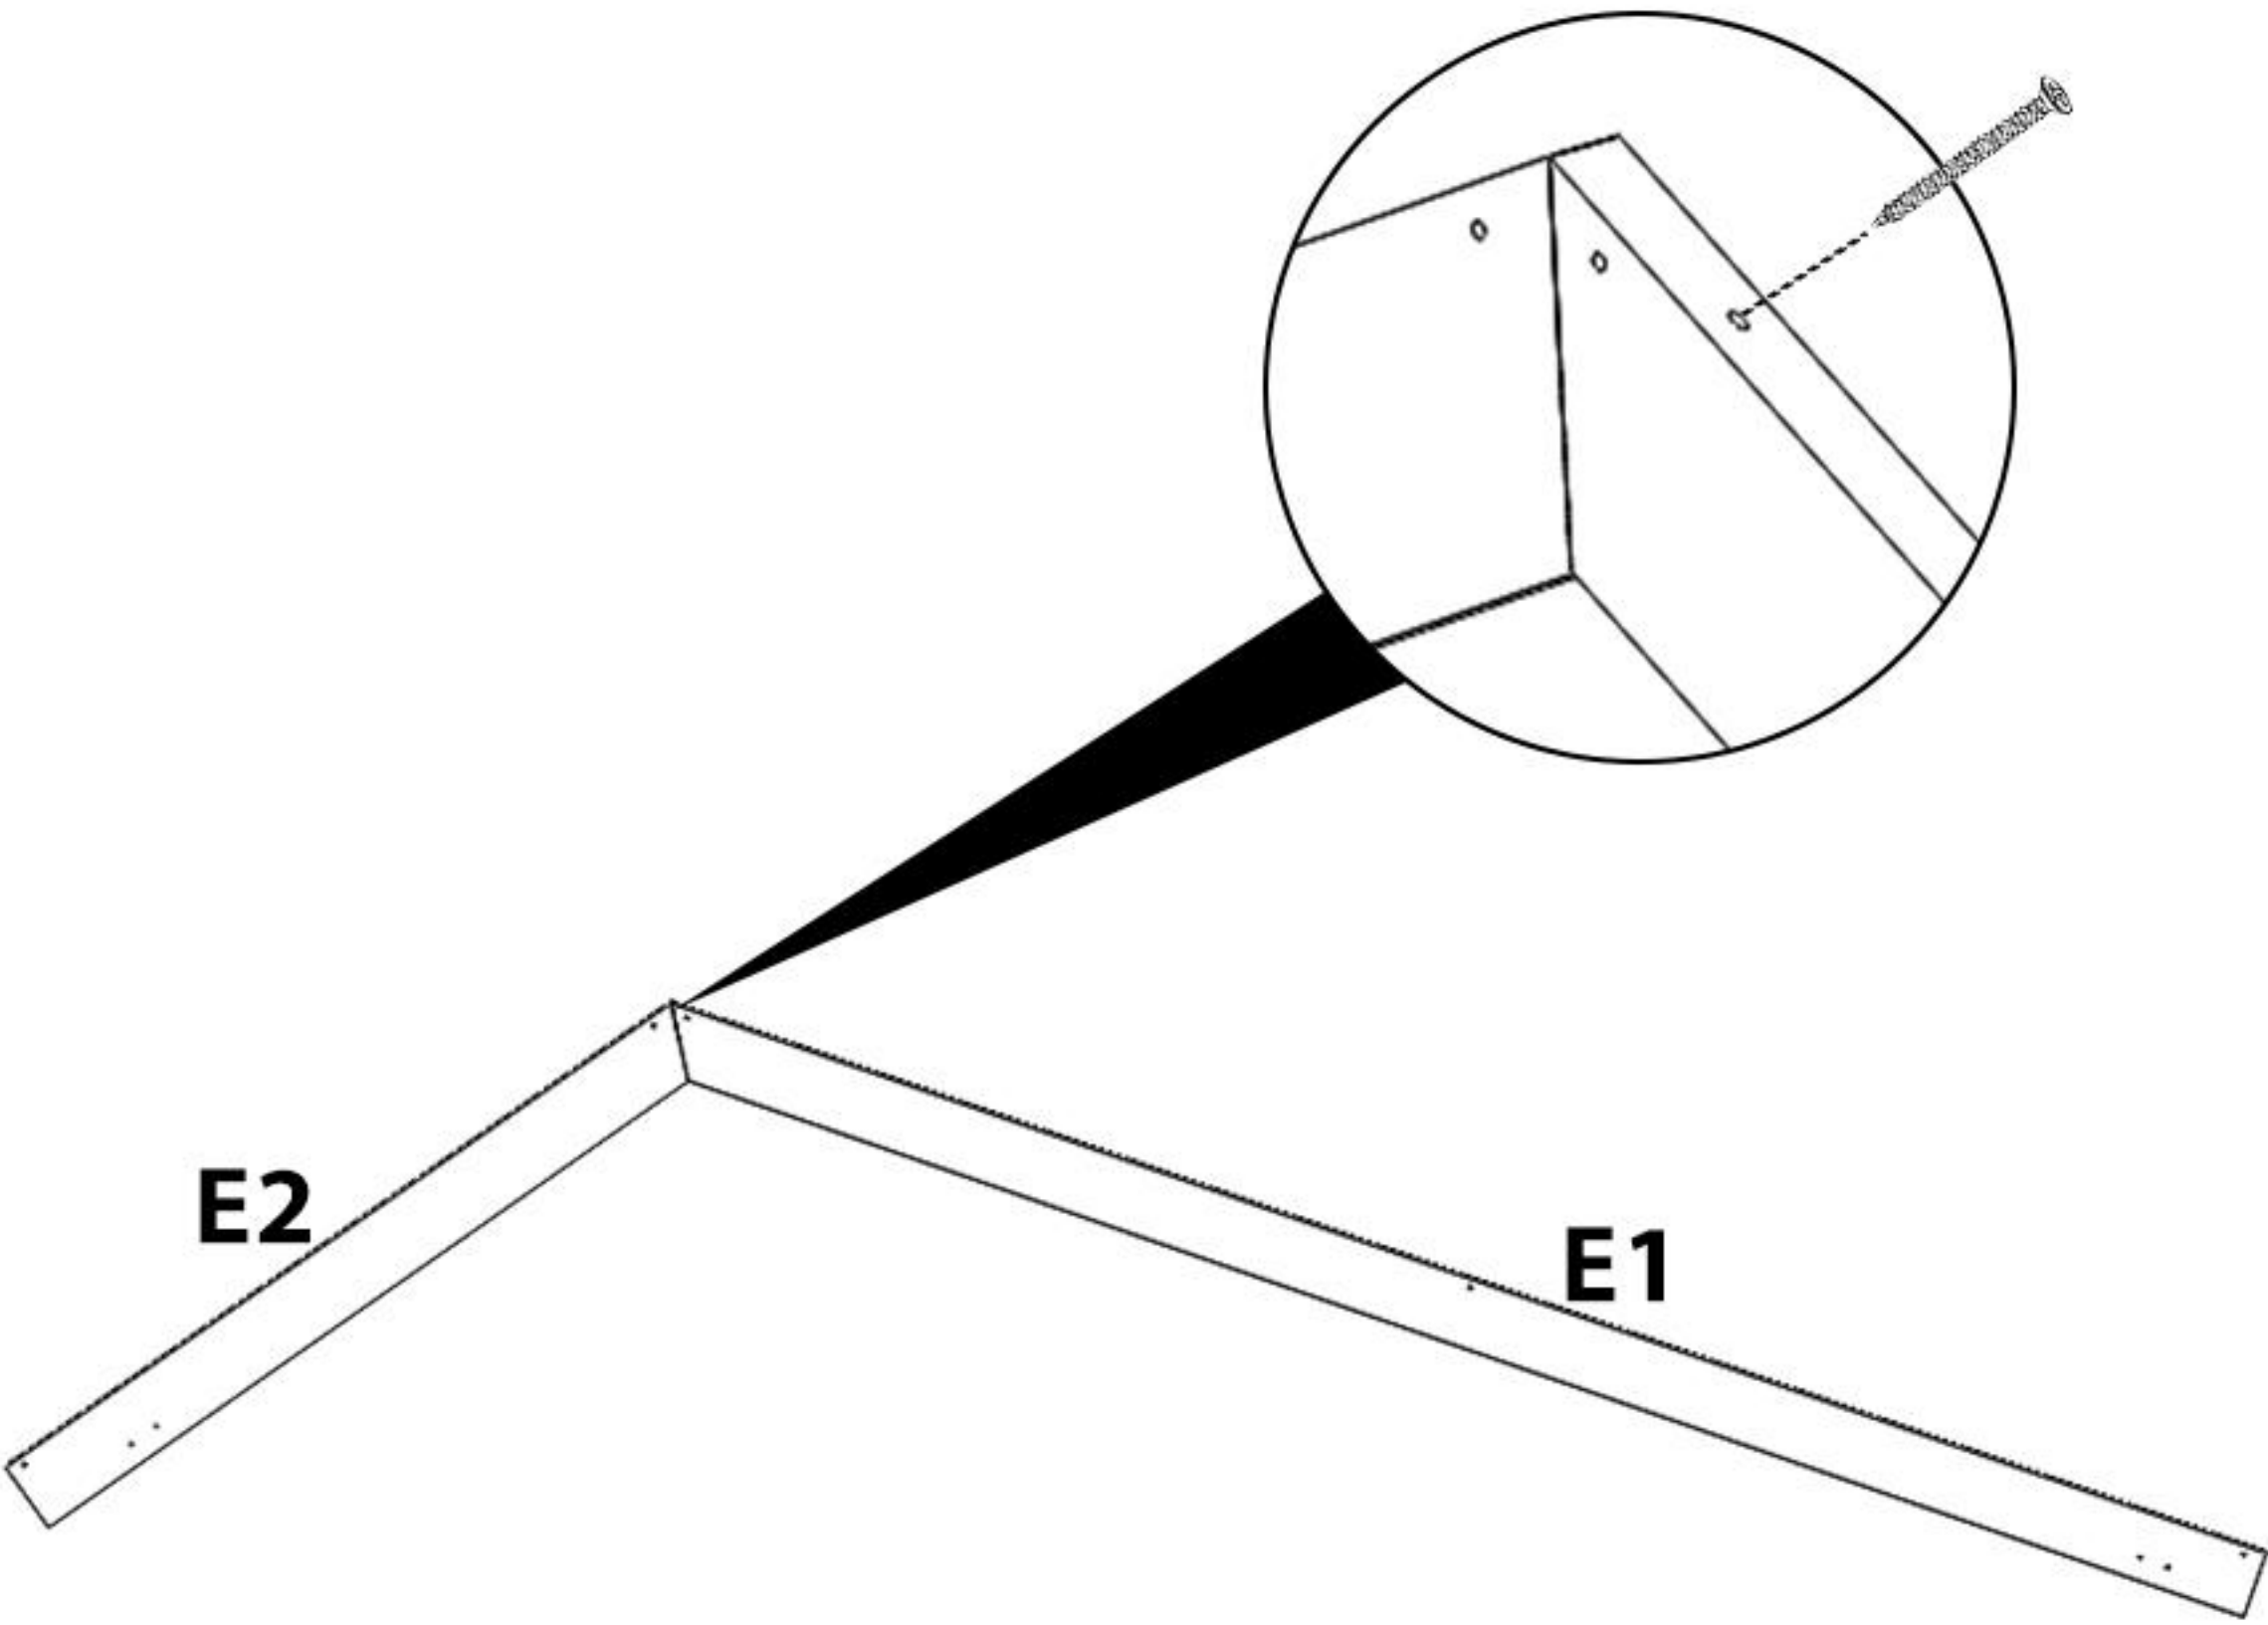

Using 1 No.4 screw to fix E1 and E2 together

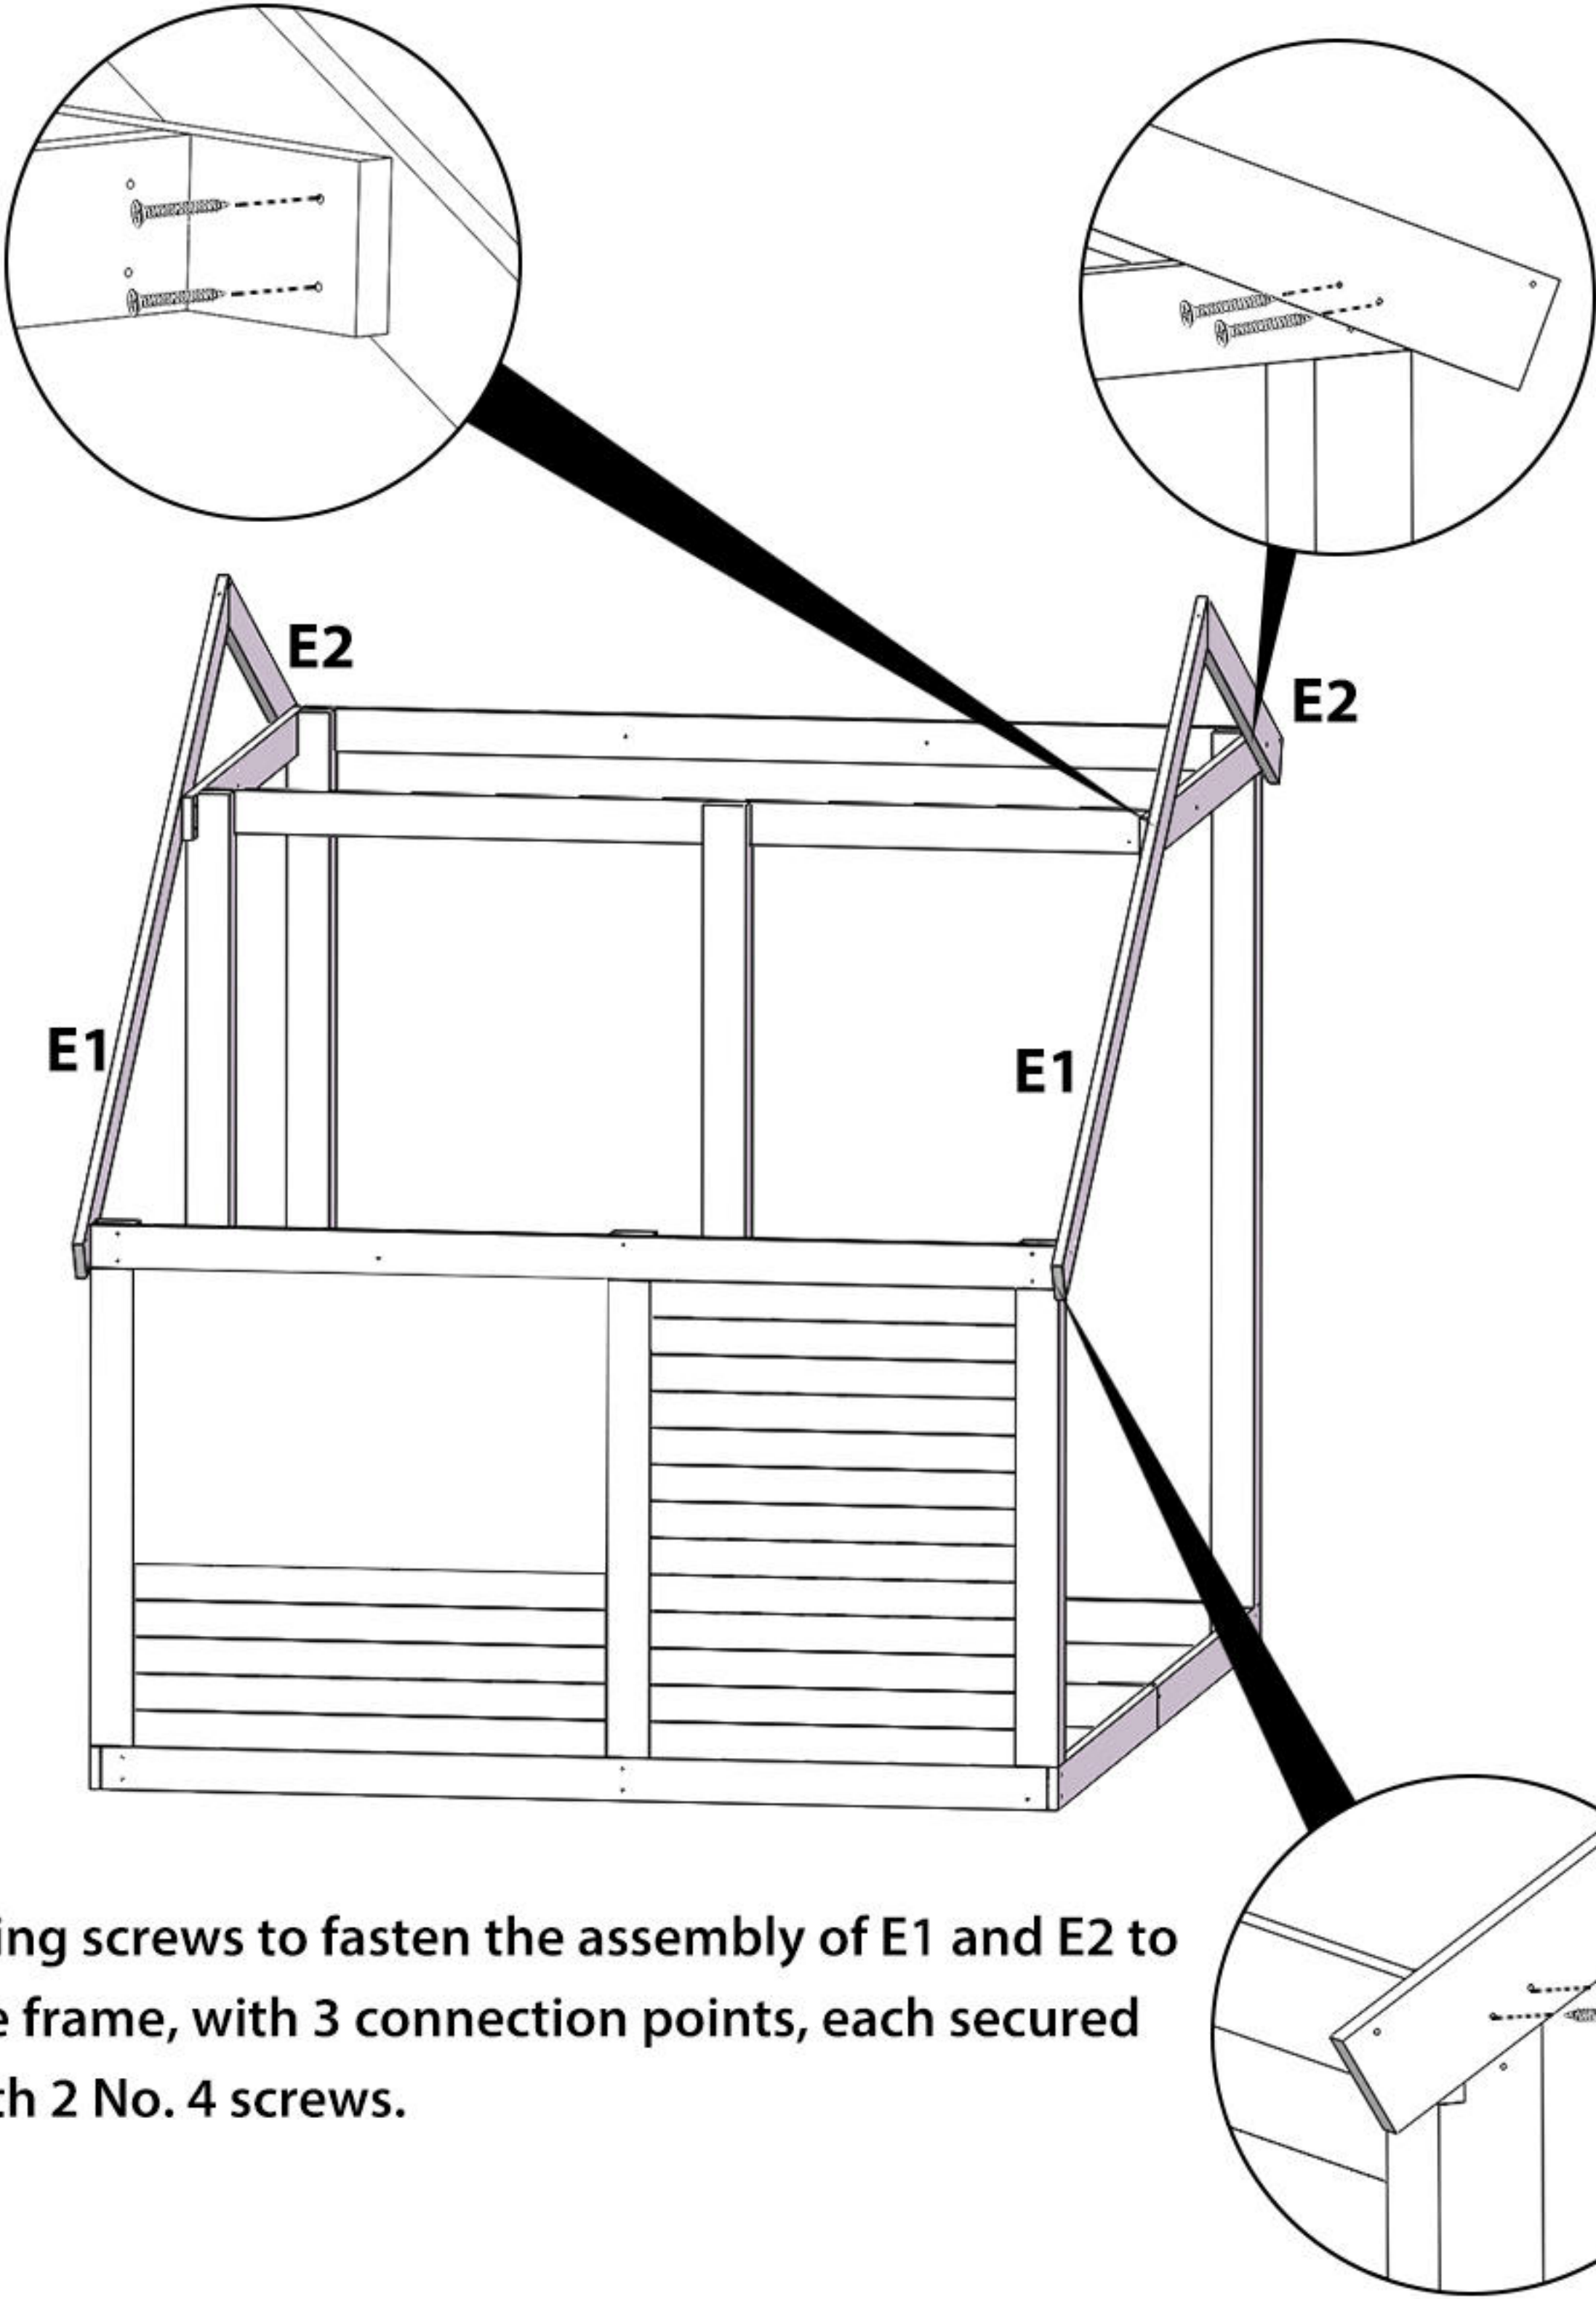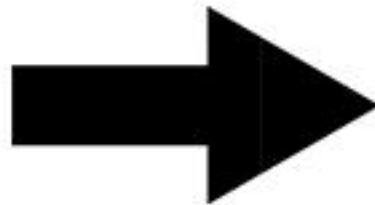


Using screws to fasten the assembly of E1 and E2 to the frame, with 3 connection points, each secured with 2 No. 4 screws.


ASSEMBLY INSTRUCTION

STEP 7


STAMP ID	QTY REQ	BOX	IMAGE
F1	5	A	
4	10	A	 M4*40

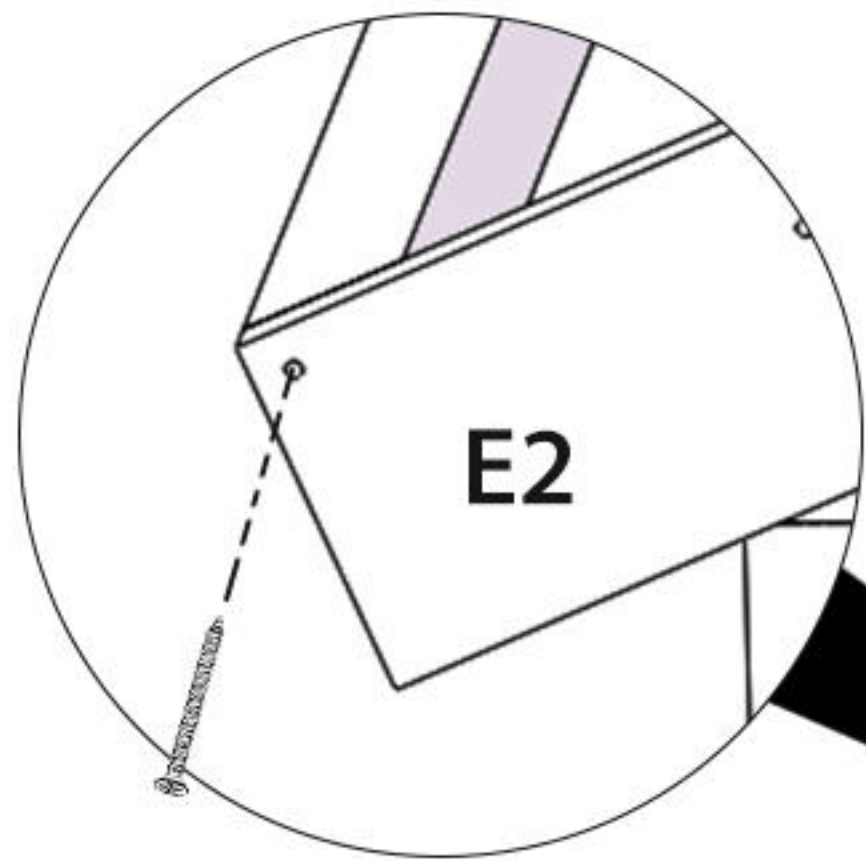



Use 1 No. 4 screws to connect F1 to E2. Similarly, connect the other end of F1, making a total of 2 No. 4 screws used for both connections.

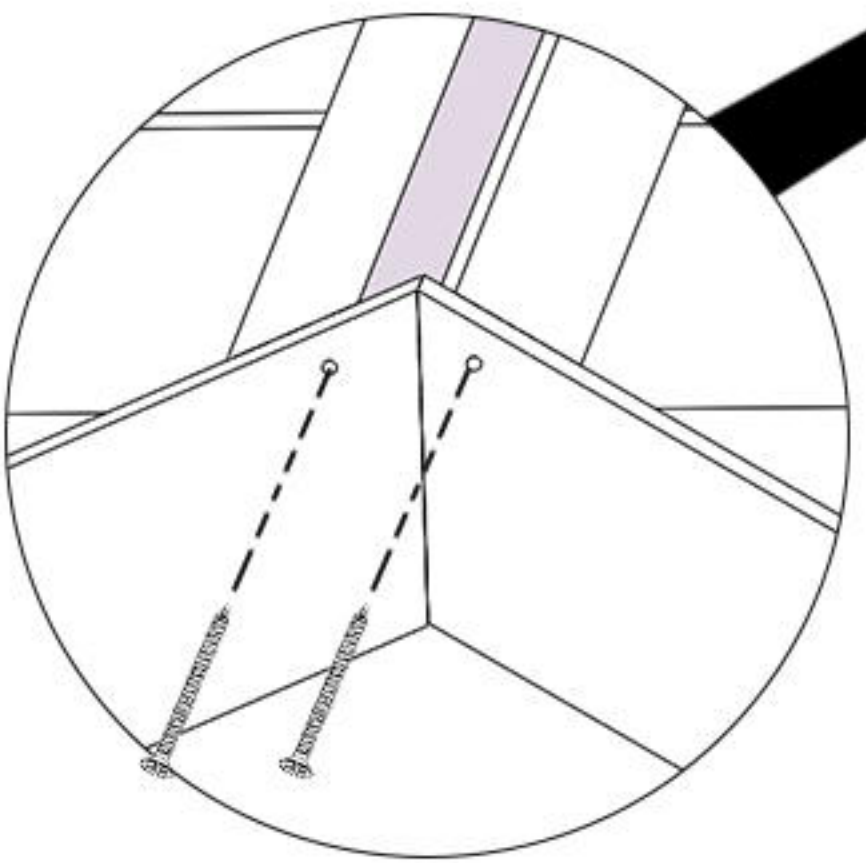

Secure 2 F1 to E1 and E2 with 2 No. 4 screw. Repeat this process for the other end of F1. Using a total of 4 No. 4 screws for both connections.

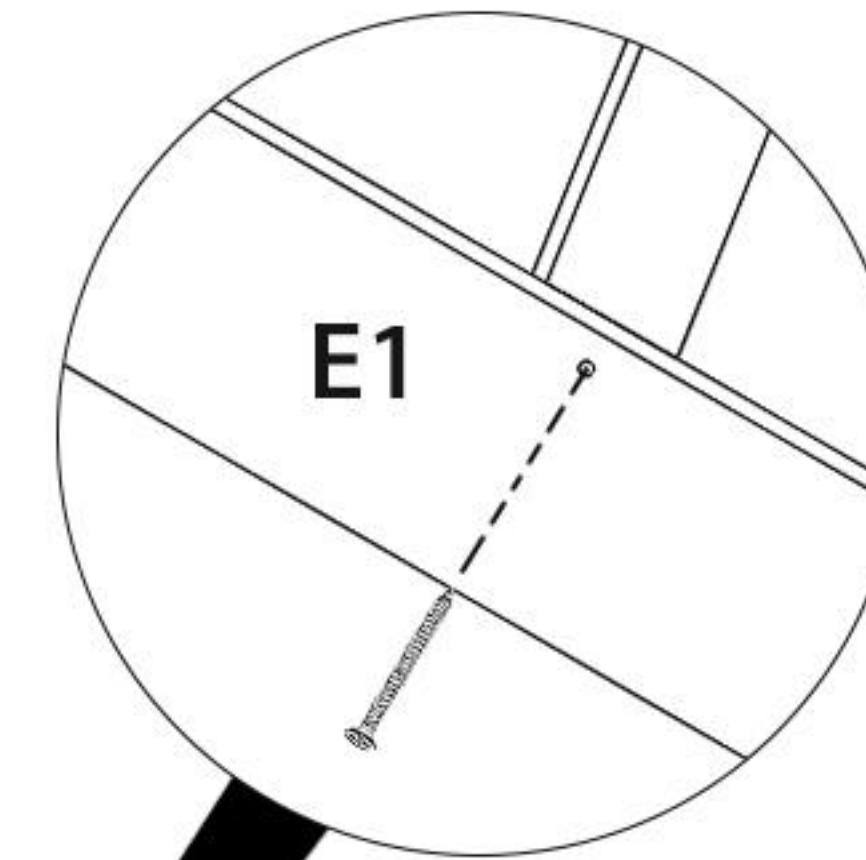


Use 1 No. 4 screw to connect F1 to E1, and similarly connect the other end of F1, using a total of 2 No. 4 screws for both connections.

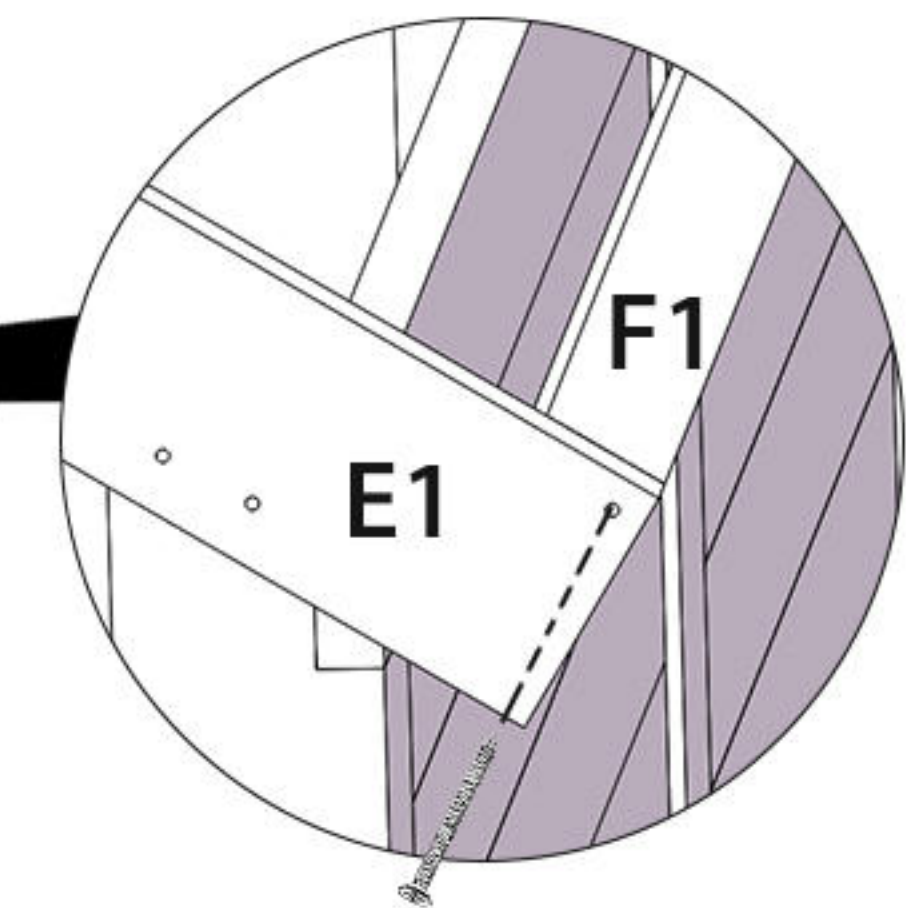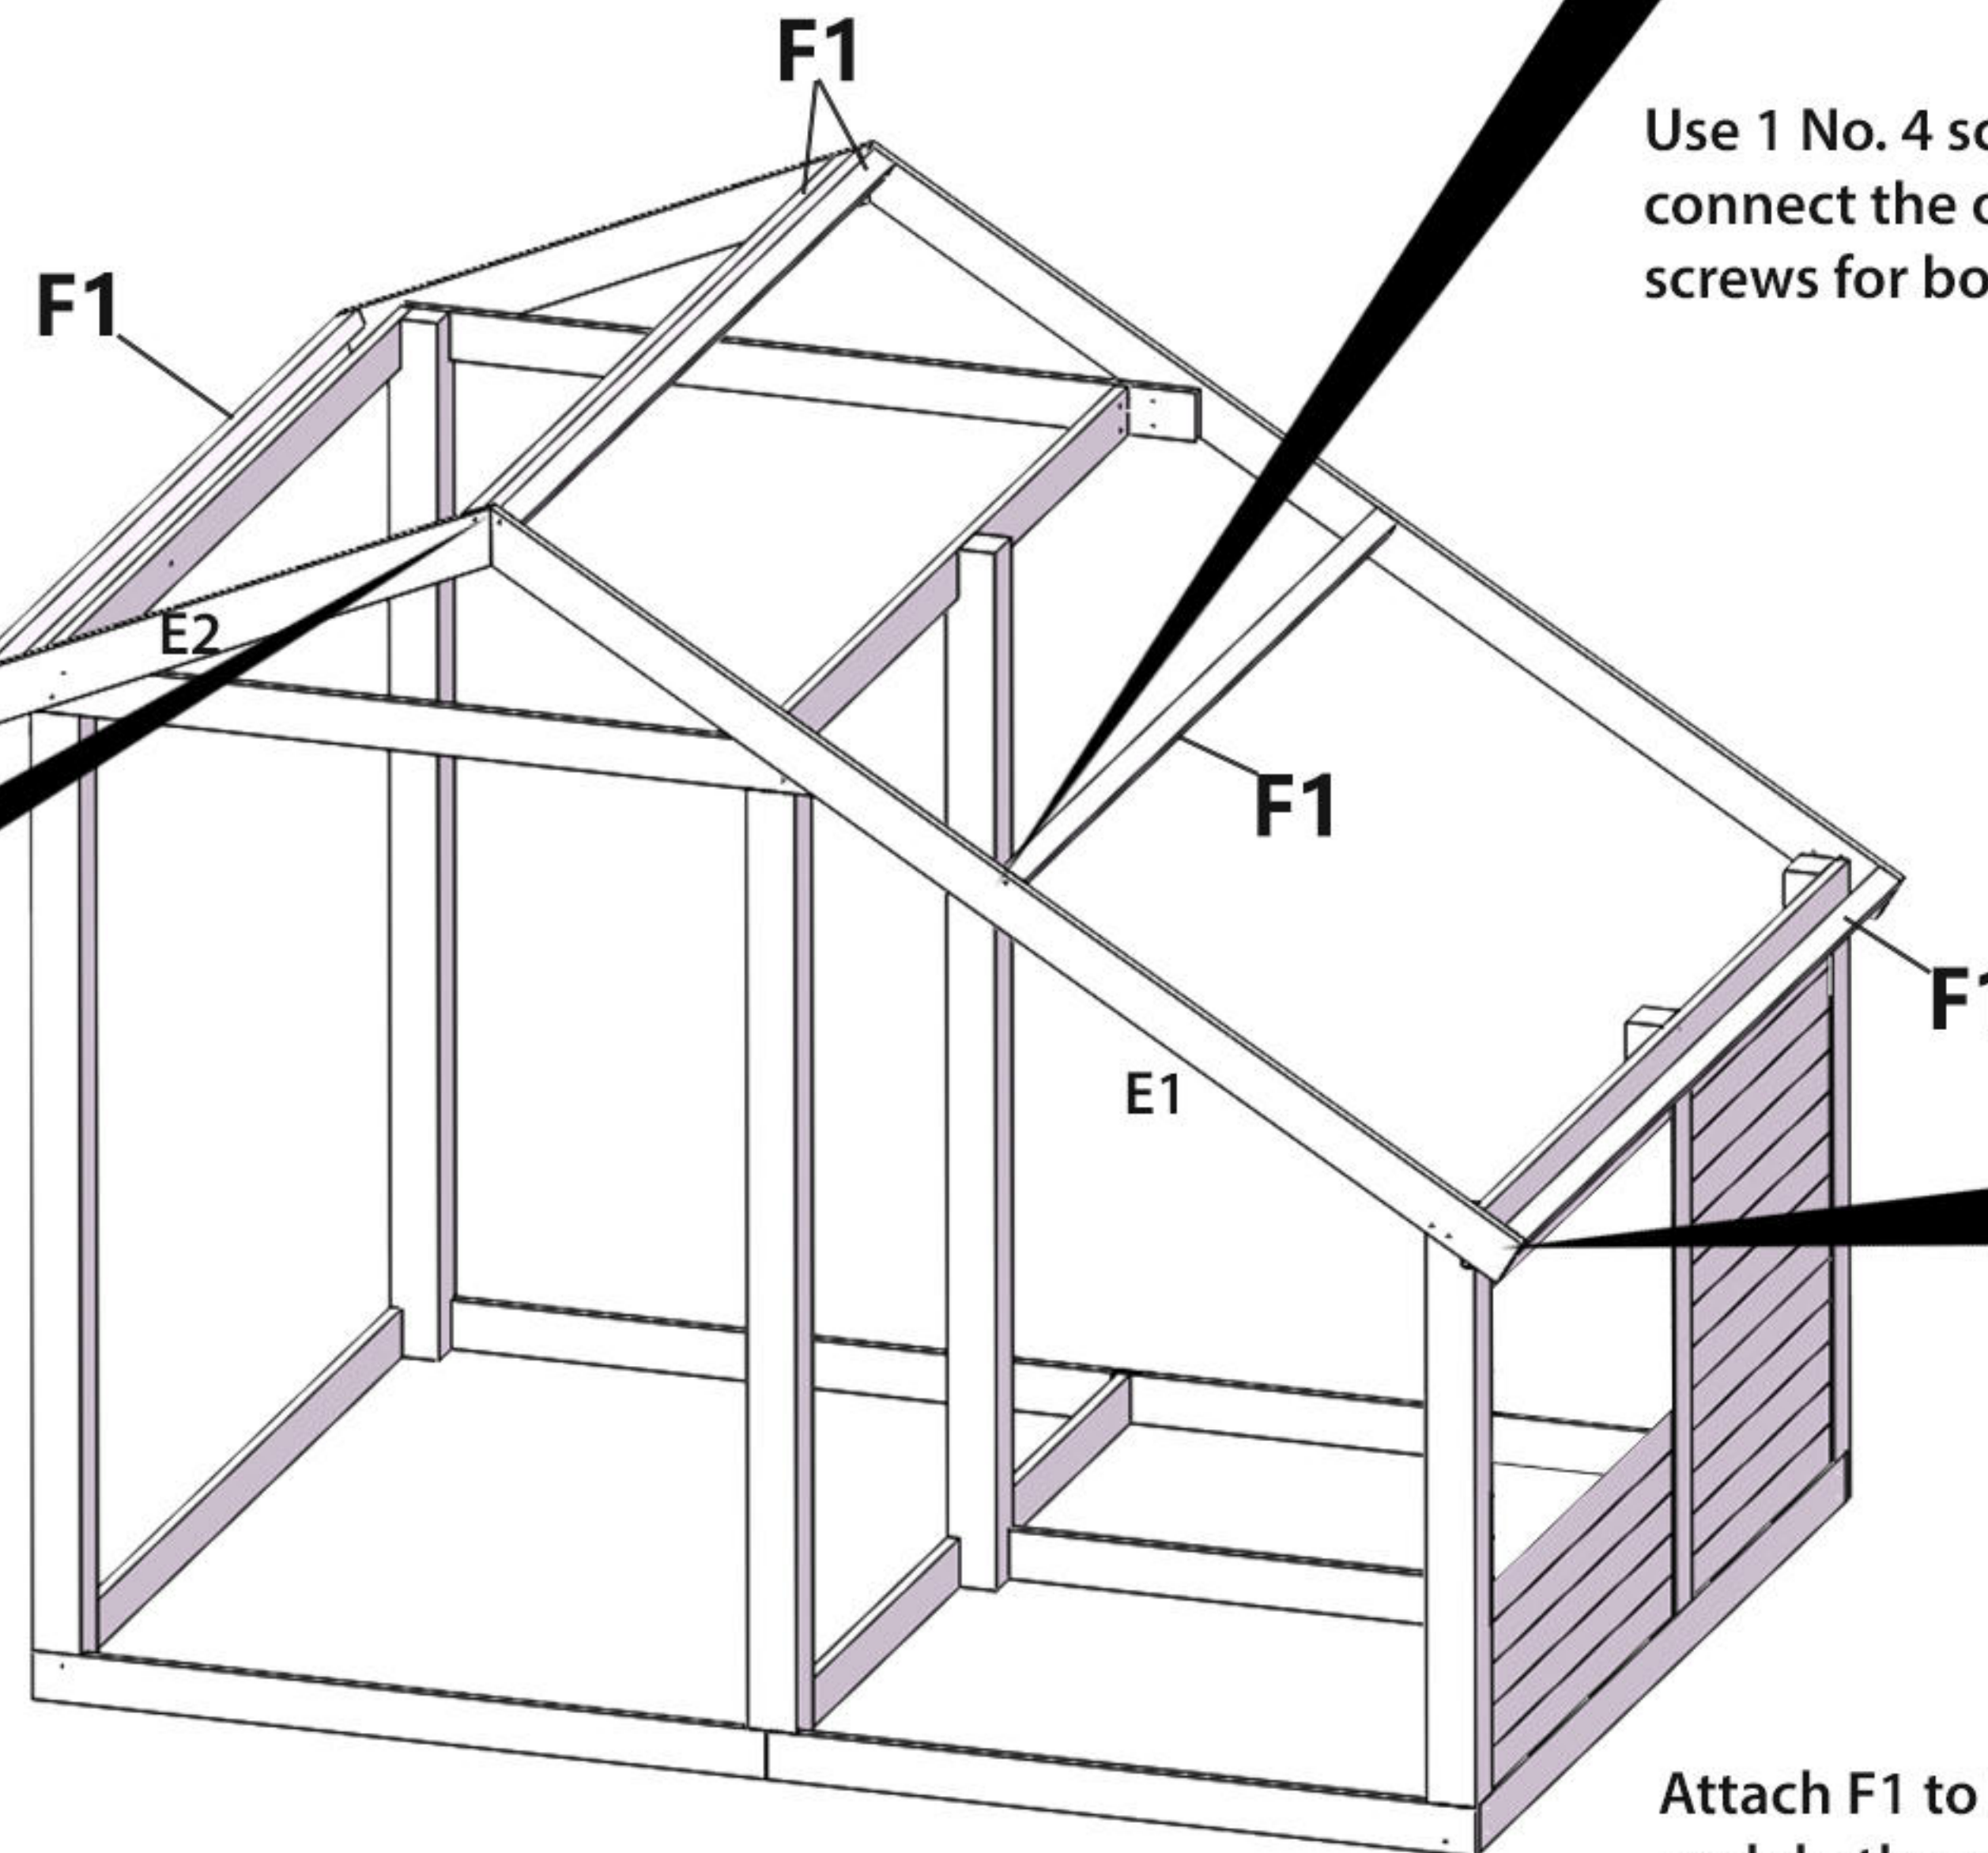


Attach F1 to E1 using 1 No. 4 screws, and do the same for the other end of F1, using a total of 2 No. 4 screws for both connections.



ASSEMBLY INSTRUCTION

STEP 8


STAMP ID	QTY REQ	BOX	IMAGE
F2	2	A	
F3	2	A	
4	12	A	 M4*40

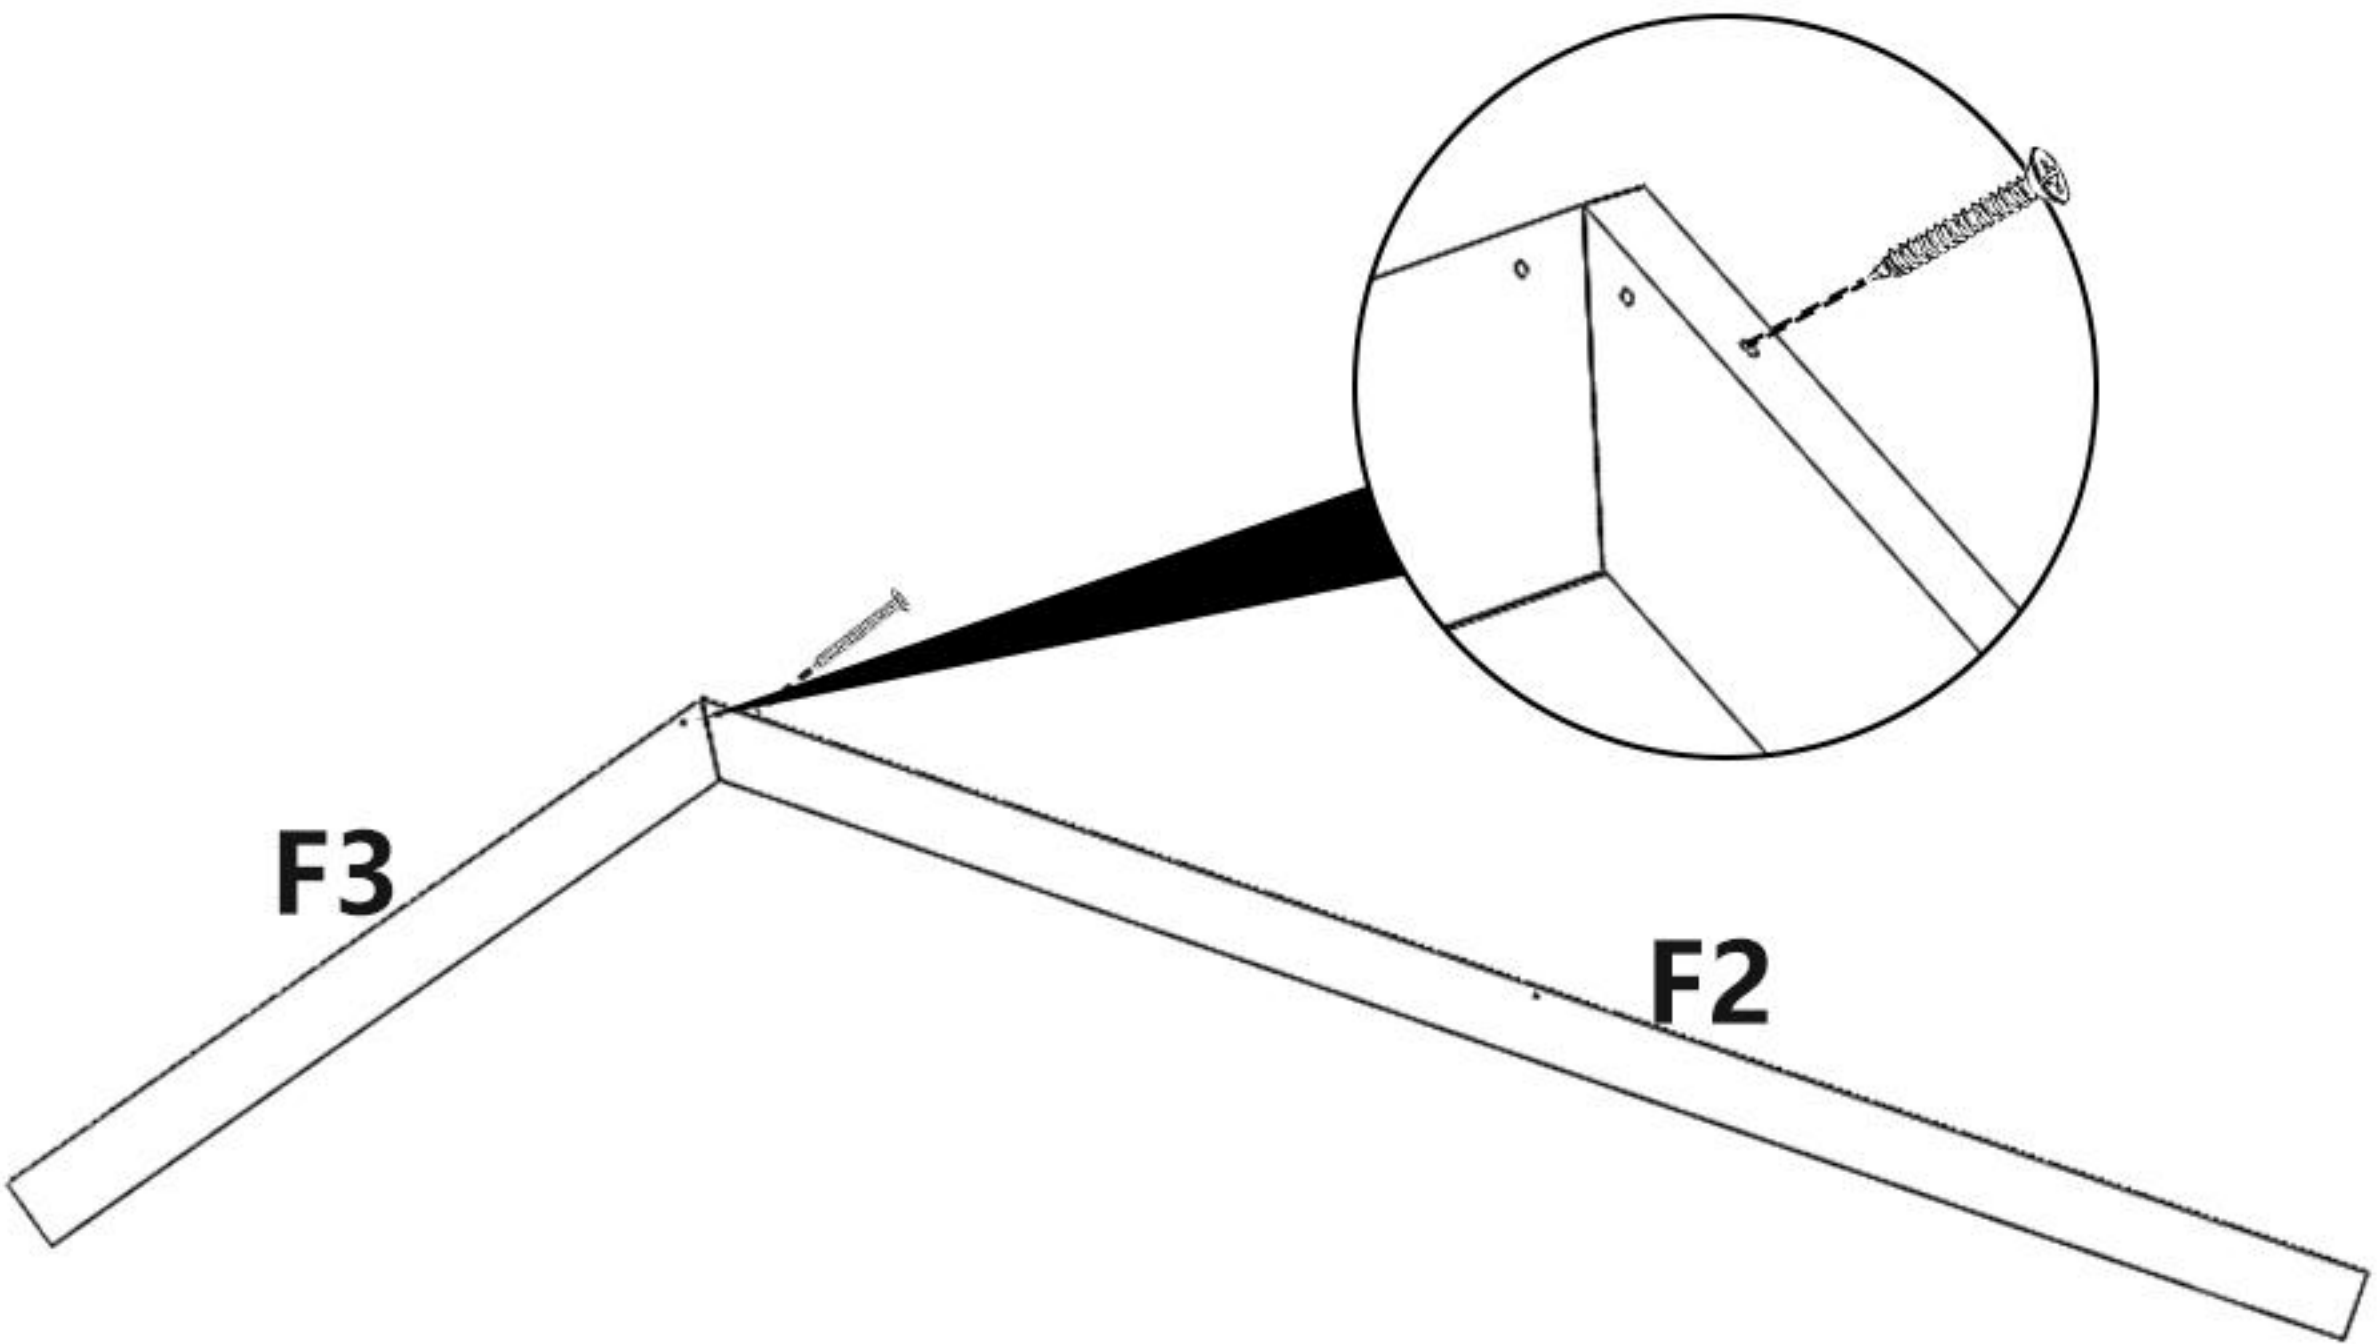

Using 1 No.4 screw to fix F2 and F3 together
Repeat this step to assemble another F2 and F3.

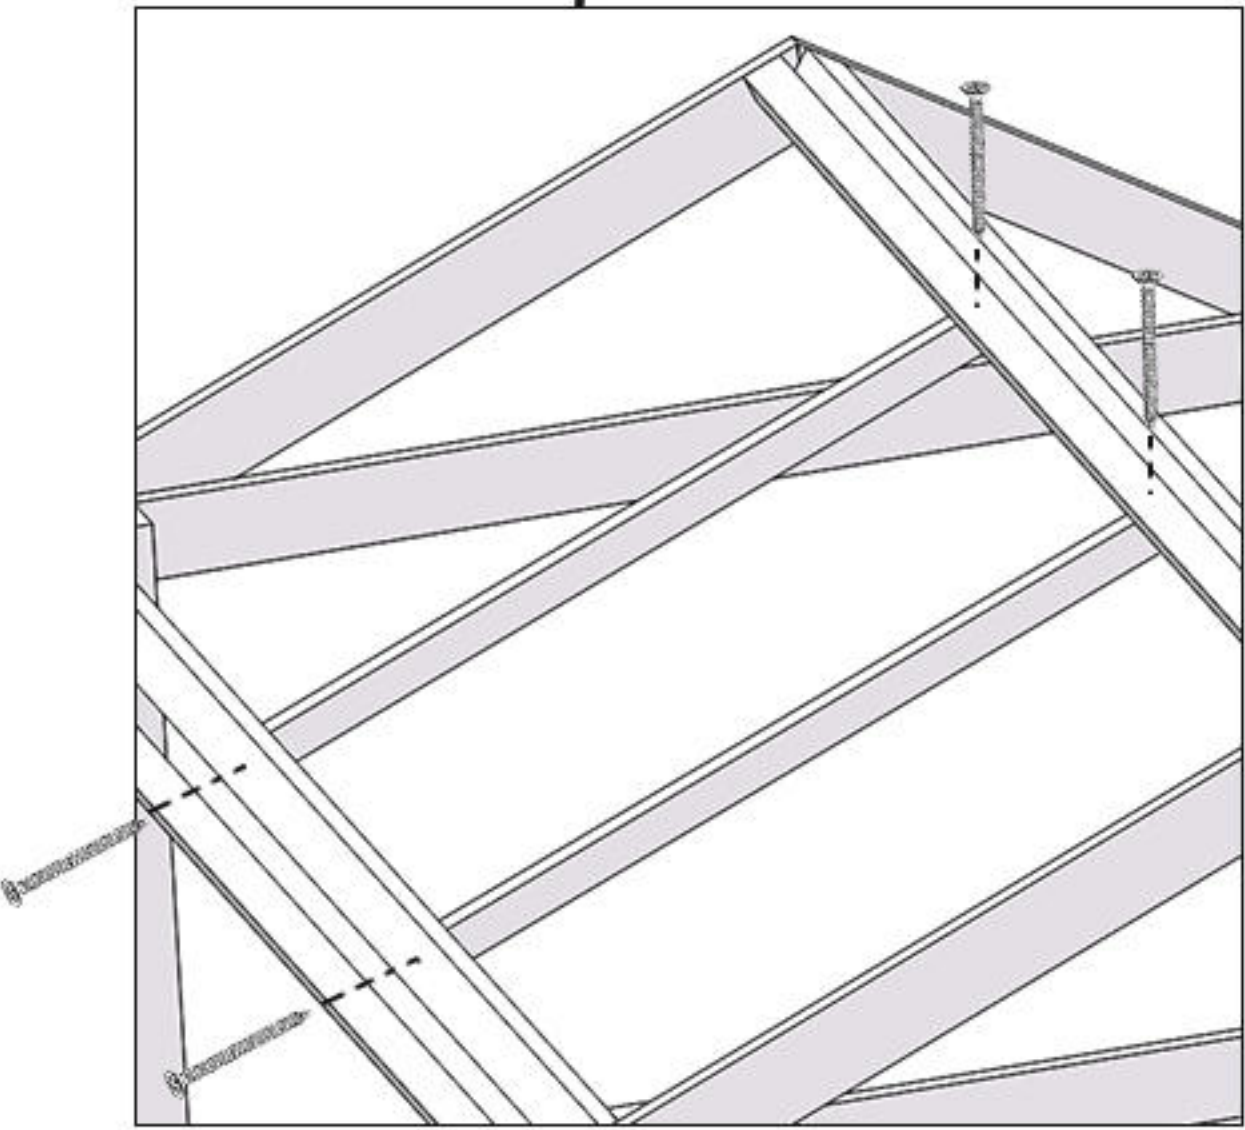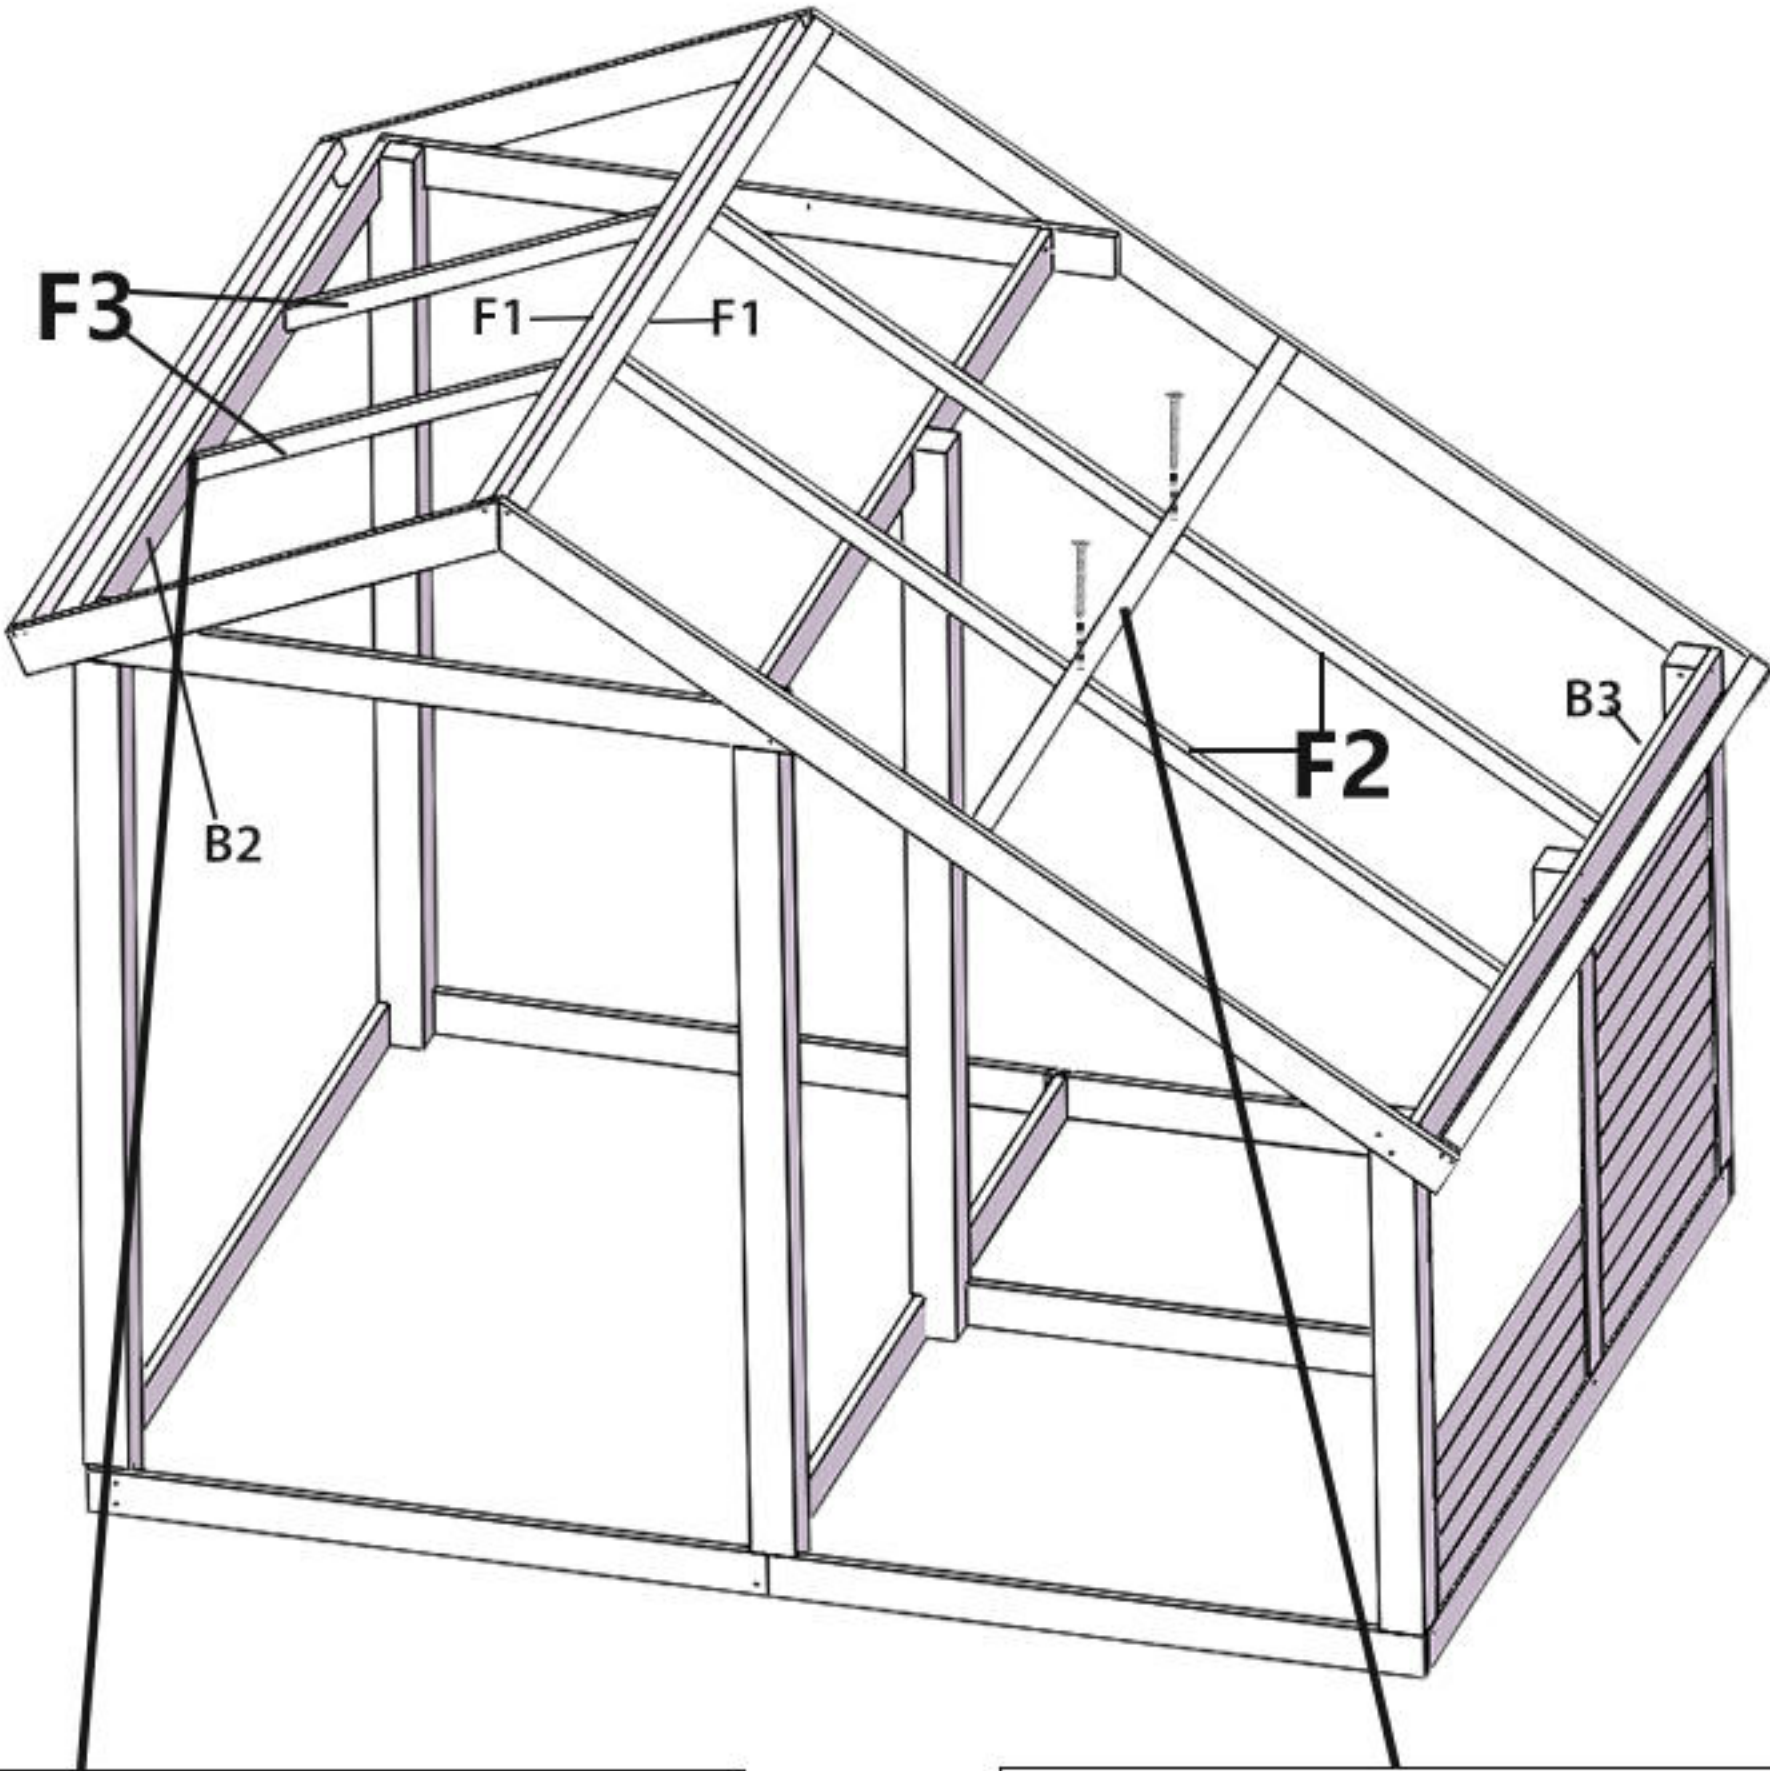

Secure the 2 end of F3 to B2 and F1,
with 1 No. 4 screw at each end,
for a total of 4 screws.



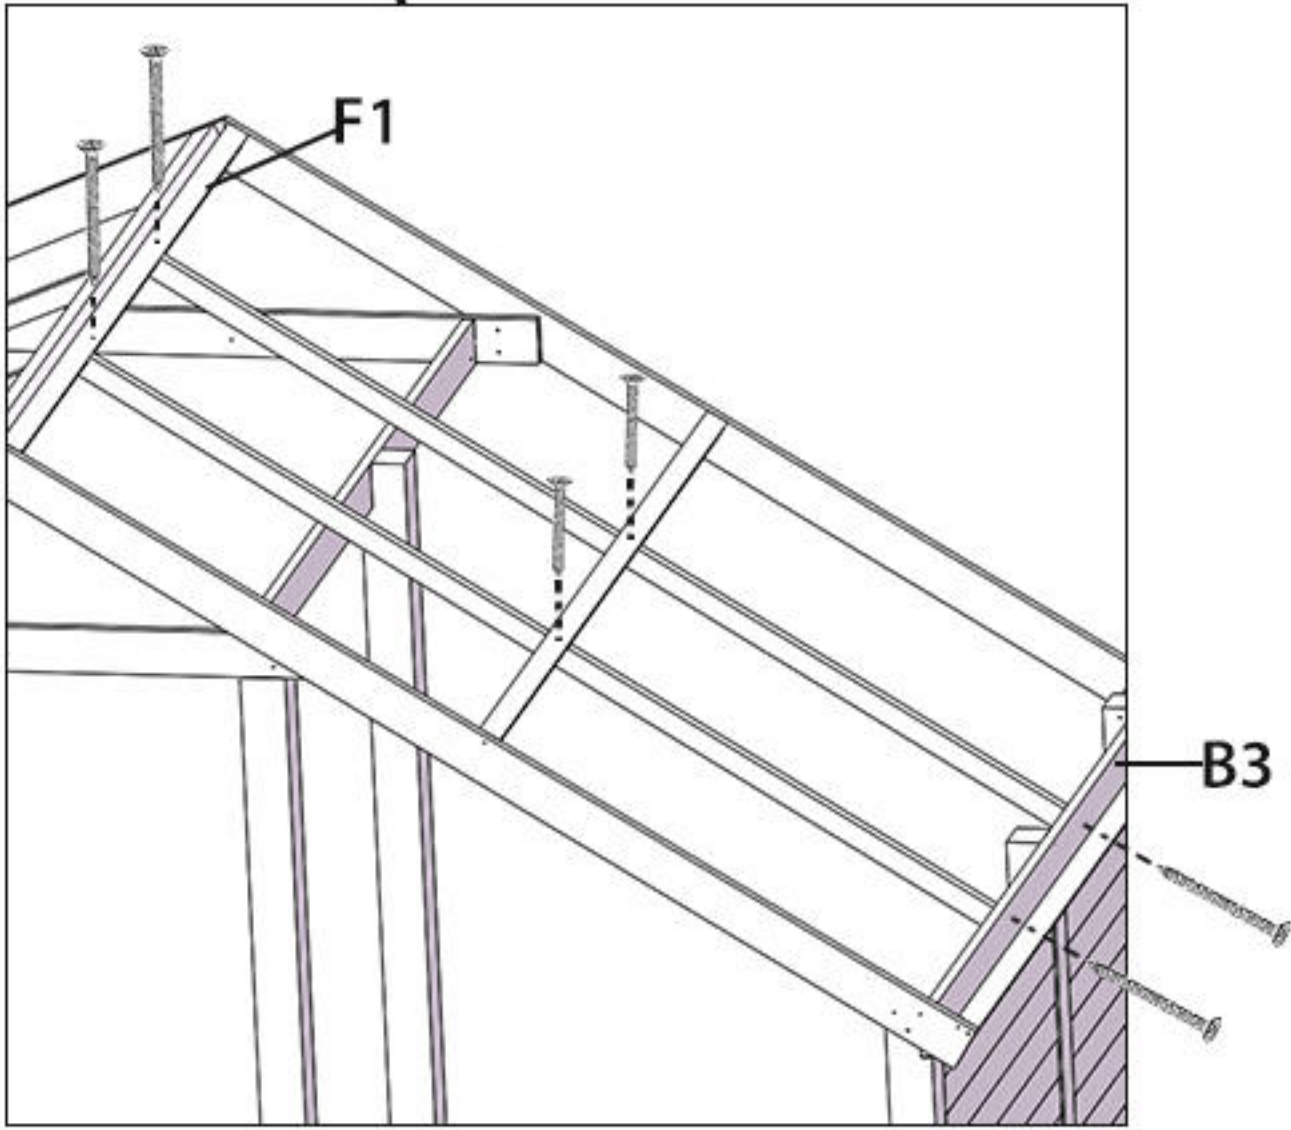



Secure both ends F2 to B3 and F1 with
screws, and midpoint of F2 to F1 with
screws,

using 1 No. 4 screw at each connection,
for a total of 6 screws.

ASSEMBLY INSTRUCTION


STEP 9

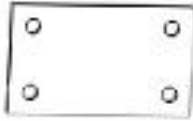STAMP ID	QTY REQ	BOX	IMAGE
G1	4	B	
G2	2	B	
4	12	A	 M4*40
2	2	A	
3	8	A	 M4*20

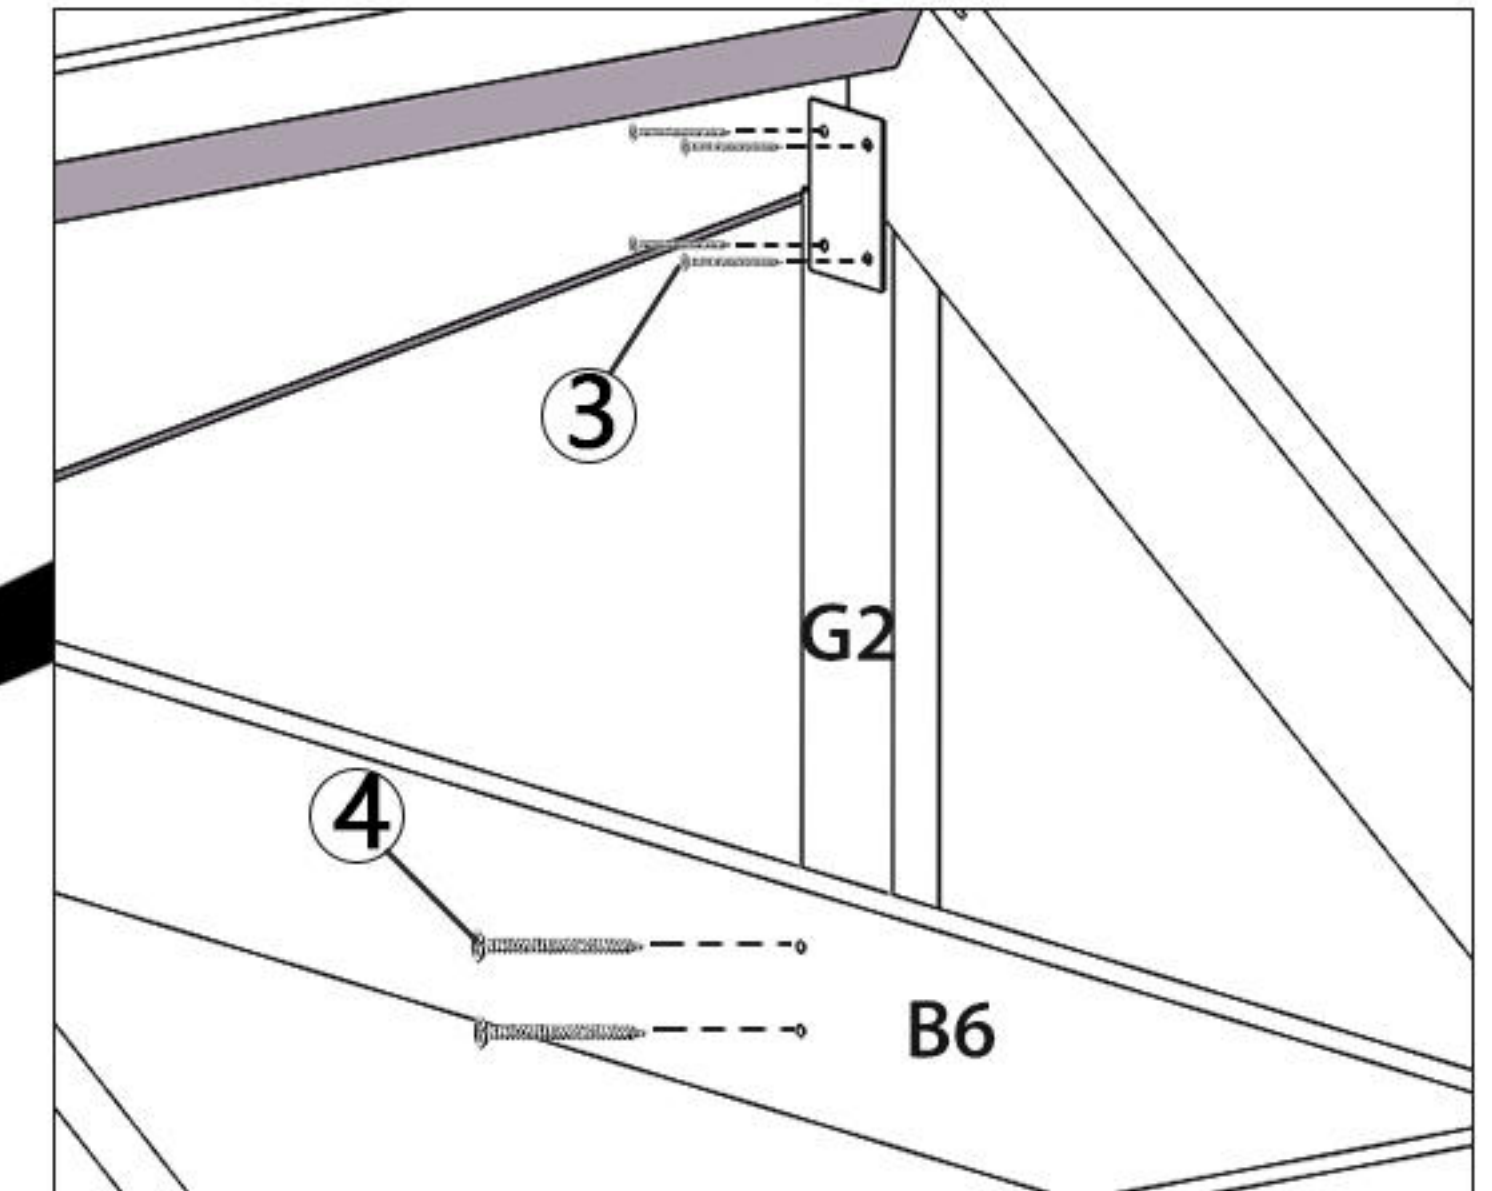


FRIST

Secure upper end of G2 to the frame using 4 No.3 screws and part No. 2.
Then, fixed the lower end of G2 to B6 with 2 No.4 screws.

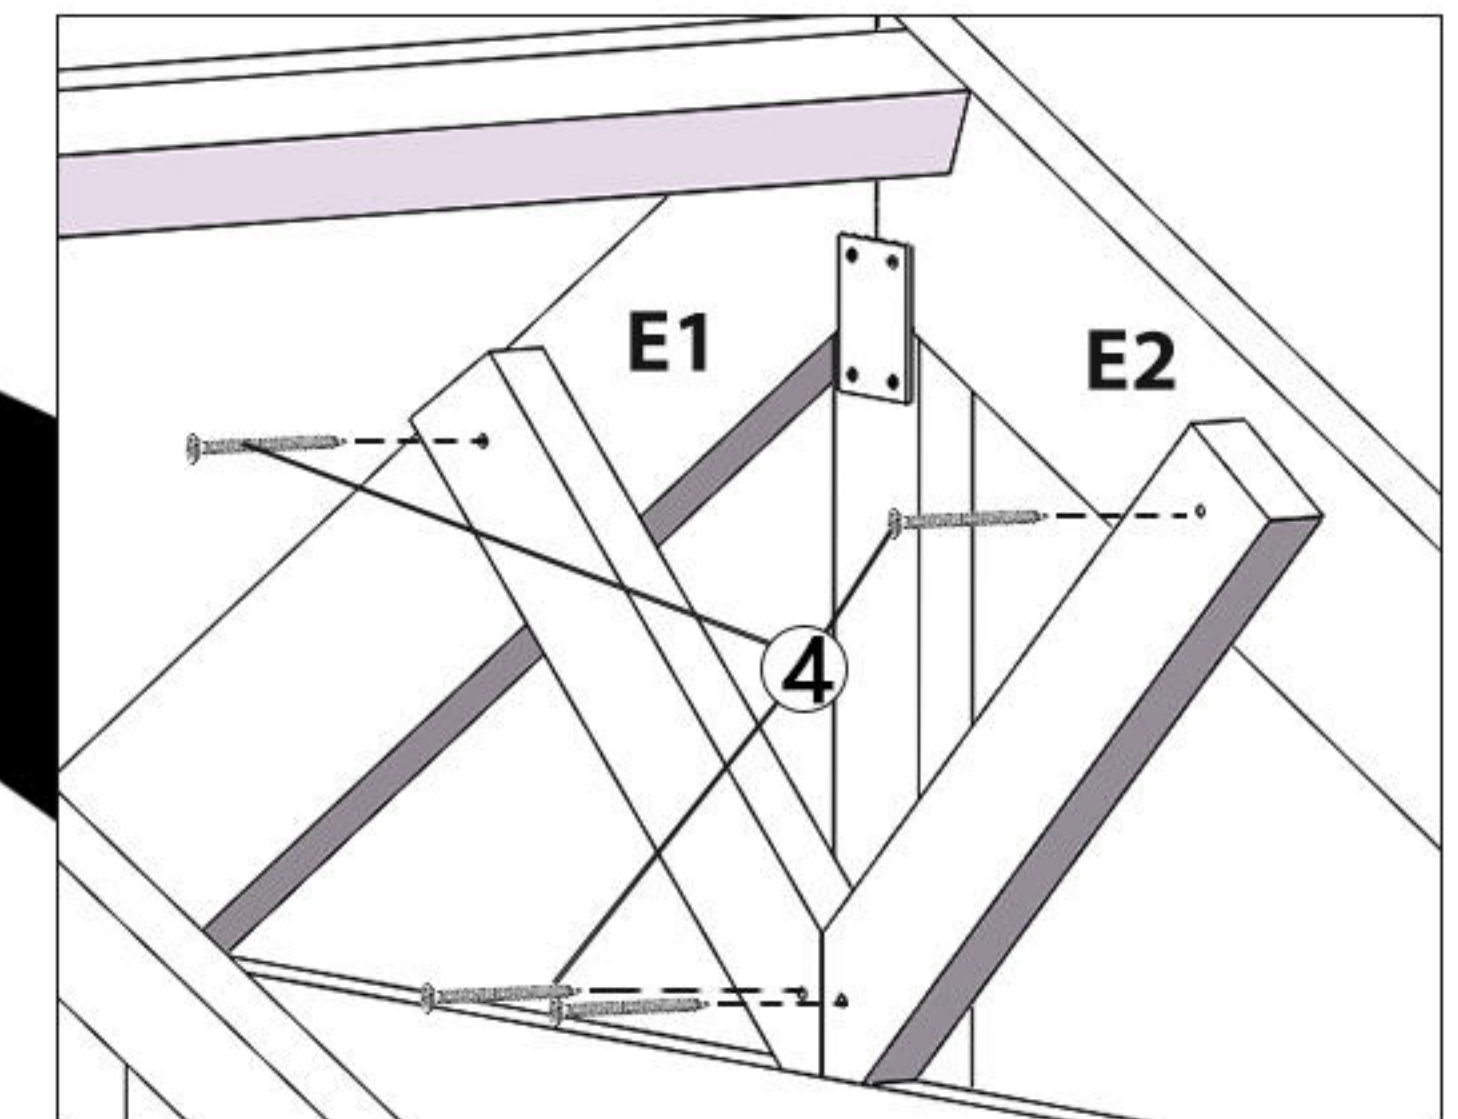

NEXT


Secure 2 G1 to G2, E1, and E2 using screws, with 1 No.4 screw at each connection, for a total of 4 No.4 screws.

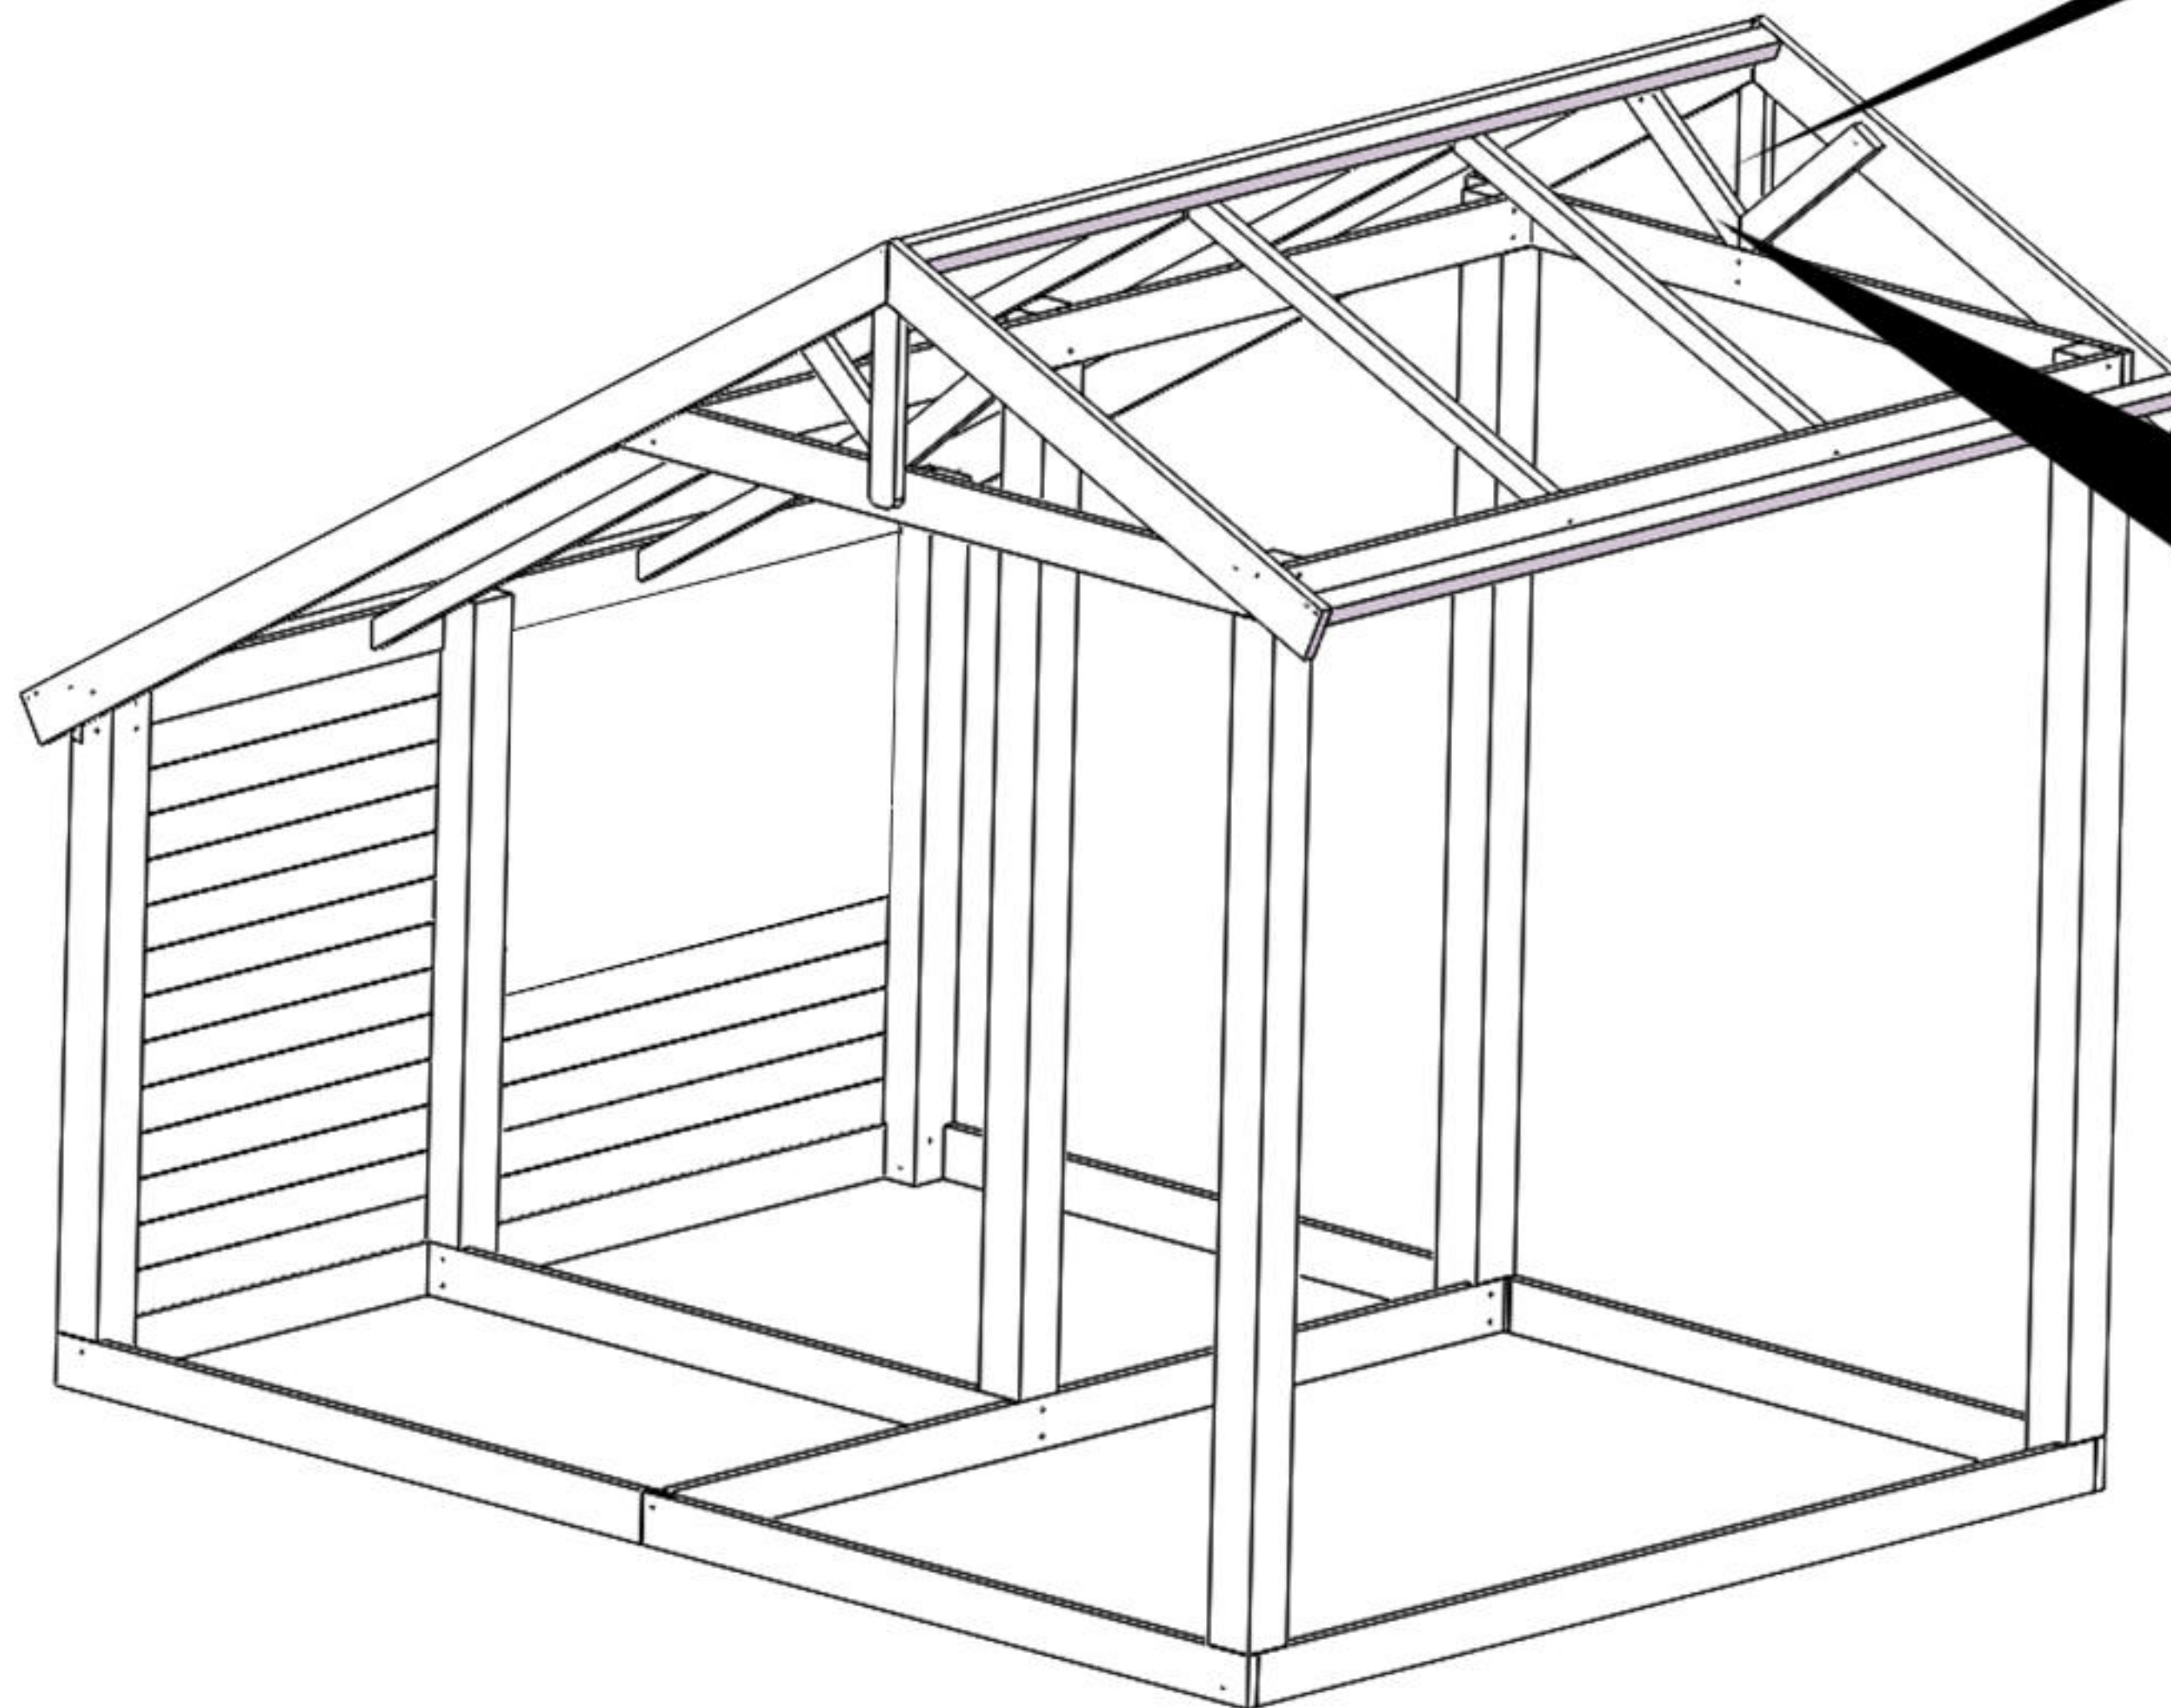


REPEAT THESE STEPS FOR ANOTHER SIDE TO ASSEMBLE G1 AND G2

ASSEMBLY INSTRUCTION


STEP 10-1


STAMP ID	QTY REQ	BOX	IMAGE
J	1	B	
1	2	A	
3	12	A	 M4*20

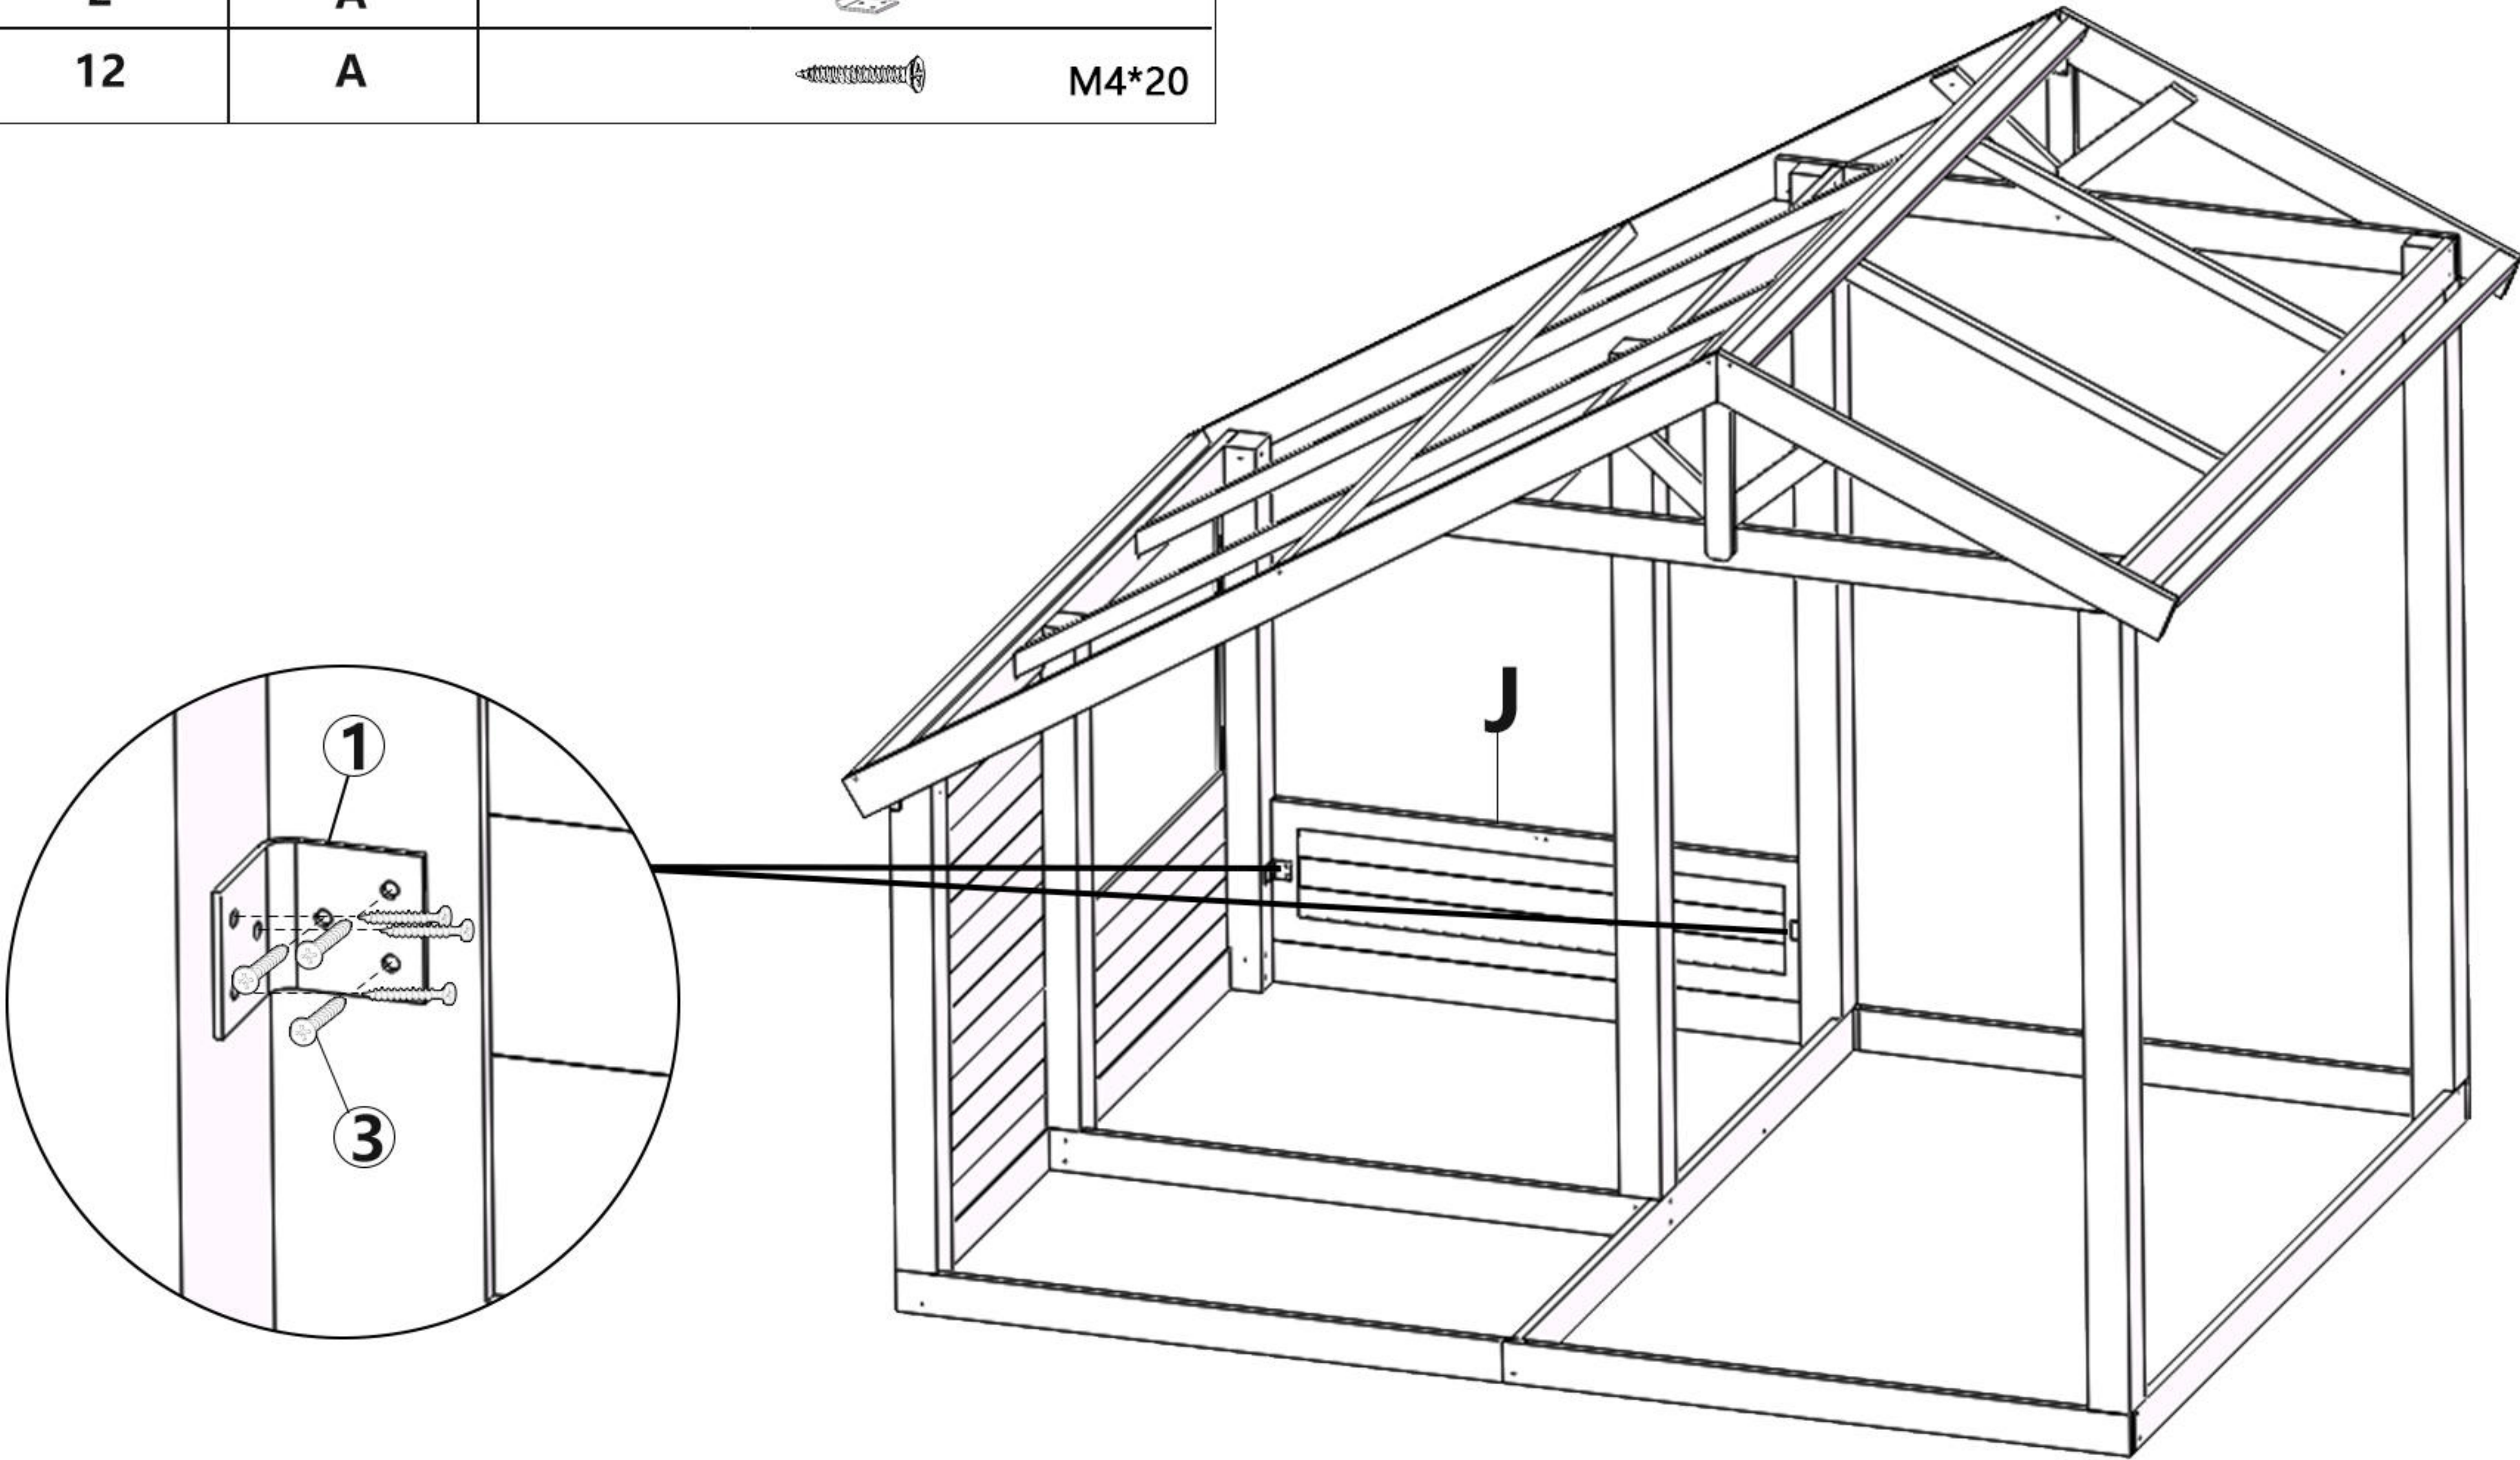


ASSEMBLY INSTRUCTION

STEP 10-2

STAMP ID	QTY REQ	BOX	IMAGE
4	8	A	 M4*40
K	2	A	

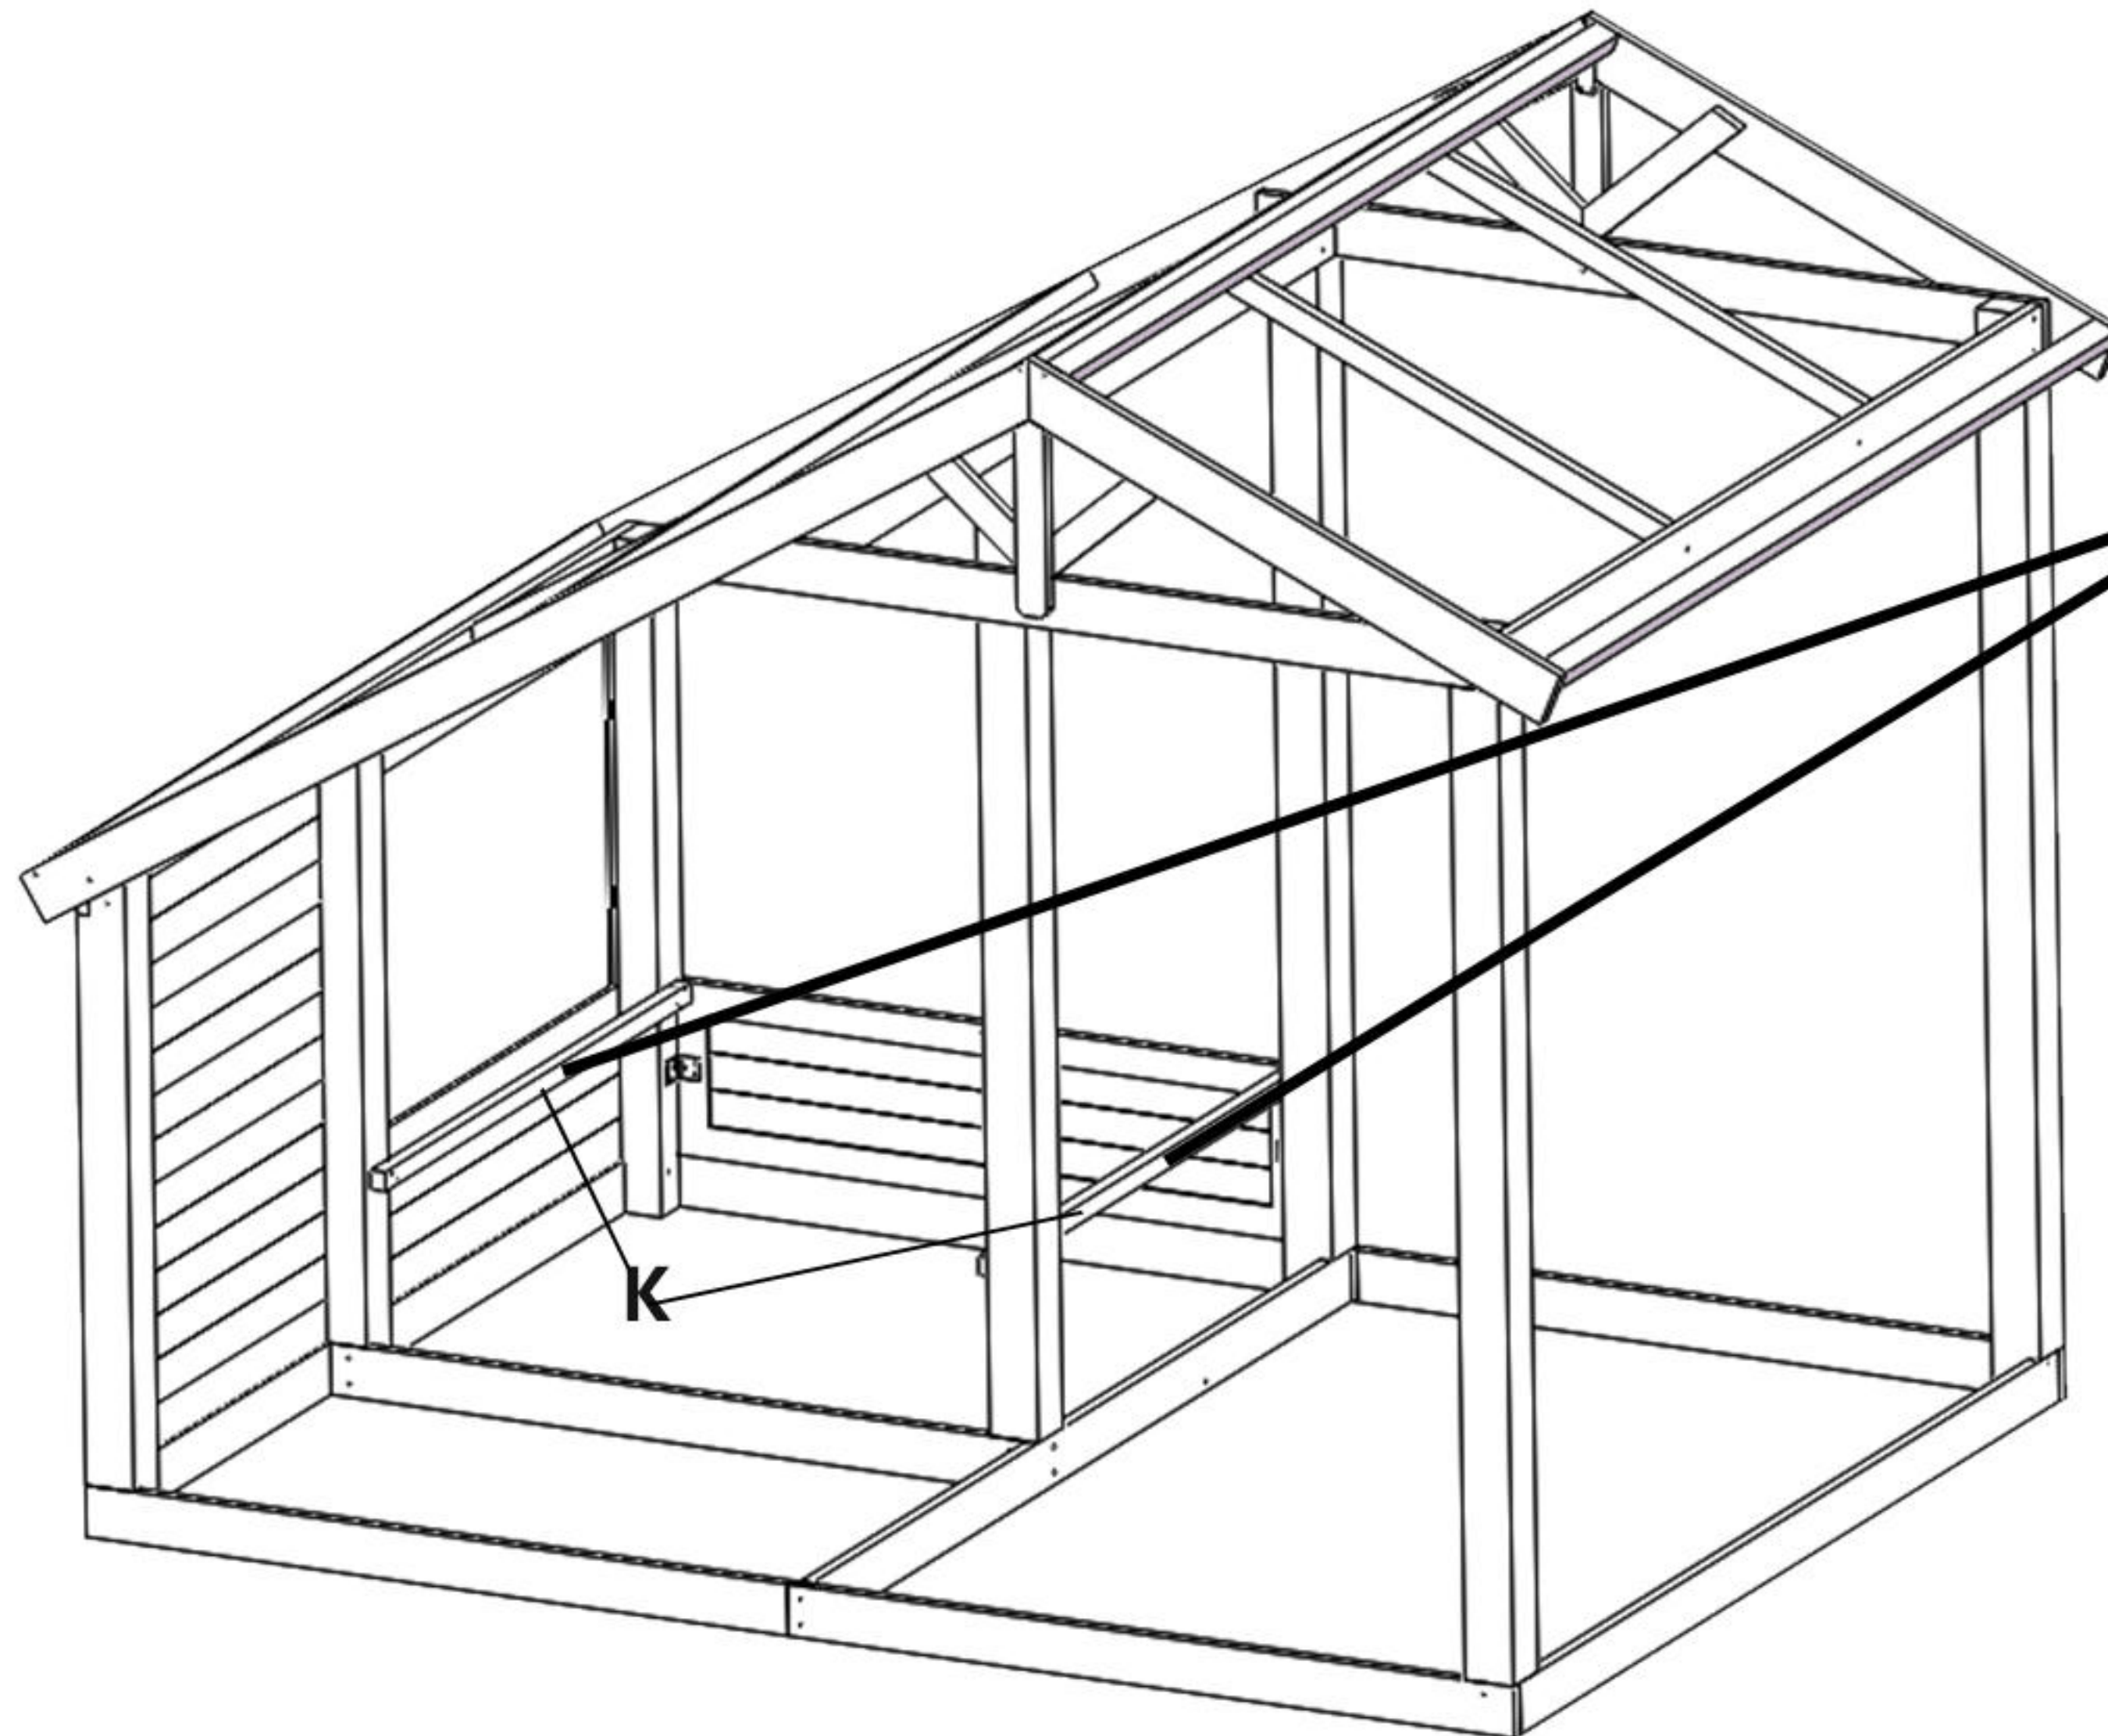

Check and adjust to ensure K is level with the frame.

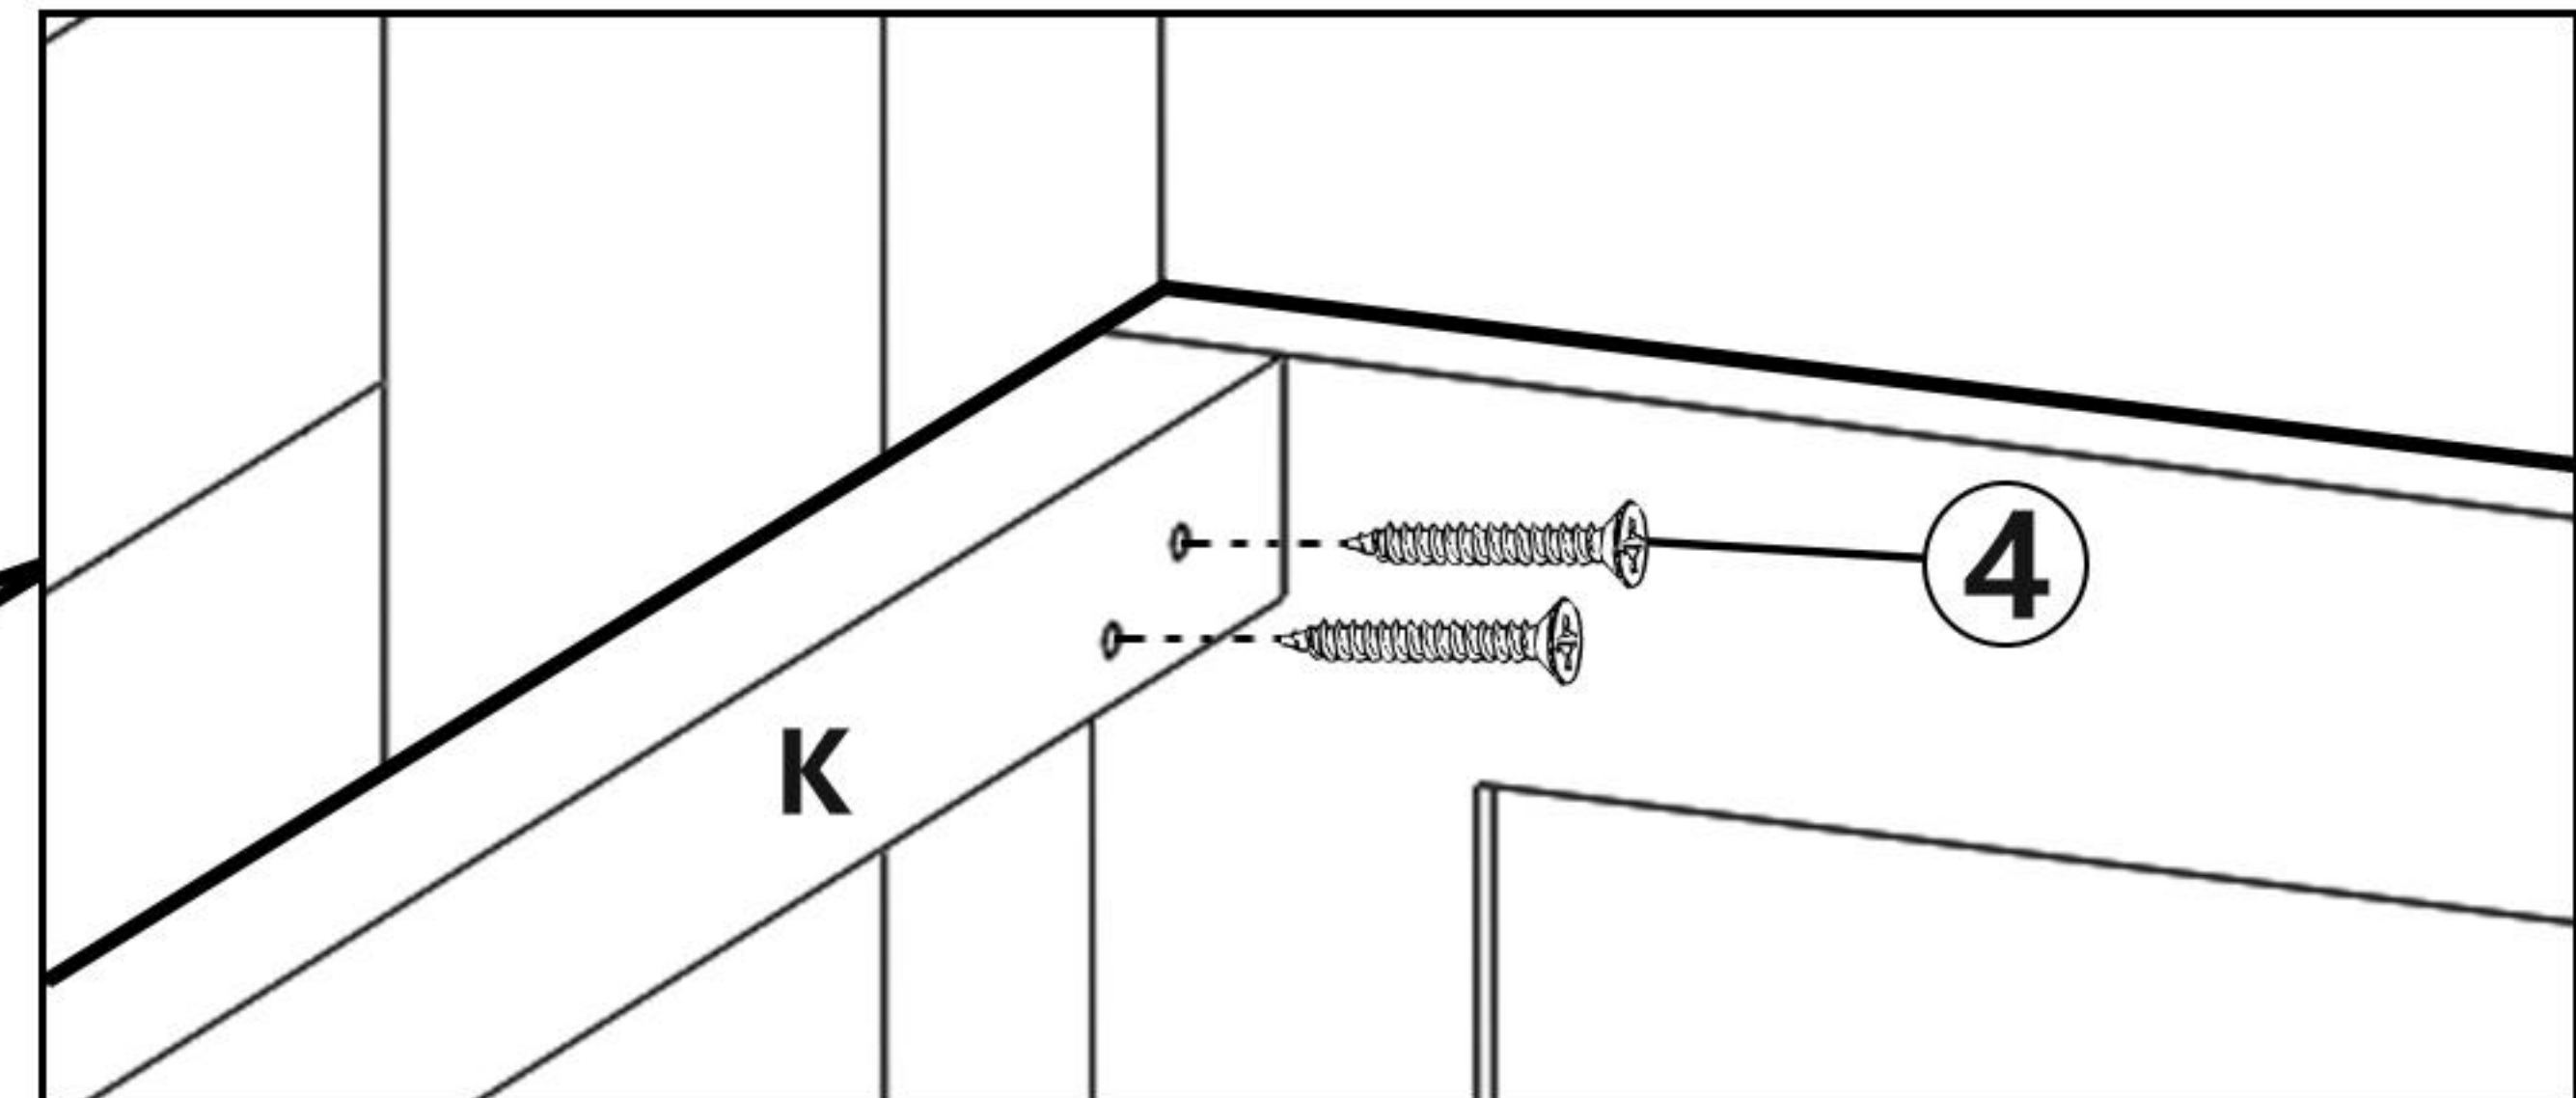


Using 4 No. 4 screws, secure K to the frame.


REPEAT ASSEMBLY FOR ANOTHER K.

ASSEMBLY INSTRUCTION


STEP 11-1

STAMP ID	QTY REQ		IMAGE	
J1	1	B		
K1	1	B		
1	6	A		
3	36	A		M4*20
J2	1	B		



Using 2 No. 1 metal part and 12 No. 3 screws, secure J1 to the frame.

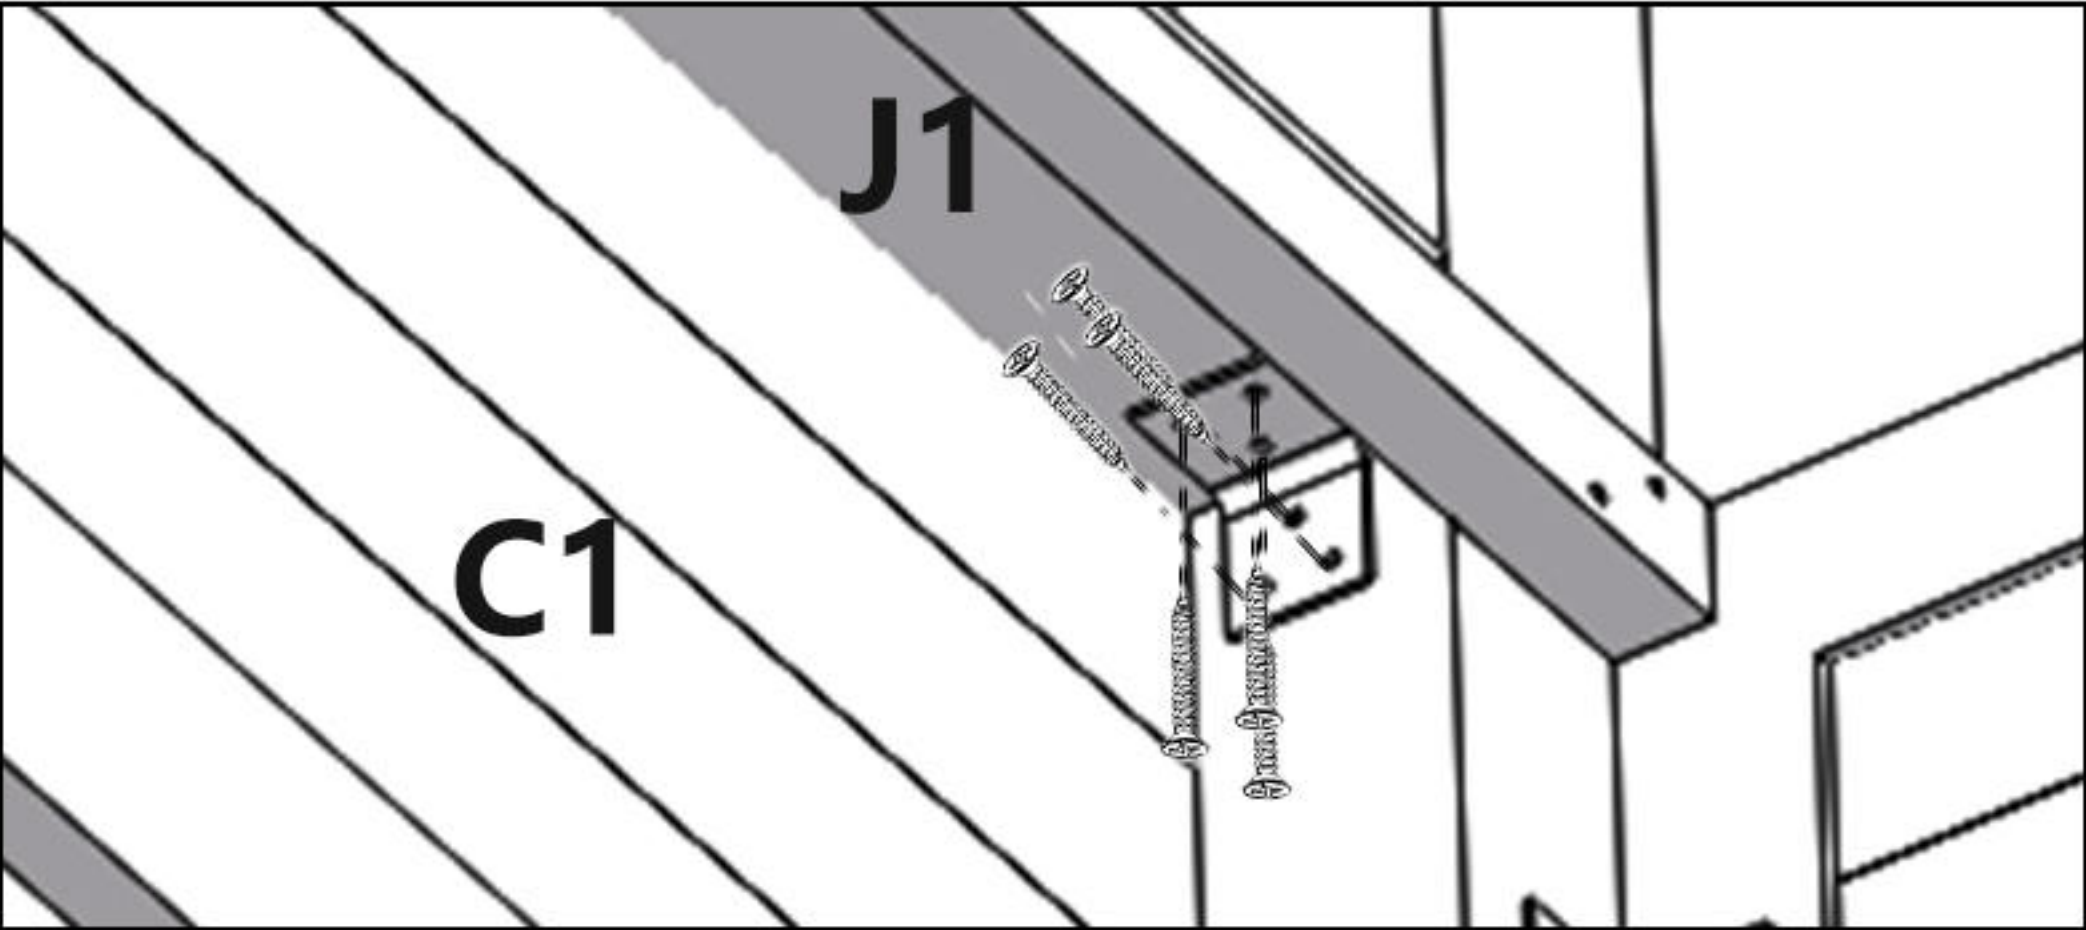

Using 2 No. 1 metal part and 12 No. 3 screws, secure K1 to the frame.

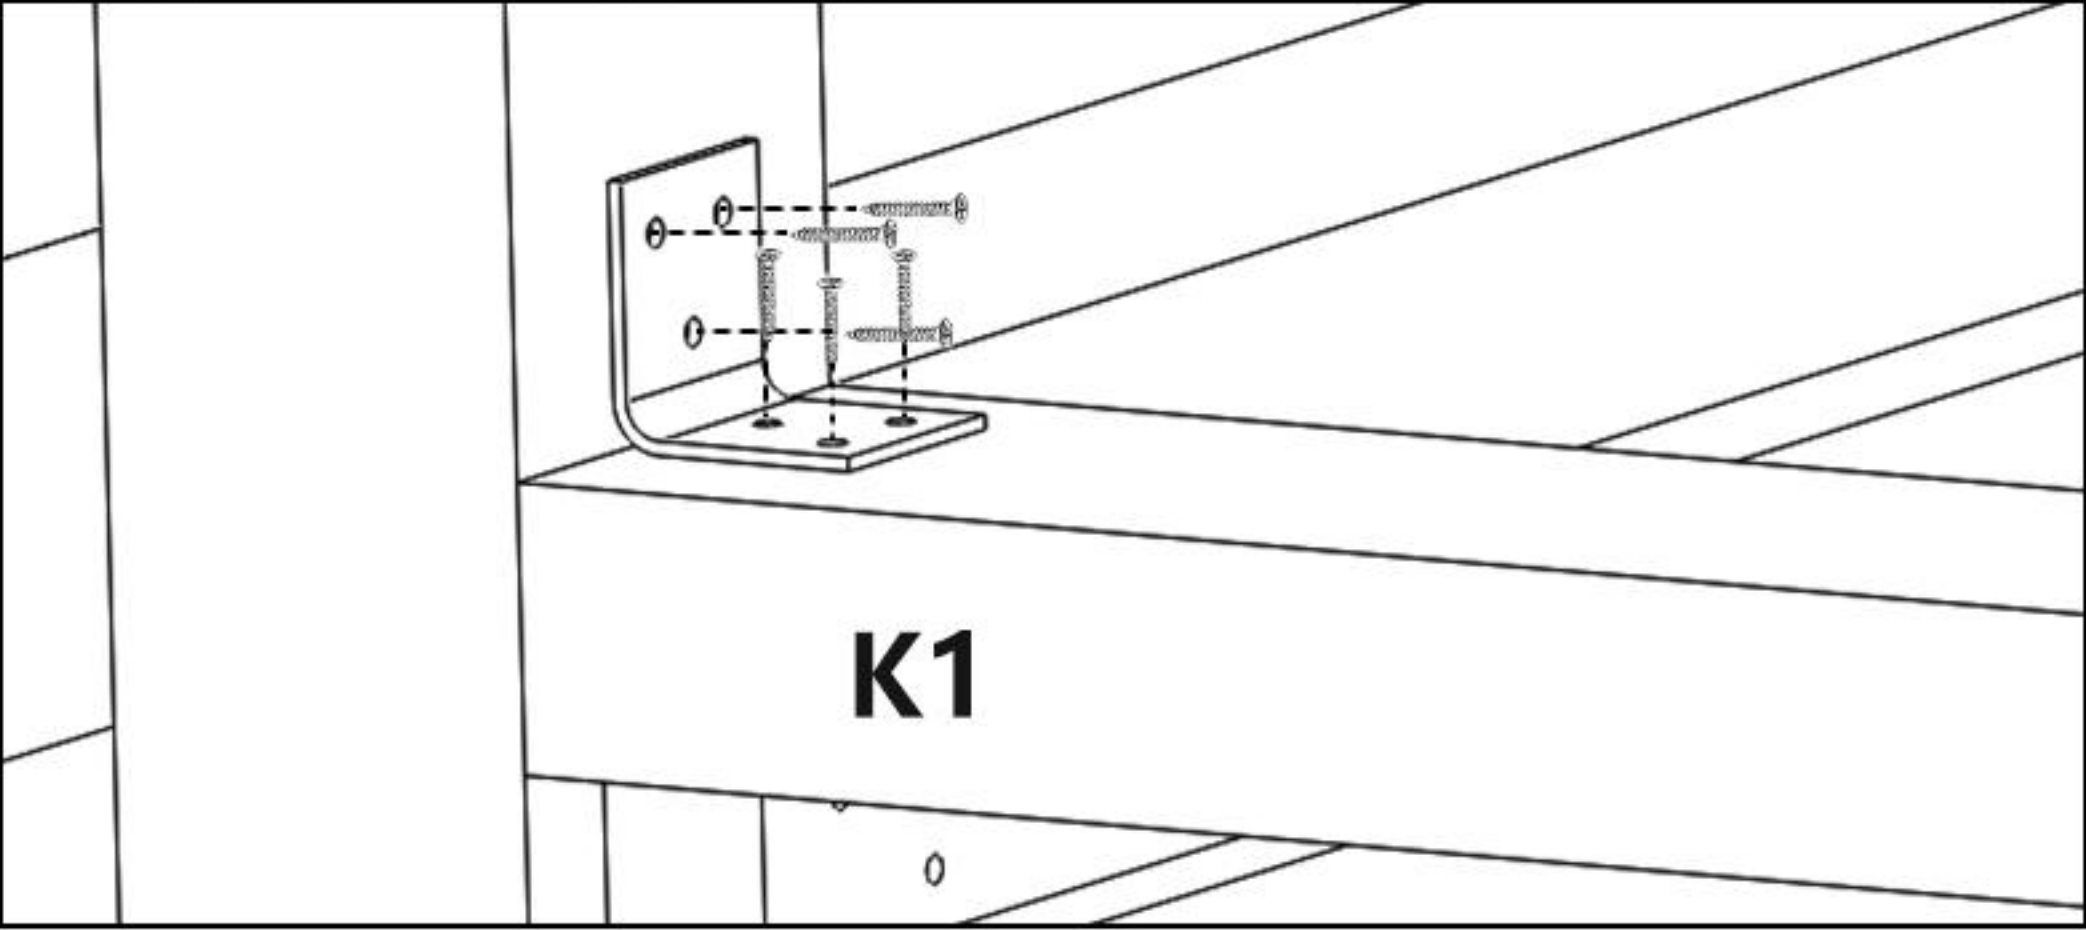

Using 2 No. 1 metal part and 12 No. 3 screws, secure J2 to the frame.

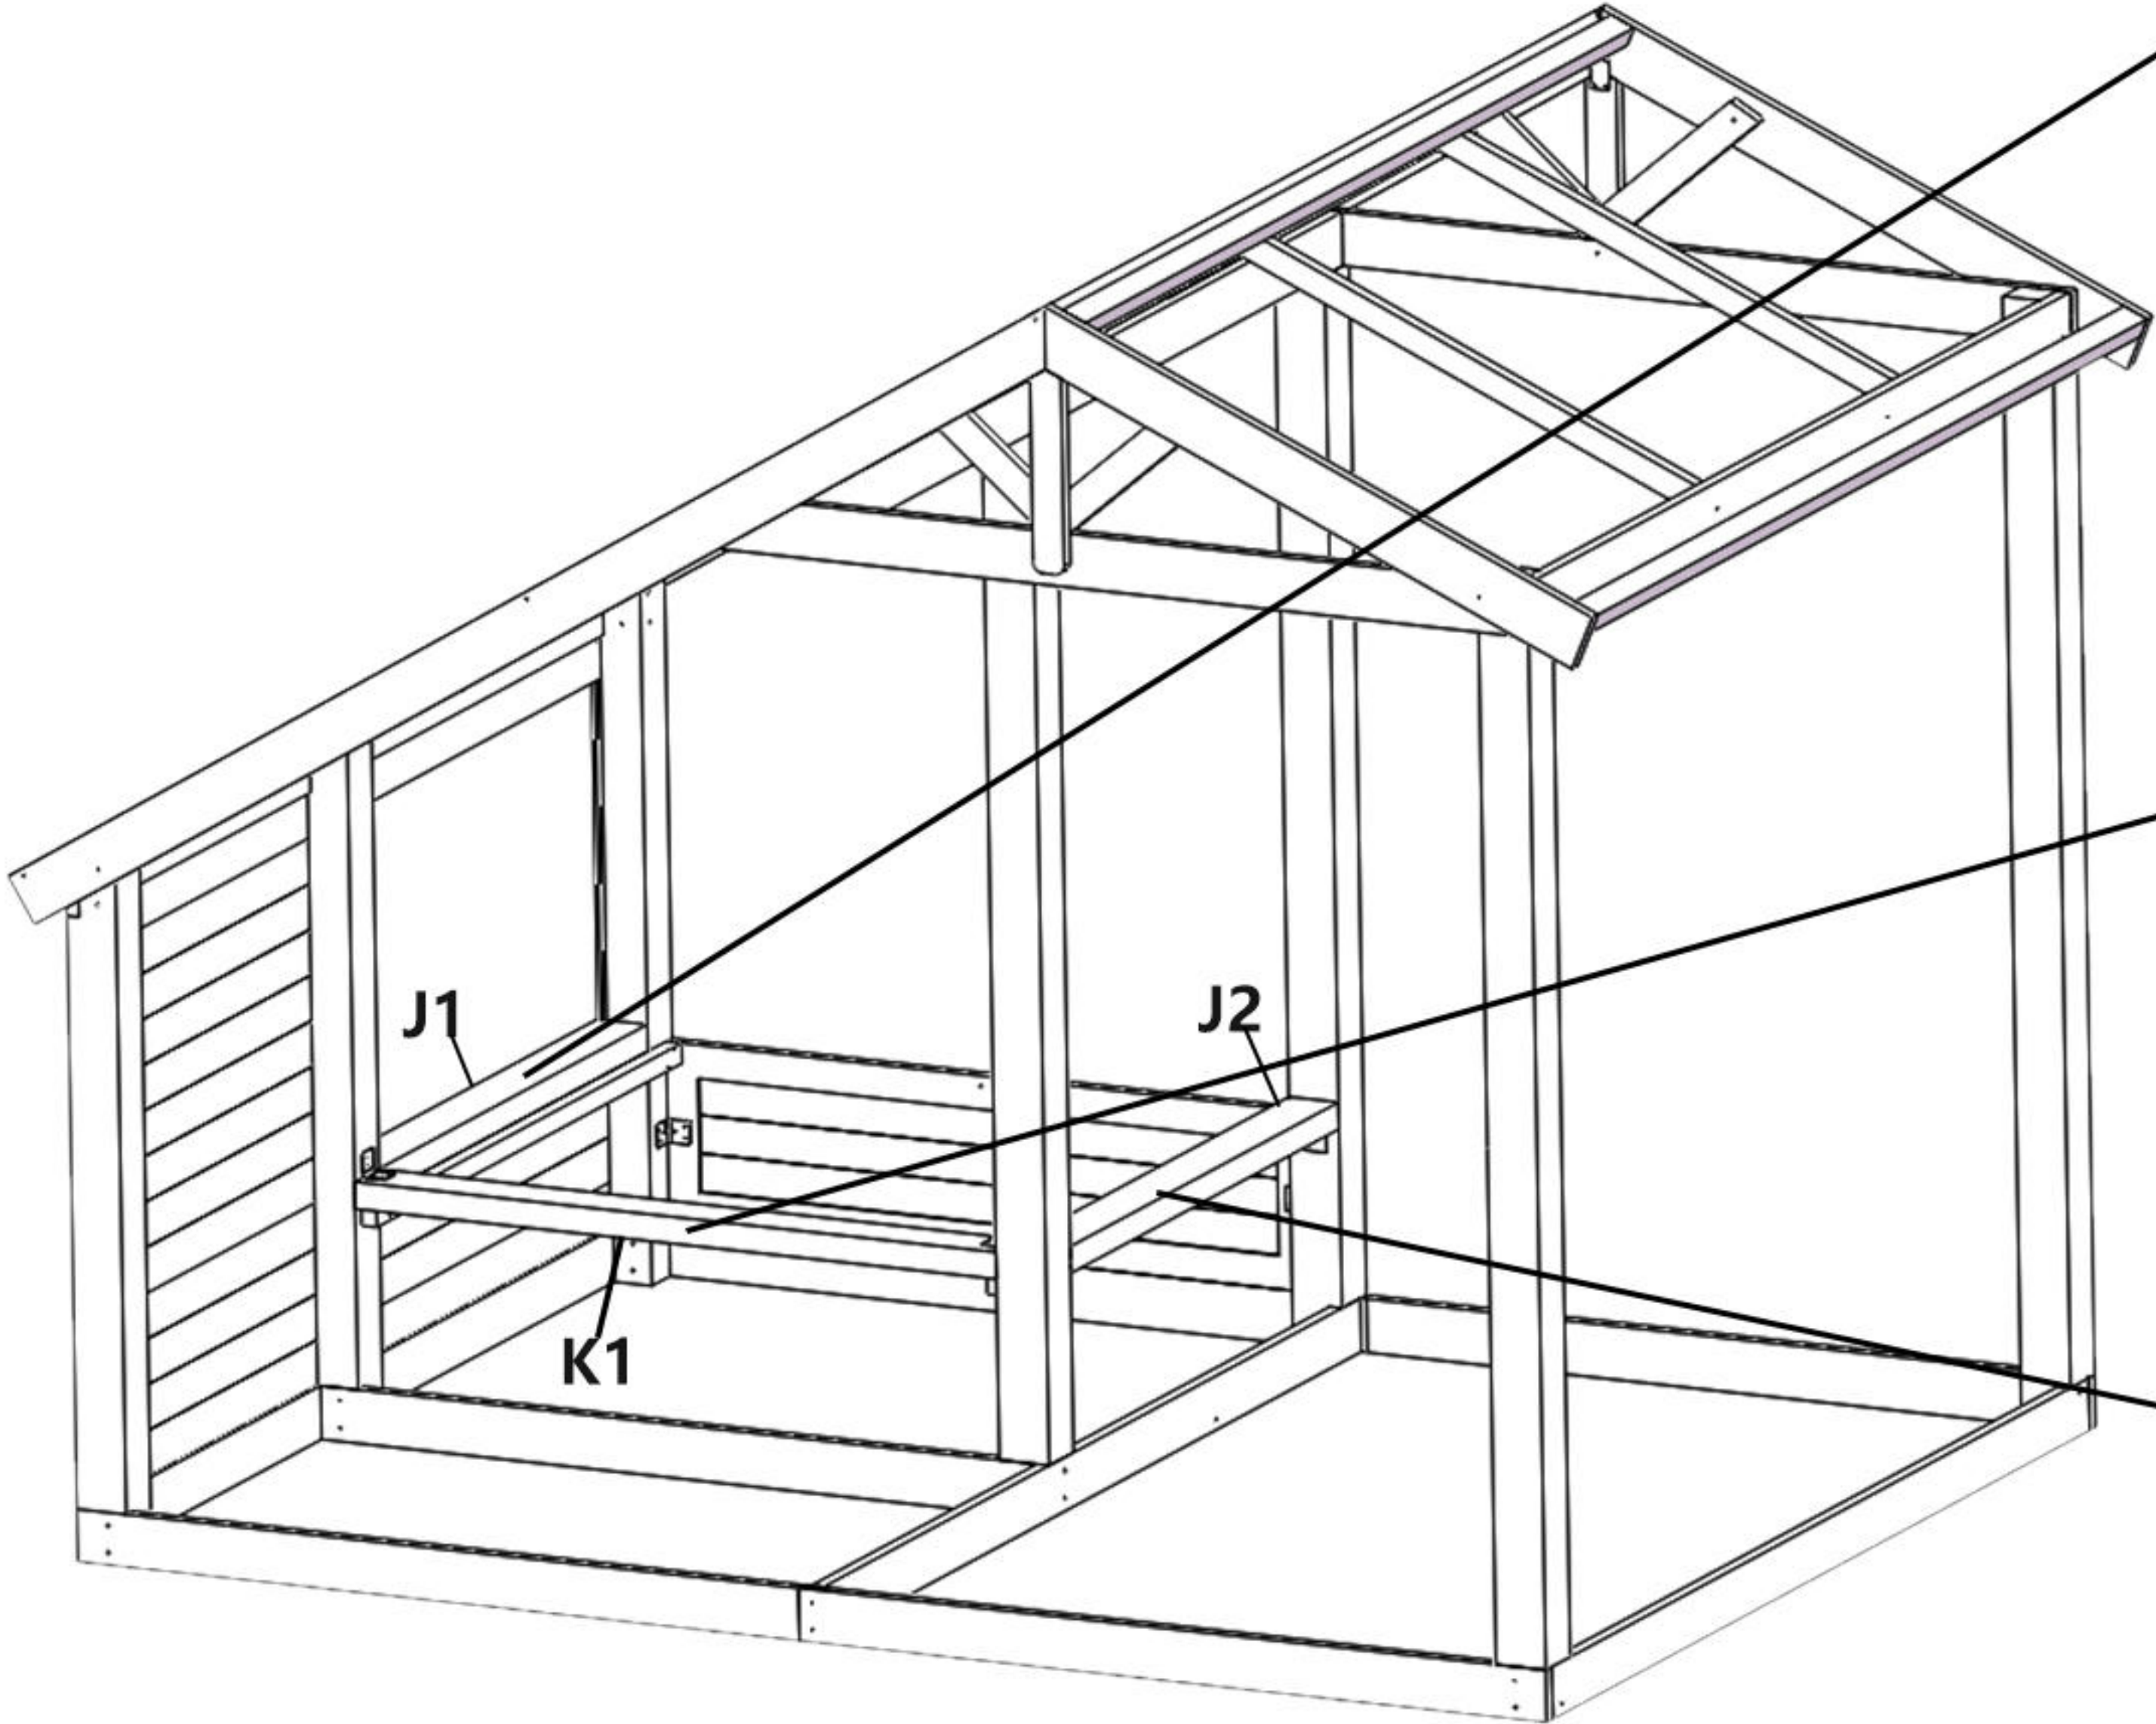
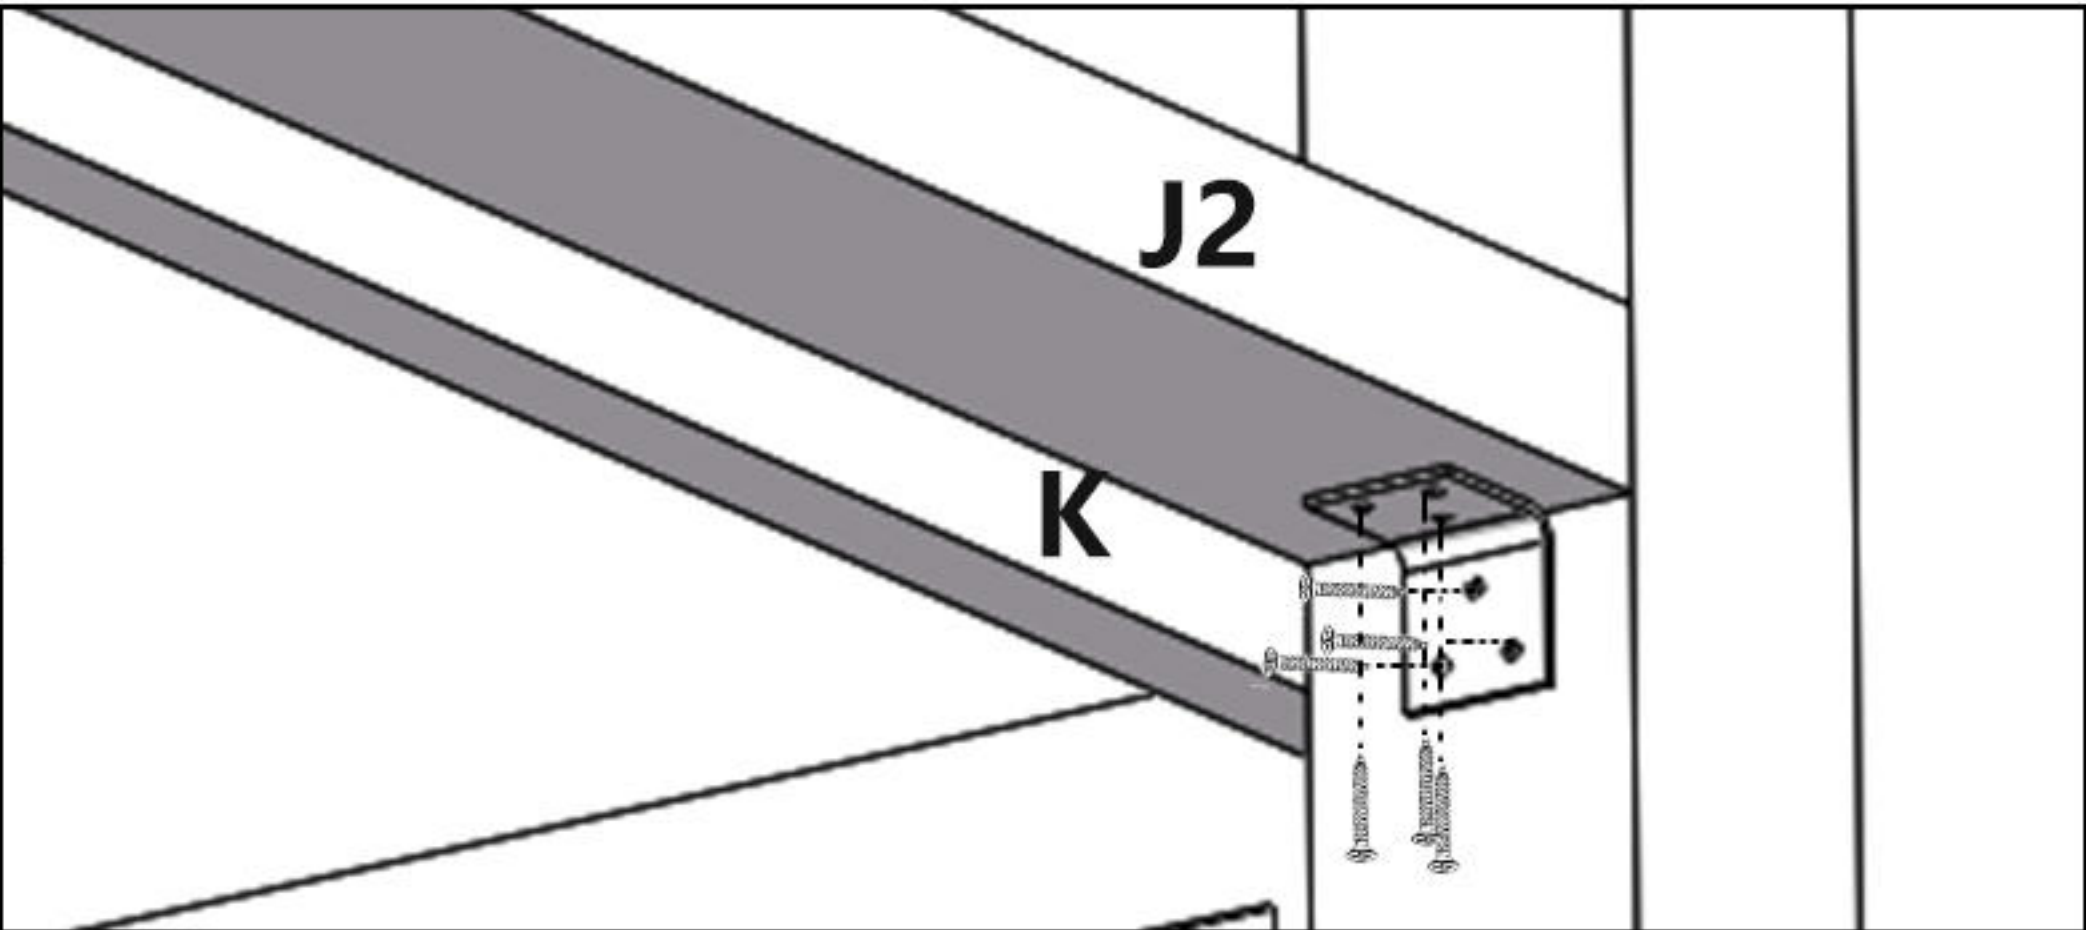


ASSEMBLY INSTRUCTION


STEP 11-2

STAMP ID	QTY REQ		IMAGE
K	1	A	
4	4	A	 M4*40

Attach the K assembly to panel J using 2 No. 4 screws.

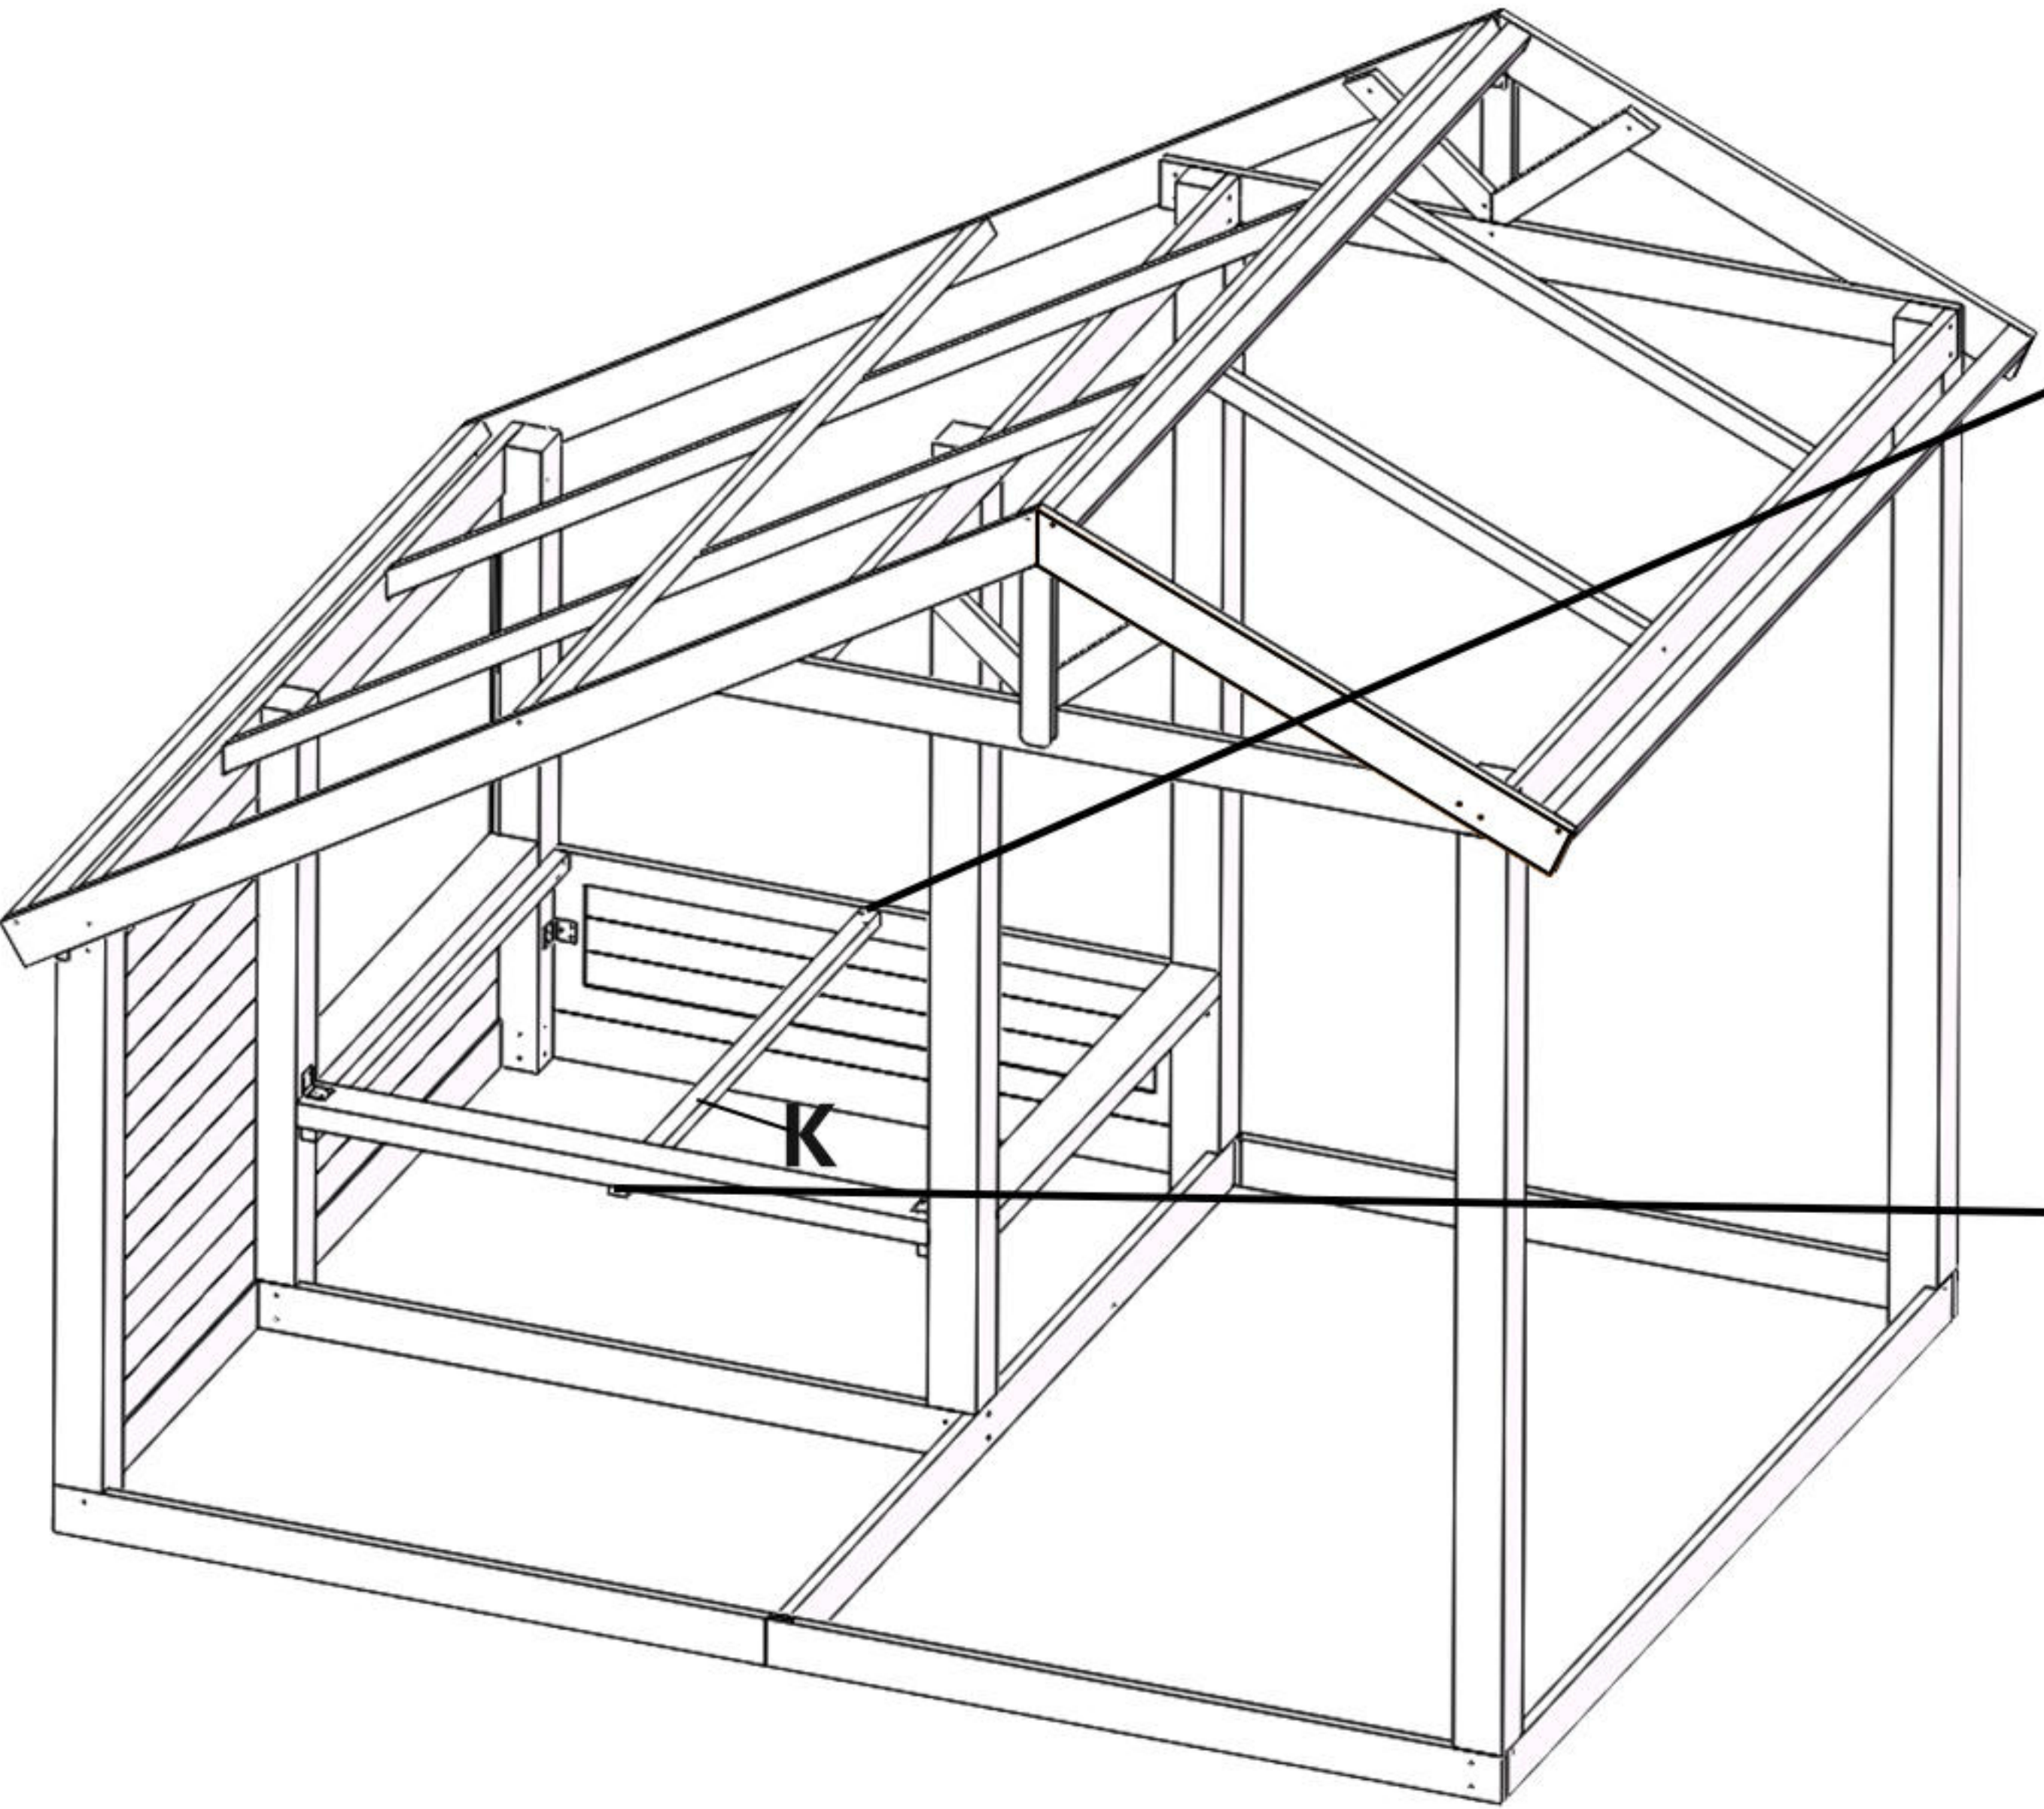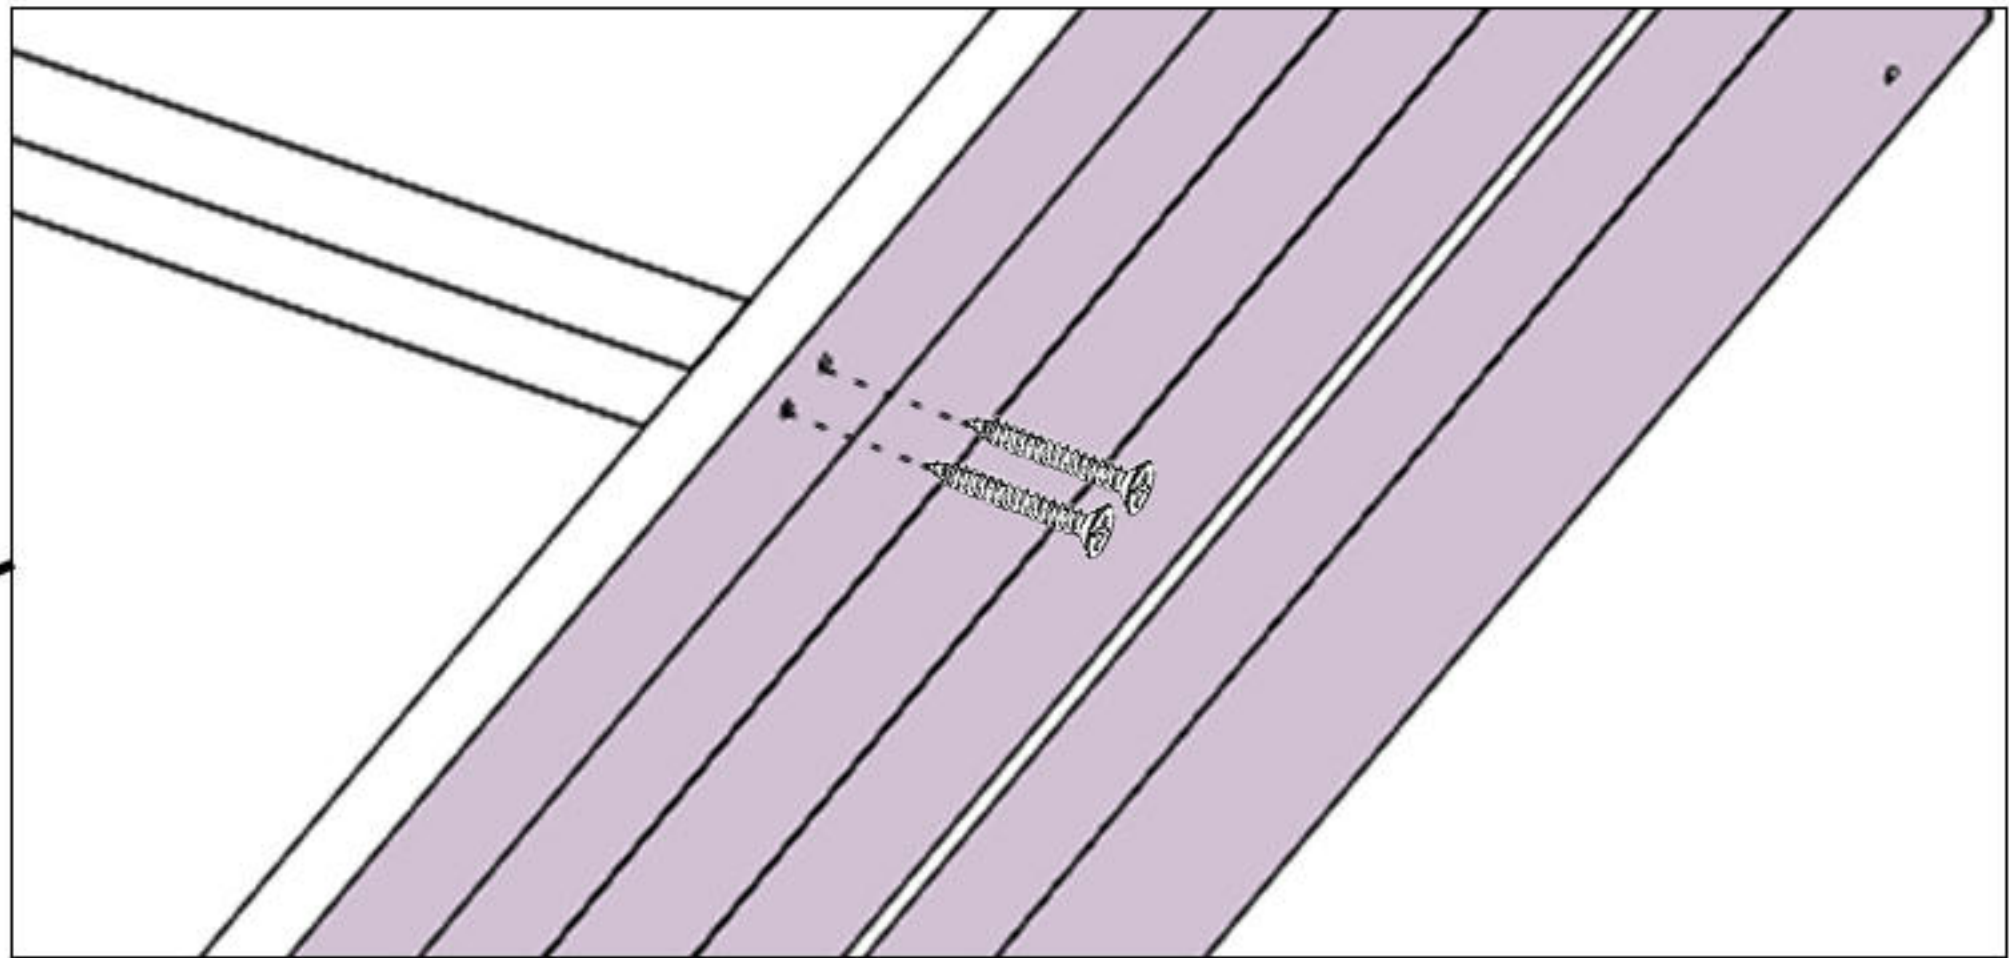


Attach K to K1 using 2 No. 4 screws.

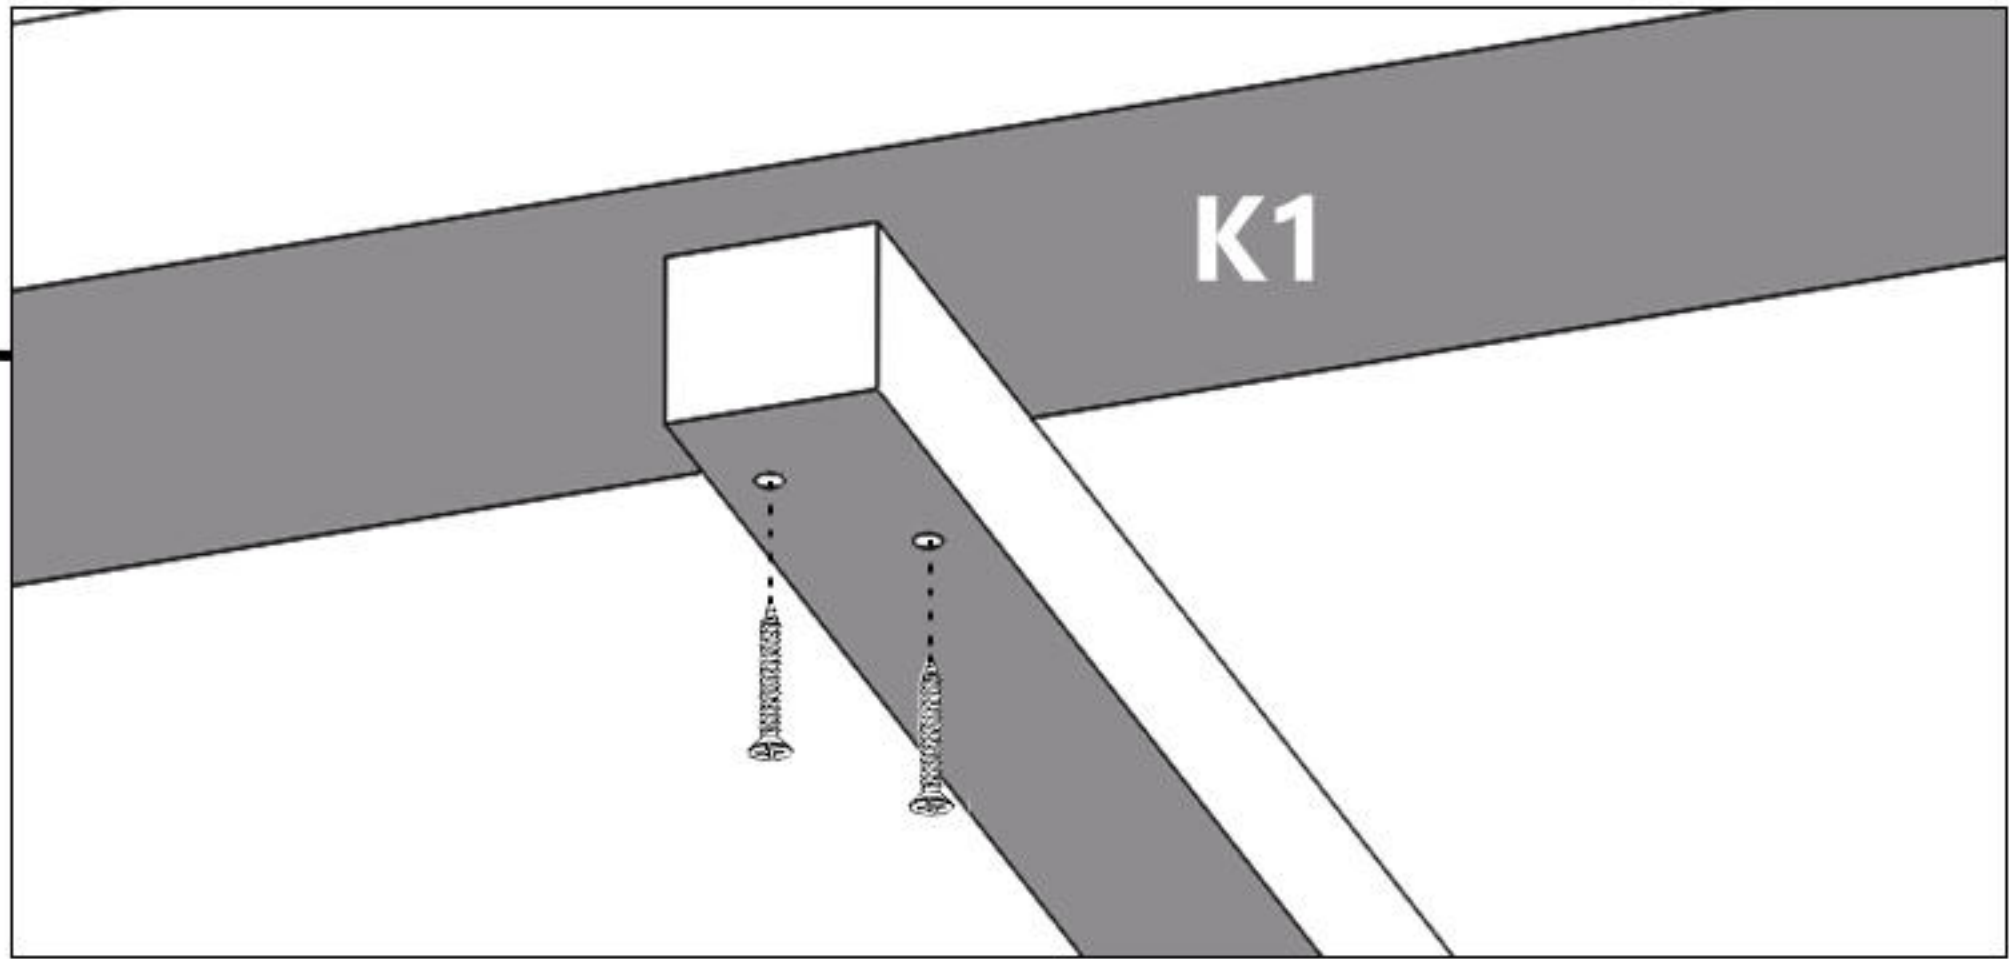

ASSEMBLY INSTRUCTION


STEP 12-1

STAMP ID	QTY REQ	BOX	IMAGE
L	2	B	
4	7	A	 M4*40
L2	1	B	

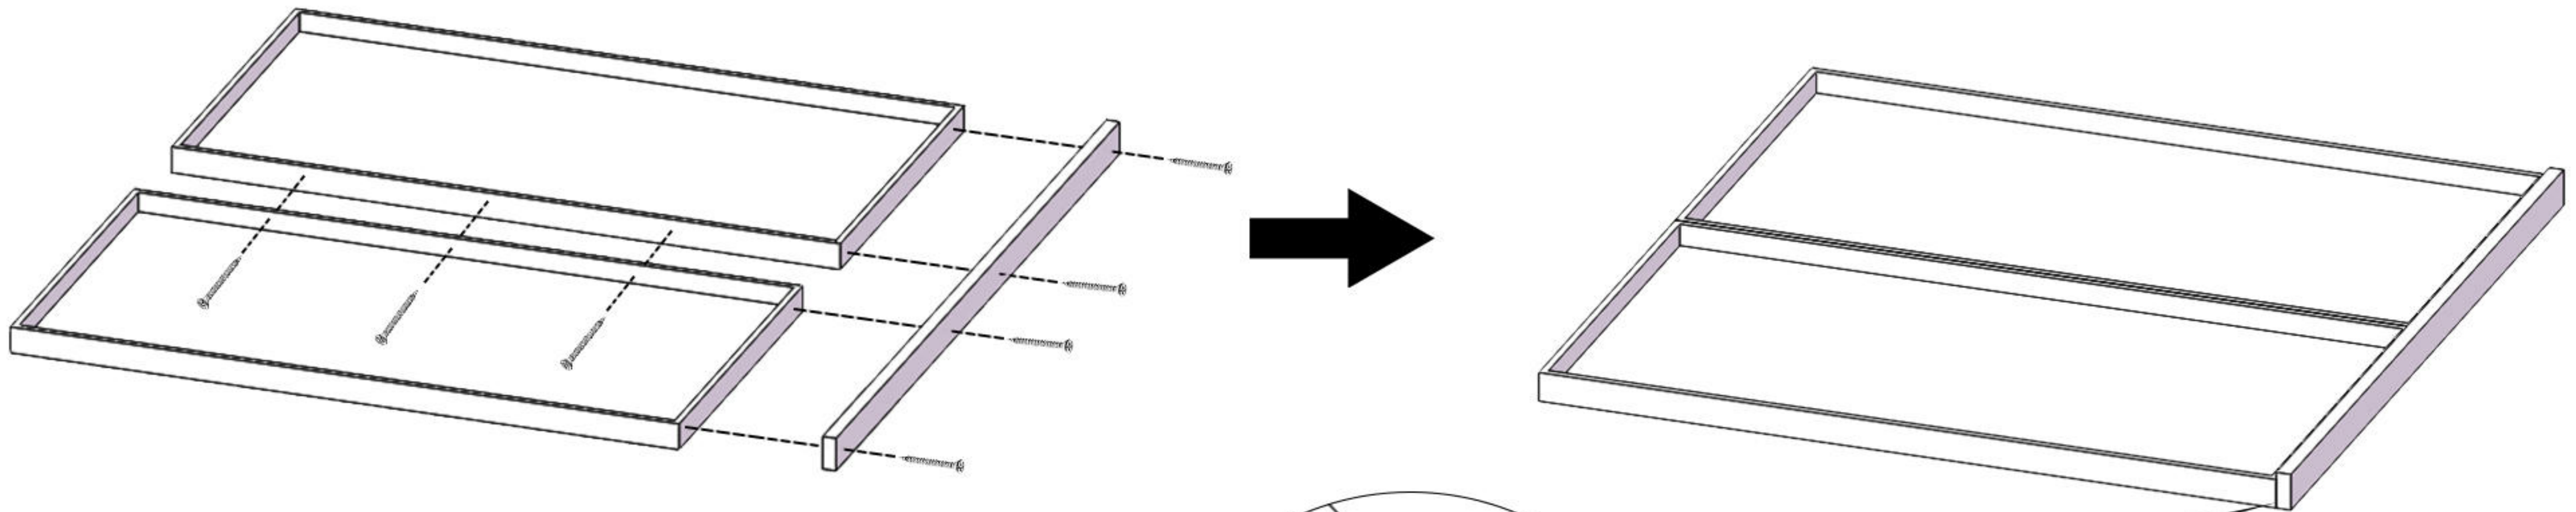

Secure the two L parts using 3 No. 4 screws.
(Check that they are level.)

Attach L2 to the L joint using 4 No. 4 screws.

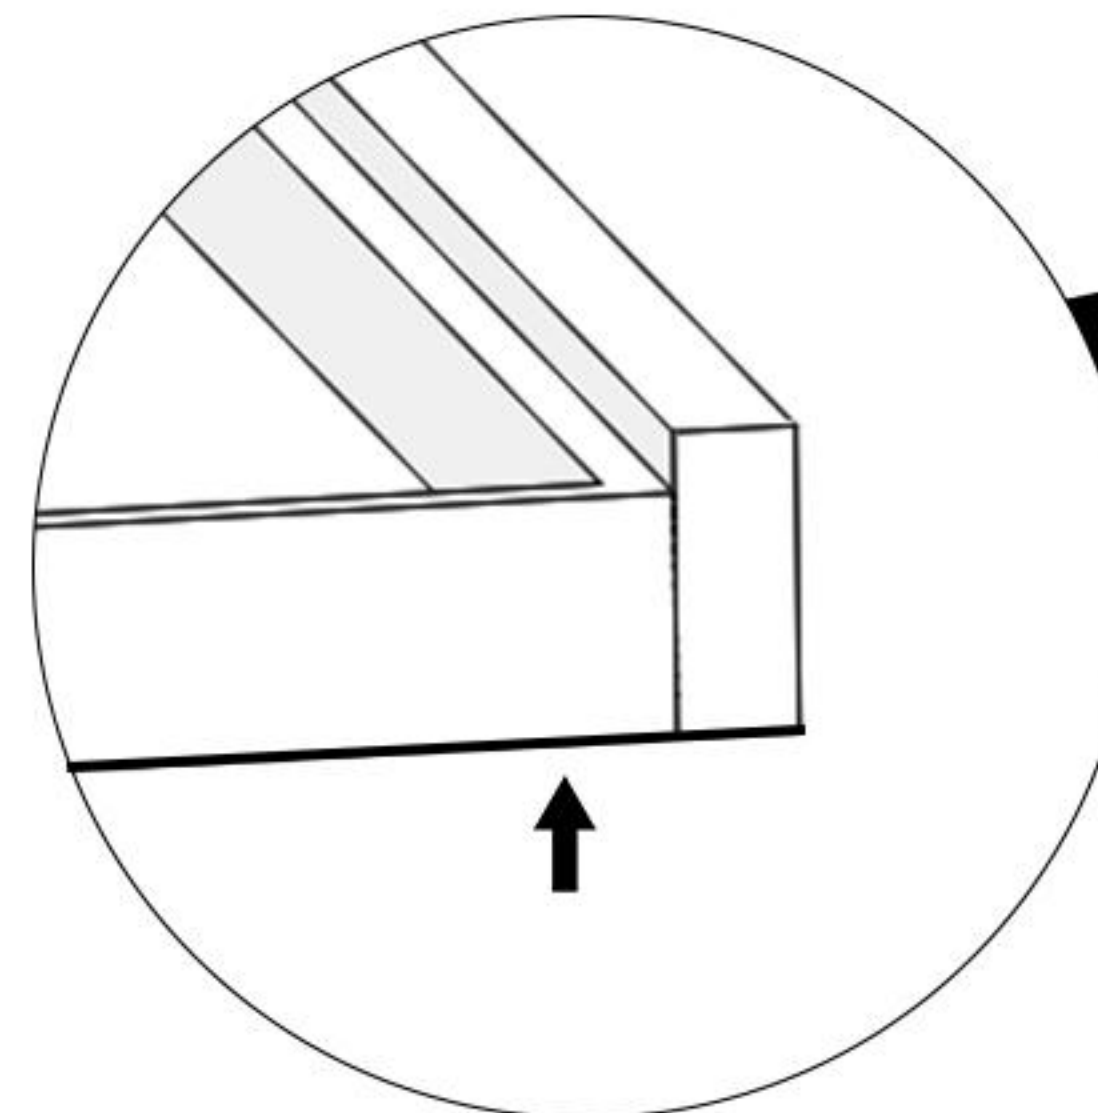


The bottoms of parts L and L2 are flush.

ASSEMBLY INSTRUCTION

STEP 12-2





STAMP ID	QTY REQ	BOX	IMAGE
L	2	B	

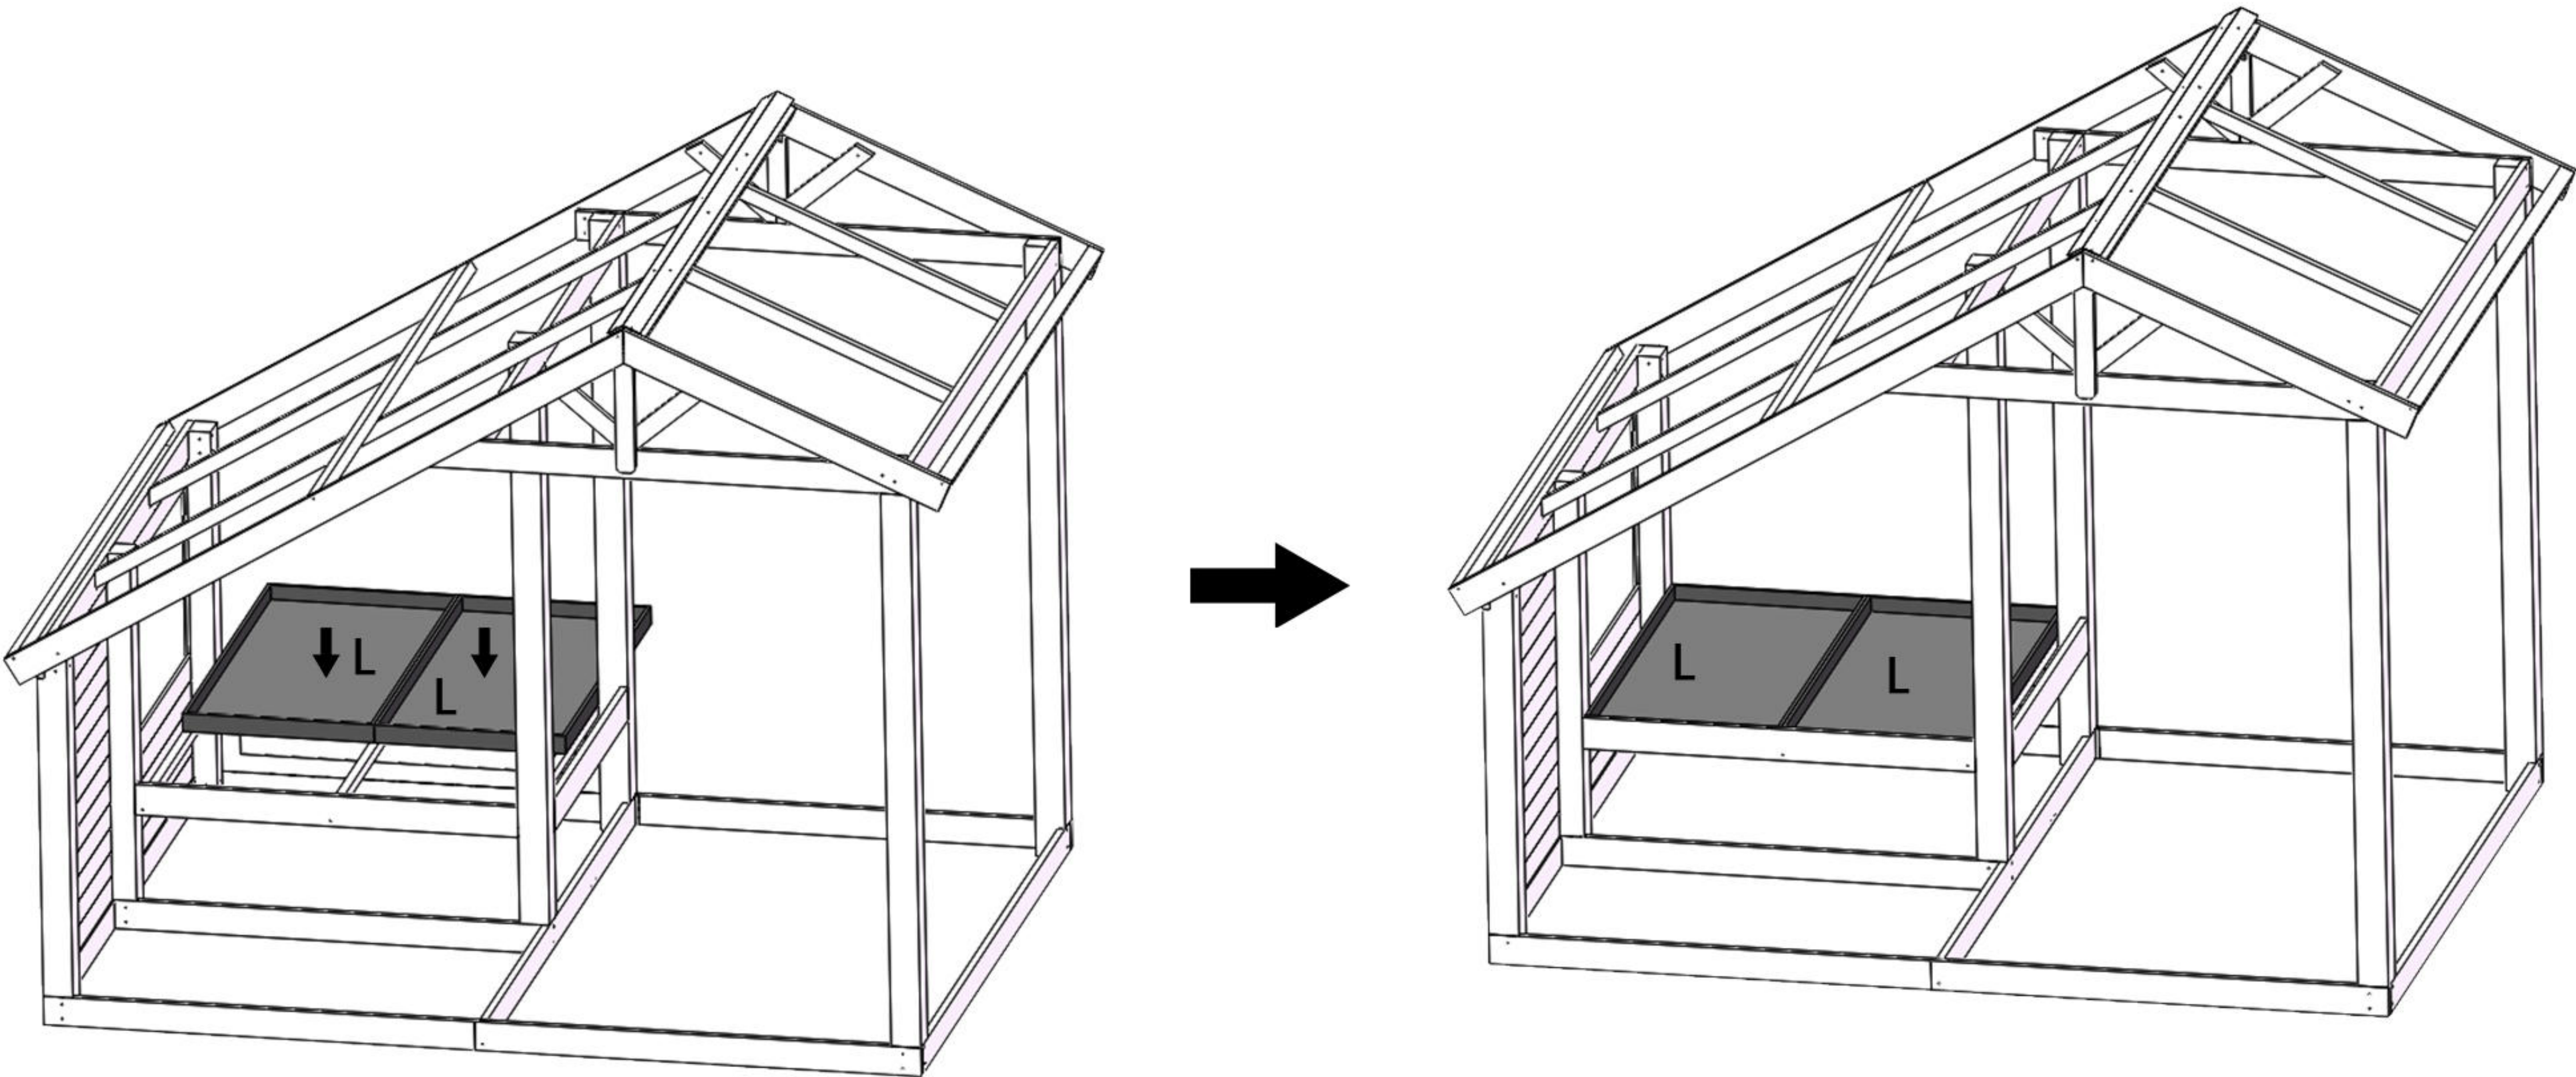


Place the L combinations onto the frame of the coop.

ASSEMBLY INSTRUCTION


STEP 13-1

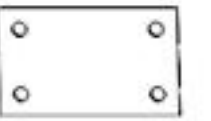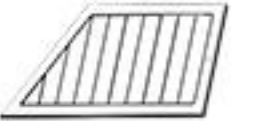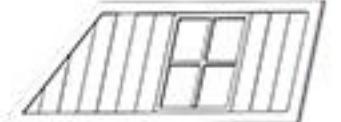STAMP ID	QTY REQ	BOX	IMAGE
1	4	A	
2	1	A	
N1	1	B	
3	16	A	 M4*20
M1	1	B	
V	1	B	
5	4	A	 M4*30



Secure metal part 1 to panels N1 and M1 using 3 No. 3 screws; repeat this process for the 3 additional metal parts 1.

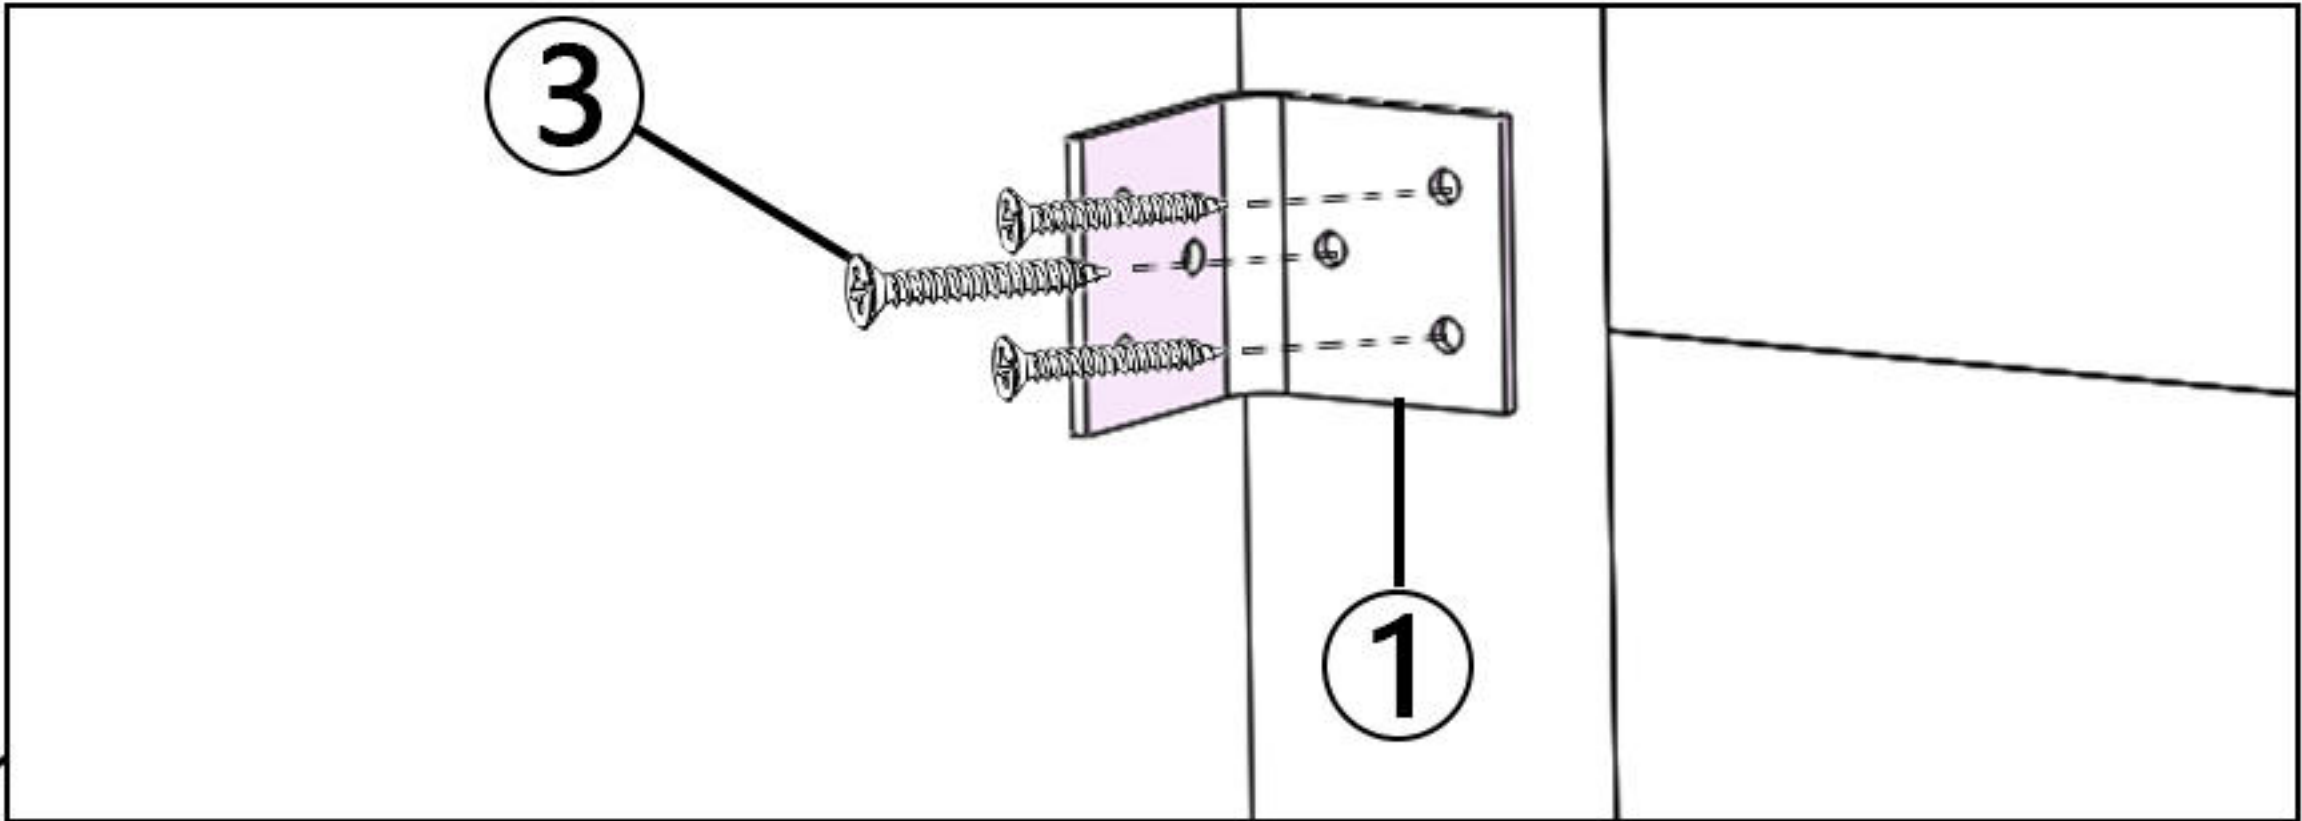

Connect panels N1 and M1 together by securing them with metal part 2 and 4 No. 3 screws.

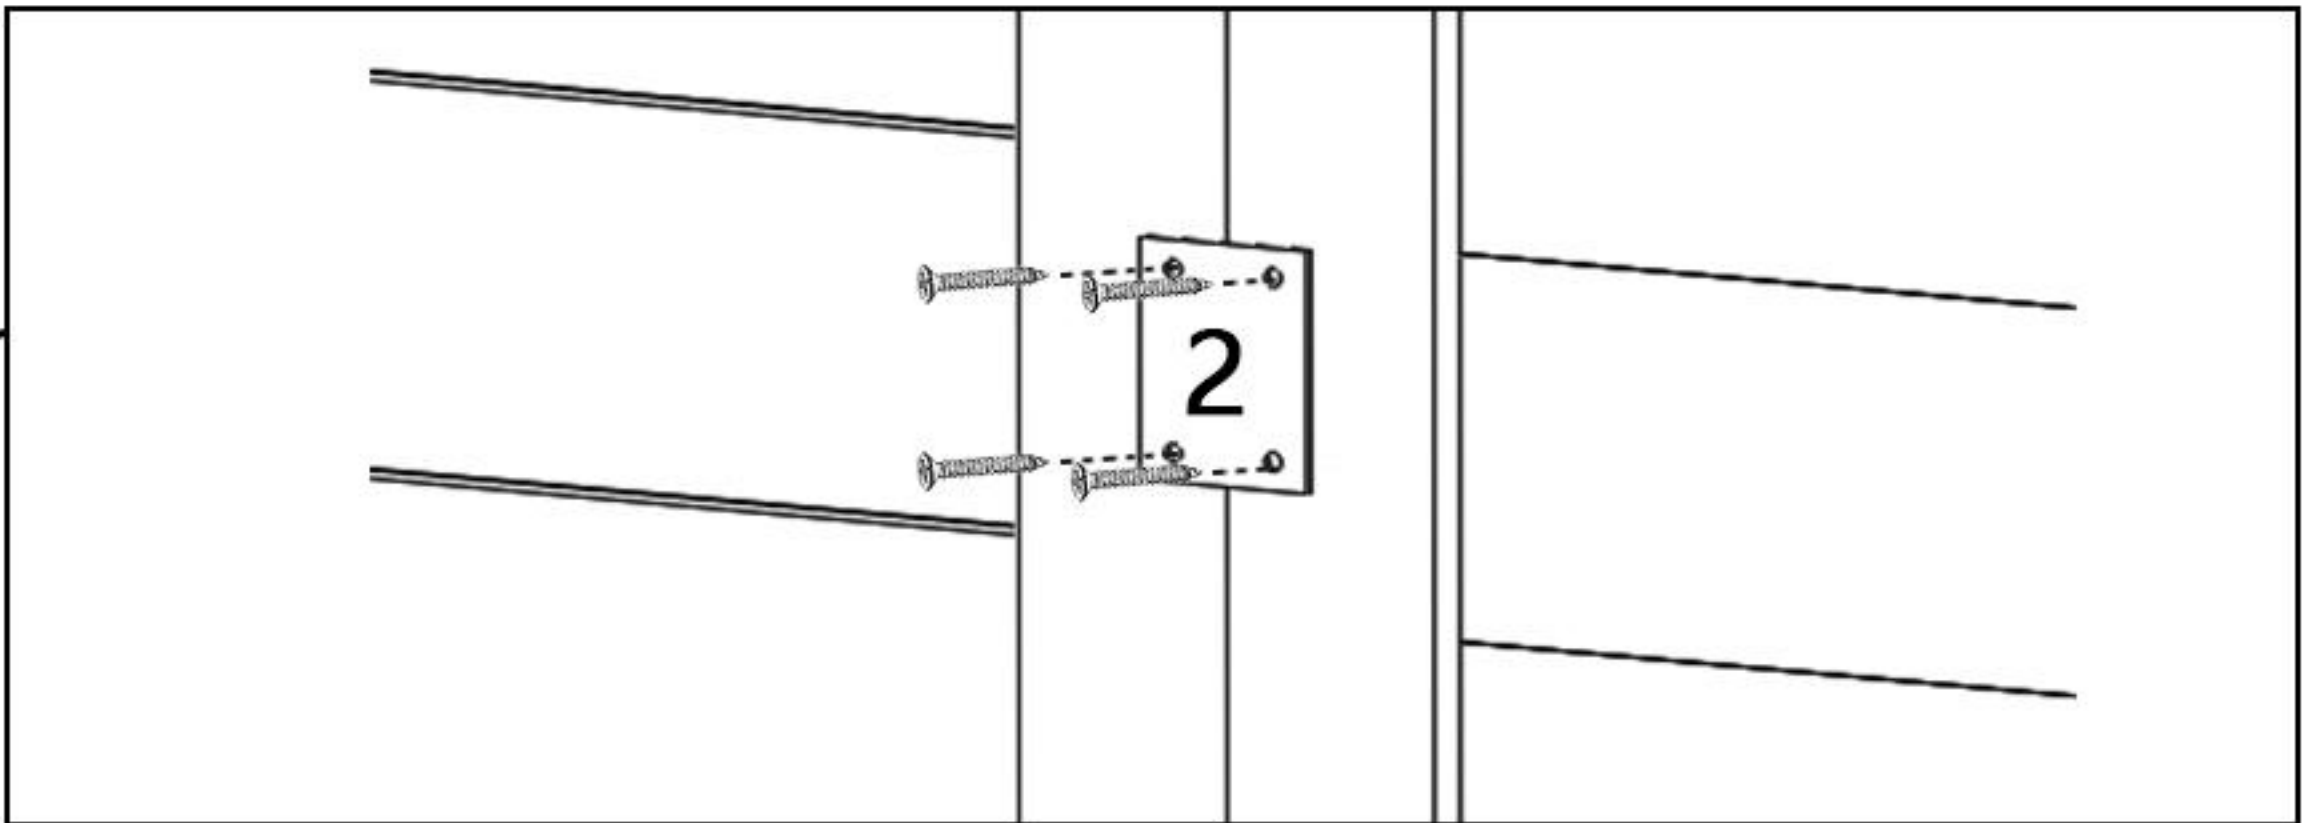


Use 4 No. 5 screws to secure Part V to N1 and M1.

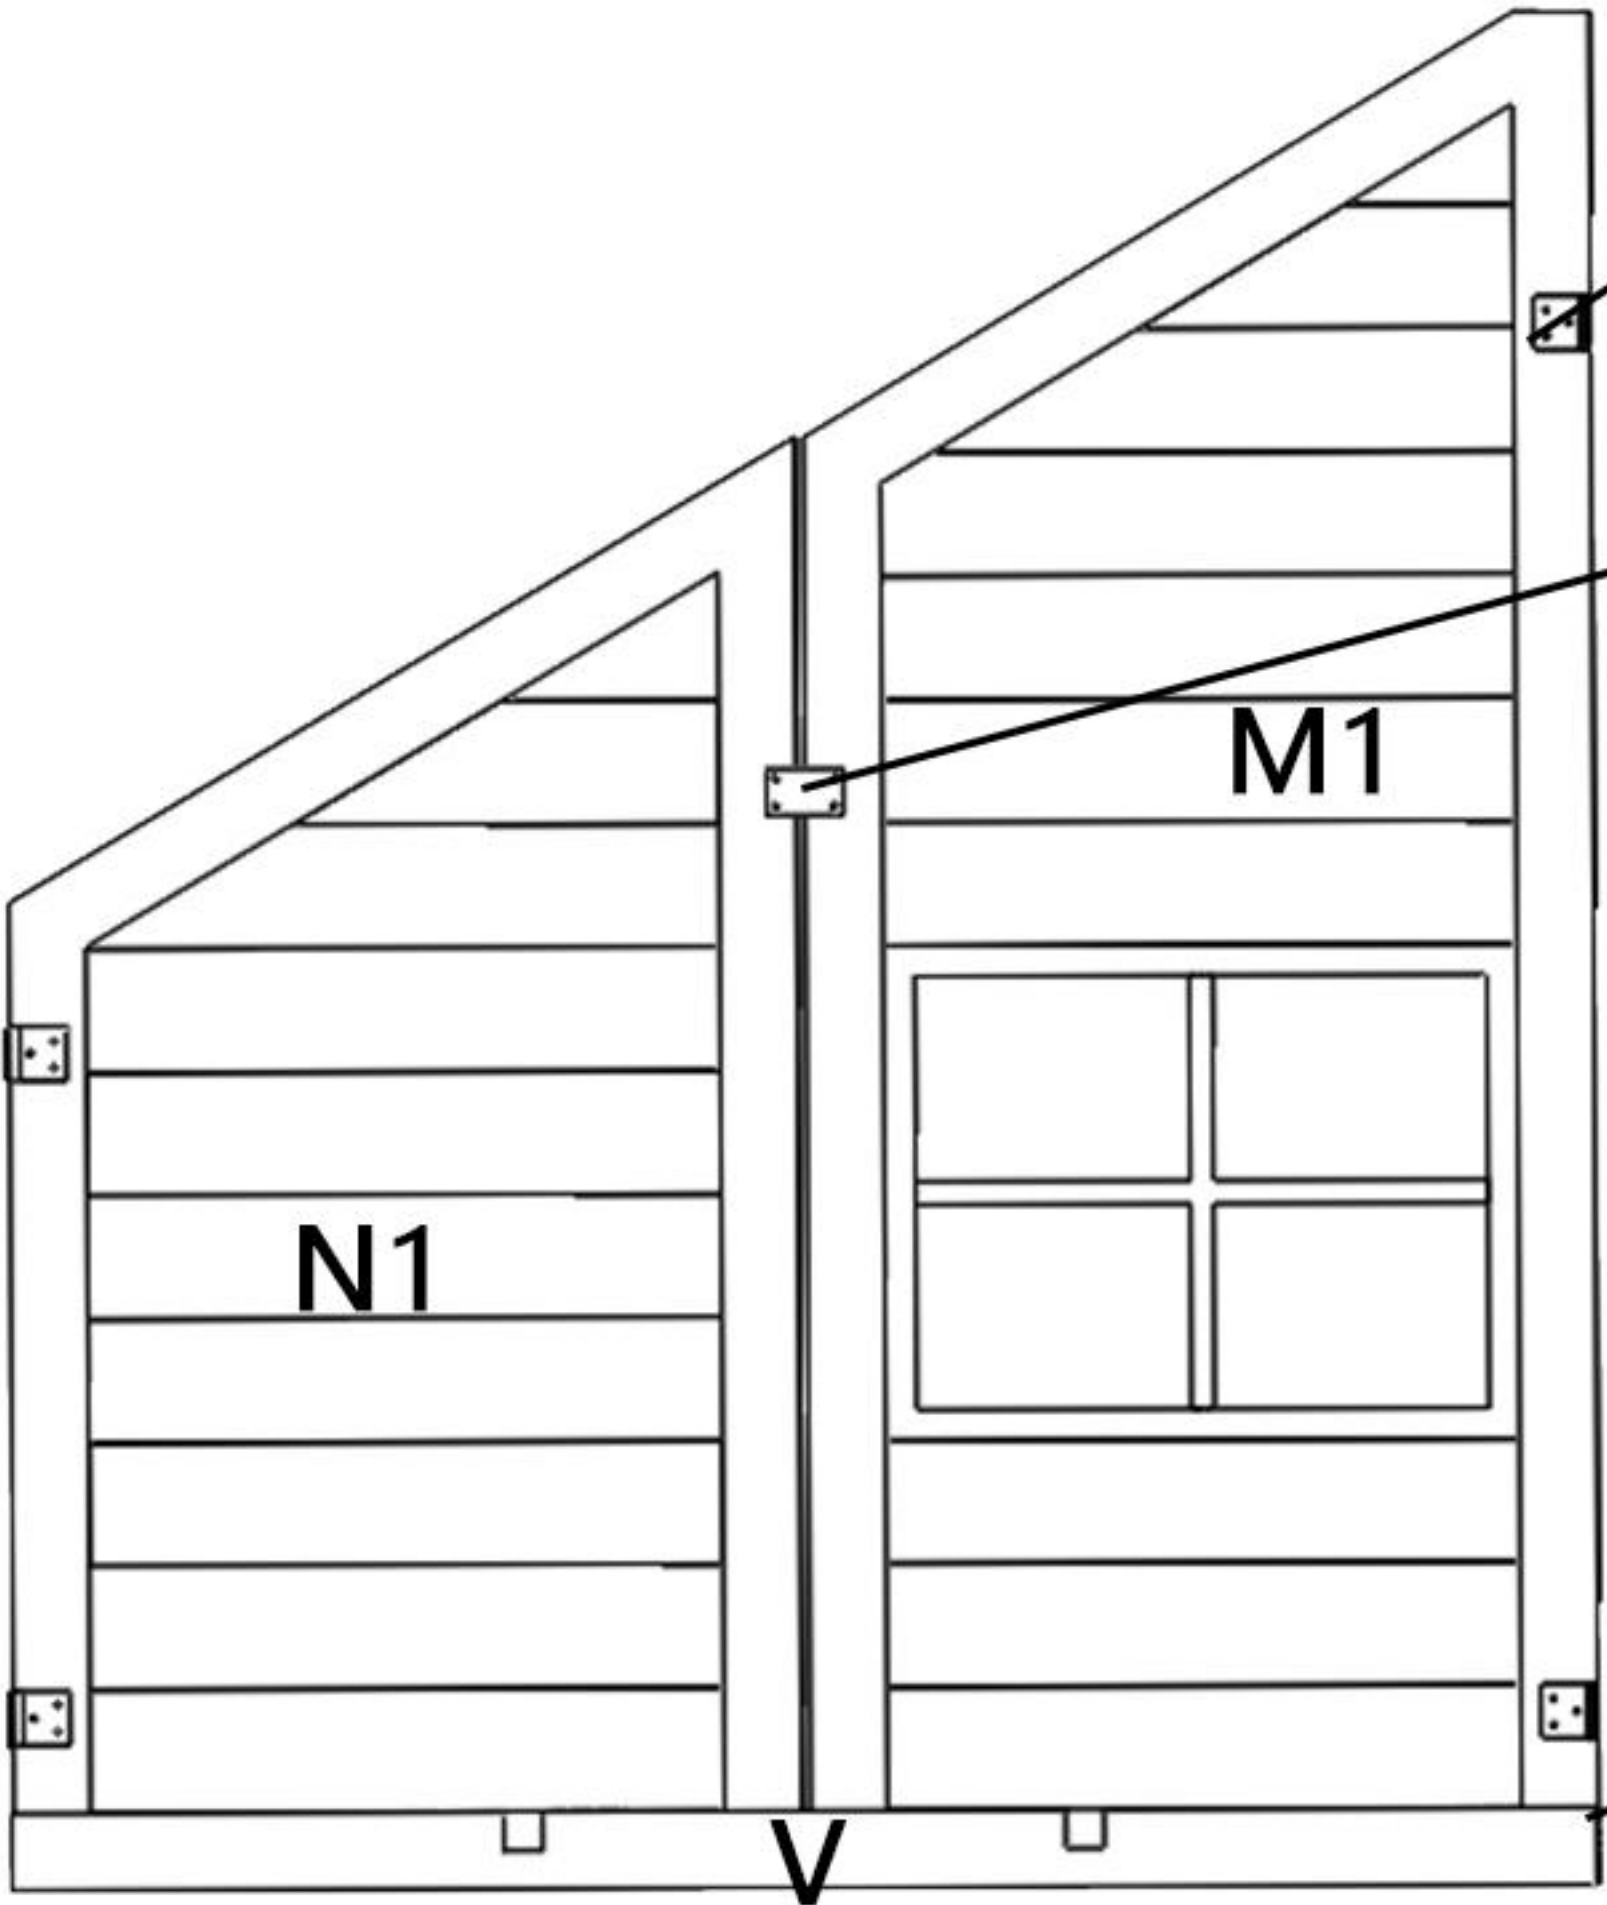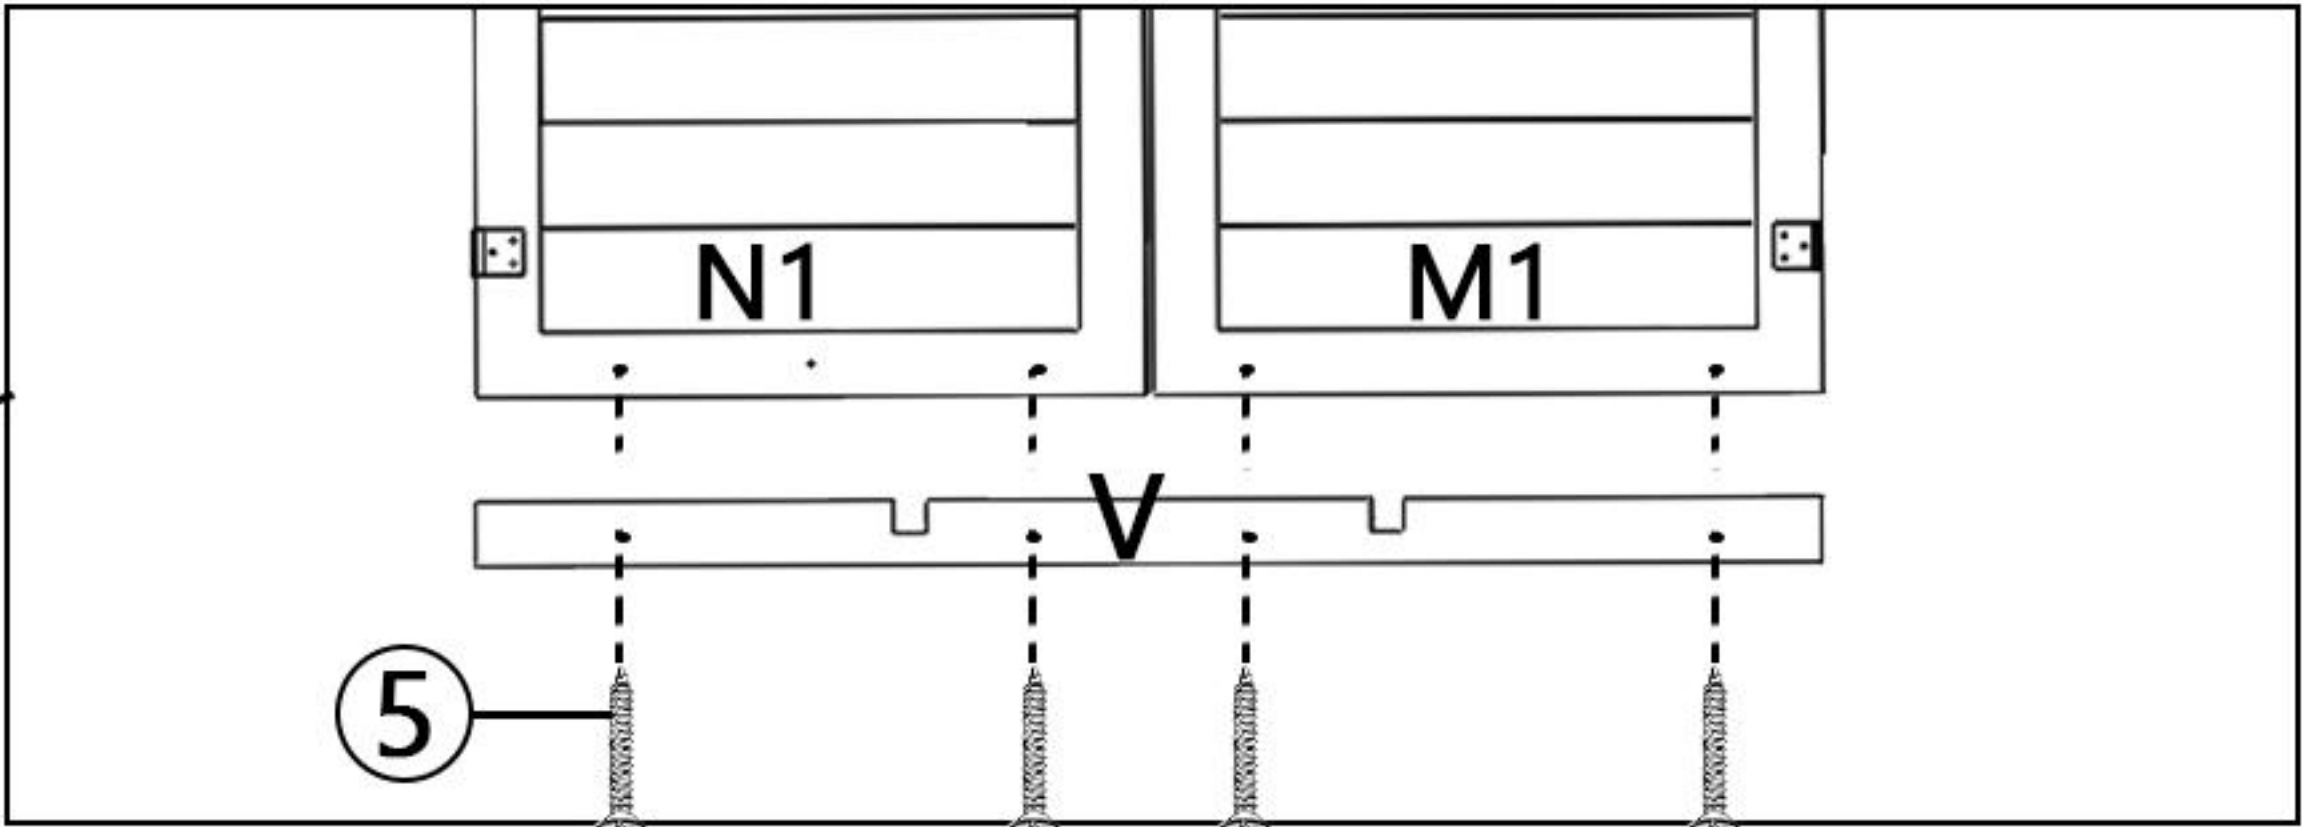

ASSEMBLY INSTRUCTION



STEP 13-2

STAMP ID	QTY REQ	BOX	IMAGE
	1		
3	12	A	 M4*20
5	4	A	 M4*30

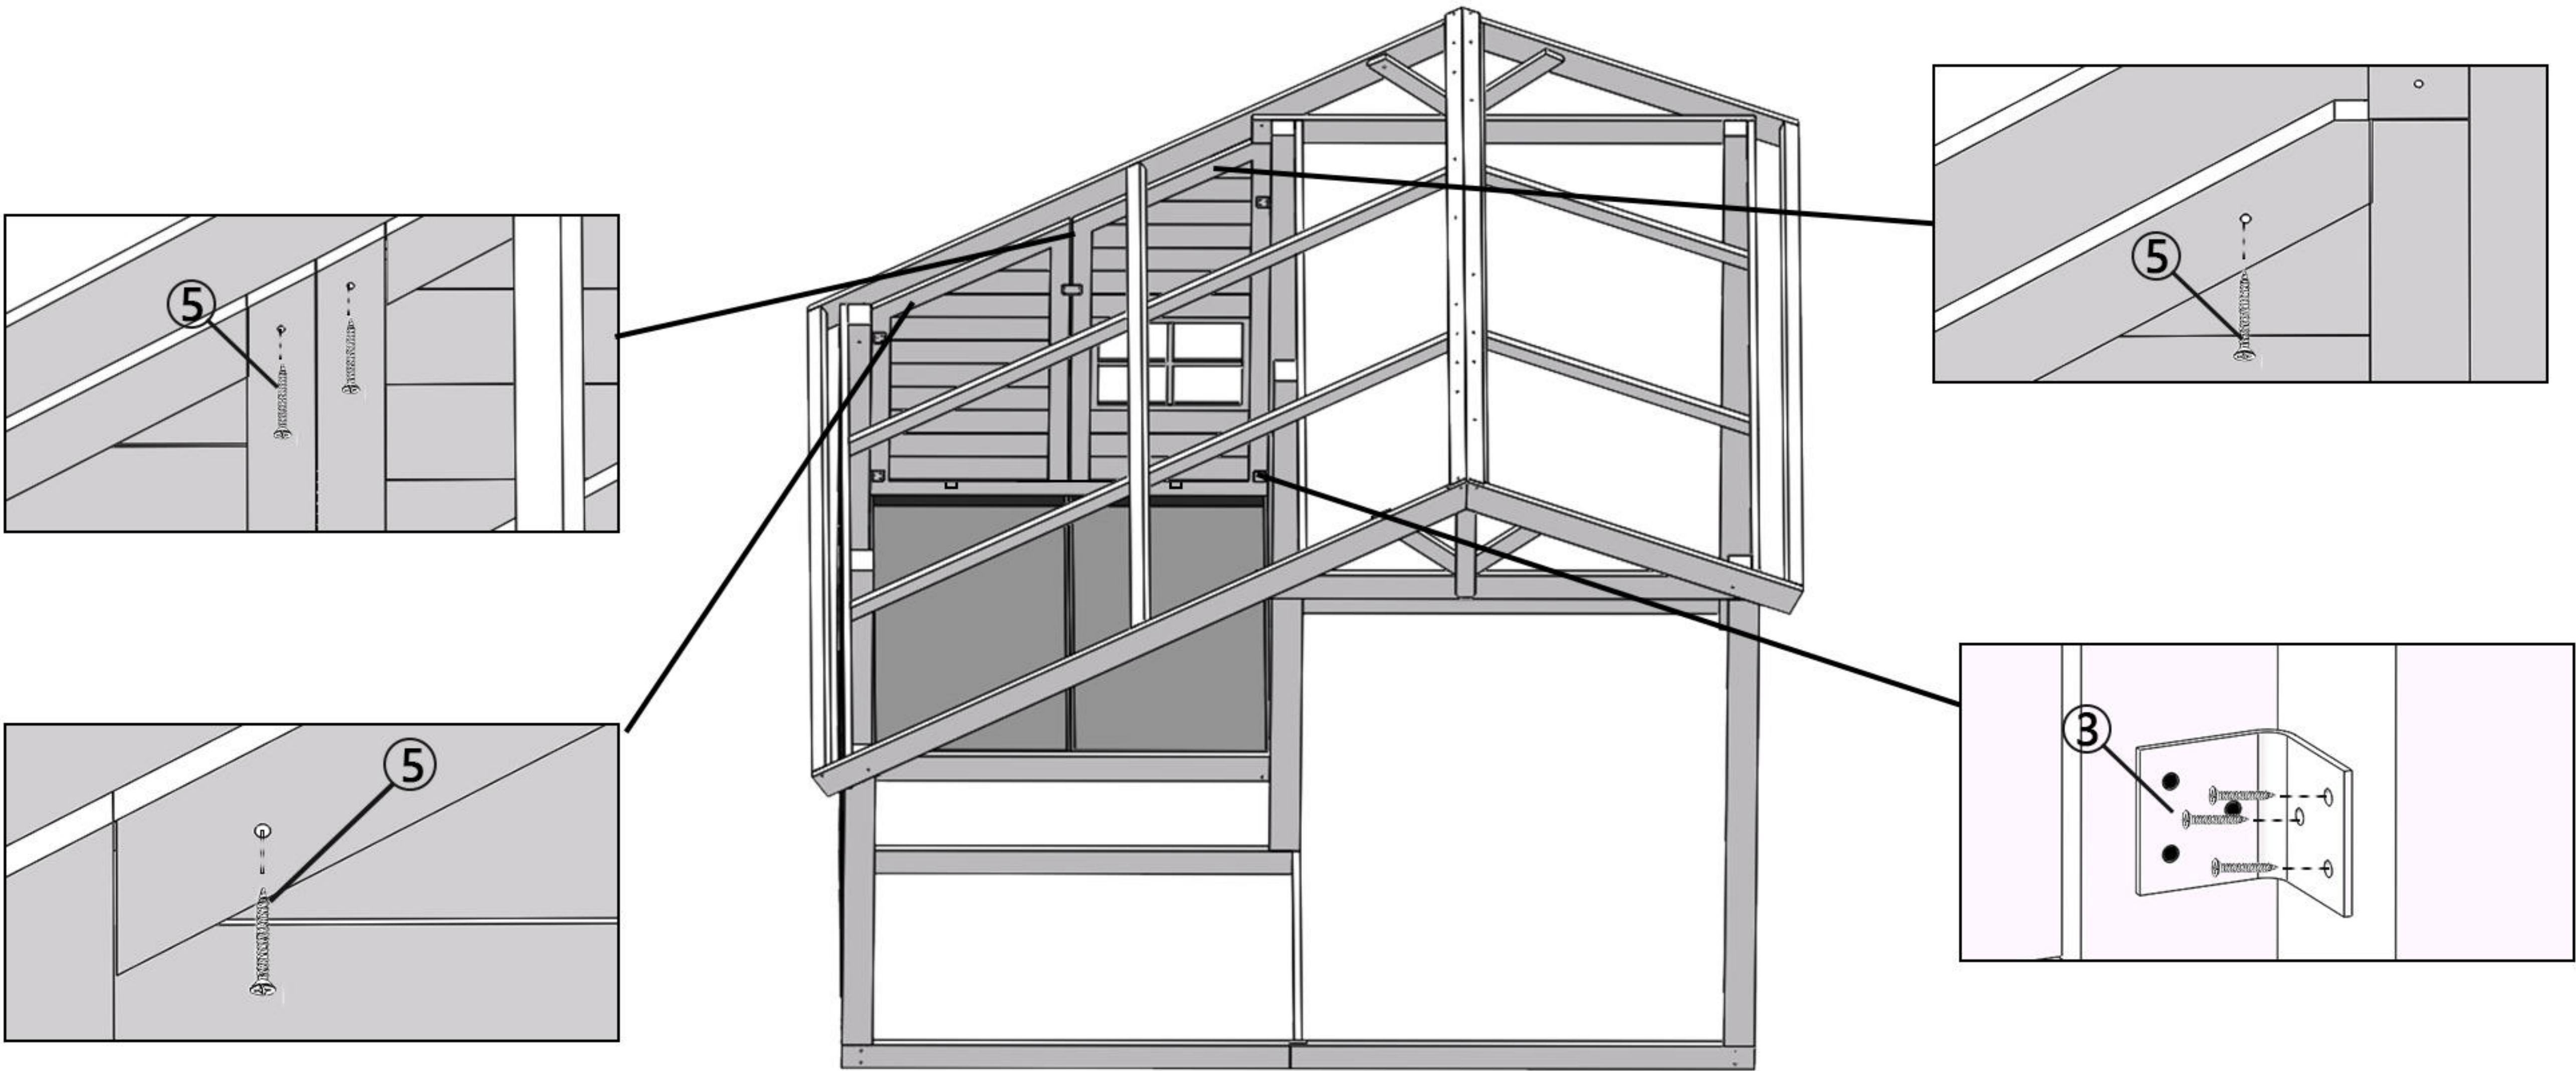


ASSEMBLY INSTRUCTION

STEP 14


STAMP ID	QTY REQ	BOX	IMAGE
1	4	A	
2	2	A	
3	32	A	 M4*20
M2	1	B	
N2	1	B	

Use part 2 and No.3 screws to connect Panel M2 and Panel N2. A total of 8 No.3 screws are used.

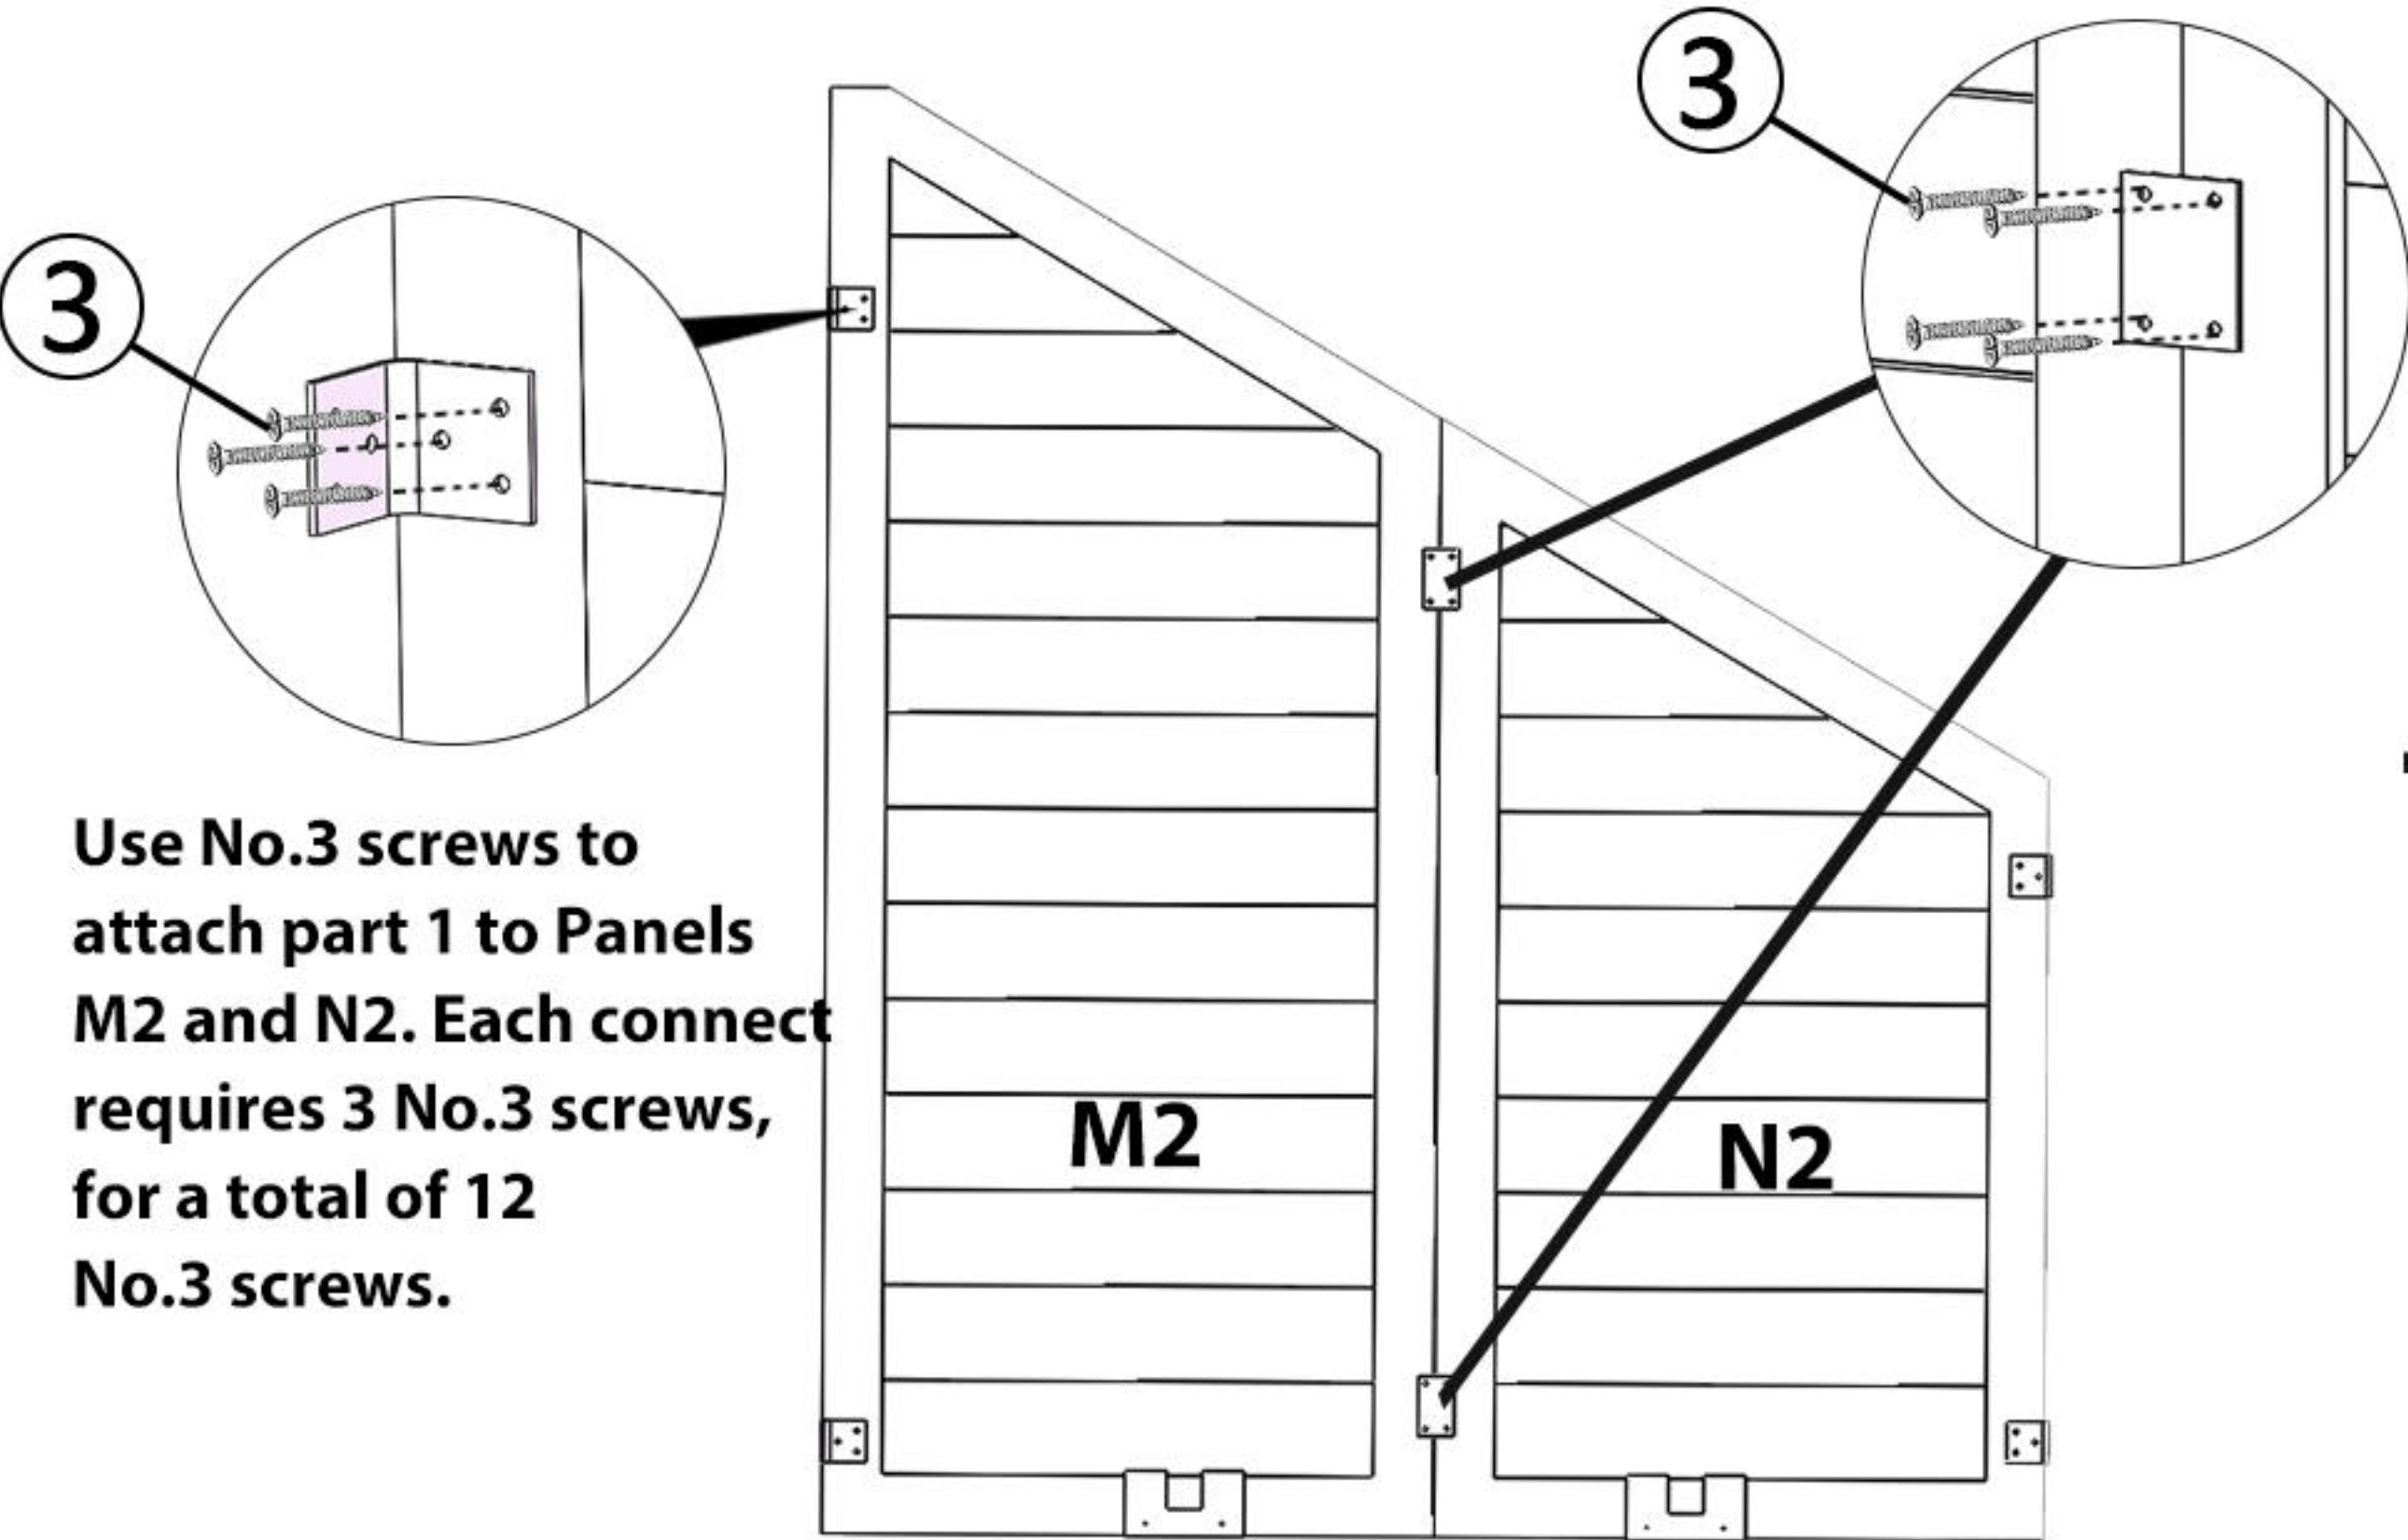




Use No.3 screws to attach part 1 to Panels M2 and N2. Each connect requires 3 No.3 screws, for a total of 12 No.3 screws.

Use No. 3 screws to fix the combined panel (M2&N2) to the frame via part No. 1, using a total of 12 No.3 screws.


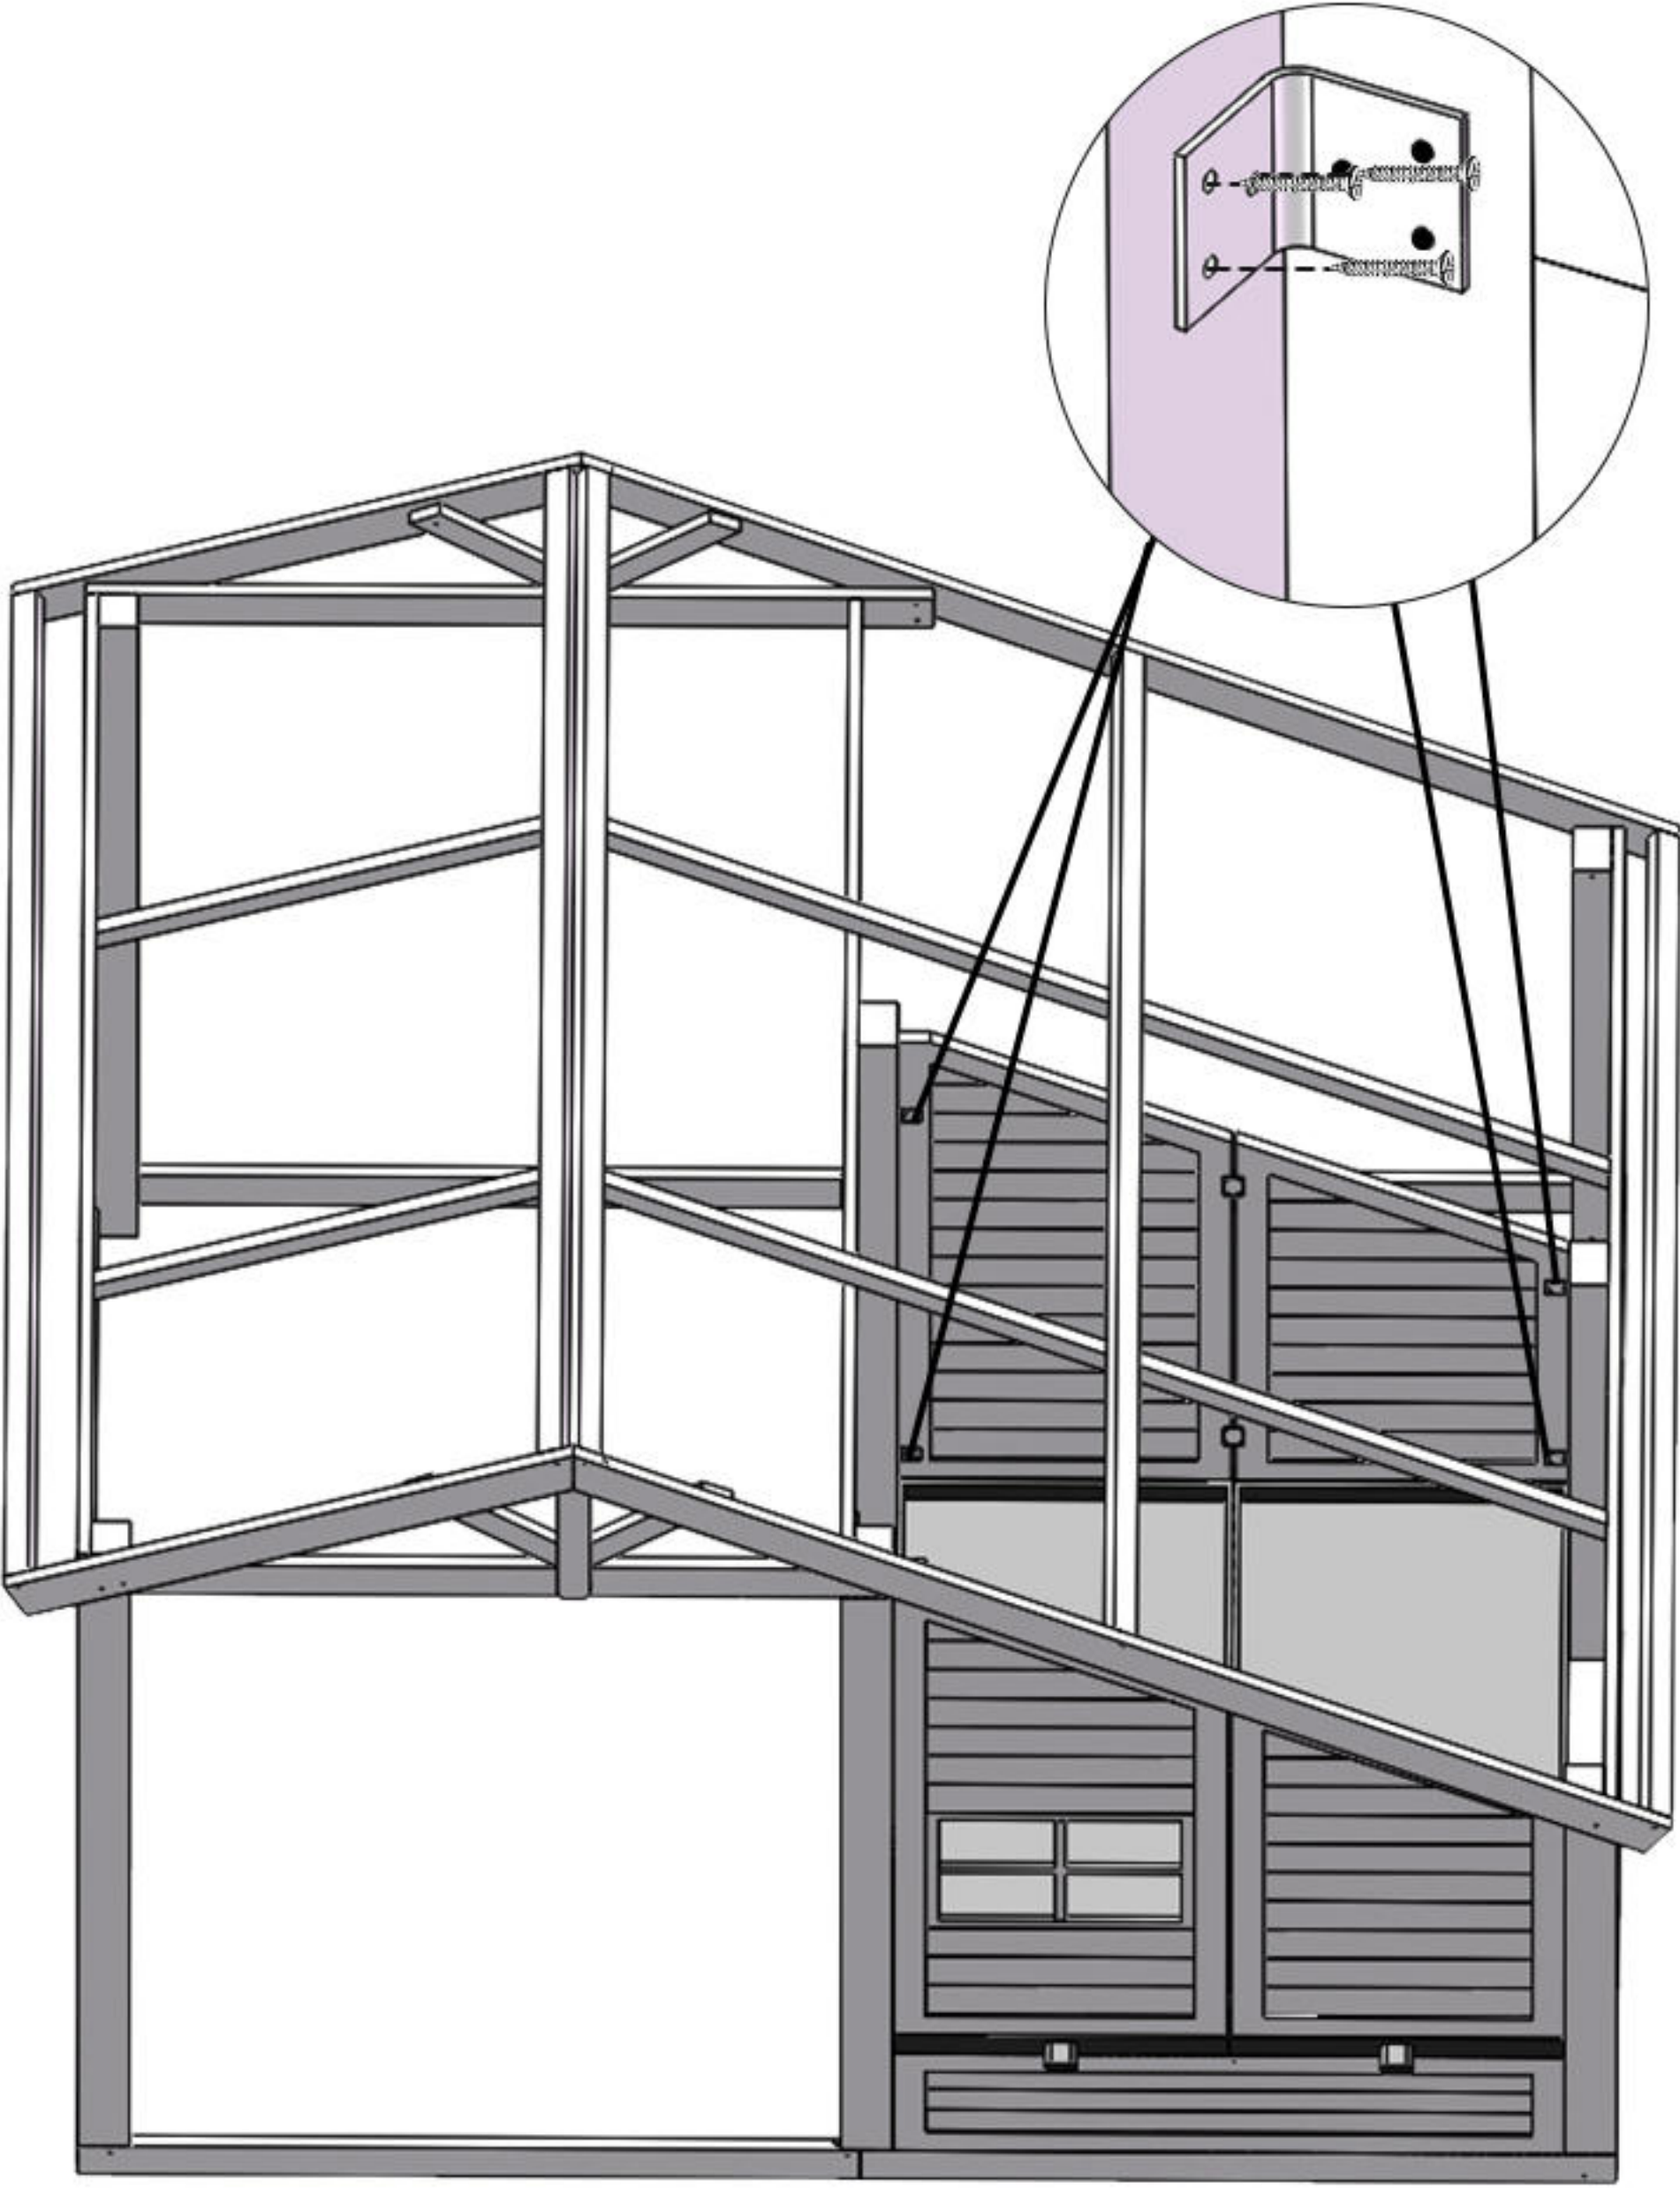


ASSEMBLY INSTRUCTION




STEP 15

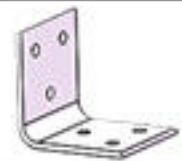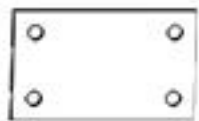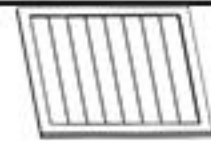STAMP ID	QTY REQ	BOX	IMAGE
1	7	A	
2	1	A	
3	46	A	 M4*20
F4	1	B	
F5	1	C	

Use 3 No.3 screws to secure metal part 1 with F4 and F5, 7 connections in total.

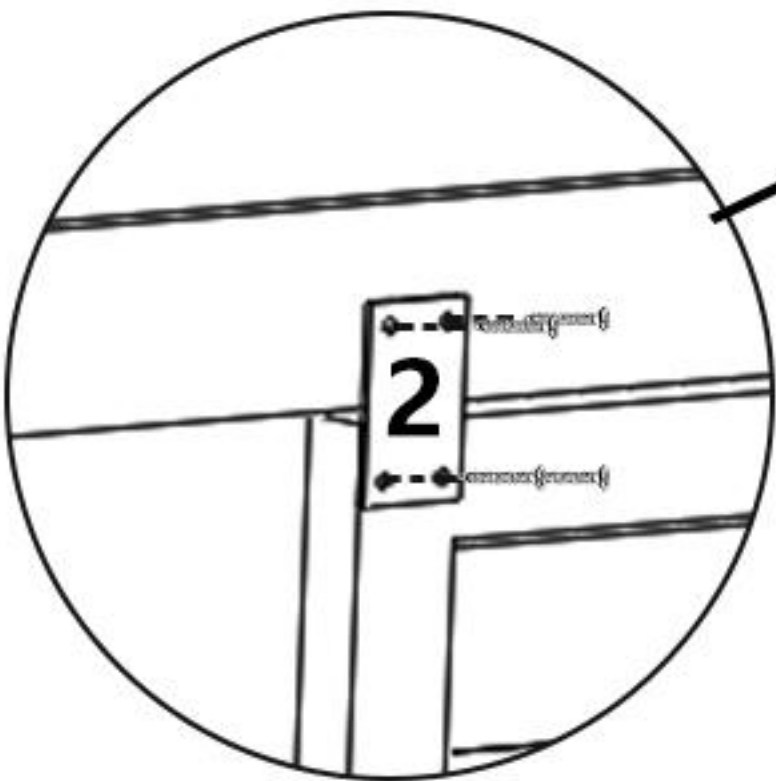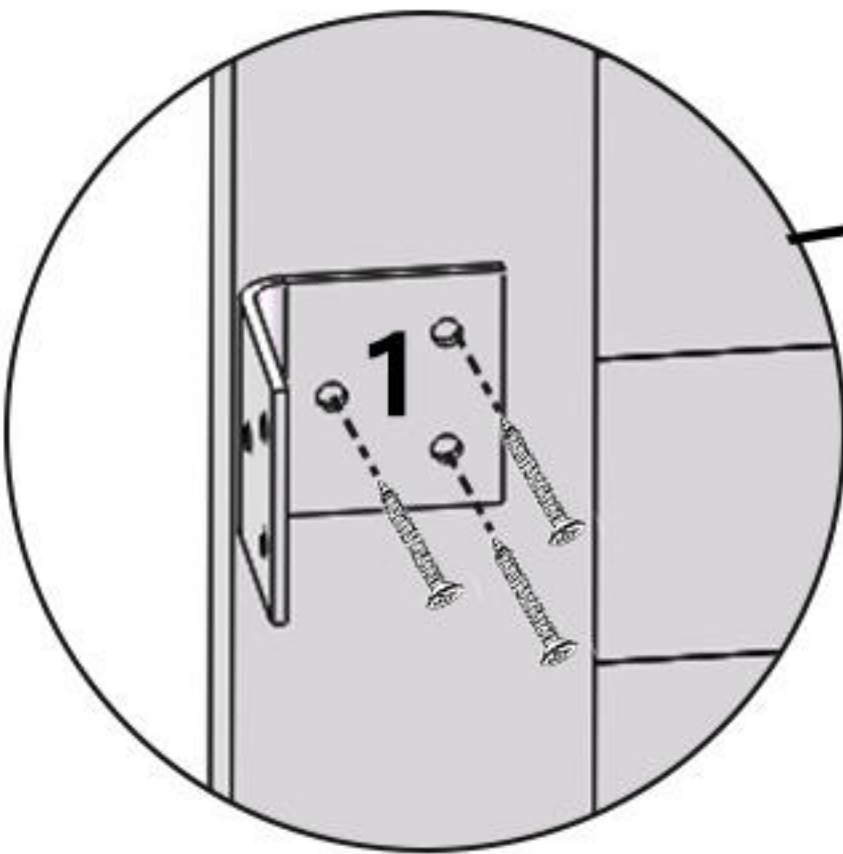





Use 4 No.3 screws to secure metal part 2 with F4 and F5.

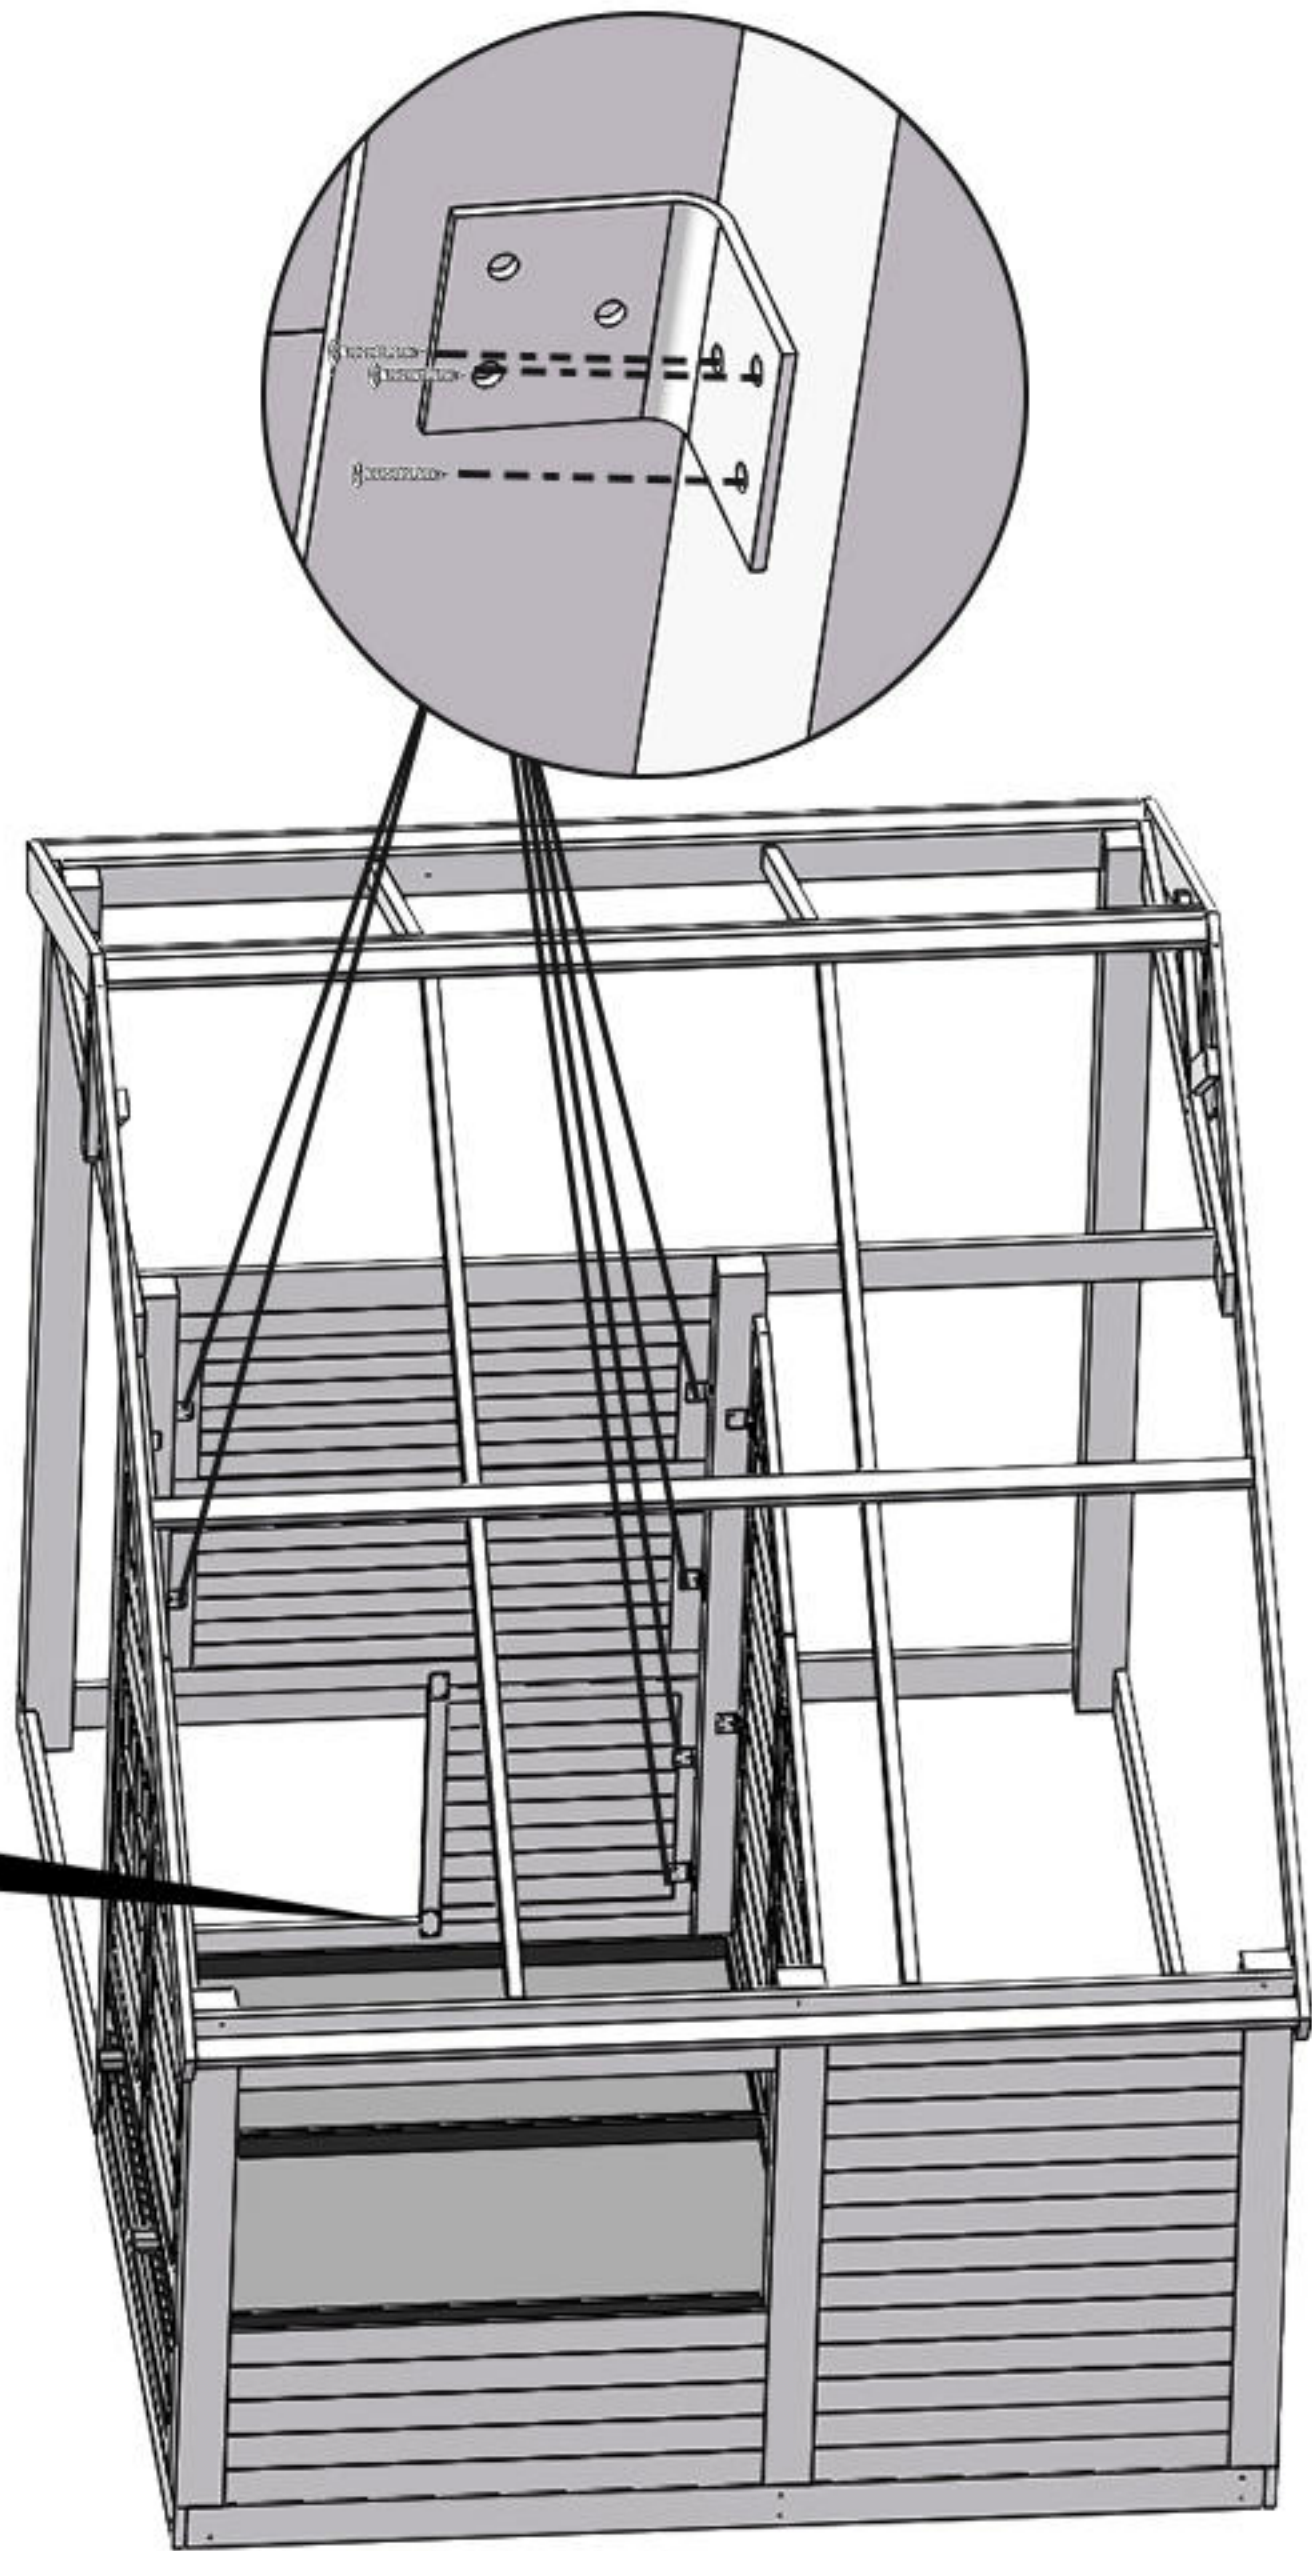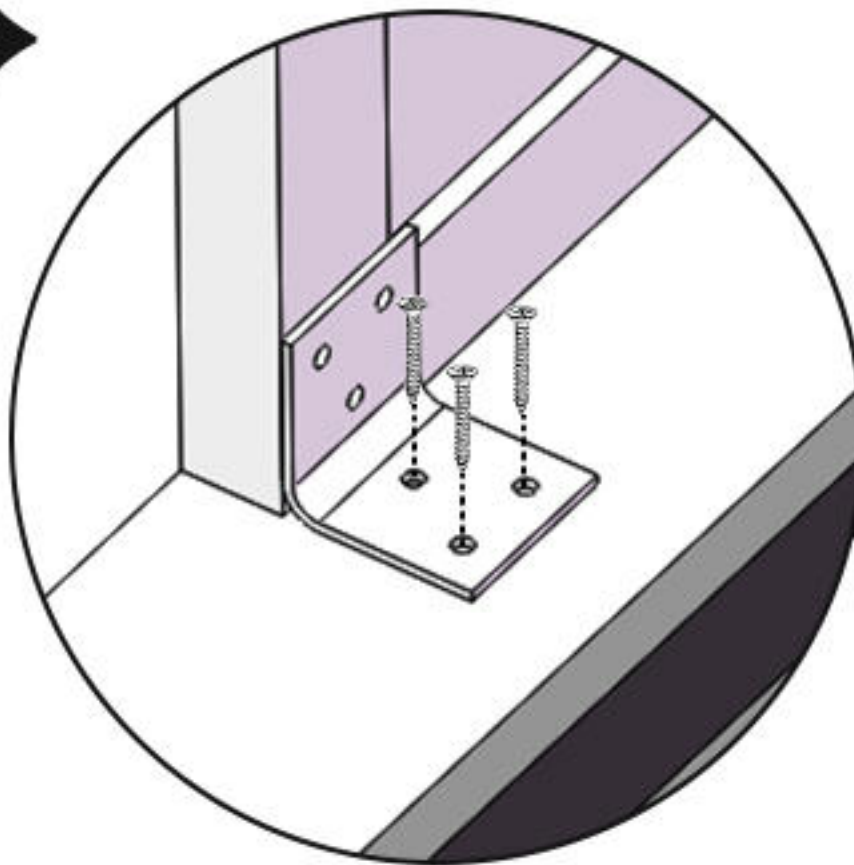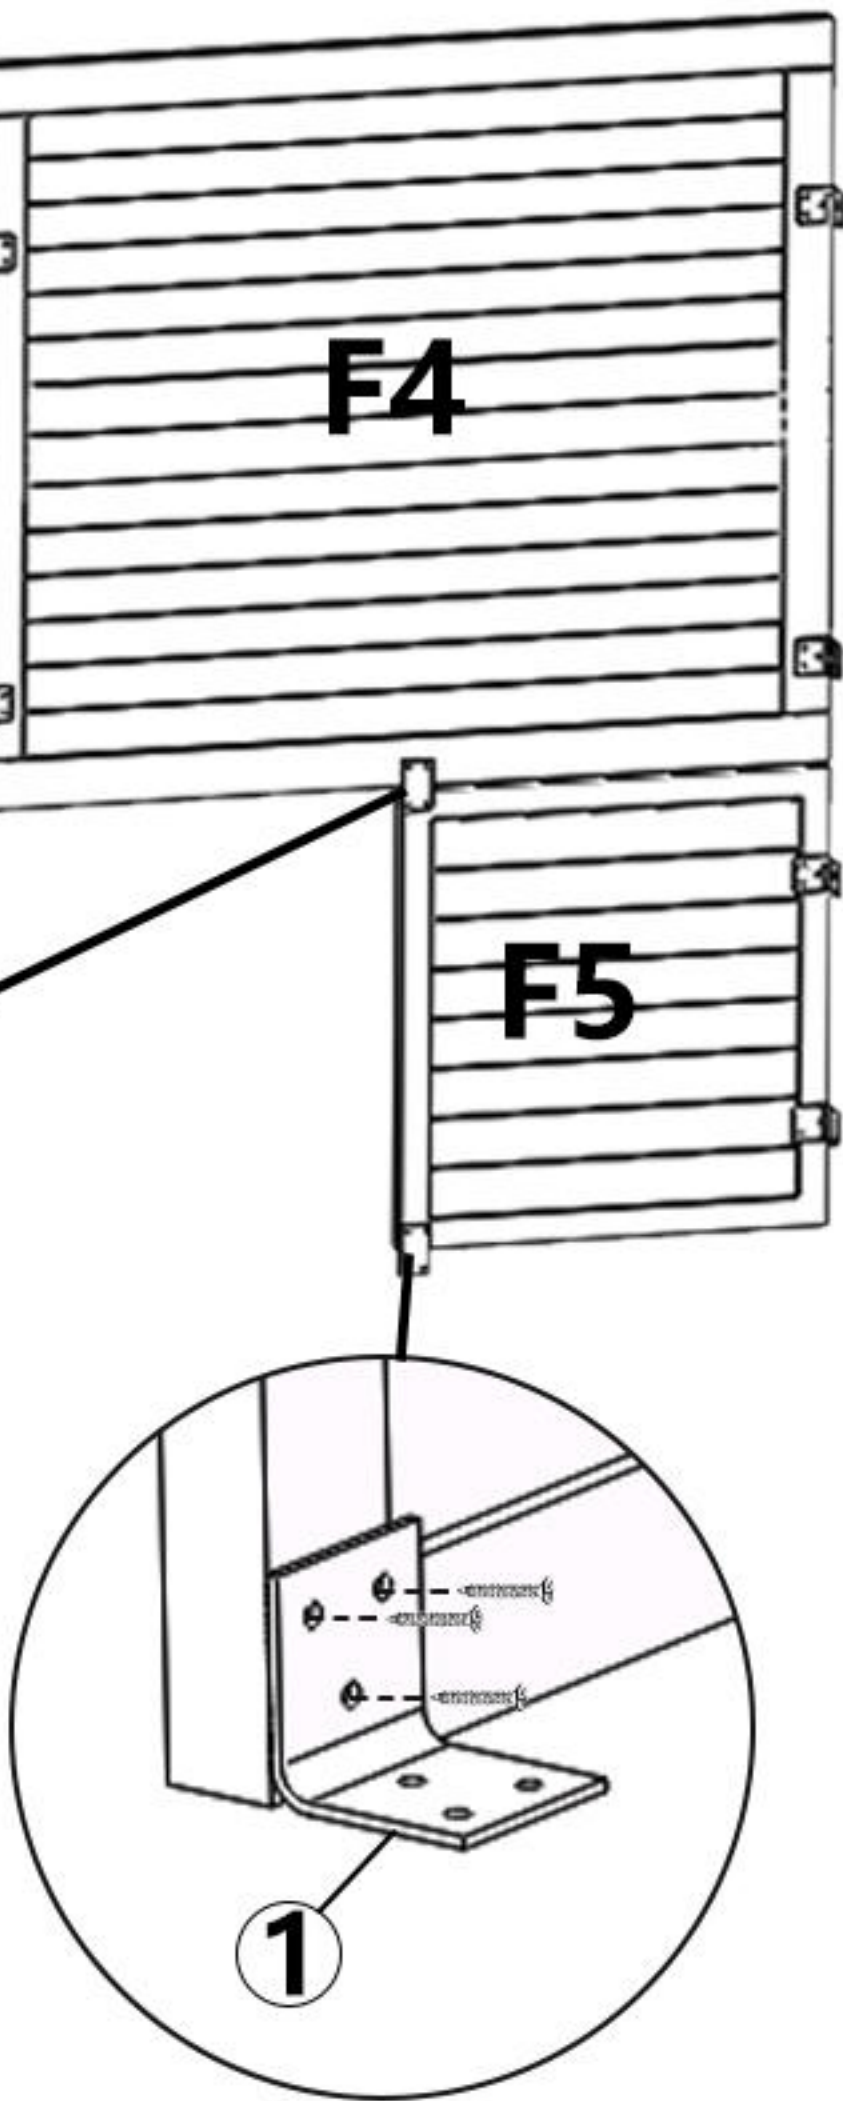

ASSEMBLY INSTRUCTION


STEP 16


STAMP ID	QTY REQ	BOX	IMAGE
T	2	A	

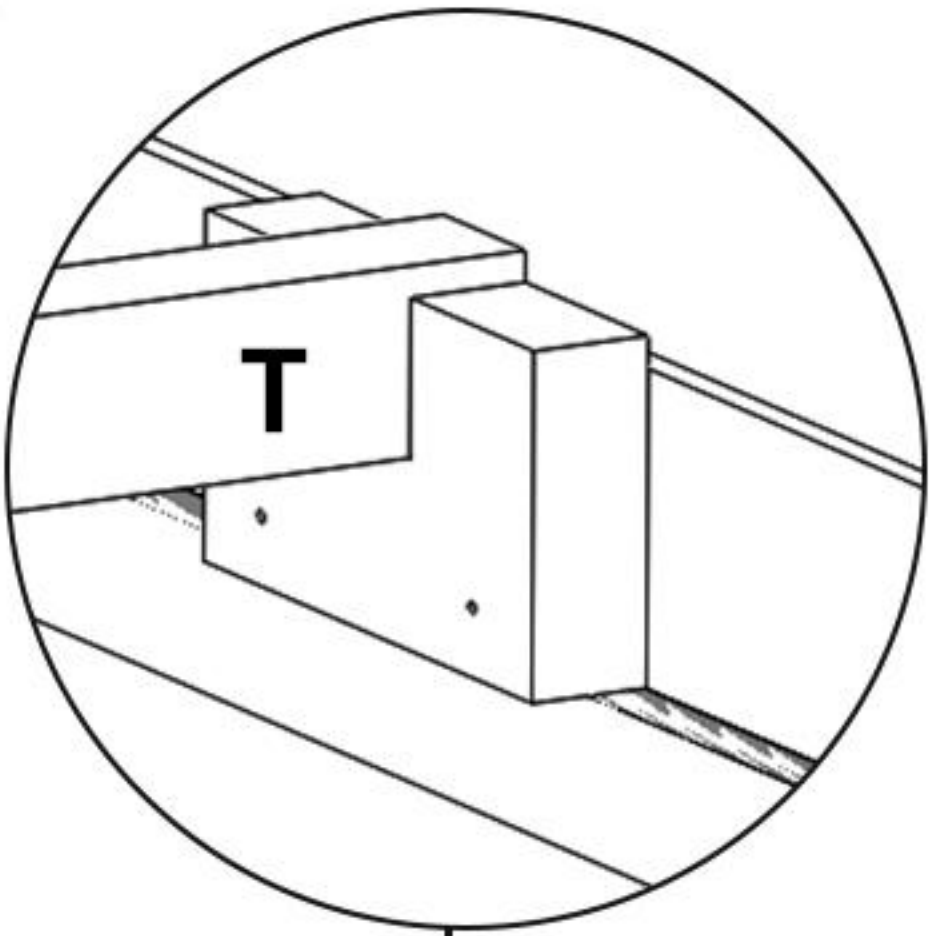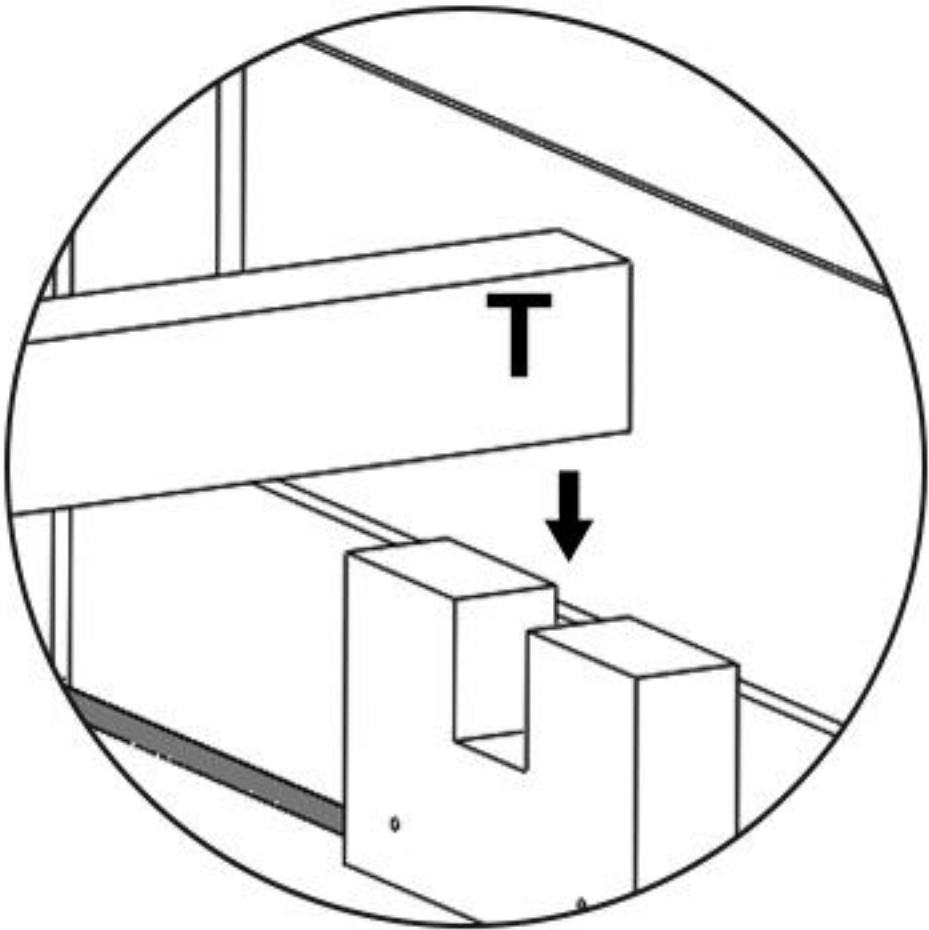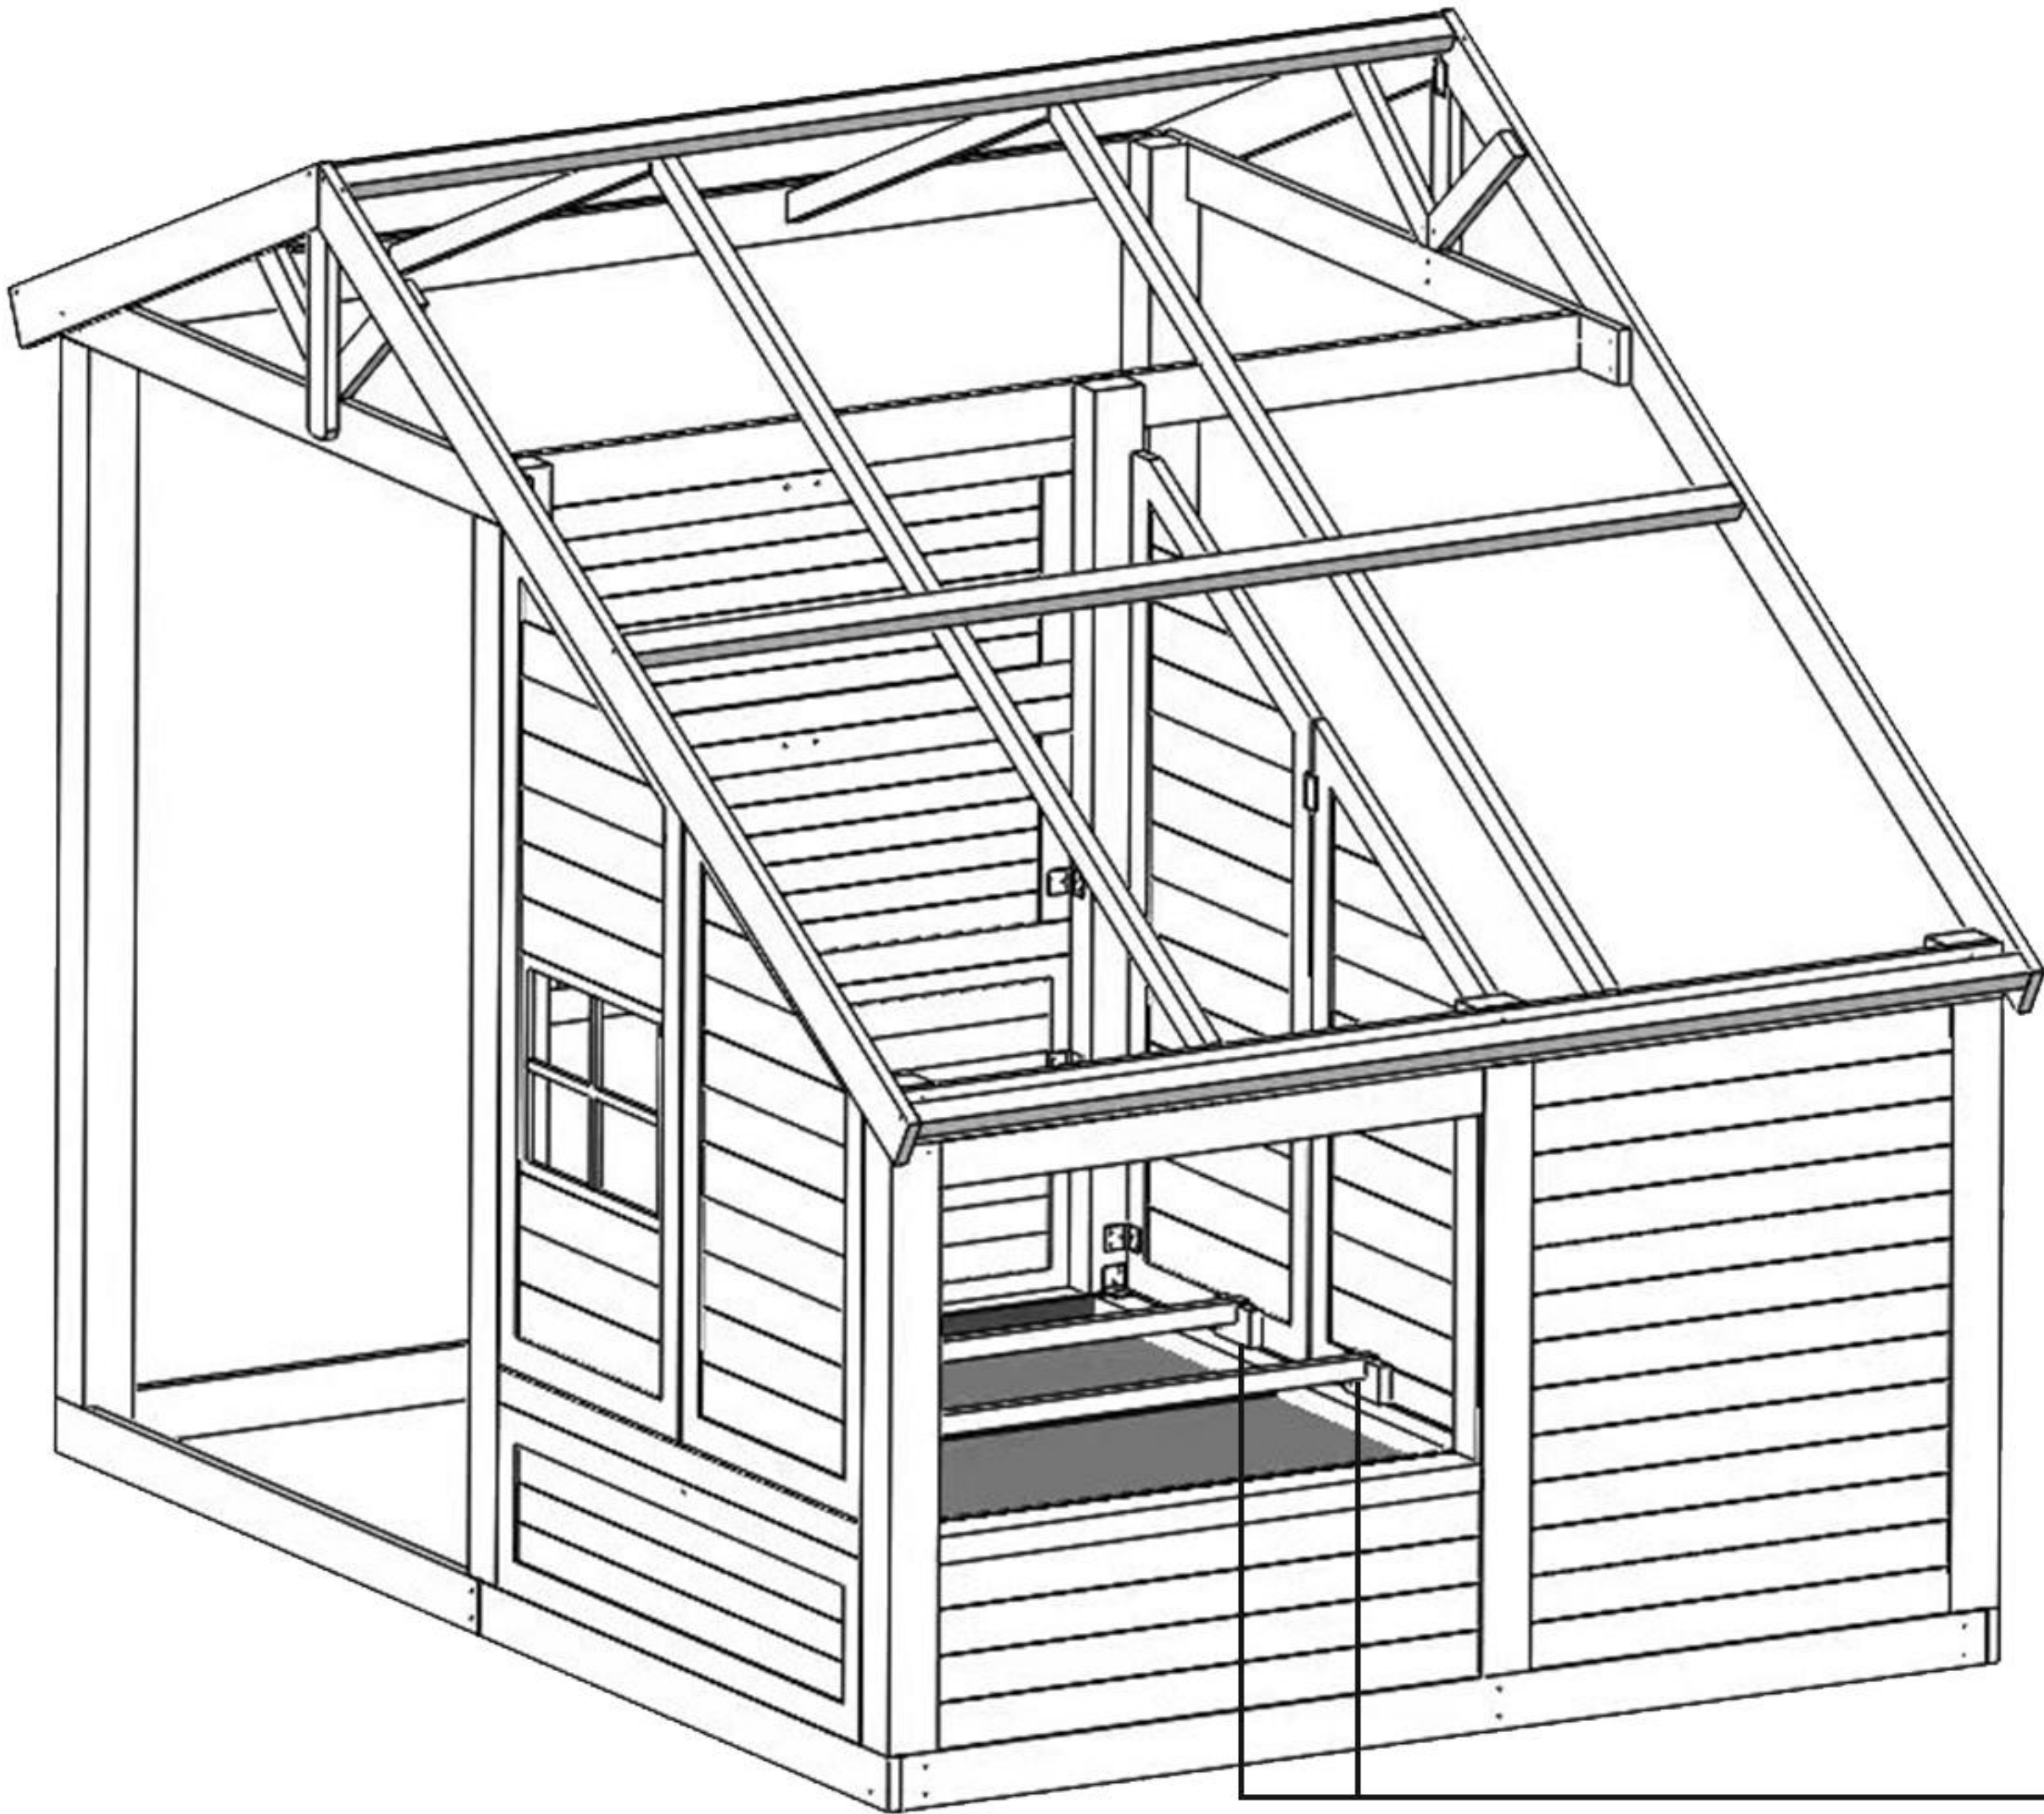


ASSEMBLY INSTRUCTION

STEP 17

STAMP ID	QTY REQ	BOX	IMAGE	
S	4	C		
7	17	A		M4*35

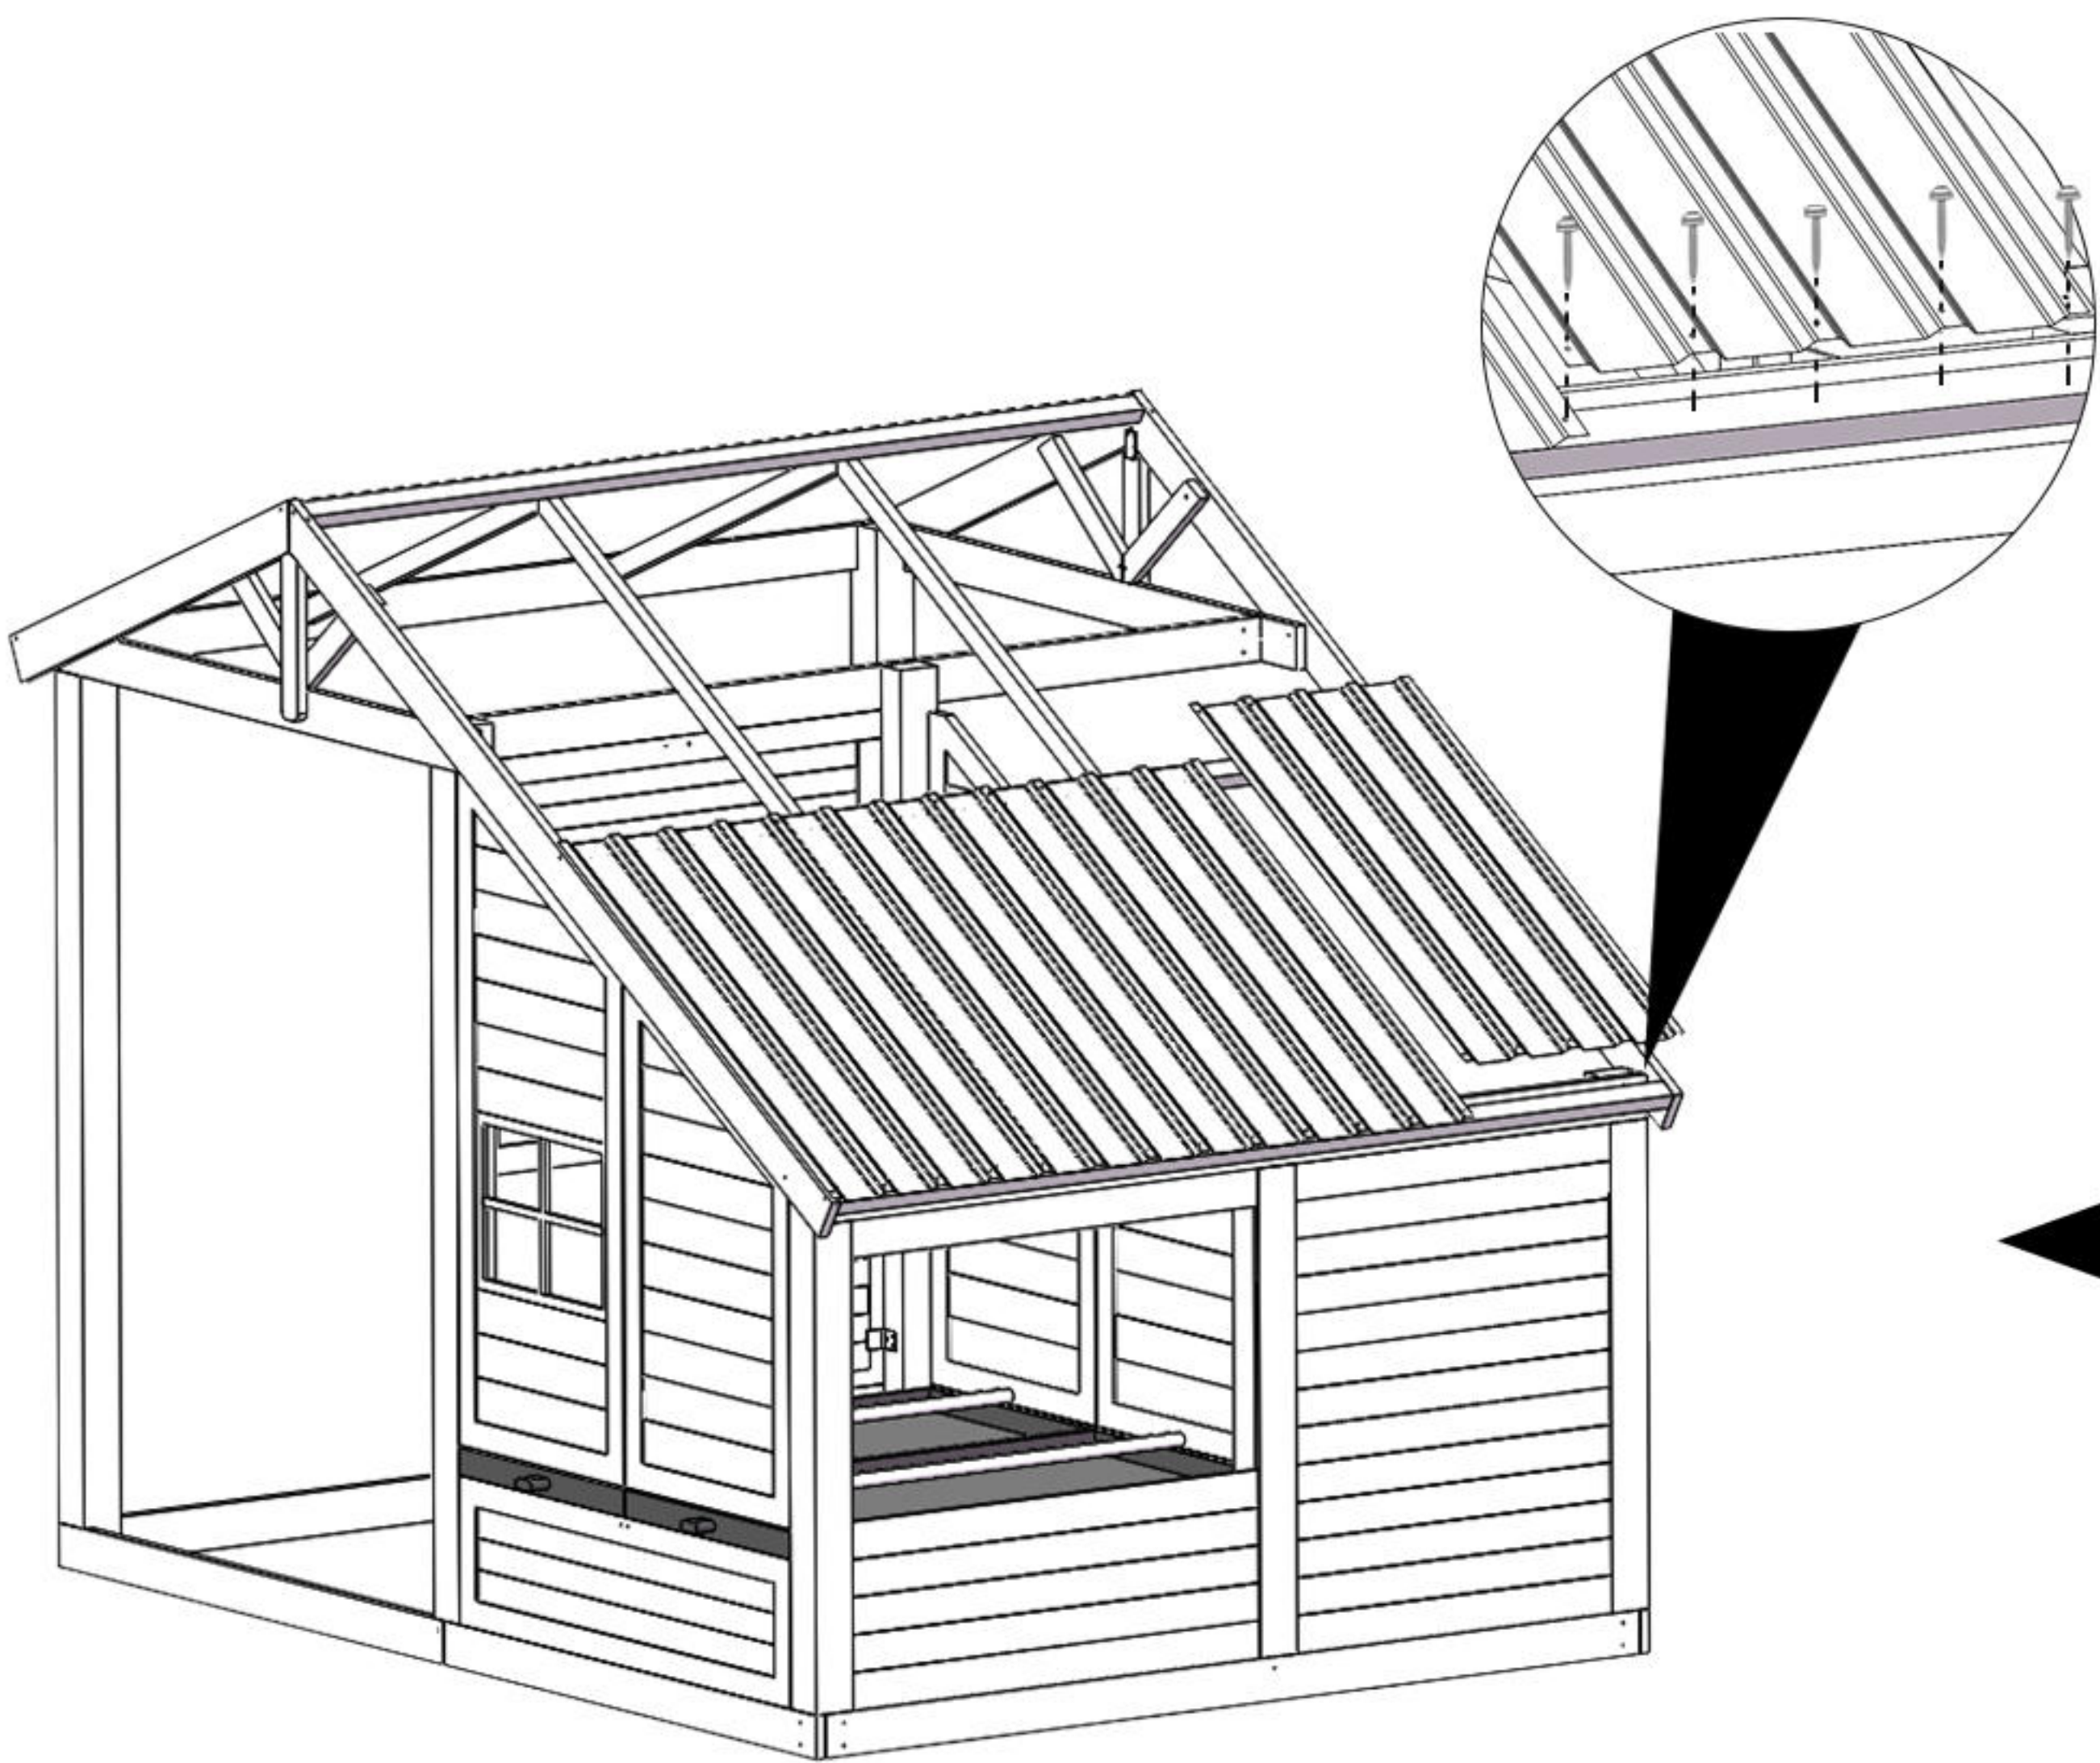

When installing the 4th roof, use 5 No.7 screws to fix the bottom of the roof to the frame.

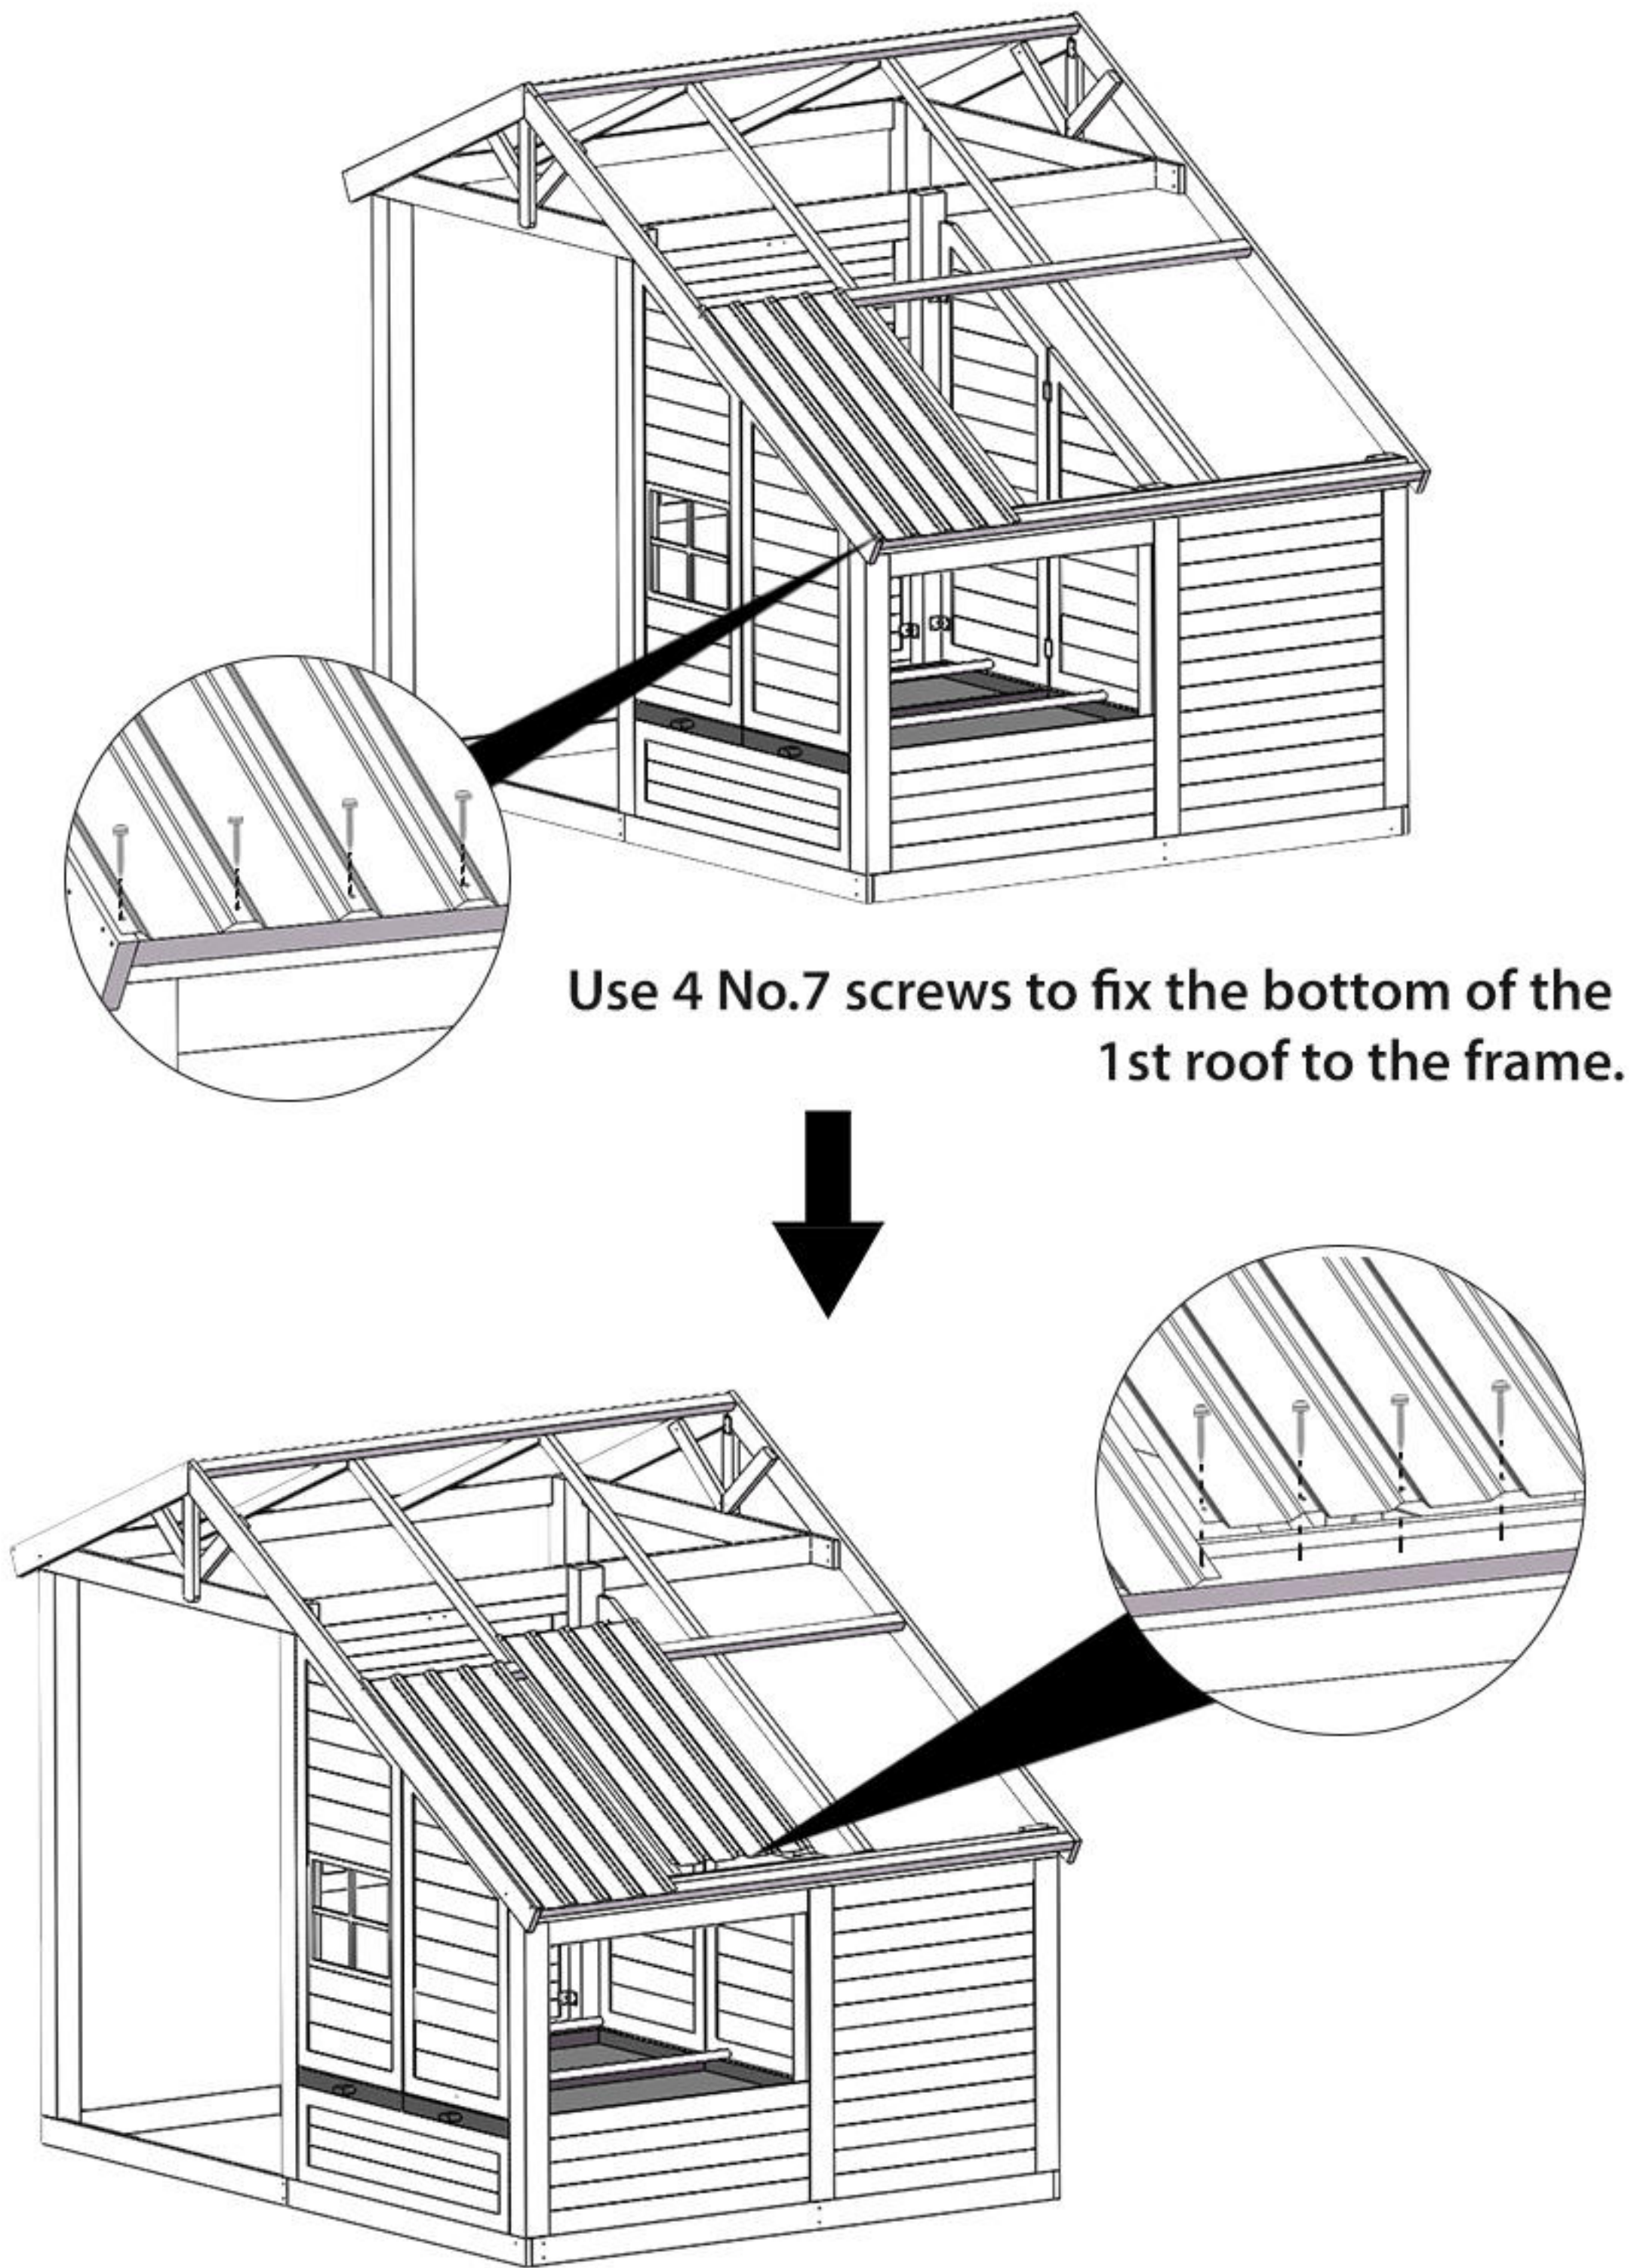



Use 4 No.7 screws to fix the bottom of the 1st roof to the frame.

Align the leftmost hole of the 2nd roof with the rightmost hole of the 1st roof, overlap them, and then use 4 No.7 screws to fix the bottom of the roofs to the frame.
Repeat this step to install the 3rd roof.



ASSEMBLY INSTRUCTION

STEP 18

STAMP ID	QTY REQ	BOX	IMAGE	
S	4	C		
7	17	A		M4*35

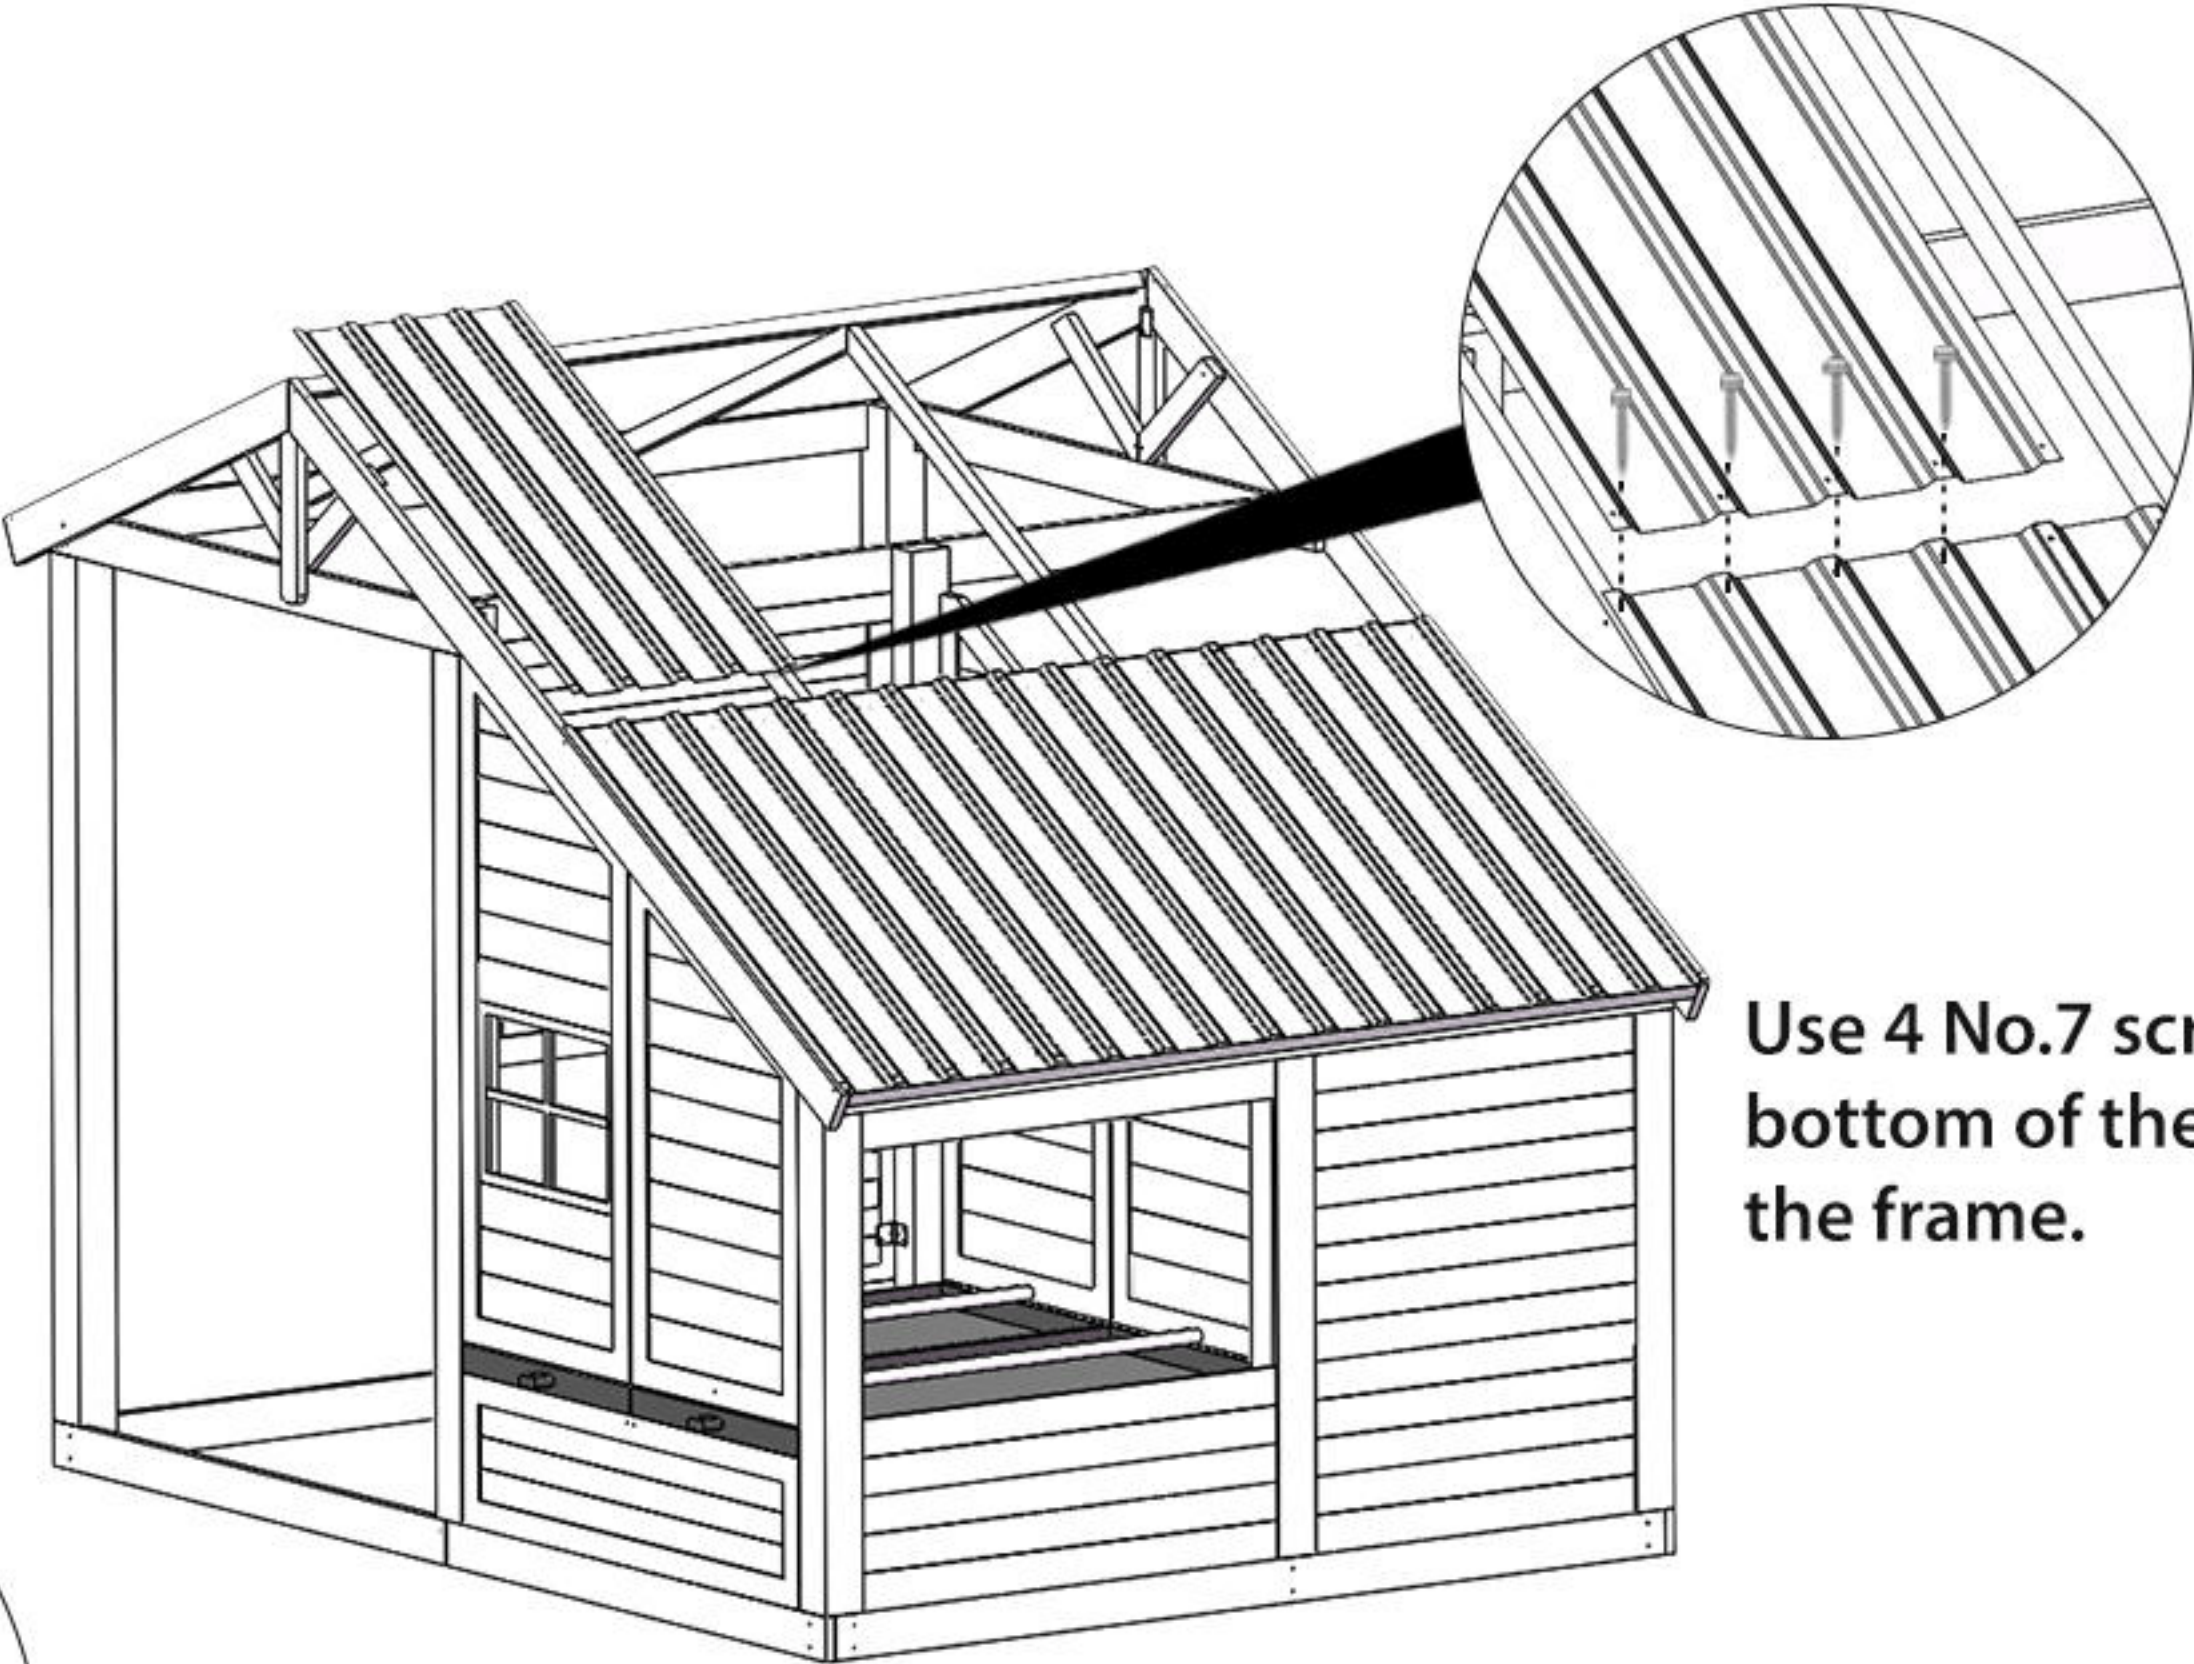

Use 4 No.7 screws to fix the bottom of the 5th roof to the frame.

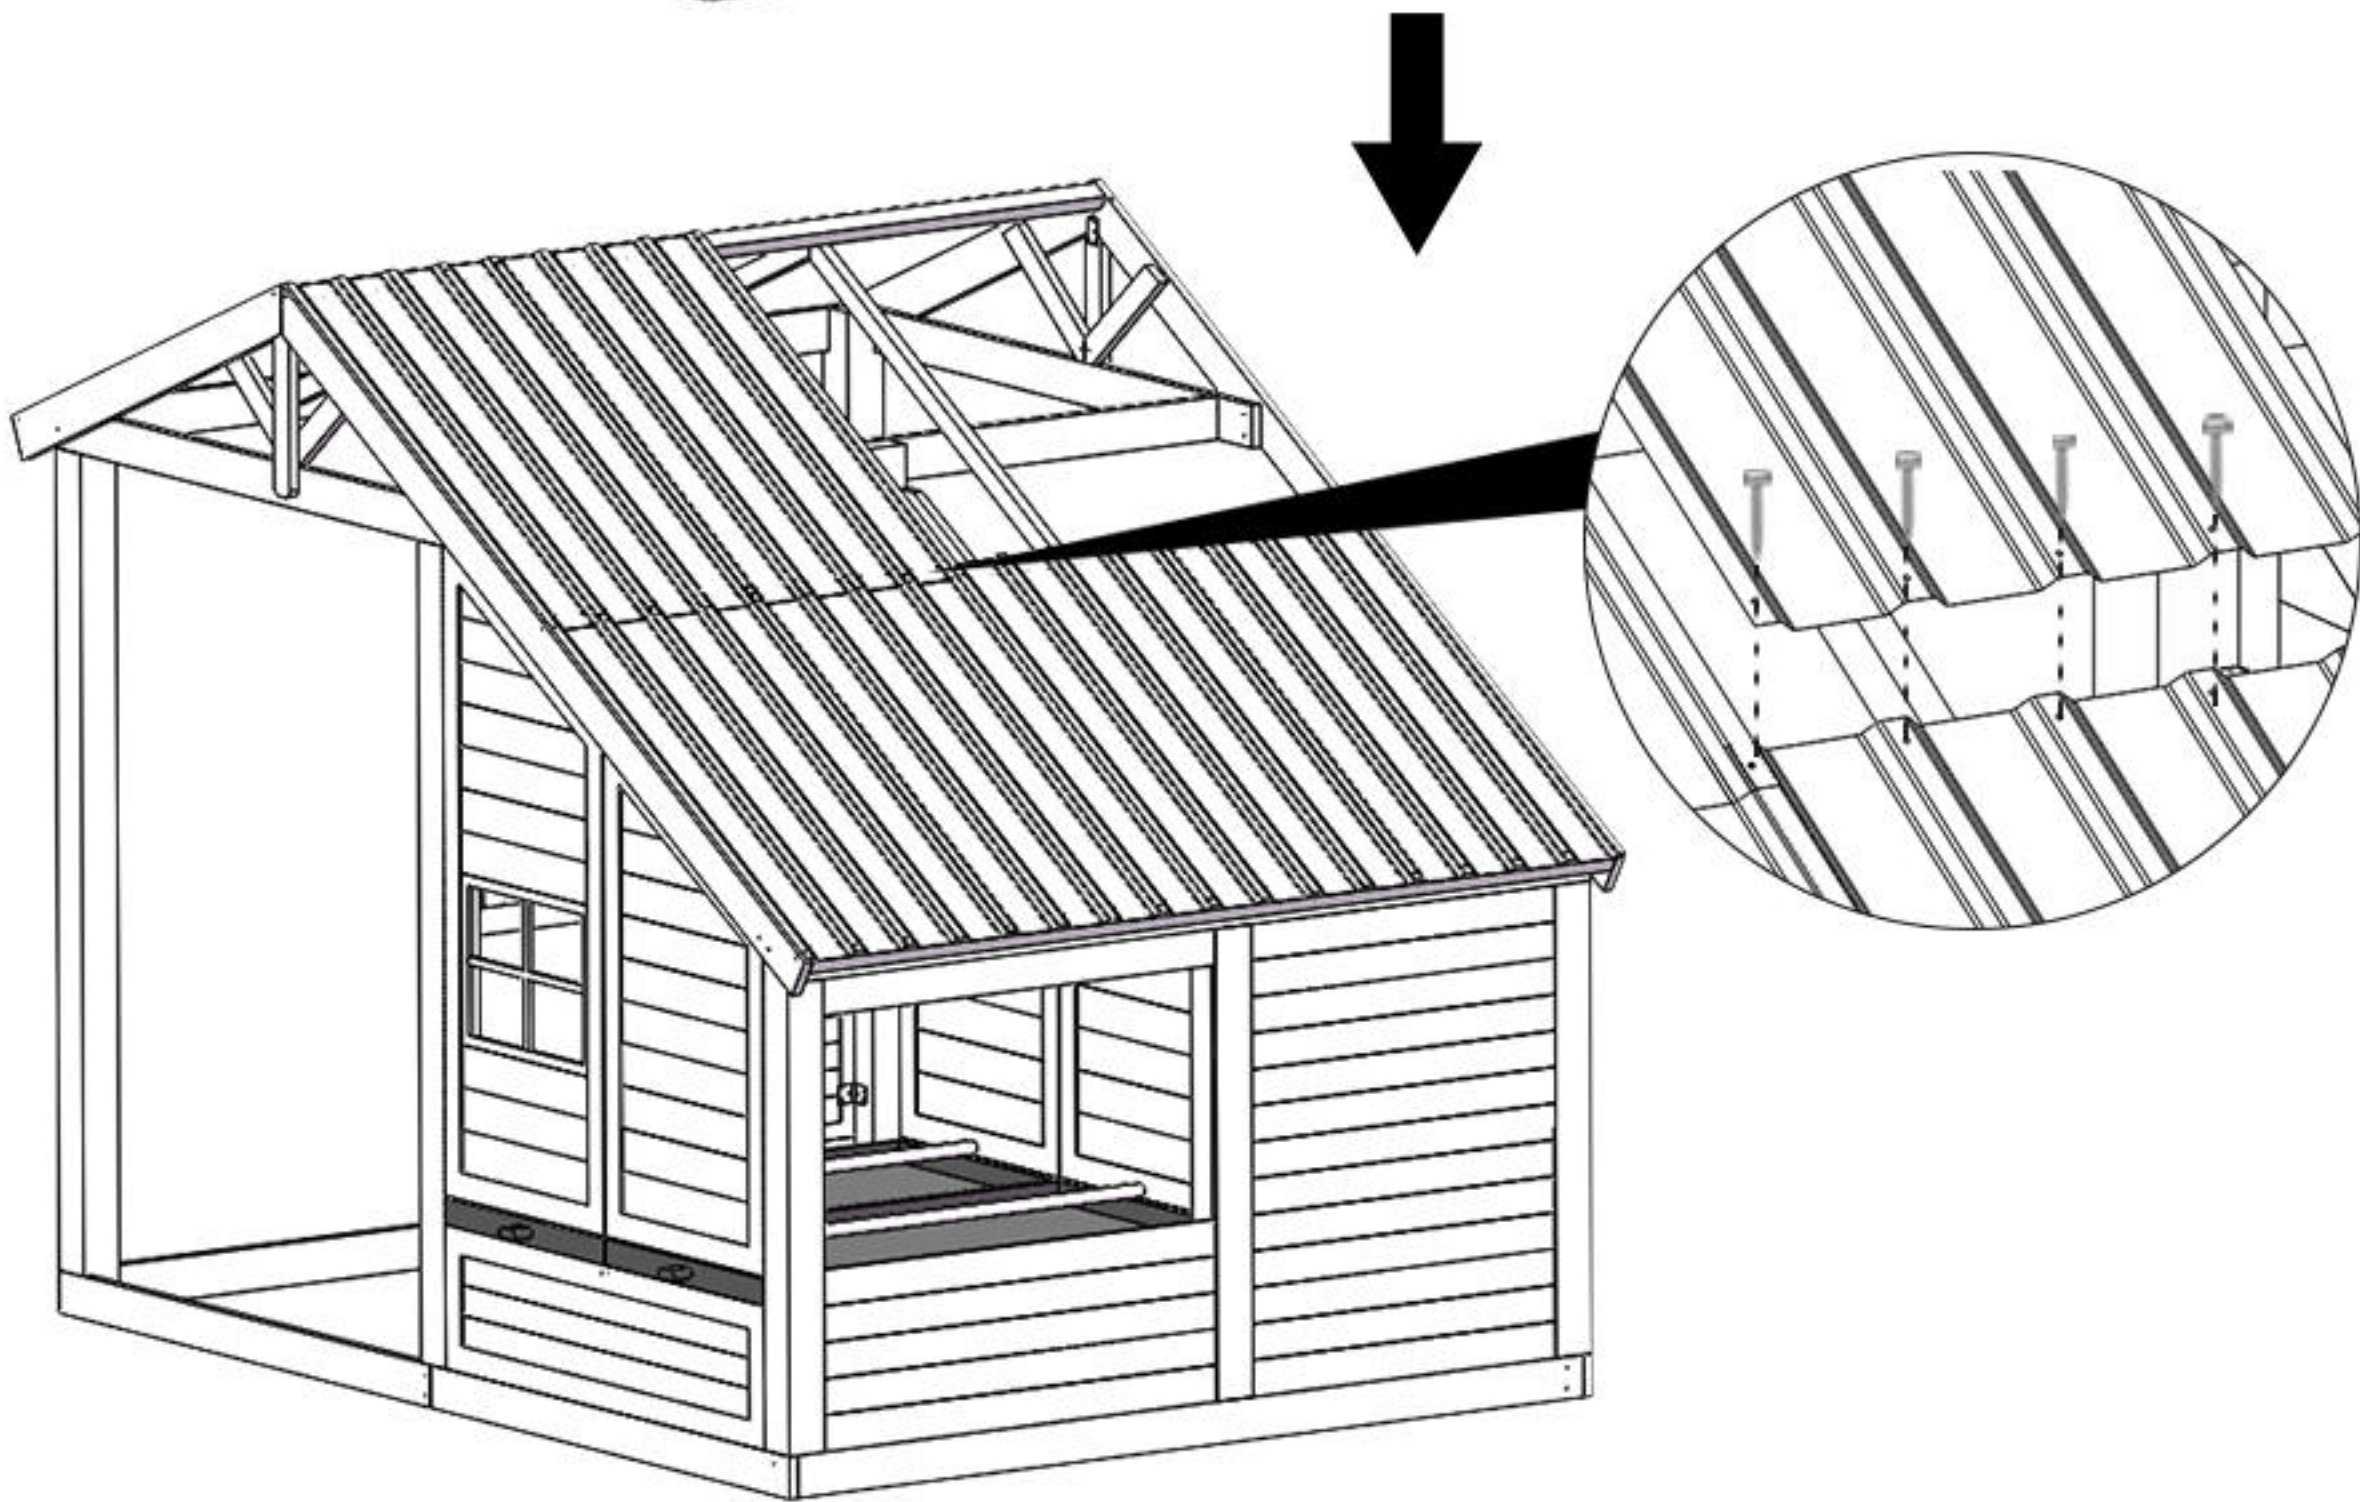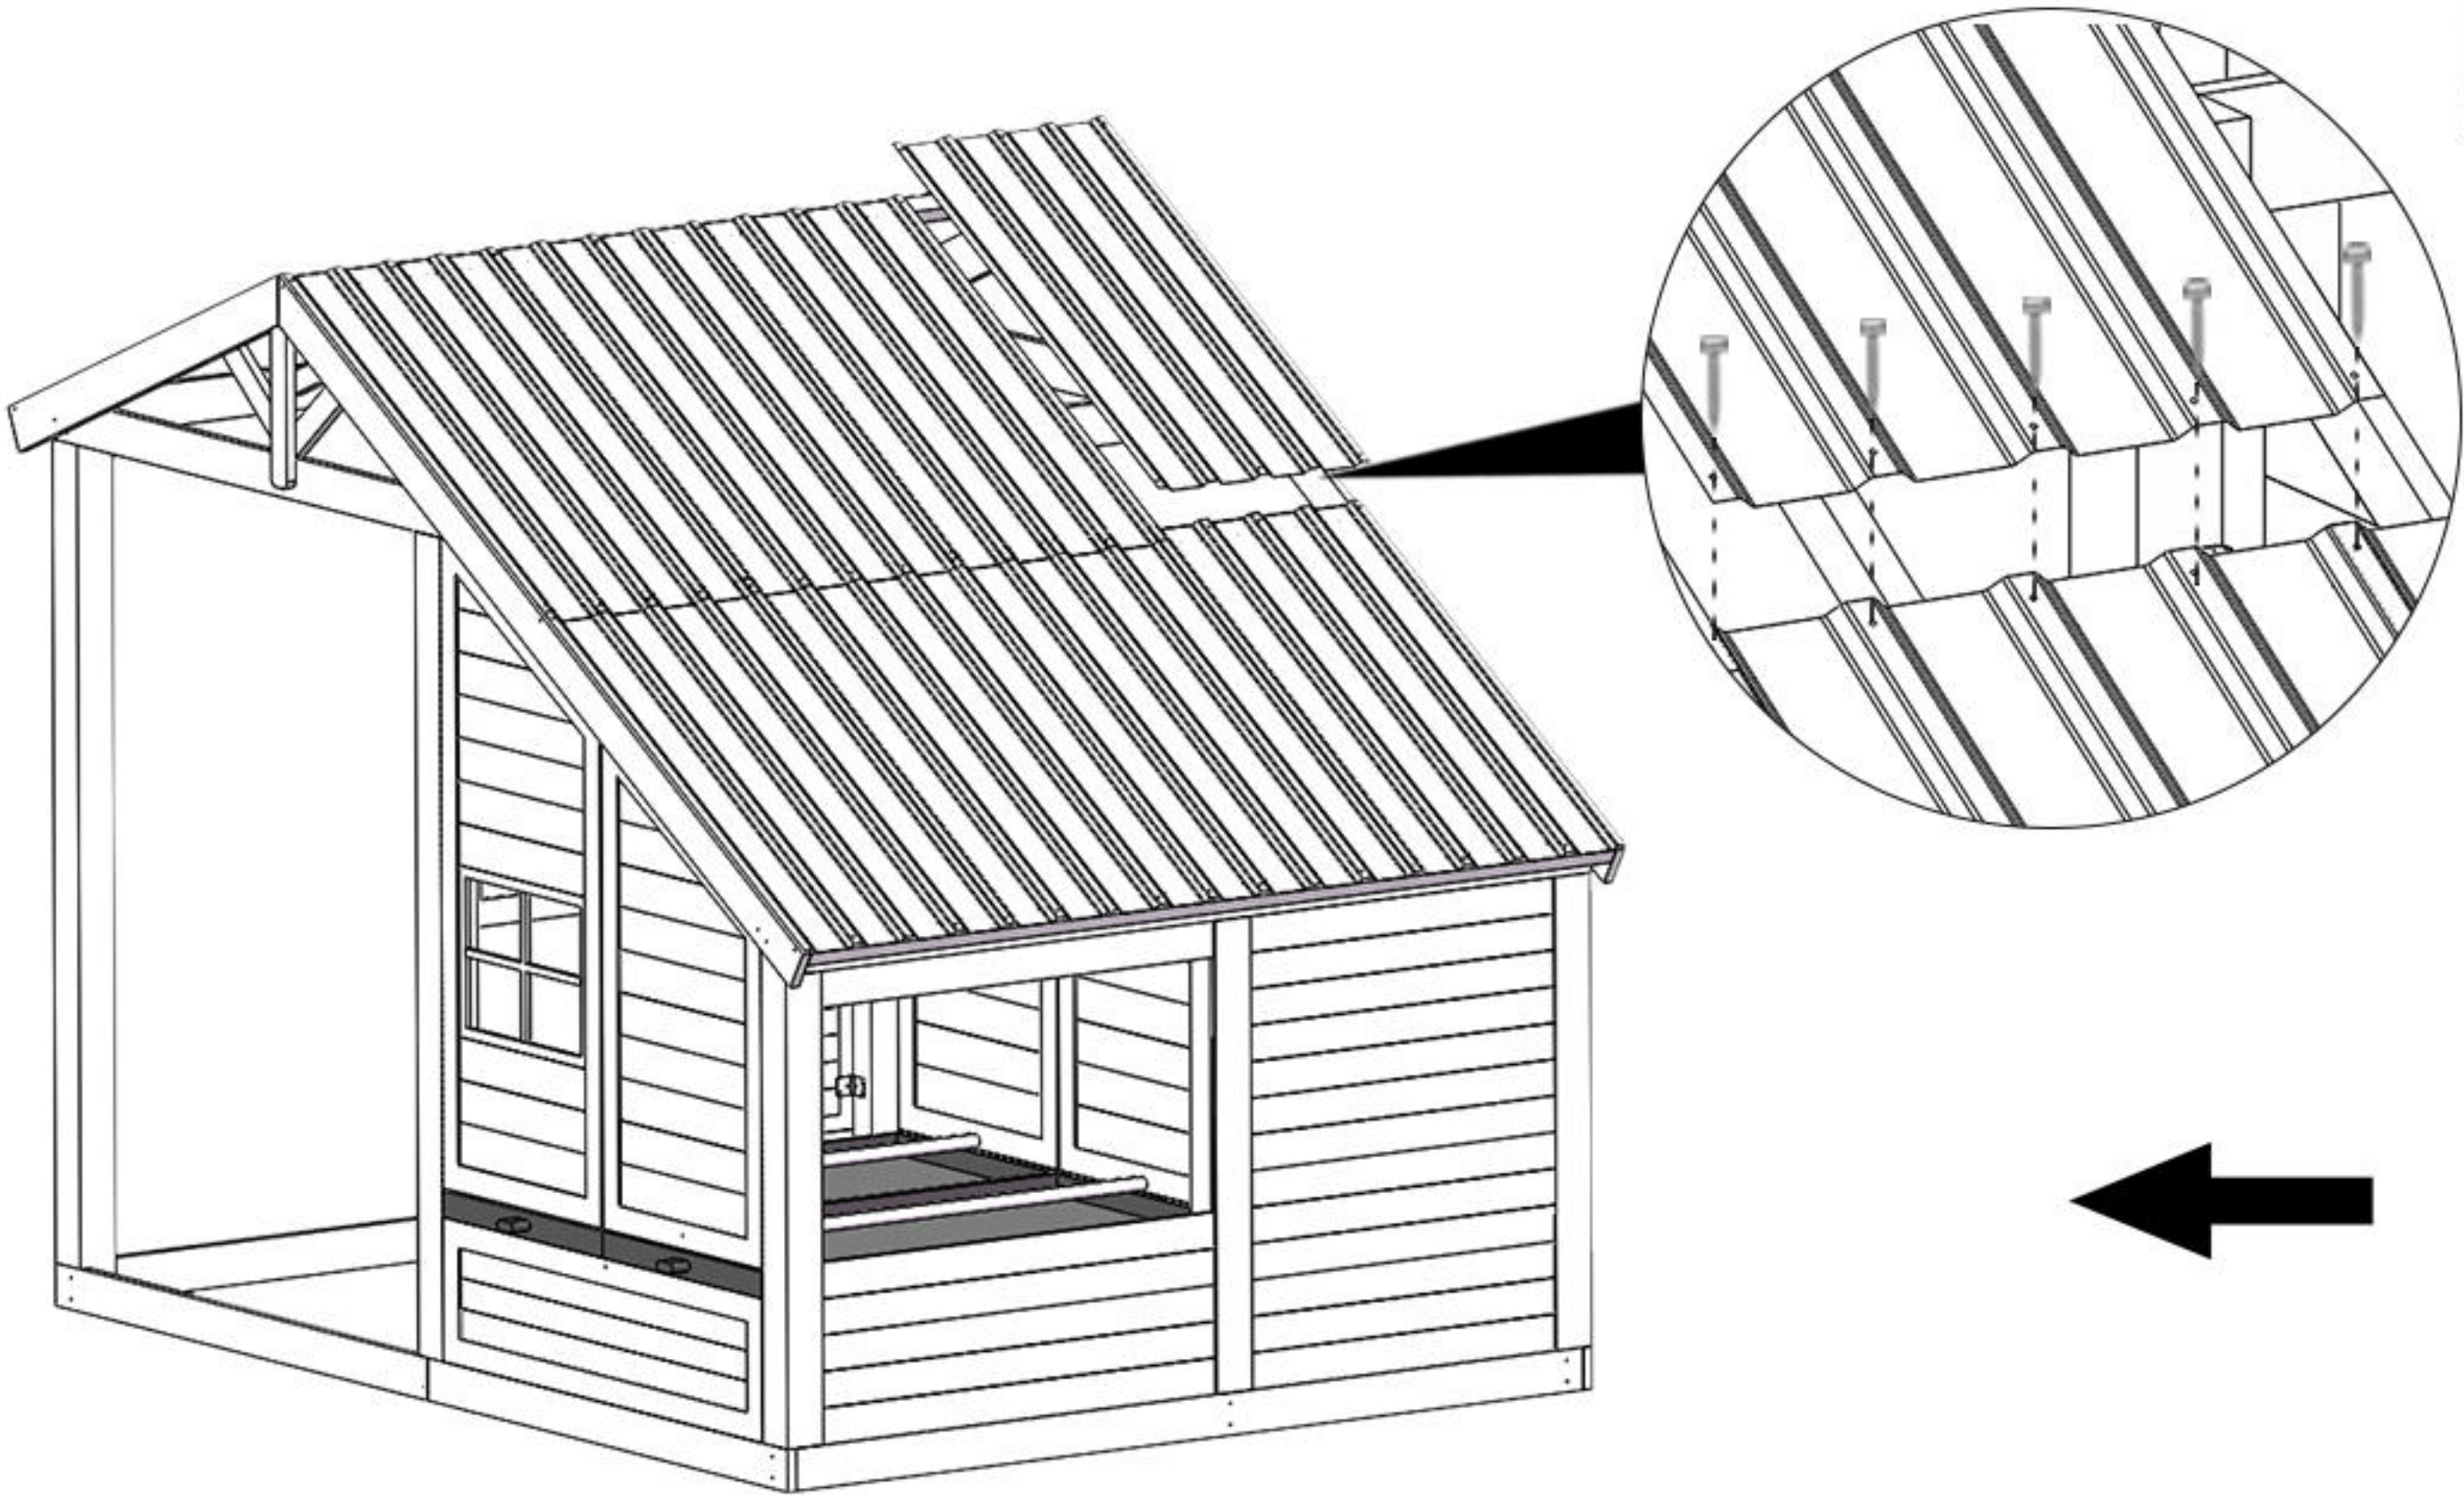

When installing the 8th roof, use 5 No.7 screws to fix the bottom of the roof to the frame.


Align the leftmost hole of the 6th roof with the rightmost hole of the 5th roof, overlap them, and then use 4 No.7 screws to fix the bottom of the roofs to the frame.

Repeat this step to install the 7th roof.


ASSEMBLY INSTRUCTION

STEP 19

STAMP ID	QTY REQ	BOX	IMAGE
S	4	C	
7	17	A	 M4*35

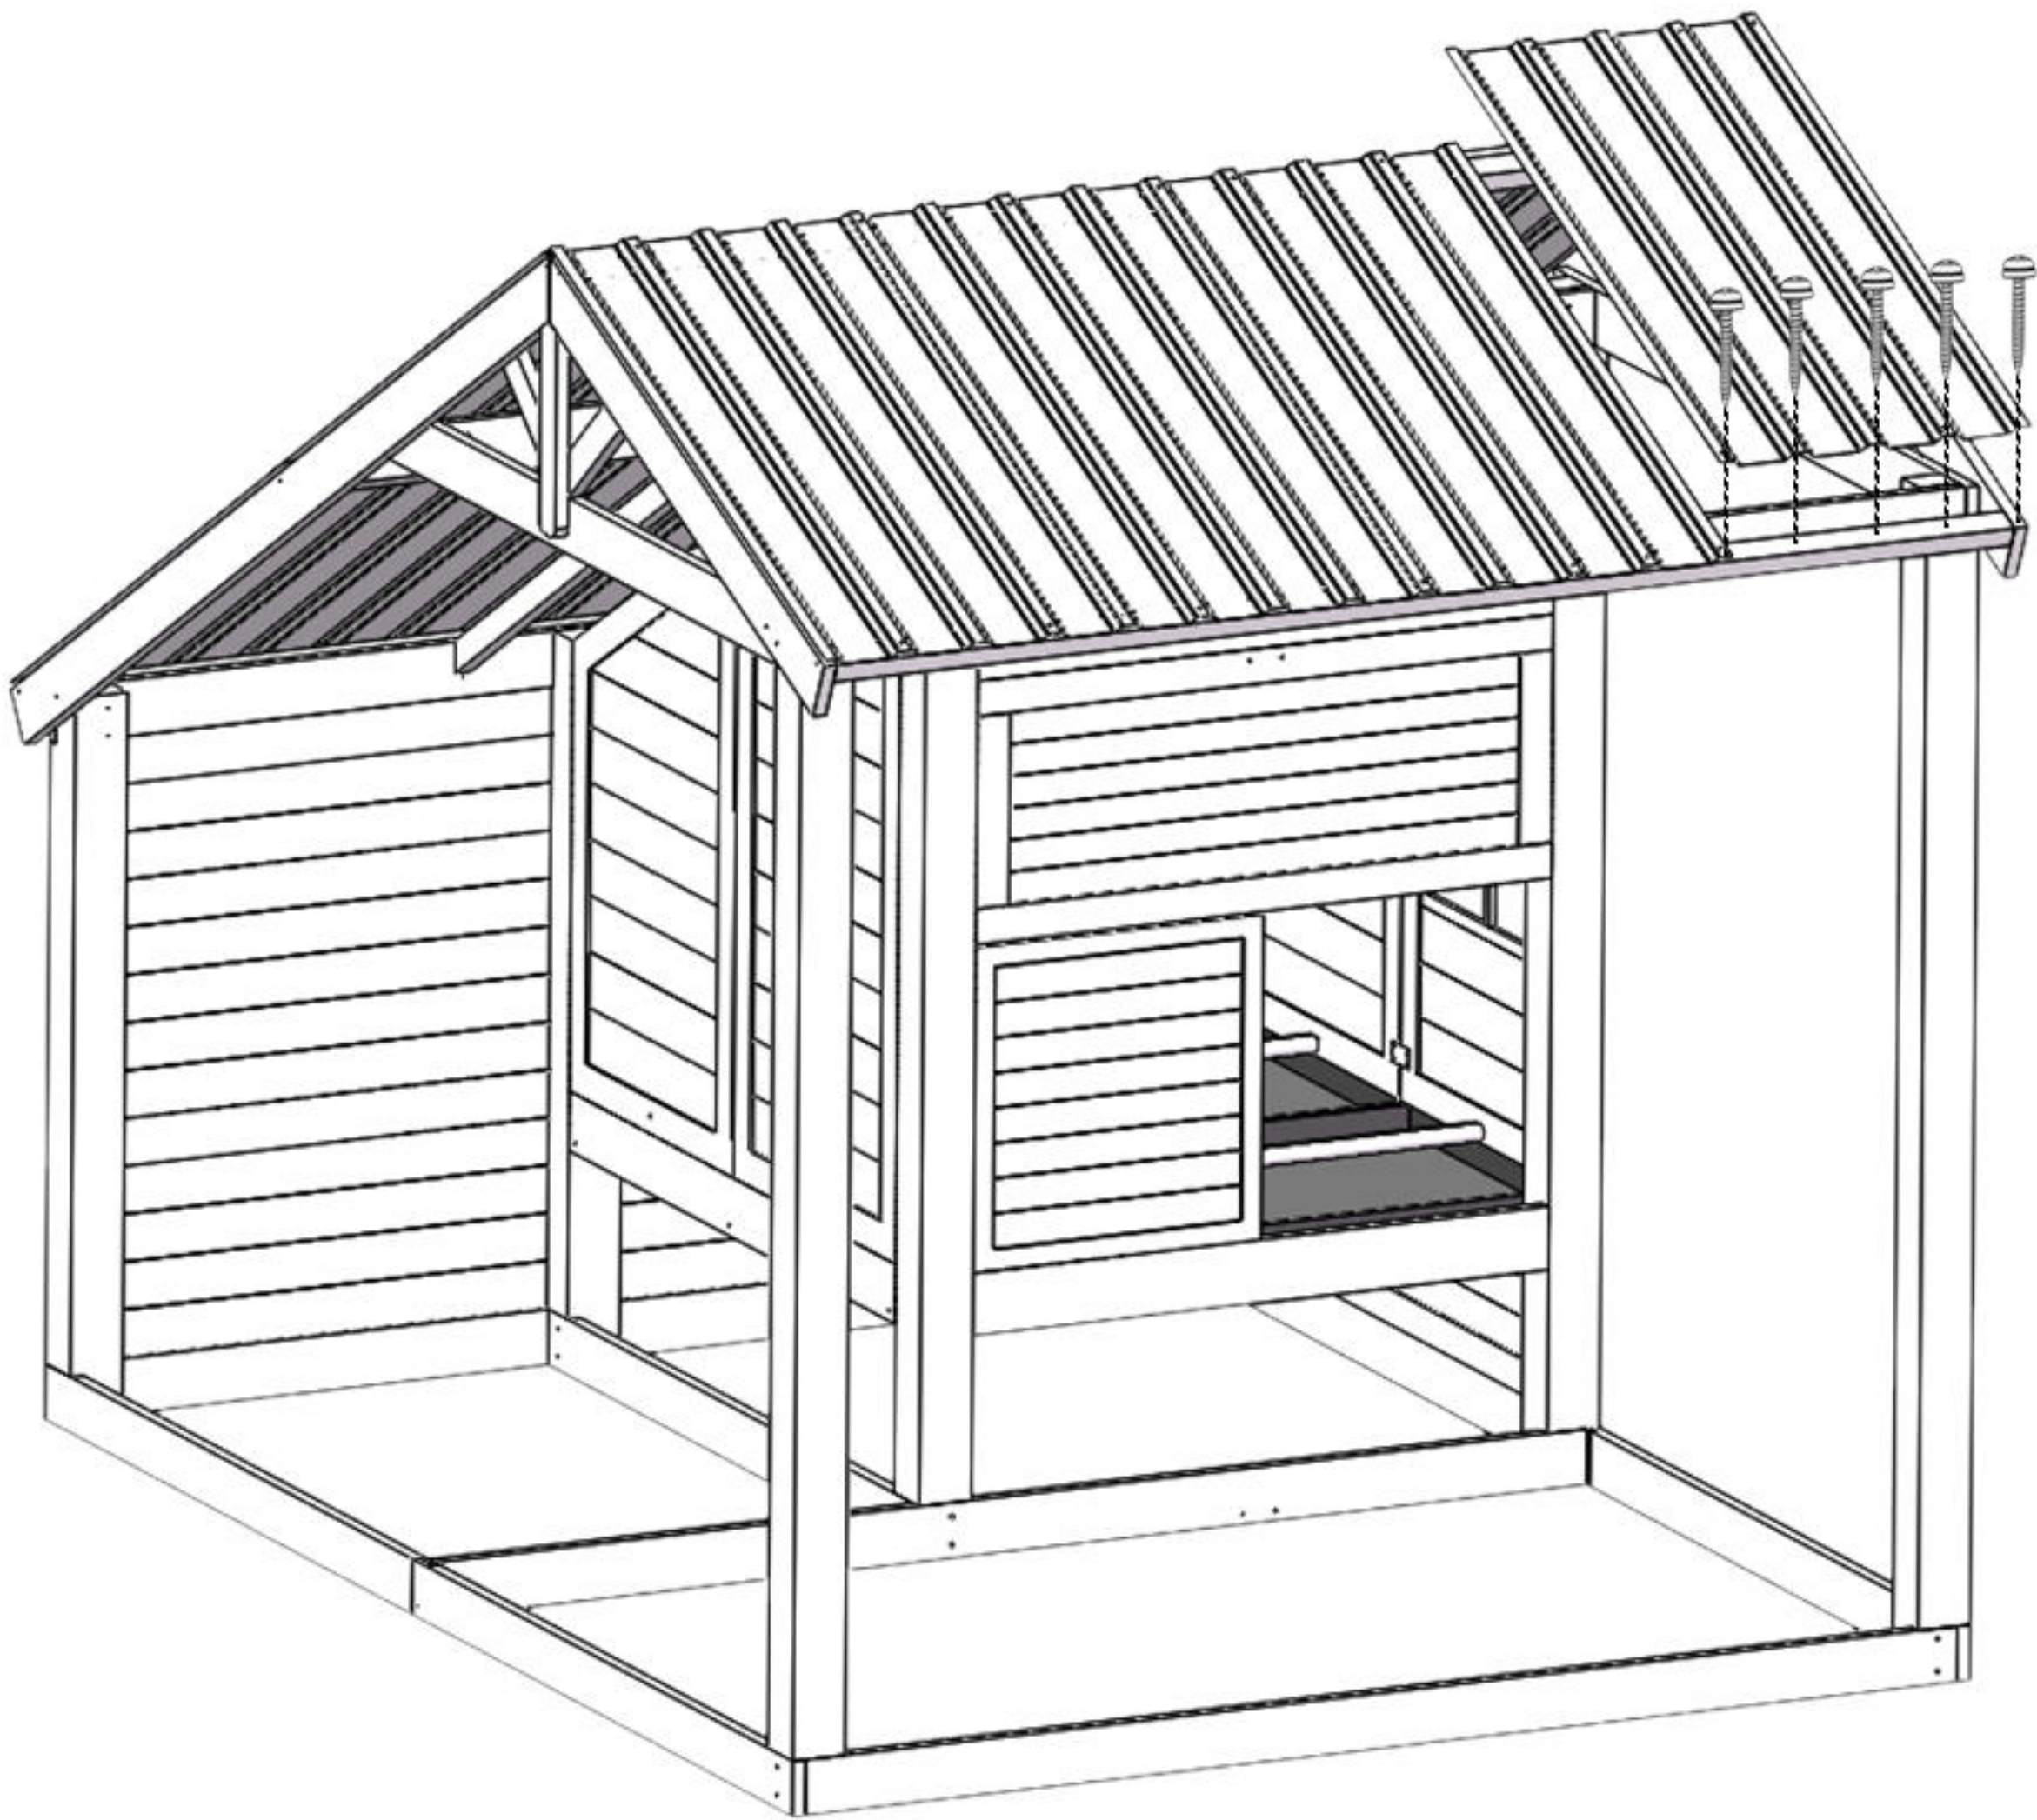

When installing the 12th roof, use 5 No.7 screws to fix the bottom of the roof to the frame.

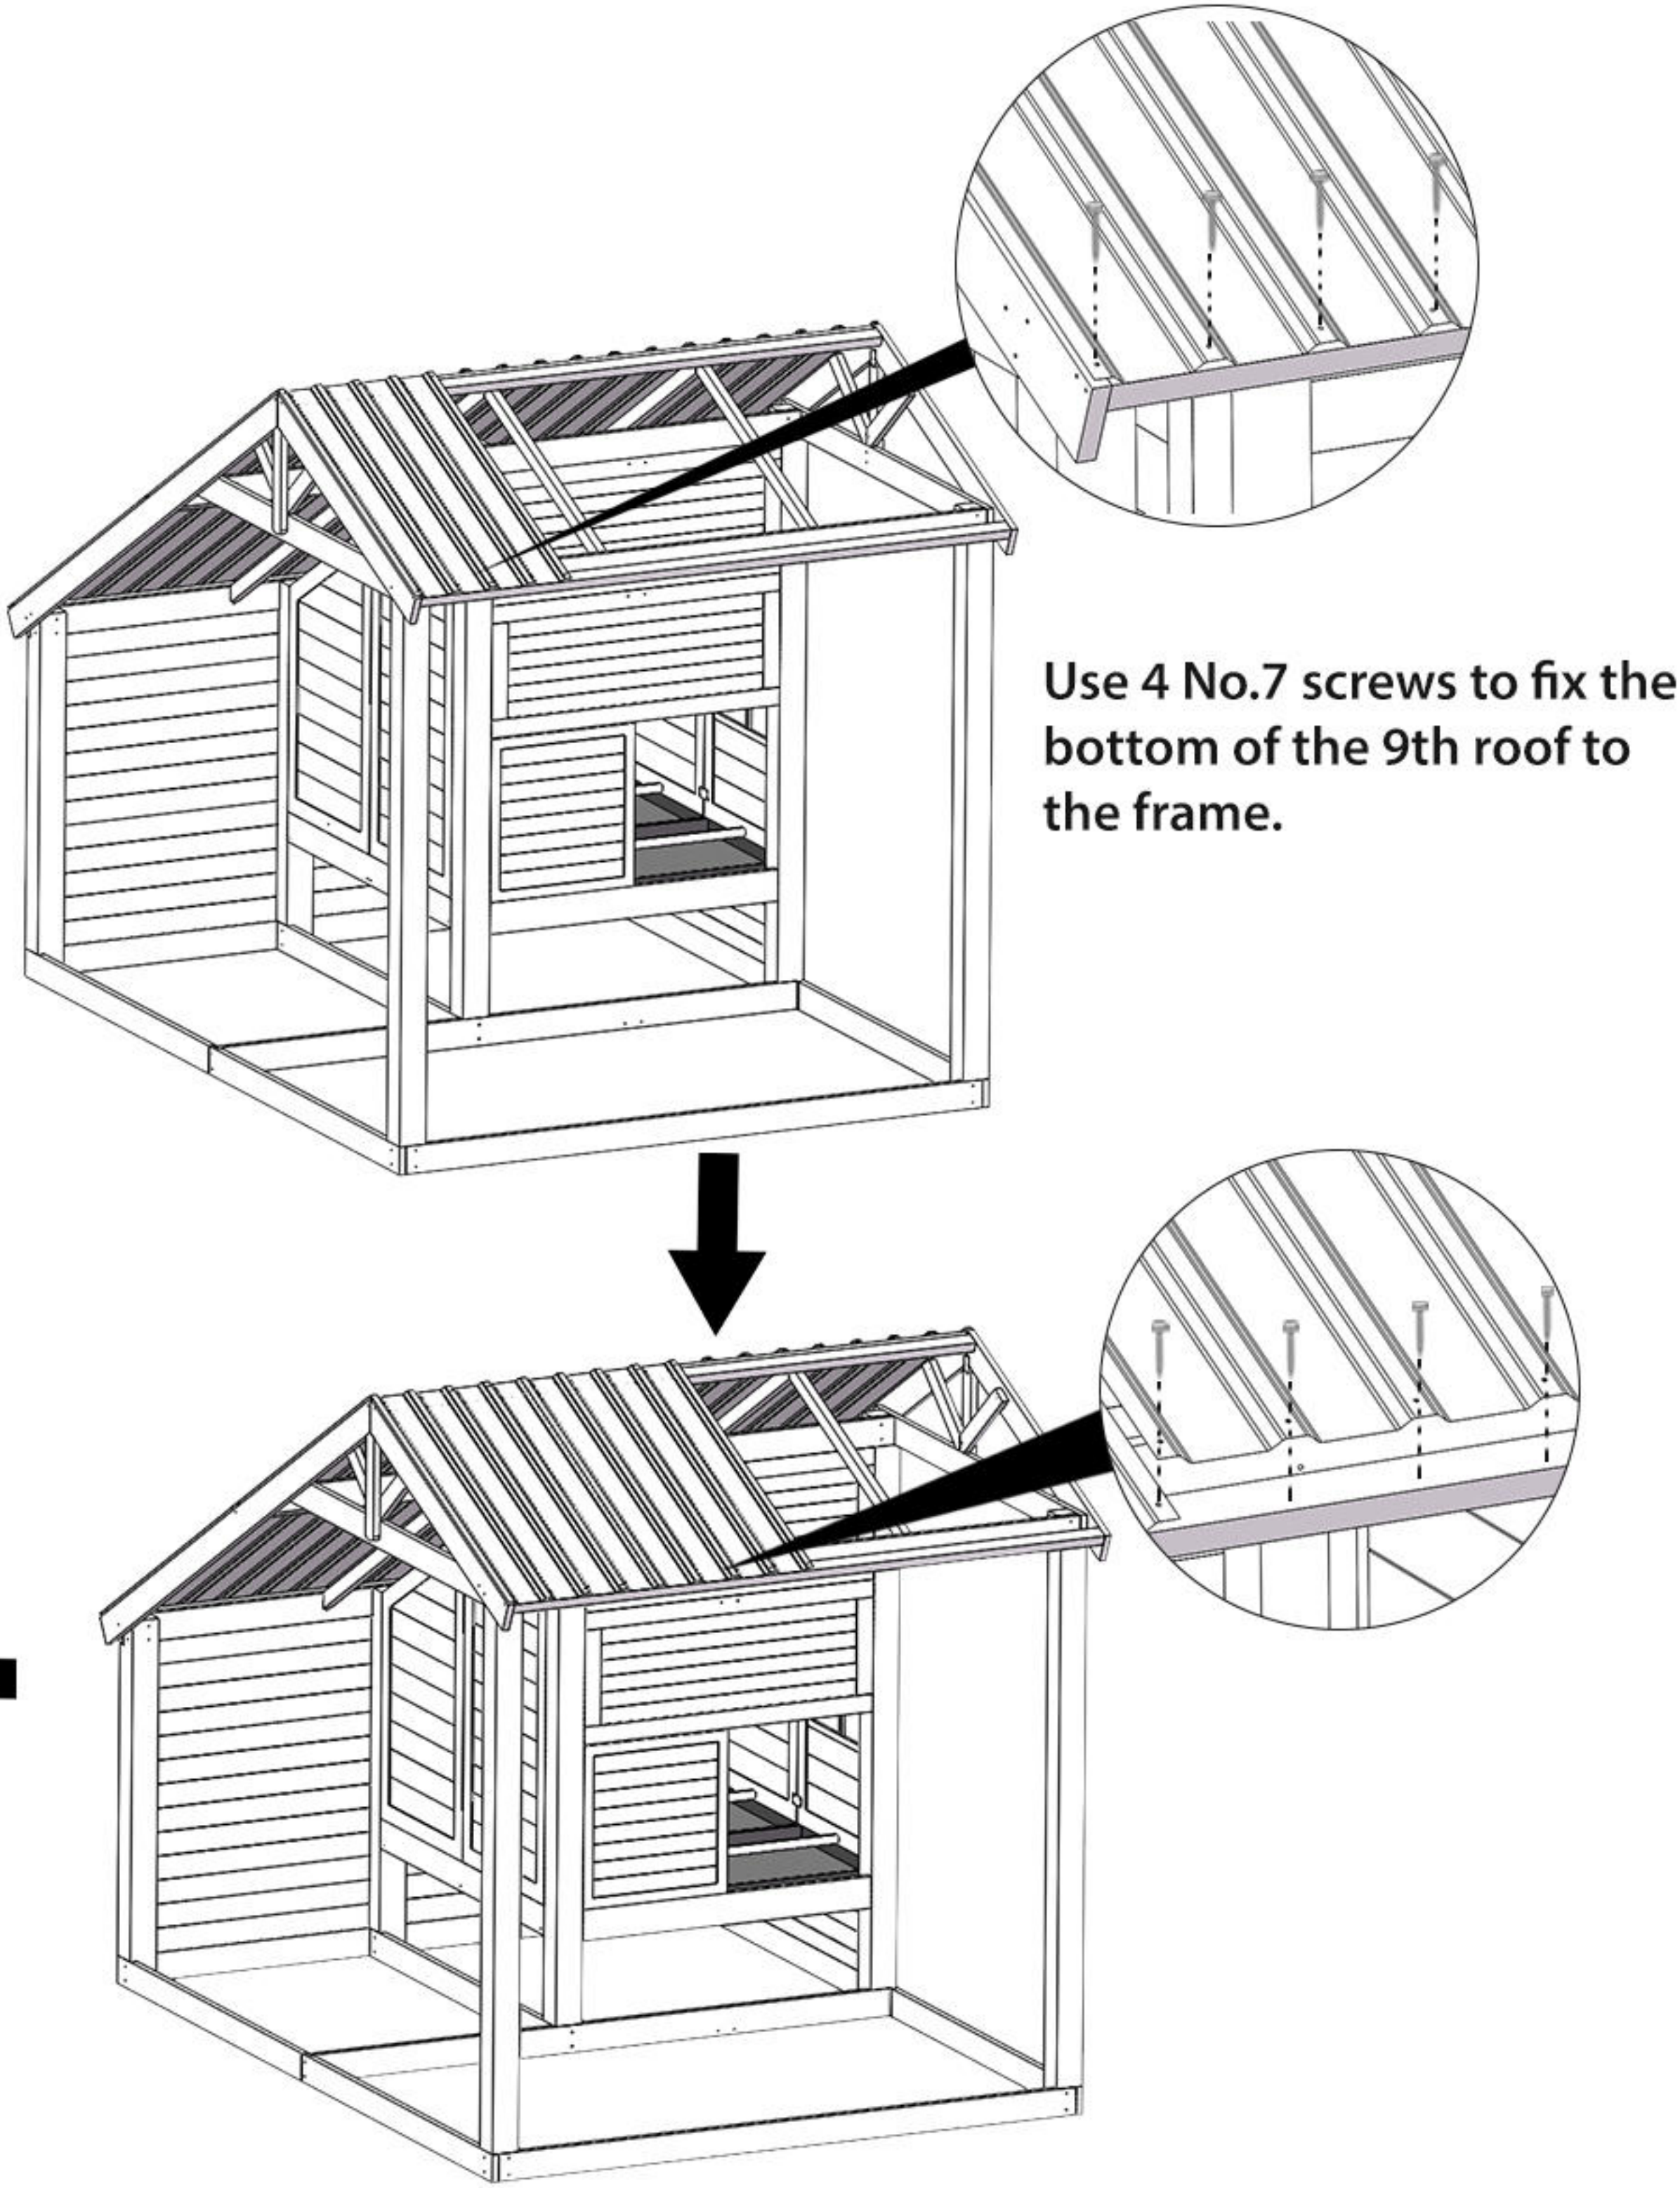


Use 4 No.7 screws to fix the bottom of the 9th roof to the frame.



Align the leftmost hole of the 10th roof with the rightmost hole of the 9th roof, overlap them, and then use 4 No.7 screws to fix the bottom of the roofs to the frame.

Repeat this step to install the 11th roof.


ASSEMBLY INSTRUCTION

STEP 20

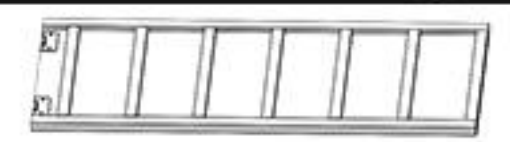STAMP ID	QTY REQ	BOX	IMAGE
W	1	A	
7	34	A	 M4*35
T2	1	B	
3	4	A	 M4*20

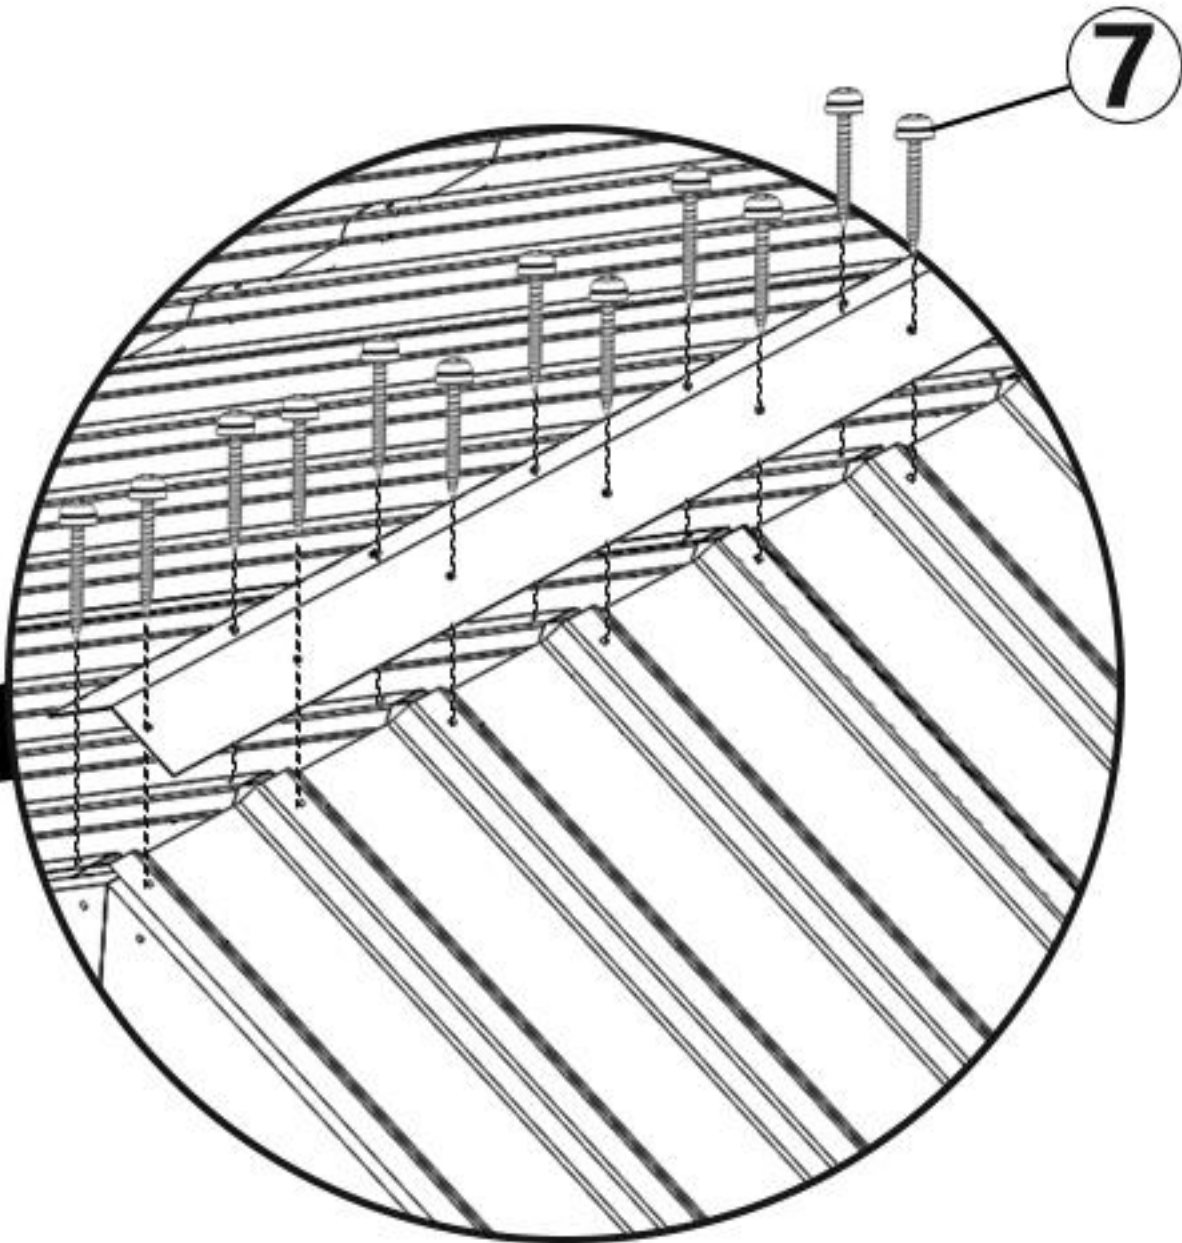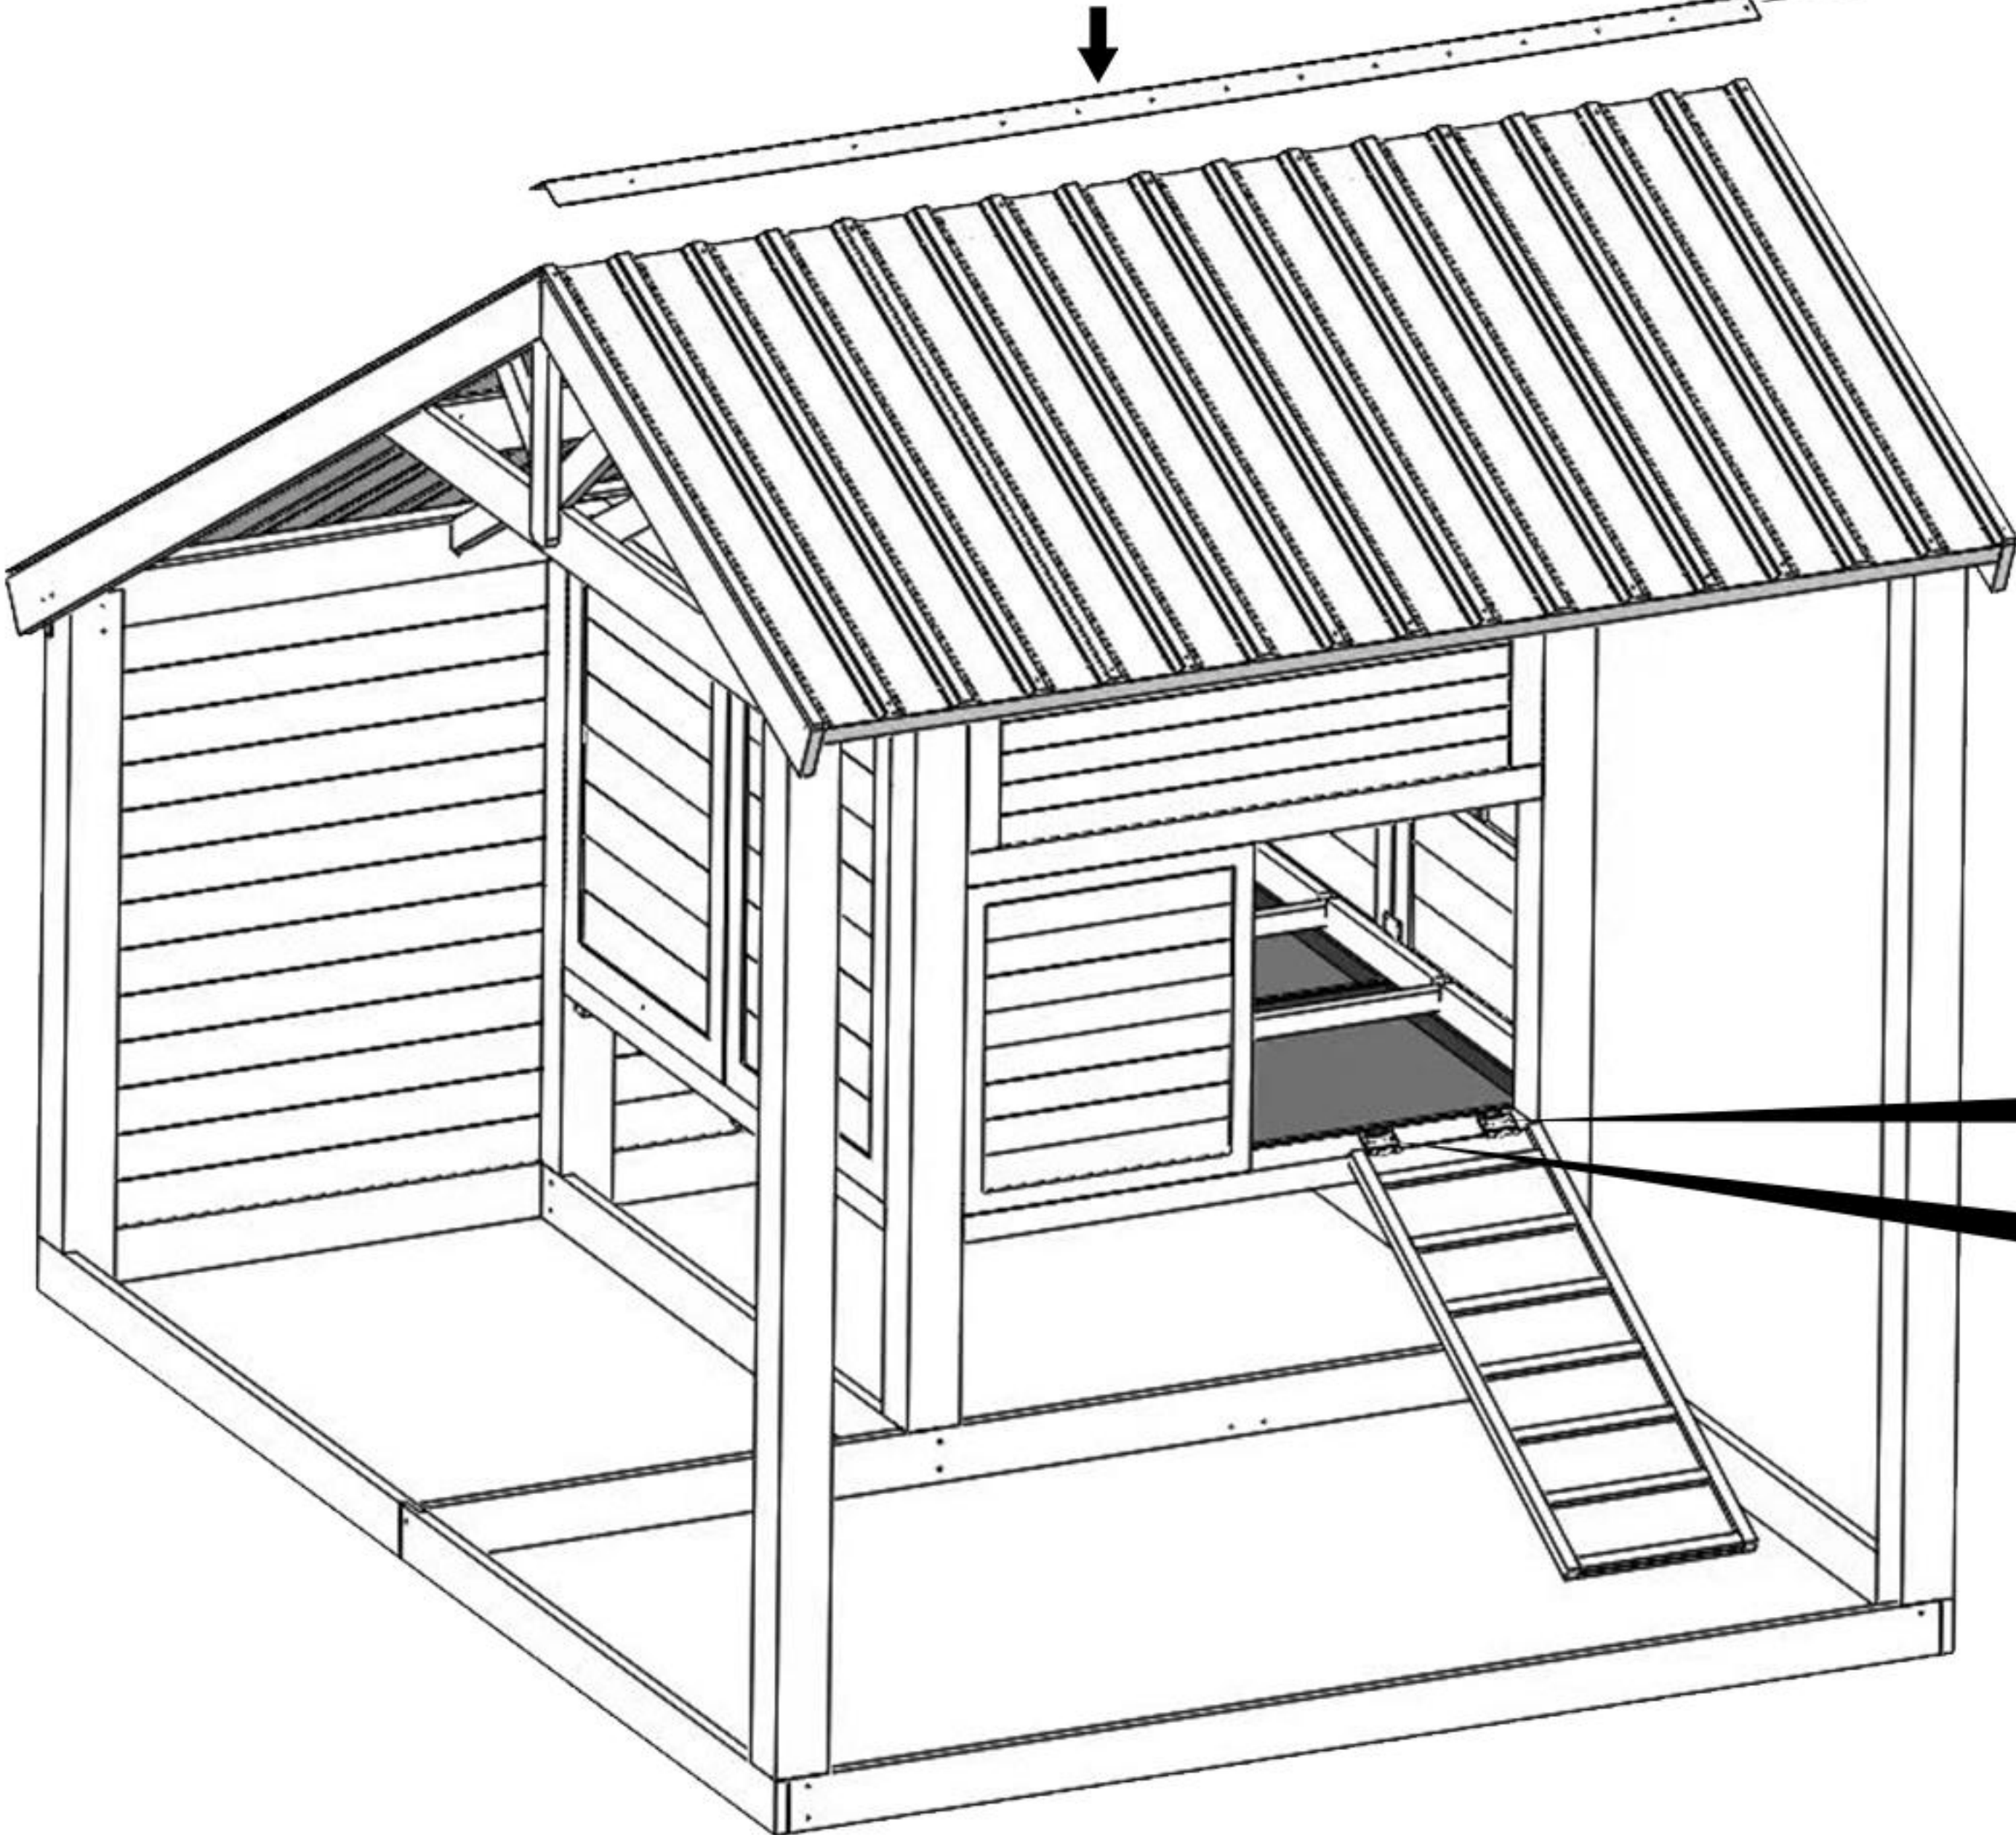


SECURE PART W AND ROOFS TOGETHER
USING 34 NO. 7 SCREWS.

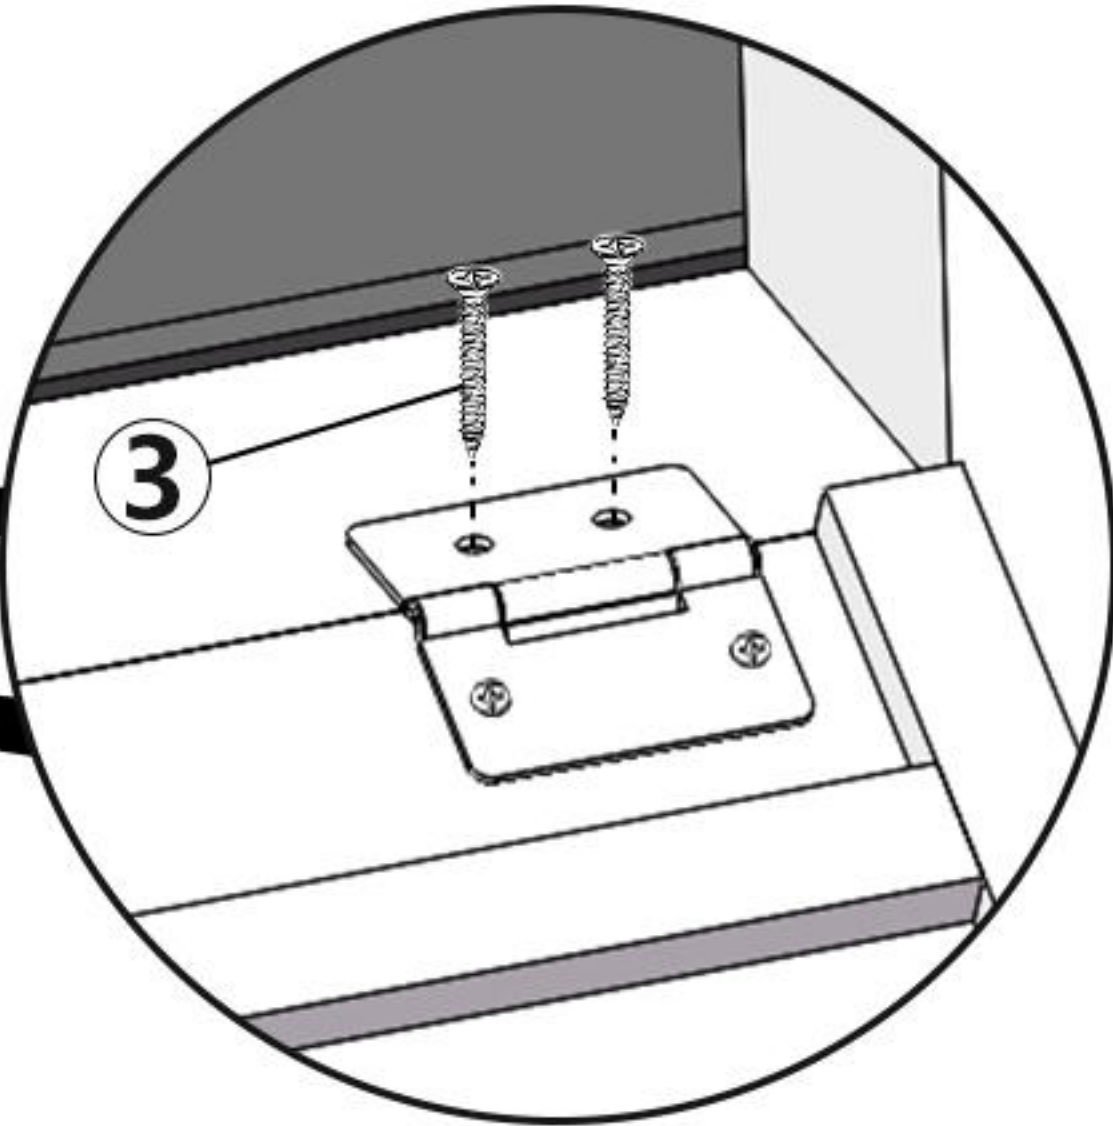


USE 4 NO.3 SCREWS TO SECURE T2 TO THE FRAME.



ASSEMBLY INSTRUCTION

STEP 21

STAMP ID	QTY REQ	BOX	IMAGE
O	1	C	
Q	1	C	
4	12	A	 M4*40
3	2	A	 M4*20

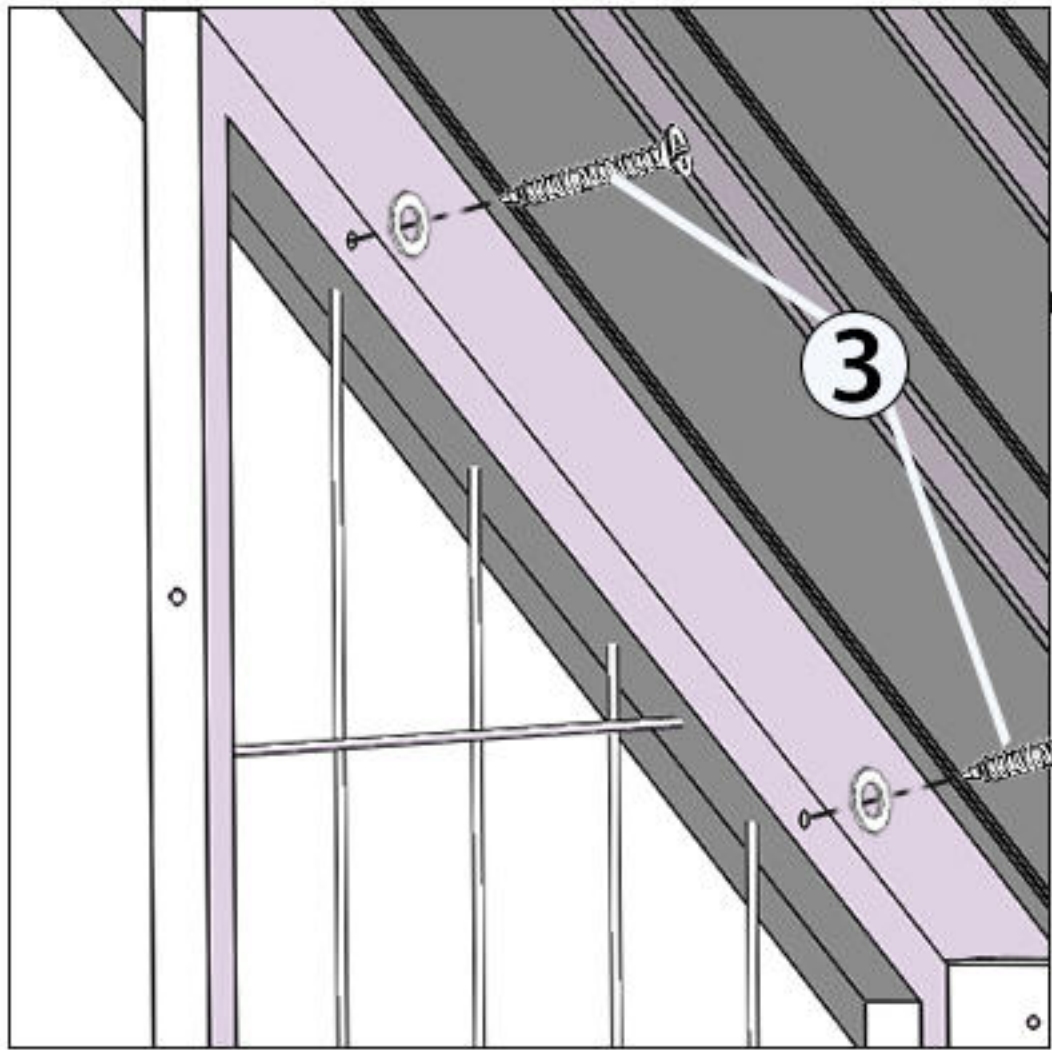

Secure the wire mesh panel Q to the frame using 2 No. 3 screws and washers.
There are 2 connection points, each requiring 1 screw and washer.

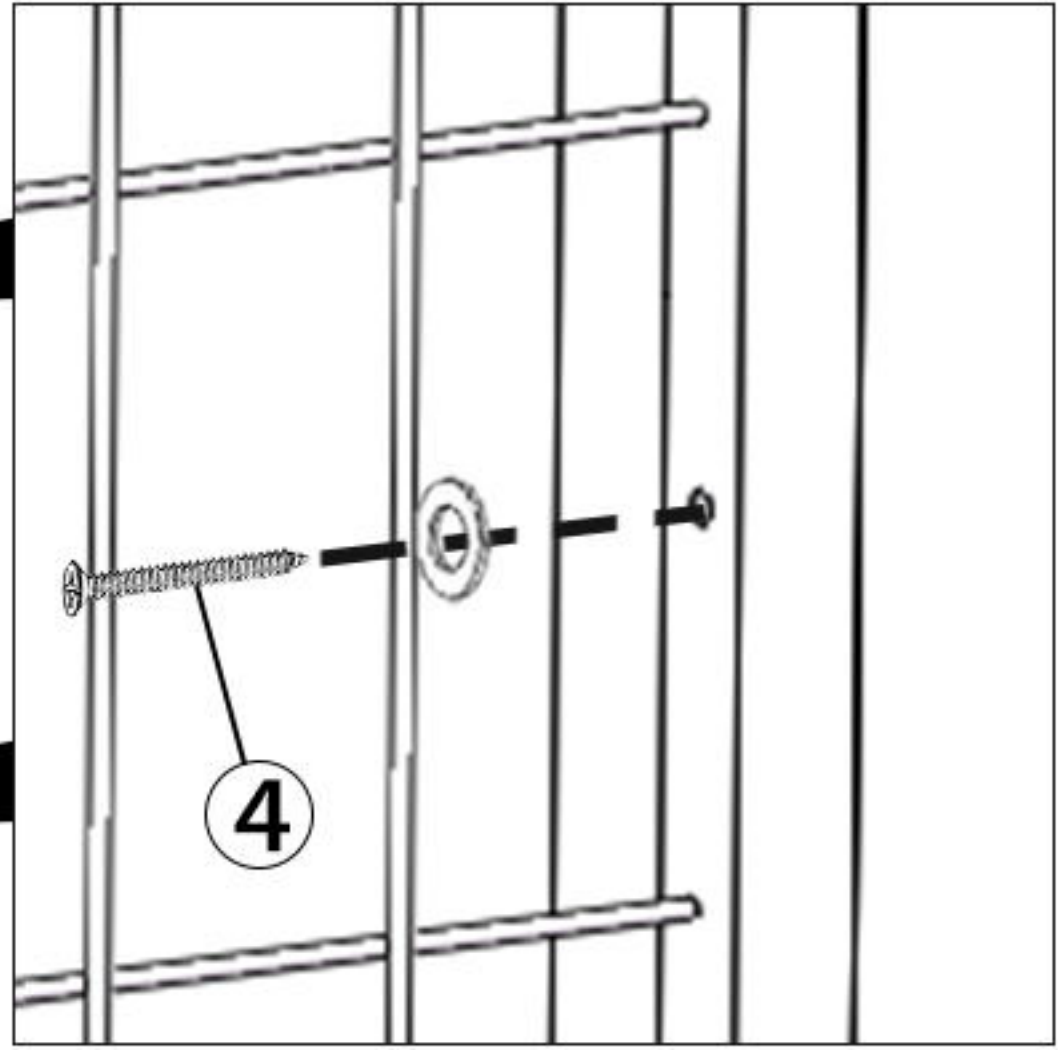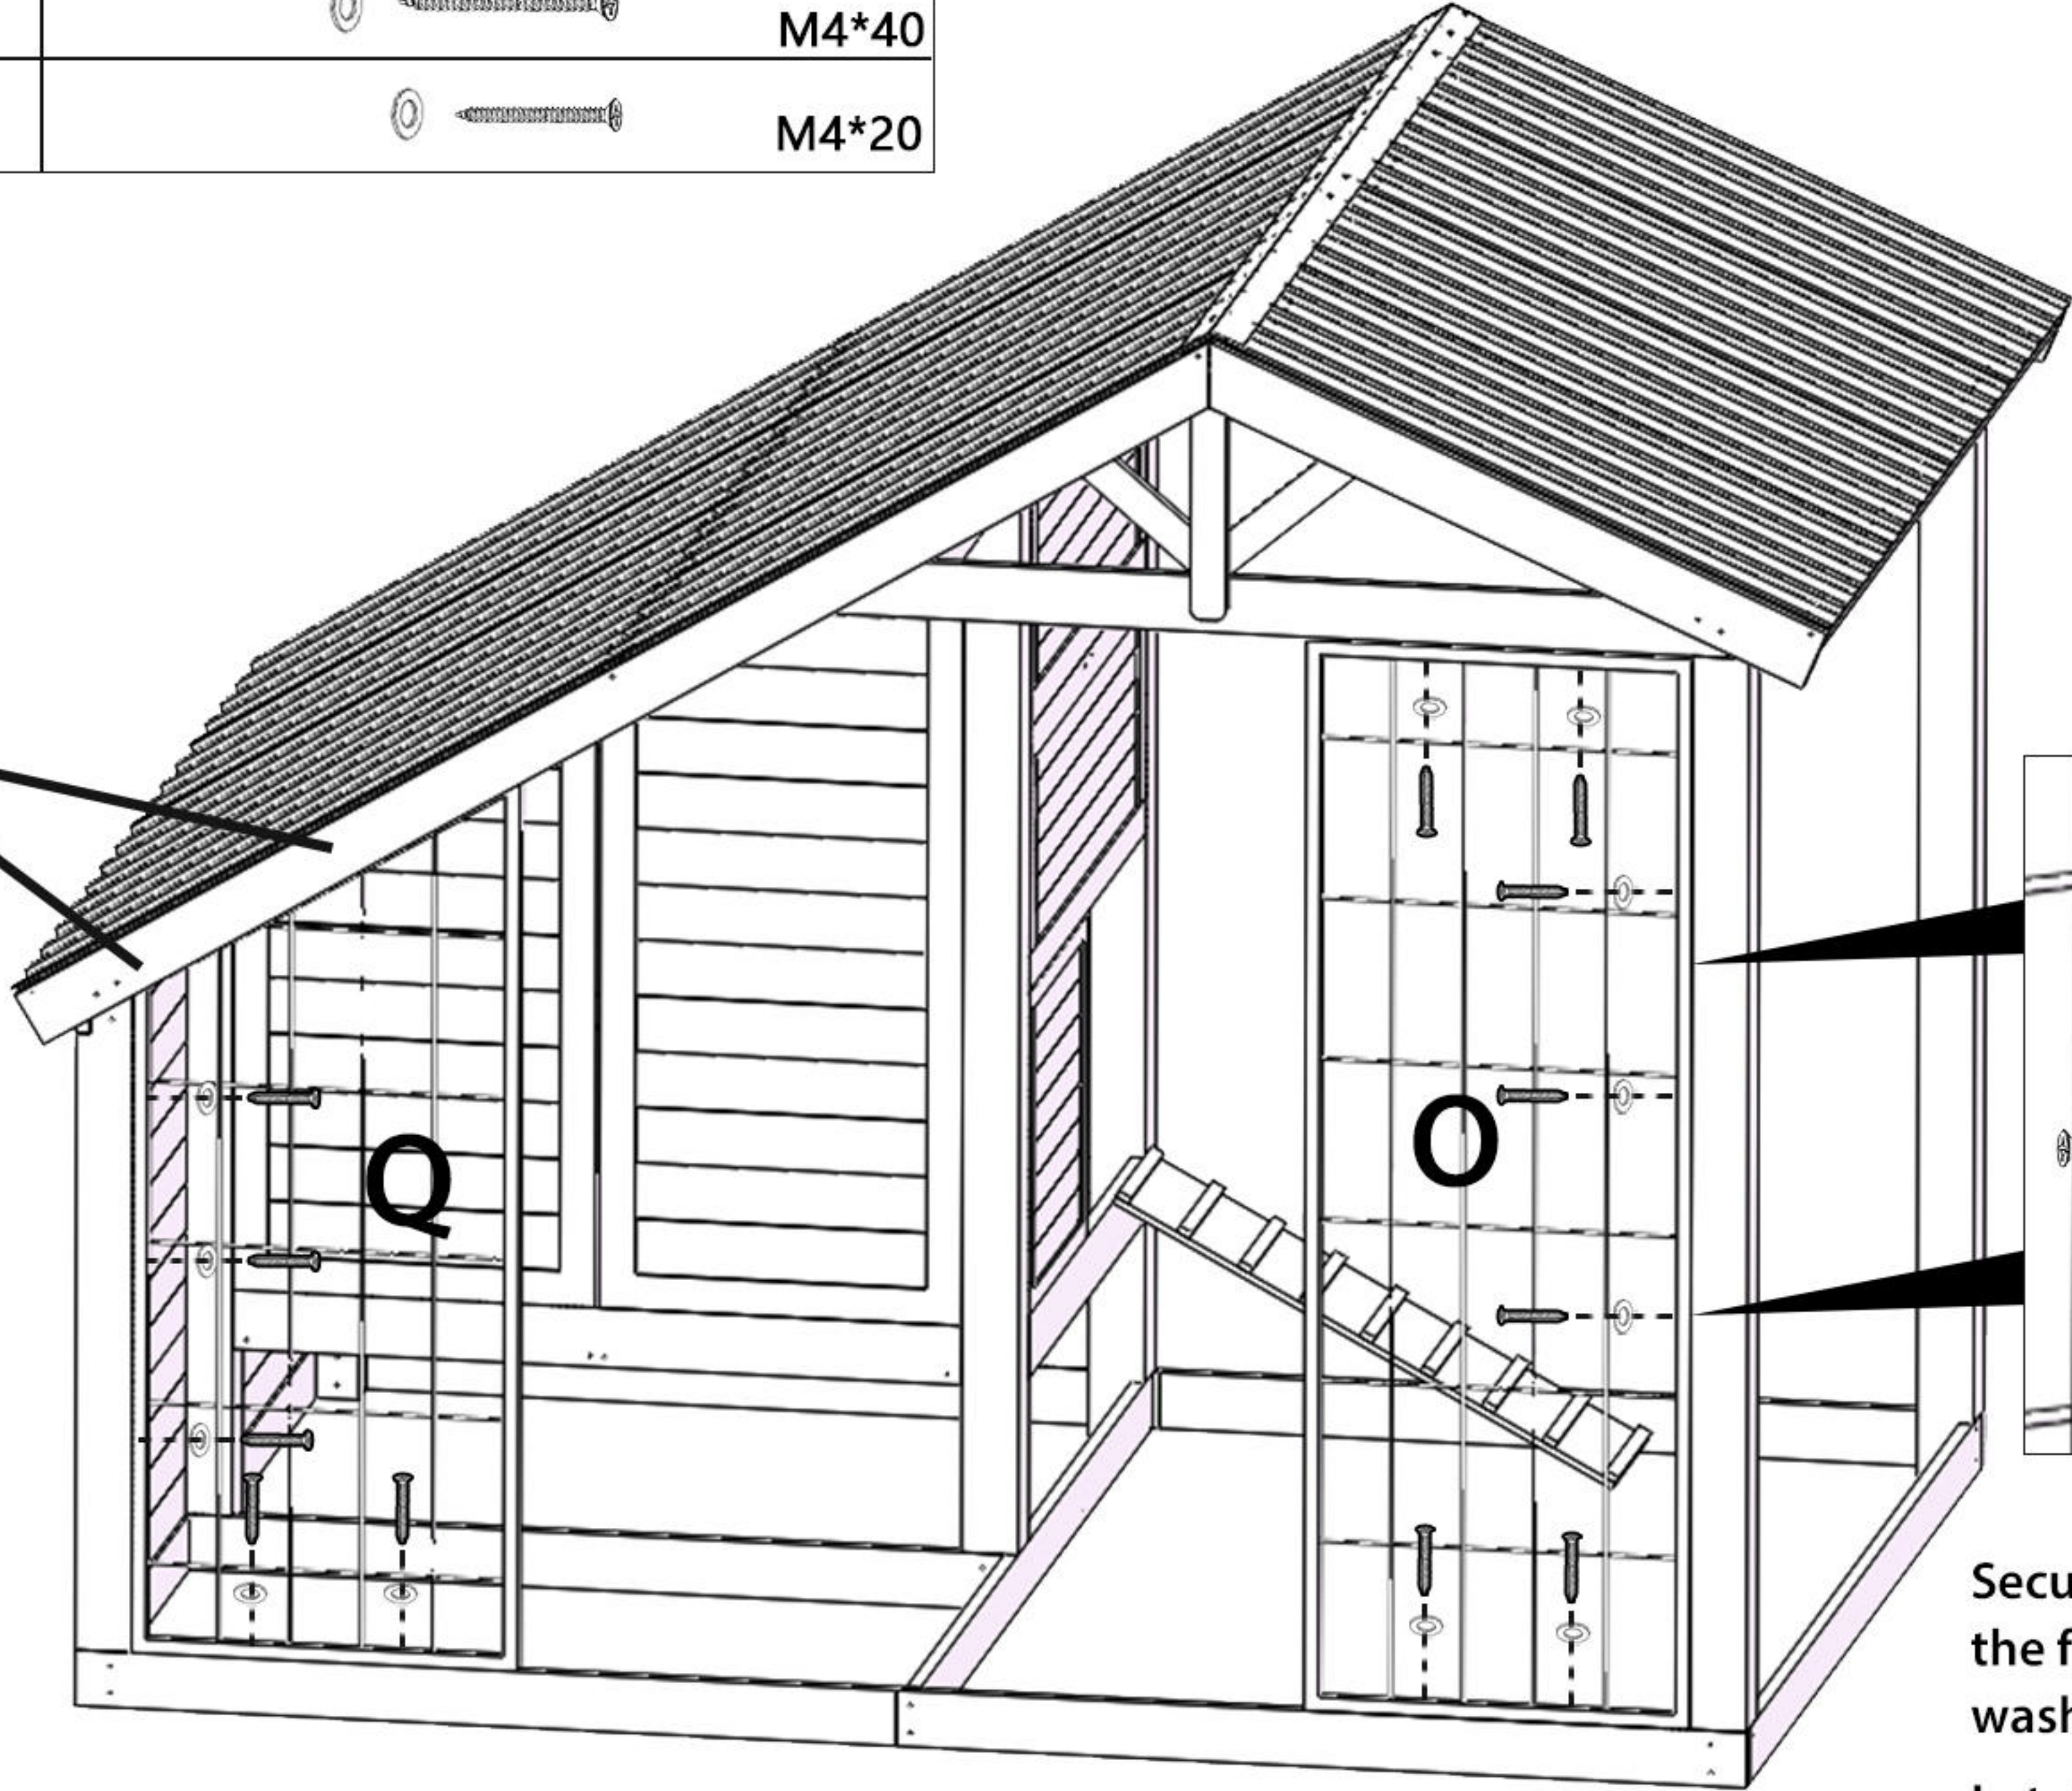


Secure the wire mesh panel O & Q to the frame using 12 No. 4 screws and washers.
In total of 12 connections.

ASSEMBLY INSTRUCTION



STEP 22

STAMP ID	QTY REQ	BOX	IMAGE
O	3	C	
4	21	A	 M4*40
R	1	C	
8	3	A	 M6*30
Single pack without Mark		A	
6	7	A	 M4*70



Use No. 8 screw sets to secure the panel O with panel R together, 3 connections in total.

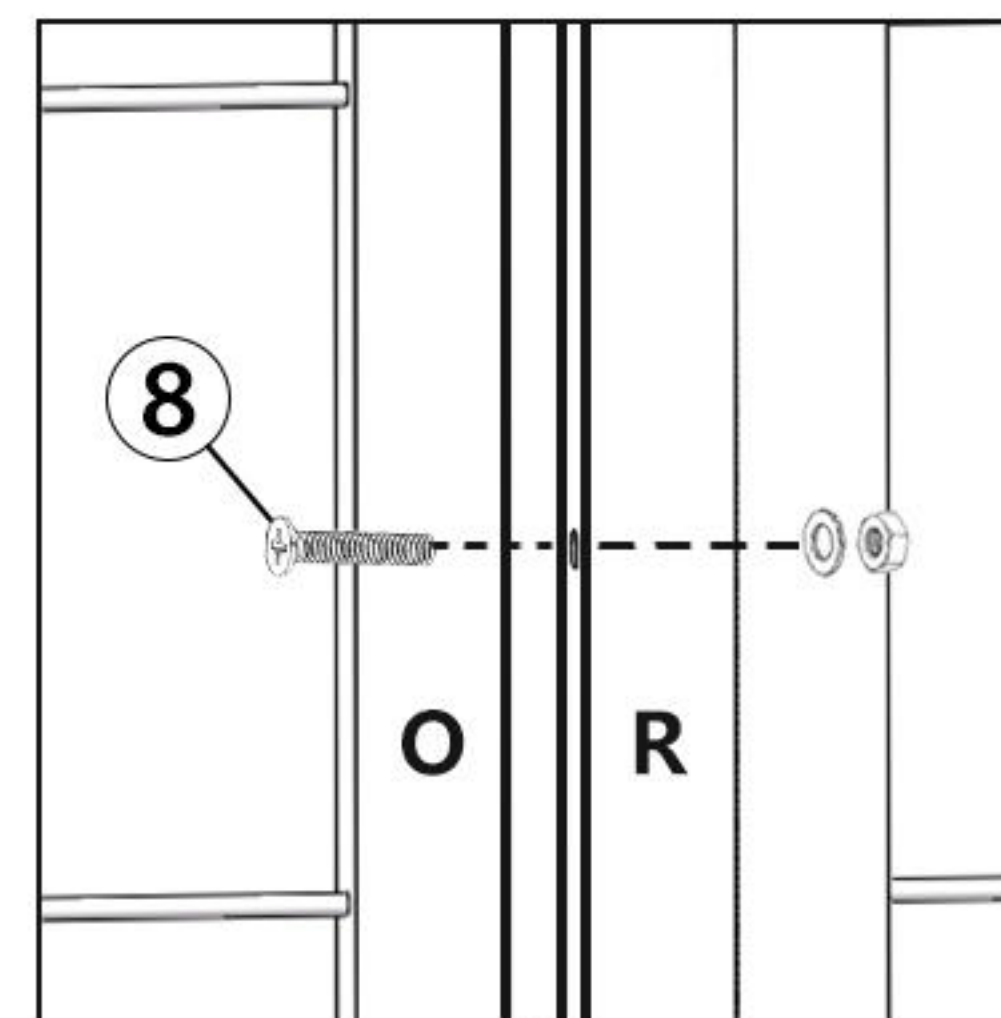

Fix the wire mesh panel R to the frame using 7 No. 6 screws and washers. There are 7 connection points, each requiring 1 screw.

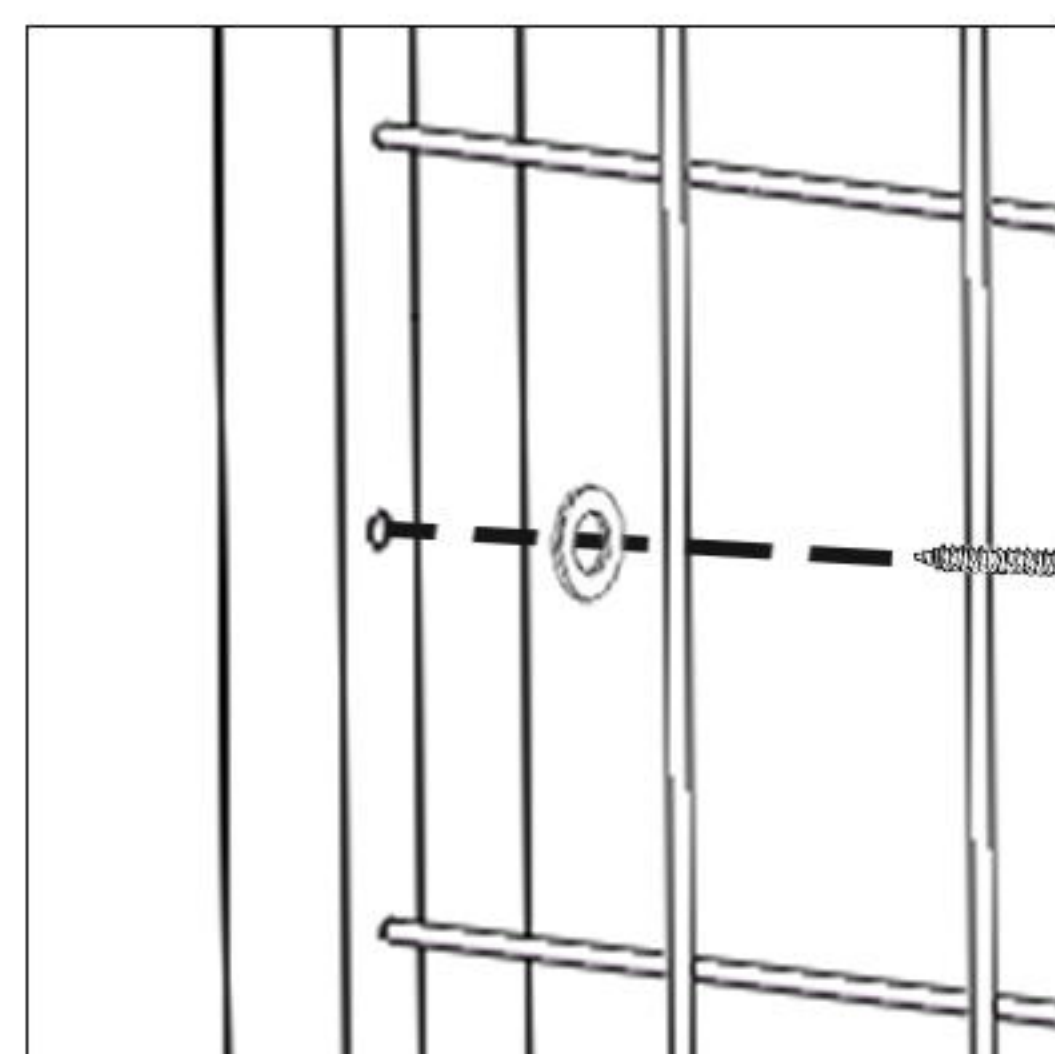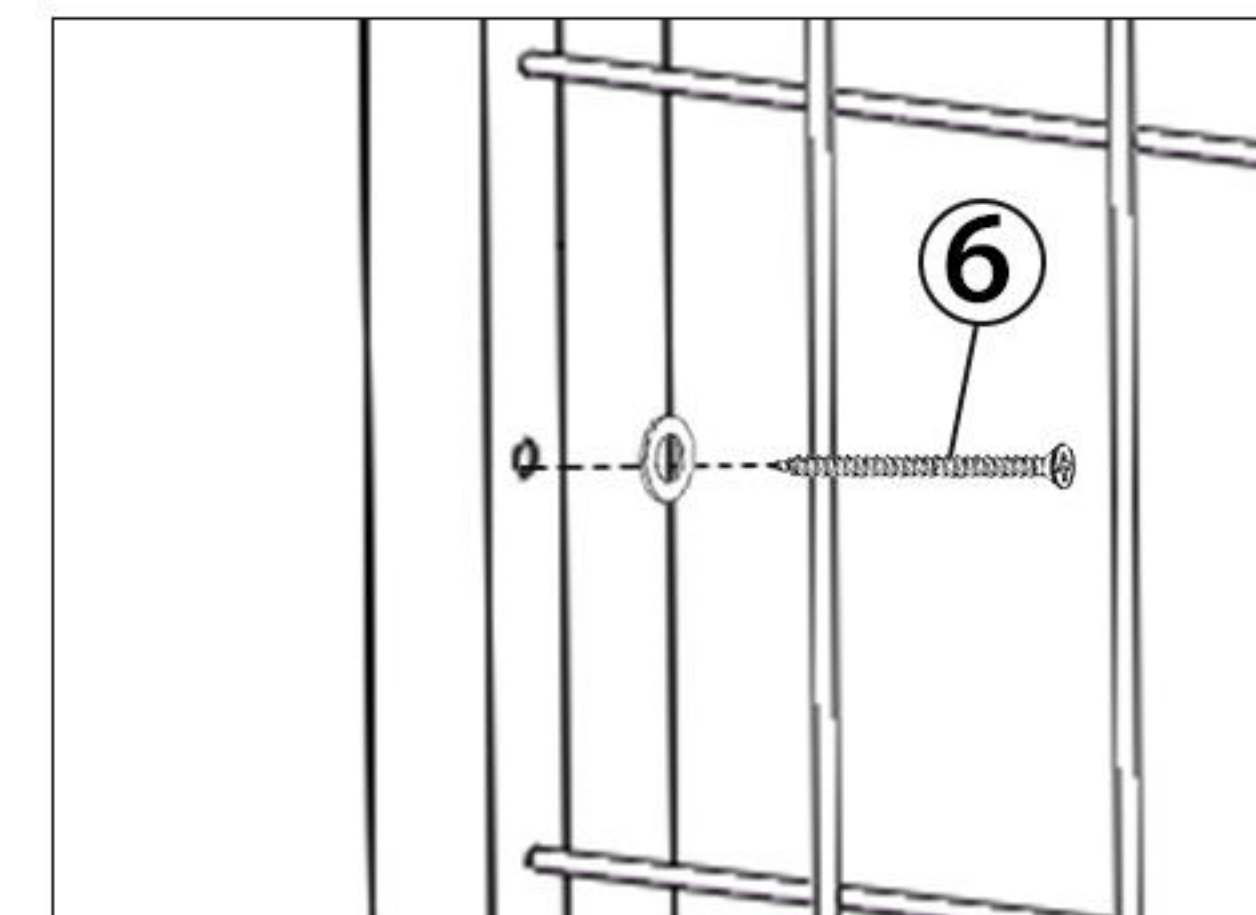



Fix the wire mesh 3 panel O to the frame using 21 No. 4 screws and washers. There are 21 connection points, each requiring 1 screw.

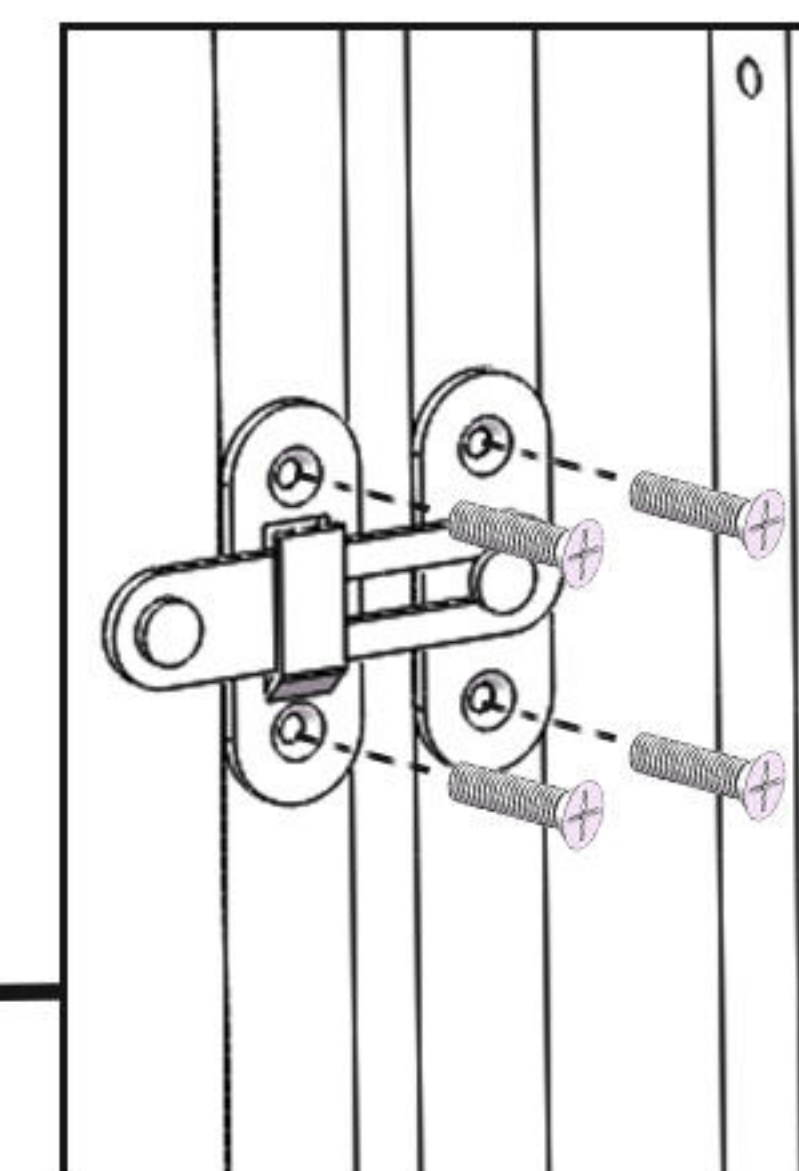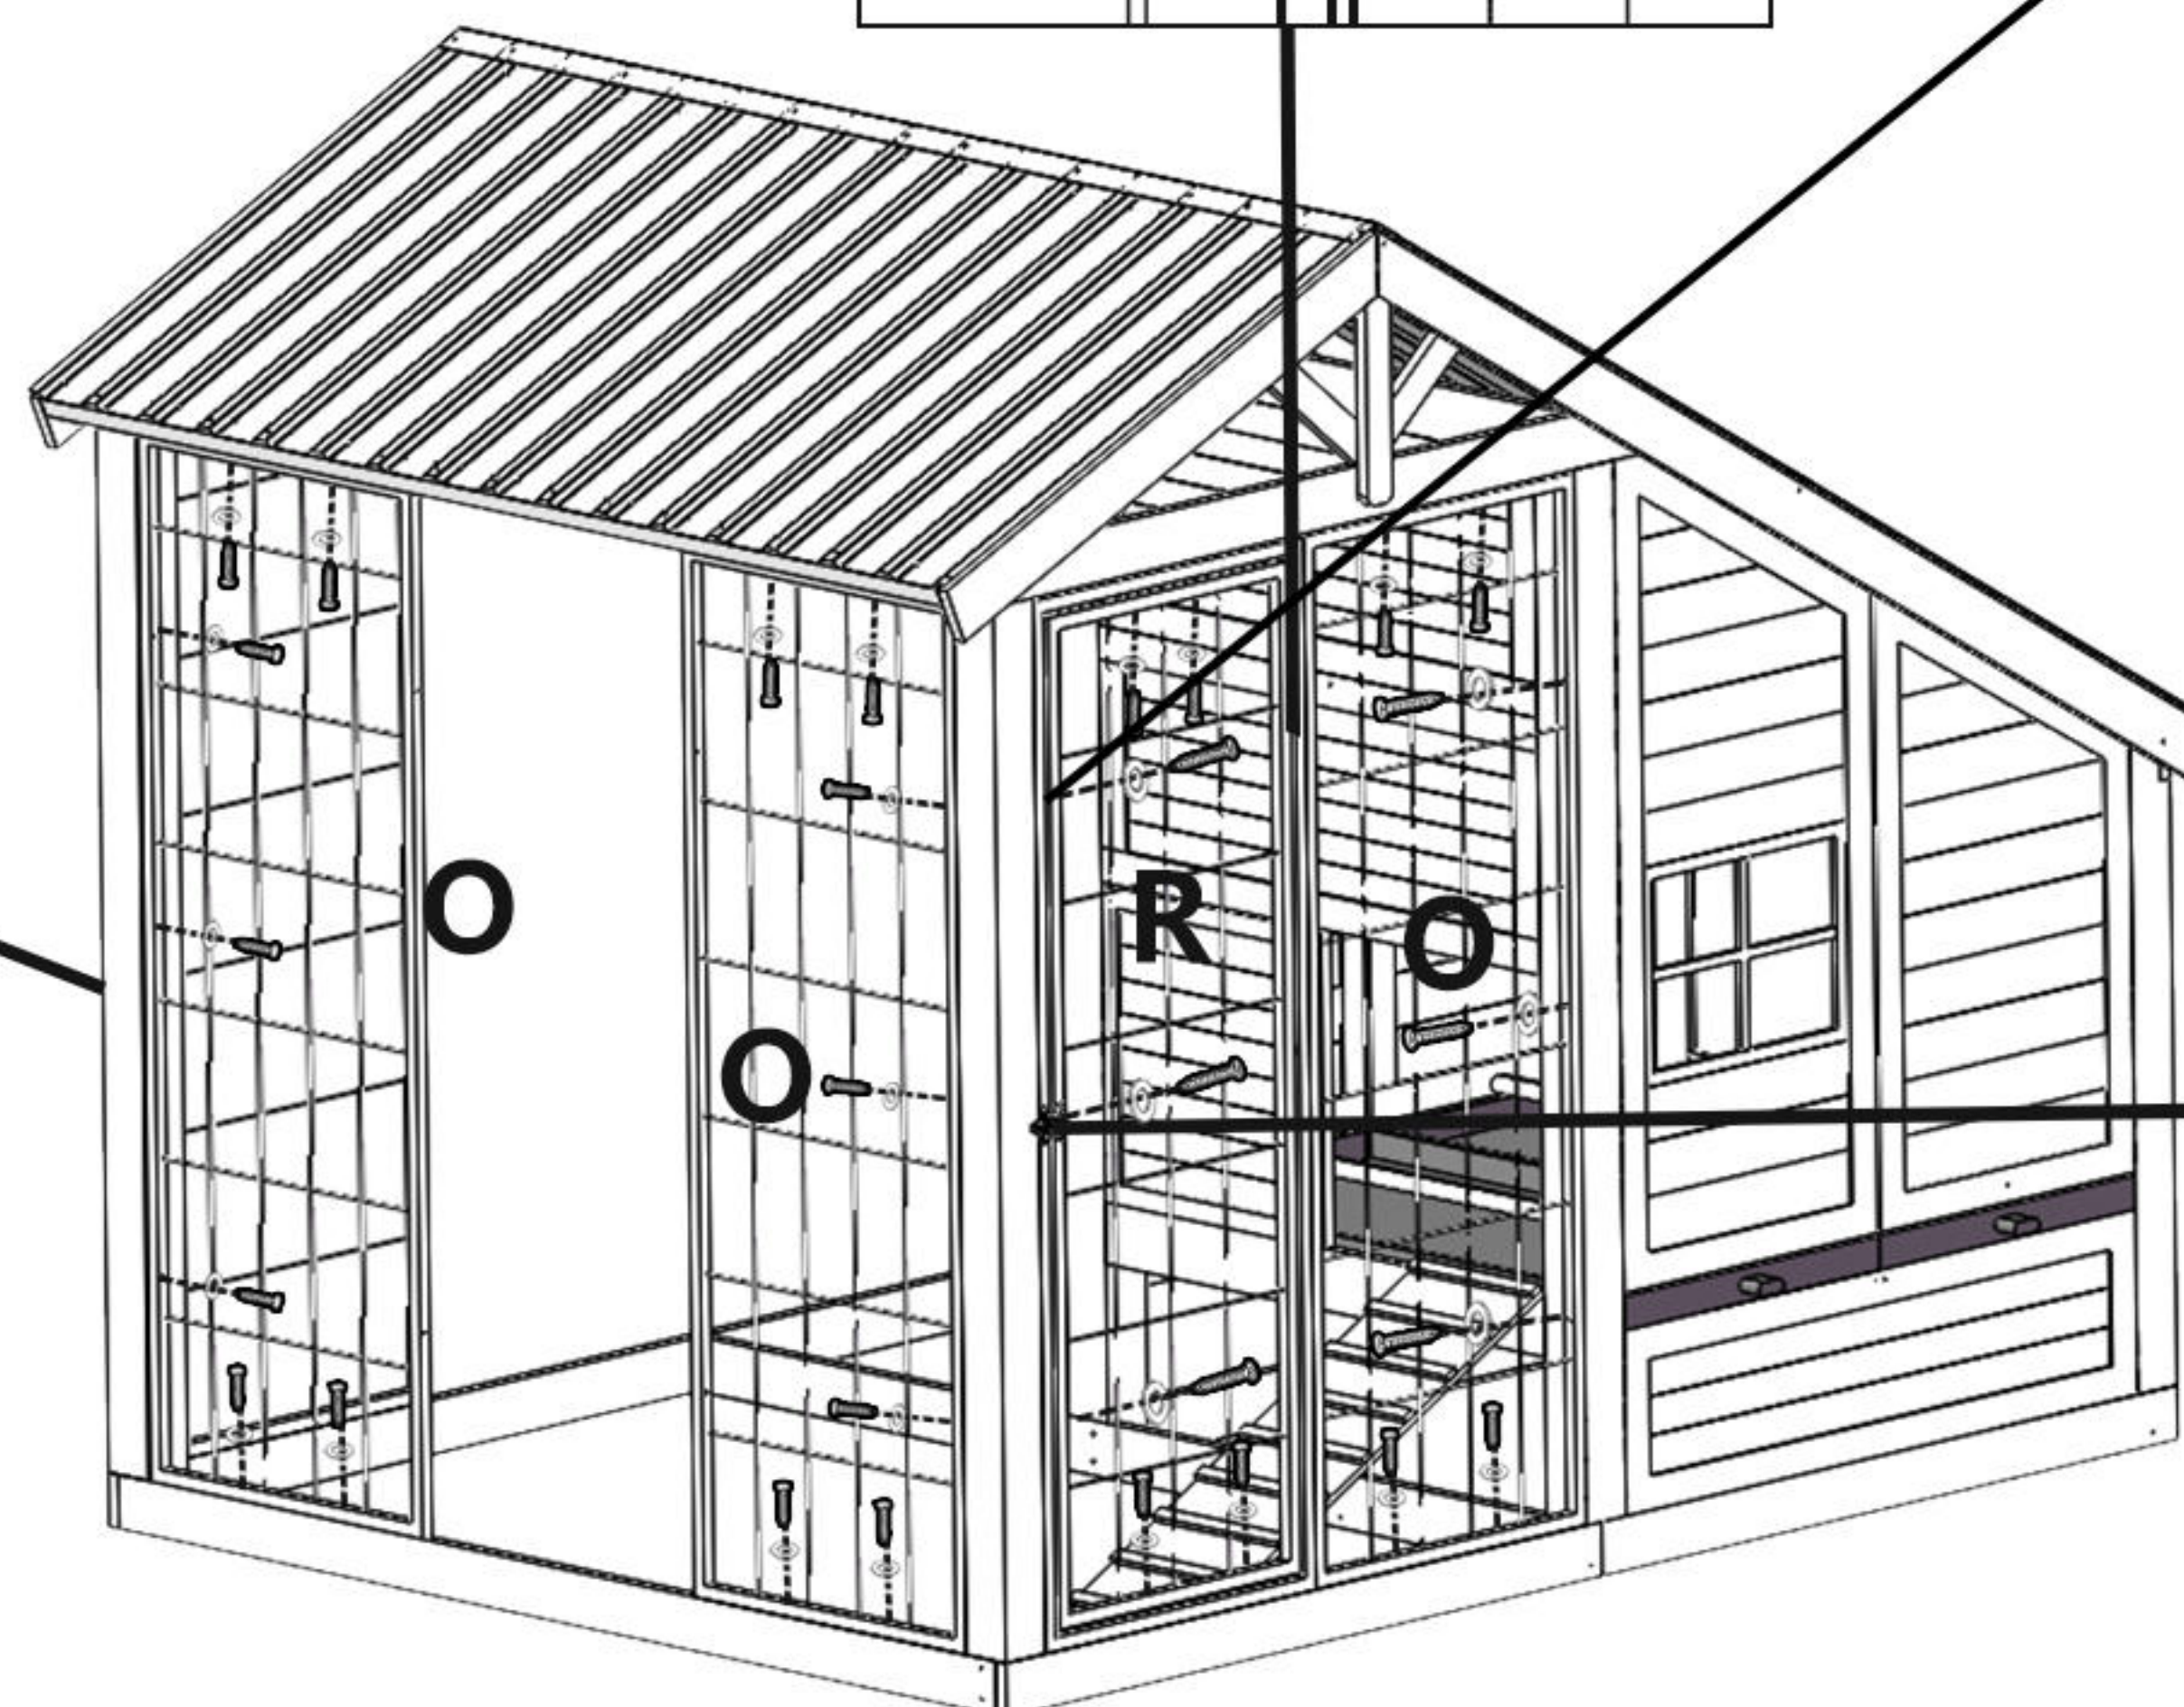


Use 4 screws to secure the lock to the panel R and frame.


ASSEMBLY INSTRUCTION

STEP 23


STAMP ID	QTY REQ	BOX	IMAGE
O	2	C	
9	15	A	 M6*10
P	1	C	
4	11	A	 M4*40
3	2	A	 M4*20

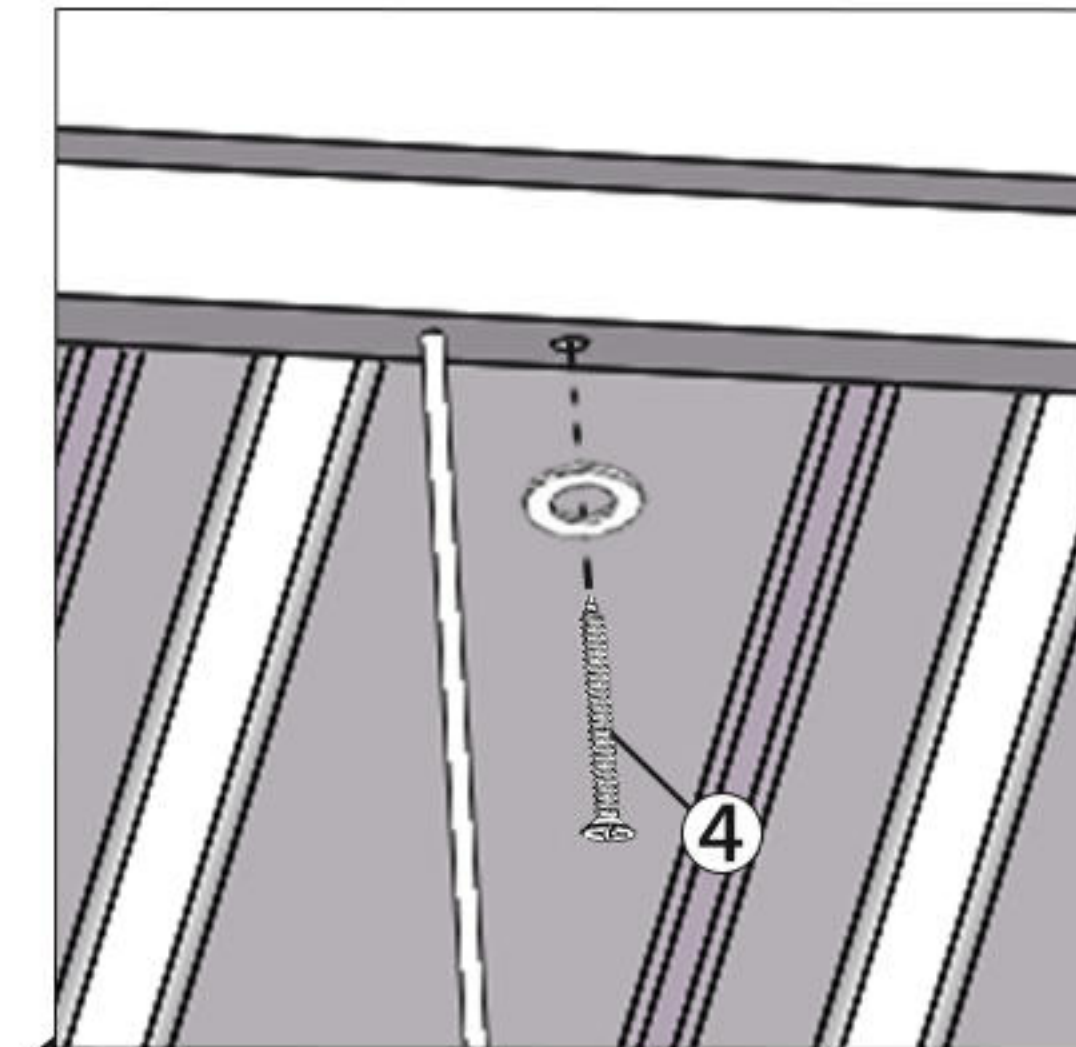



Secure 2 panel O & 1 Panel P to the frame using 11 No. 4 screws and washers.
11 connections in total, each connection use 1 No.4 screws and washers.

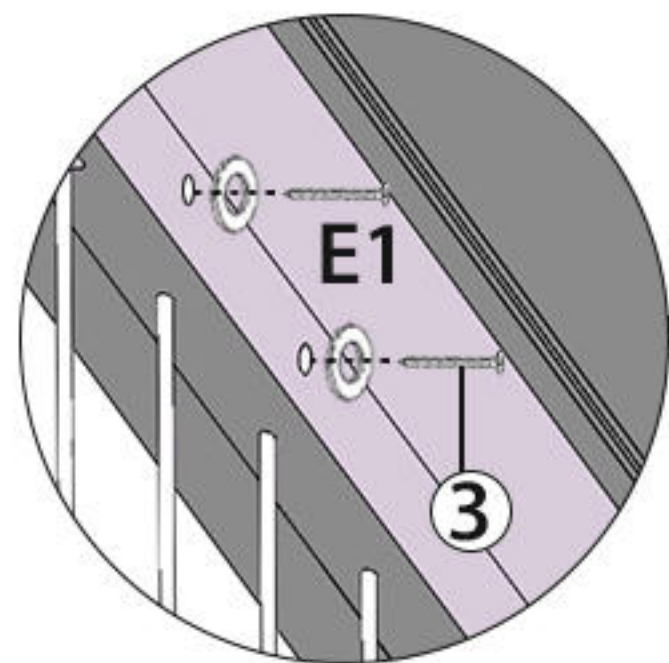

Secure the wire mesh panel P to the frame using 2 No. 3 screws



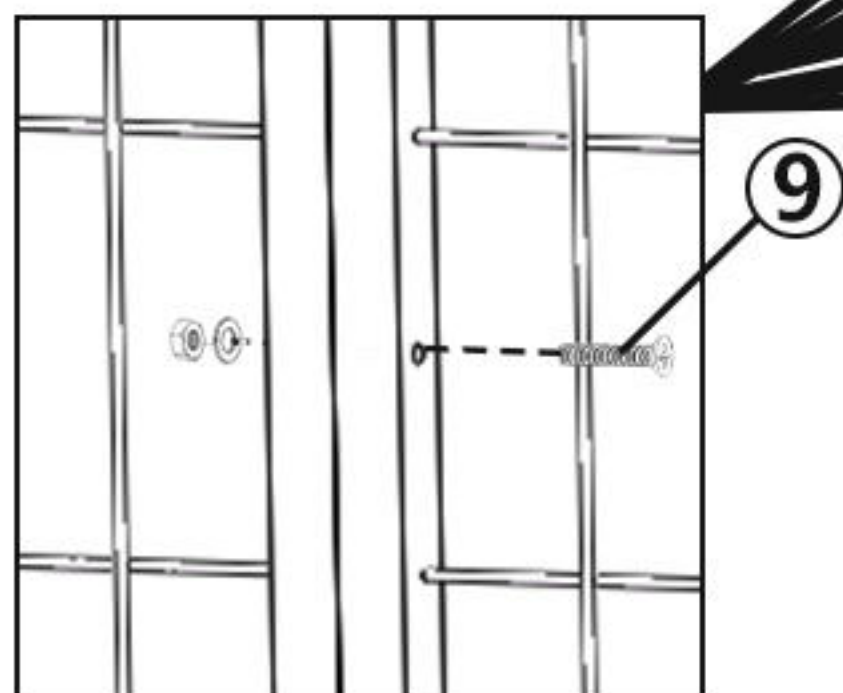


Use No. 9 screw sets to secure the panel O with panel O, panel O and panel P, panel P and panel Q together, 15 connections in total.

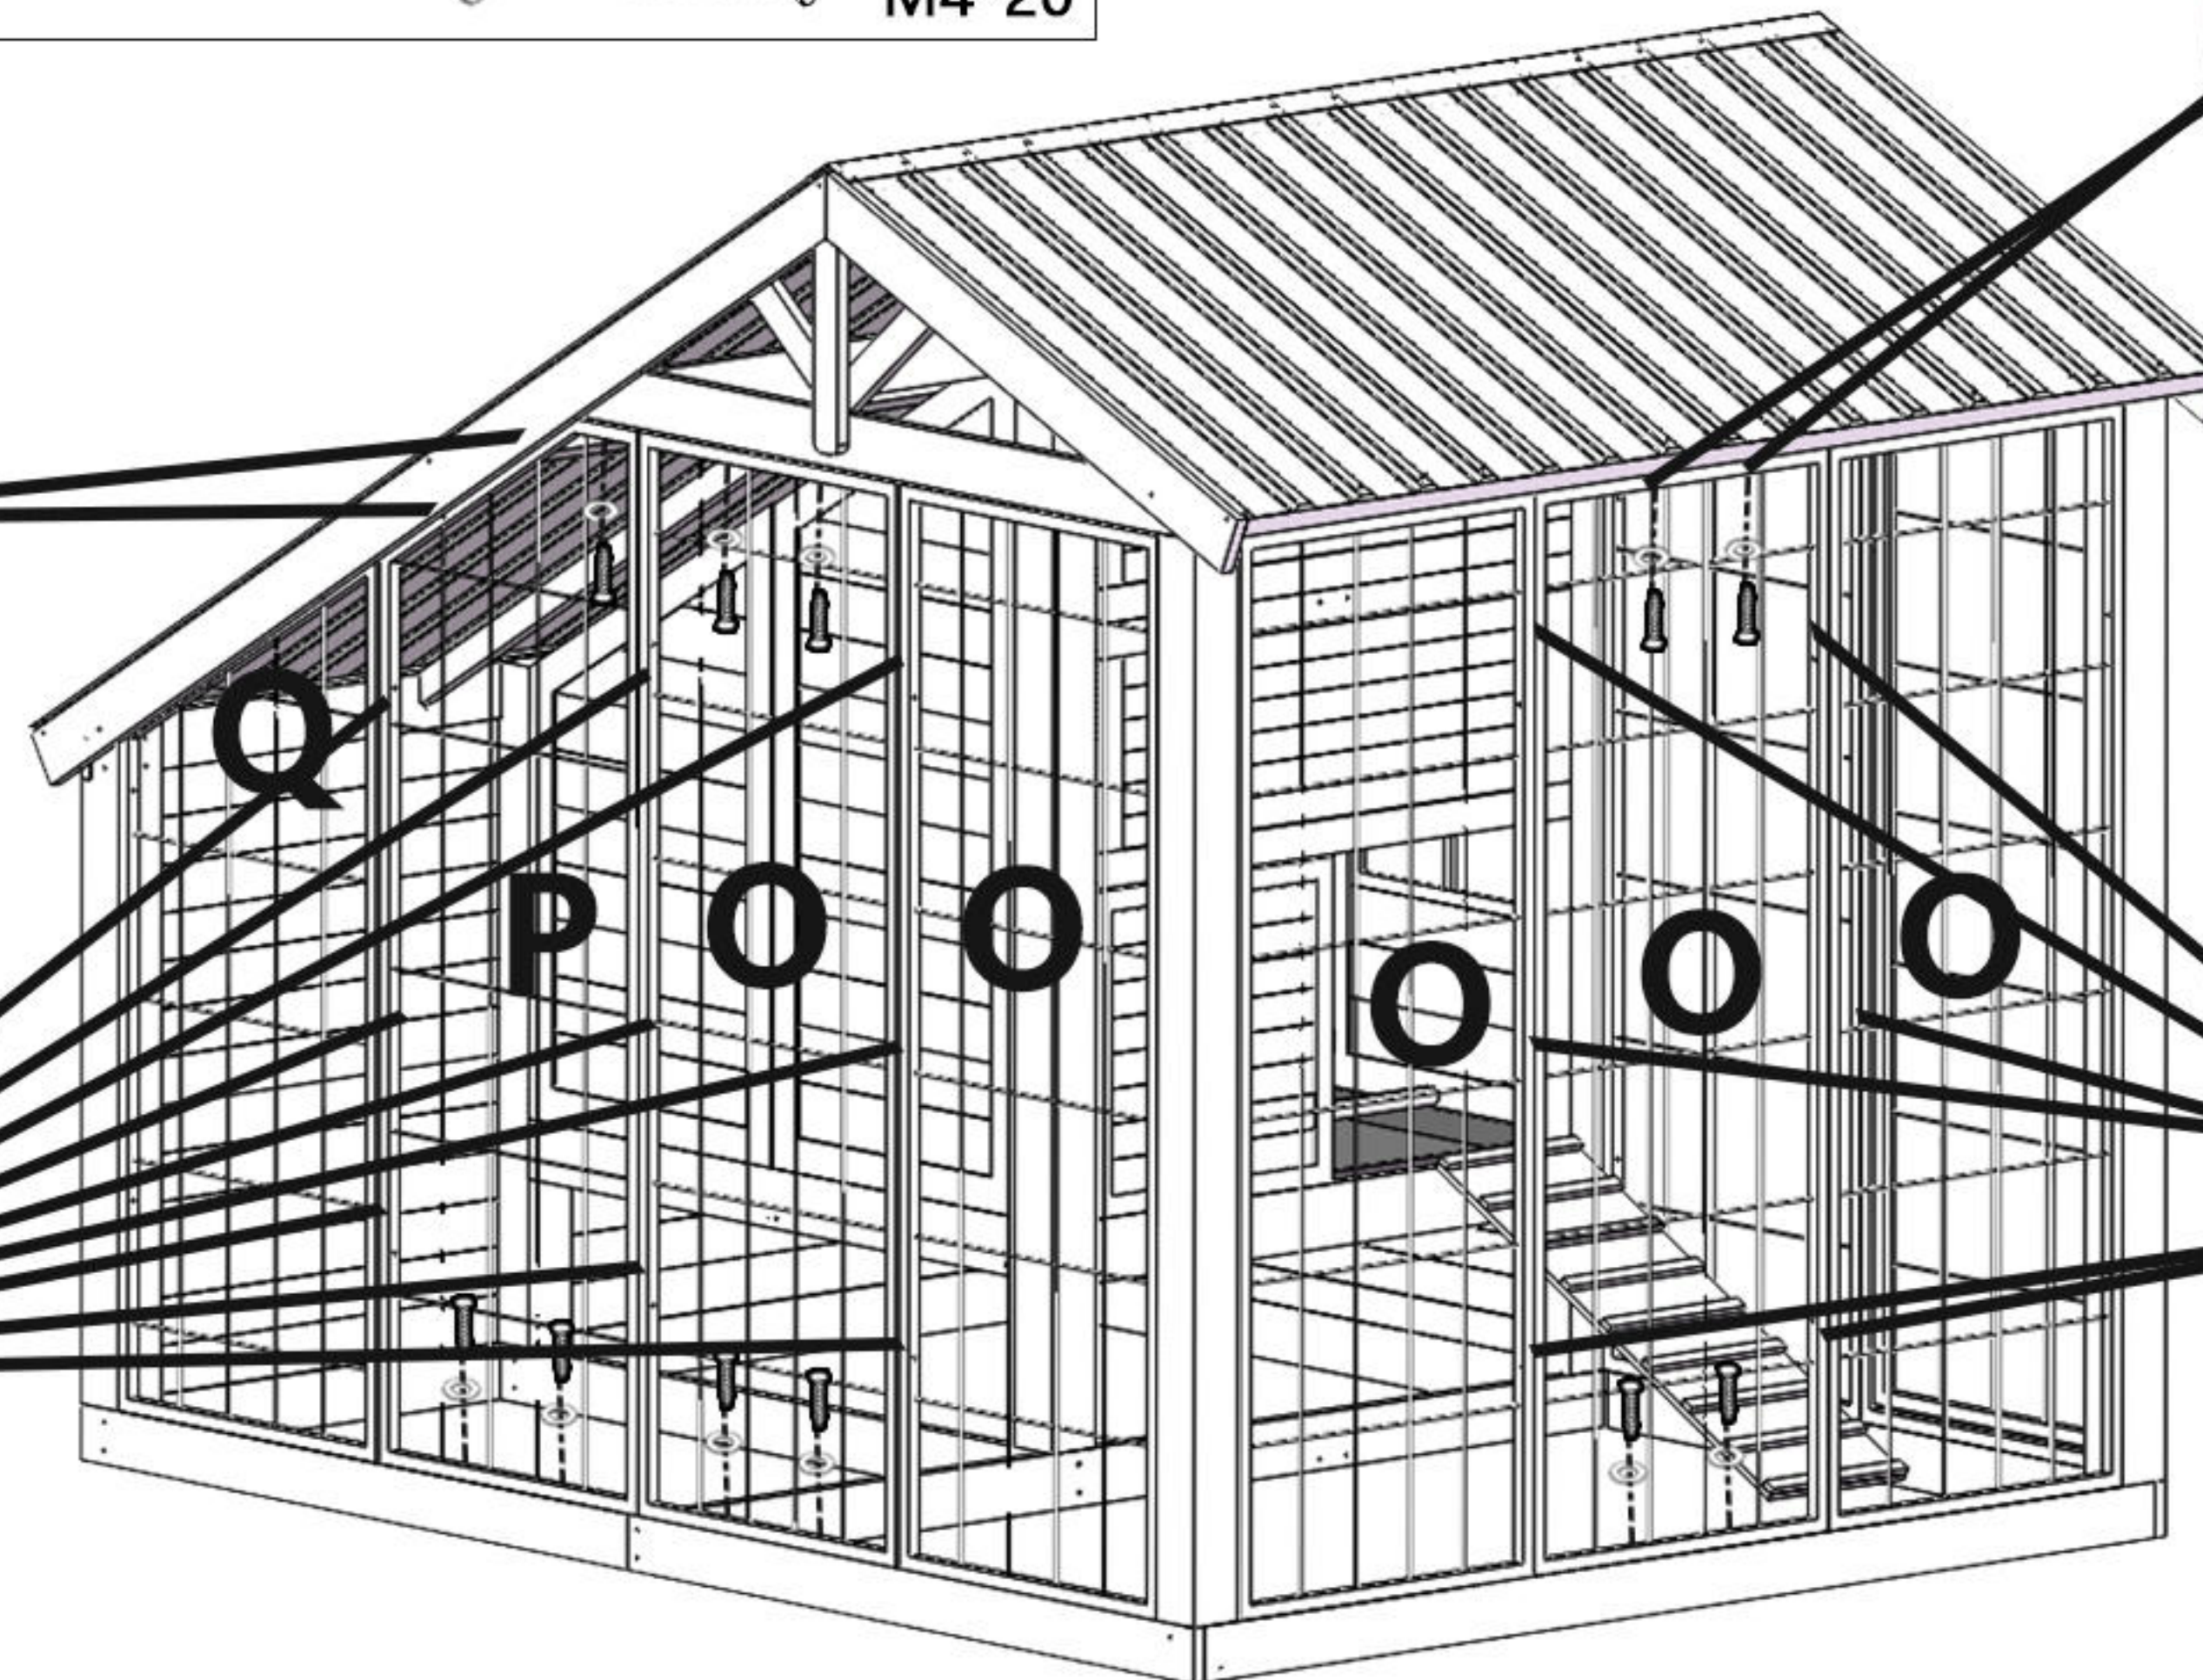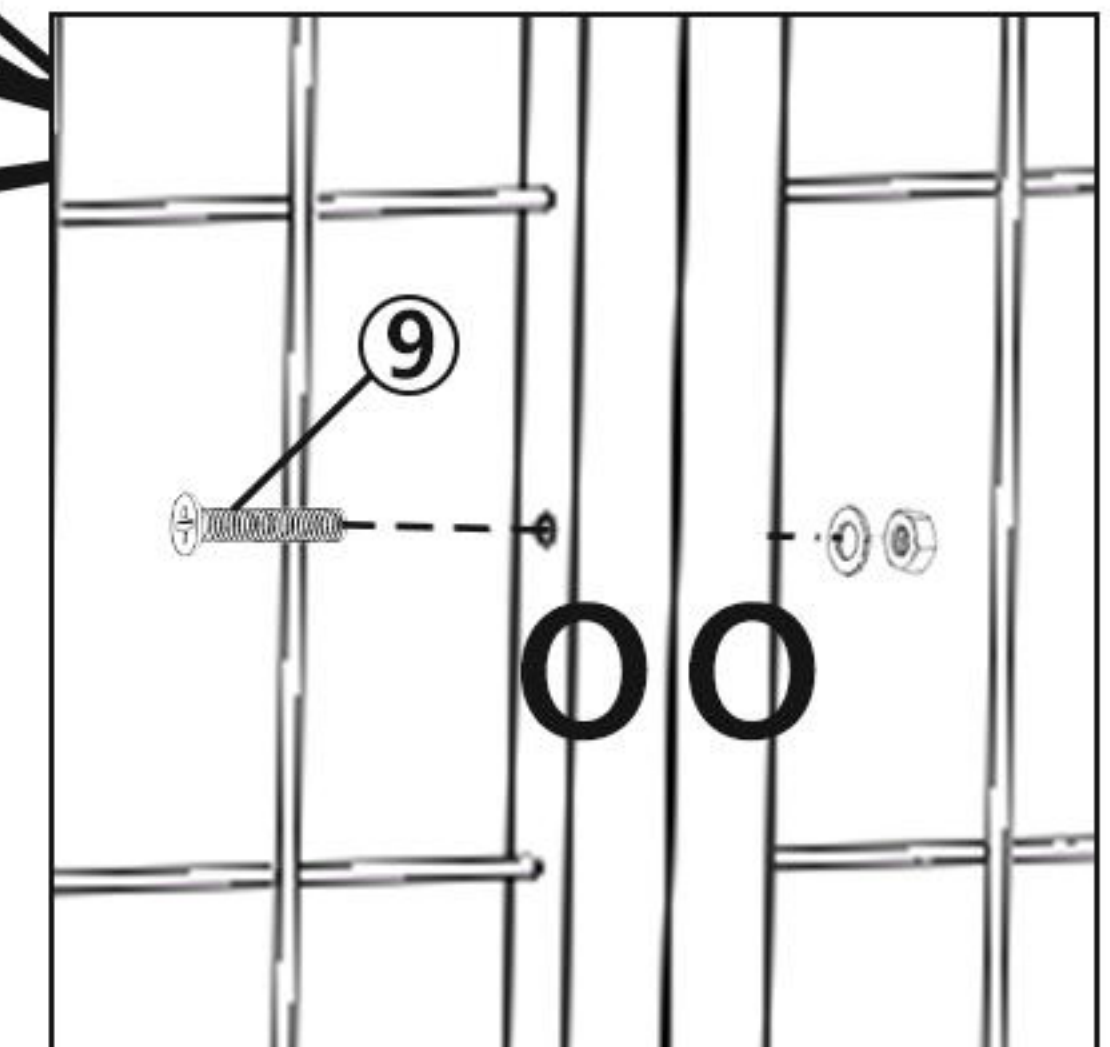


ASSEMBLY INSTRUCTION


STEP 24

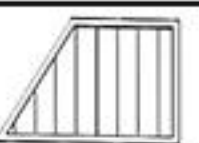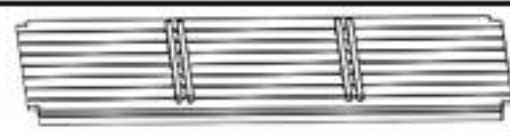STAMP ID	QTY REQ	BOX	IMAGE	
T3	1	B		
T4	1	B		
T5	1	B		
4	5	A		M4*40
T6	1	B		

1: Secure panels T4 and T3 to panel T5 using 4 No. 4 screws.

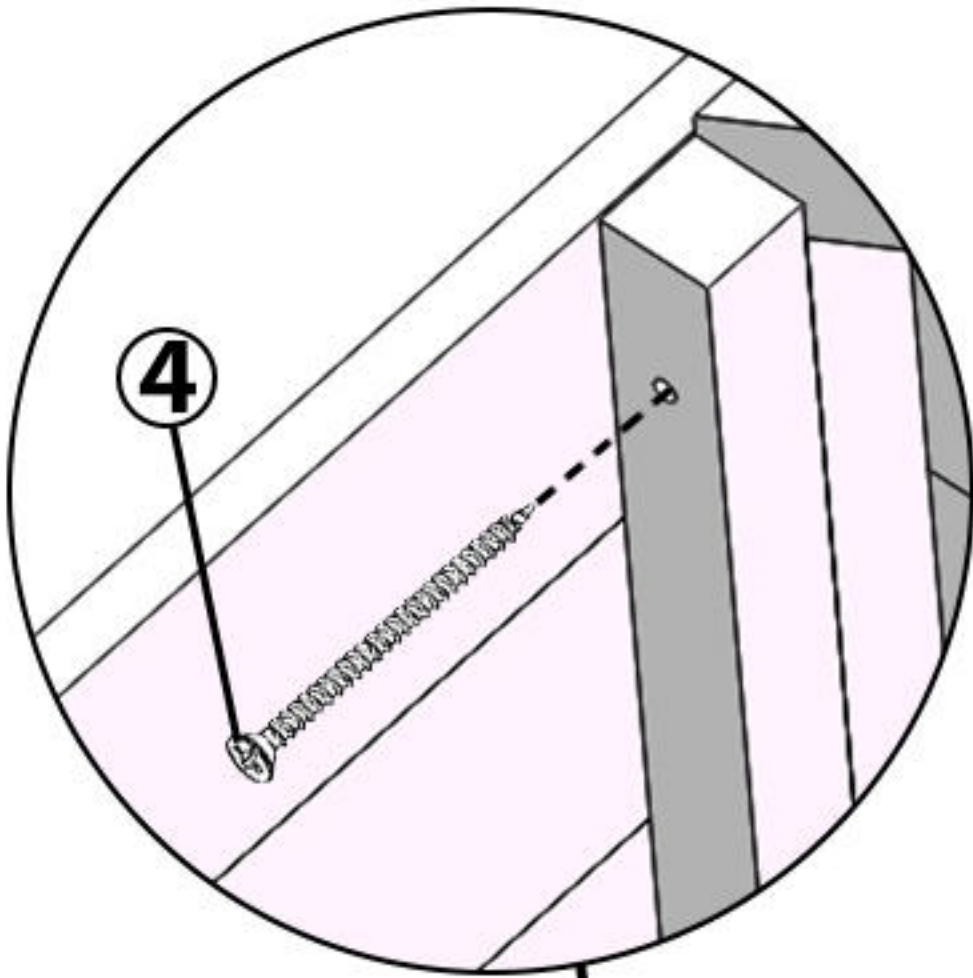


2: Secure panel T6 to panel T5 using 1 No. 4 screw.

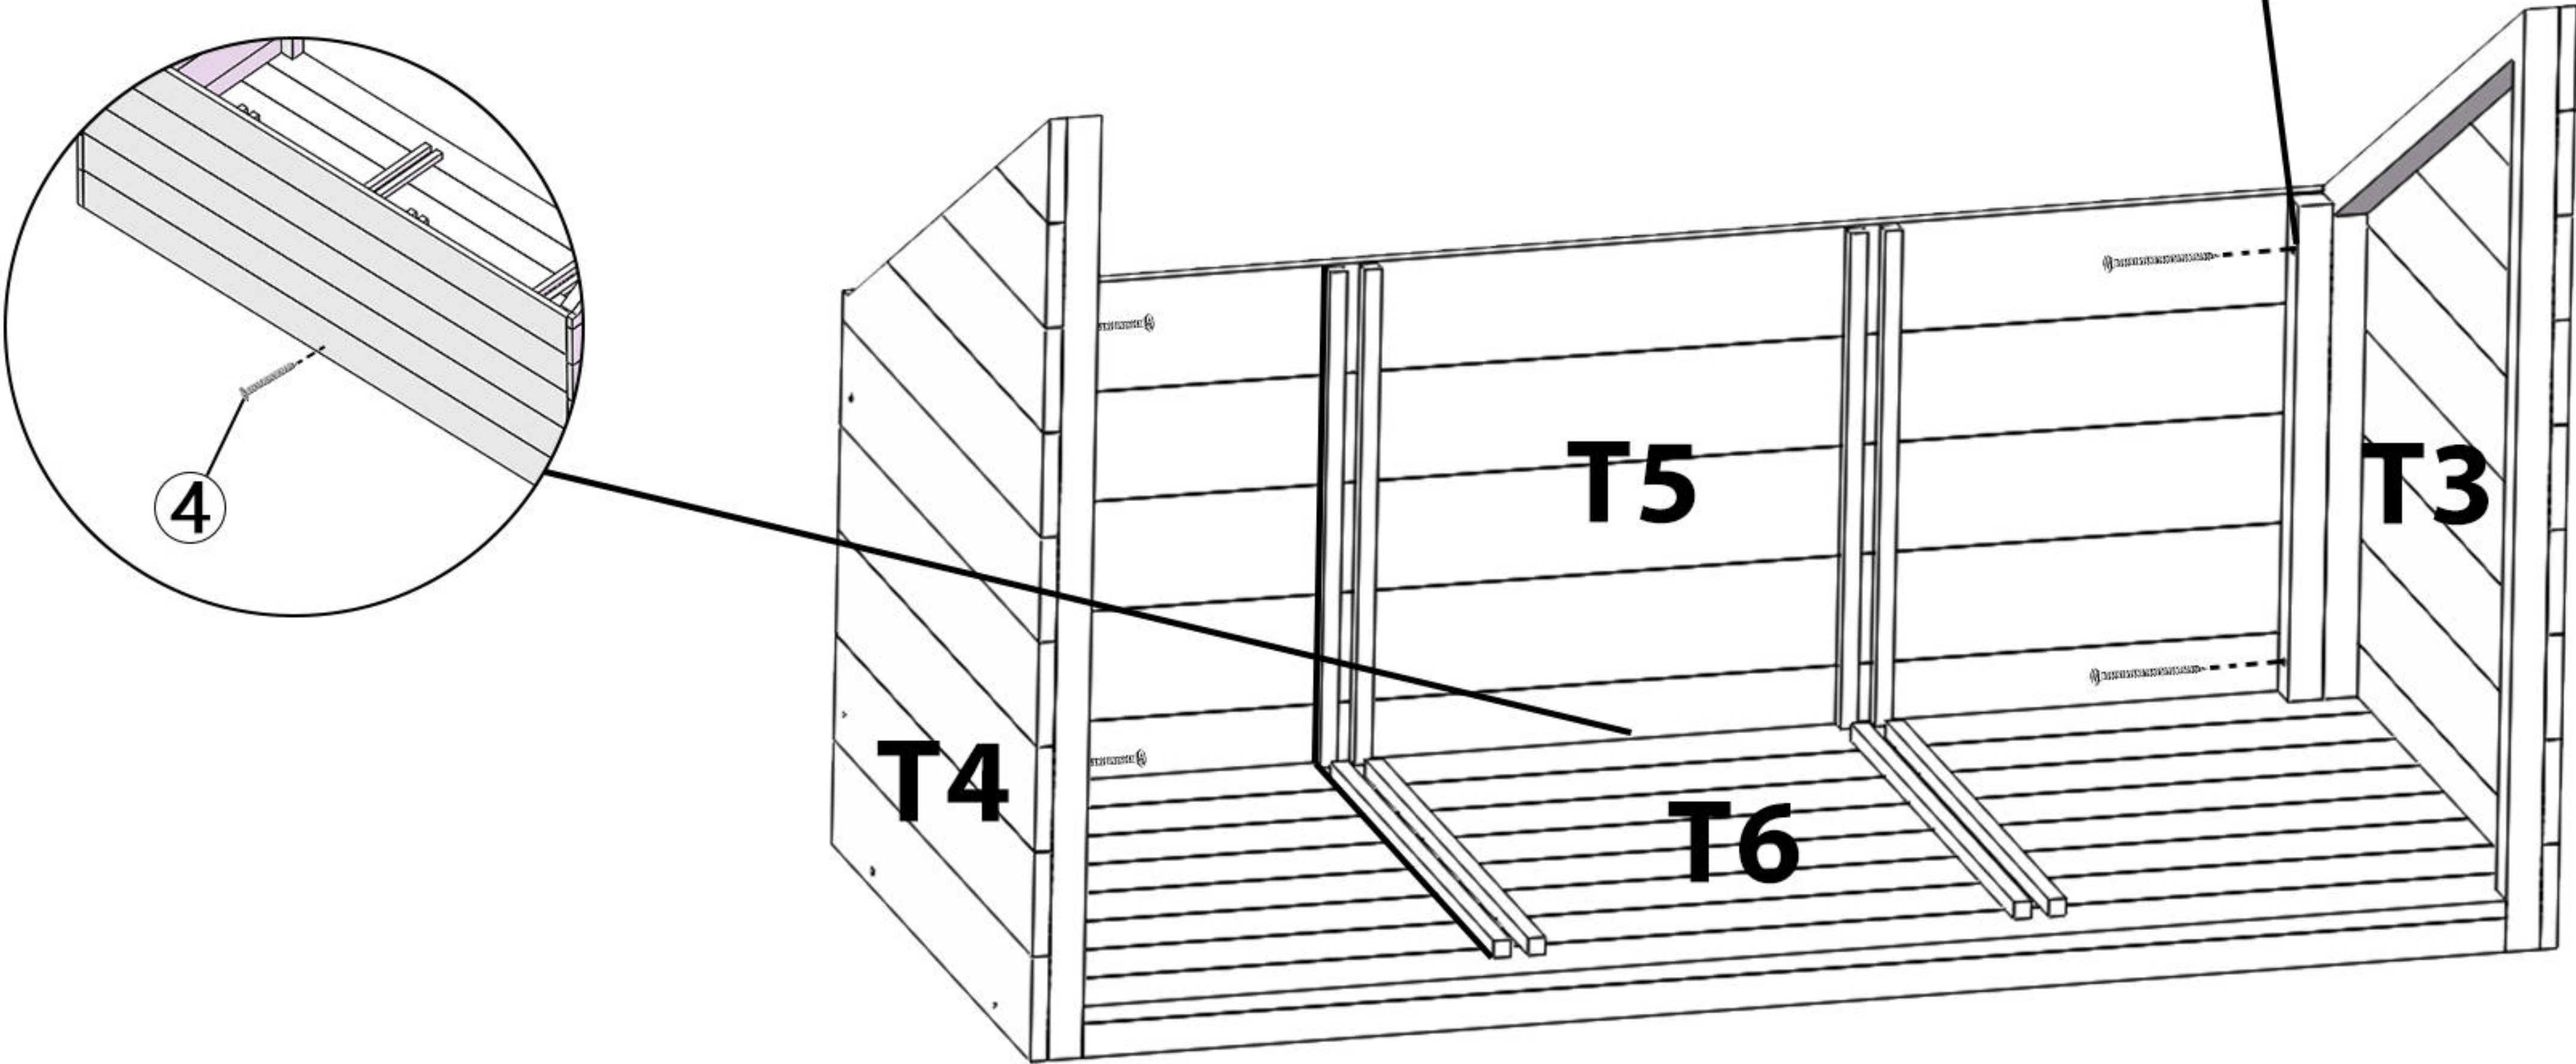


⚠ Warning: Before tightening all screws, ensure the slots on the corresponding panels are perfectly aligned.

ASSEMBLY INSTRUCTION

STEP 25

STAMP ID	QTY REQ	BOX	IMAGE
4	4	A	 M4*40





Secure the sub-assembly from Step 24 to the coop frame using 4 No. 4 screws.

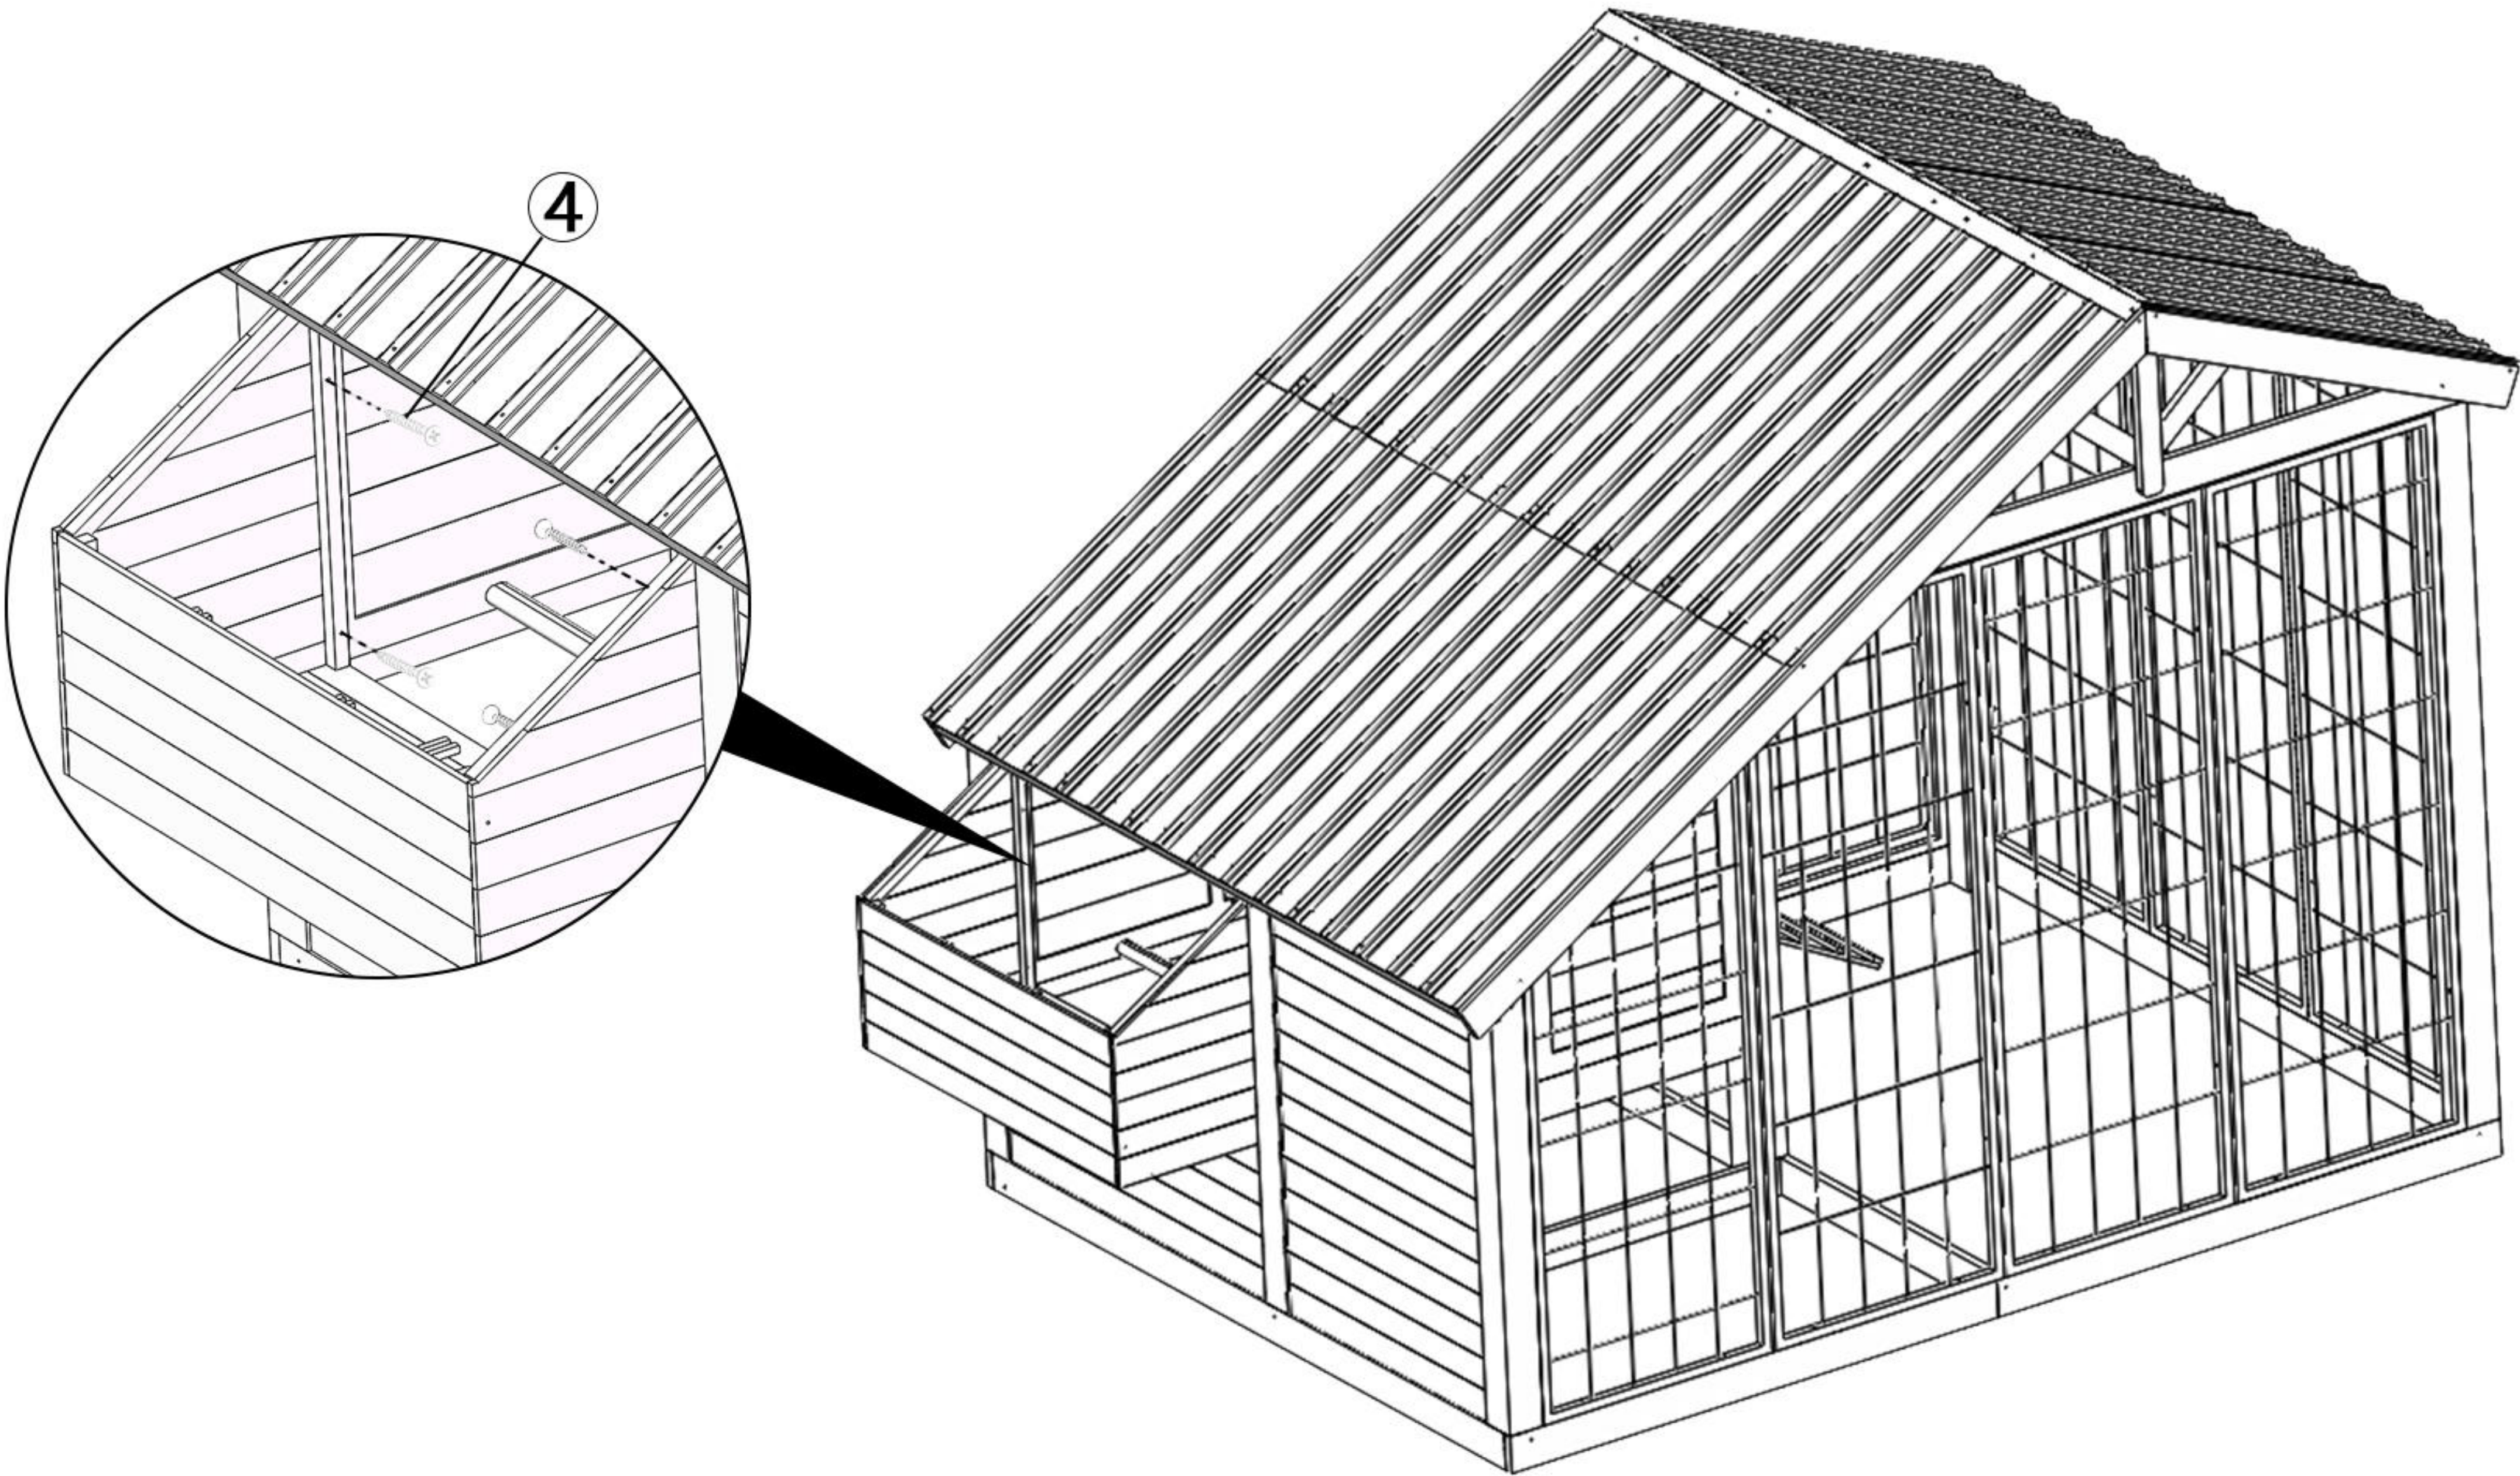

ASSEMBLY INSTRUCTION


STEP 26

STAMP ID	QTY REQ	BOX	IMAGE
U	2	B	

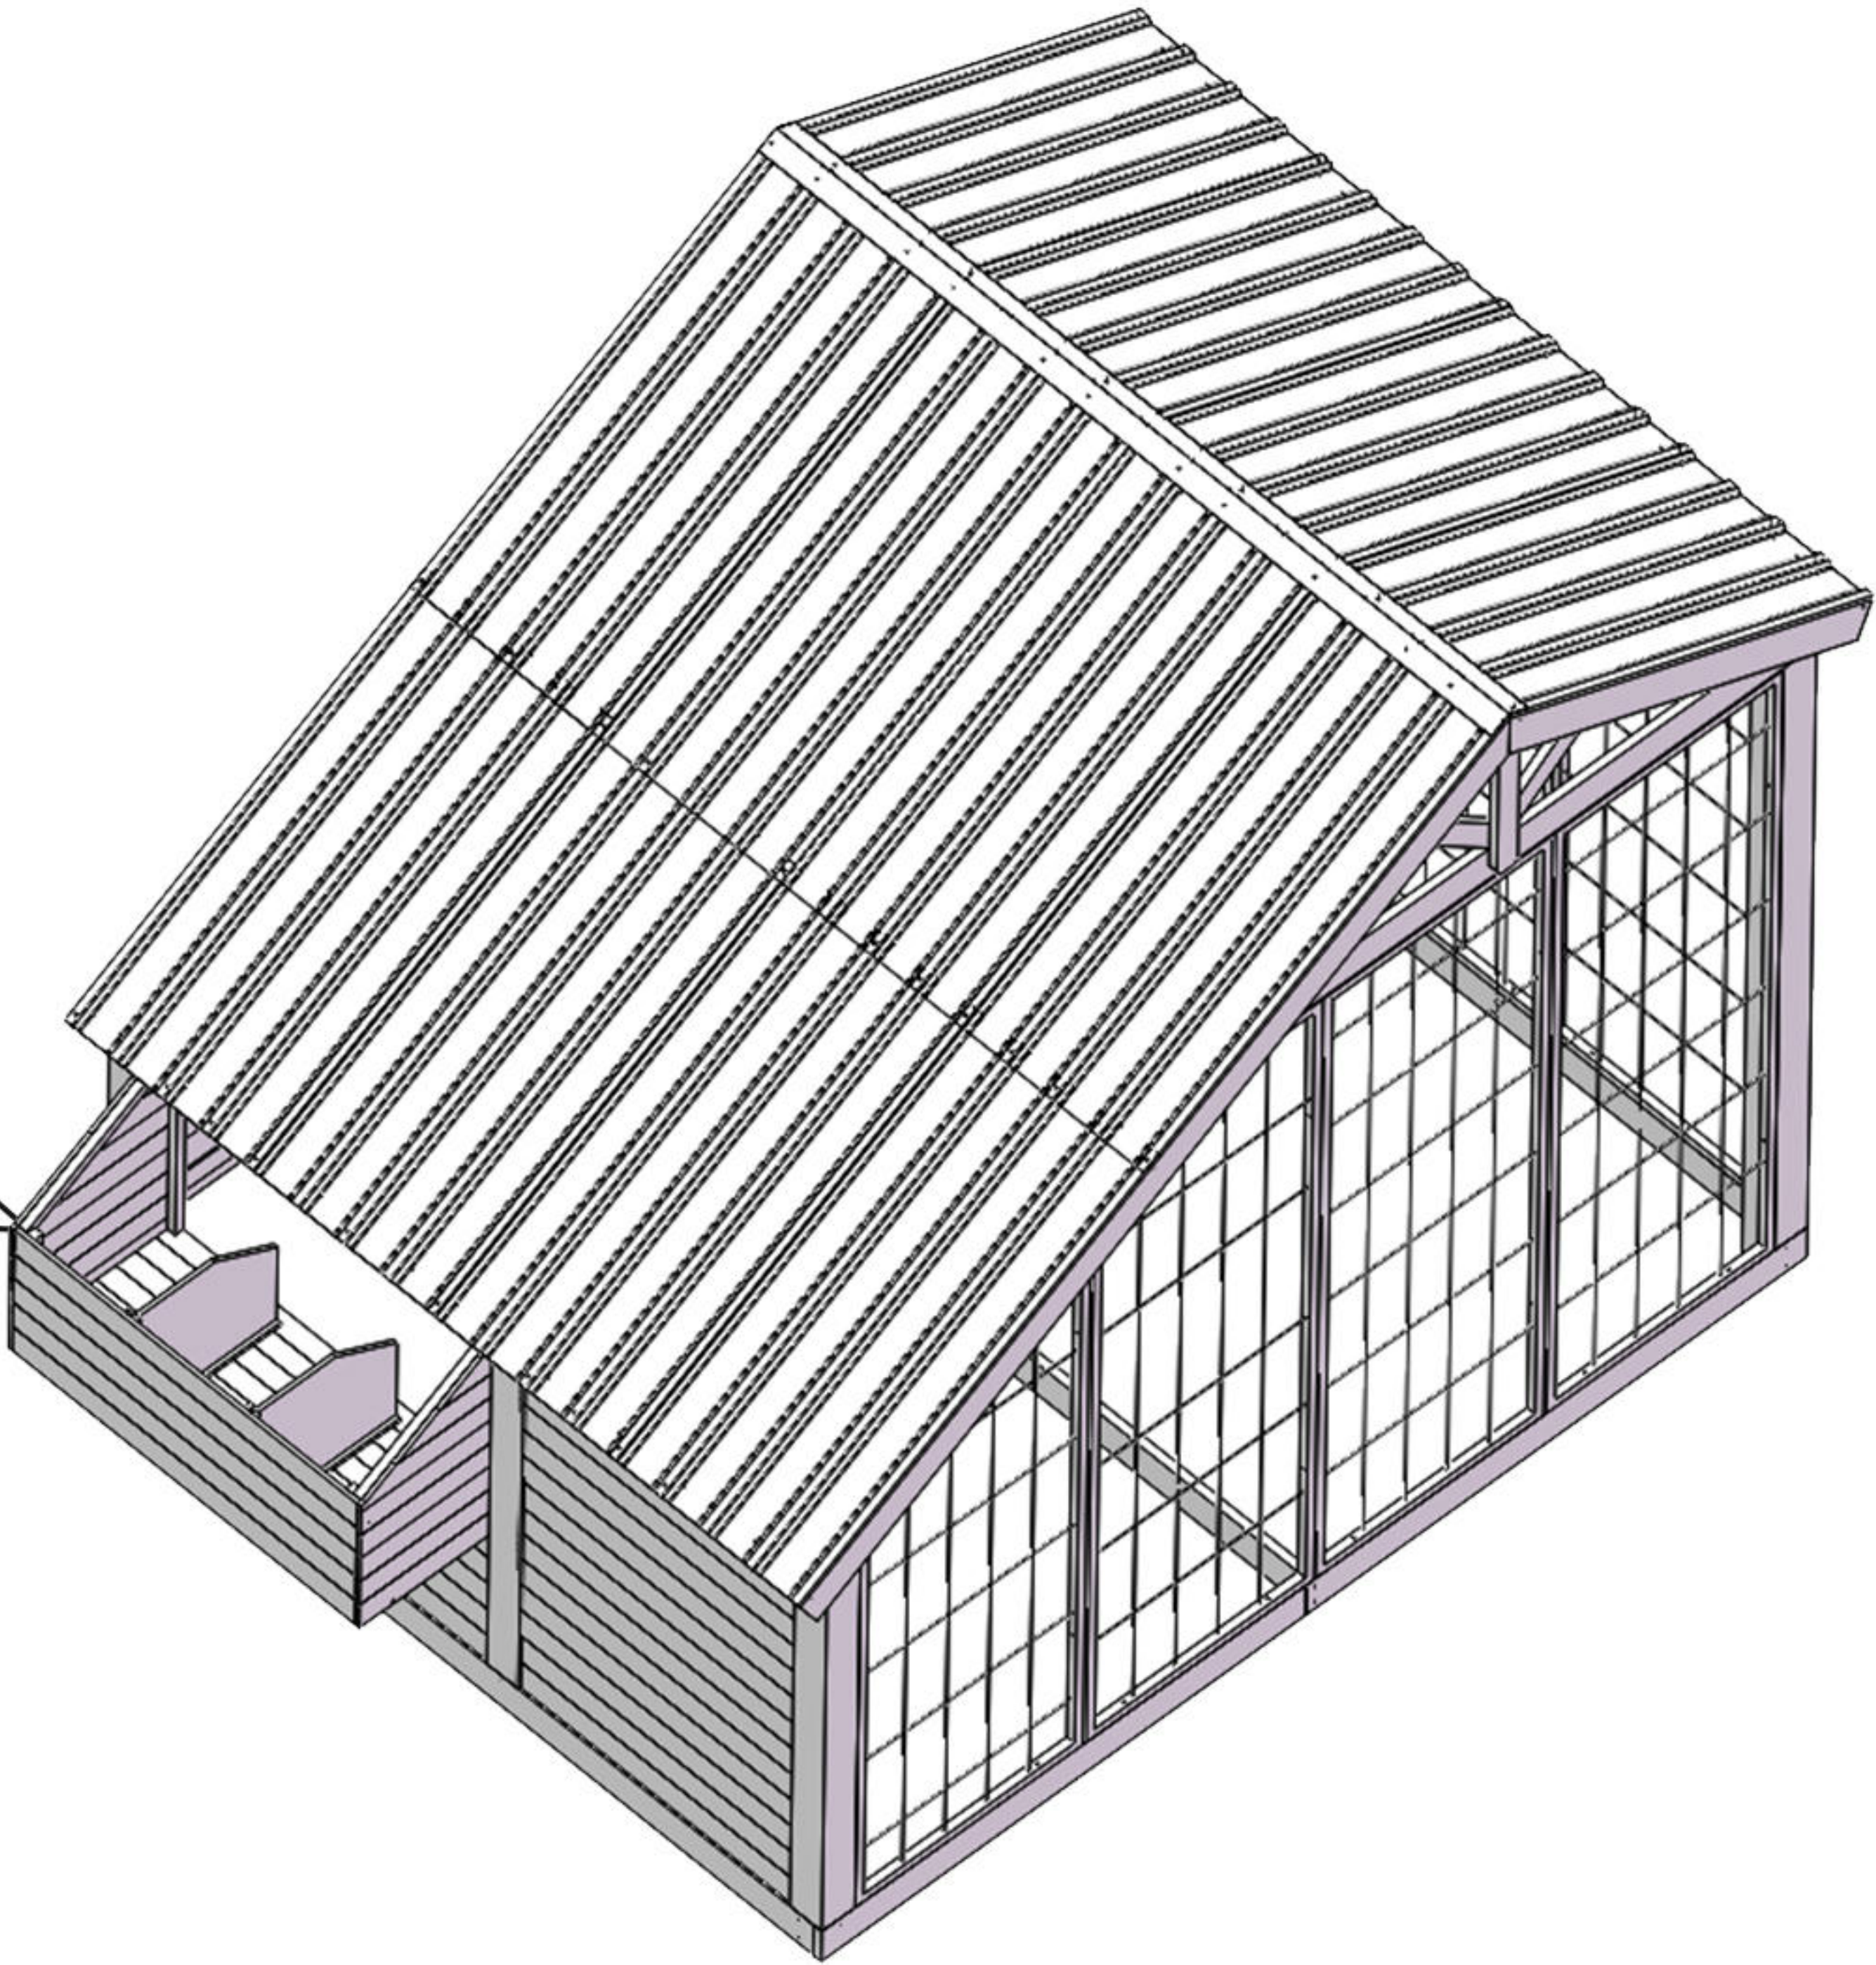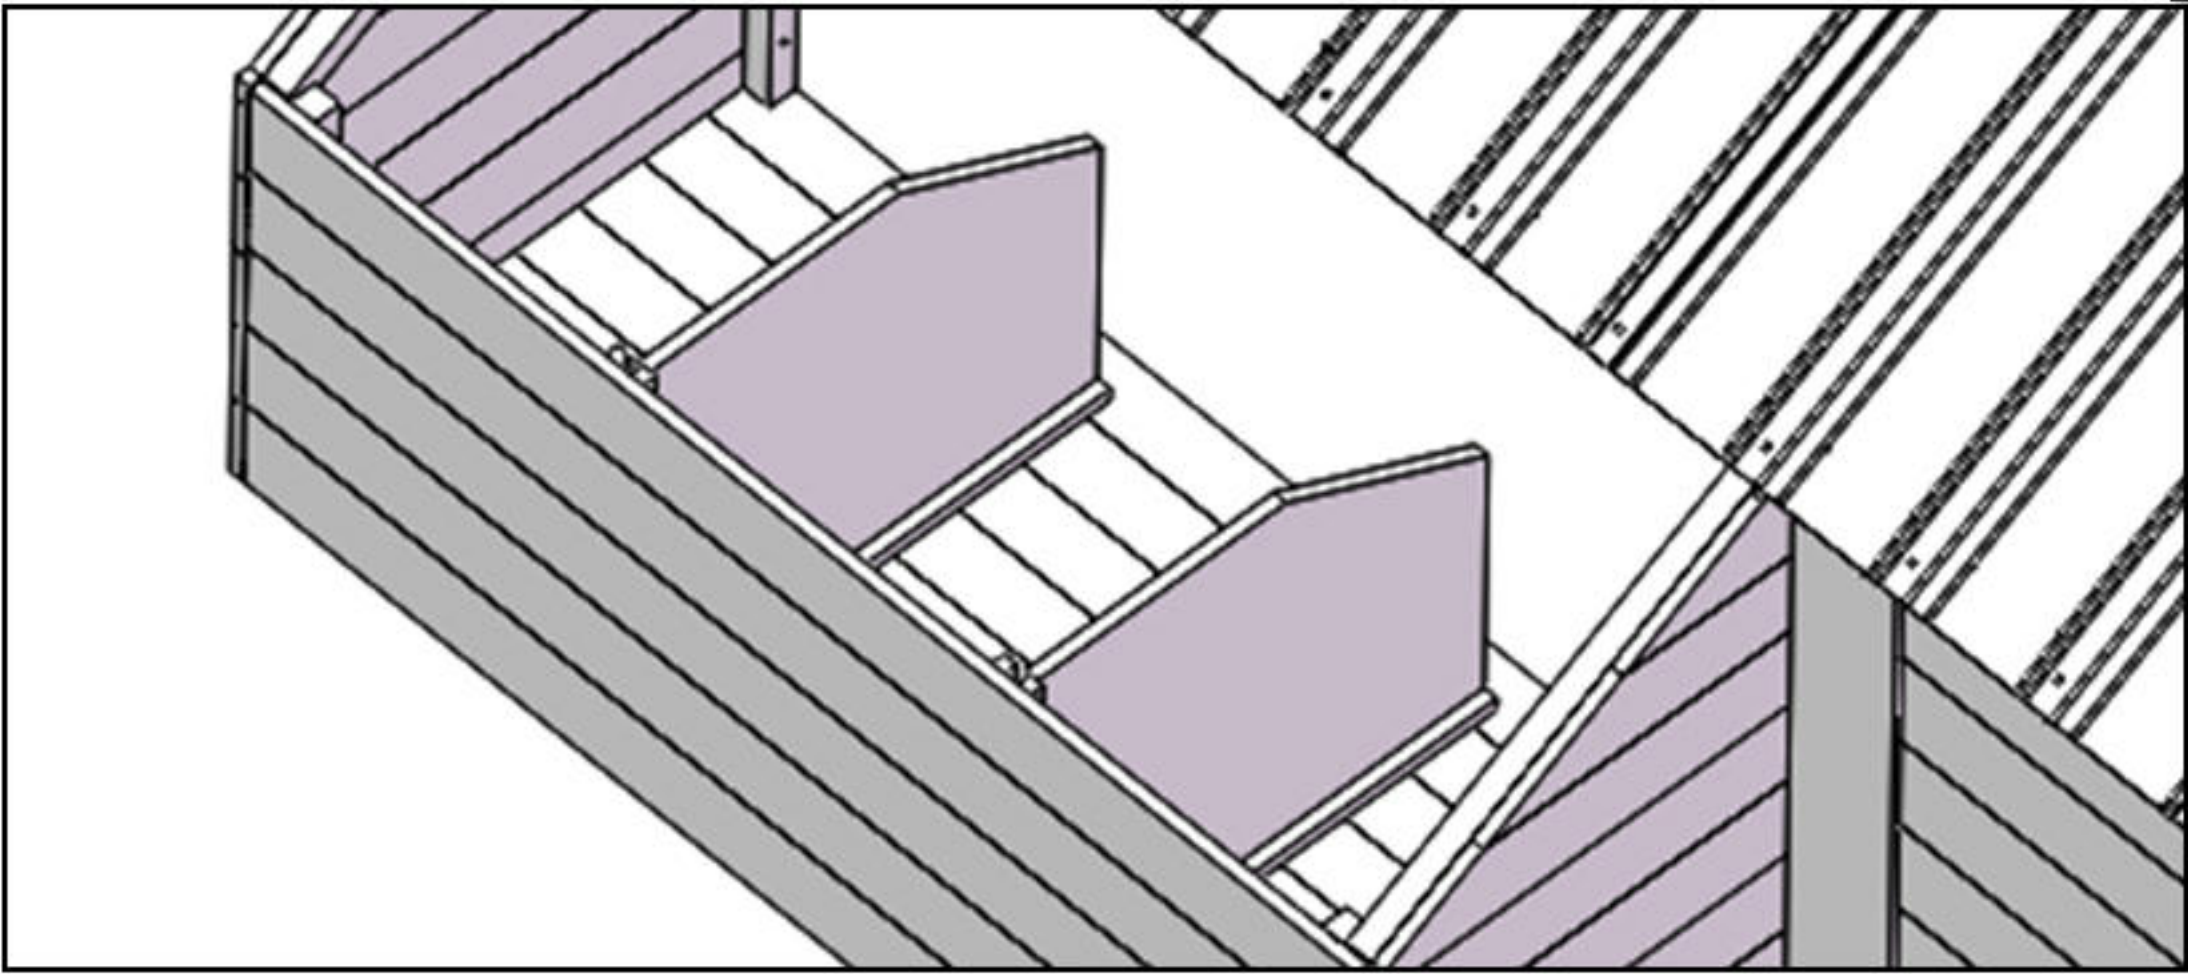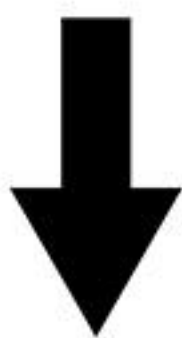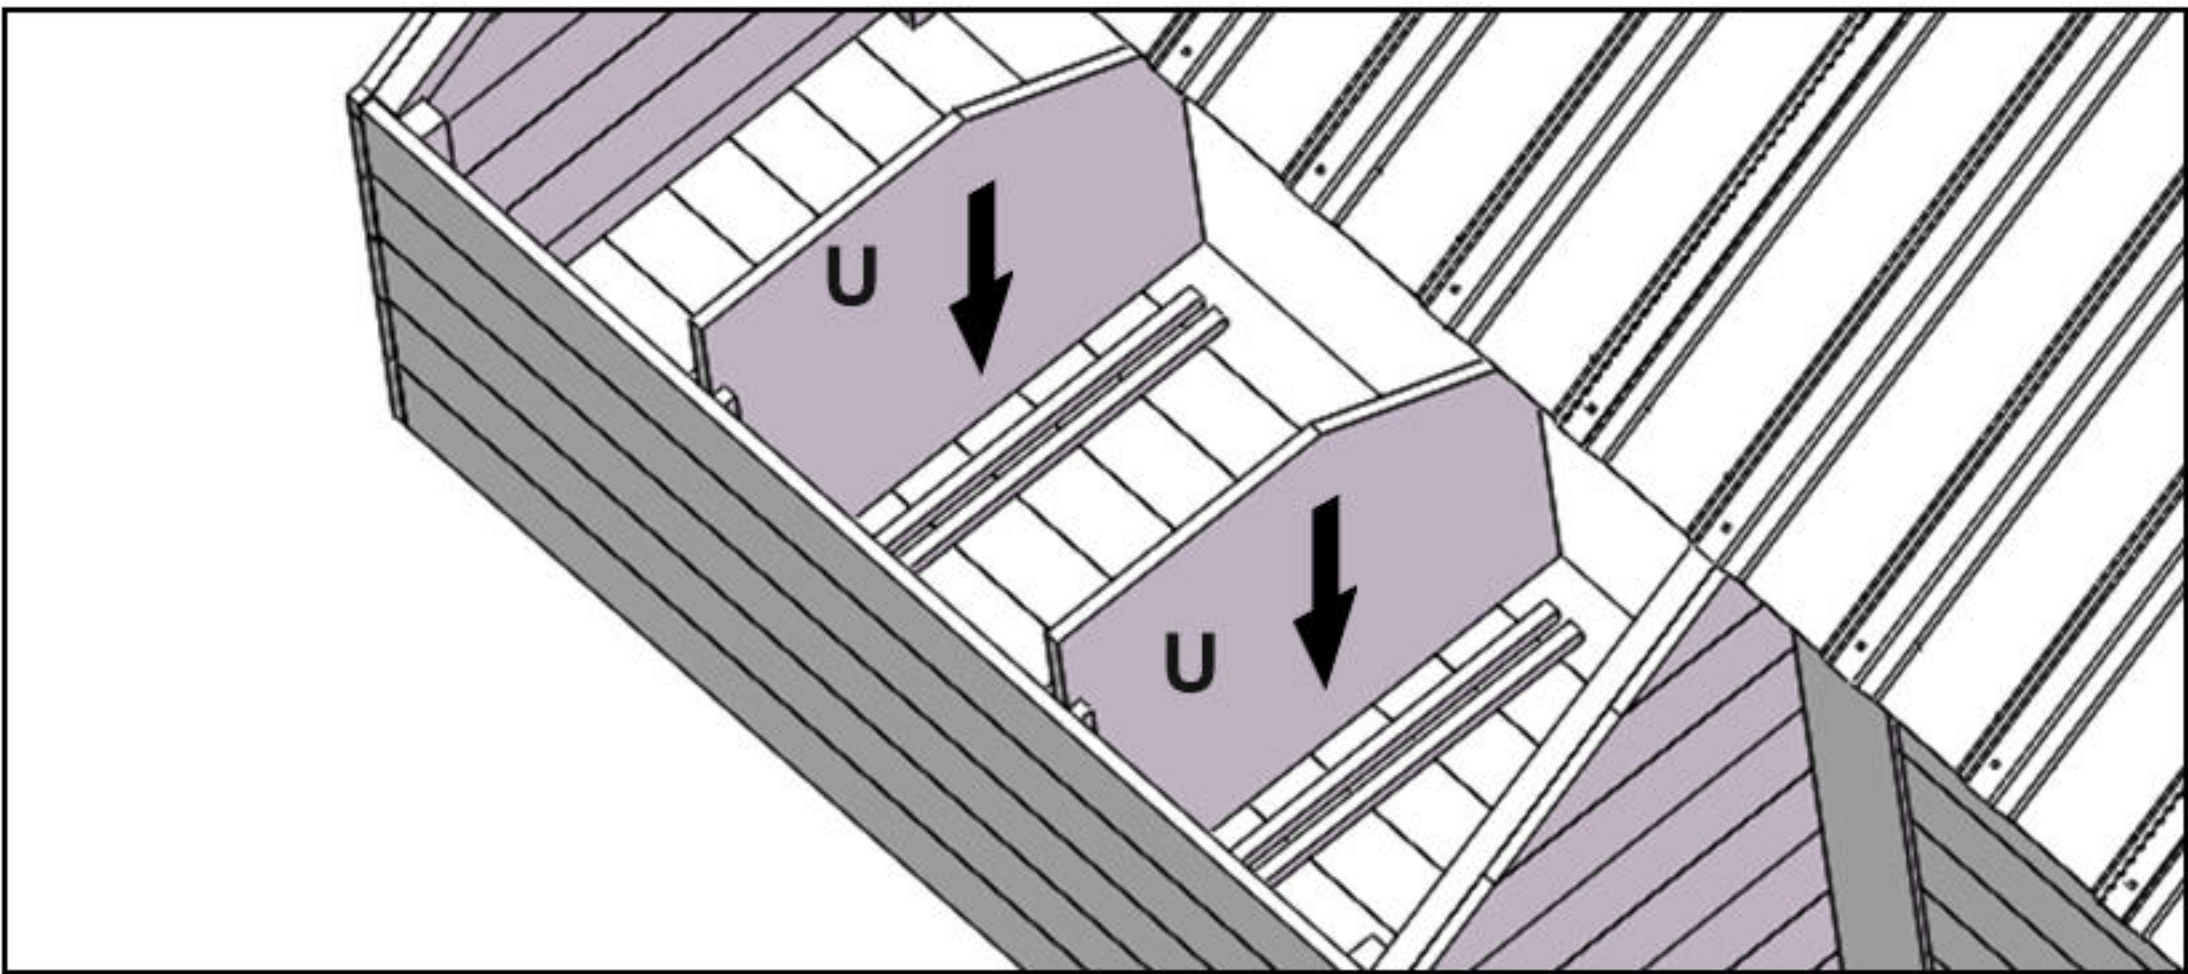

ASSEMBLY INSTRUCTION

STEP 27

STAMP ID	QTY REQ	BOX	IMAGE
X	1	C	
3	4	A	 M4*20

Secure part X to the egg box using 4 No. 3 screws.

