



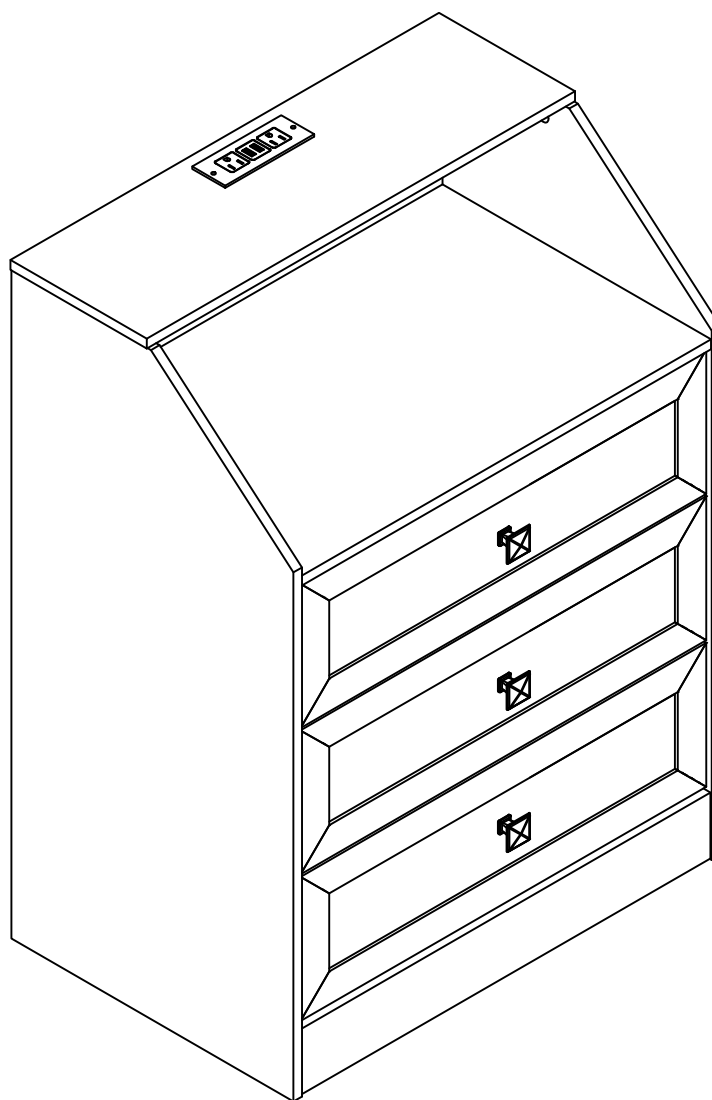


Please note: Items cannot be returned once assembled


Installation & Assembly



IT IS RECOMMENDED
TO USE POWER TOOLS

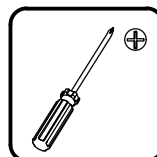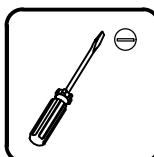

60MIN

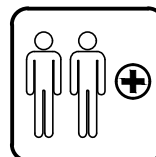

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!




---NEED HELP WITH YOUR FURNITURE?---


If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.

For any damaged or missing components, we're happy to provide FREE replacement parts.


Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!

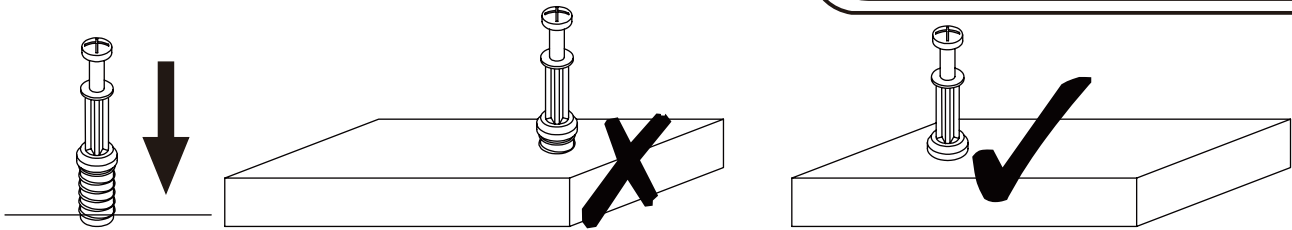


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

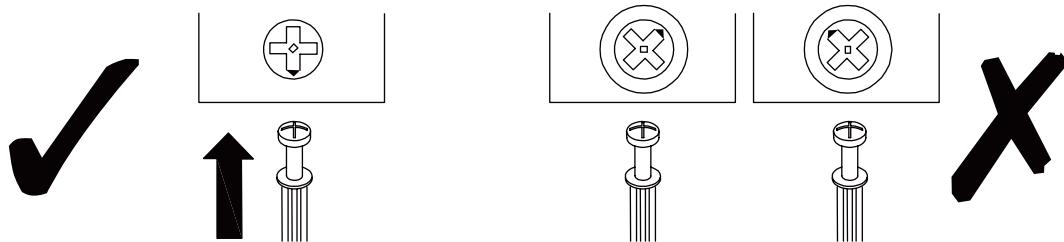











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.






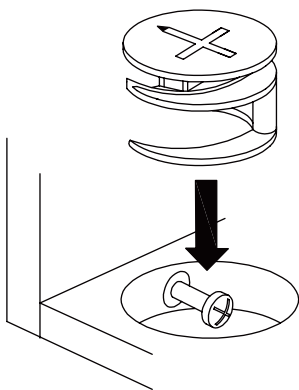



EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.








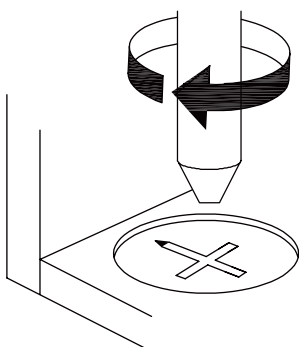





EN_Turn cam lock clockwise to tighten.

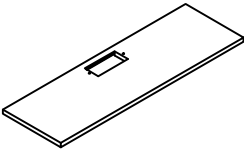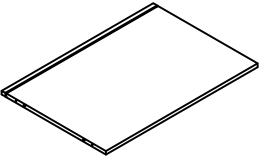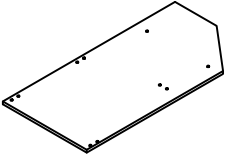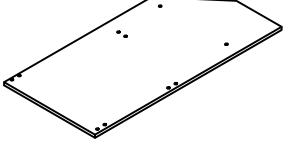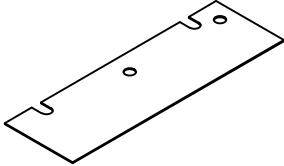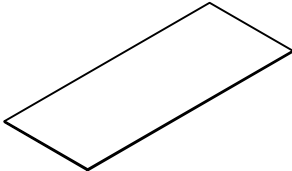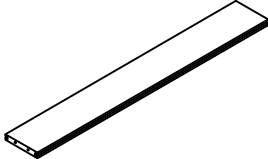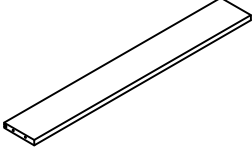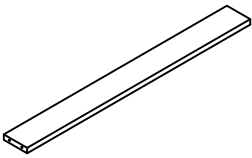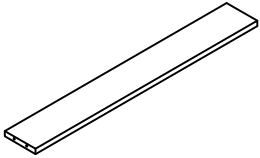NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x2	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x1	

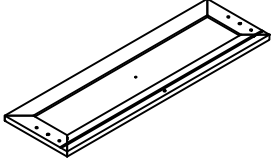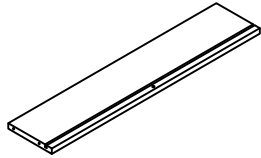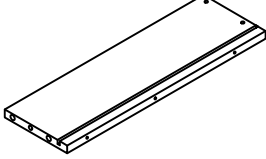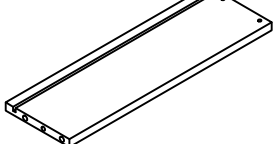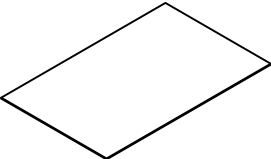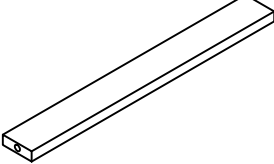
NO.	PARTS	QTY	SPARE
⑪		x3	
⑫		x3	
⑬		x3	
⑭		x3	
⑮		x3	
⑯		x3	
			
	Hardware Kit		

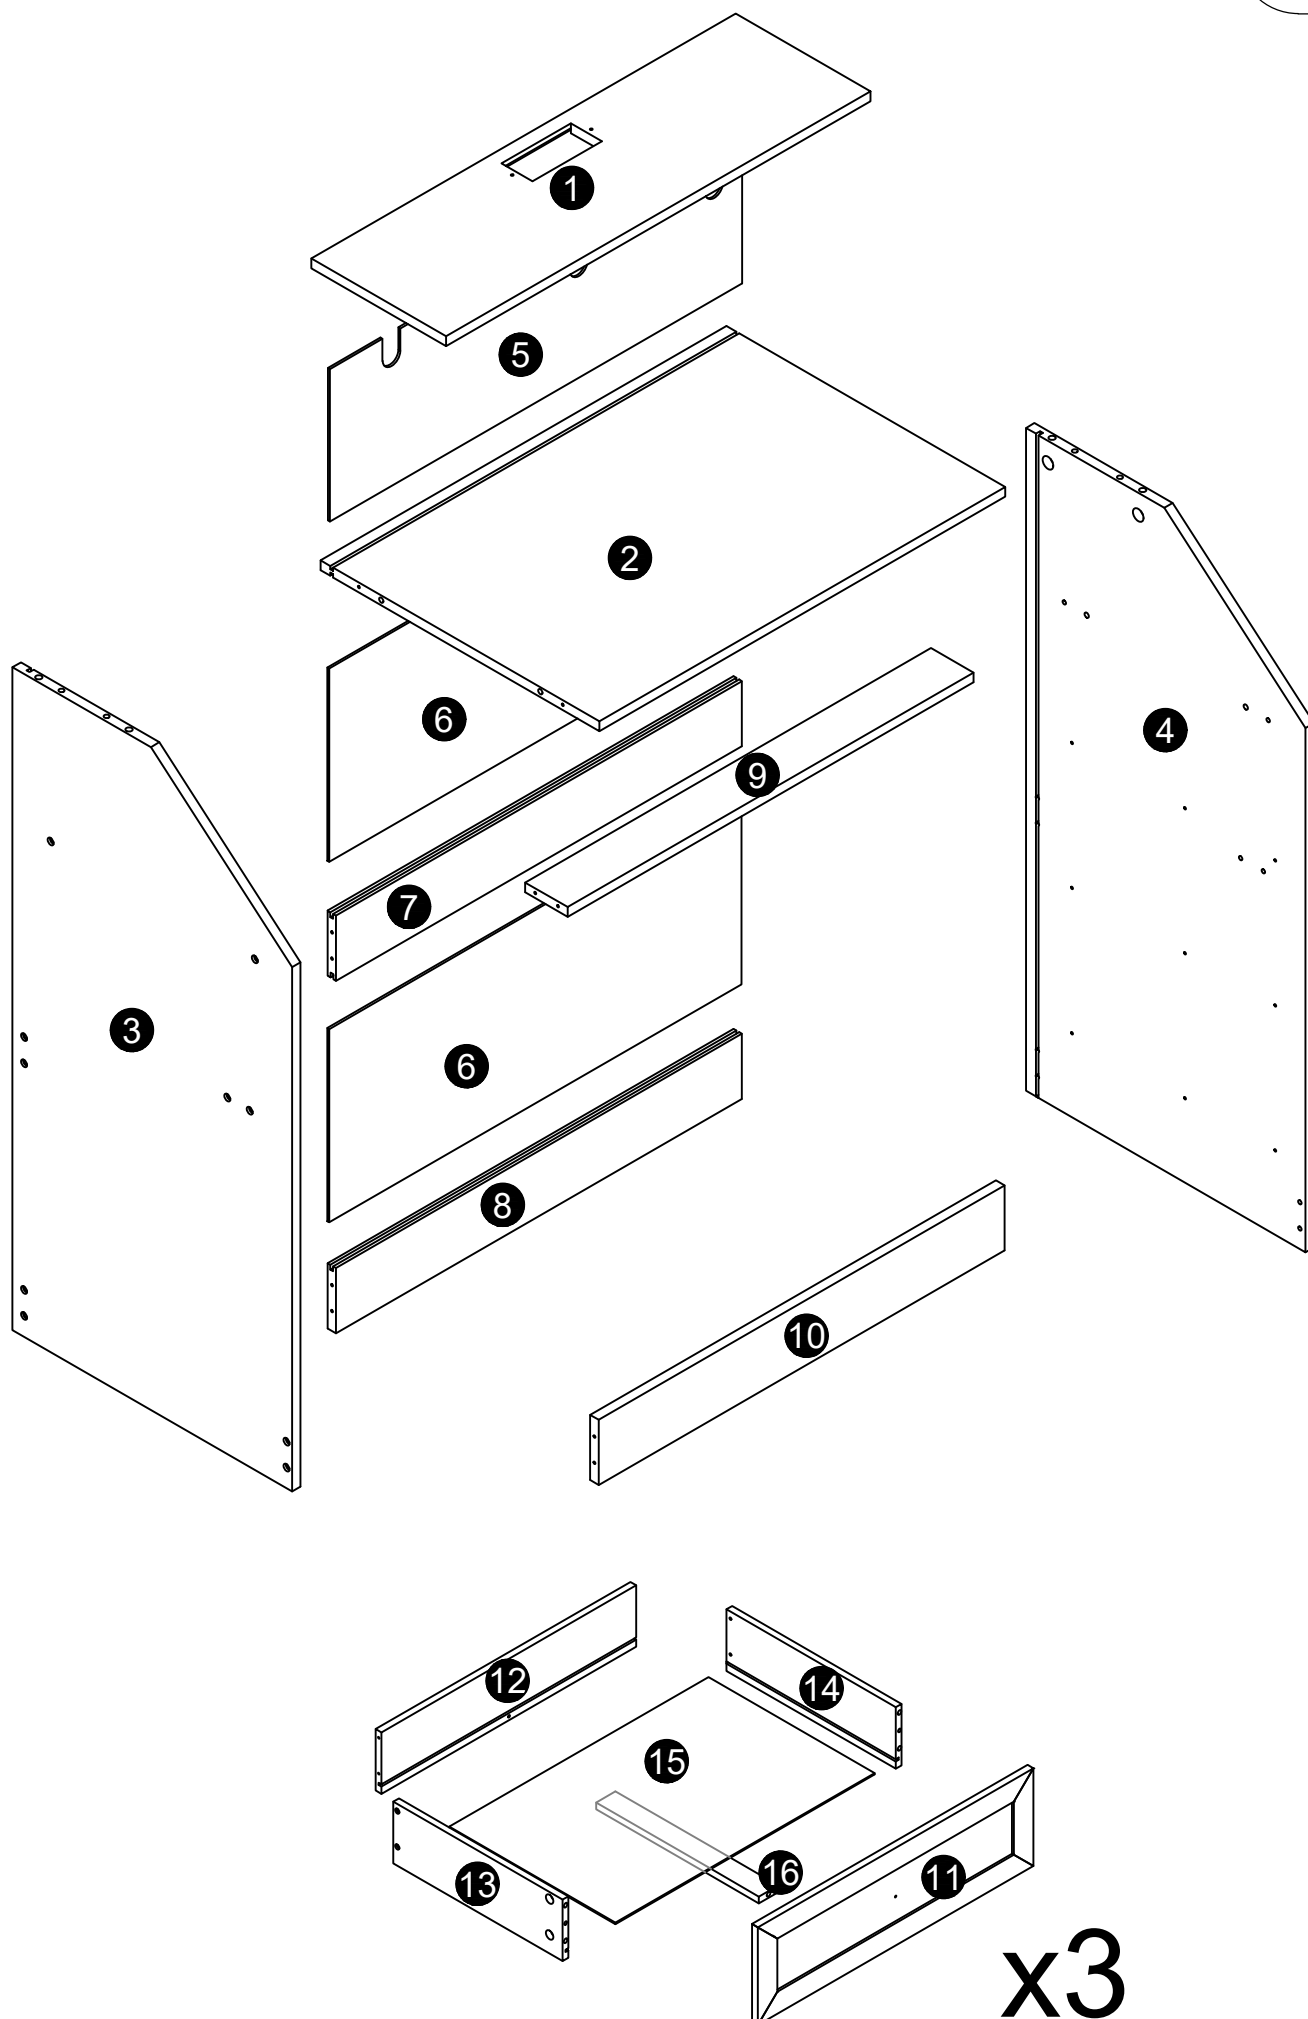

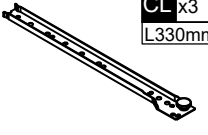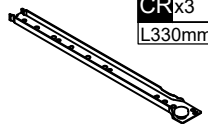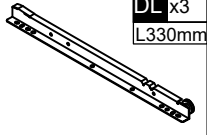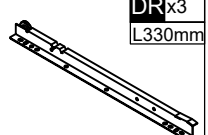 A x19 Ø6x35mm +1(spare)	 B x19 Ø15x10mm +1(spare)	 C x14 Ø6x30mm +1(spare)	 D x35 Ø4x35mm +3(spare)	 E x36 Ø3.5x12mm +3(spare)	 F-1  F-2 F x3
 G-1  G-2 G x2 Ø4x12mm	 H-1  H-2 H x12	 I-1  I-2 I x2	 J x24 +2(spare)	 K-1  K-2 K x1	 L x1
 M-1  M-2 M x2	 N-1  N-2 N x1	 CL x3 L330mm	 CR x3 L330mm	 DL x3 L330mm	 DR x3 L330mm

 A x15	 B x15	 C x6	 D x15
--	--	---	--

01



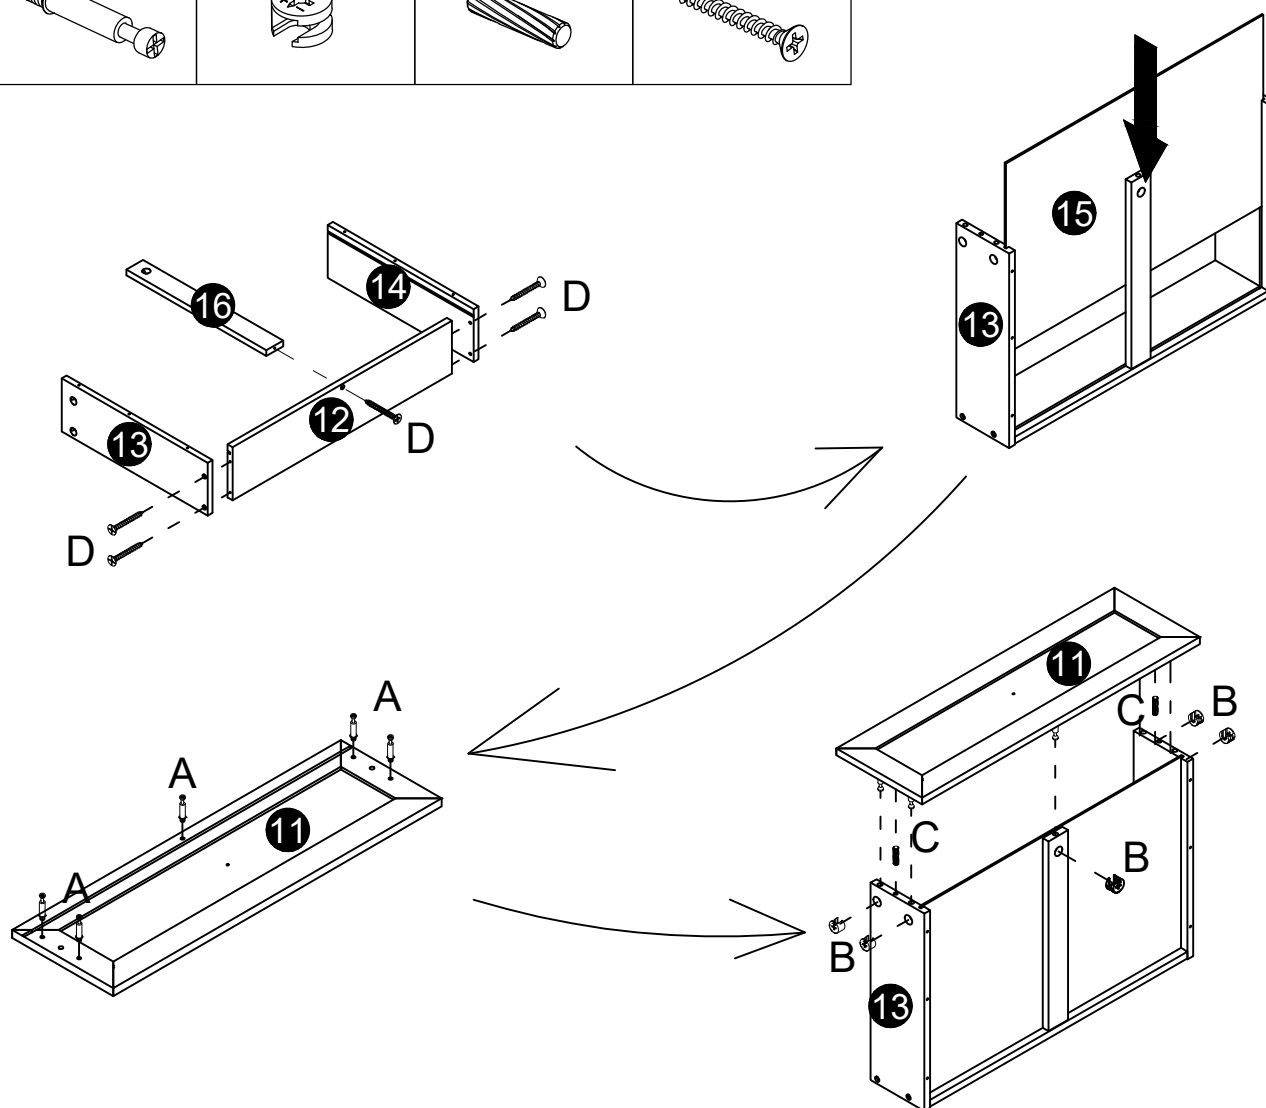


02

E x18

DL x3

DR x3

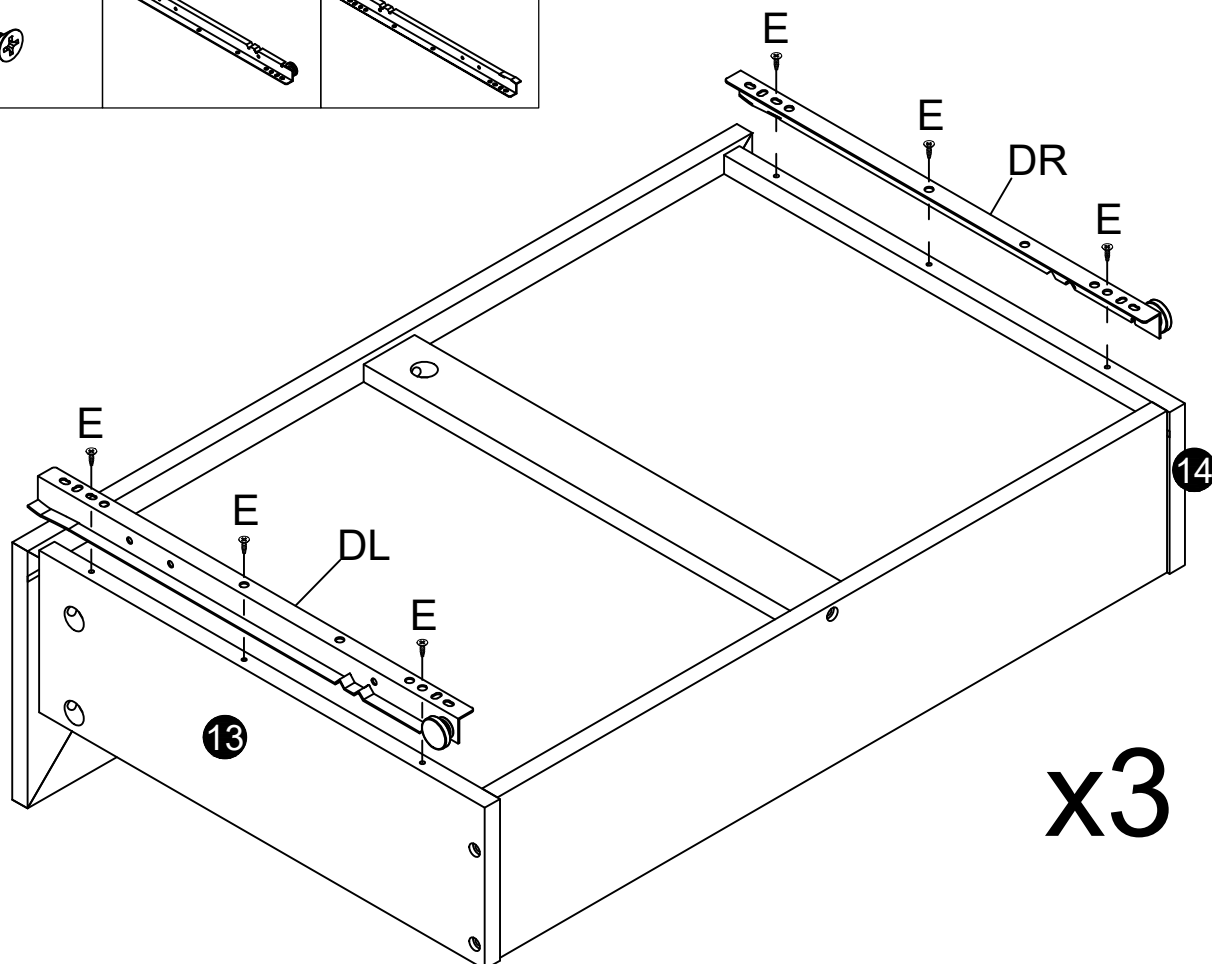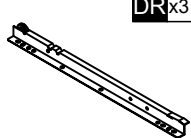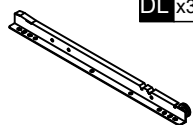

x3

03


F x3





F-1




F-2

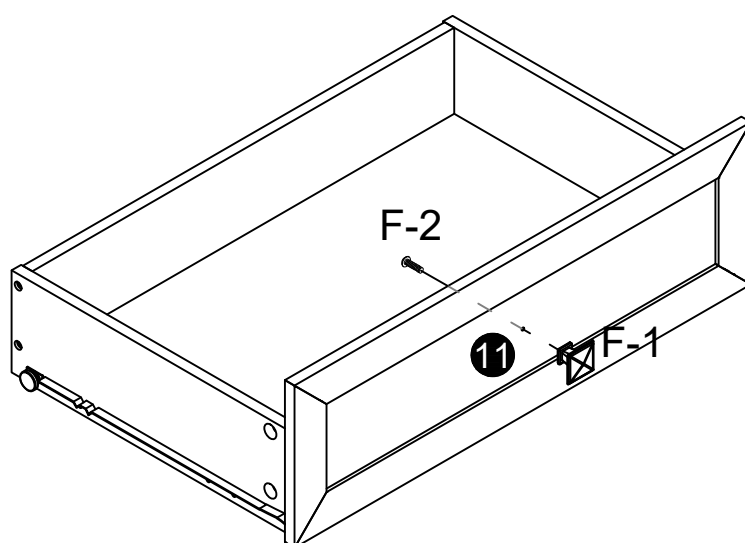



x3

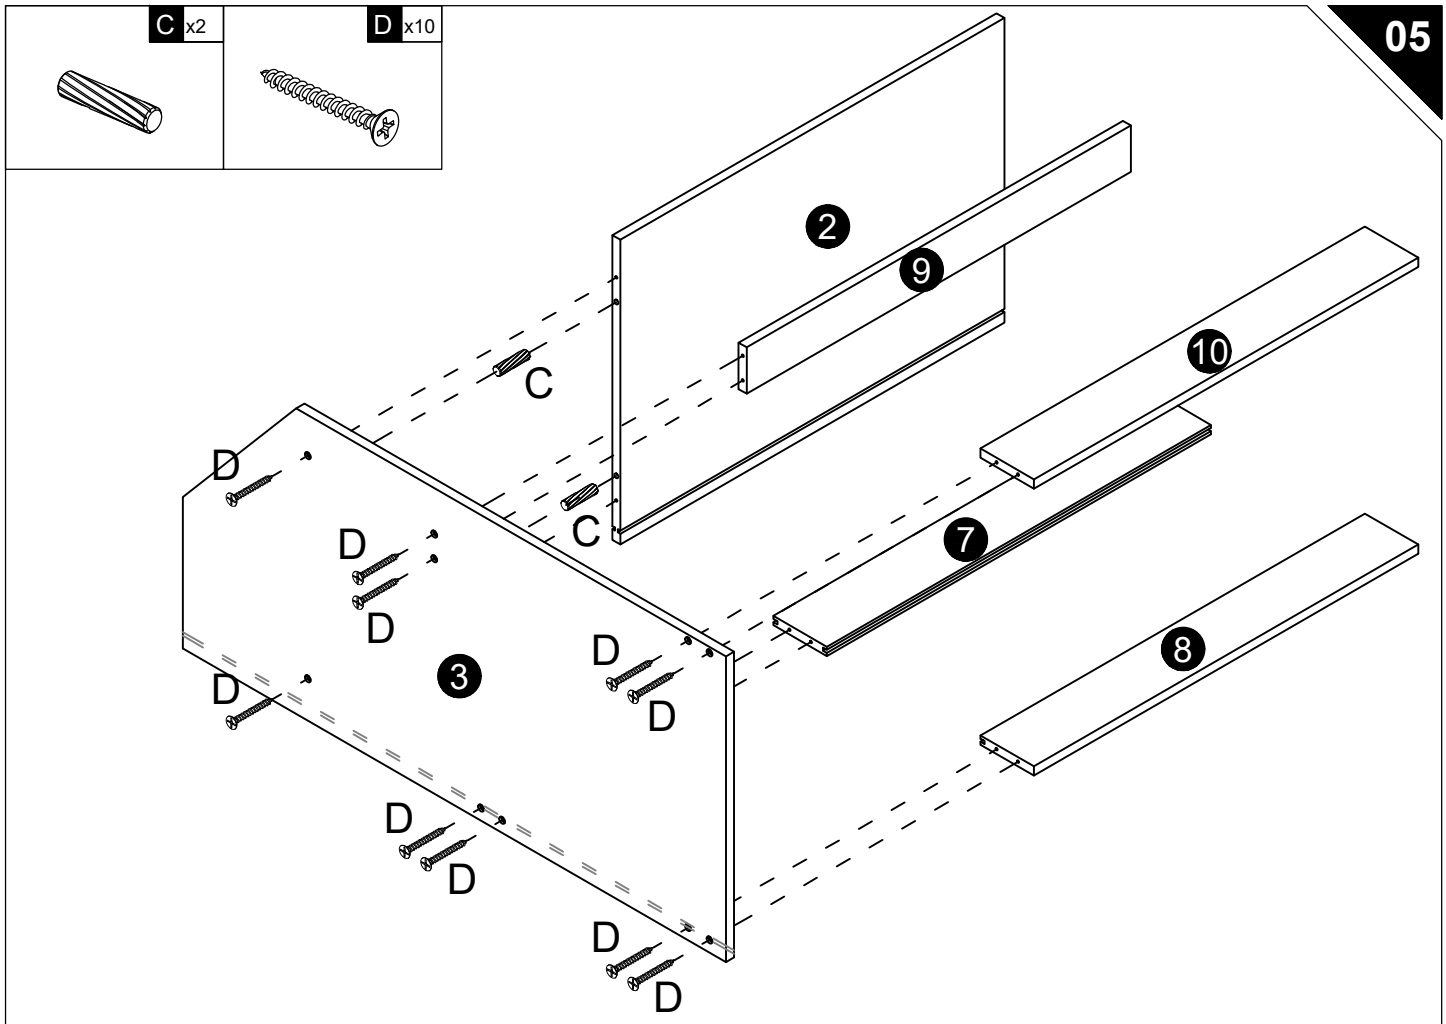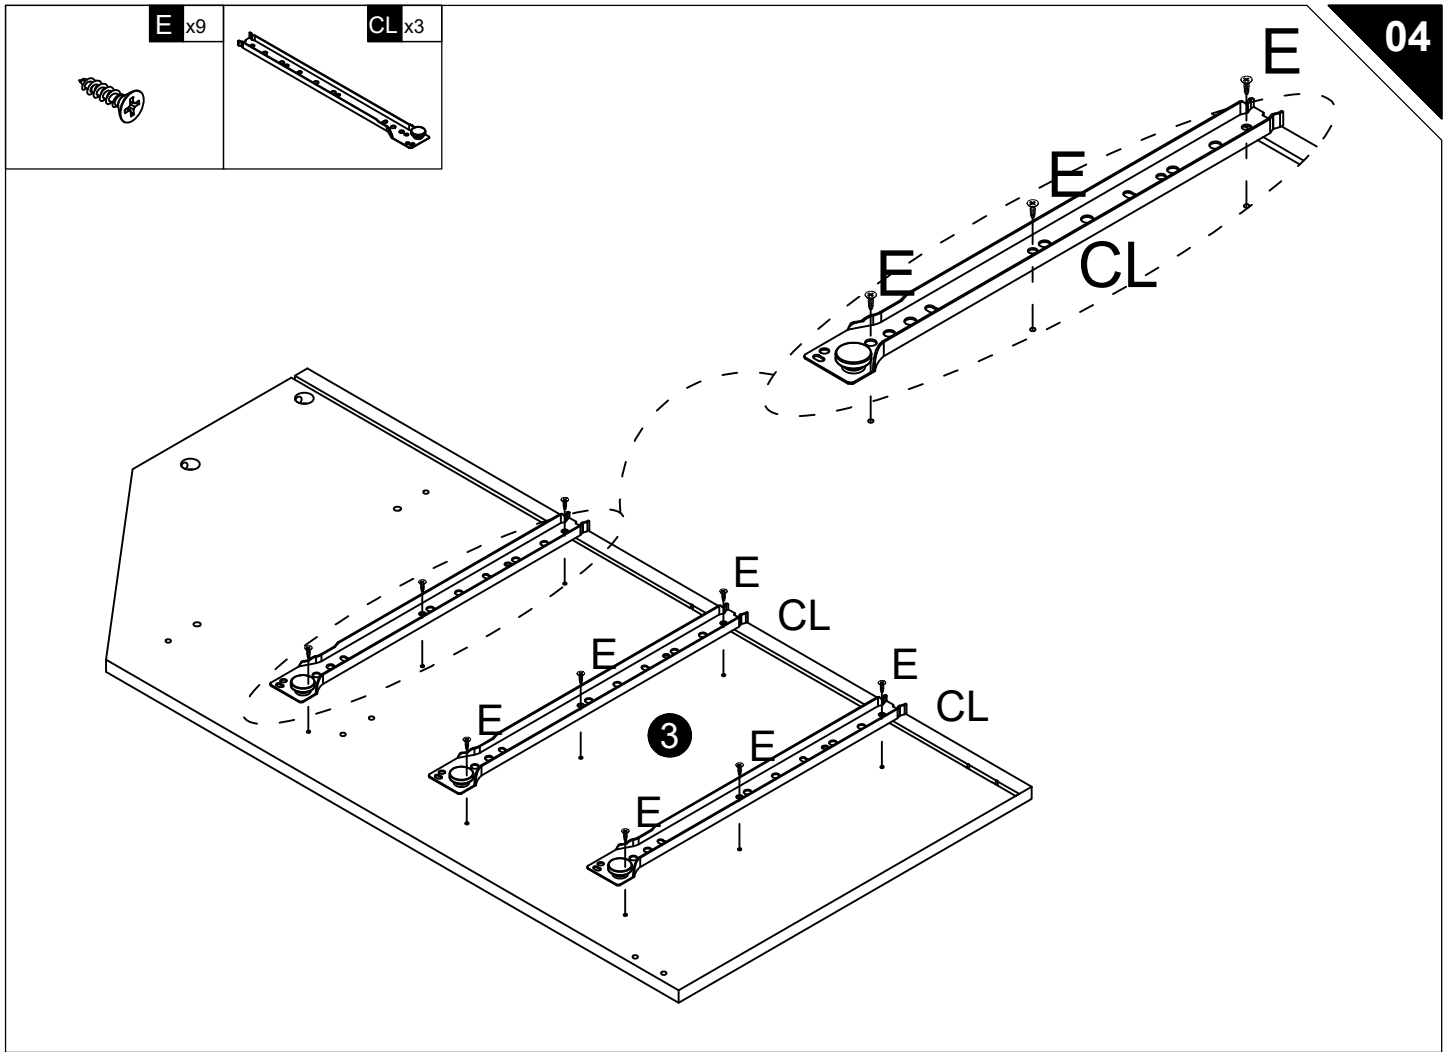

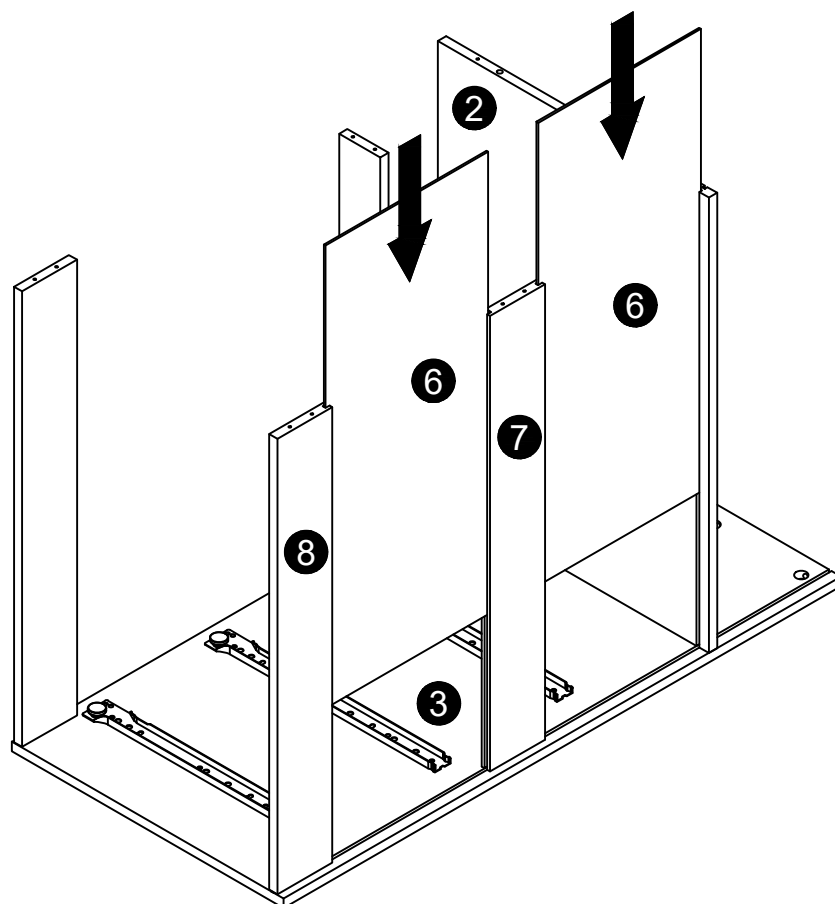




E x9



CRx3


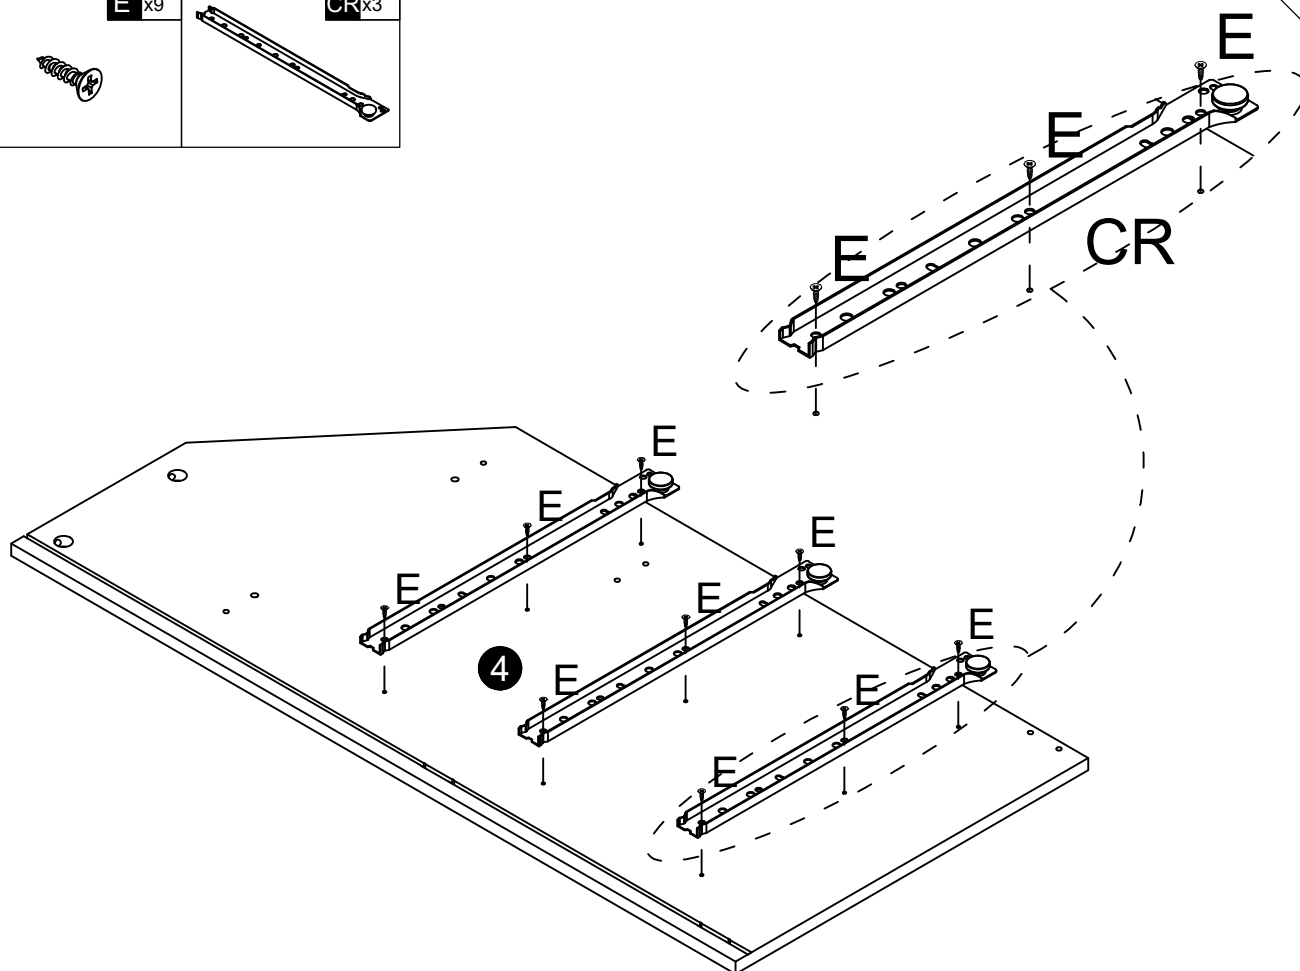
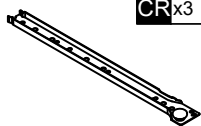


C x2

D x10

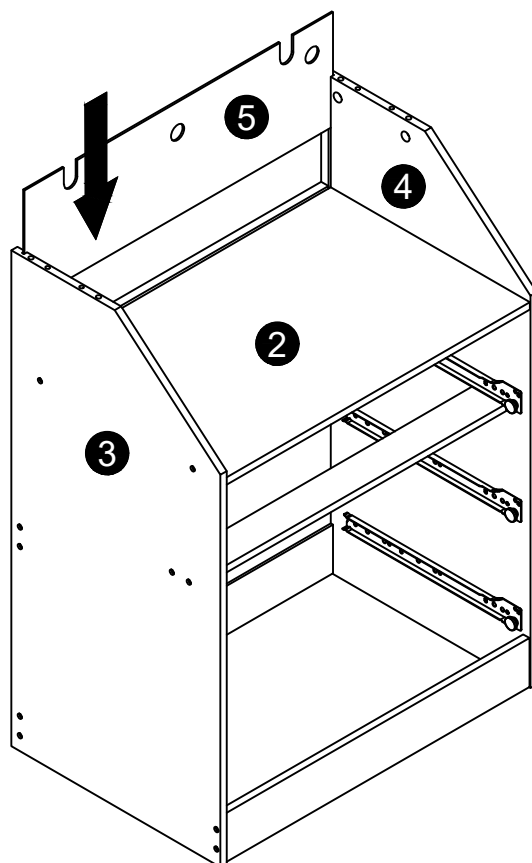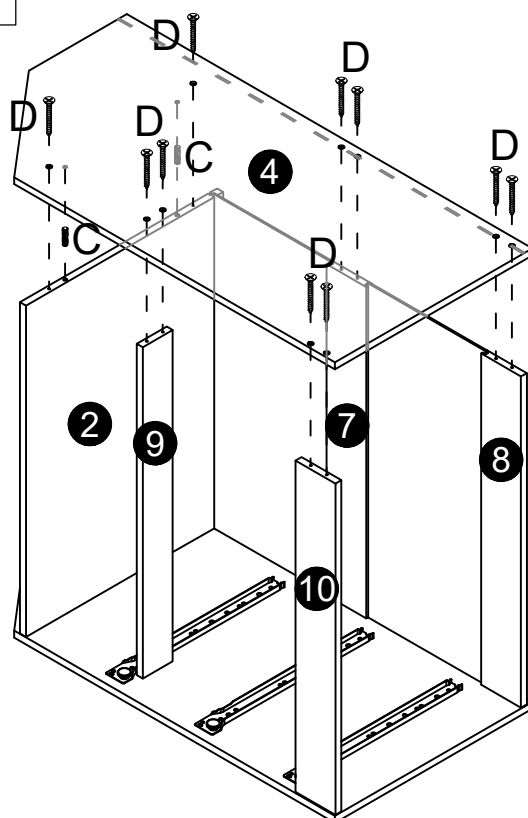

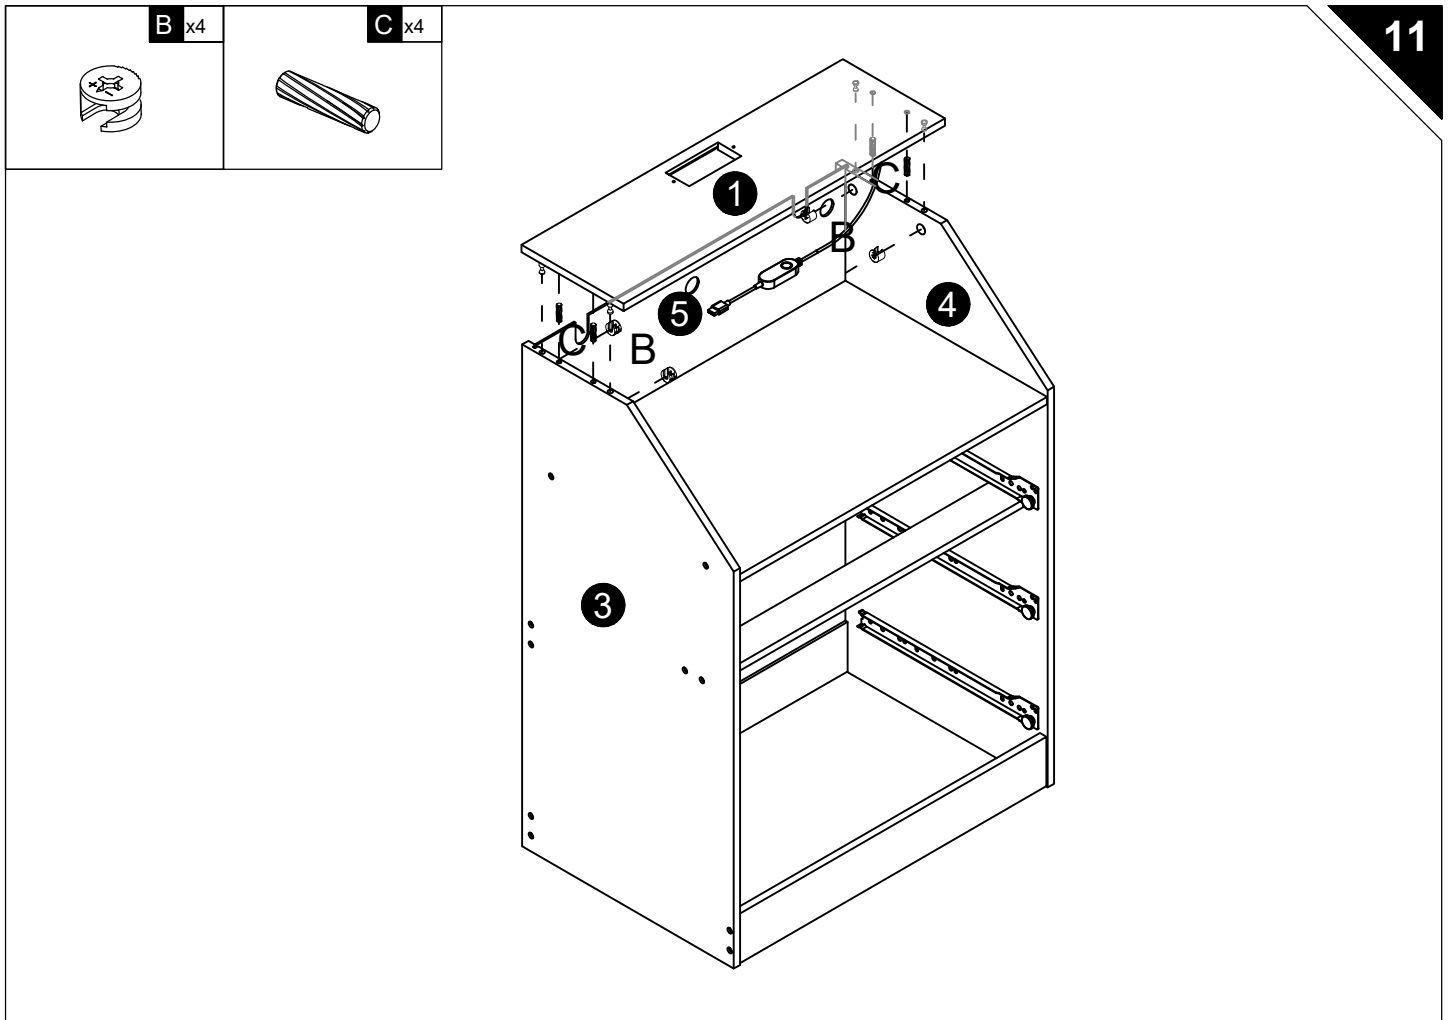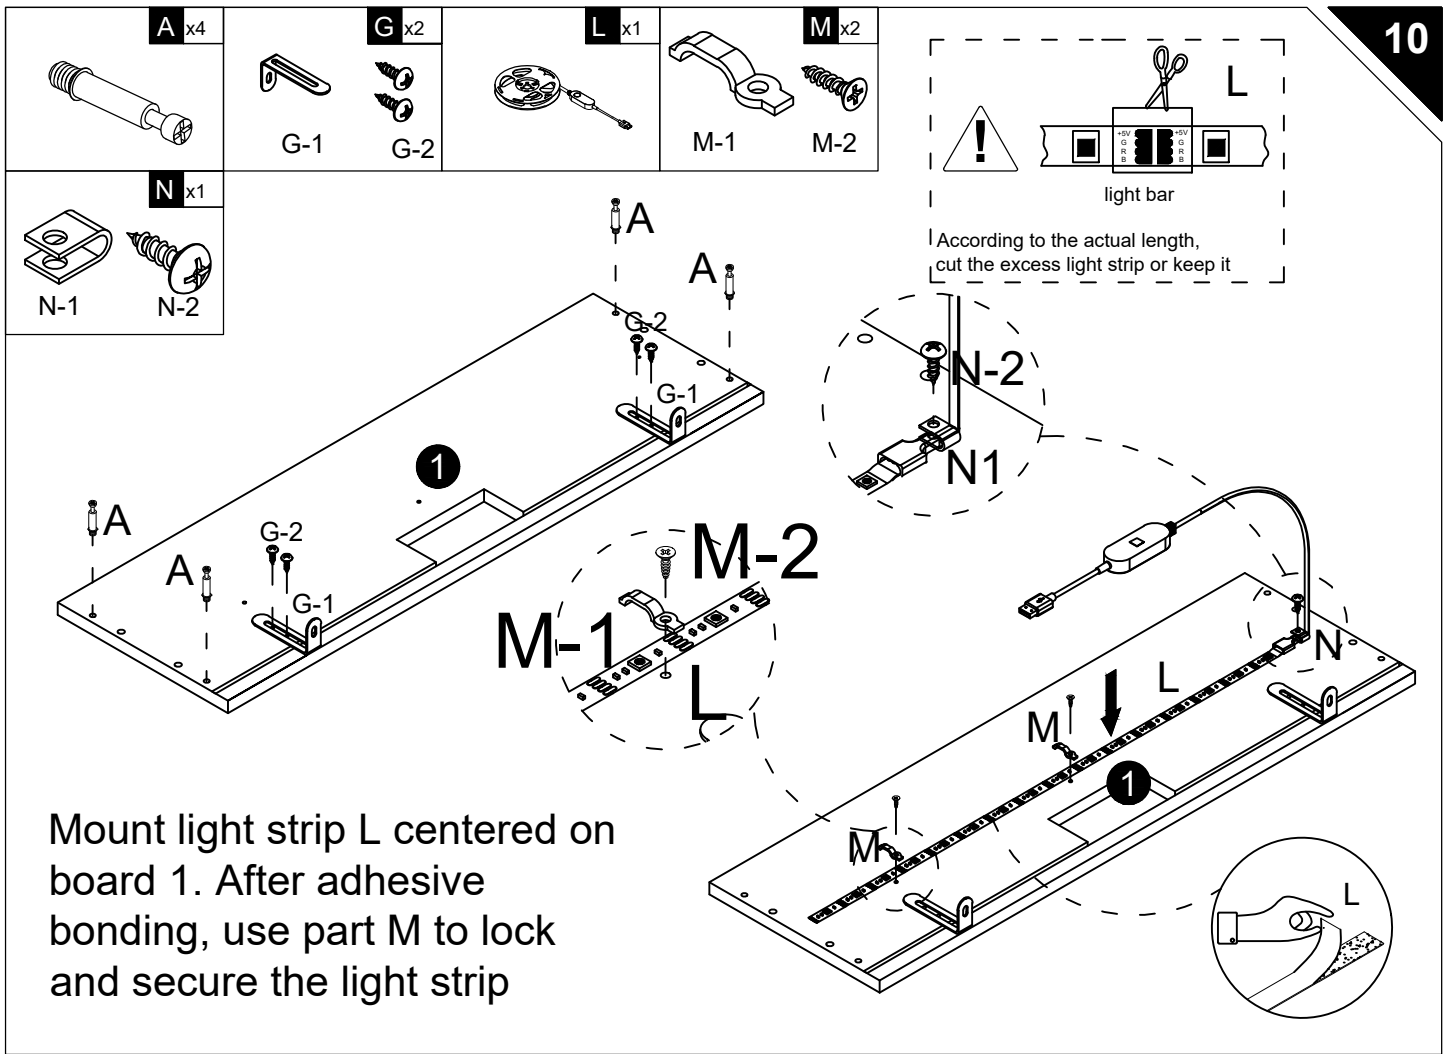

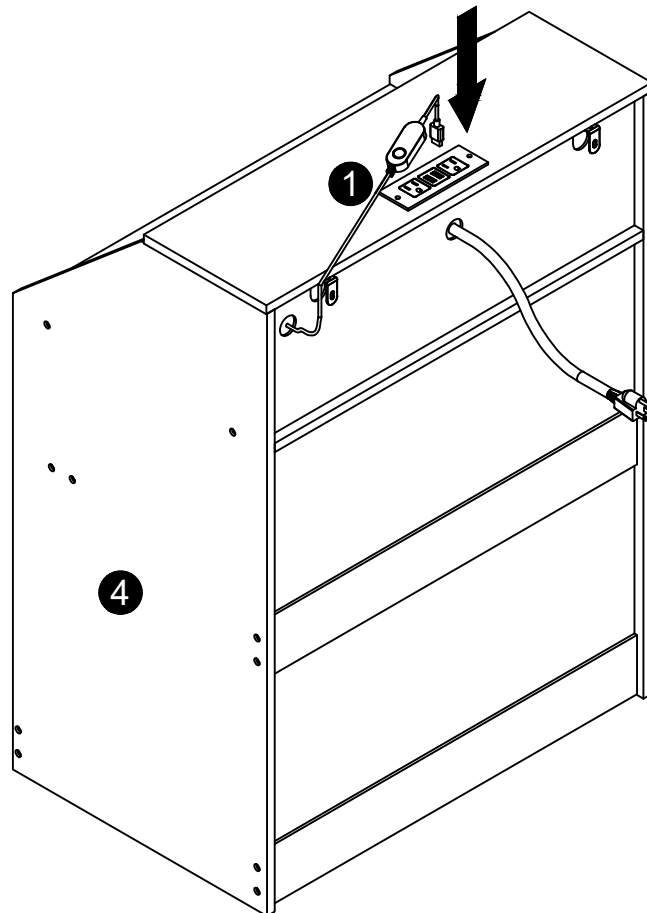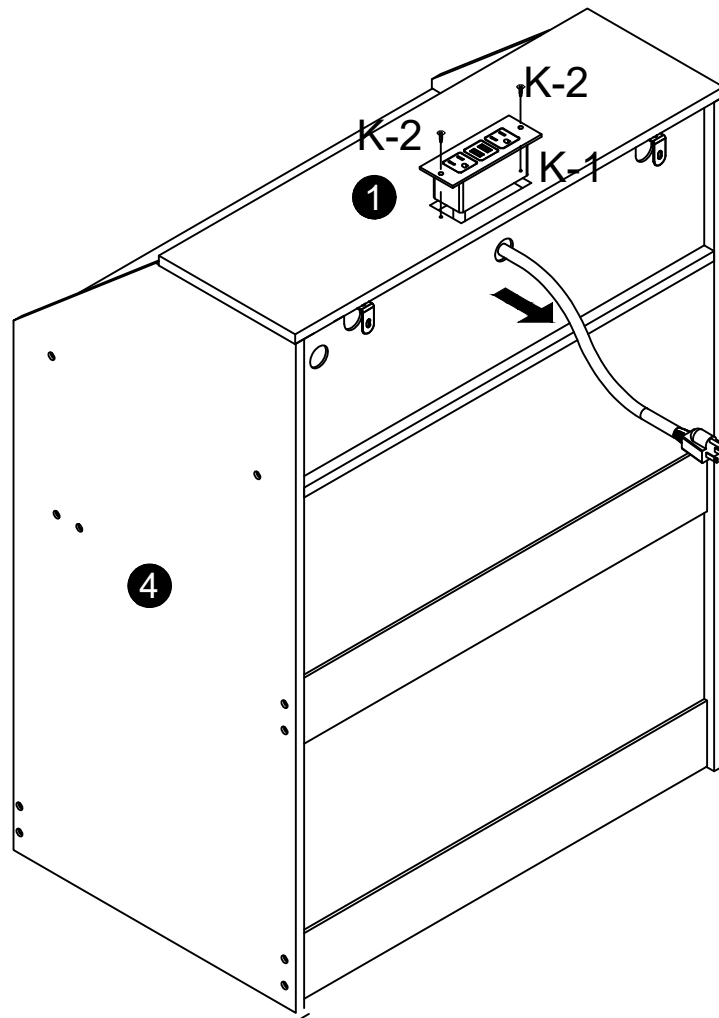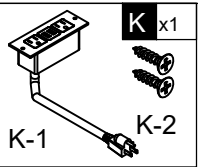


H x12






H-1





H-2

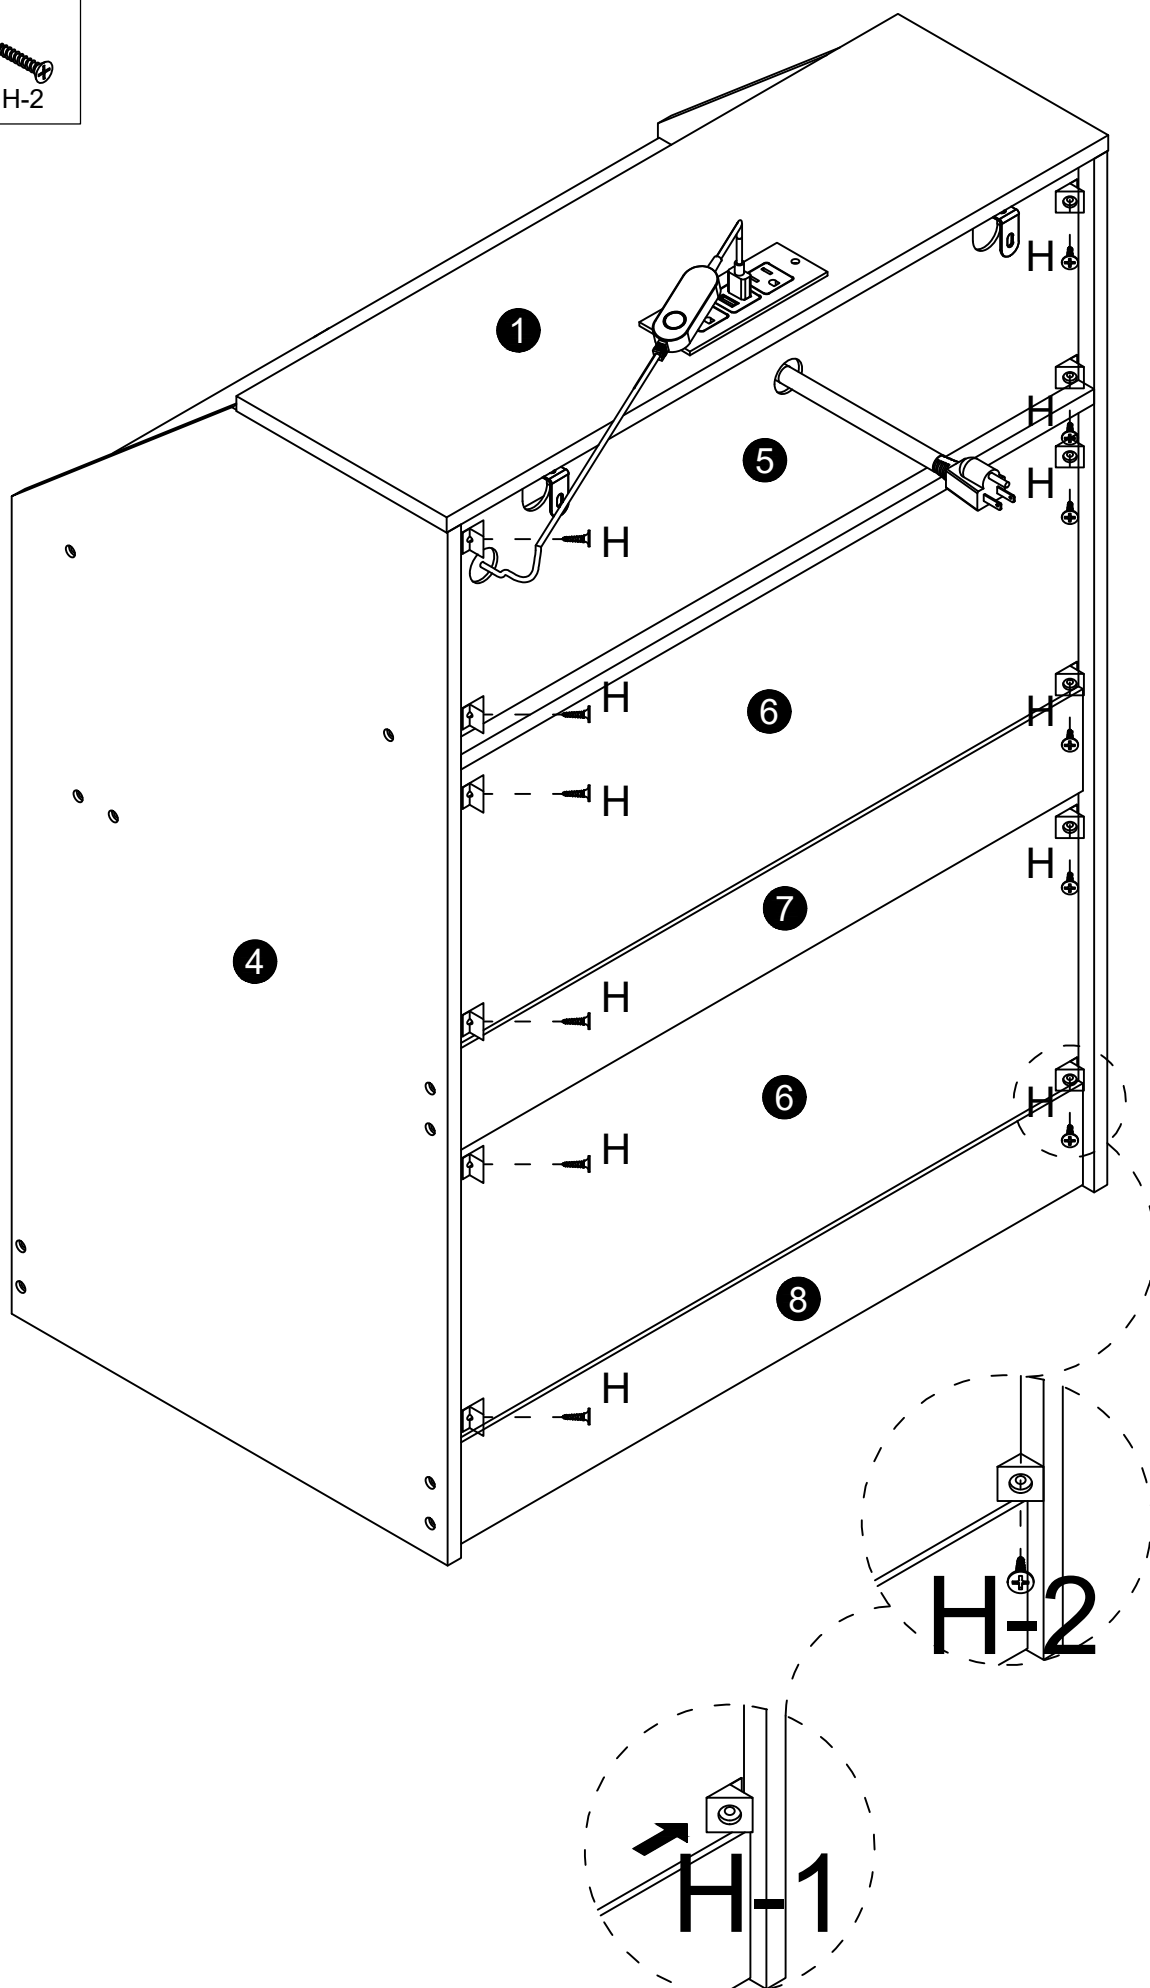


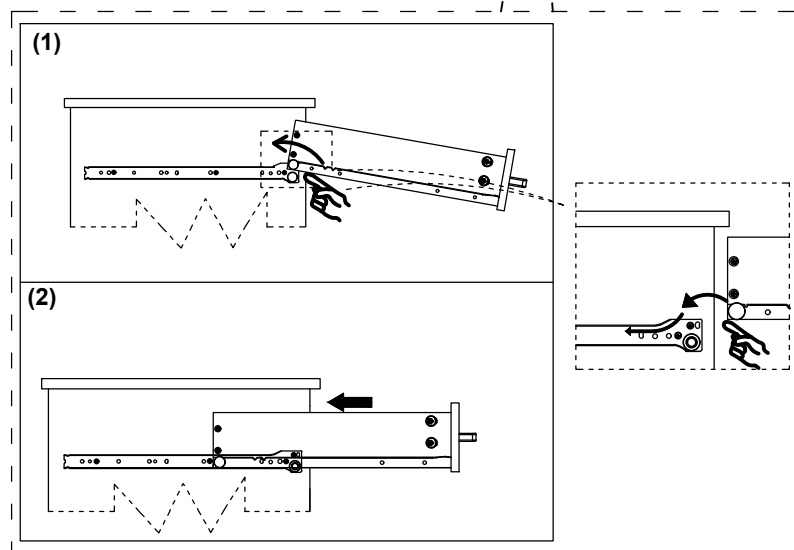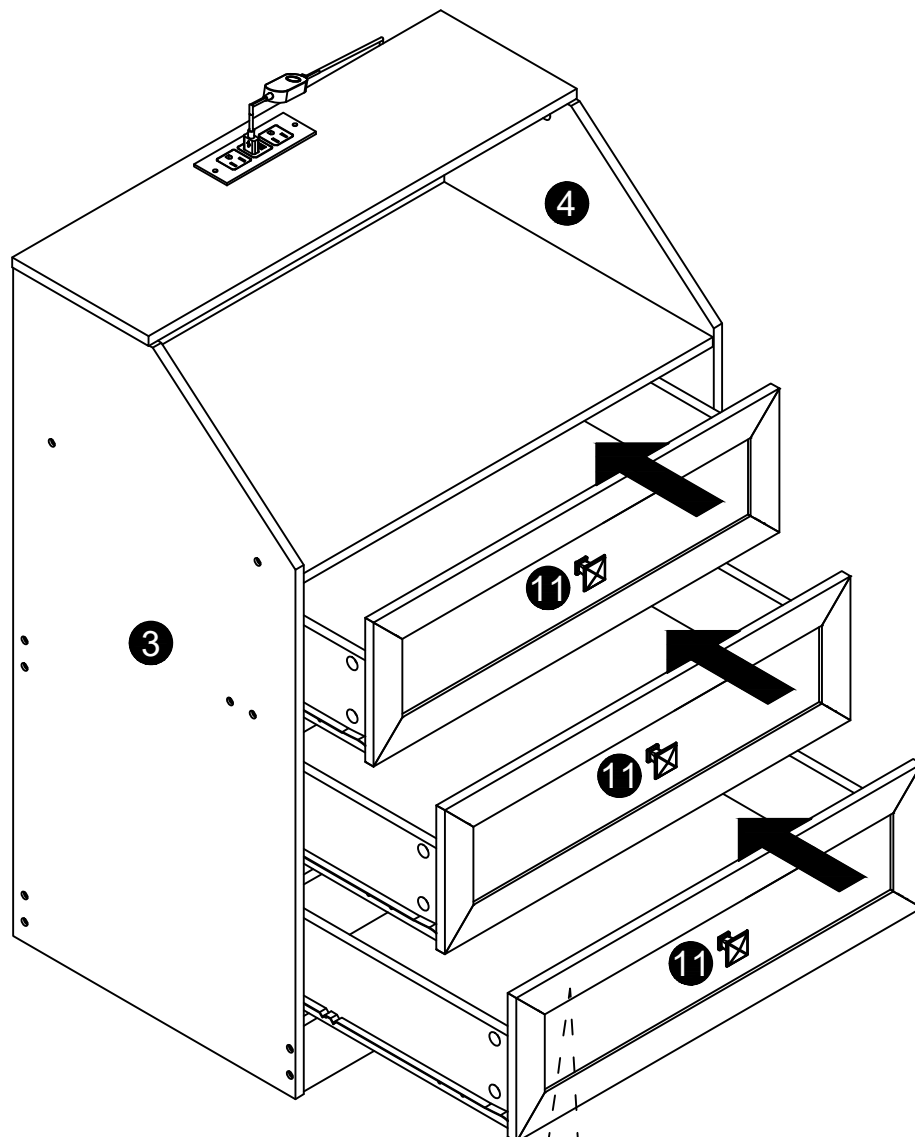

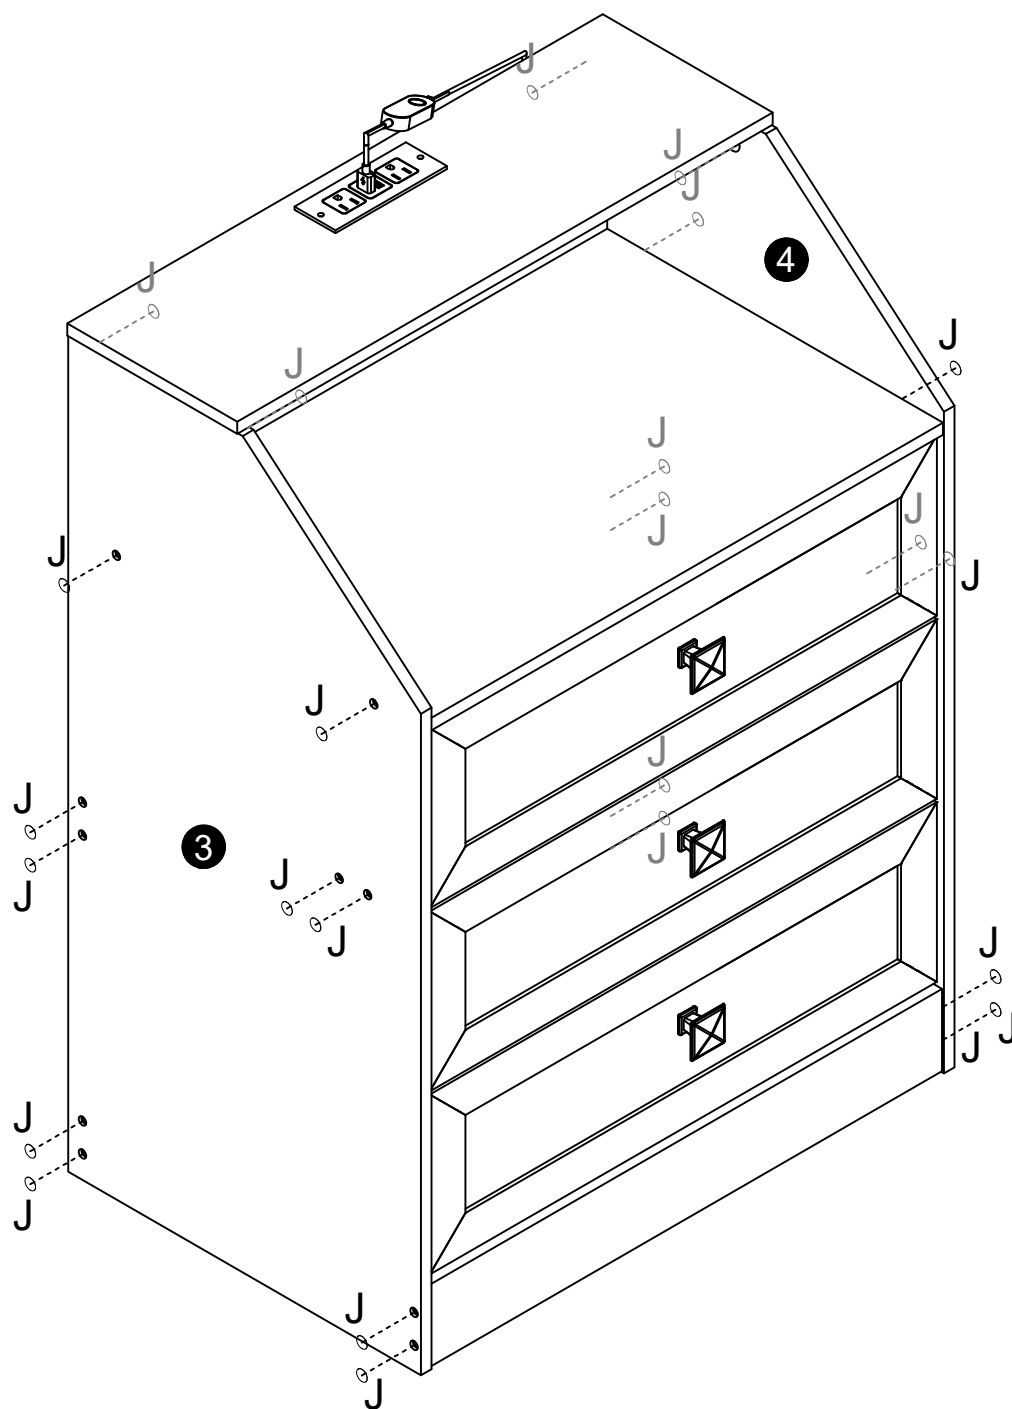


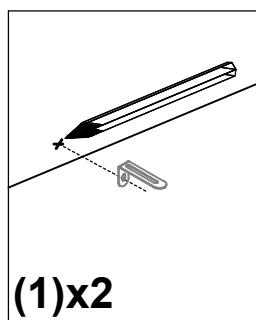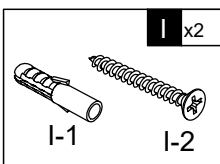


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

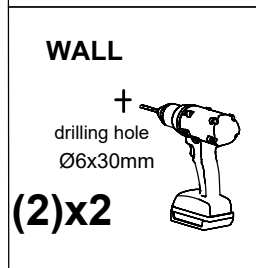

Then use a tape drill to make holes in the wall that are suitable for the product screws.

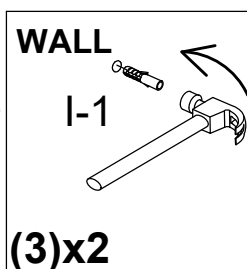

Then, put the expansion bolt into the hole

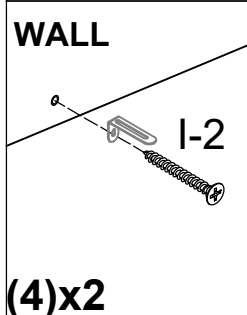

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

