

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.

PREPARATION








- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 15 minutes.
- * Tools Required for Assembly: Allen key (included) and Phillips head screwdriver (not included).

CARE AND MAINTENANCE

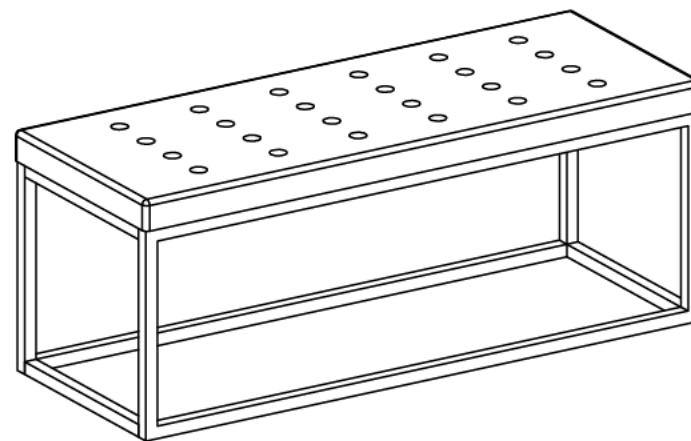
INDOOR METAL/ALUMINUM FURNITURE: Wipe spills immediately. Maintain with regular dusting and clean with mild soap and water, dry thoroughly and do not use a brass cleaner. Adhesive felt pads should always be used/applied in order to prevent damage to the furniture or surfaces on which the furniture is placed.

UPHOLSTERY CARE: To prevent overall soiling, frequent vacuuming or light brushing is recommended. Down-filled cushions should be brushed rather than vacuumed. Spot clean, using a mild water-free solvent or dry cleaning product. Only a professional cleaner should undertake a complete overall cleaning. The use of steam or water-based cleaners may cause excessive shrinking or staining.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QTY
A	Seat Cushion		1x
B	Side Frame		2x
C	Connecting Bar - upper		2x
D	Connecting Bar - lower		2x
HW1	Hex Socket Bolt 1/4"-20 x 0.625"		16x
HW2	Wood Screw ø4 x 15mm		10x
HW3	Allen Key M4		1x

Product Dimensions: 48"W x18"D x 19"H



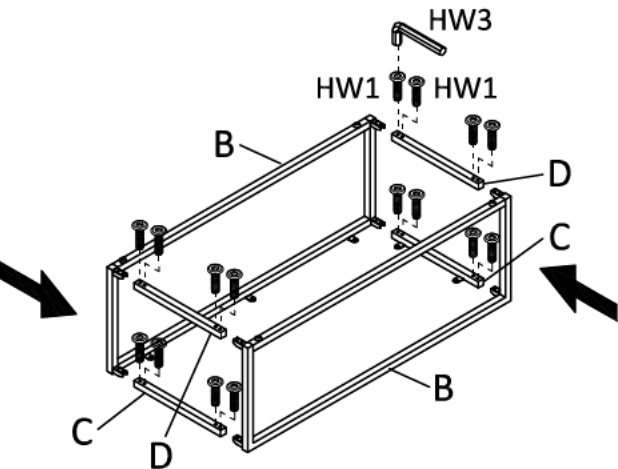
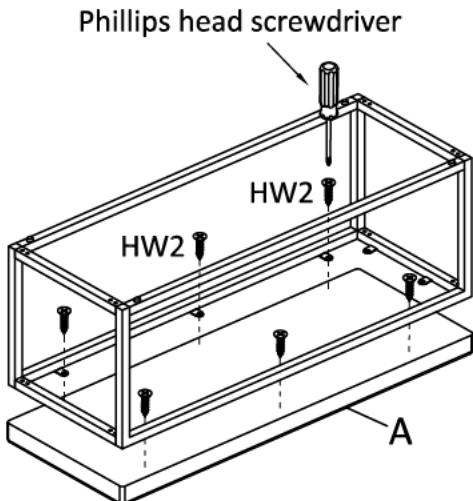
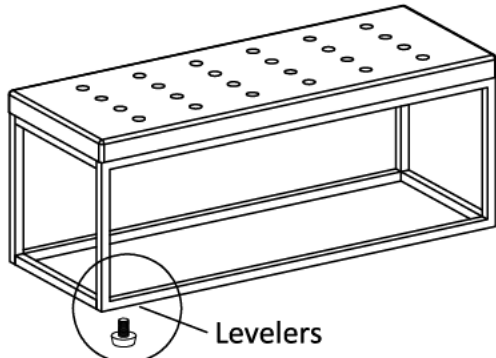
Weight capacity: 550 lbs

WARNING : DO NOT STAND ON THE PRODUCT

WARNING : DO NOT OVER TORQUE BOLTS

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 15 minutes.
- * Tools Required for Assembly : Allen key (included) and Phillips head screwdriver (not included).

<div data-bbox="114 316 779 391">1</div>  <p data-bbox="145 1045 761 1109">*Do not fully tighten the bolts until the product is assembled.</p>	<div data-bbox="779 316 1444 391">2</div>  <p data-bbox="806 1045 1433 1109">*Do not fully tighten the bolts until the product is assembled.</p>	<div data-bbox="1444 316 2116 391">3</div>  <p data-bbox="1467 1045 2105 1109">*After properly adjusting the levelers for stability, then fully tighten all bolts.</p>
<p data-bbox="134 1165 235 1204">Step 1</p> <p data-bbox="134 1204 772 1492">**insure Side Frame (B) with protrusion are facing inward.** Insert 2x Connecting Bars - upper (C) & 2x Connecting bars - lower (D) to the corresponding position on the 2x Side Frames (B). Use the Allen Key (HW3) to screw in the Hex Socket Bolts (HW1) through the holes on the Coonecting bars into the Side Frames.</p>	<p data-bbox="801 1157 907 1197">Step 2</p> <p data-bbox="801 1197 1433 1364">Attach the assembled metal base to the underneath of Seat Cushion (A), Use Philips head screwdriver (not included) to screw in the Wood Screws (HW2) into the bottom of Seat Cushion.</p>	<p data-bbox="1467 1165 1568 1204">Step 3</p> <p data-bbox="1467 1204 2105 1316">Turn the assembled product upright. Use the levelers to adjust the bench if needed. Assembly is completed.</p>