

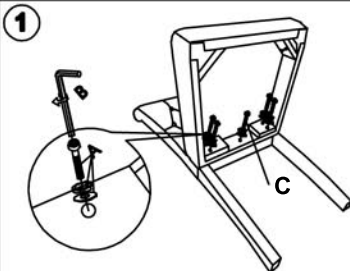



# ASSEMBLY INSTRUCTION

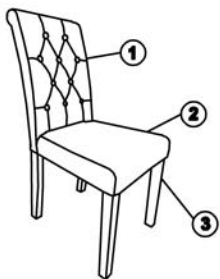


Put the screws in the holes, tight the screws, but not too tight, 90° is ok.

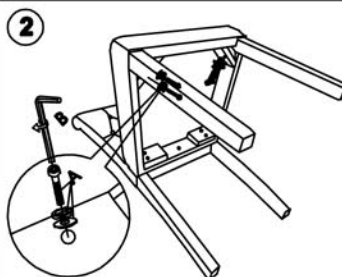


Put the screws in the holes, tight the screws, but not too tight, 90° is ok.

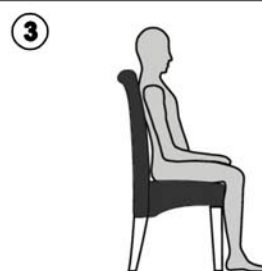


Then adjust the balance of the chair.

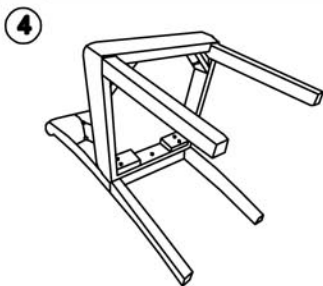

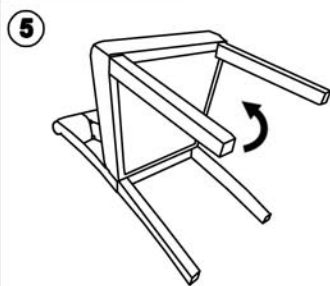


Tight all the screws to 100%

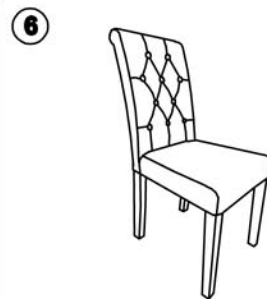

Stick the black part on the seat



HARDWARE LIST	CODE	PARTS	QTY.
	1	BACK	1
	2	SEAT	1
	3	FRONT LEG	2

HARDWARE LIST	CODE	PARTS	QTY.
	A	M8x80MM 	8
	B	ALLEN KEY 	1
	C	M8x60MM 	1