


ASSEMBLY INSTRUCTIONS

30" BATHROOM VANITY


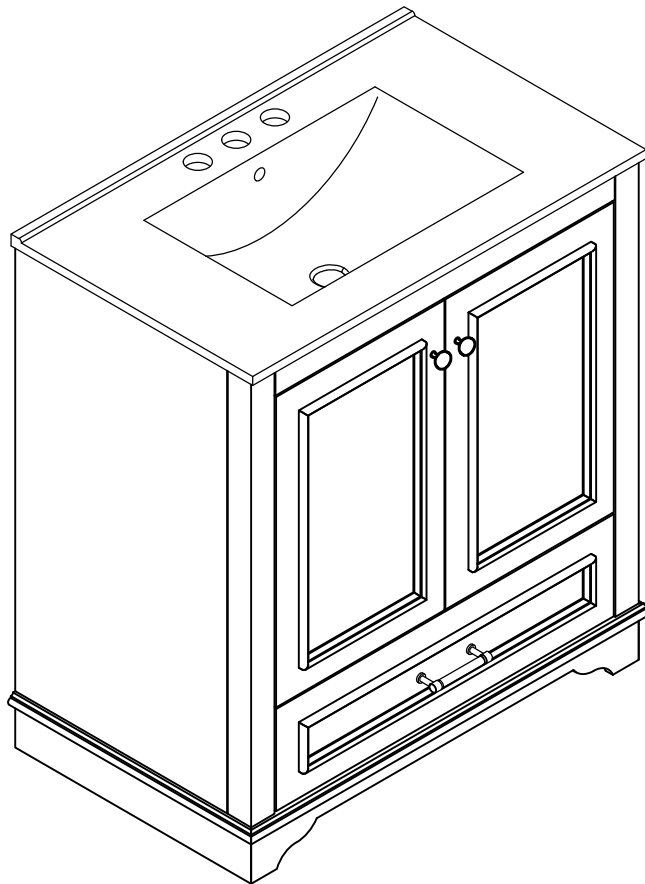


Thank you for purchasing this quality product. Be sure to check all pack material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



*Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
*Please assemble on a clean soft surface to avoid damage.

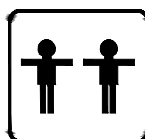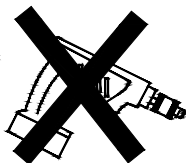


+

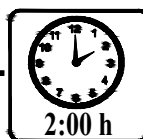

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY







Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions









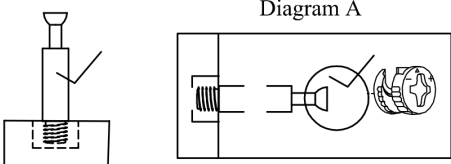
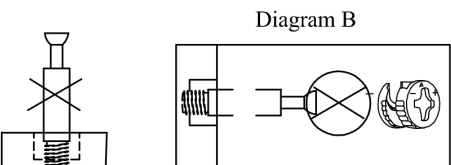
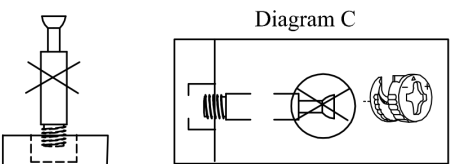

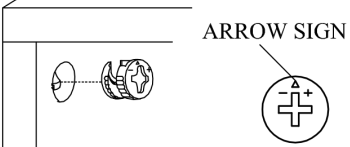
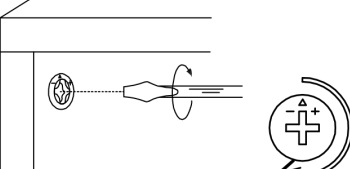
	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

Detail View - CABINET



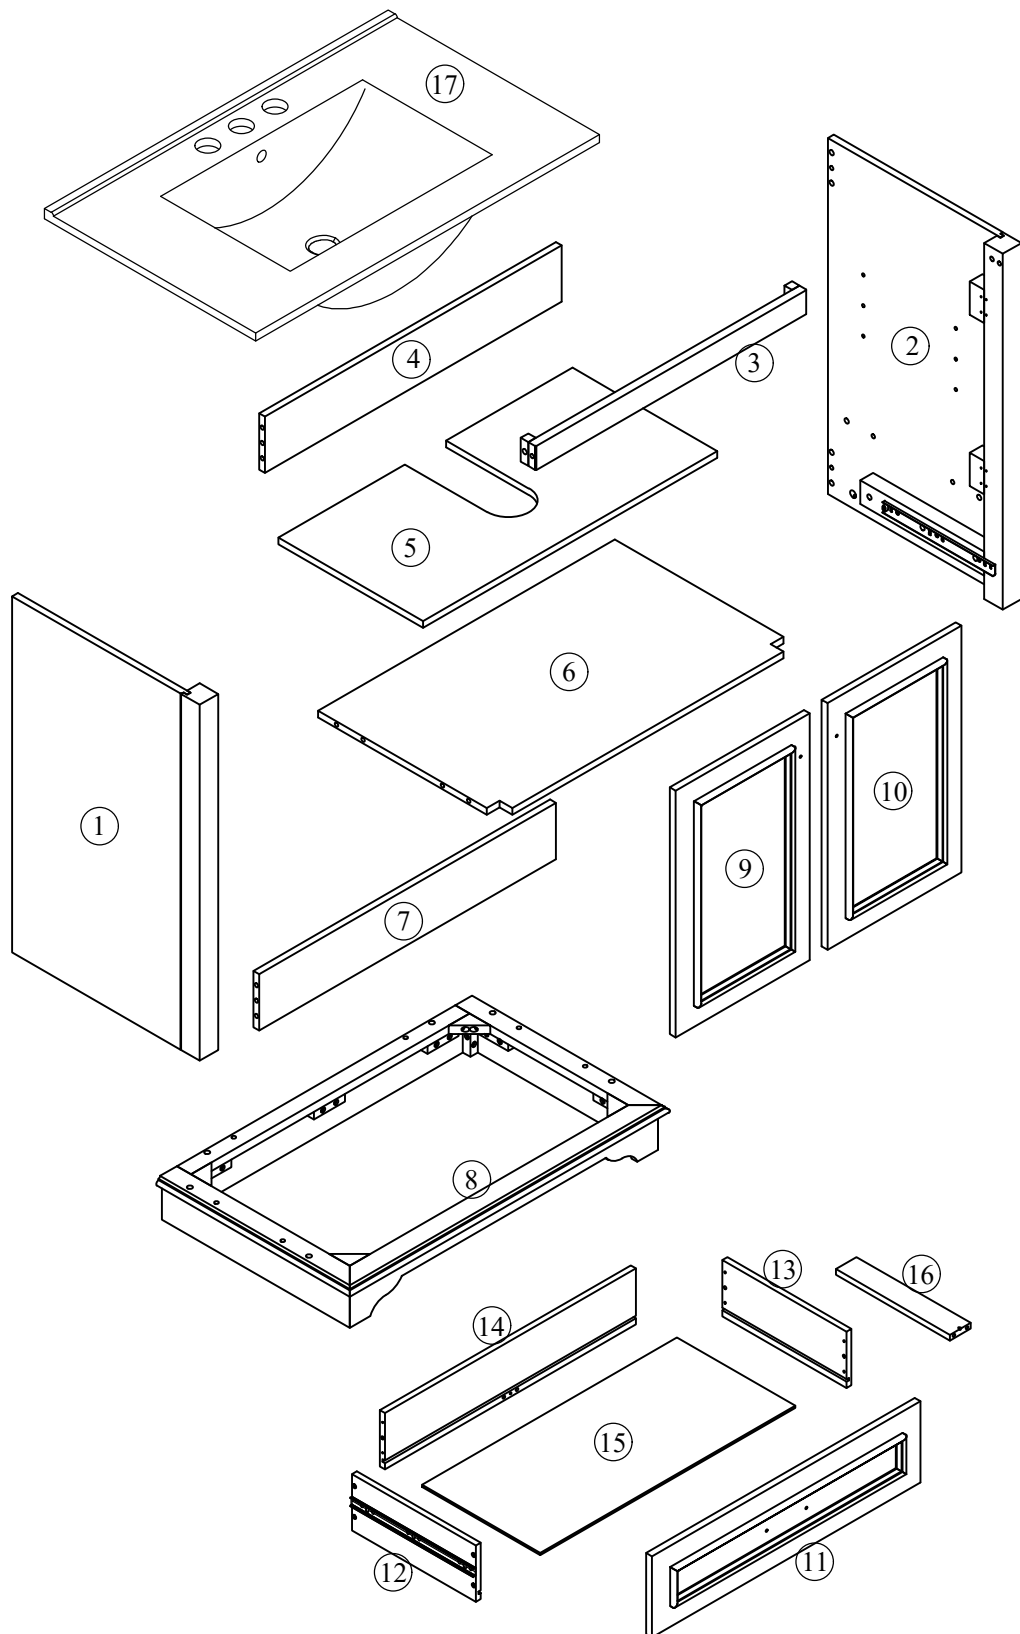


Identifying the Hardware -Identify the hardware using the illustrations below.





Part List-N710P317676

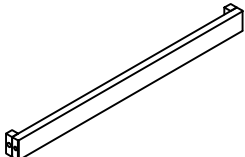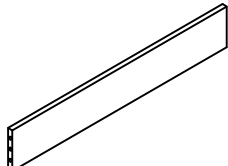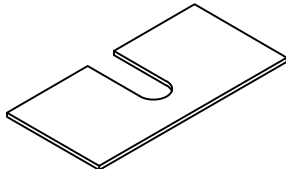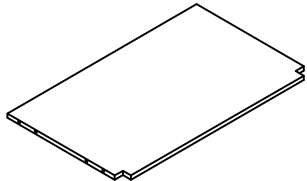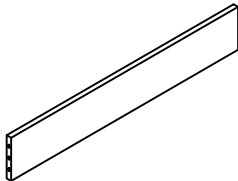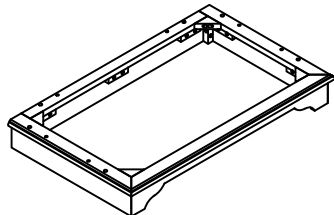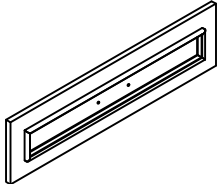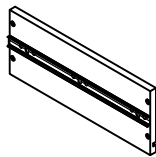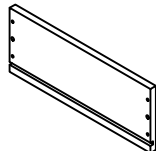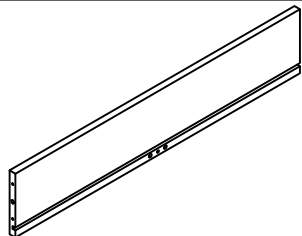1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Top Front Bar - 1pc		Top Rear Panel - 1pc
5		6	
	Adjustable Shelf - 1pc		Shelf Below - 1pc
7		8	
	Bottom Rear Panel - 1pc		Bottom Frame - 1pc
9		10	
	Cabinet Door (L) - 1pc		Cabinet Door (R) - 1pc
11		12	
	Drawer Face - 1pc		Drawer Side Panel (L)-1pc
13		14	
	Drawer Side Panel (R)-1pc		Drawer Back Panel -1pc

Part List-N710P317676

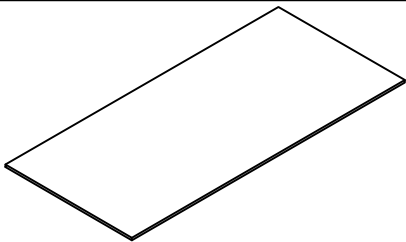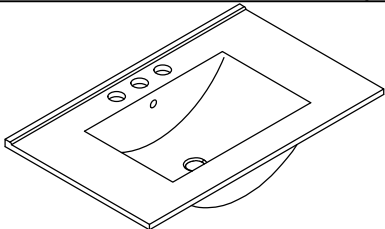
15	 Drawer Bottom Panel-1pc	16	 Drawer Bottom Support-1pc
17	 Sink - 1pc		

Hardware List-N710P317676


A  $\varnothing 6 \times 35 \text{mm}$	B  $\varnothing 14.5 \times 12 \text{mm}$	C  $\varnothing 8 \times 30 \text{mm}$
Three in one bolts - 18pcs	Three in one lock - 18pcs	Wood dowel - 16pcs
D  $\varnothing 6 \times 30 \text{mm}$	E  $\varnothing 8 \times \varnothing 4 \times 32 \text{mm}$	F  $\varnothing 8 \times \varnothing 4 \times 25 \text{mm}$
Wood dowel - 8pcs	Round head screw - 9pcs	Round head screw - 1pc
G  Handle - 2pcs	H  $\varnothing 5/32" \times 20 \text{mm}$	I  Handle (1pc)
Handle - 2pcs	Handle screw - 2pcs	Handle (1pc)
J  $\varnothing 5/32" \times 32 \text{mm}$	K  Damping hinge - 4pcs	L  $\varnothing 7 \times \varnothing 3.5 \times 12 \text{mm}$
Handle screw - 2pcs	Damping hinge - 4pcs	Flat head screw - 24pcs
M  Laminate pad - 4pcs	N  $\varnothing 13 \times 1/4" \times 30 \text{mm}$	O  $\varnothing 1/4" \times 16 \times 1 \text{mm}$
Laminate pad - 4pcs	Hex-Head bolts(2pcs)	Washer(2pcs)
P  $\varnothing 1/4" \times 10 \times 1.2 \text{mm}$	Q  4mm	R  Anti fall hardware (2sets)
Lock Washer - 2pcs	Allen key - 1pc	Anti fall hardware (2sets)

STEP: 1

A



6PCS

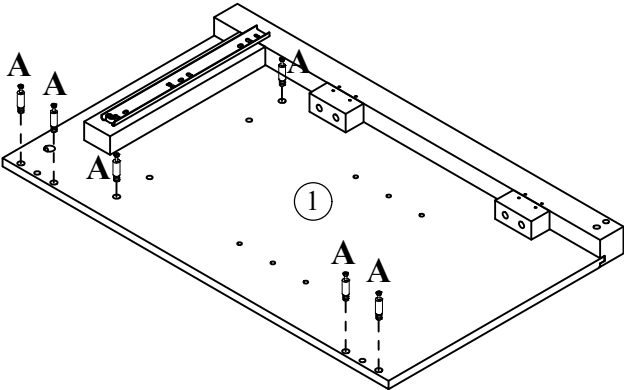

STEP: 2

Q



1PC

N



1PC

O




1PC

P



1PC

C




5PCS

B




6PCS

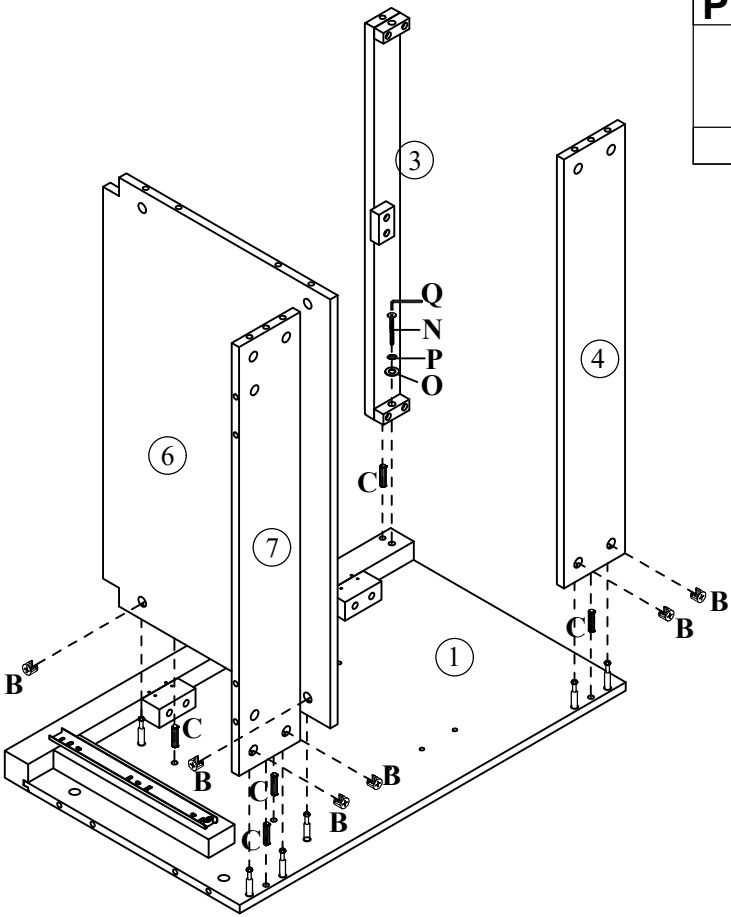


STEP: 3

A



6PCS

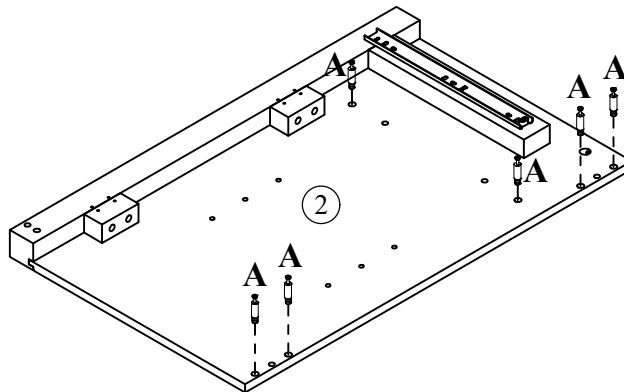

STEP: 4

Q



1PC

N



1PC

O




1PC

P



1PC

C




5PCS

B




6PCS

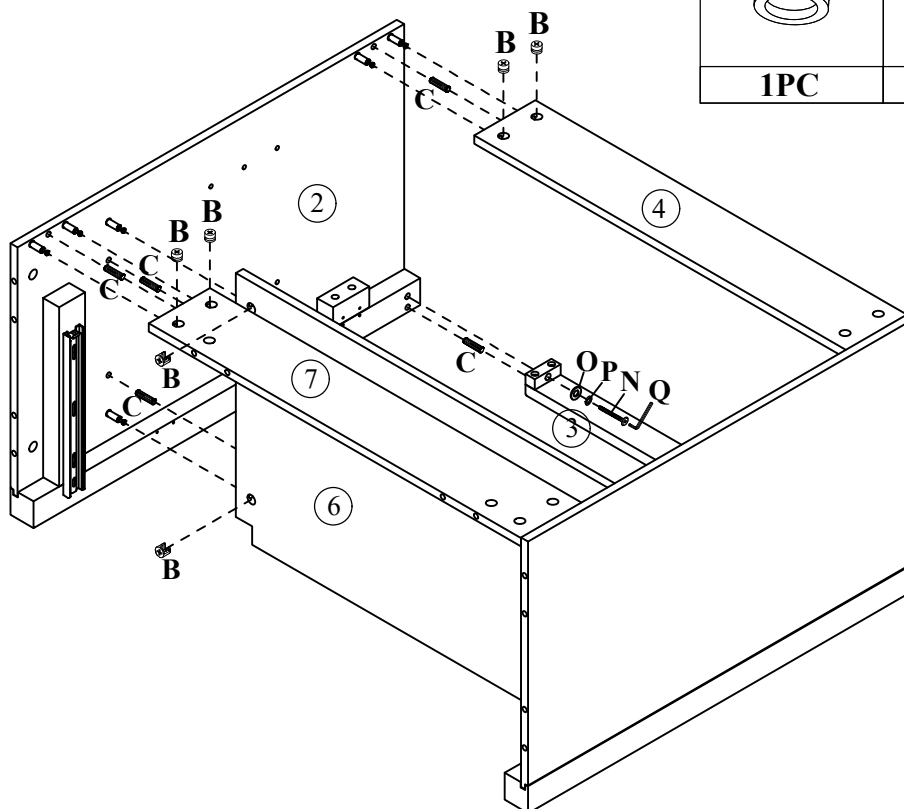


STEP: 5

A




6PCS

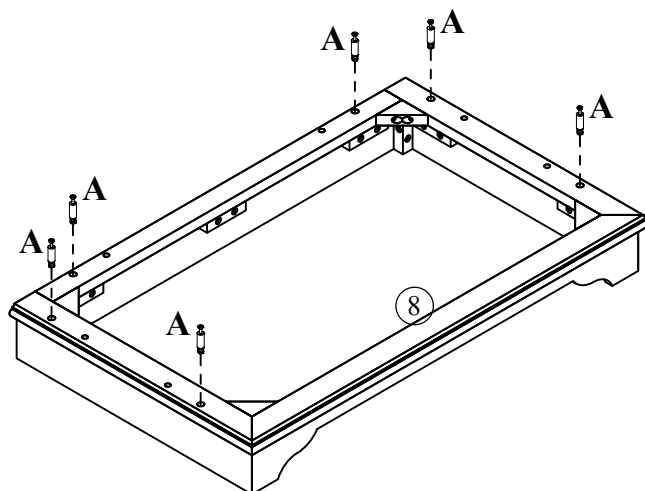

STEP: 6

C




6PCS

B




6PCS

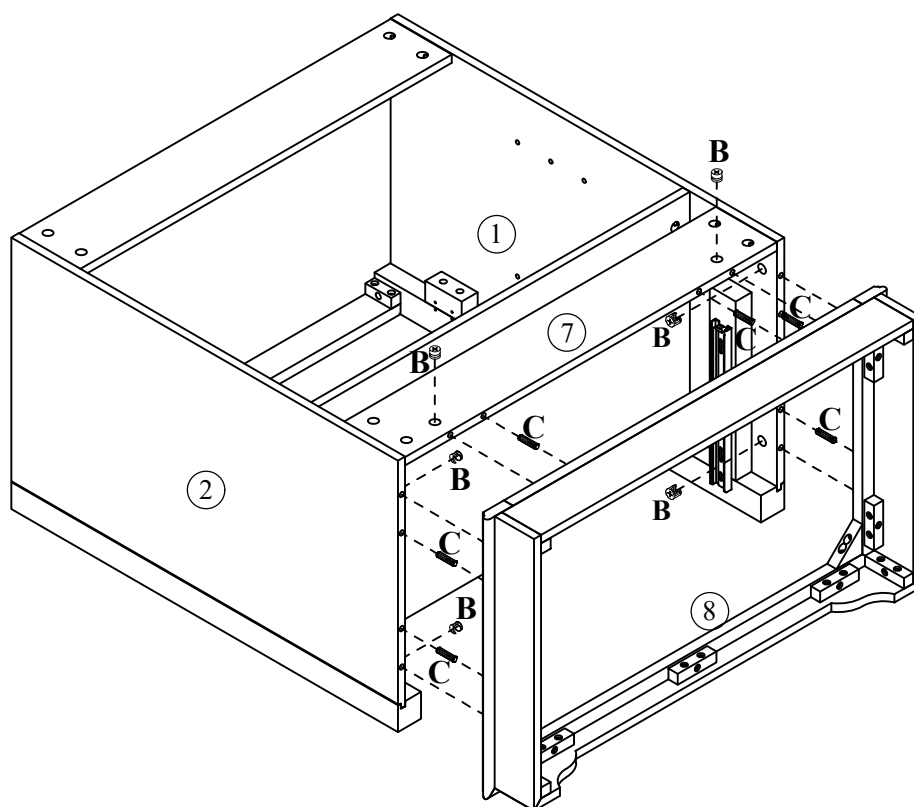


STEP: 7




4PCS

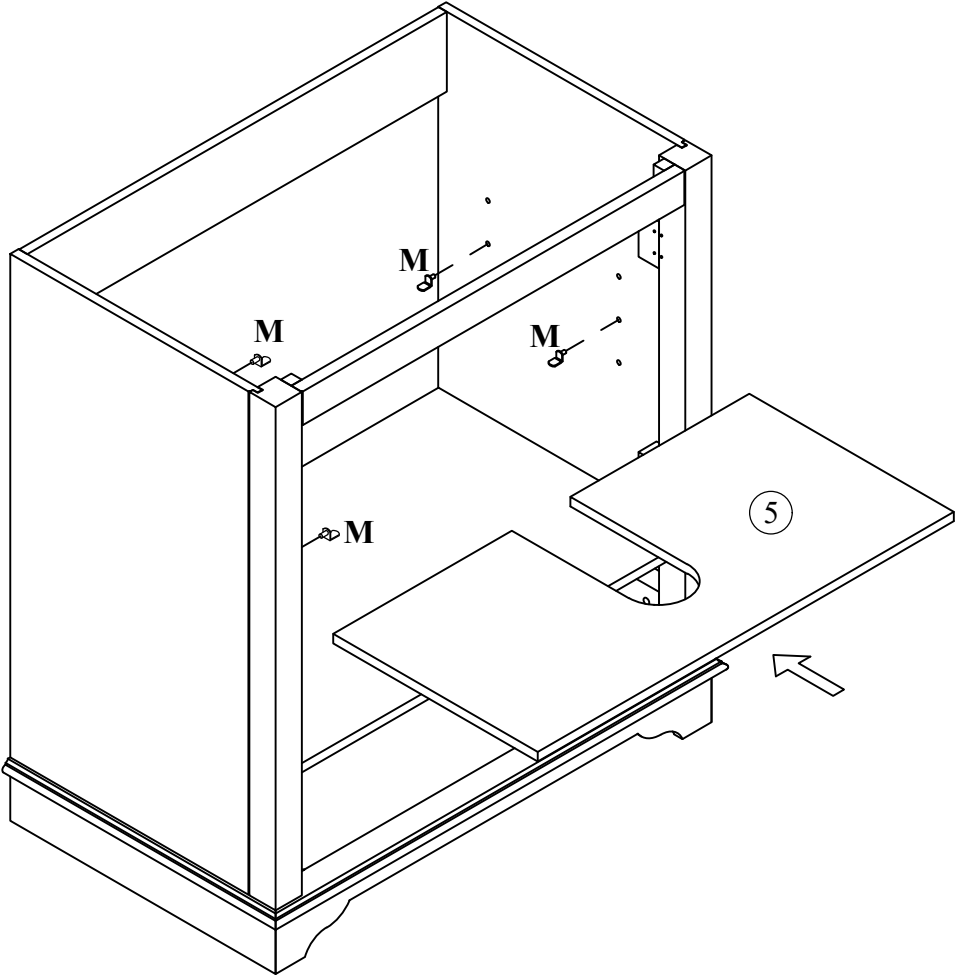


STEP: 8

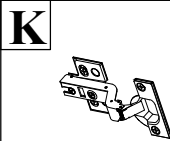

4PCS





8PCS


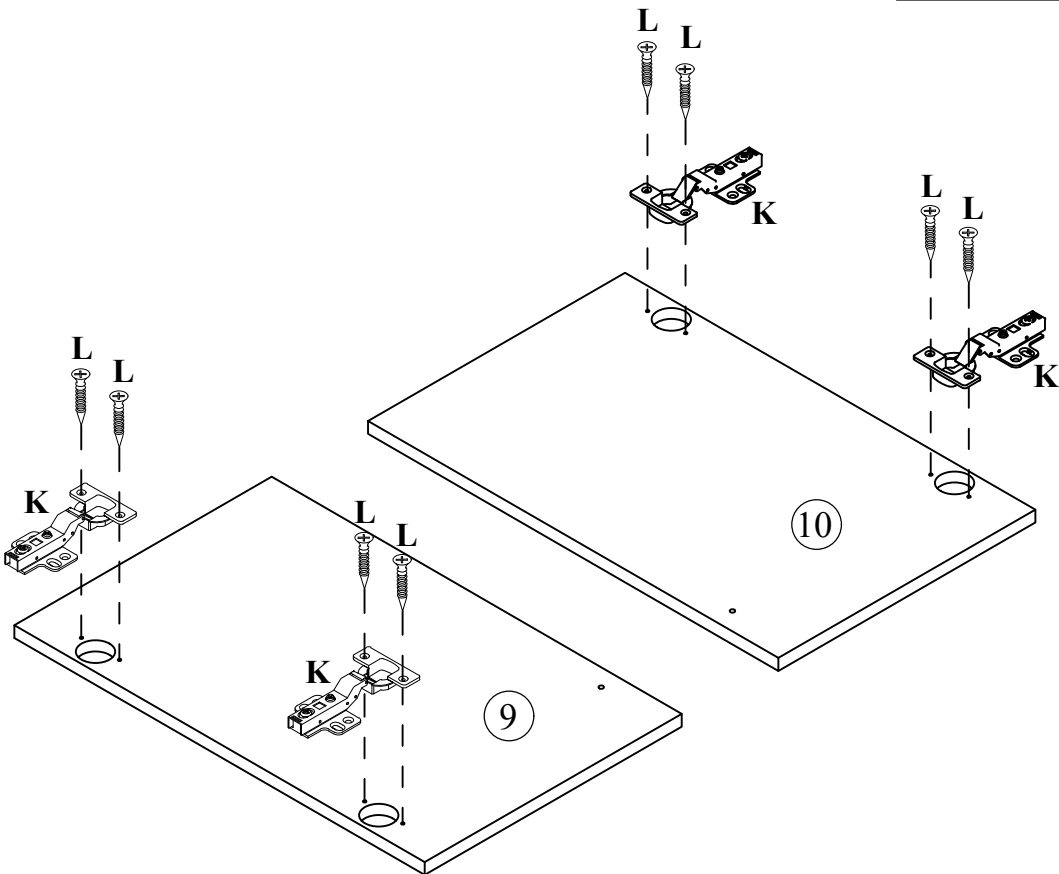



STEP: 9

L	H	G
		
16PCS	2PCS	2PCS

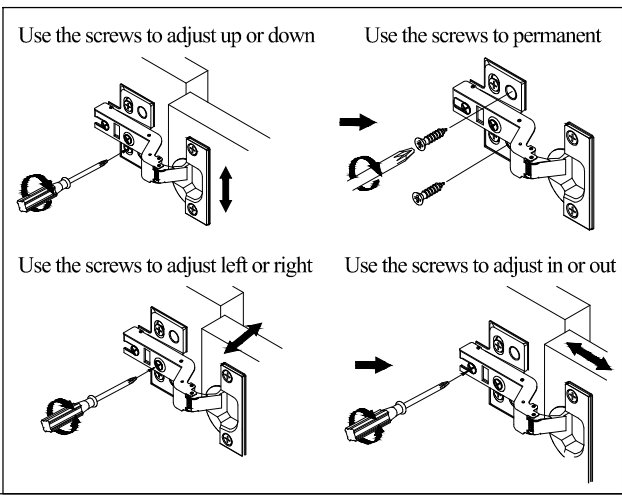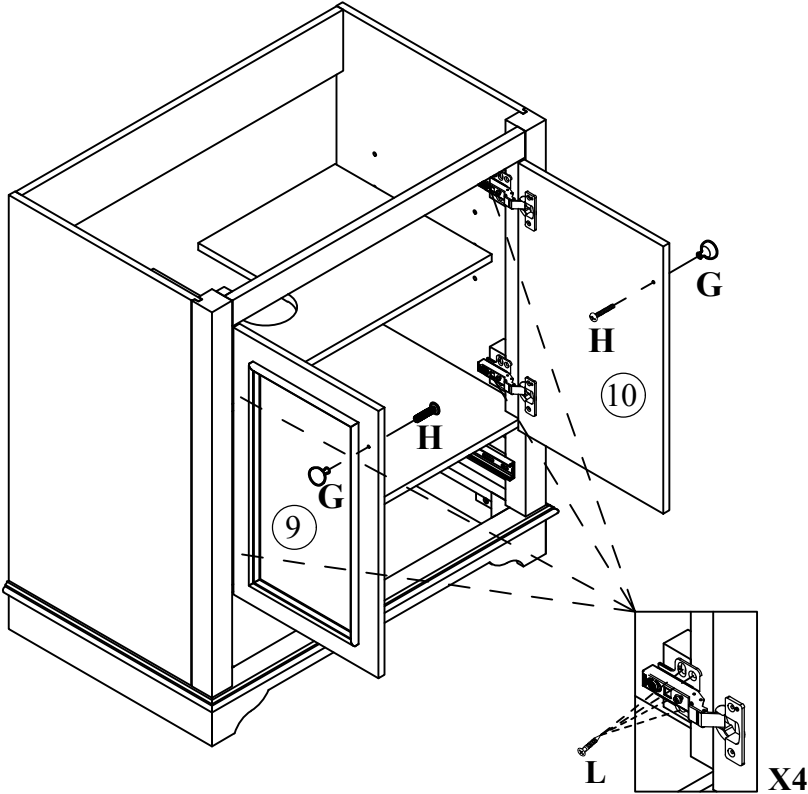


STEP: 10



D	E	F	J	I
				
8PCS	9PCS	1PC	2PCS	1PC

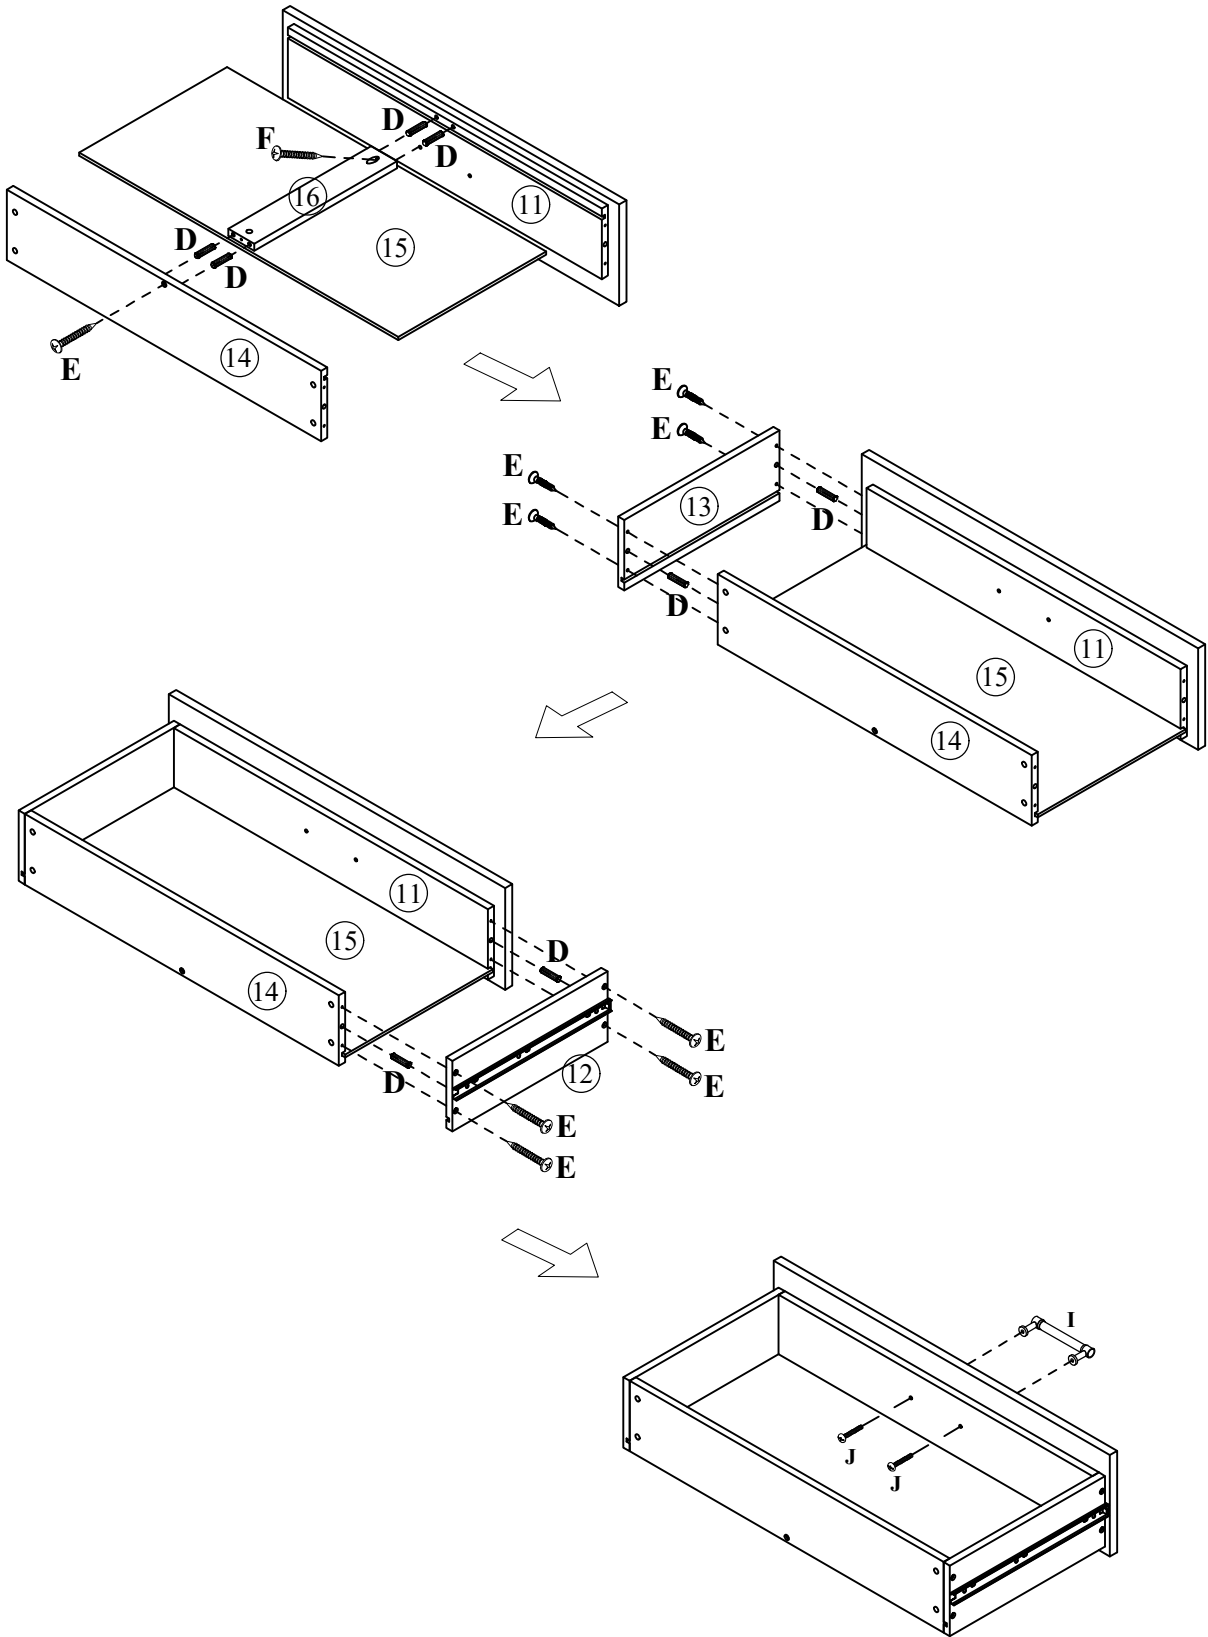

STEP: 11

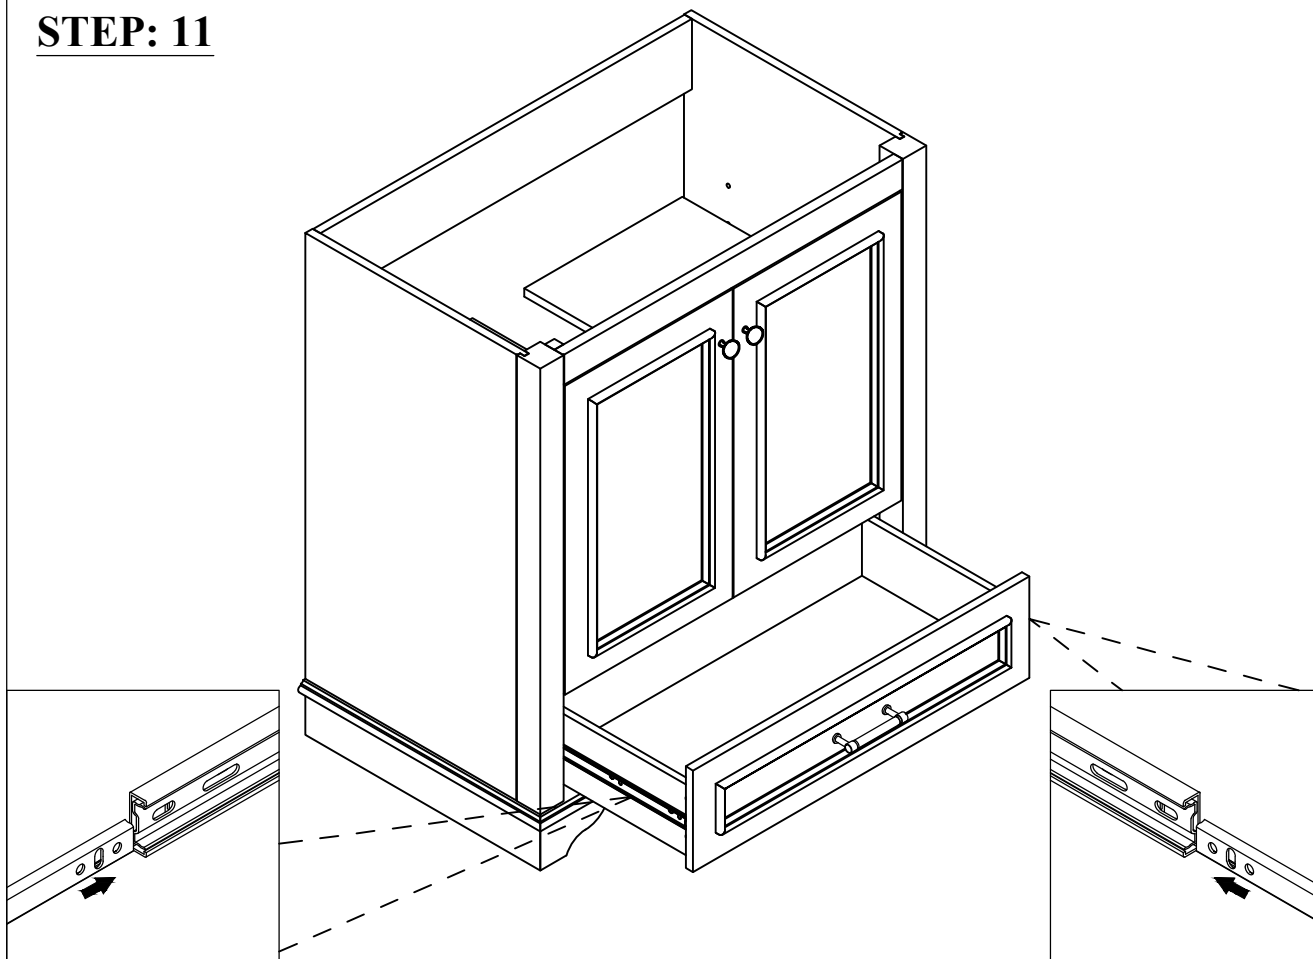


STEP: 12

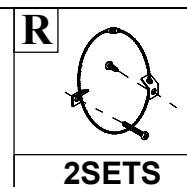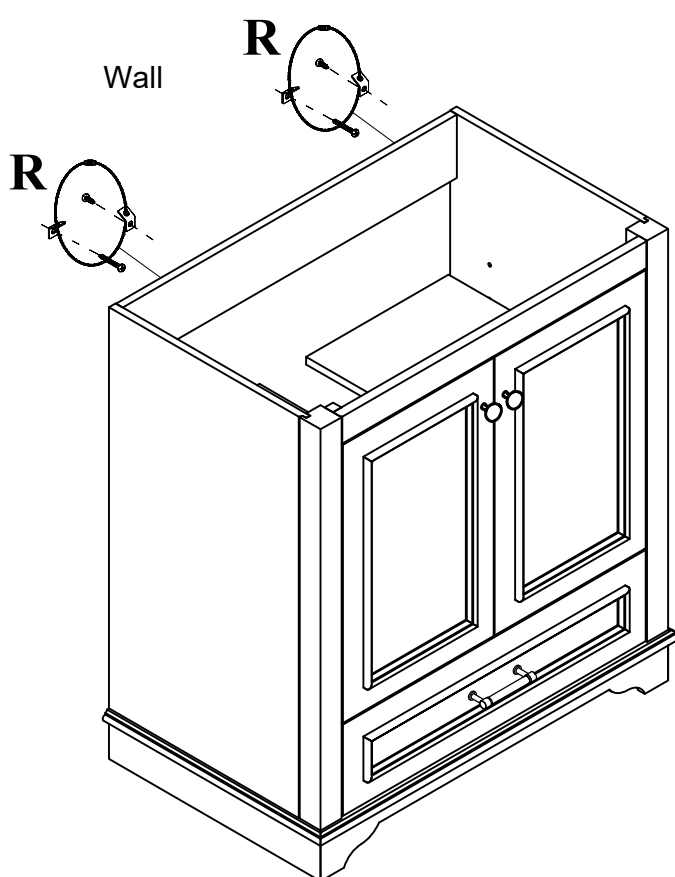


STEP: 13



Install the sink on the cabinet with glue.
Let stand for 24 hours

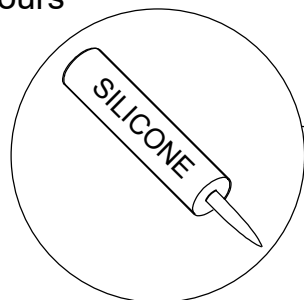


*Silicone glue is not included
in the package to comply
with safety regulations in
certain shipping conditions.

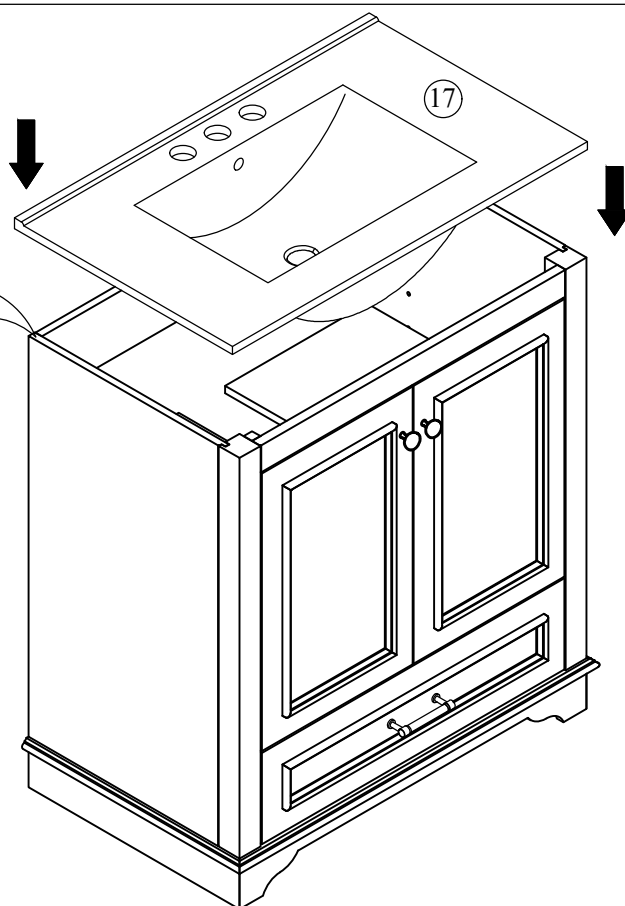

STEP: 14

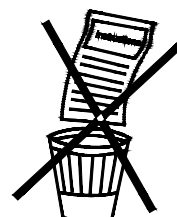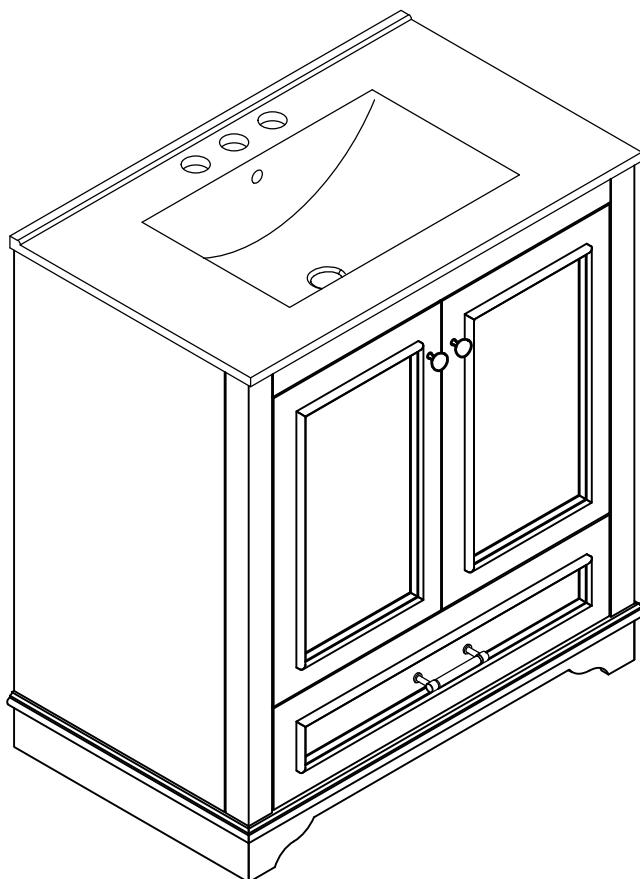


HINGE ADJUSTMENTS

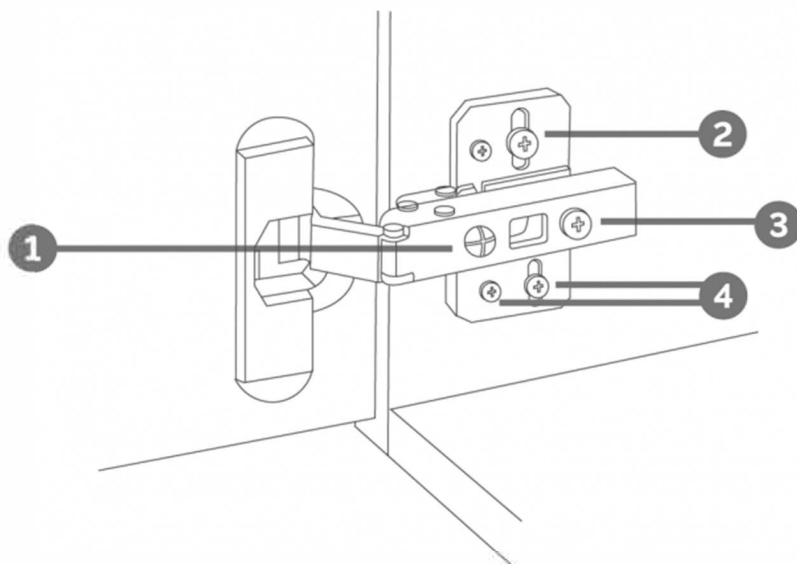


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

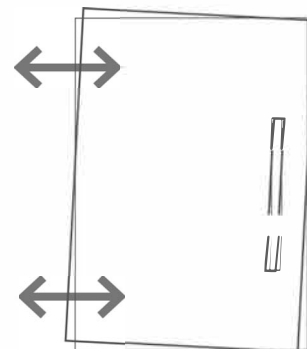

② ④ Height adjustment

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

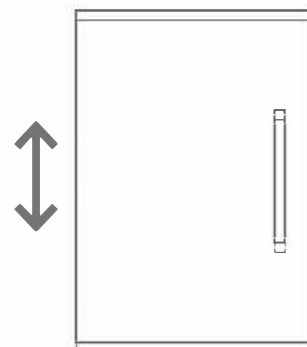

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet

