



6260F&Q

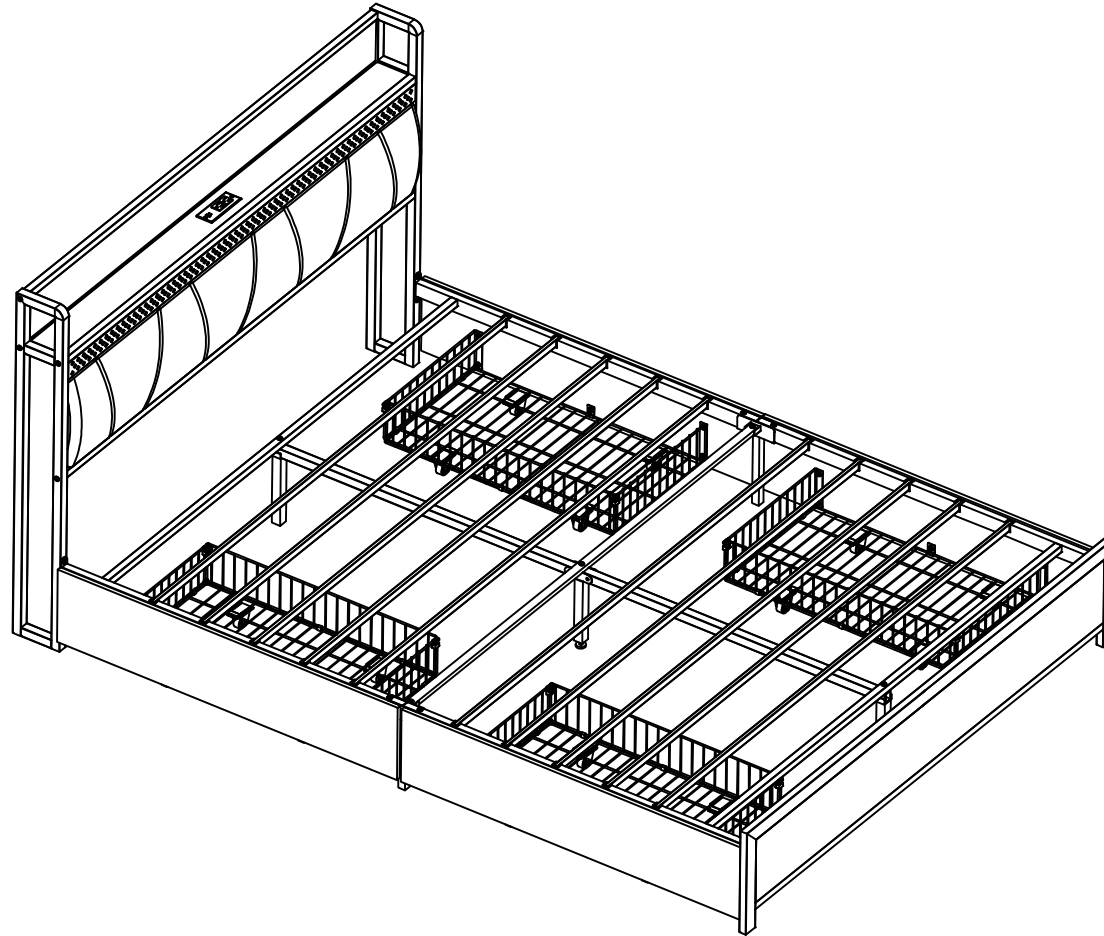

Attention: Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other. If the screws are tightened initially, subsequent hole positions may be misaligned.

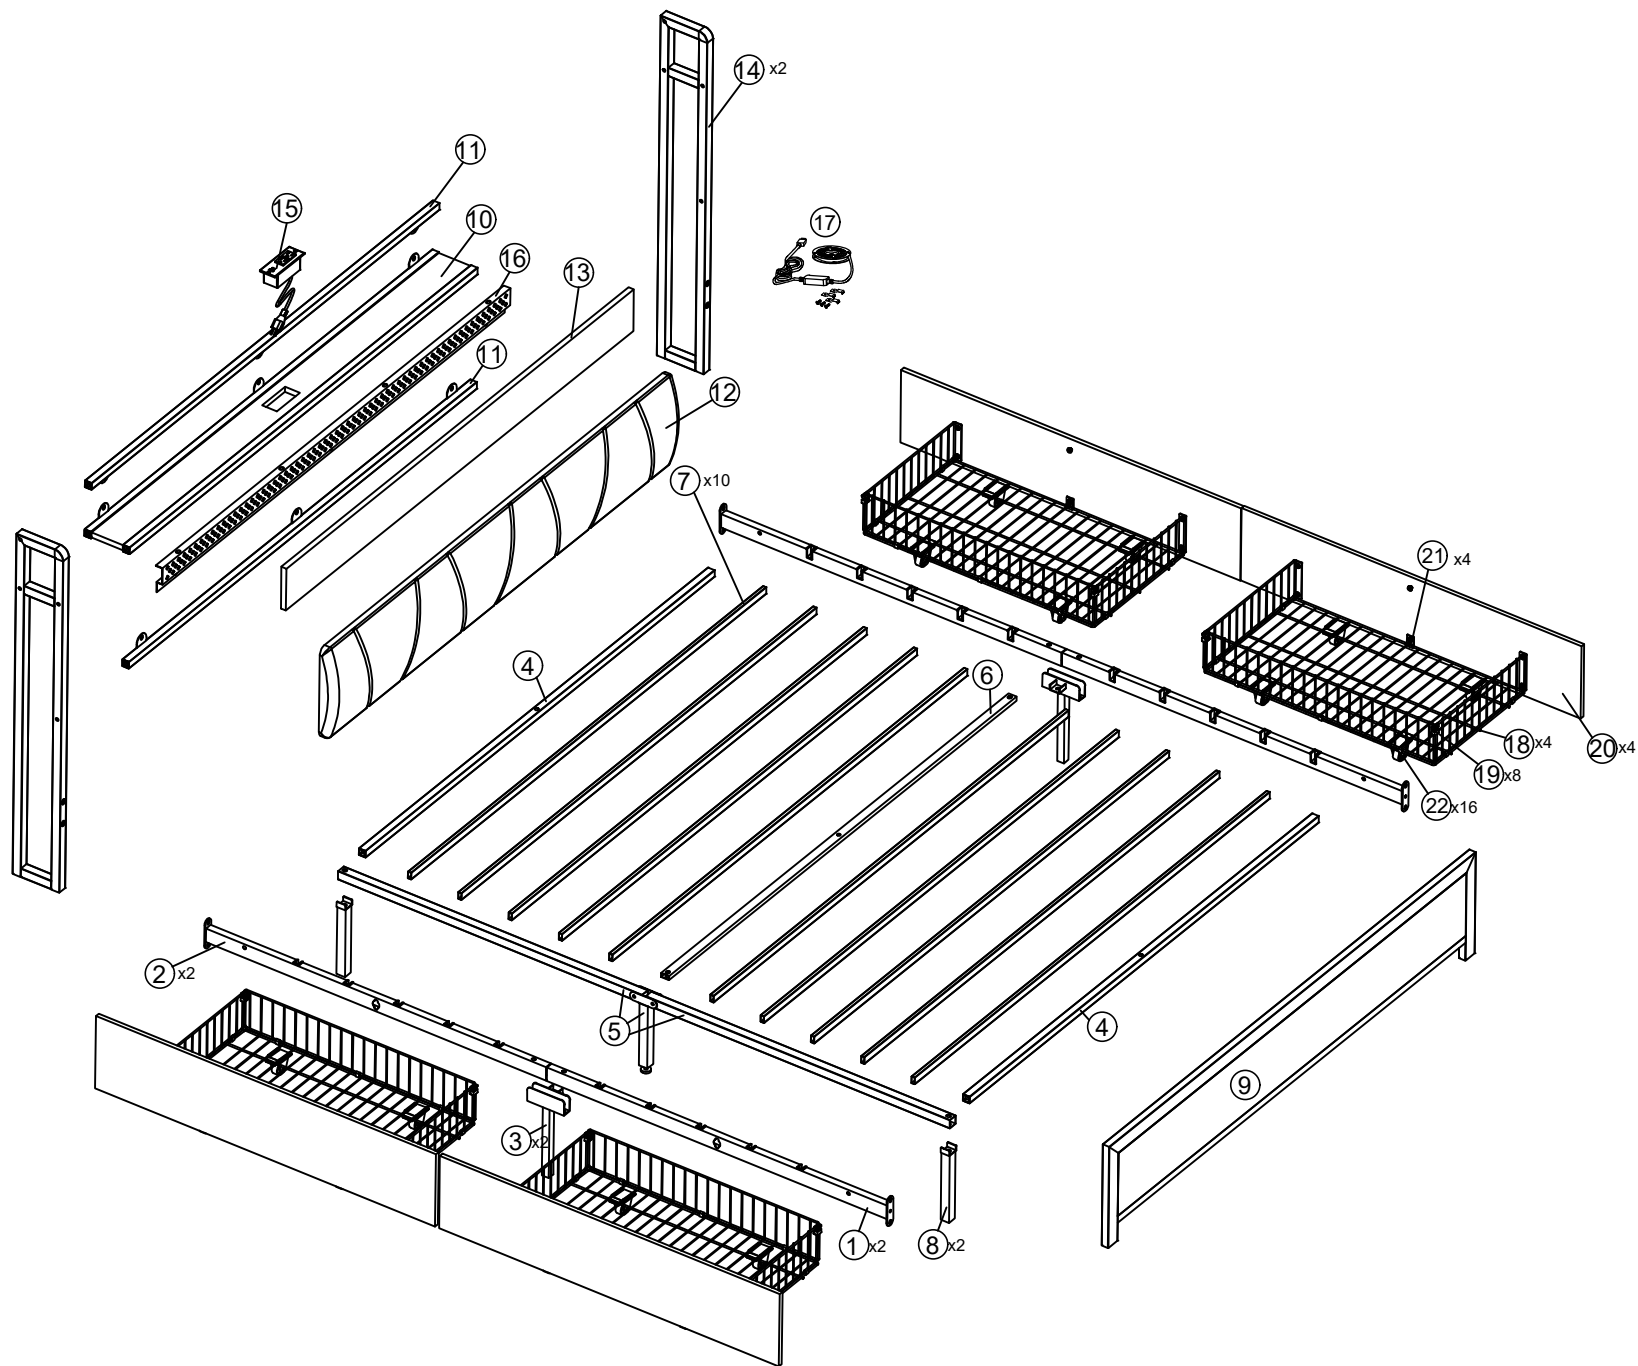

Hardware arts



M4*12

(A) 2PCS



M6*10

(B) 30 PCS



M6*15

(C) 10 PCS



M6*45

(D) 12PCS




M6*50

(E) 1 PC



M8*20

(F) 10PCS




M8*55

(G) 6PCS



4#

(H) 1PC




5#

(I) 1PC

Part list




(1) 2PCS



(2) 2PCS




(3) 2PCS

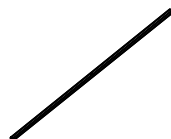


(4) 2PCS



(5) 1PC

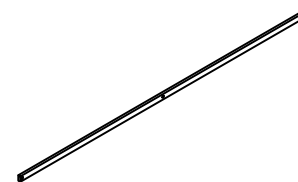


(6) 1PC

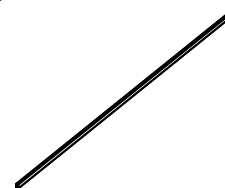


(7) 10PCS



(8) 2PCS

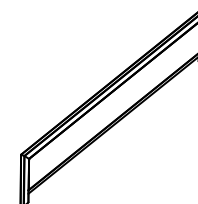


(9) 1PC

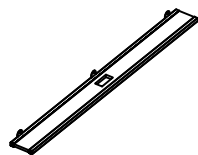


(10) 1PC




(11) 2PCS

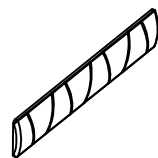


(12) 1PC

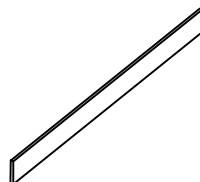

(13) 1PC

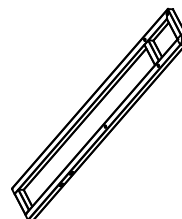

(14) 2PCS




(15) 1PC



(16) 1PC



(17) 1PC

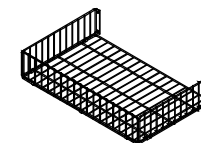


(18) 4PCS




(19) 8 PCS



(20) 4 PCS





(21) 4 PCS





(22) 16 PCS

Step:1

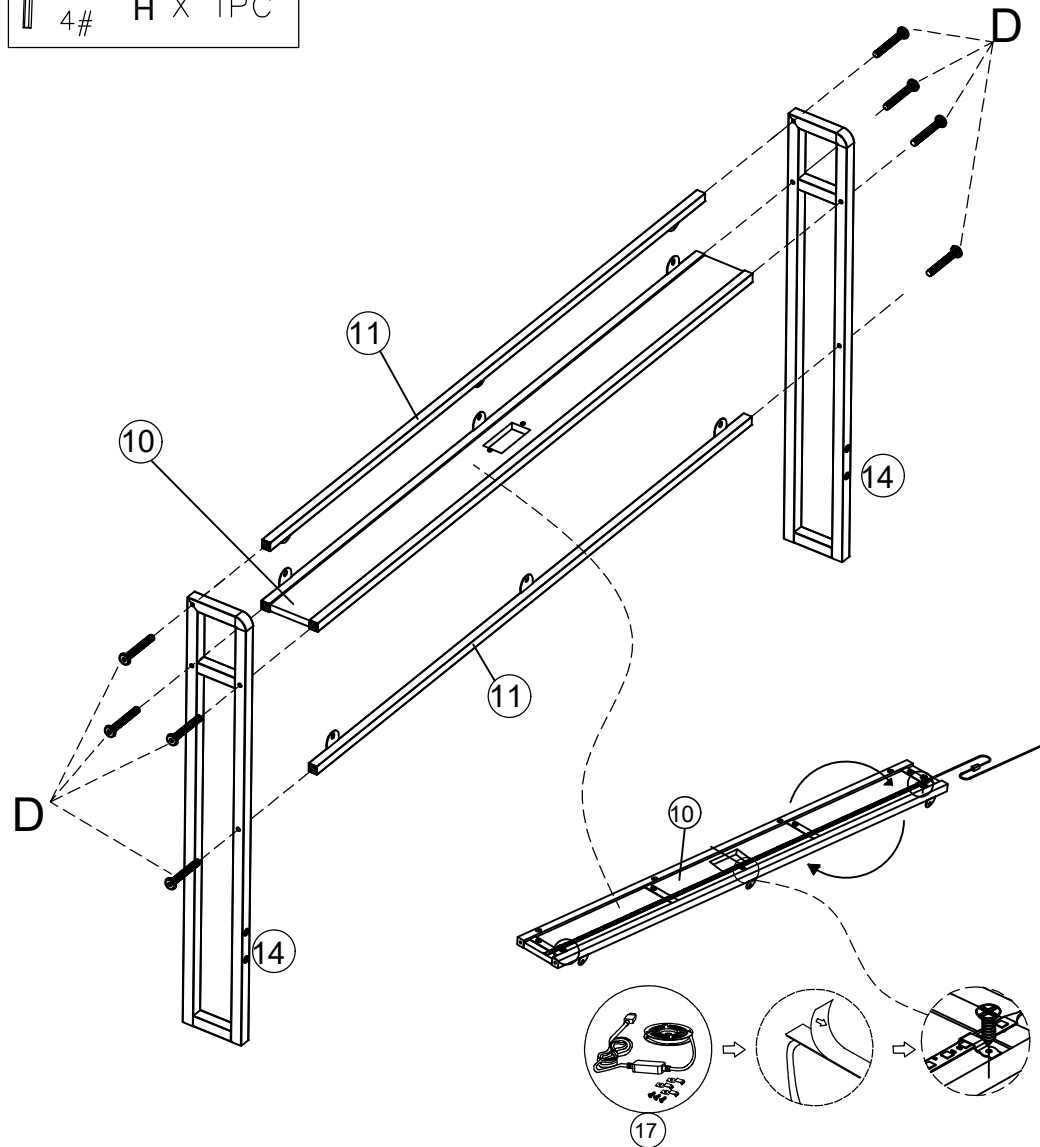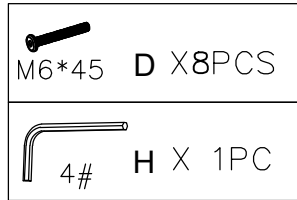

Step:2

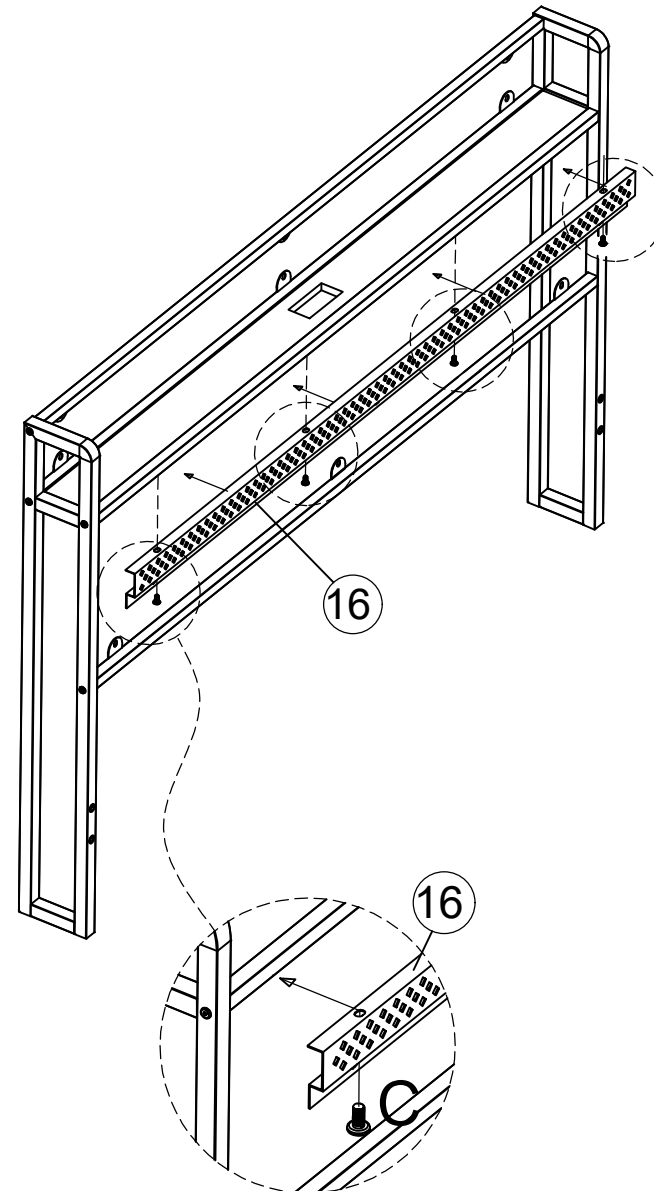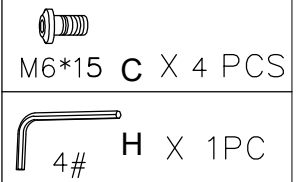


Step:3

M6*10 B X6PCS

M6*15 C X6PCS

4# H X 1PC

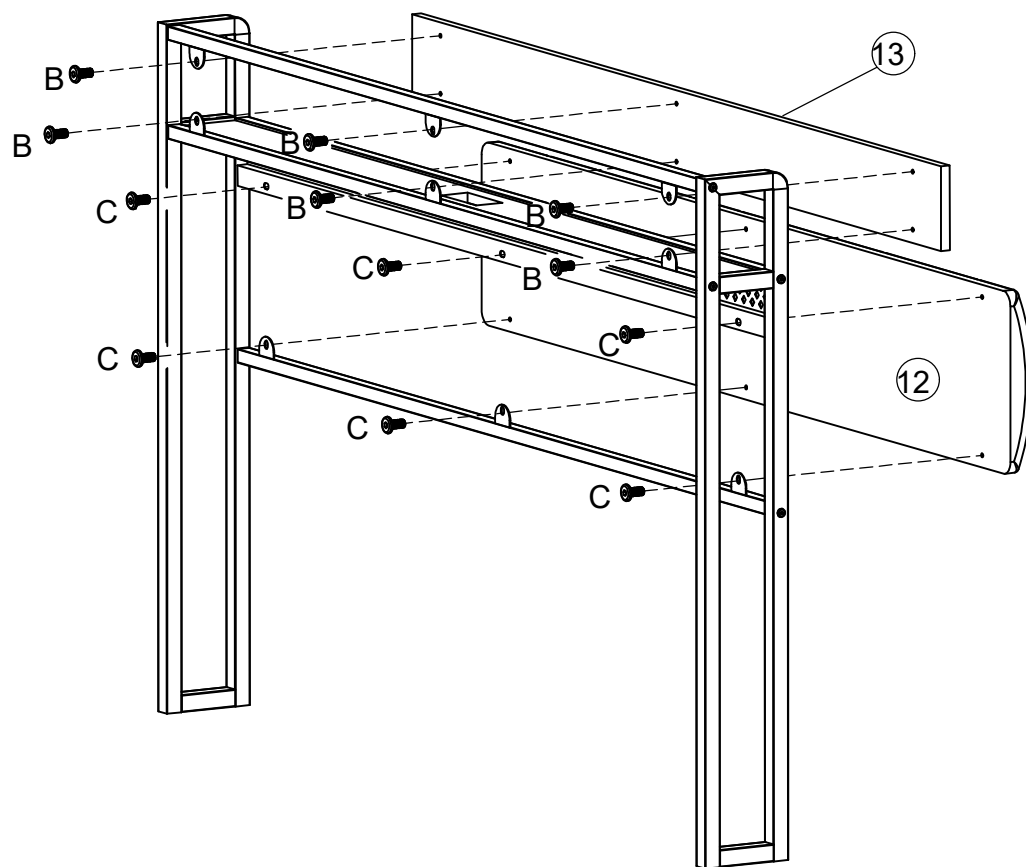


Step:4

M8*55 GX 4PCS

5# I X 1PC




Please pay attention to the direction arrow in the illustration to avoid reverse installation


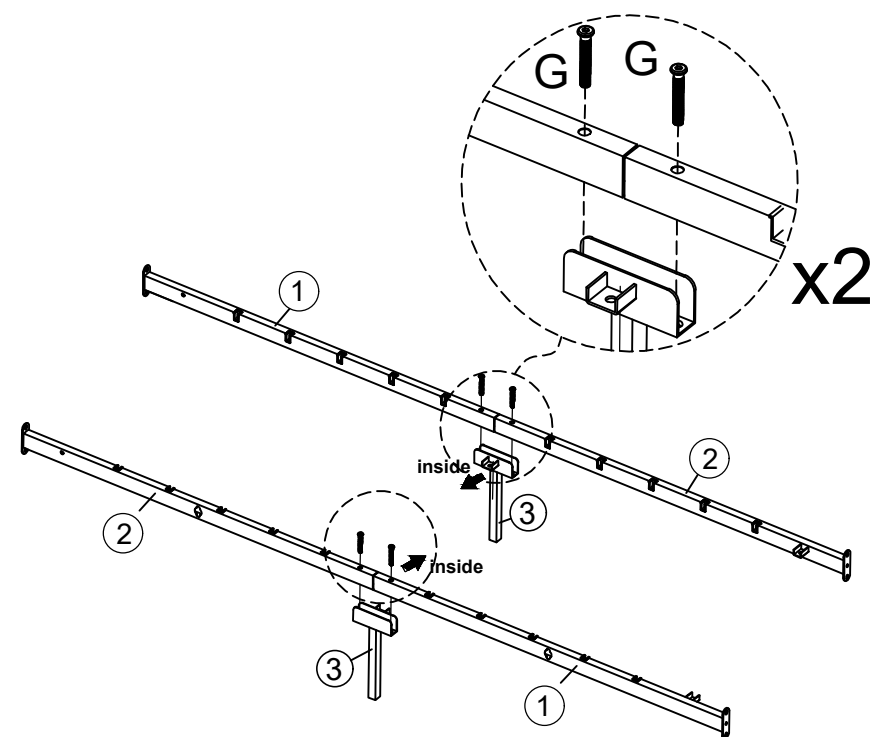



Step:5

	M8*20 F X 8PCS
	5# I X 1PC
	M4*12 A X 2PCS

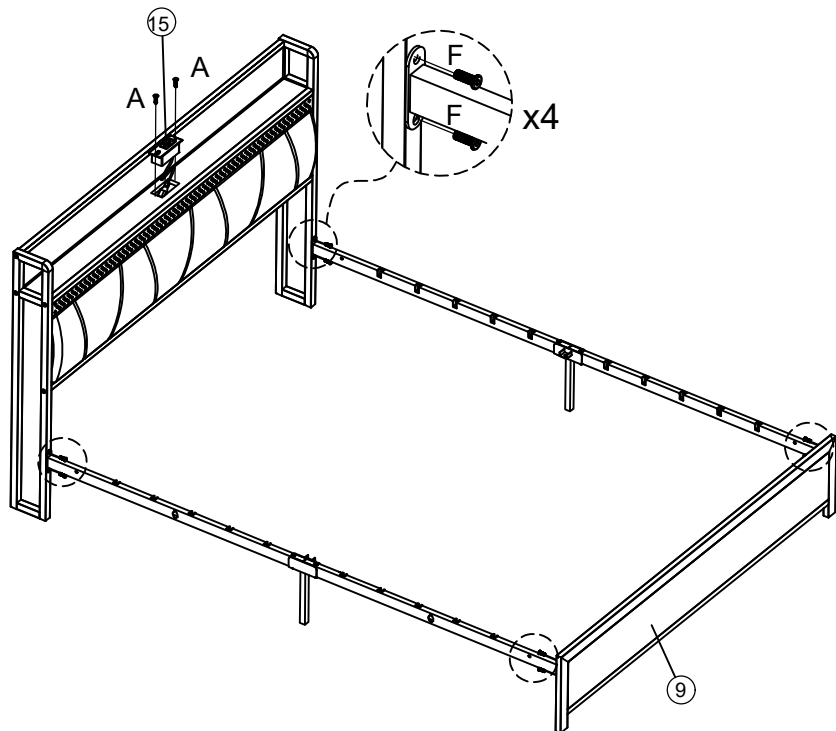


Step:6

	5# I X 1PC		M8*20 F X 2PCS
	4# H X 1PC		M6*45 D X 4PCS

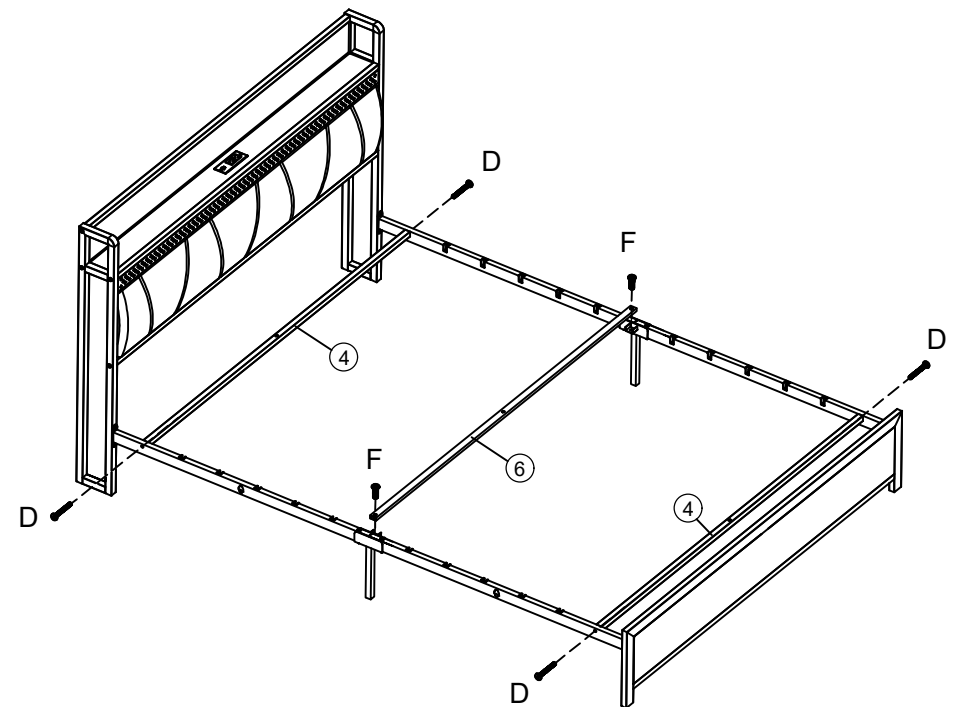


Step:7



5# I X 1PC





M8*55 G X2PCS




4# H X 1PC




M6*50 E X1 PC

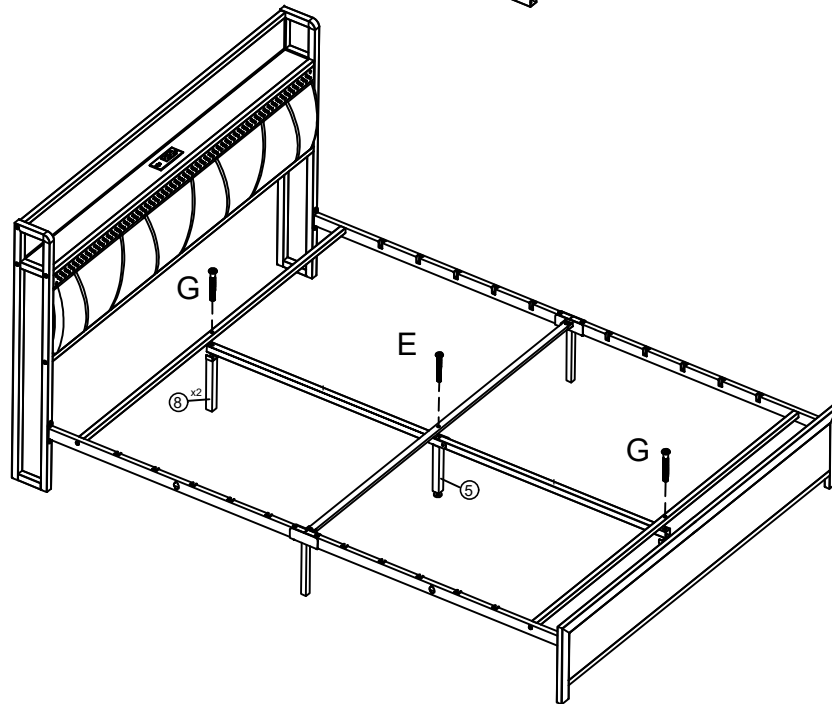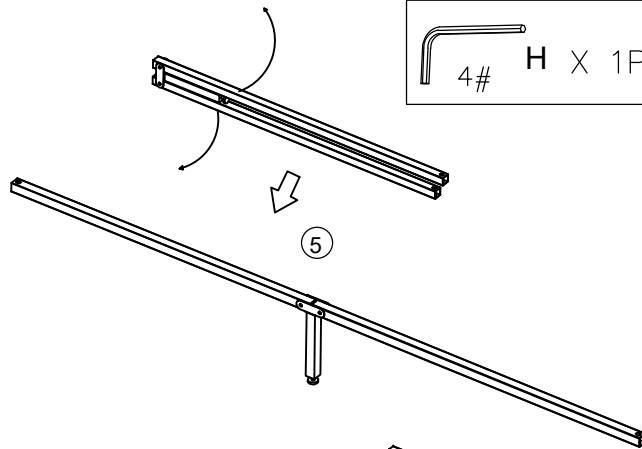


Step:8

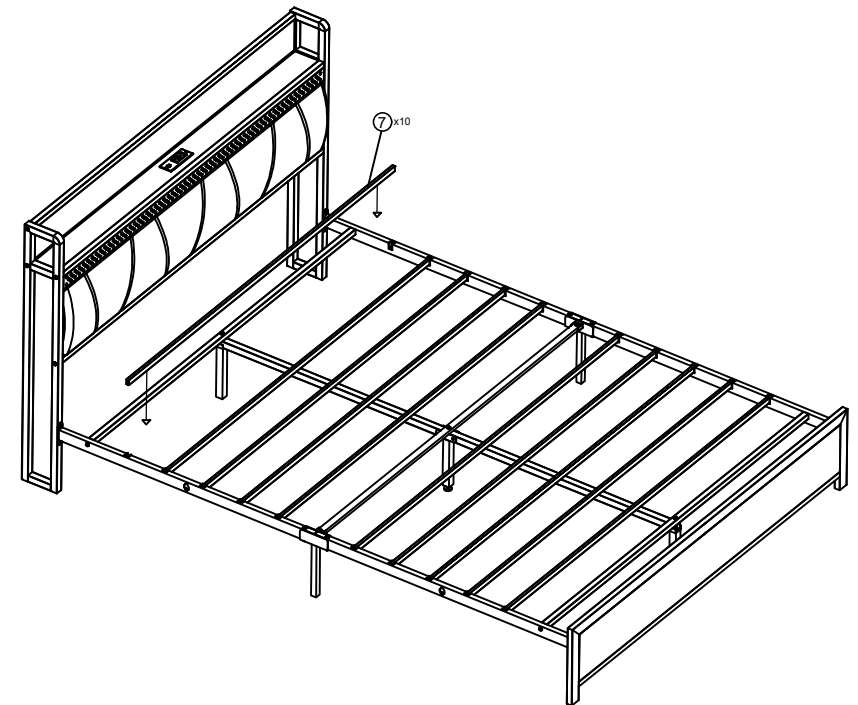


Step:9

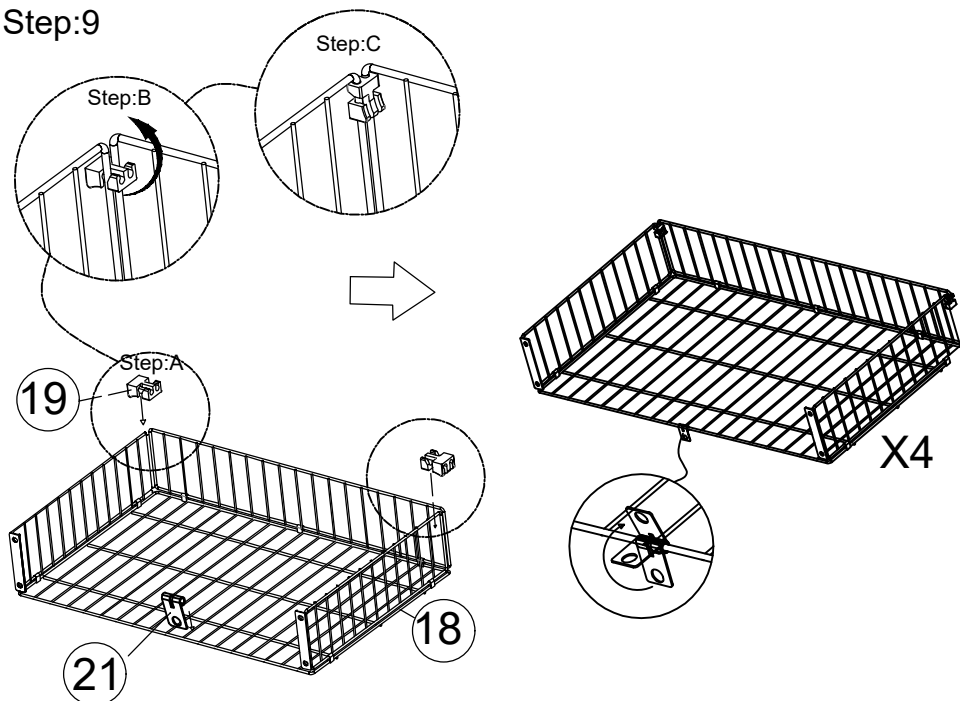

Step:10

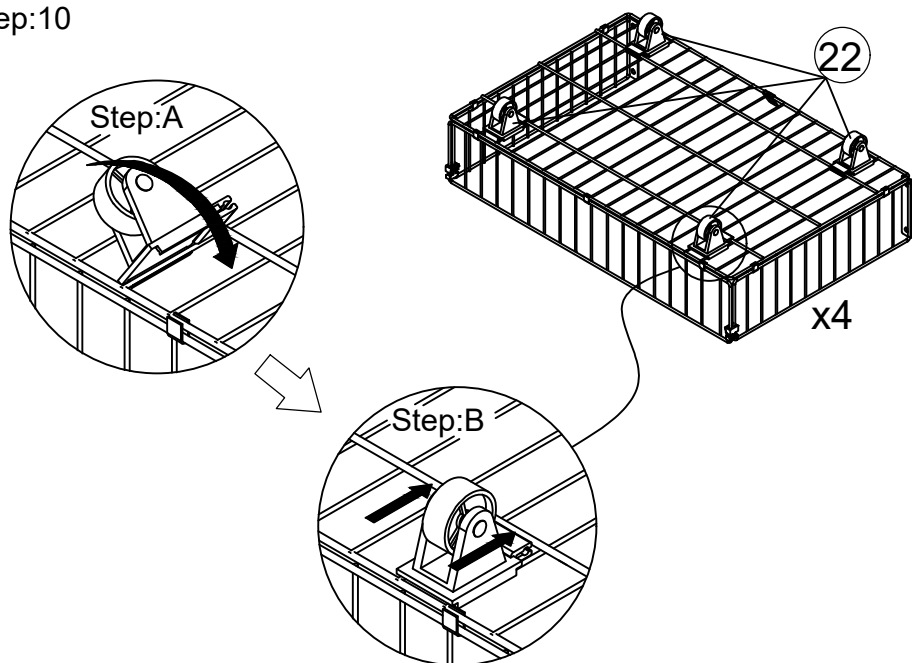

Step:11

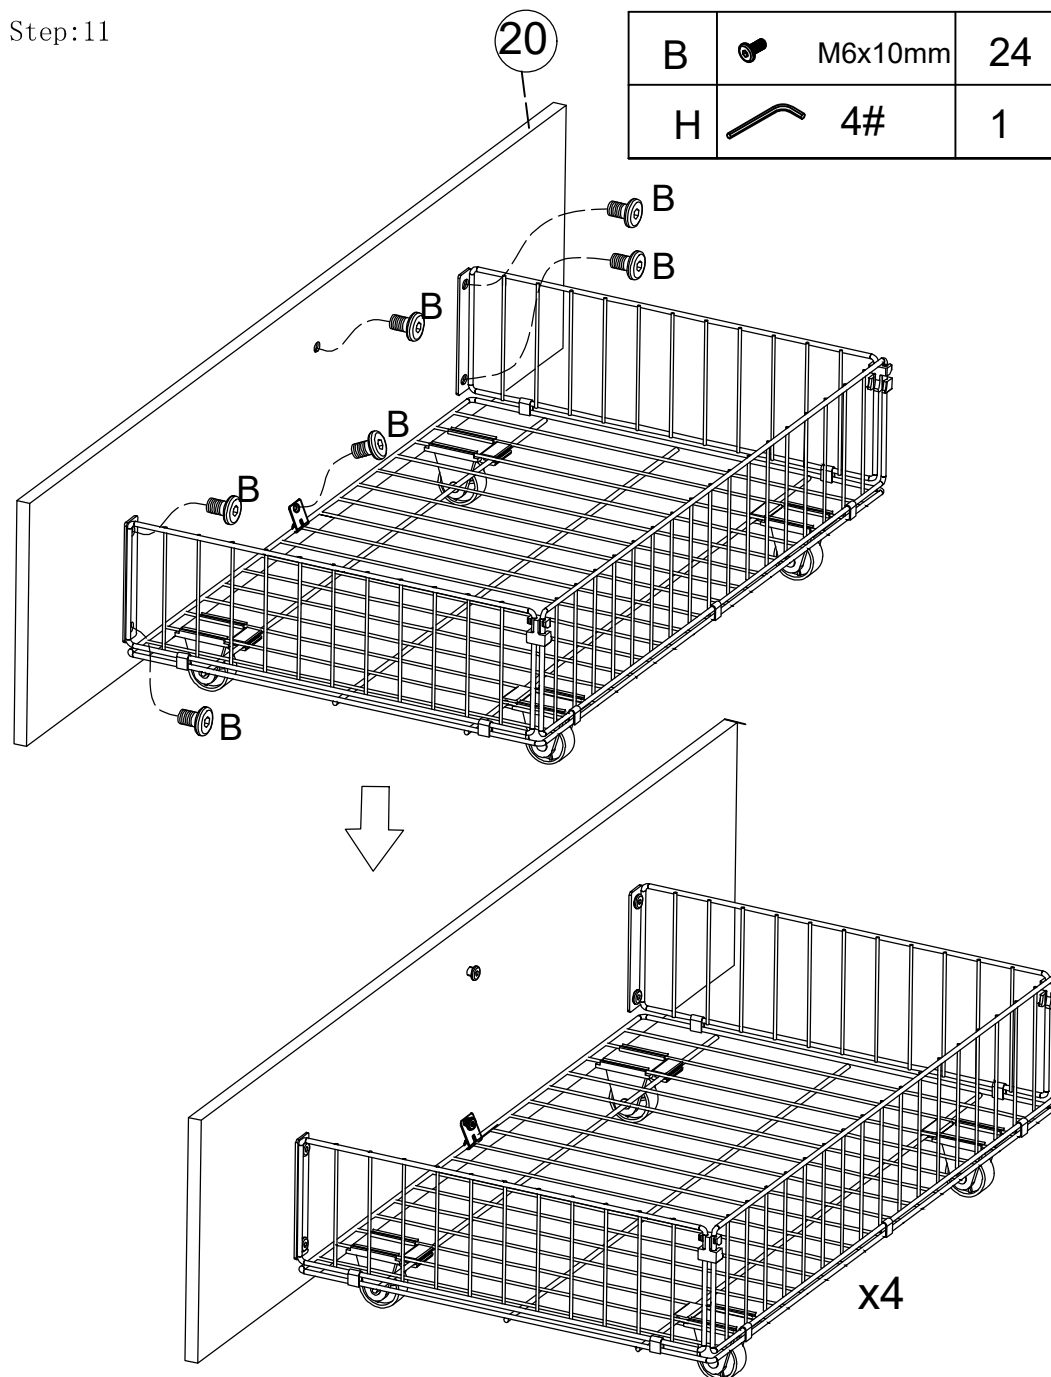

Step:12

