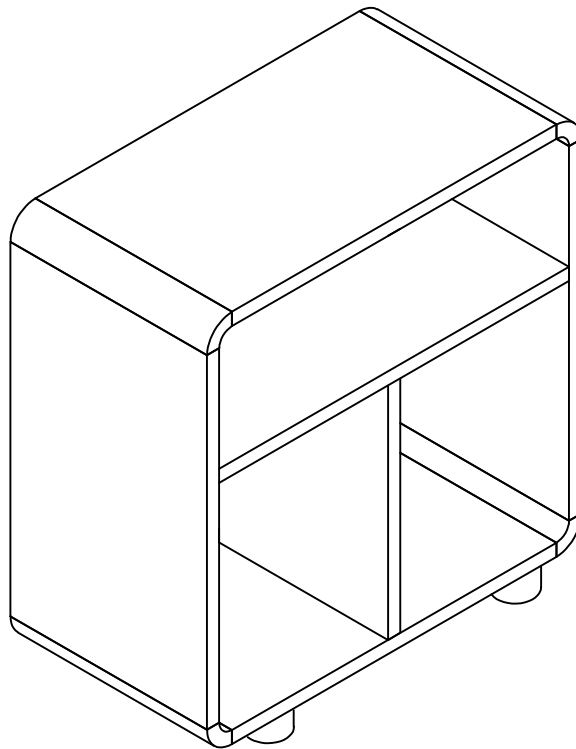












CROSLEY

FURNITURE







Record Player Stand with Vinyl Storage CF1138



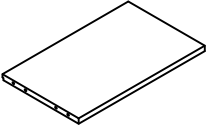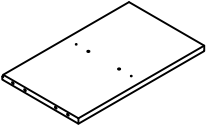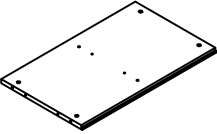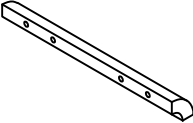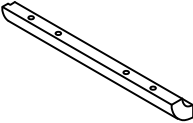PARTS LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Partition Panel 1 PC	Bottom Panel 1 PC
F 	G 	H 	I 	J 
Fixed Shelf 1 PC	Back Panel 2 PCS	Top Corner 2 PCS	Bottom Corner 2 PCS	Leg 4 PCS
K 				
Cover 2 PCS				

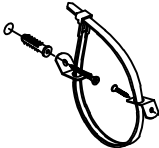HARDWARE LIST

#1		#2		#3		#4		#5	
8*30mm	10*50mm	7*38mm	1/4*12mm						
Short Wood Dowel	Long Wood Dowel	Tapping Bolt	Bolt	Cam Bolt					
8 PCS (Extra 1)	16 PCS (Extra 1)	2 PCS (Extra 1)	4 PCS (Extra 1)	22 PCS (Extra 1)					
#6		#7		#8		#9		#10	
Cam Lock	Screw	Metal Plate	Cam Sticker	Binding Post					
22 PCS (Extra 1)	16 PCS (Extra 1)	2 PCS	22 PCS (Extra 1)	2 SETS (Extra 1)					
#11		#12		#13					
M4	M2								
Allen Wrench	Small Allen Wrench	Safety Strap Kit							
1 PC	1 PC	1 SET							

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Insert cam bolts (part #5) into pre-drilled holes of panels (parts B, C & F) and corners (parts H & I) using phillips head screwdriver.

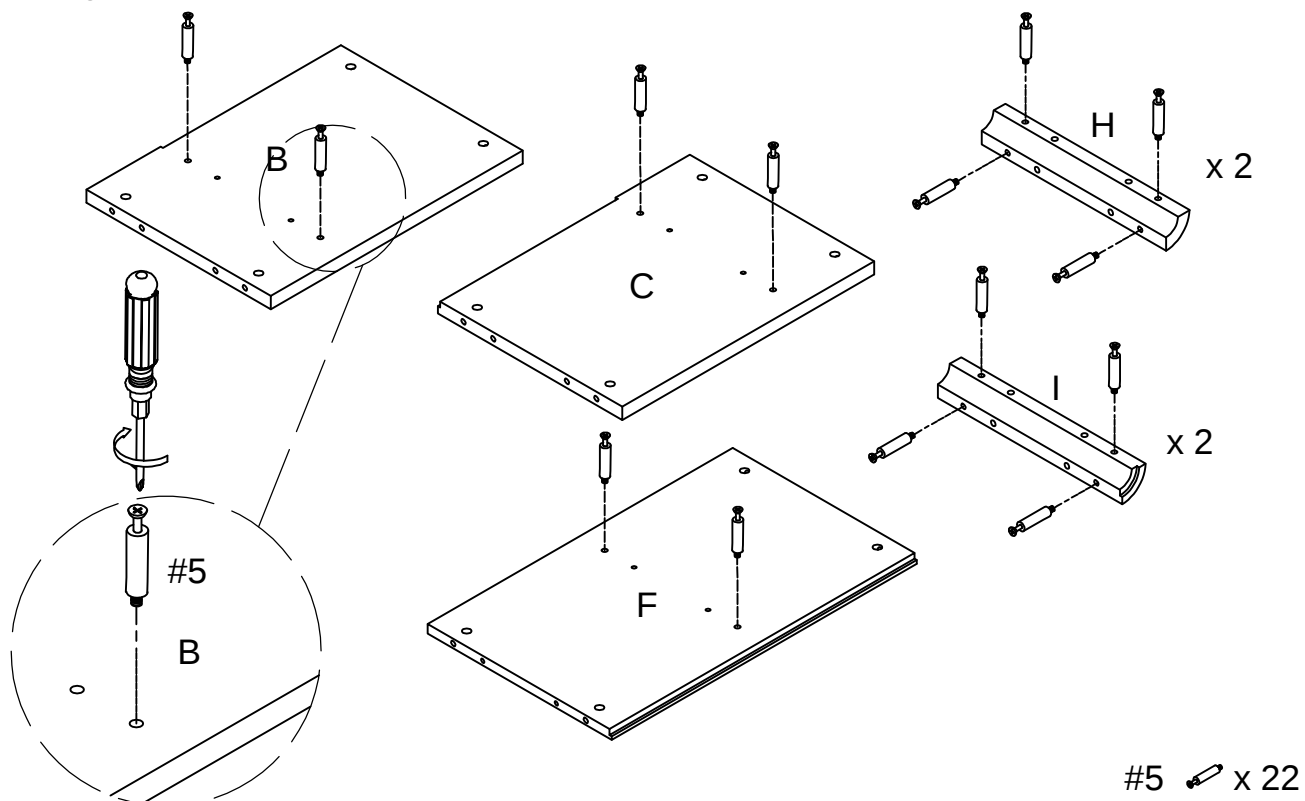Note : Do not over tighten cam bolts. Stop tightening once threads on cam bolts are no longer visible.




Step 2. Attach corners (parts H & I) to panels (parts A & E) using long wood dowels (part #2), cam locks (part #6) and phillips head screwdriver.

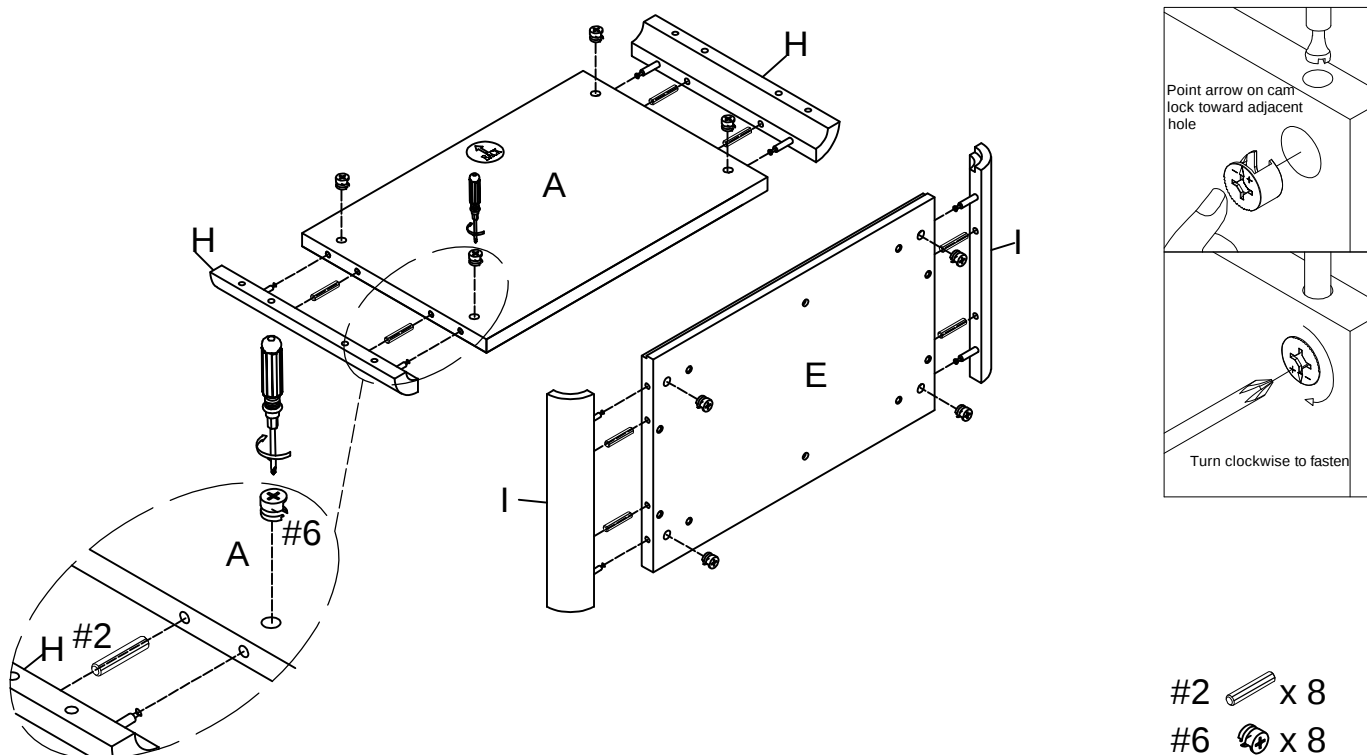Note: Cam locks must rotate a full 180°. See pictured insert.



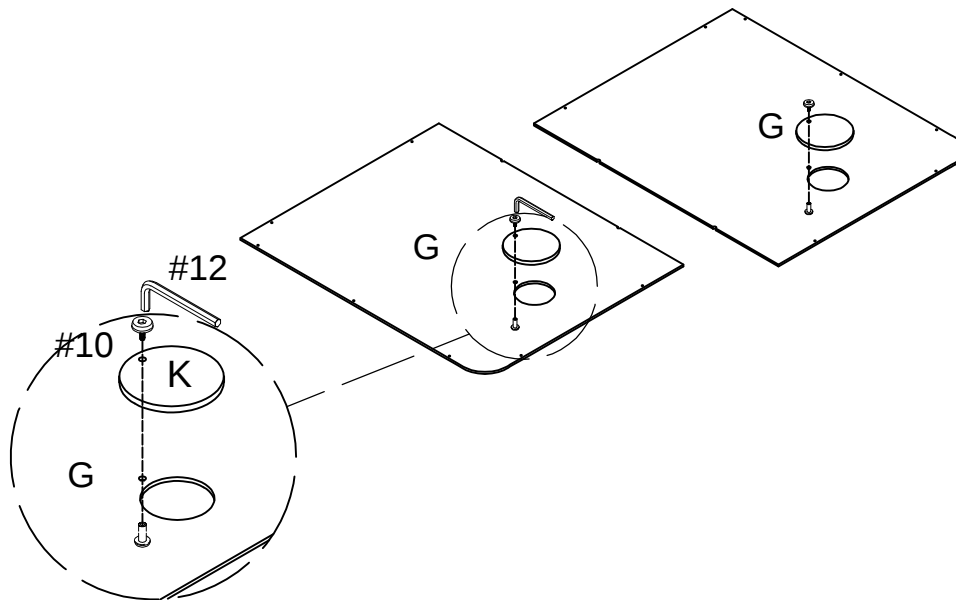Step 3. Attach covers (part K) to back panels (part G) using binding posts (part #10) and small allen wrench (part #12).





#10  x 2

#12  x 1

Step 4. Attach partition panel (part D) to fixed shelf (part F) using short wood dowels (part #1), cam locks (part #6) and phillips head screwdriver.

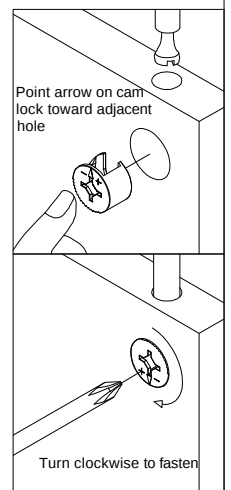
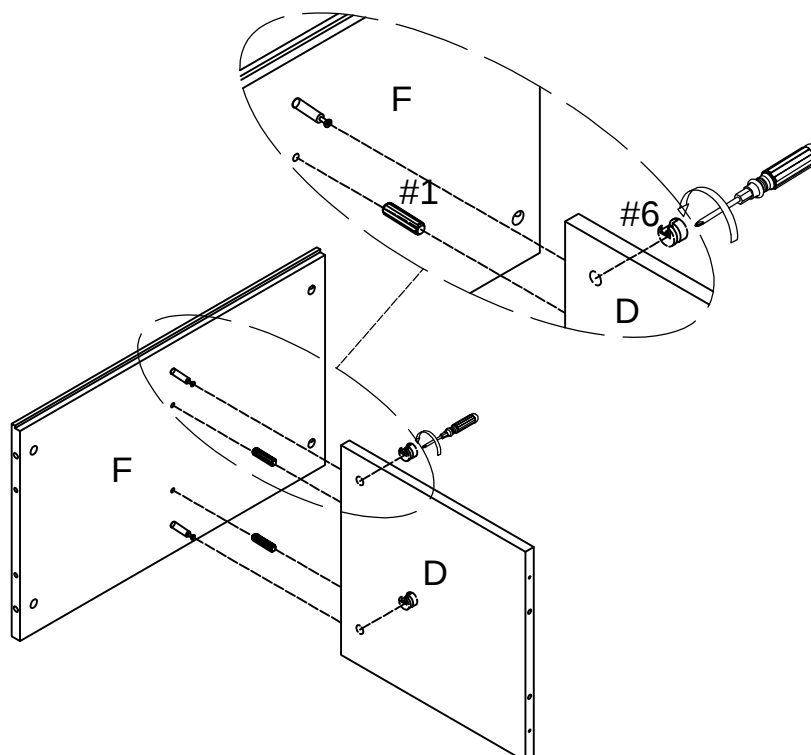
Note: Cam locks must rotate a full 180°. See pictured insert.



#1  x 2



#6  x 2

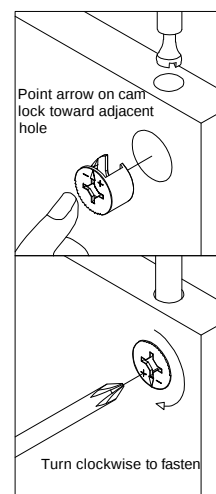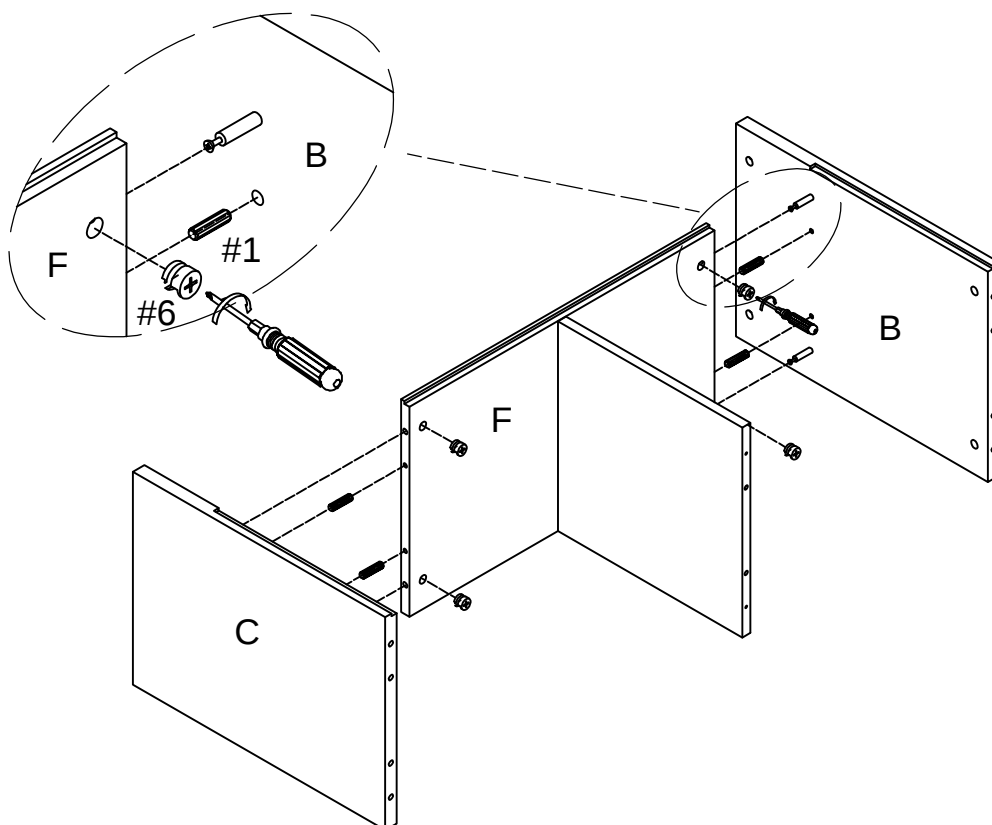Step 5. Attach panels (parts B & C) to fixed shelf (part F) using short wood dowels (part #1), cam locks (part #6) and phillips head screwdriver.
 Note: Cam locks must rotate a full 180°. See pictured insert.



#1  x 4
 #6  x 4

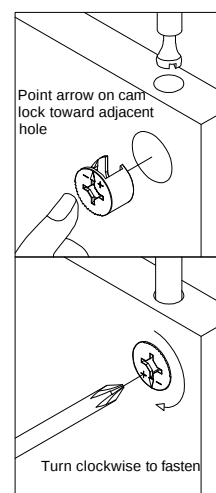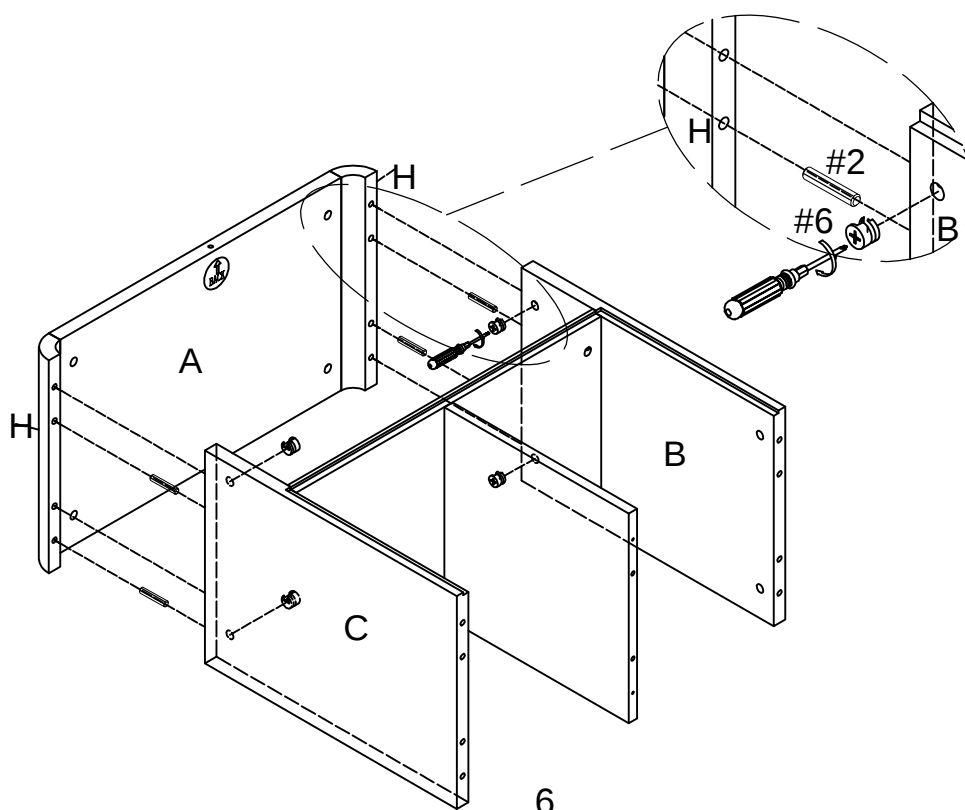
Step 6. Attach panel (parts A & H) to assembled unit (parts B & C) using long wood dowels (part #2), cam locks (part #6) and phillips head screwdriver.
 Note: Cam locks must rotate a full 180°. See pictured insert.




#2  x 4
 #6  x 4

Step 7. Attach panel (parts E & I) to assembled unit (parts B, C & D) using short wood dowels (part #1), long wood dowels (part #2), tapping bolts (part #3), cam locks (part #6), allen wrench (part #11) and phillips head screwdriver.

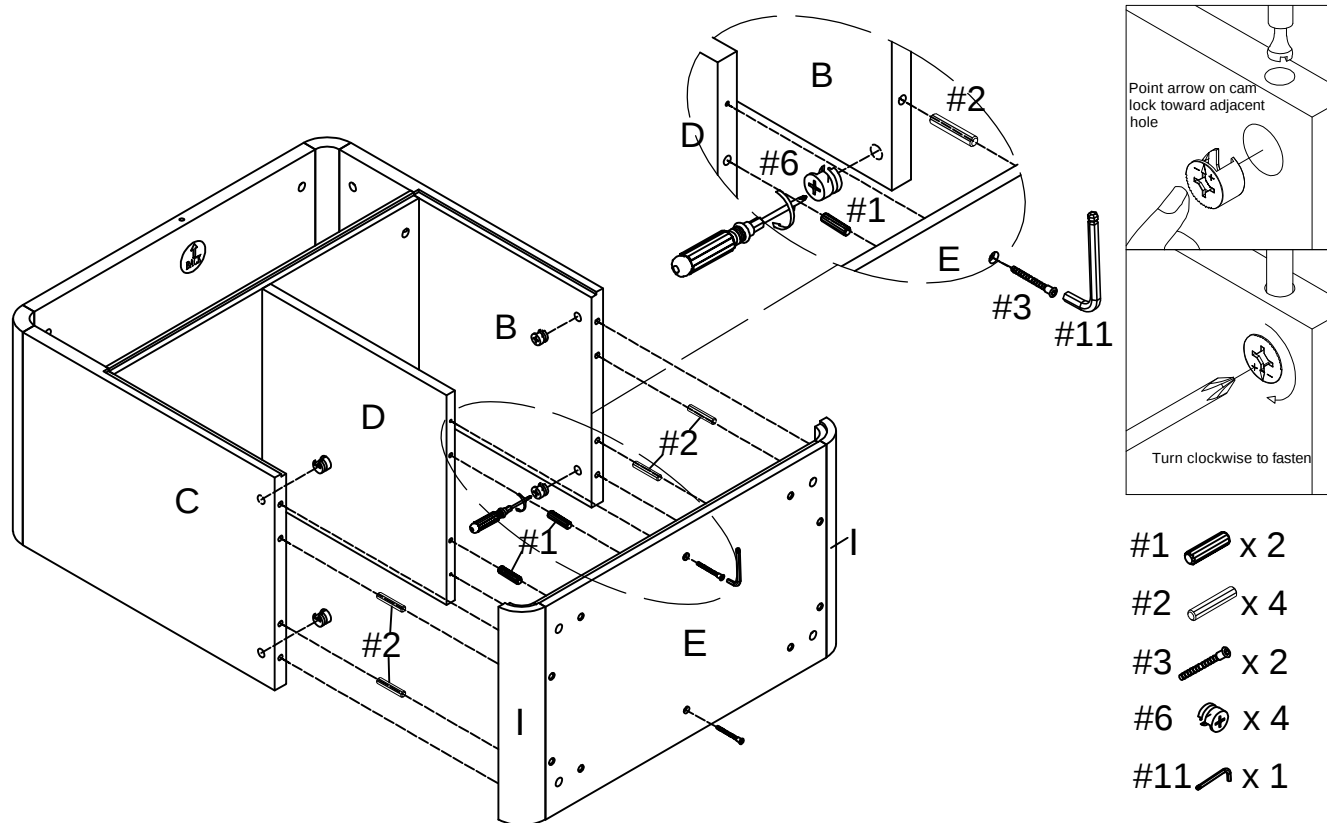
Note: Cam locks must rotate a full 180°. See pictured insert.



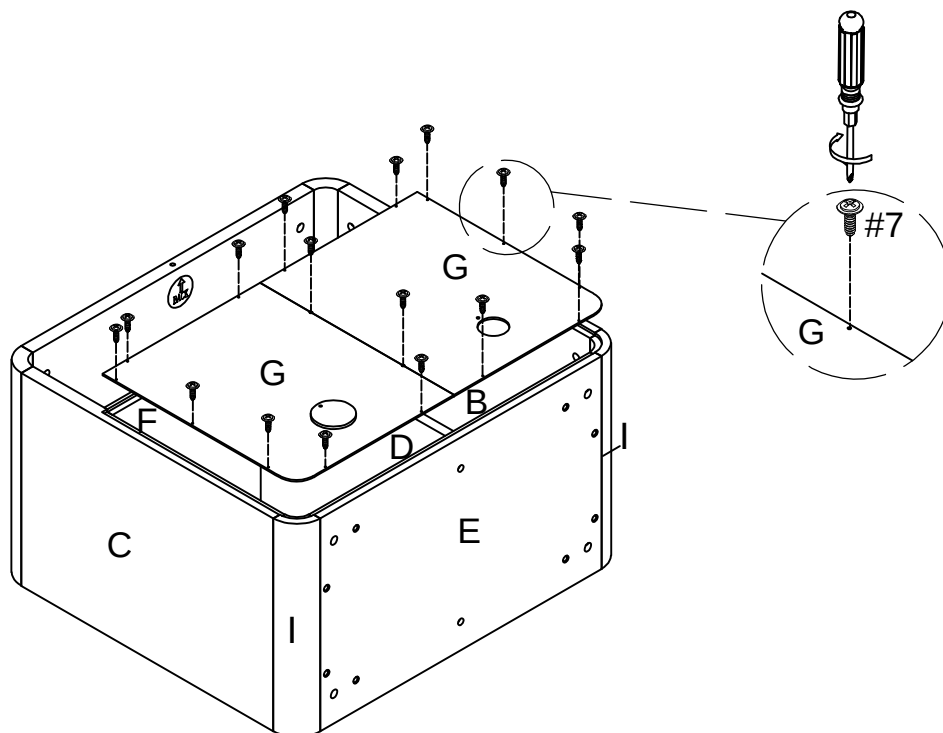Step 8. Attach back panels (part G) to assembled unit (parts B, C, D, E, F & I) using screws (part #7) and phillips head screwdriver.



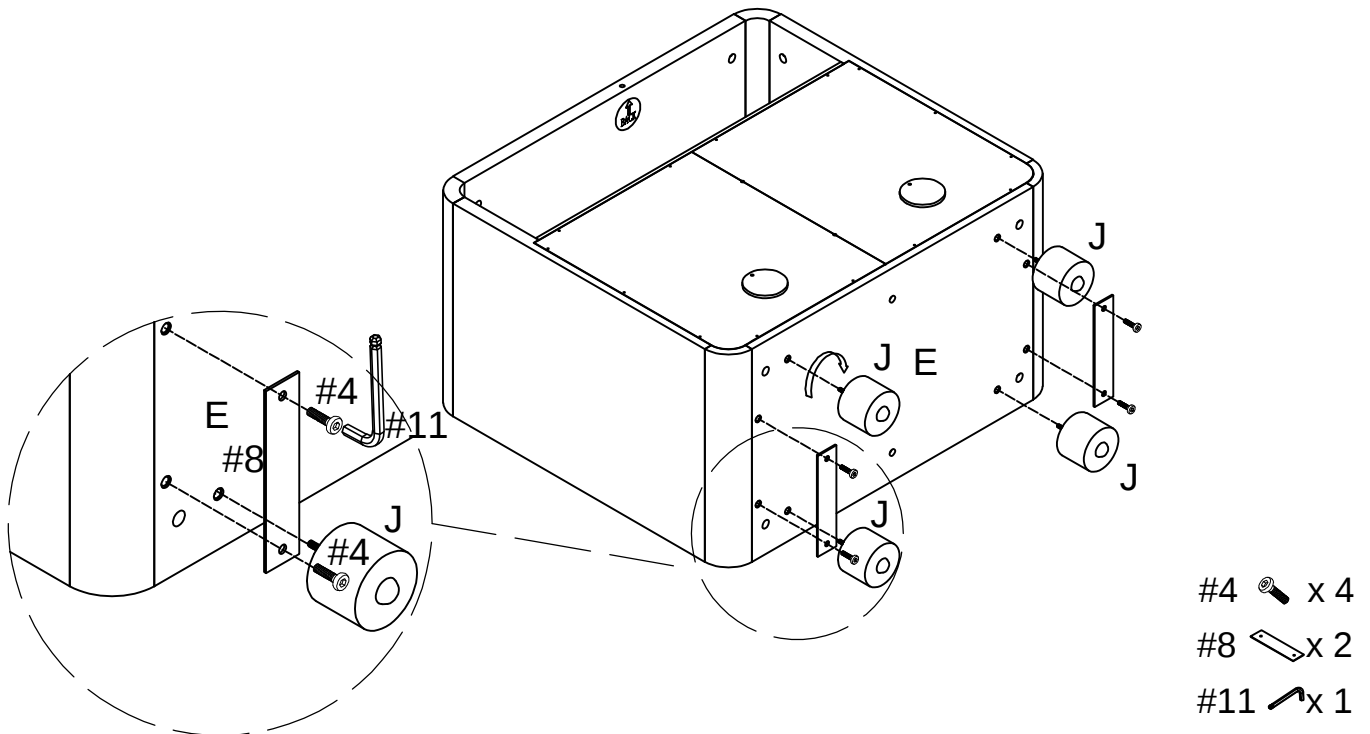
Step 9. Attach metal plates (part #8) to bottom panel (part E) using bolts (part #4) and allen wrench (part #11). Attach legs (part J) to bottom panel (part E).




Step 10. Carefully turn unit upright. Attach cam stickers (part #9) to the hole of cam locks (part #6).

Important: Safety strap kit (part #13) must be installed to prevent tipping damage and/or injury.

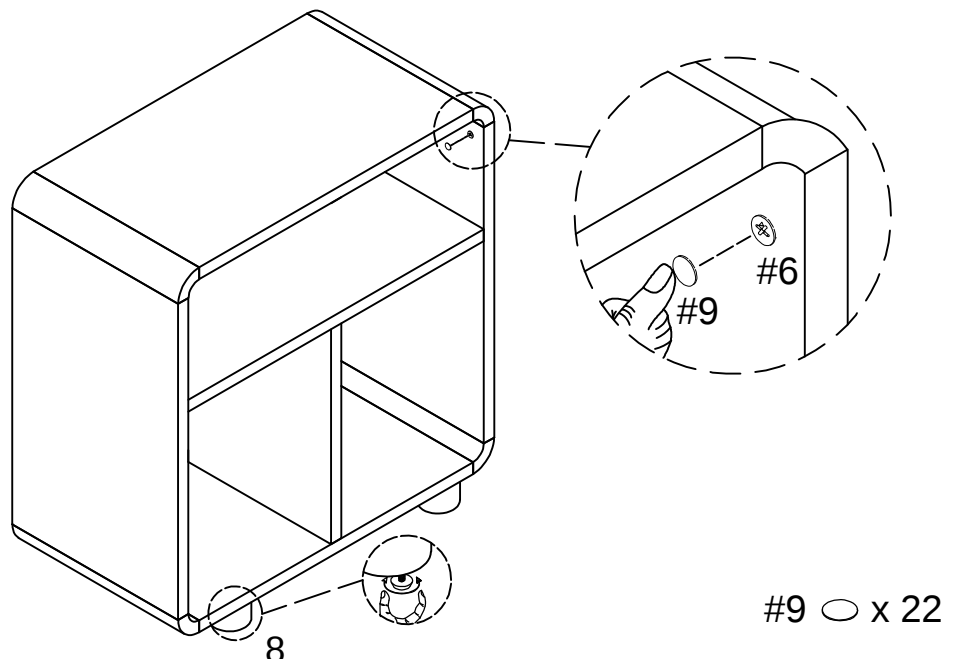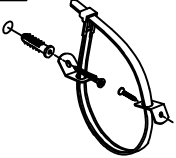Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.




#13	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

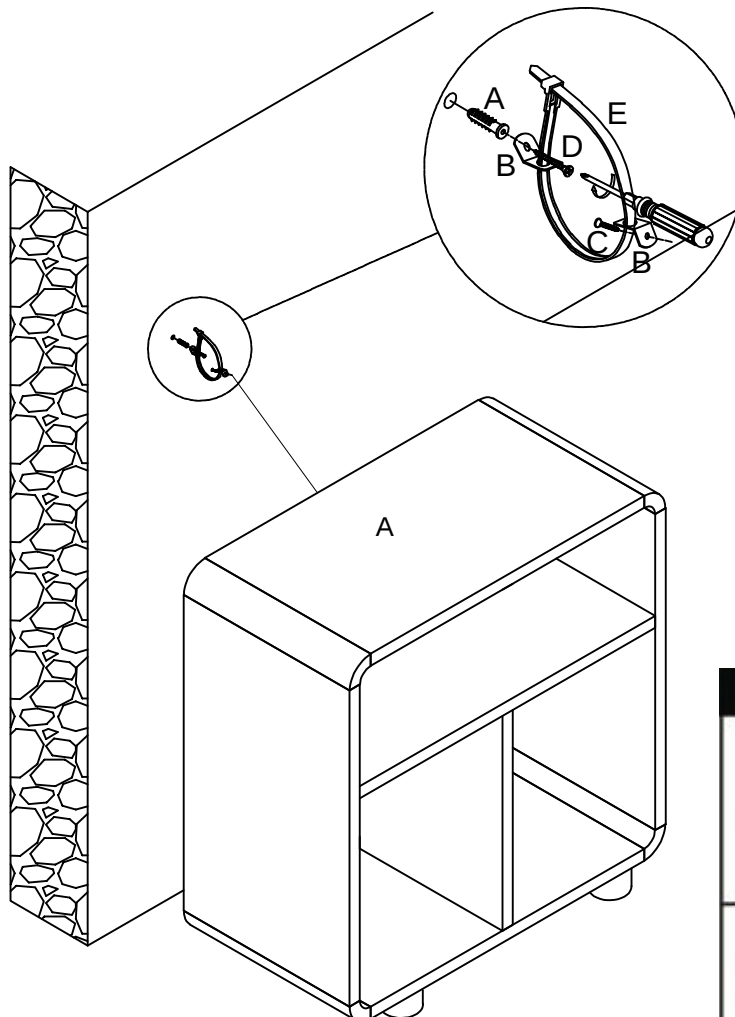Note: This item is not intended for clothing storage use.



⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove!