

3640013COMCLUK
Westerleigh 4 Drawer Dresser White

COSMOLiving
by COSMOPOLITAN

Date of Purchase: ____/____/____
Lot Number: _____

B343640013COMCLUK00PK



062019PK

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.


Do Not Return This Product!

Contact our customer service team for help first
Call: 01942 524100
email: cseurope@dorel.com



WARNING


- Unit can tip over causing severe injury or death.
- Anchor unit to stud in wall (if instructed to)
- Do not allow children climb on unit
- Put heavy items on lower shelves or drawers

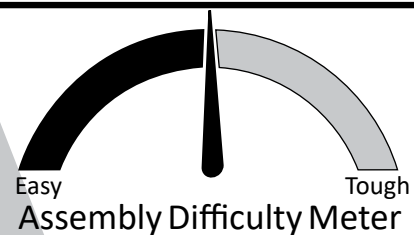

Easy Tough
Assembly Difficulty Meter

Contact Us!

Do NOT return this product!
Contact our friendly customer service team first for help

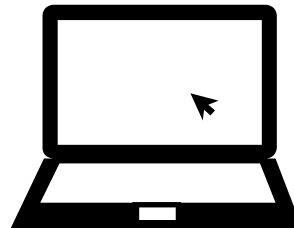

cseurope@dorel.com



Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**
ESTIMATED ASSEMBLY TIME: **1 HOUR**

- Open your item in the area you plan to keep it for less heavy lifting
- Identify, sort and count the parts before attempting assembly
- Compression dowels are tapped in with a hammer
- Slides are labeled with a R (right) and L (left) for proper placement
- Make sure to always face the point on the top of the Cam Lock towards the outer edge
- Use all the nails provided for the back panel and spread them out equally
- Back Panel must be used to make sure your unit is sturdy
- Do NOT use harsh chemicals or abrasive cleaners on this item
- Never push, pull, or drag your furniture







Before You Start

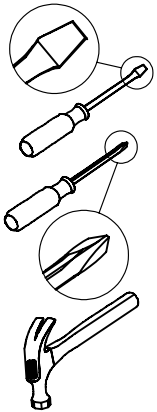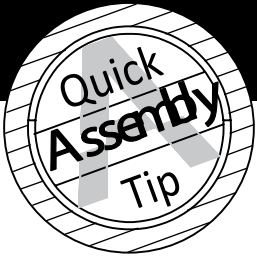

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

Cam Lock Fastening System


This Cam Lock Fastening System will be used throughout the assembly process.

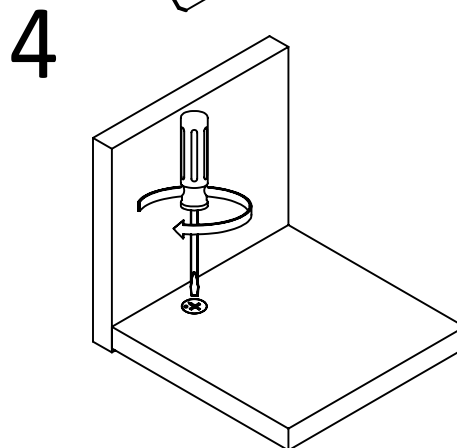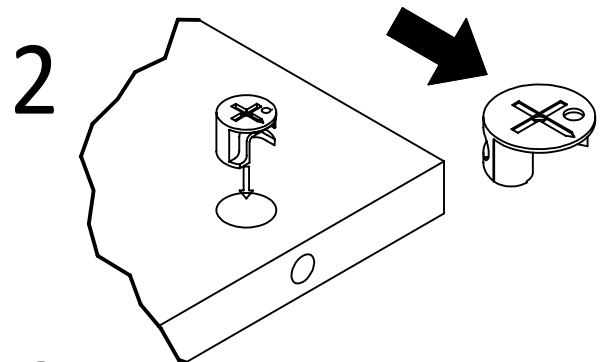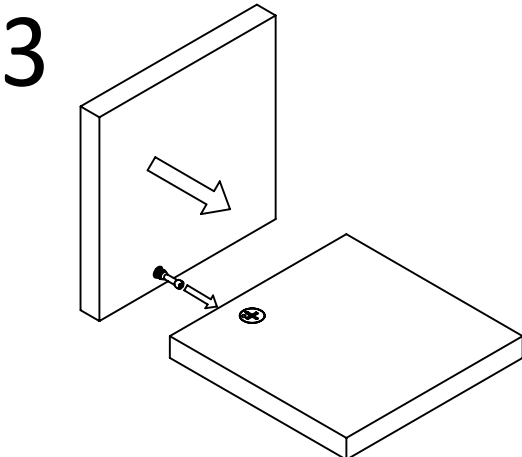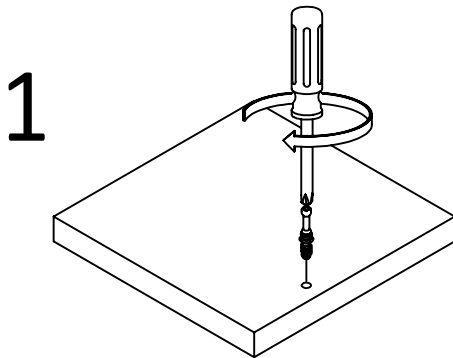

Board Identification


Not actual size

1

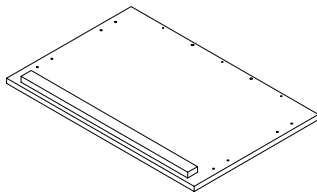


x1
T3640013010PK
TOP PANEL

2

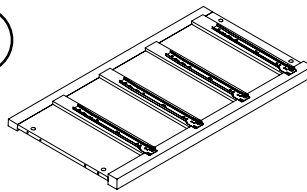


x1
T3640013020PK
LEFT SIDE PANEL

3

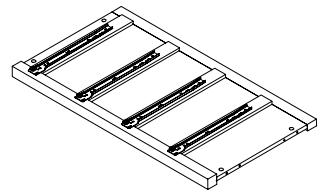


x1
T3640013030PK
RIGHT SIDE PANEL

4

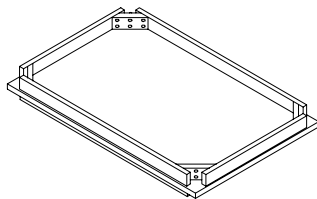

x1
T3640013040PK
BOTTOM PANEL

5

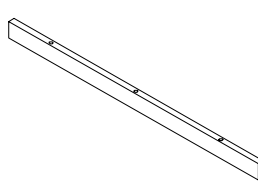


x2
T3640013050PK
MOLDING

6




x4
T3640013060PK
RIGHT DRAWER SIDE

7




x4
T3640013070PK
LEFT DRAWER SIDE

8

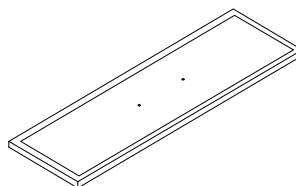

x4
T3640013080PK
DRAWER FRONT

9

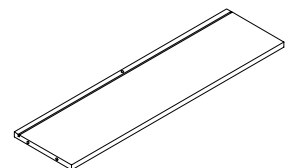


x4
T3640013090PK
DRAWER BACK

Board Identification


Not actual size

10

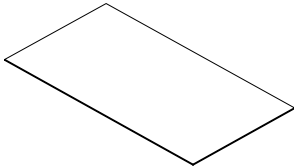


x4
T3640013100PK
DRAWER BOTTOM

11




x4
T3640013110PK
LEG

12



x4
T3640013120PK
DRAWER SUPPORT

13

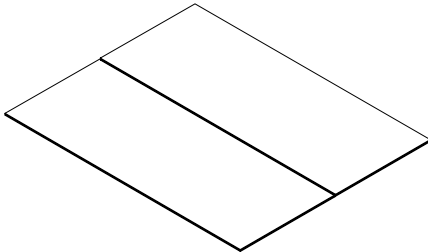


x1
T3640013130PK
BACK PANEL

Part List

Actual Size




x16
TPK0001
Cam Bolt

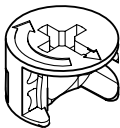


x16
TPK0002
Cam Lock
15-9



x12
TPK0004
DOWEL
M8 X 25




x38
TPK0008
CBS M4 x 38



x8
TPK3005
PH SCREW
M4 X 20

Part List


Not Actual Size




x8
TPK0011
JCBC Screw
M6 X 60




x8
TPK0012
SPRING WASHER




x8
TPK0013
FLAT WASHER

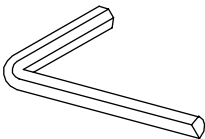


x1
TPK0014
HEX KEY
M4

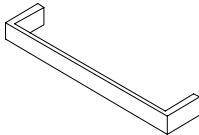

x4
TPK3007
RECTANGLE
HANDLE
(GOLD)




x24
TPK0015
NAIL

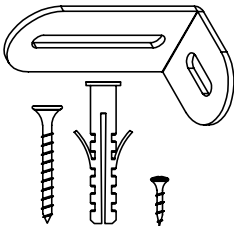


x1 SET
TPK2004
ANTI TIPPING KIT


Step 1




x8
TPK0011




x8
TPK0012










x8
TPK0013

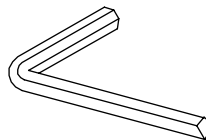



x1
TPK0014

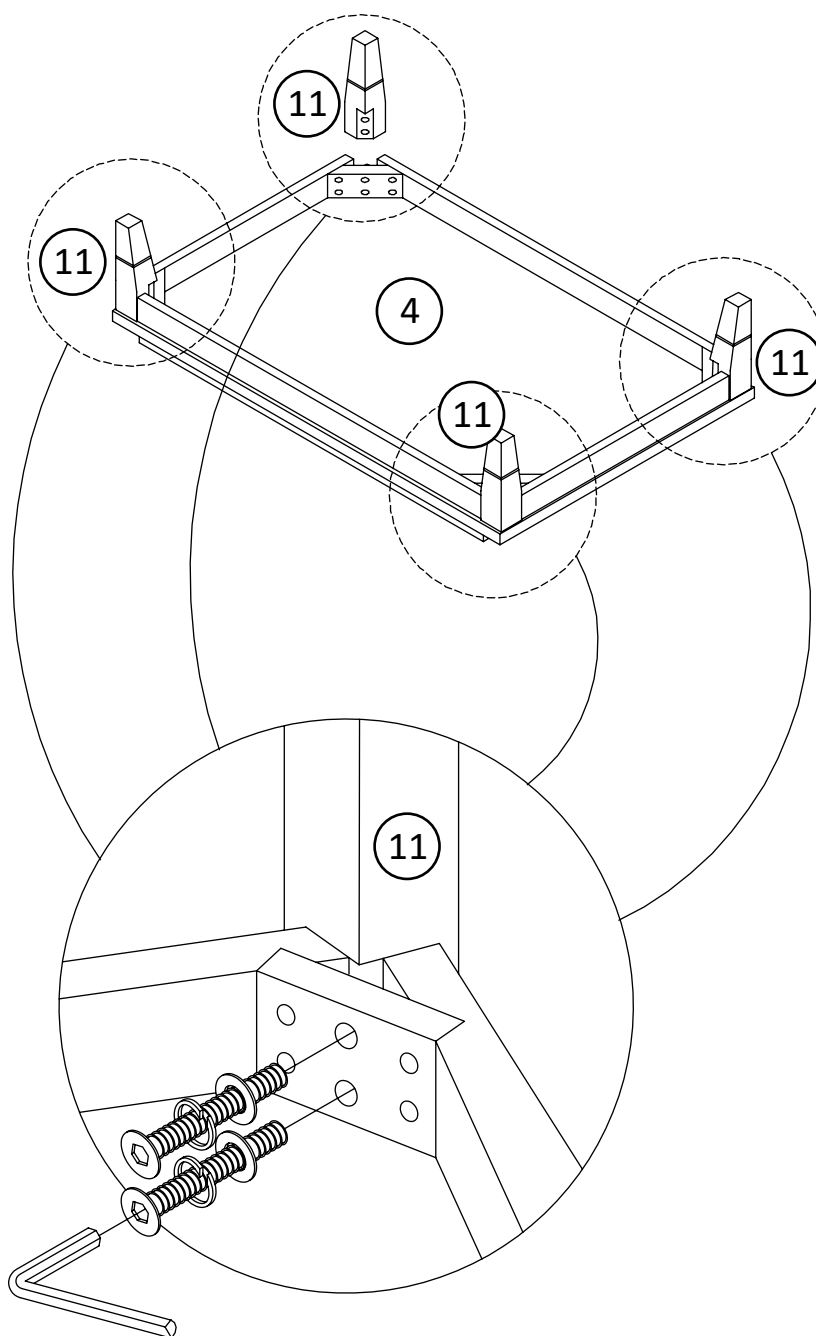

Step 2

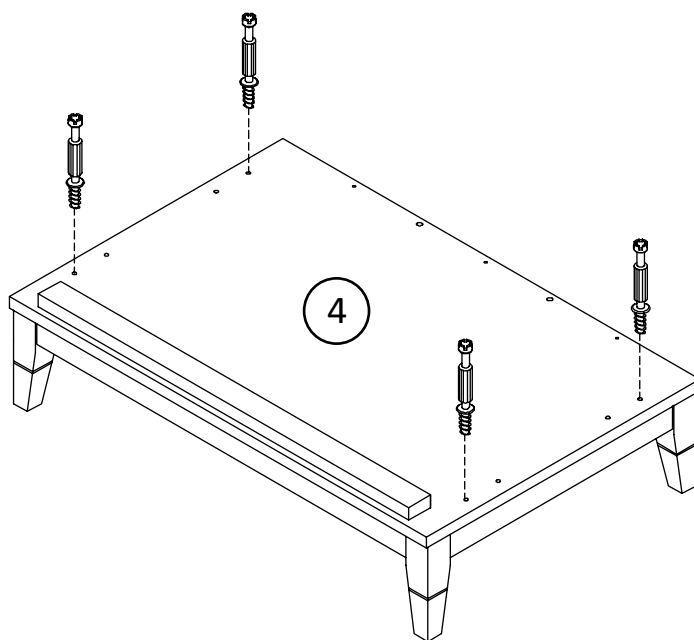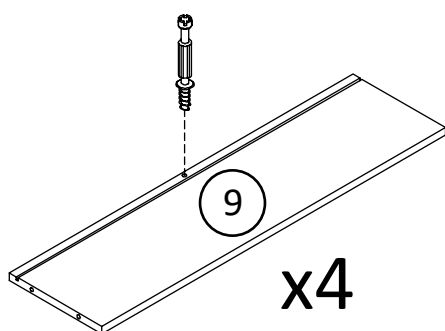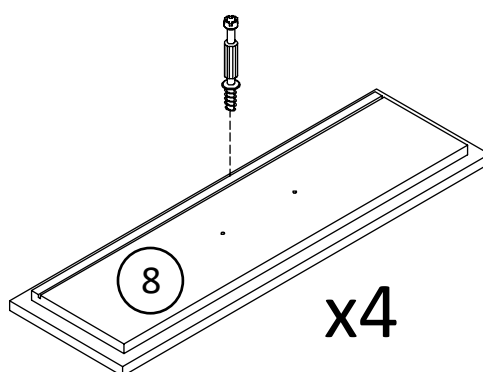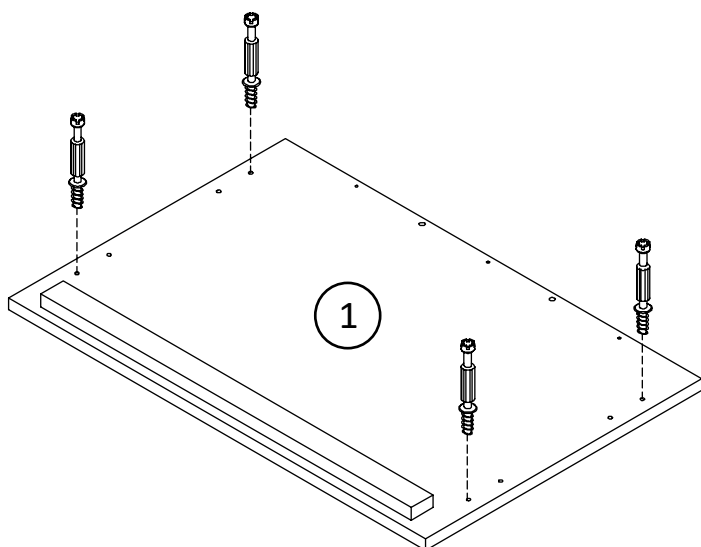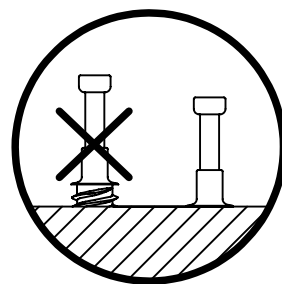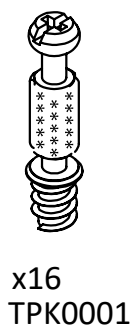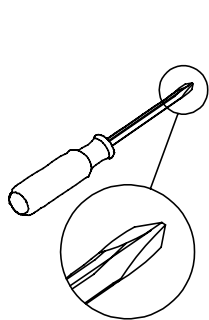


Step 3

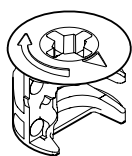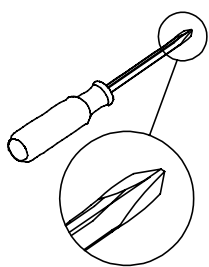


x16
TPK0002










x12
TPK0004





x1
TPK2004

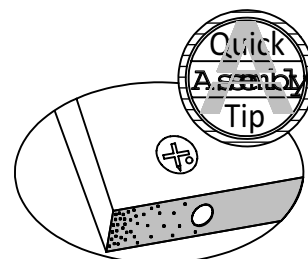



Proper orientation of CAM LOCK

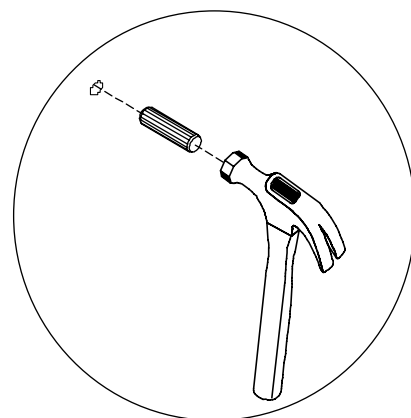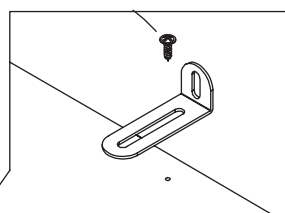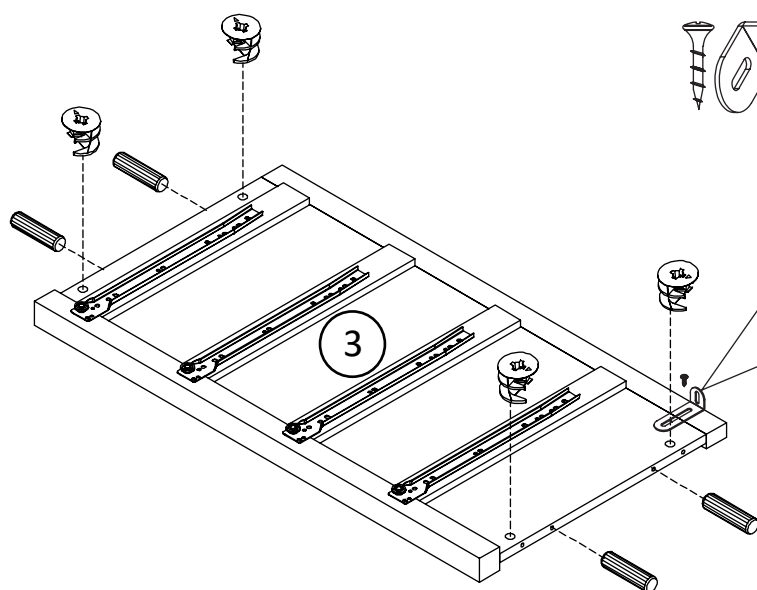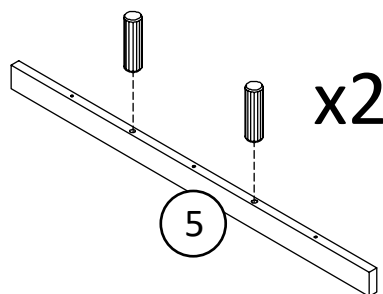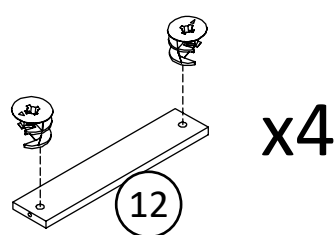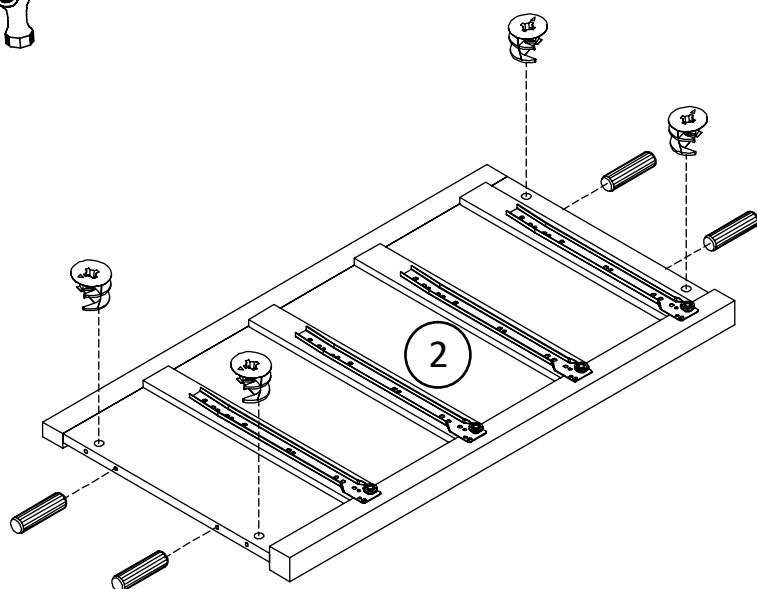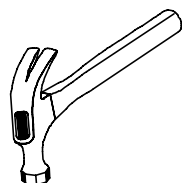



Step 4

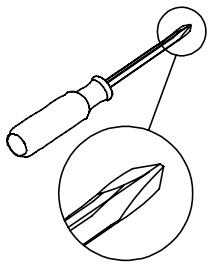



x6
TPK0008

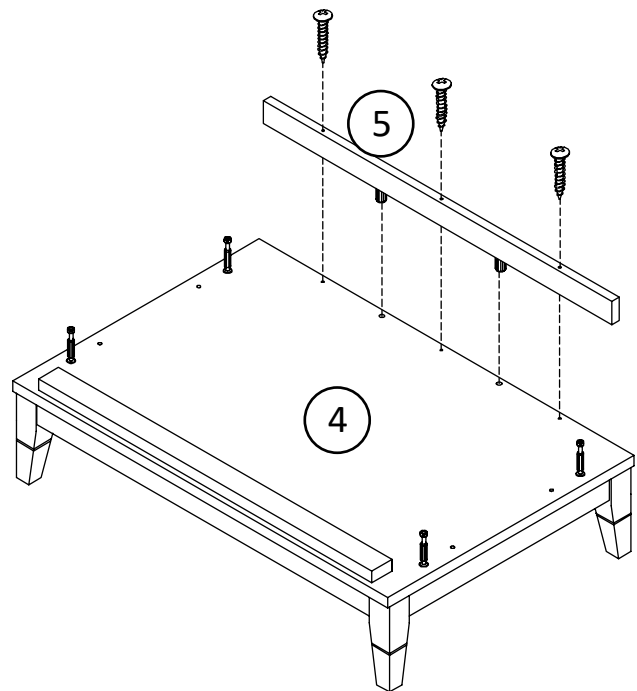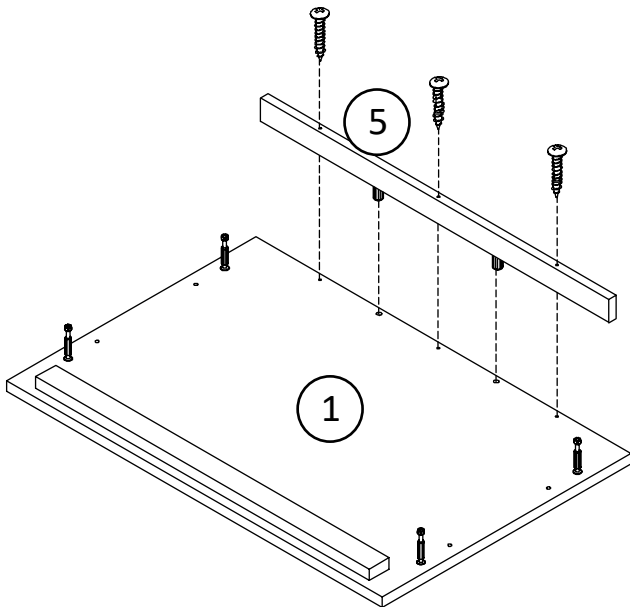



Step 5

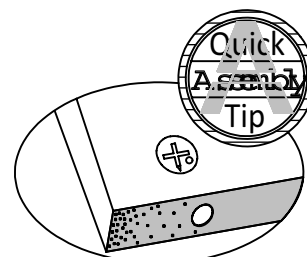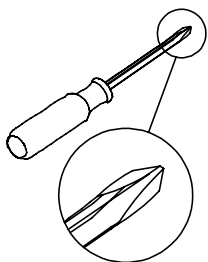



Proper orientation of CAM LOCK

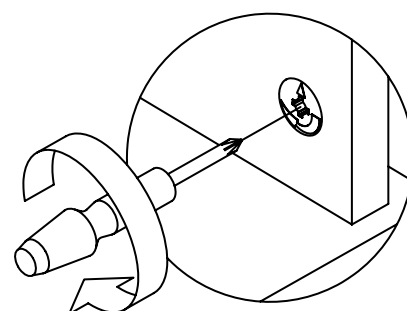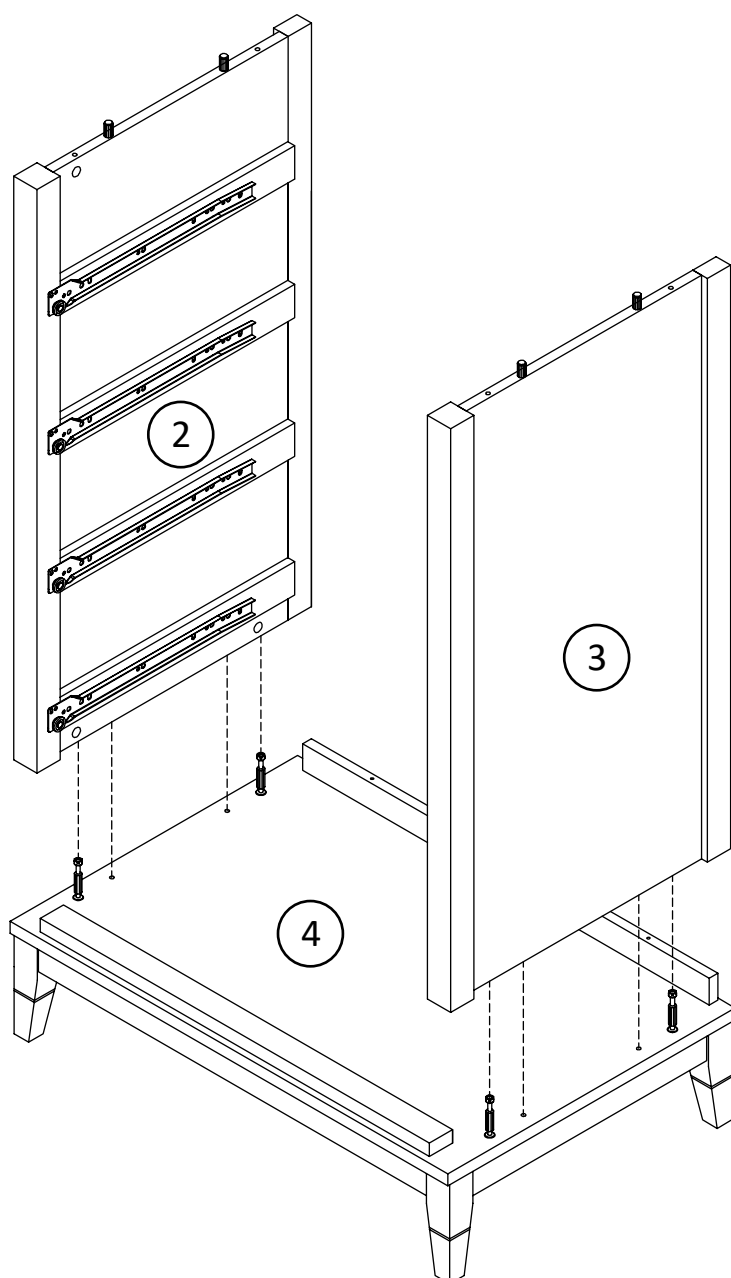



Step 6

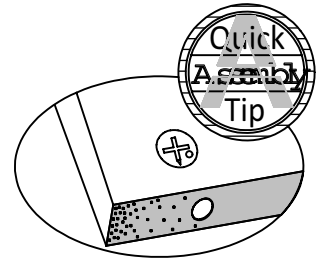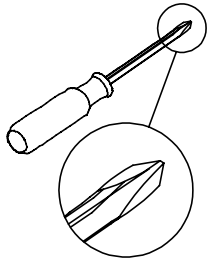

Proper orientation of CAM LOCK

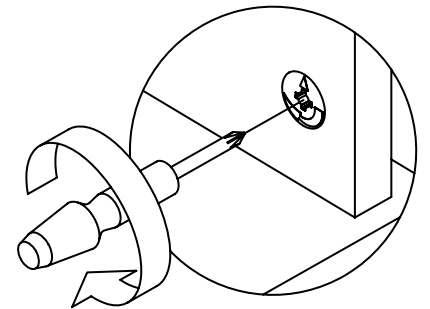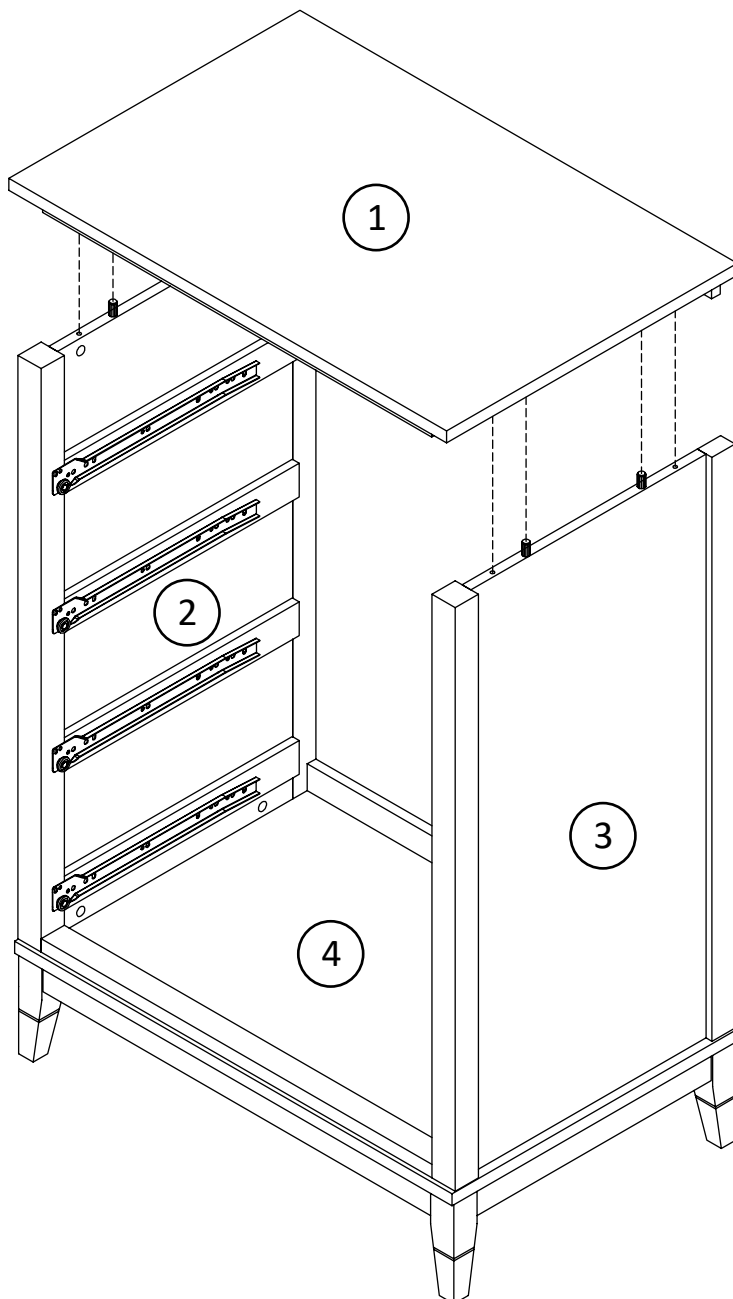


Step 7

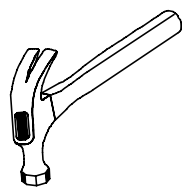



x24
TPK0015

IMPORTANT! THE BACK PANEL IS A STRUCTURAL PART OF THIS UNIT
AND MUST BE INSTALLED PROPERLY.


Attached back panel as shown nailing straight into the raw edges.
Ensure that the unit is square.
Distance from corner to corner must be equal as shown.

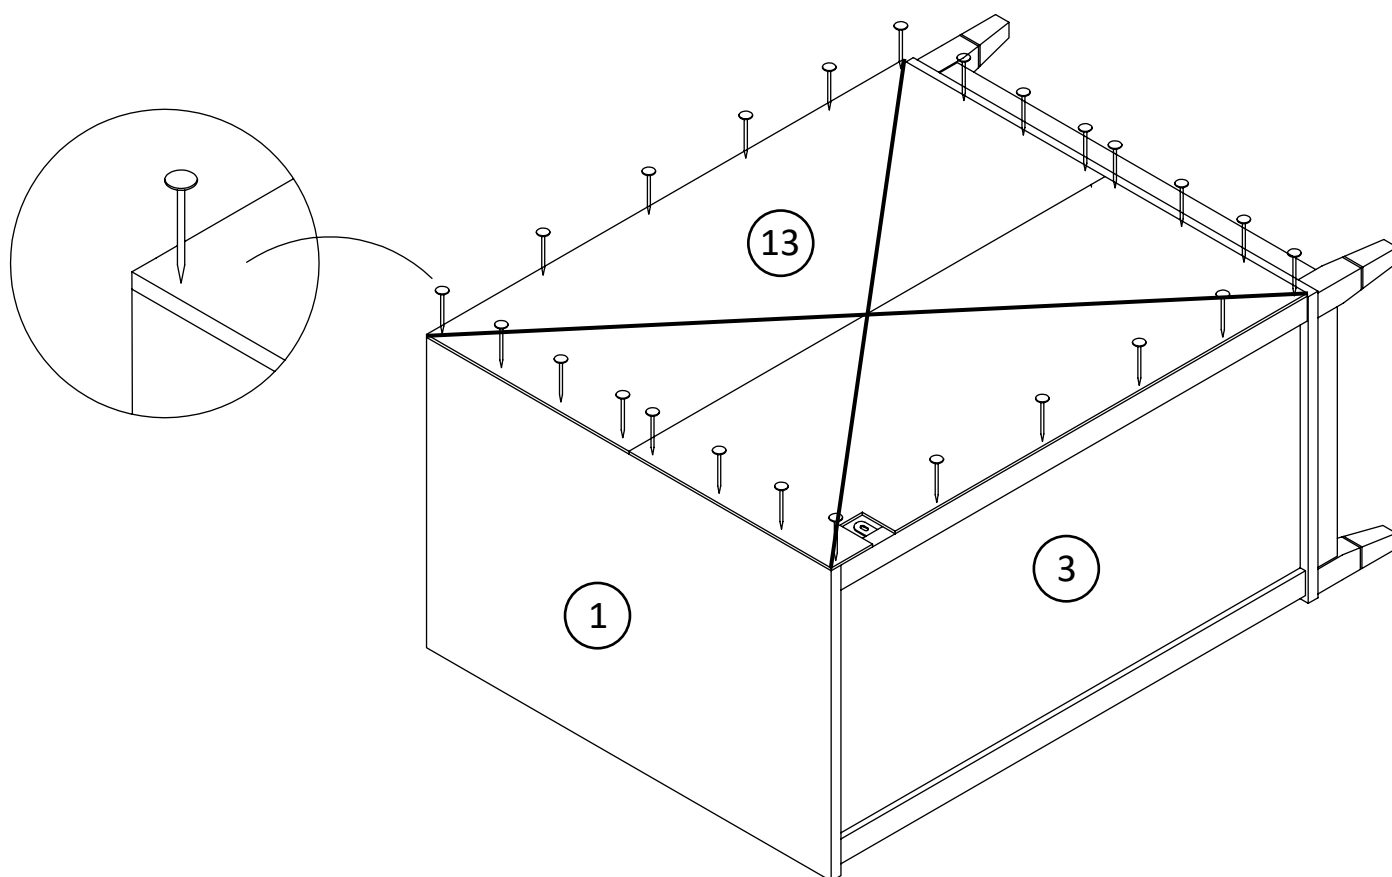



Step 8

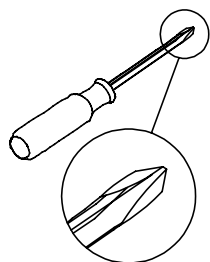


x8
TPK0008

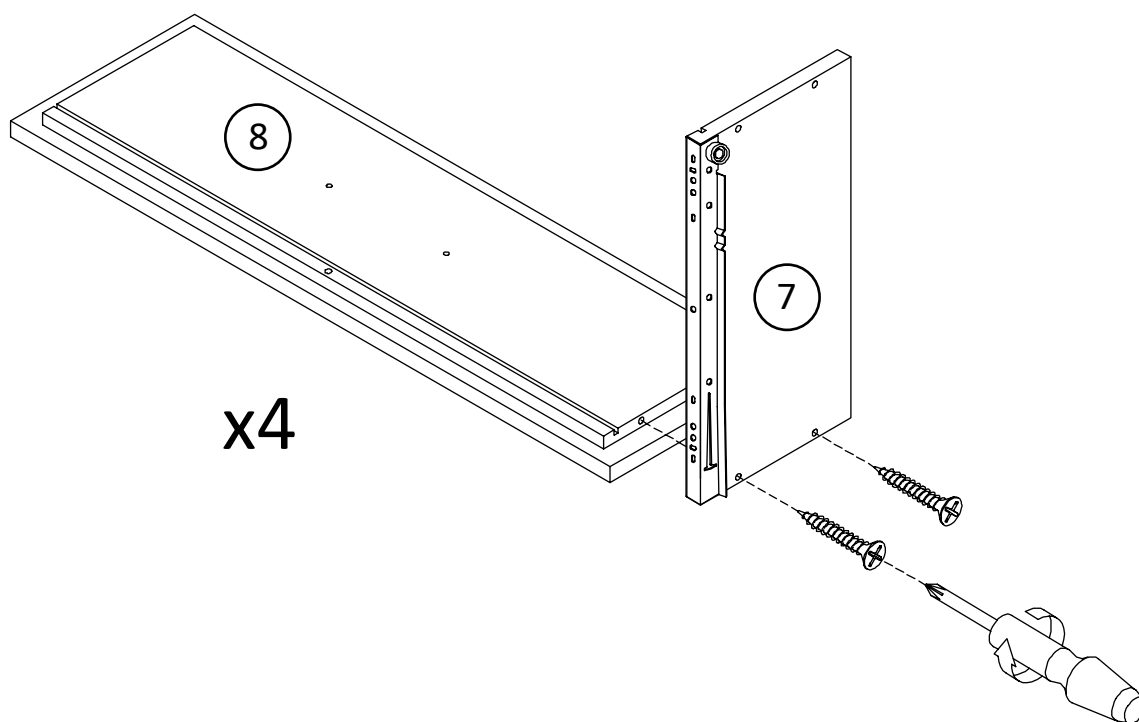



Step 9

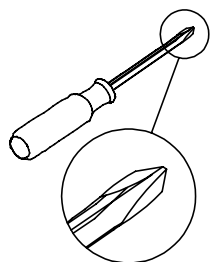


x8
TPK0008

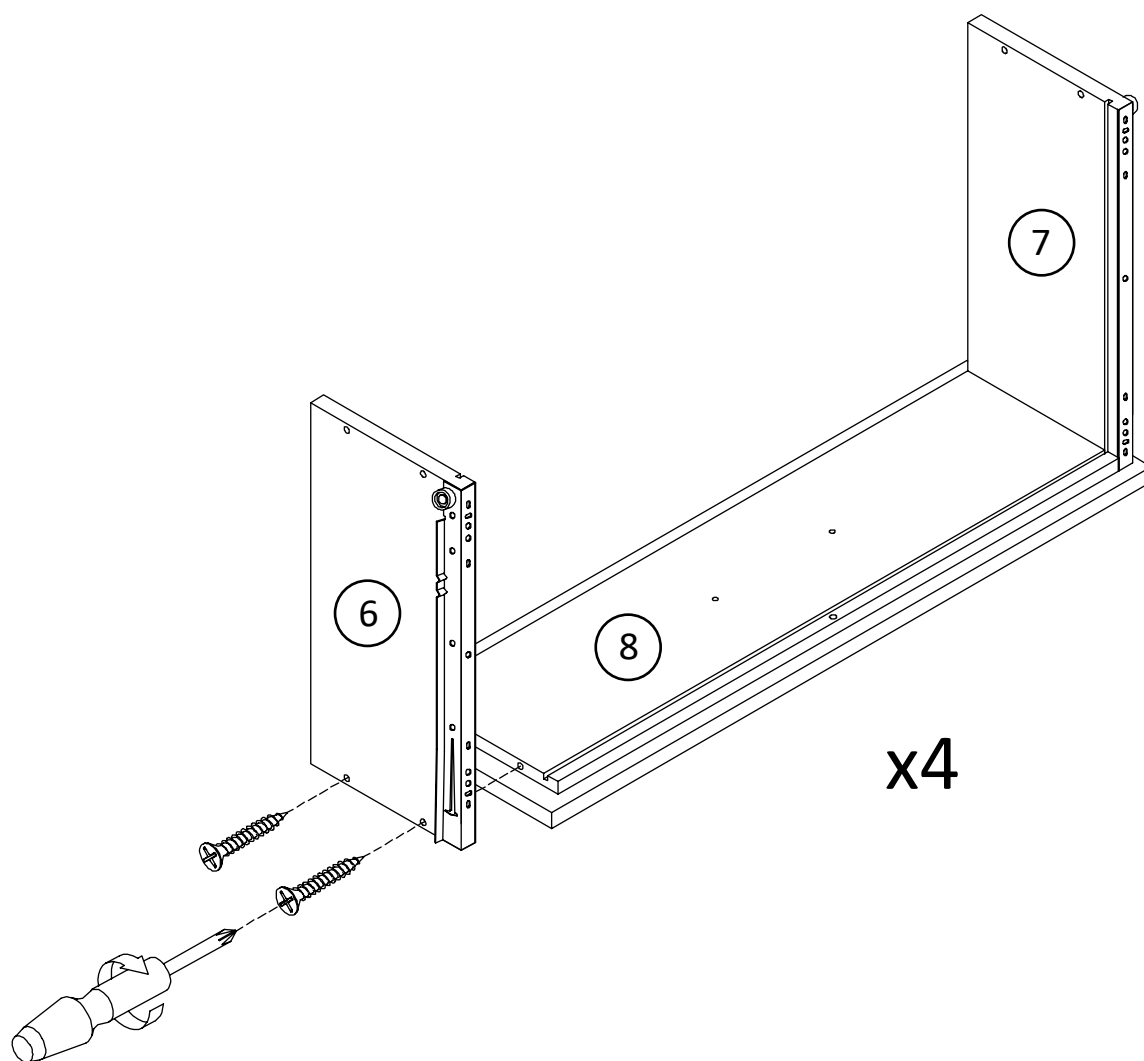


Step 10

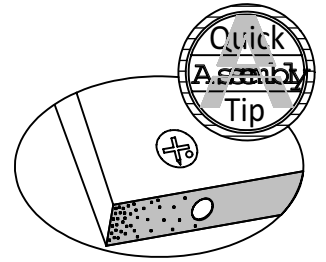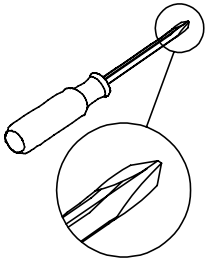


Proper orientation of CAM LOCK

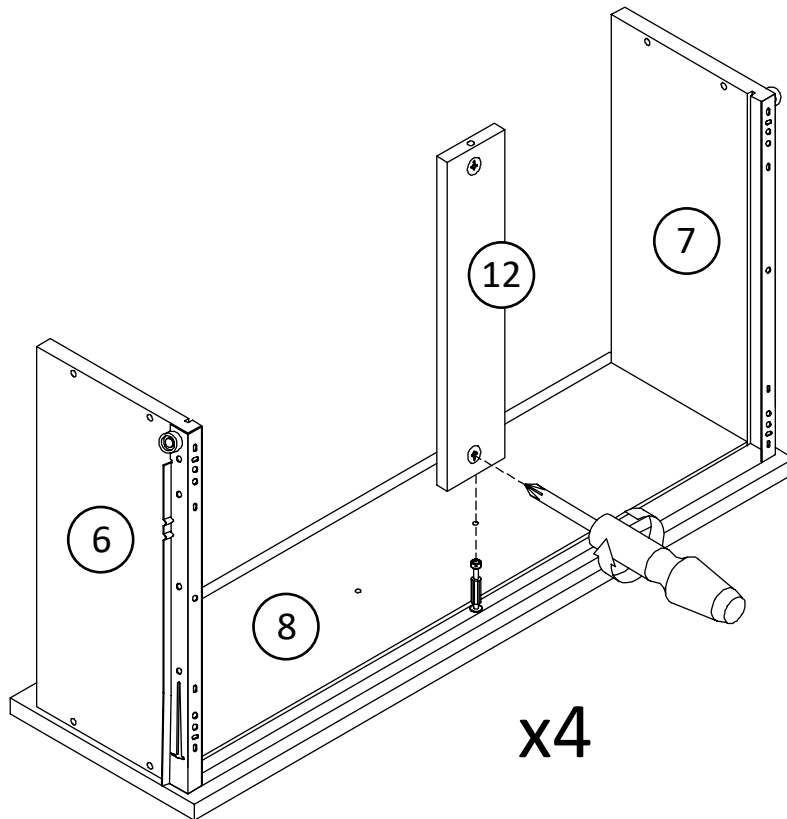


Step 11

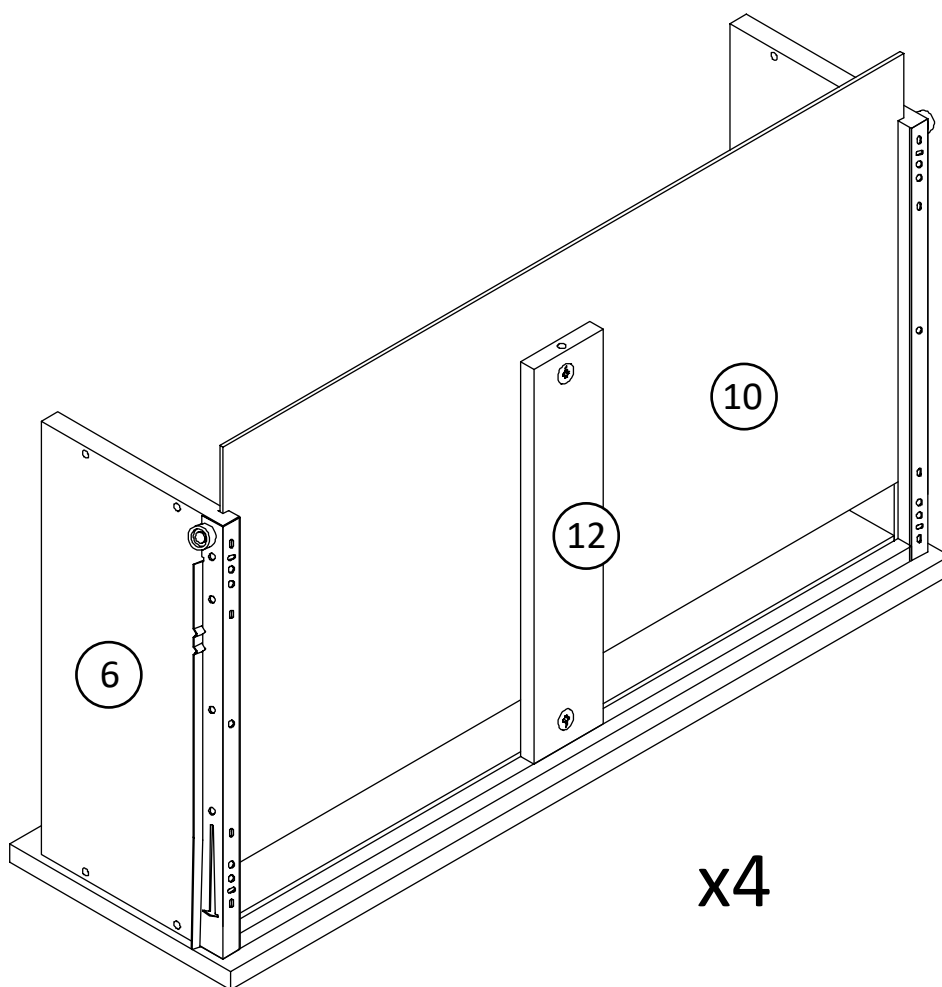


Step 12

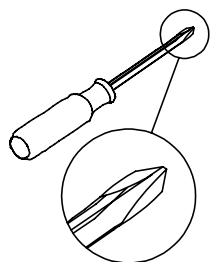



x16
TPK0008

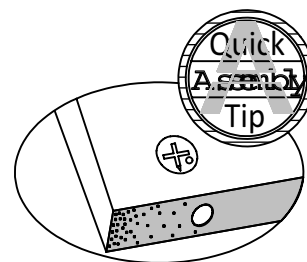


Proper orientation of CAM LOCK

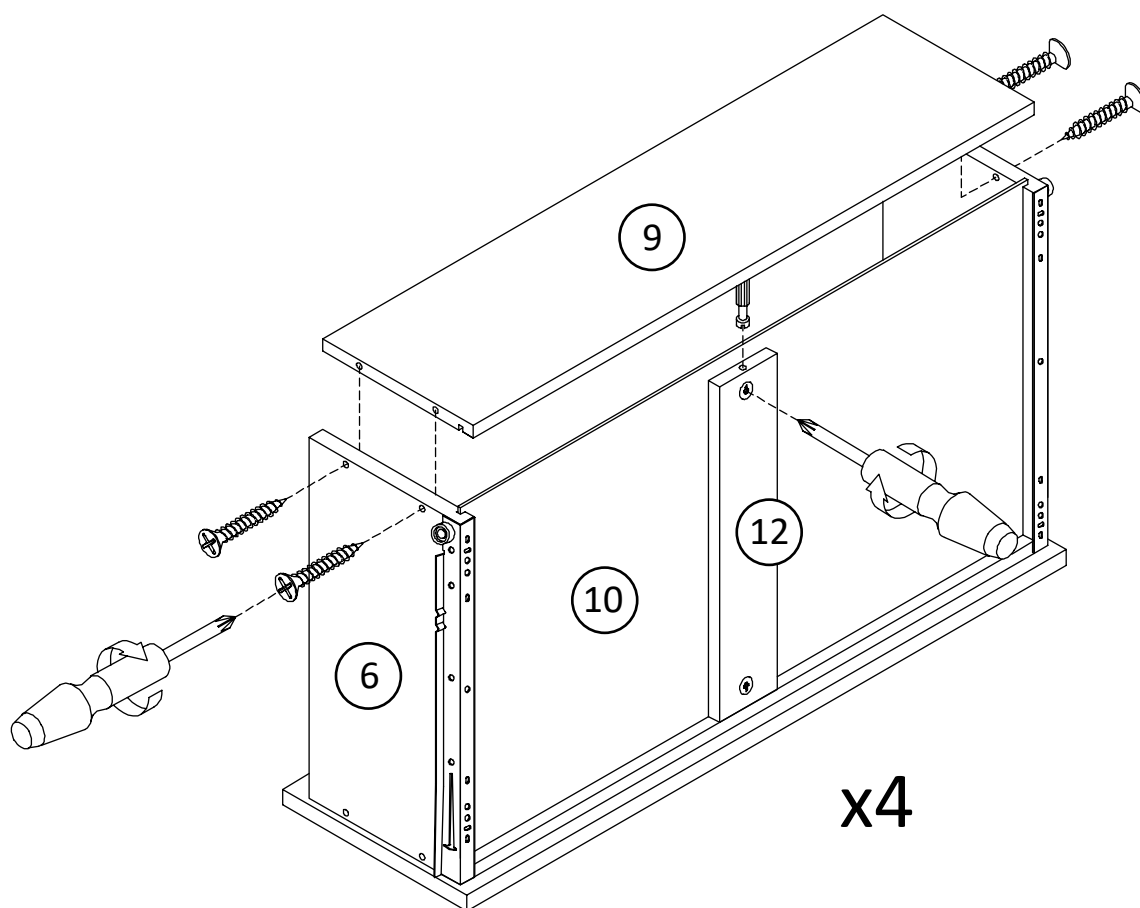


Step 13

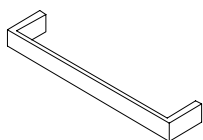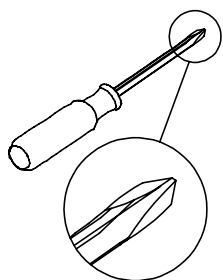


x4
TPK3007



x8
TPK3005

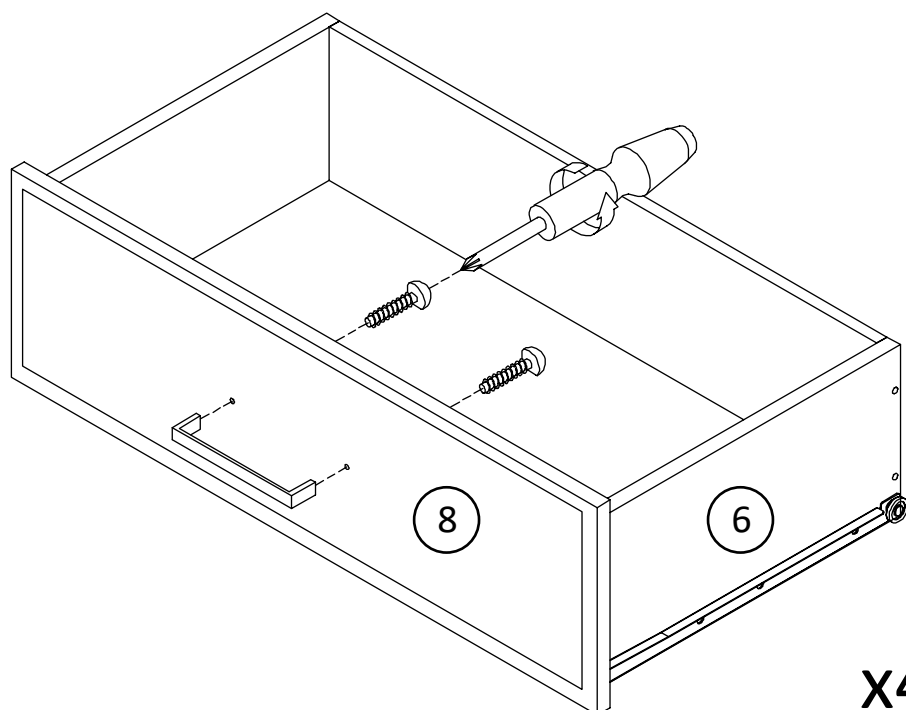

x4

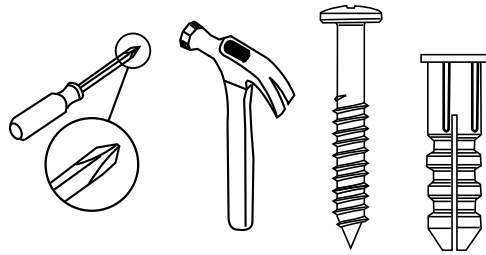

For Masonry, Concrete, or other wall materials:

Consult your local hardware store for appropriate anchors to securely attach the safety bracket.

IMPORTANT: THIS UNIT MUST BE SECURE TO THE WALL TO HELP PREVENT TIPOVER. FOLLOW THESE INSTRUCTIONS TO INSTALL THE ANTI-TIPPING SAFETY BRACKET PROVIDED WITH THIS PRODUCT.


WARNING

Serious or fatal crushing injuries can occur from furniture tip over.

To prevent tip over:

- * Install tipover restraint provided
- * place heaviest items in the lowest drawers
- * Unless specifically designed to accommodate, do not set TVs or other heavy objects on the top of this product
- * Never allow children to climb or hang on drawers, door, or shelves
- * Never open more than one drawer at a time

Use of tip over restraints may only reduce, but not eliminate the risk of tip over

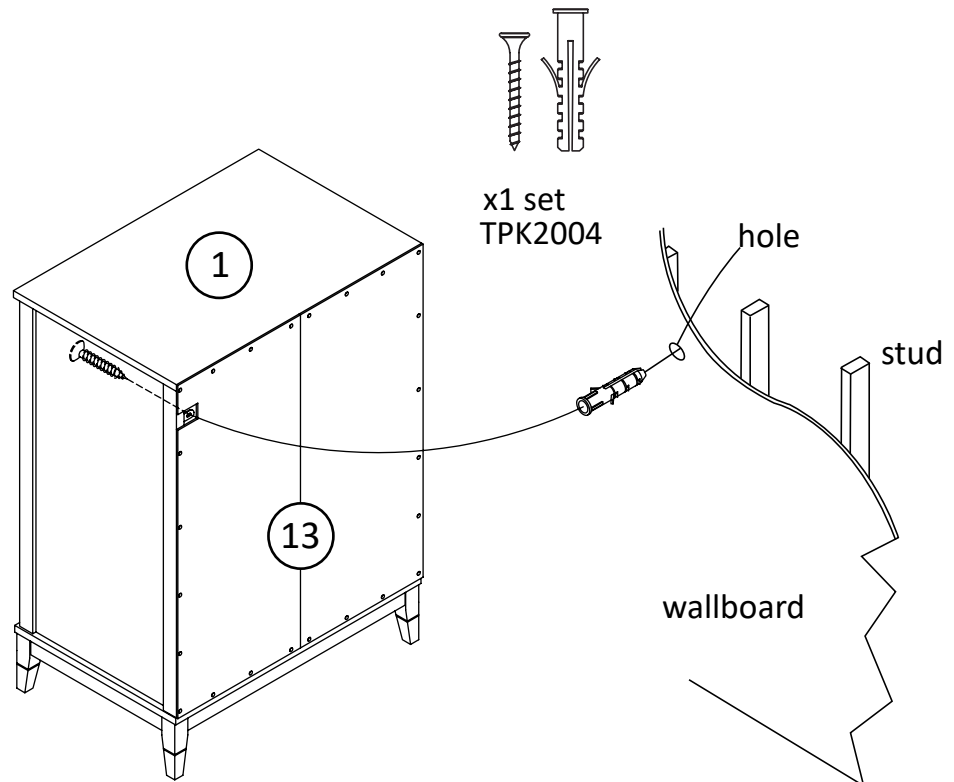

OPTION 1: Attachment into a wall stud (preferred method)

Using a stud finder, locate a stud in the wall. Place your unit against the wall, with the safety bracket aligned in this location.

To make driving the screw easier, you can drill a 1/8" diameter pilot hole (3mm) through the safety bracket into the stud.

Drive the screw through the safety bracket into the wall stud. Tighten the screw that was not fully tightened.


OPTION 2: Attachment into drywall

Locate your unit where desired against a wall and mark the wall through the safety bracket, then move your unit aside.

Drill a 3/16" diameter hole (5mm) into the wallboard. Tap the wall anchor into the hole until it is flush. Move your unit into location and fasten the wall bracket to the wall anchor with the screw.


Tighten the screw that was not fully tightened.

Step 14

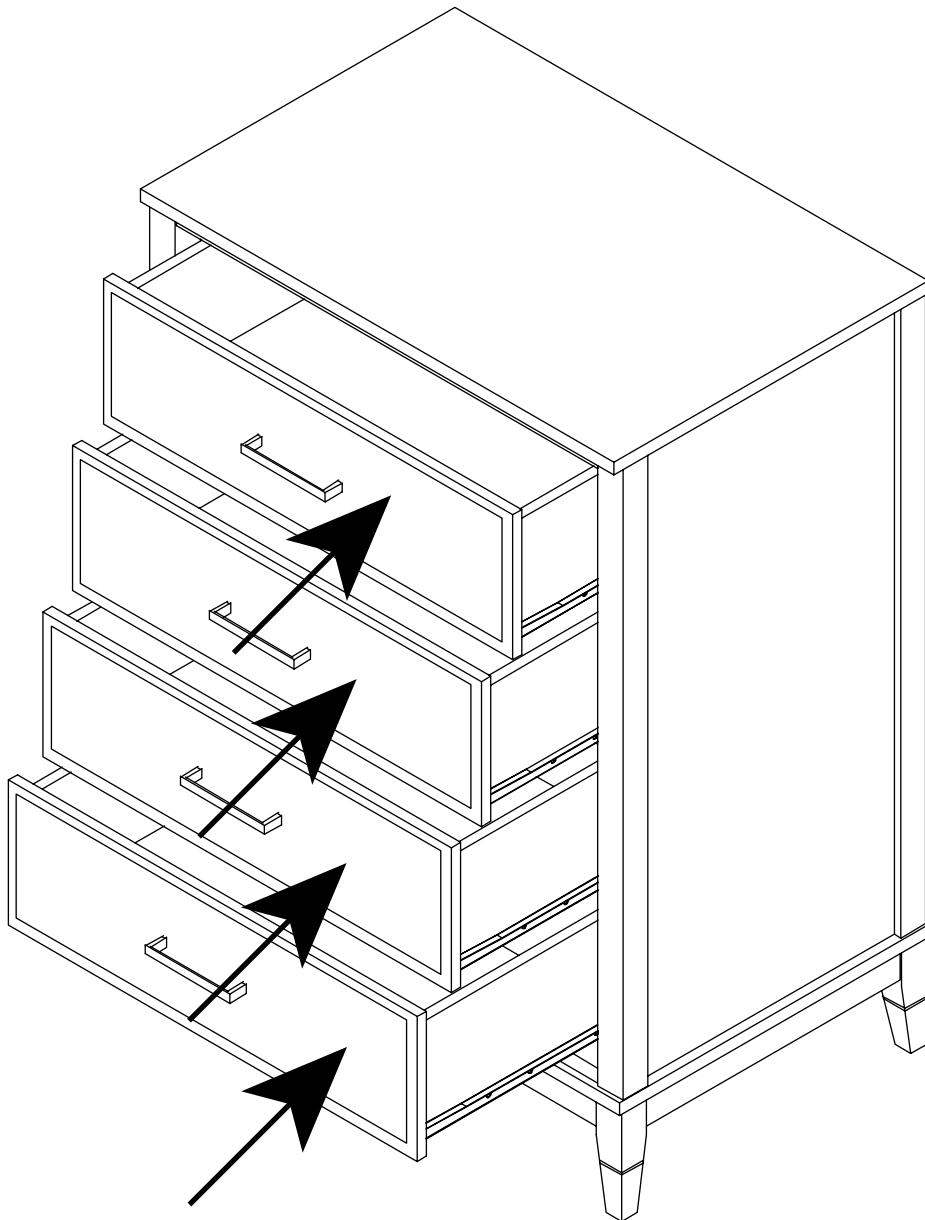

Maximum Loads

This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

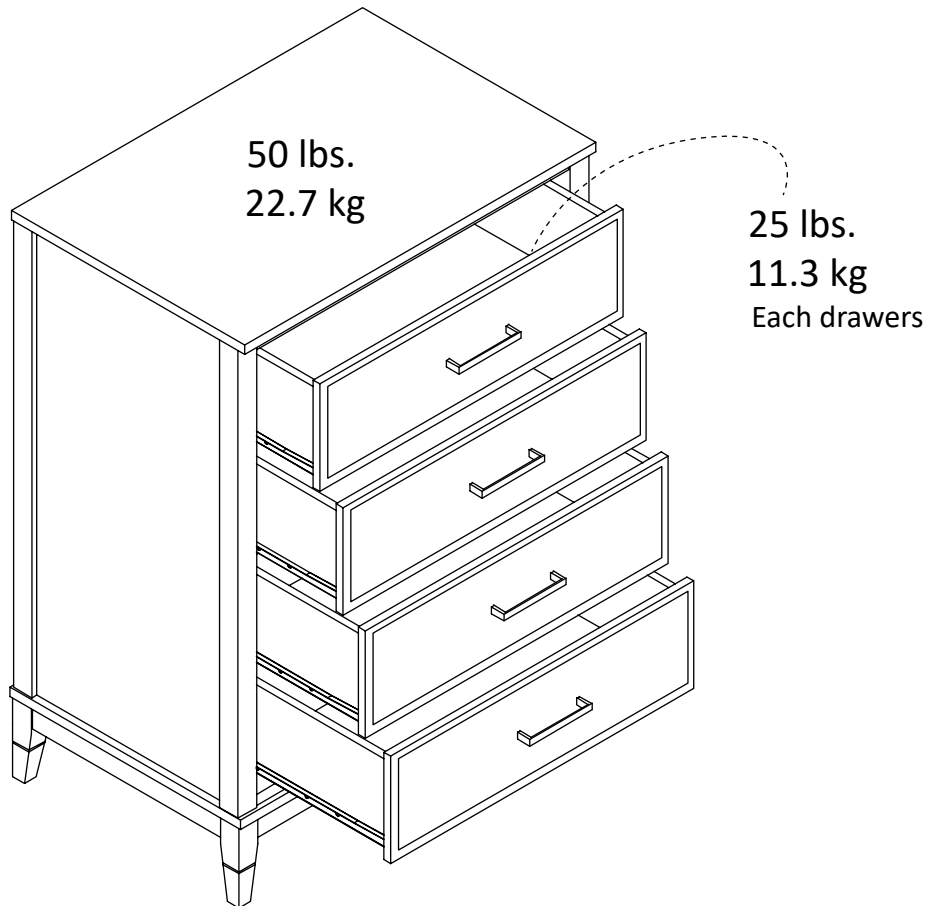

Enjoy your furniture.

Warning: Risk of serious injury to person - do not place a television on this furniture. This furniture is not approved for use with a television.
