

DA0558BS01A/DA0558HS01A

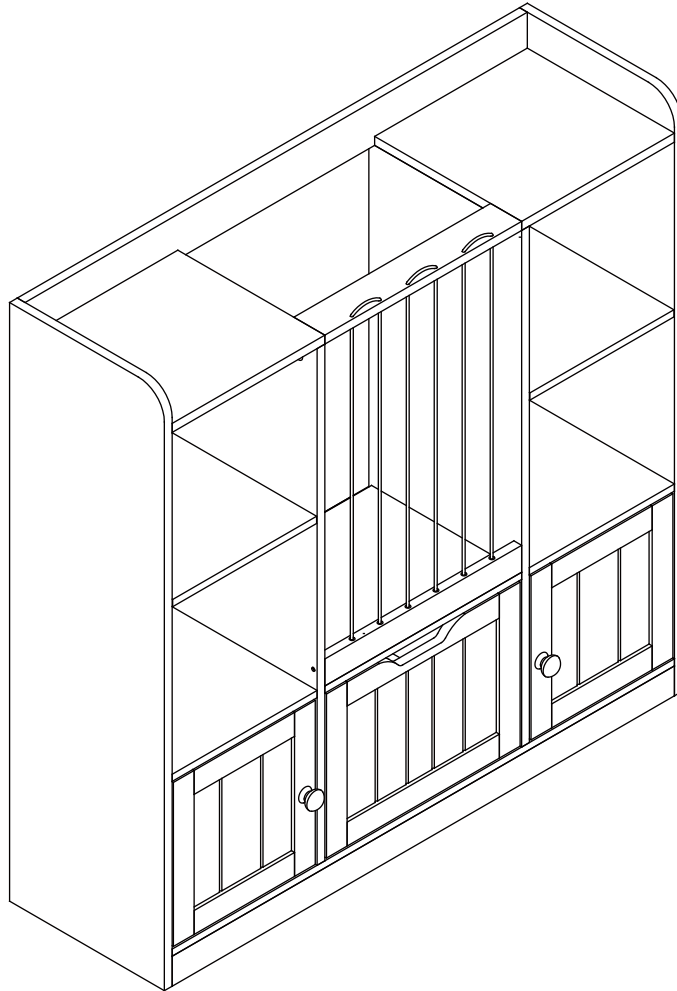


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

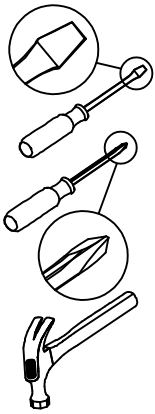

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. Assembly speed can be increased by using electric screwdriver!

Helpful Hints



















PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.










Board Identification

Not actual size

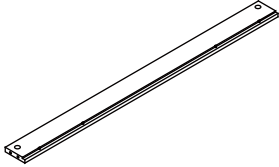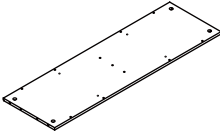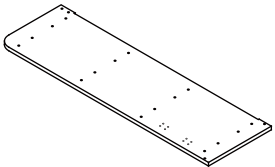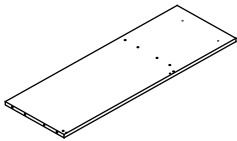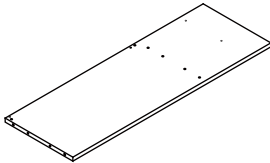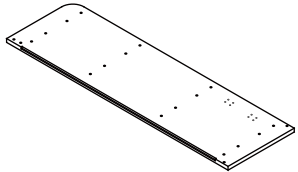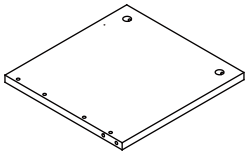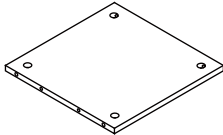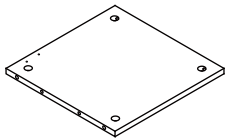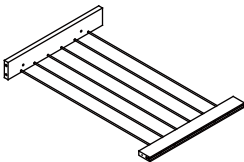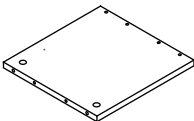
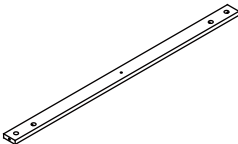
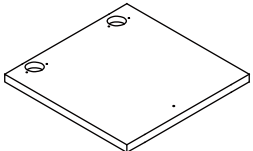
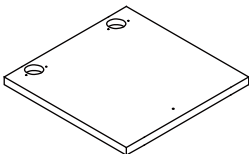
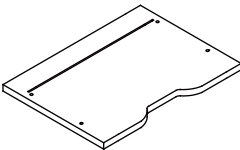
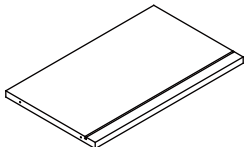
①x1 	②x1 	③x1 
Top Long Strip	Bottom Panel	Side Panel
④x1 	⑤x1 	⑥x1 
Middle Partition	Middle Partition	Side Panel
⑦x1 	⑧x2 	⑨x1 
Left and Right Top Panels	Left and Right Shelves	Left and Right Shelves
⑩x1 	⑪x1 	⑫x1 
Middle Top Strip	iron tube	Middle Shelf
⑬x1 	⑭x2 	⑮x1 
Left and Right Top Panels	Front and Rear Water Stops	Door Panel
⑯x1 	⑰x1 	⑱x1 
Door Panel	Drawer Front Panel	Drawer Back Panel

Board Identification

Not actual size

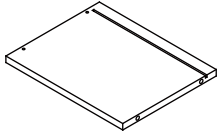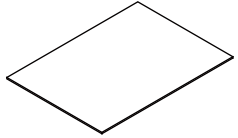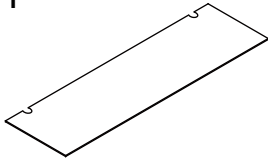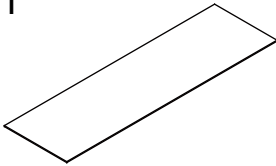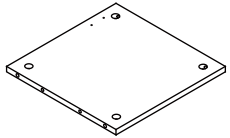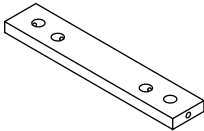①⑨ x1 	②⑩ x1 	②① x1 
Drawer Side Panel	Drawer Side Panel	Drawer Bottom Panel
②② x1 	②③ x1 	②④ x1 
Upper Middle Back Panel	Lower Back Panel	Left and Right Shelves
②⑤ x1 		
Front and Rear Water Stops		

Part List


 6X35mm A x50 CAM LOCK spare:2	 15X10mm B x50 CAM BOLT spare:2	 6X30mm C x50 WOOD DOWEL spare:2	 4X40mm D x12 SCREW spare:2	 3X12mm E x16 SCREW spare:2
 F x2 anti-tipping parts	 4X14mm G x24 SCREW spare:2	 H x4 HINGE	 6X30mm J x4 BOLT	 4X20mm K x2 SCREW
 4X30mm L x4 SCREW	 M x2 Doorstop	 N x14 MAT spare:2	 3X12mm P x34 SCREW spare:2	 Q x4 Fixing iron sheet
 R x2 HANDLE	 S x20 Hole sticker spare:2	 T x2 CORNER BRACE		
 250mm CL x1 SLIDING TRACK	 250mm CR x1 SLIDING TRACK	 250mm DL x1 SLIDING TRACK	 250mm DR x1 SLIDING TRACK	

Part List


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

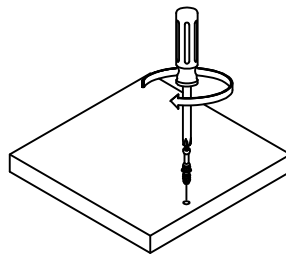

2

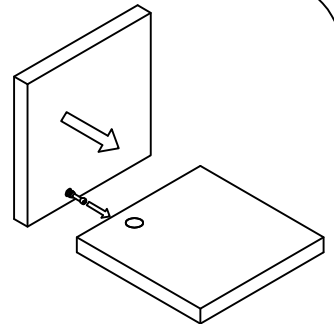


3

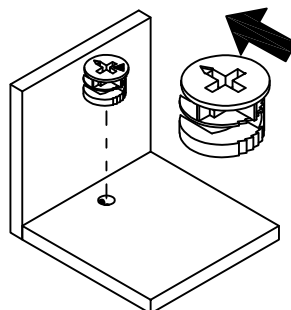


The opening must point toward the edge of the board

4





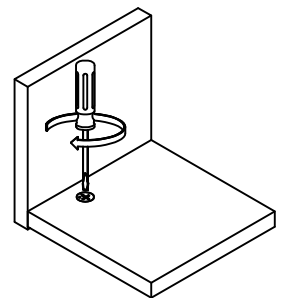


Board Identification






Not actual size

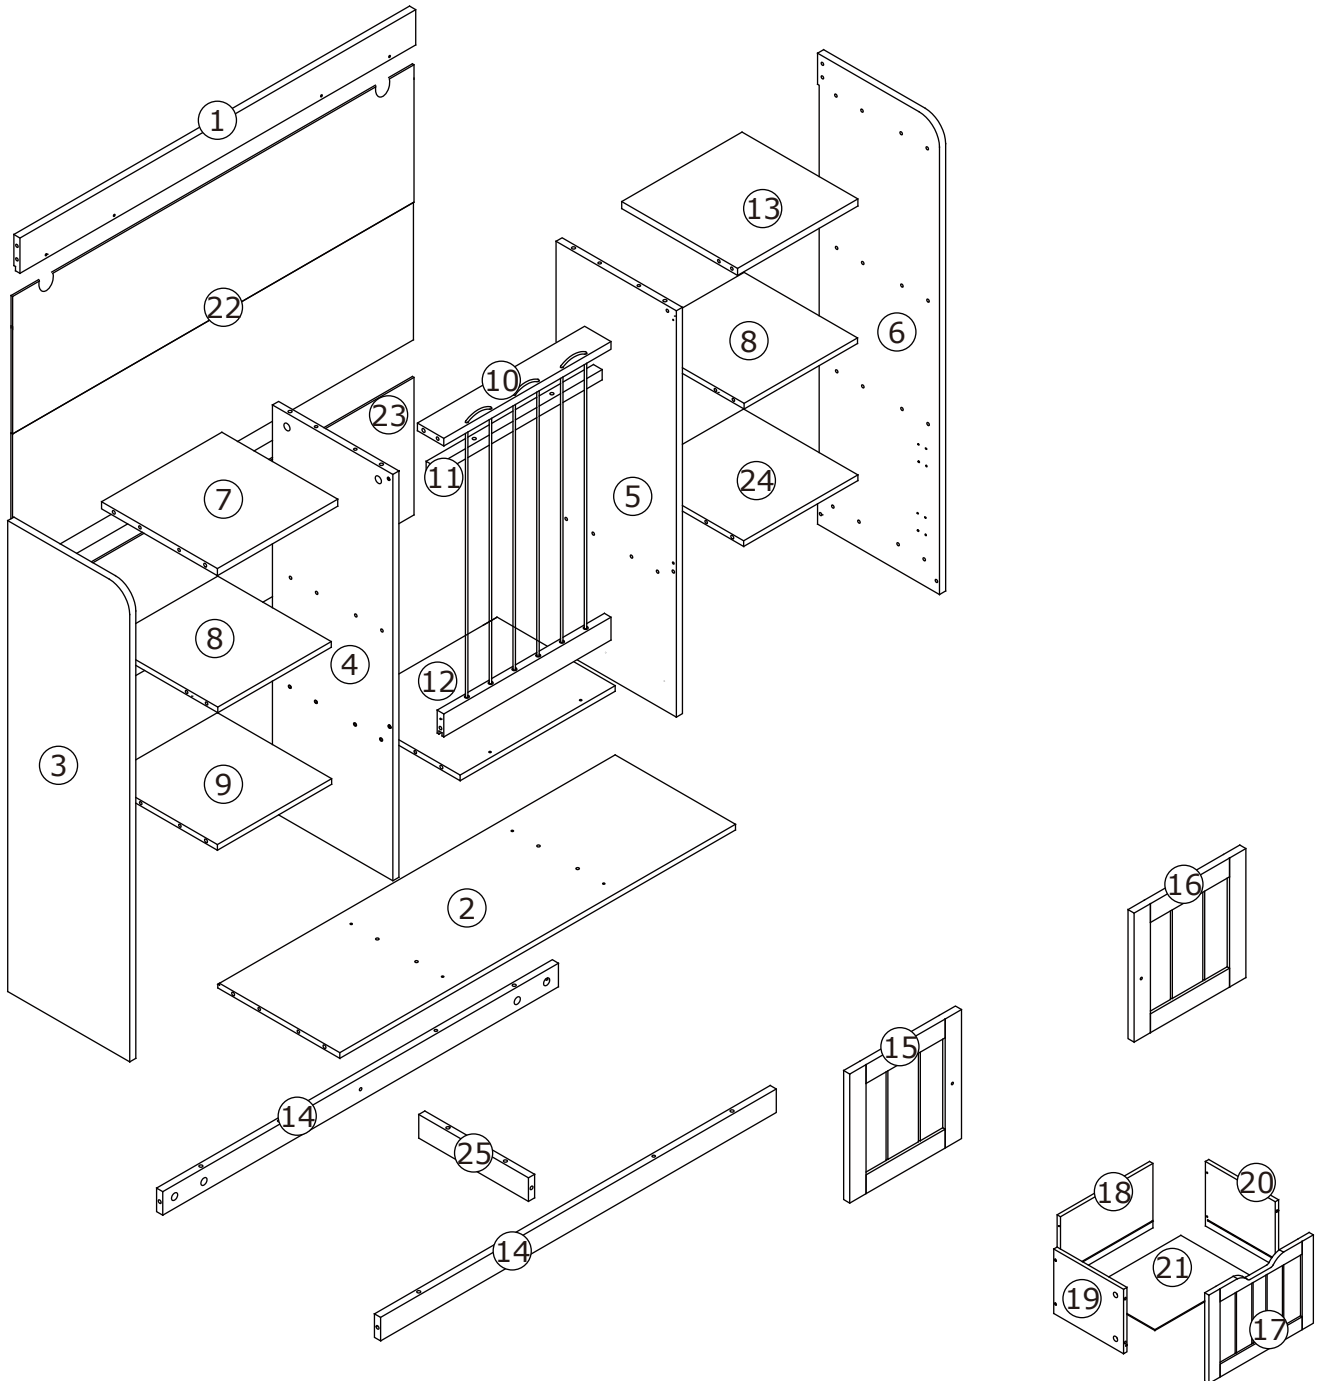


STEP 1

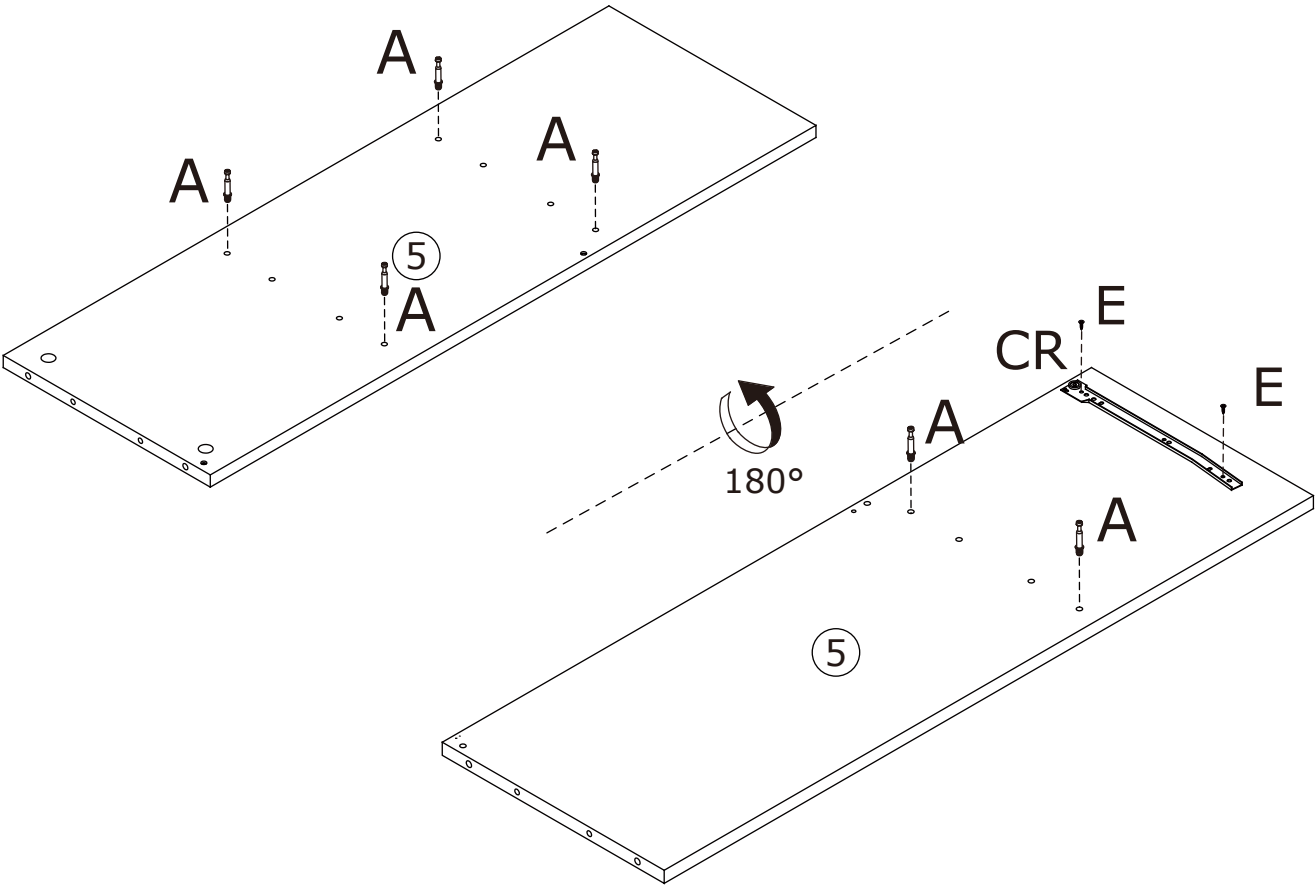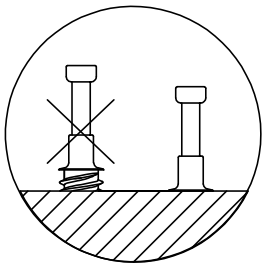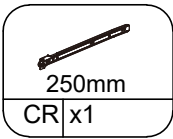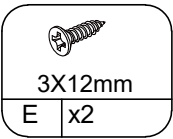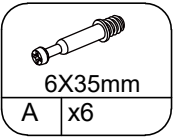


STEP 2

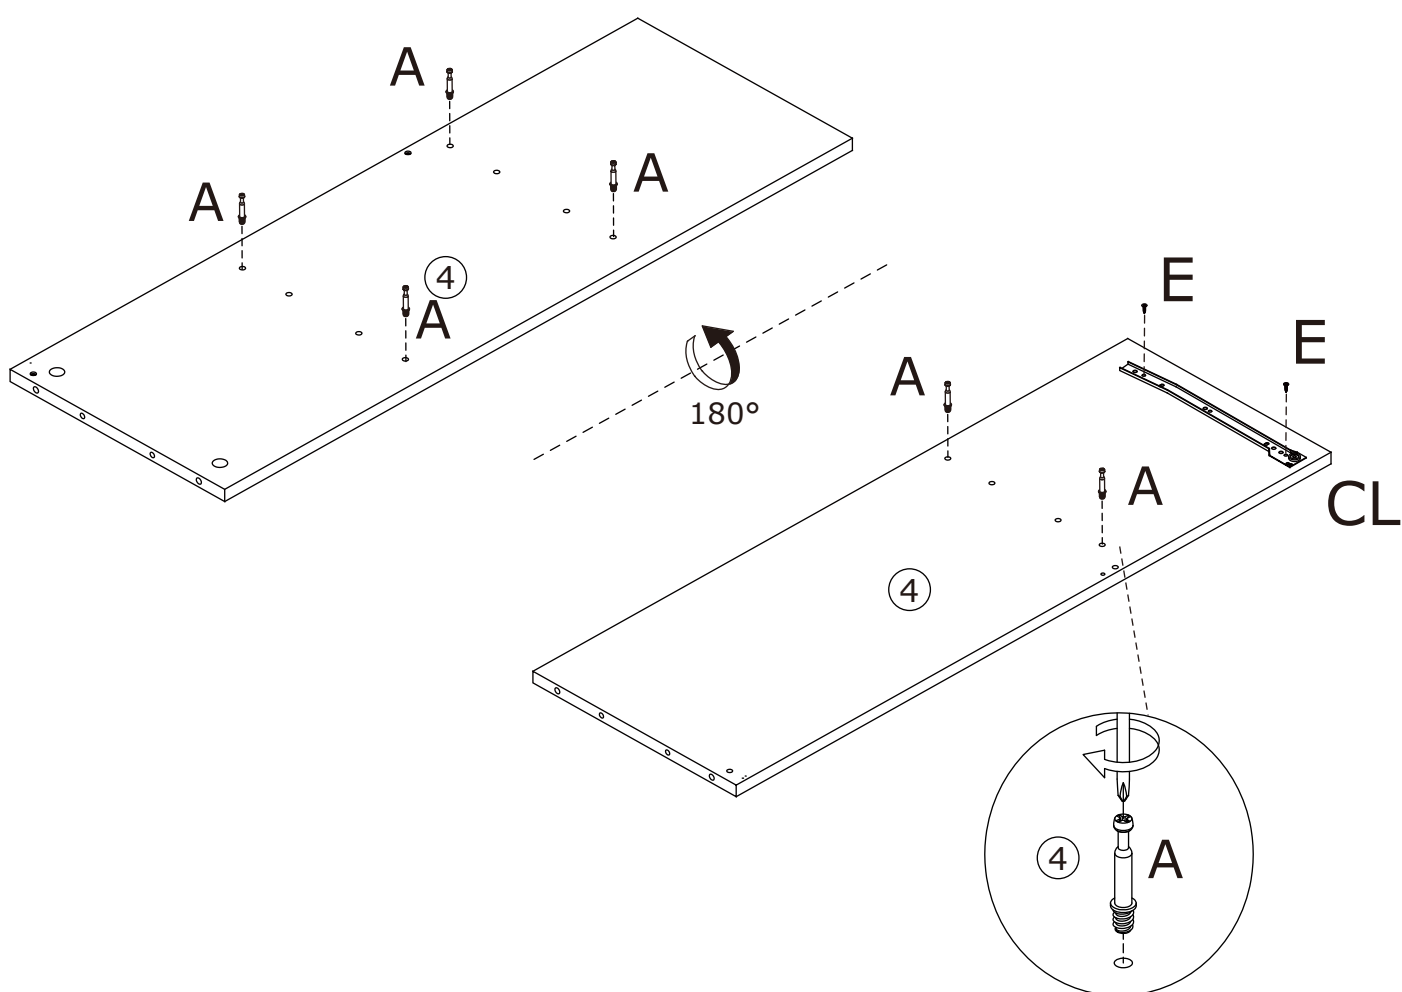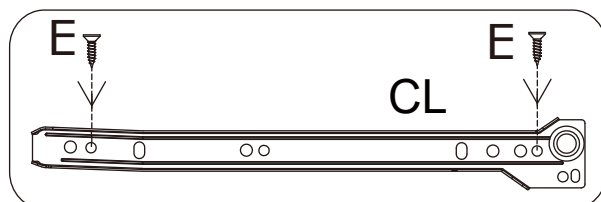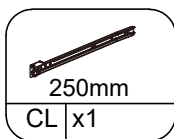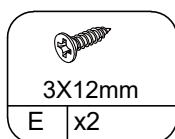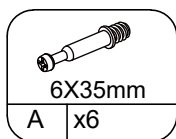





STEP 3

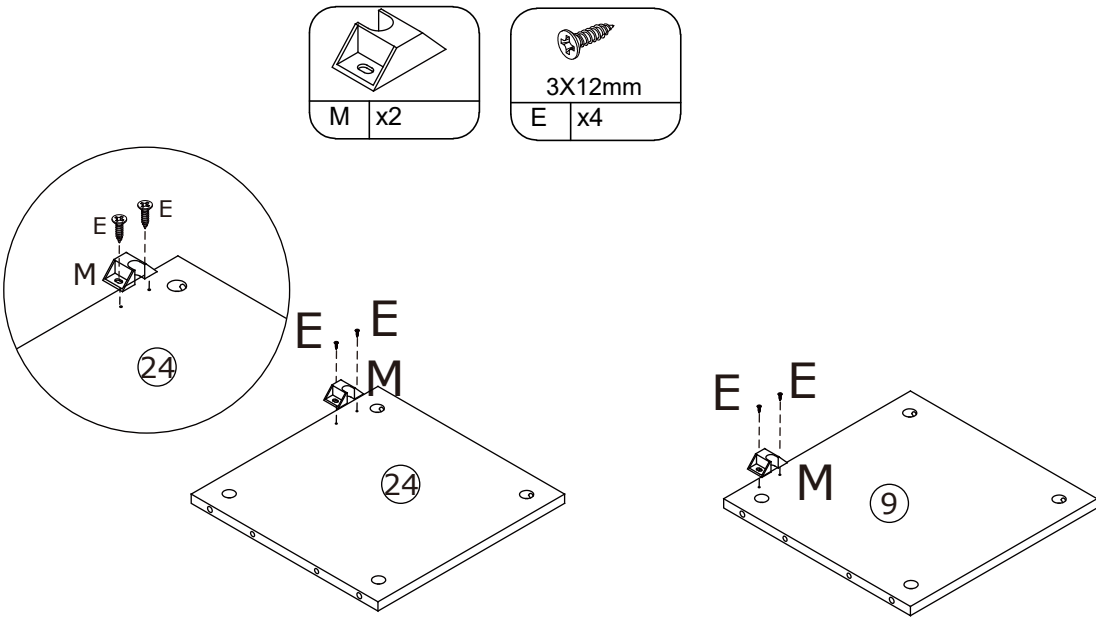





STEP 4

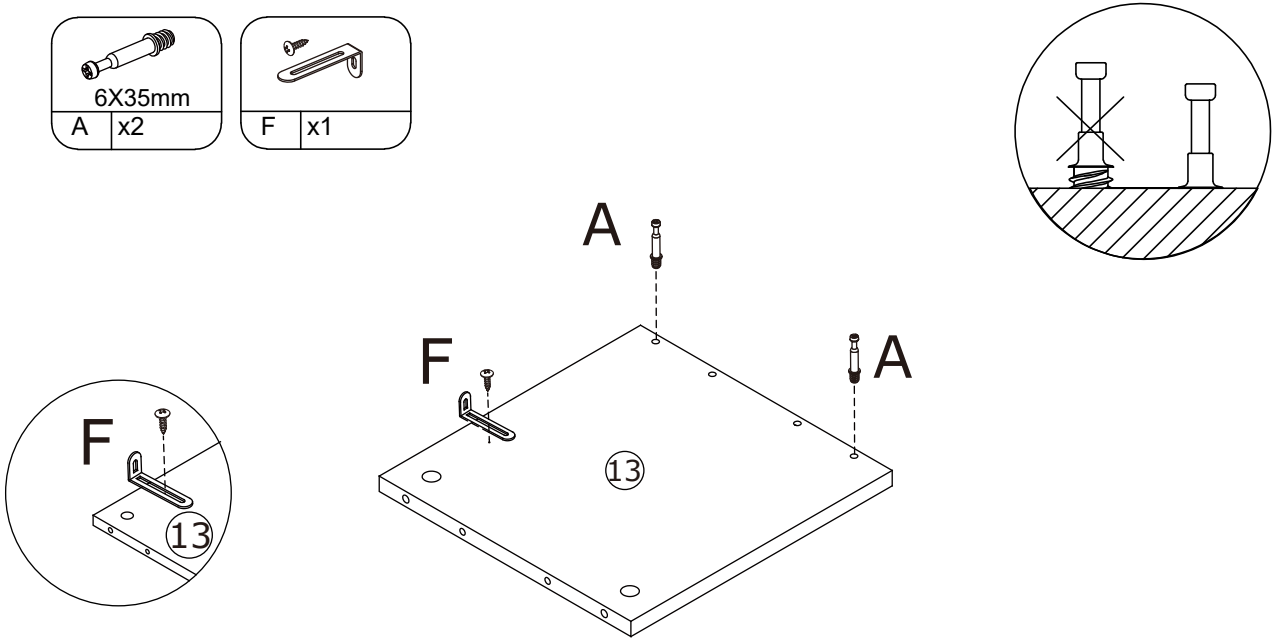





STEP 5

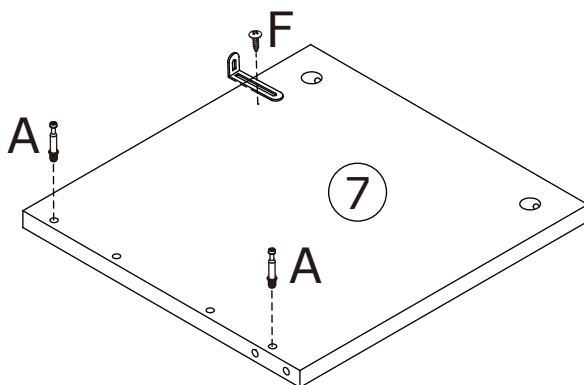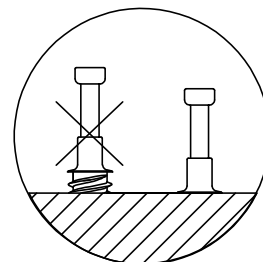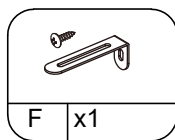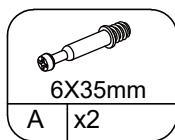



STEP 6

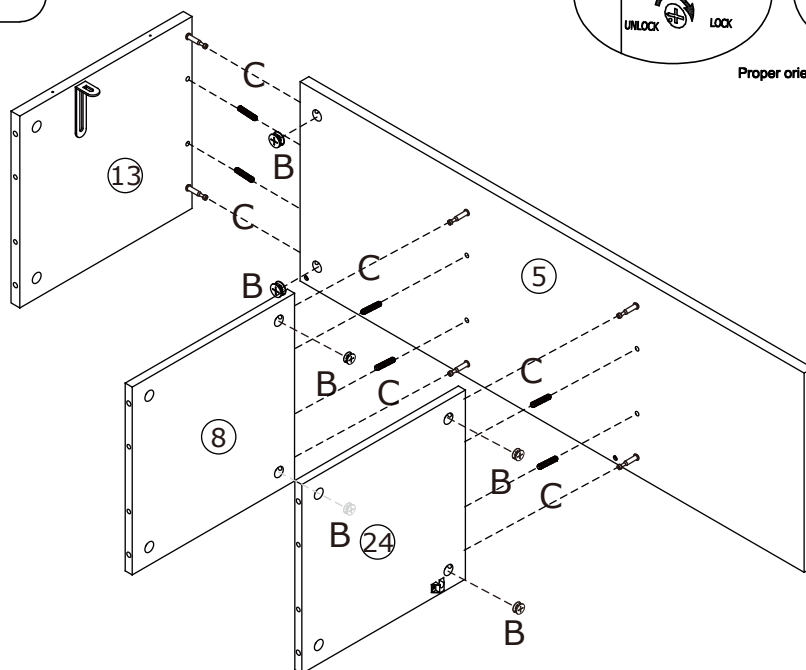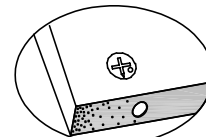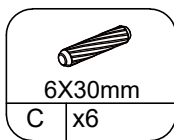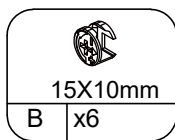



STEP 7

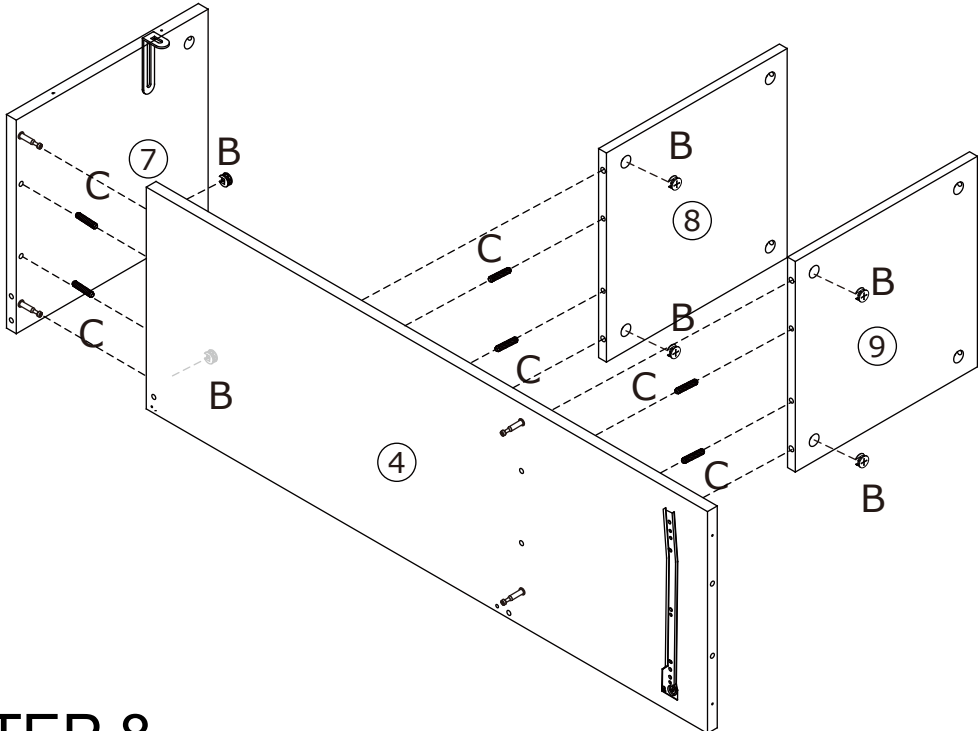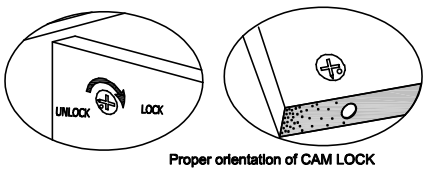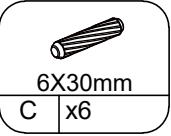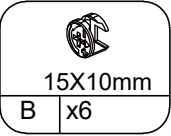







STEP 8

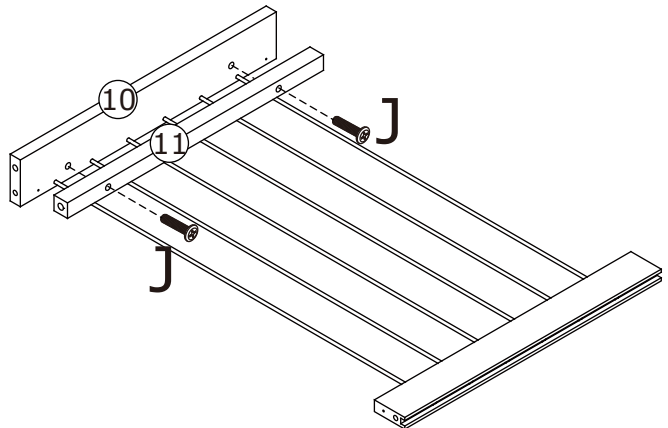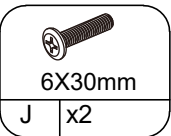







STEP 9

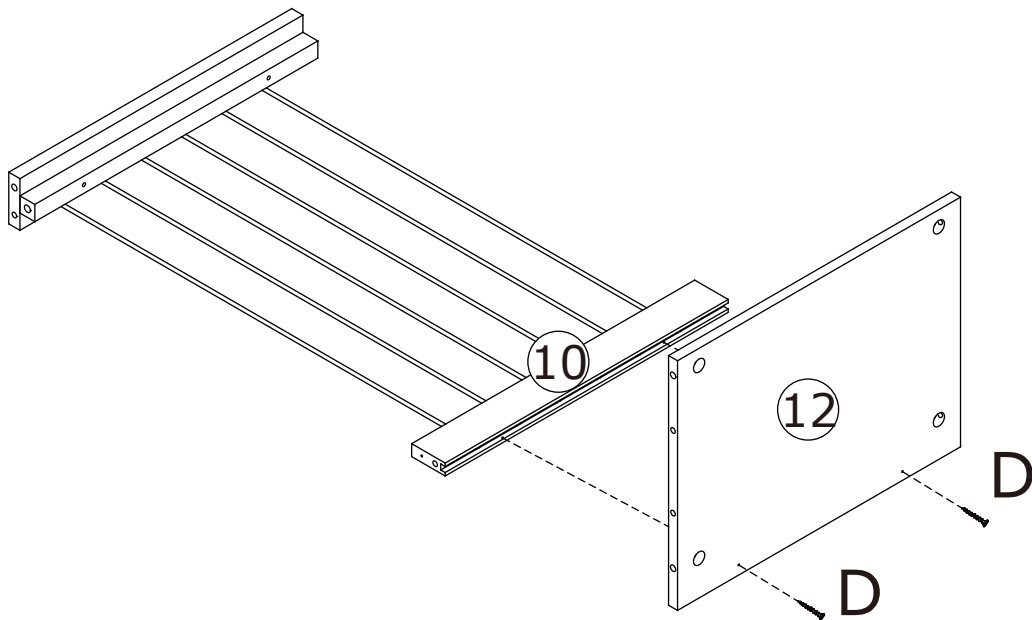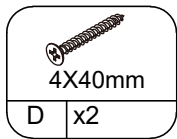



STEP 10

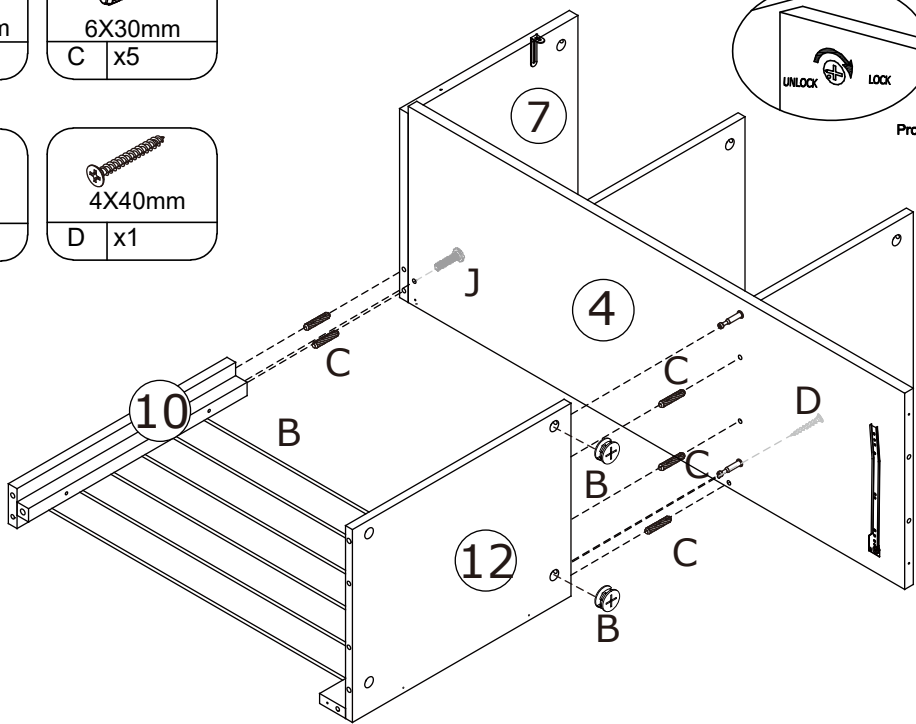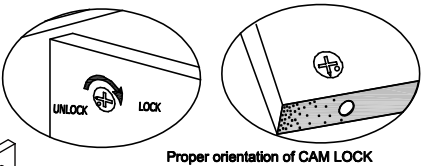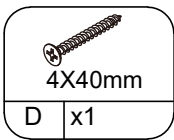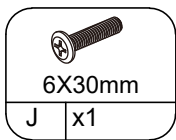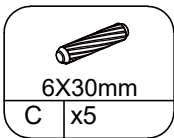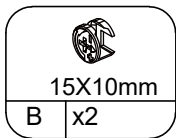



STEP 11

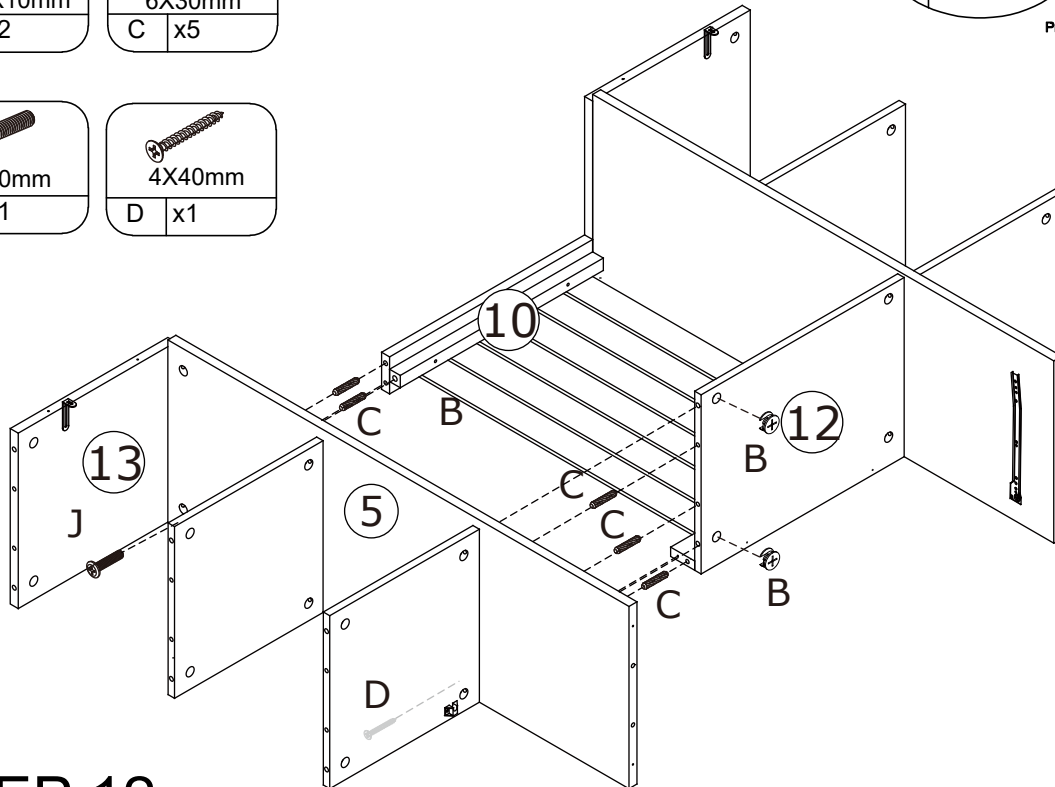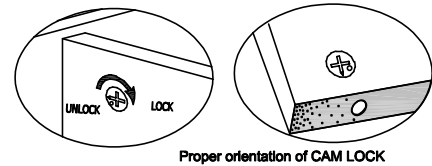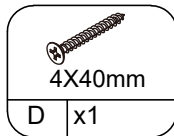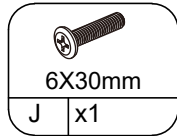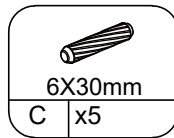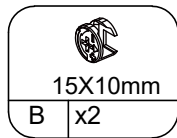







STEP 12

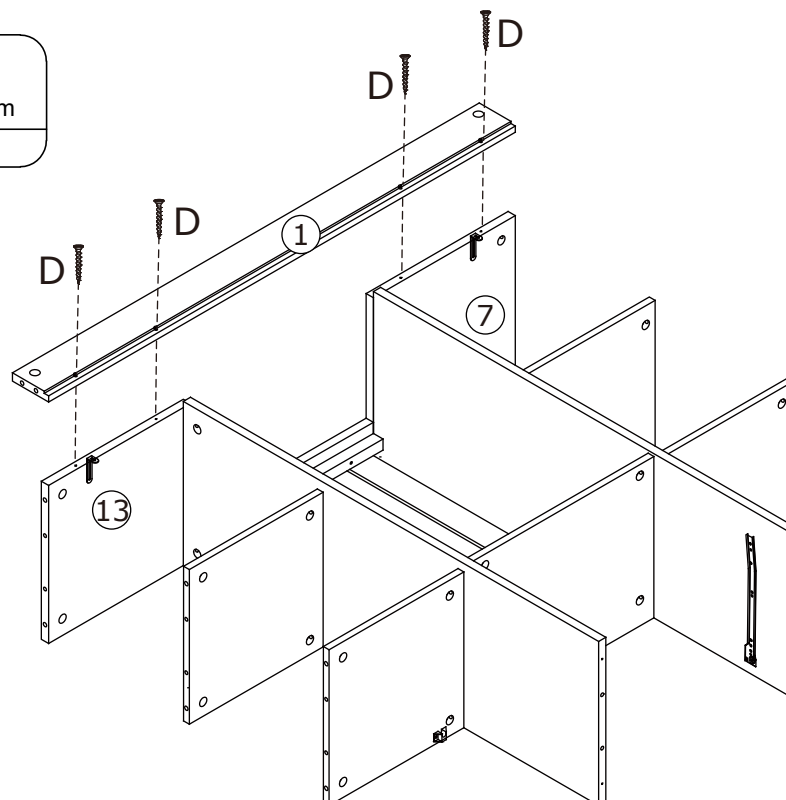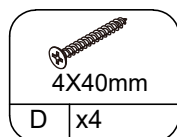




STEP 13

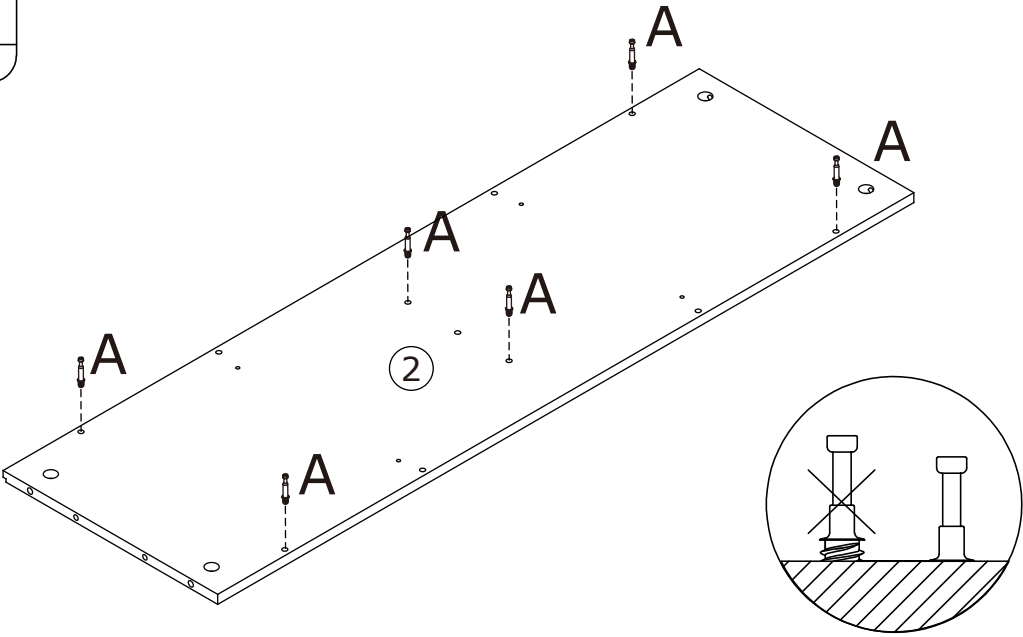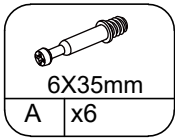

STEP 14

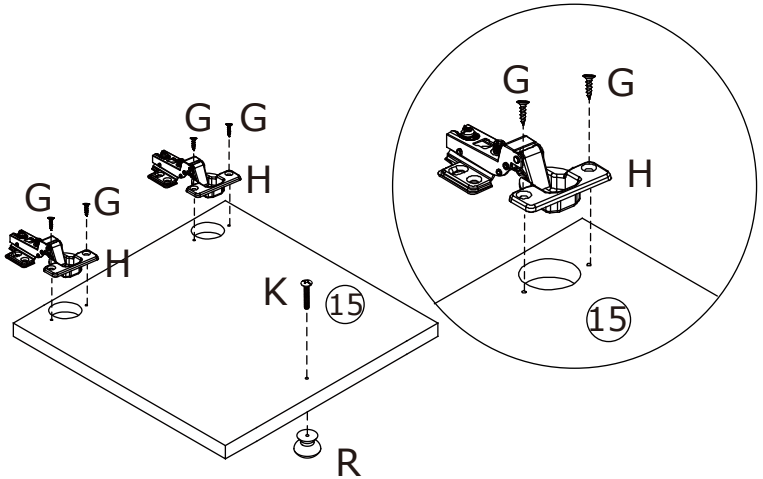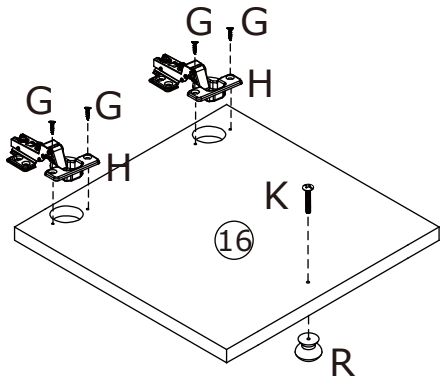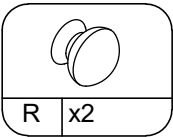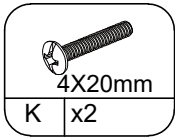
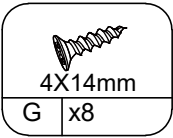
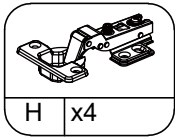


STEP 15

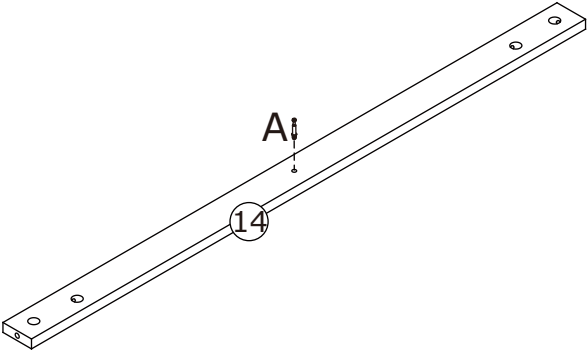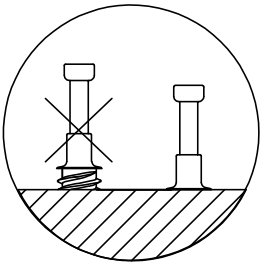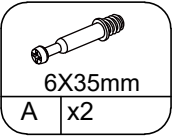

x2

STEP 16

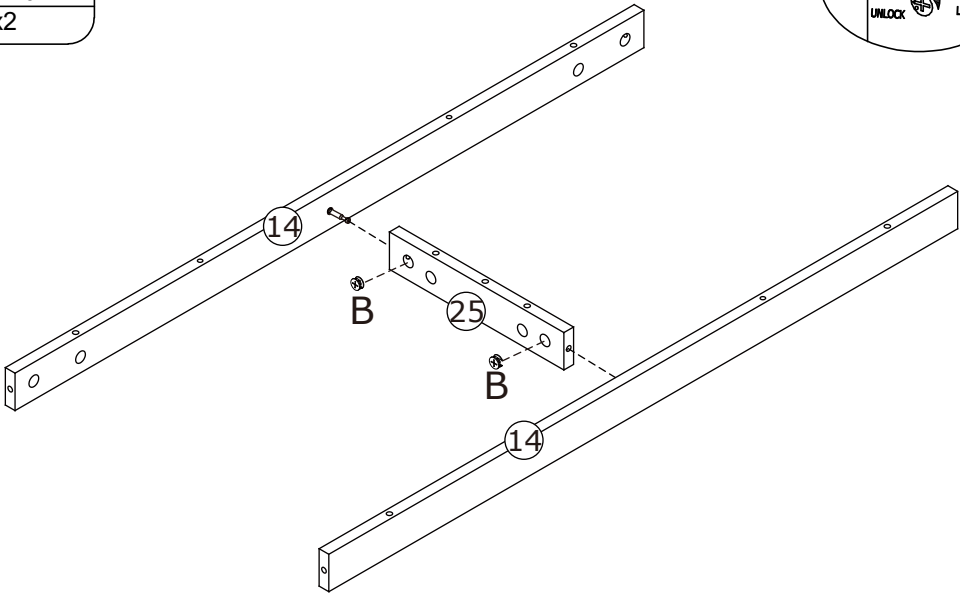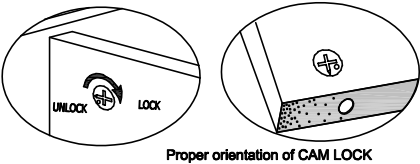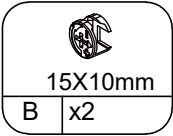



STEP 17



15X10mm
B x6



6X30mm
C x5

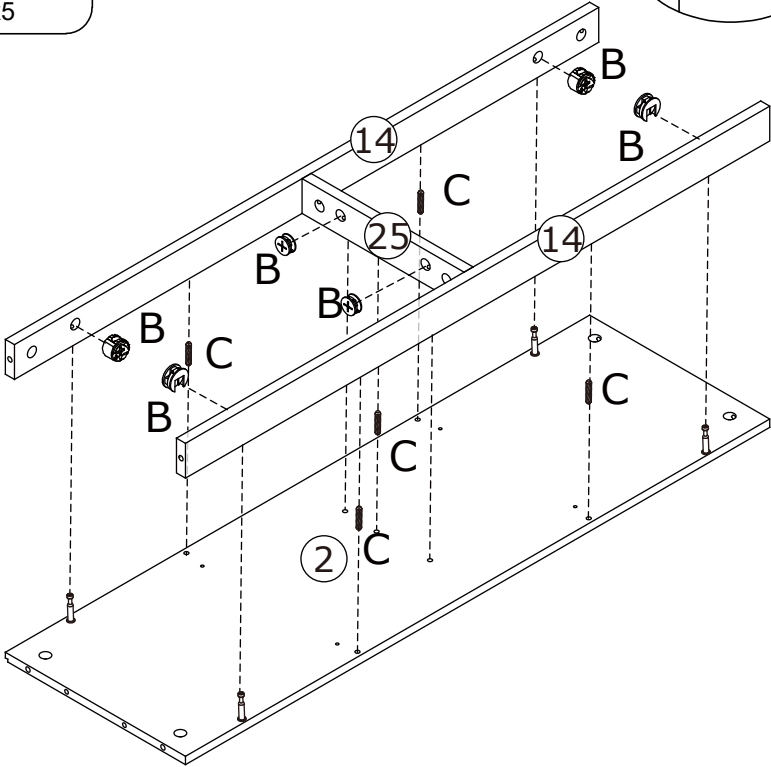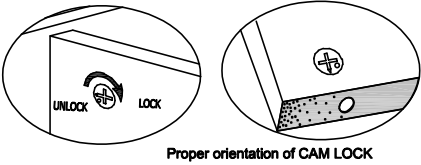


STEP 18





4X40mm
D x4





6X30mm
C x4

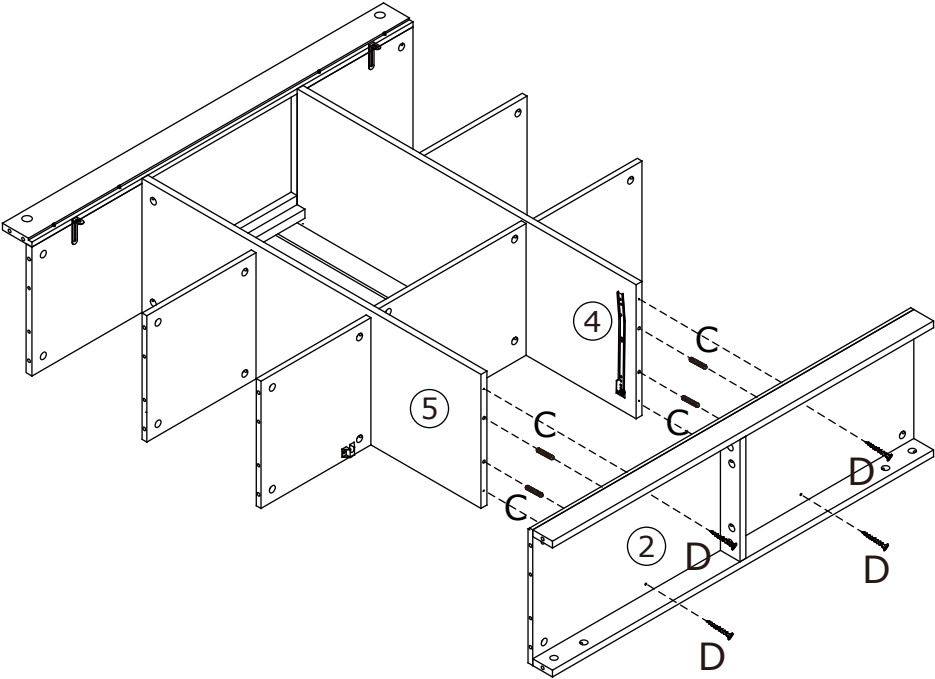






STEP 19

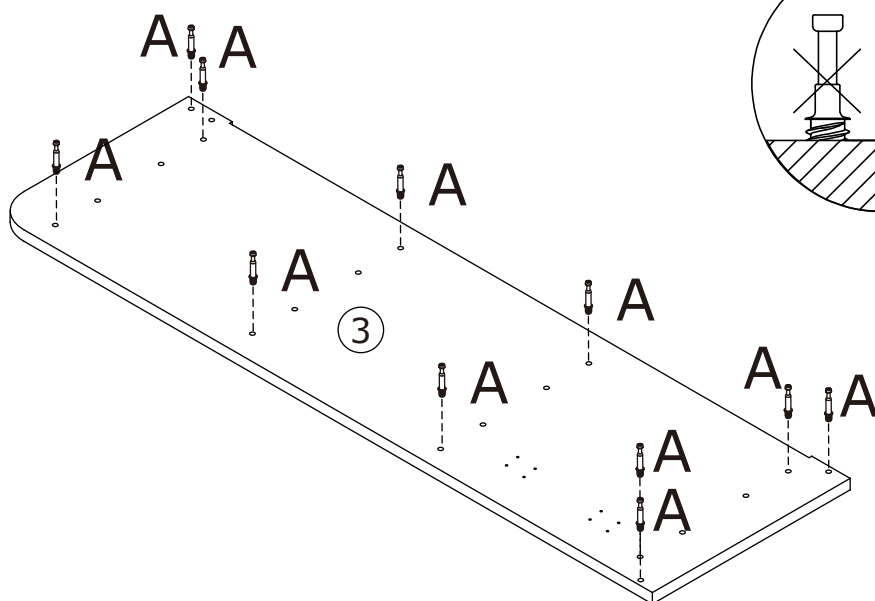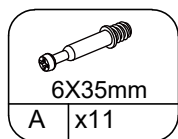





STEP 20

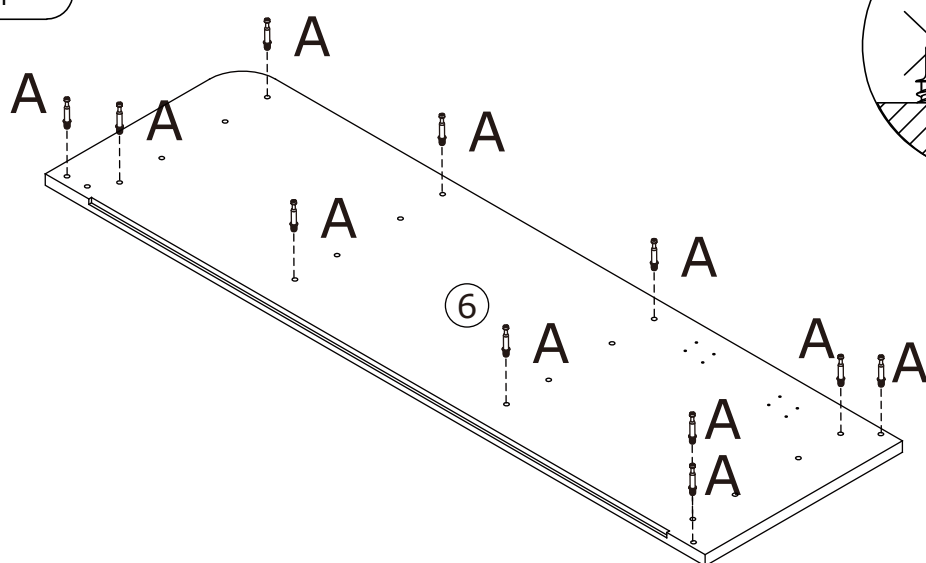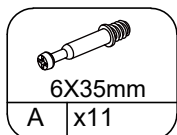


STEP 21

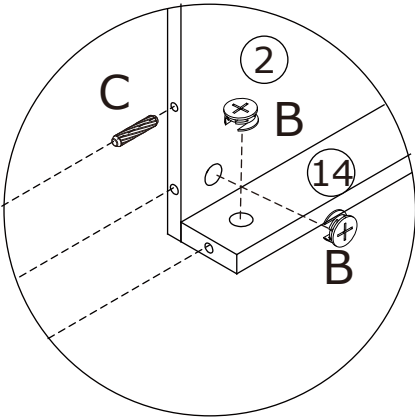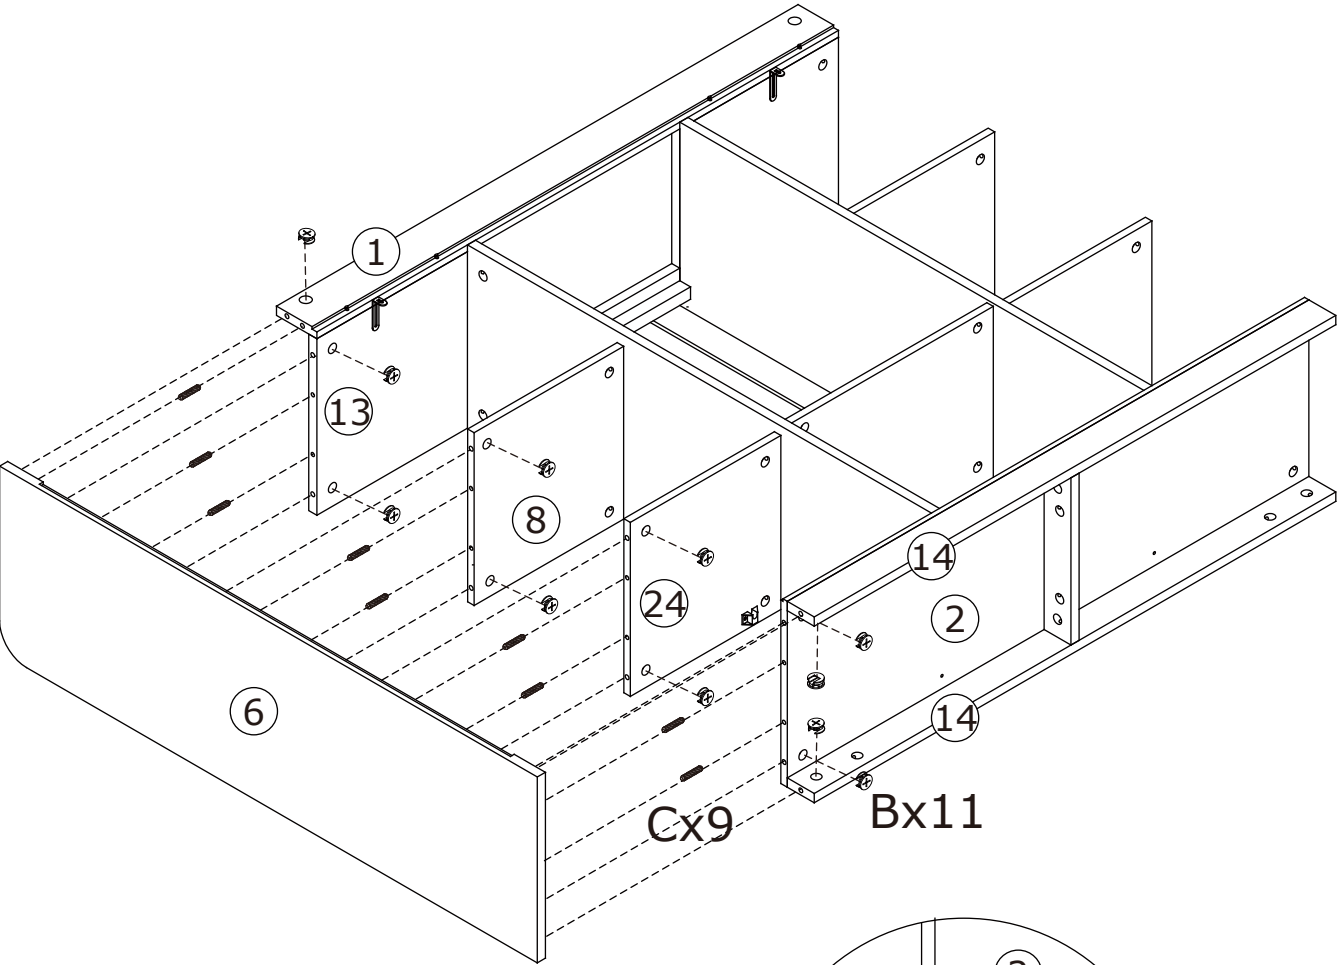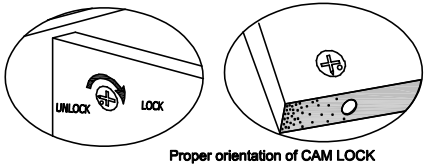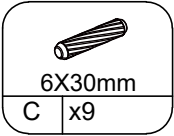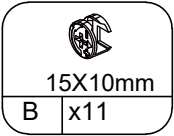

STEP 22

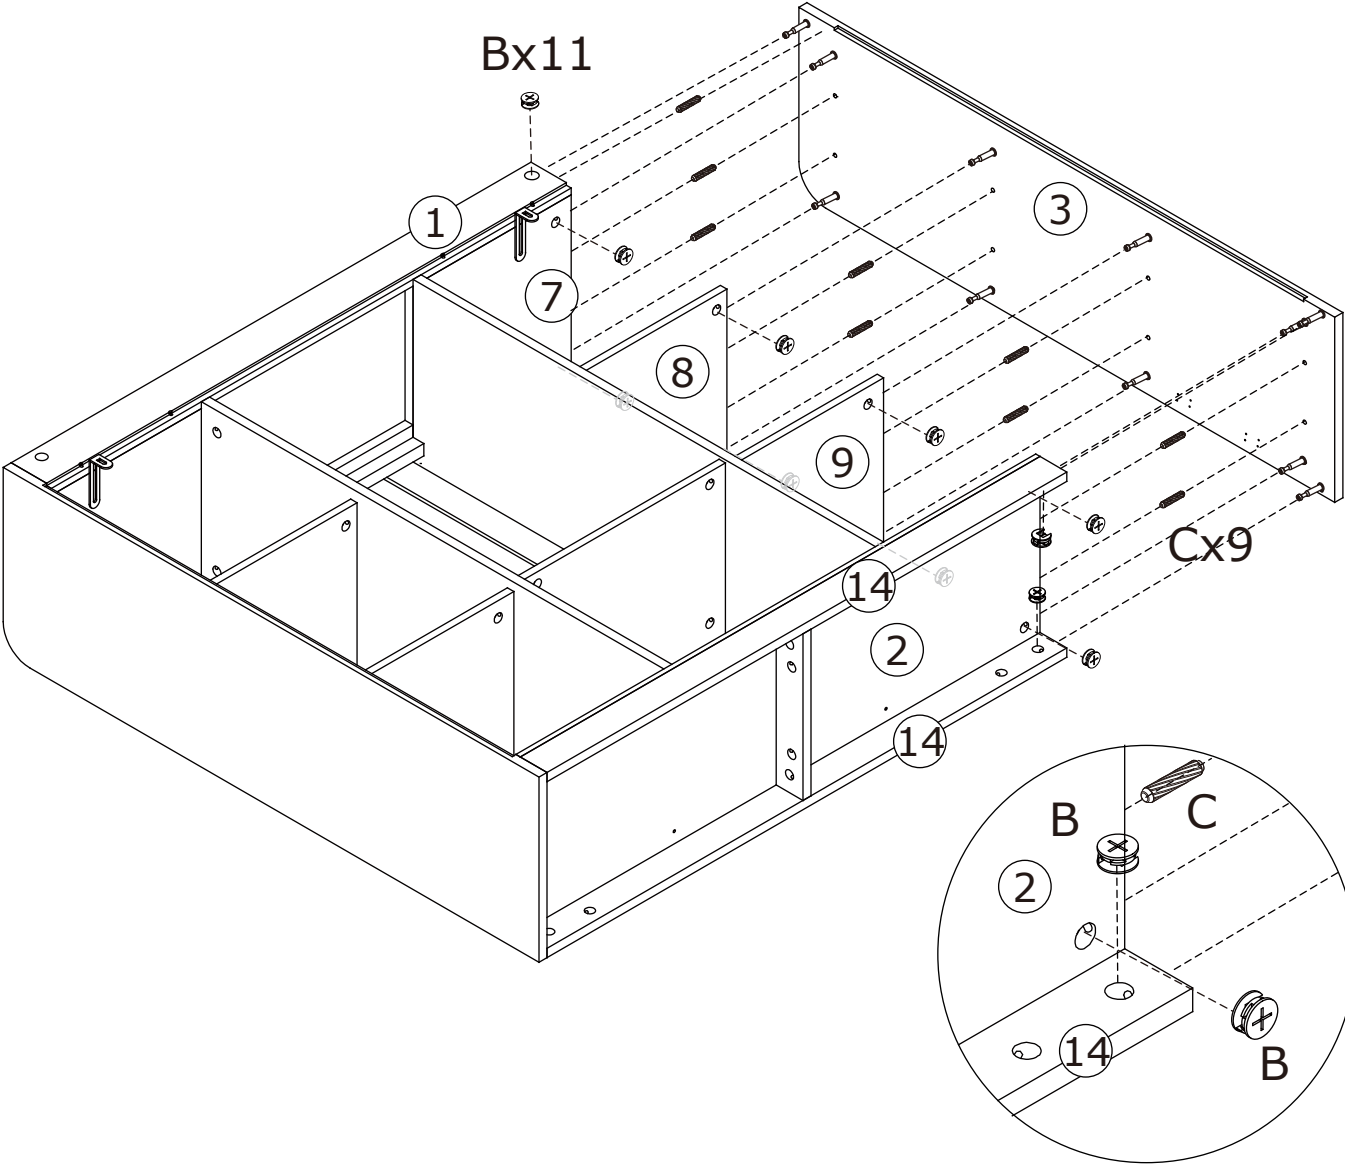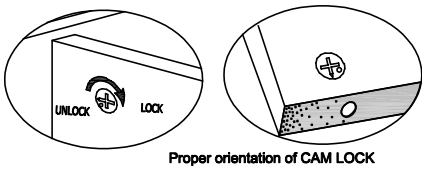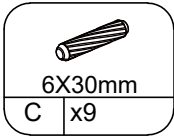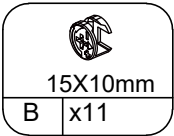


STEP 23





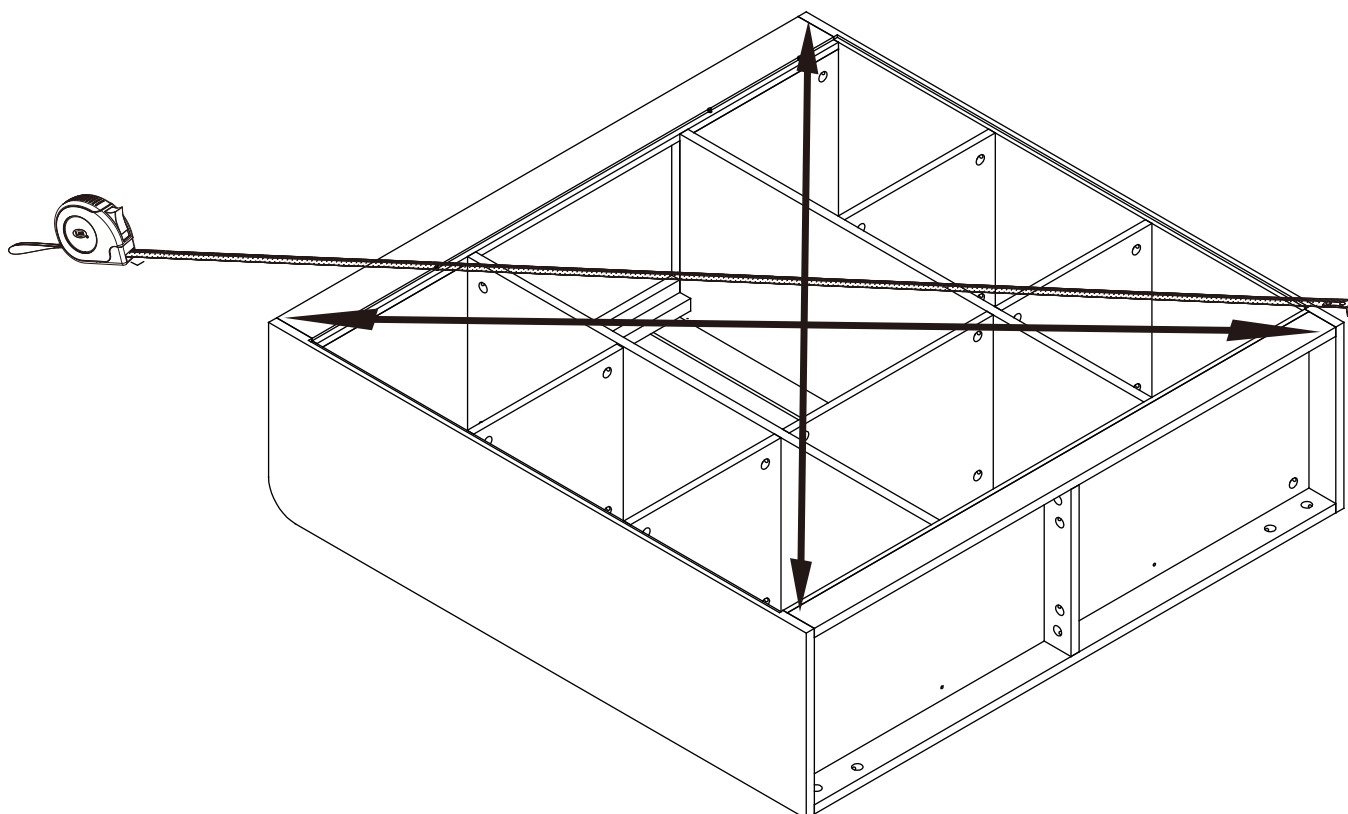


Before installing the back panel, please keep the diagonal distance consistent to avoid the impact on the subsequent installation of cabinet doors.



STEP 24

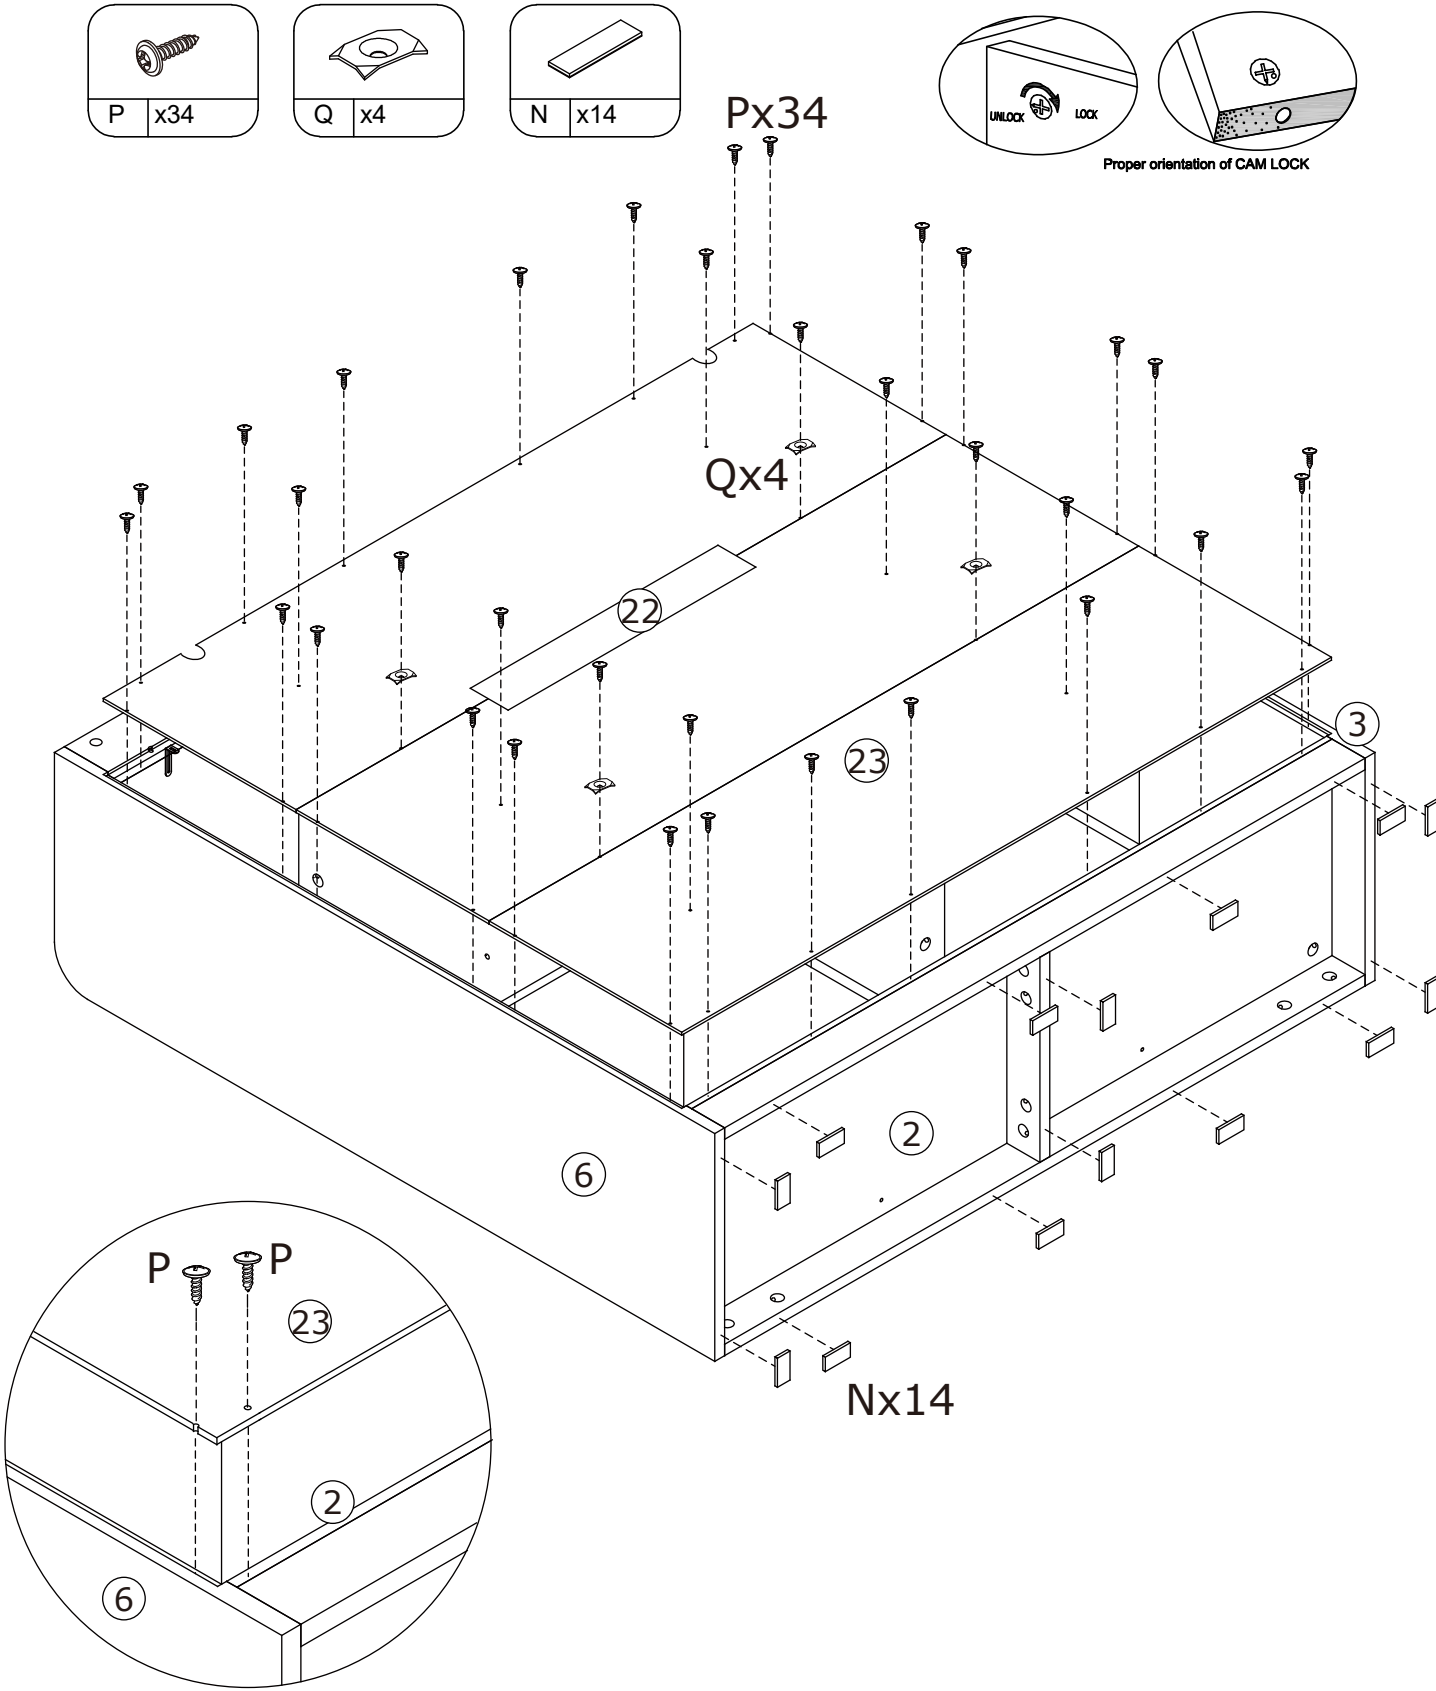



STEP 25

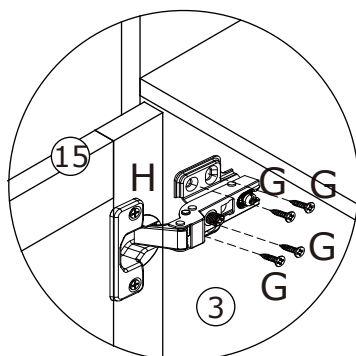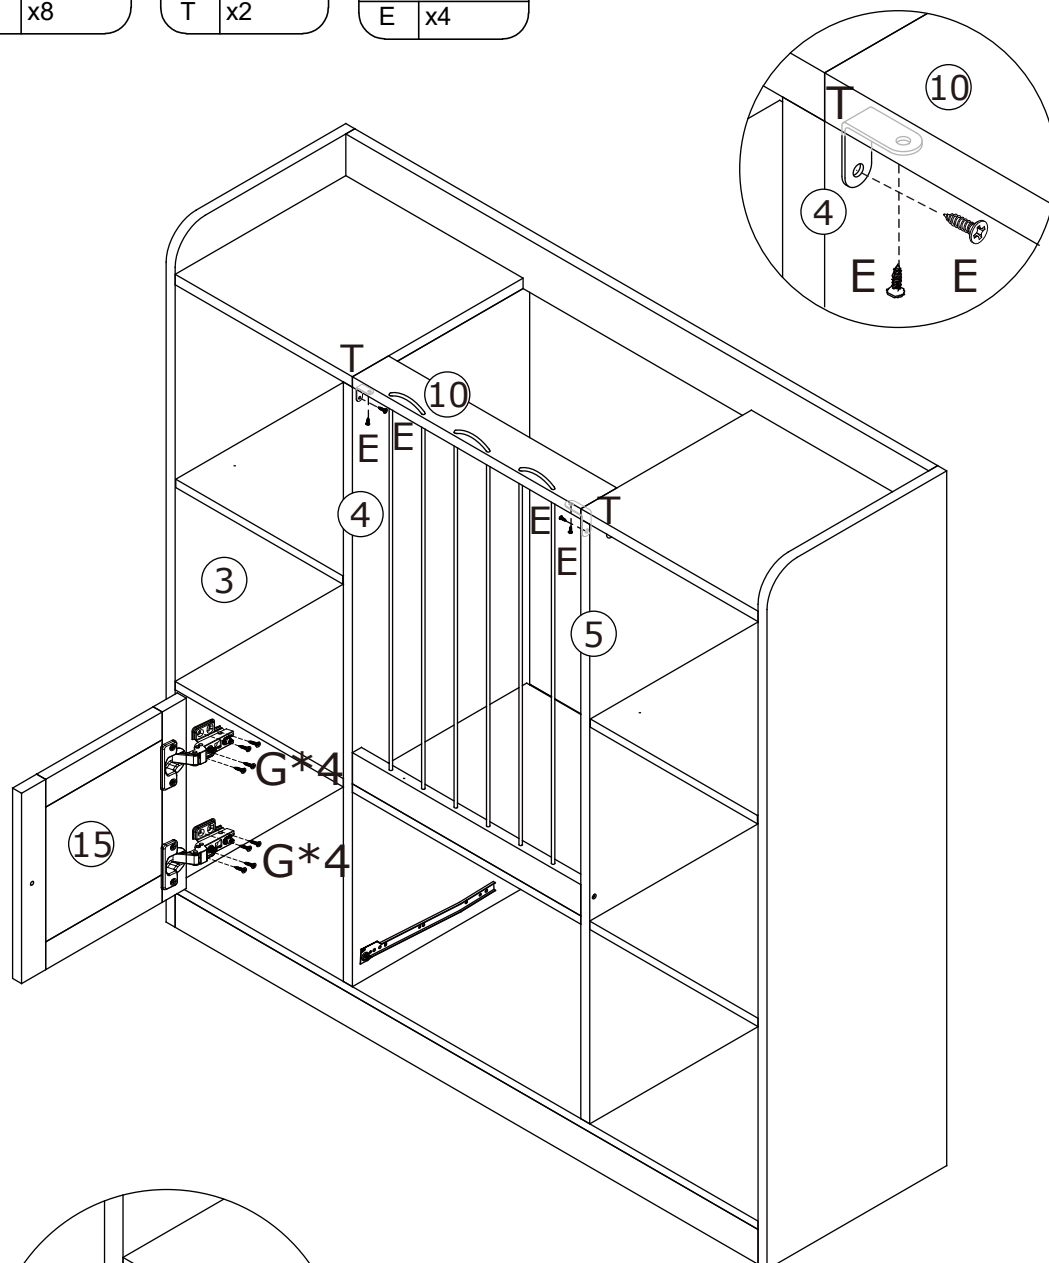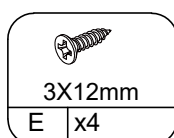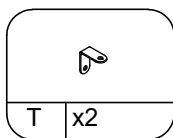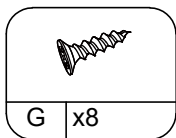

STEP 26

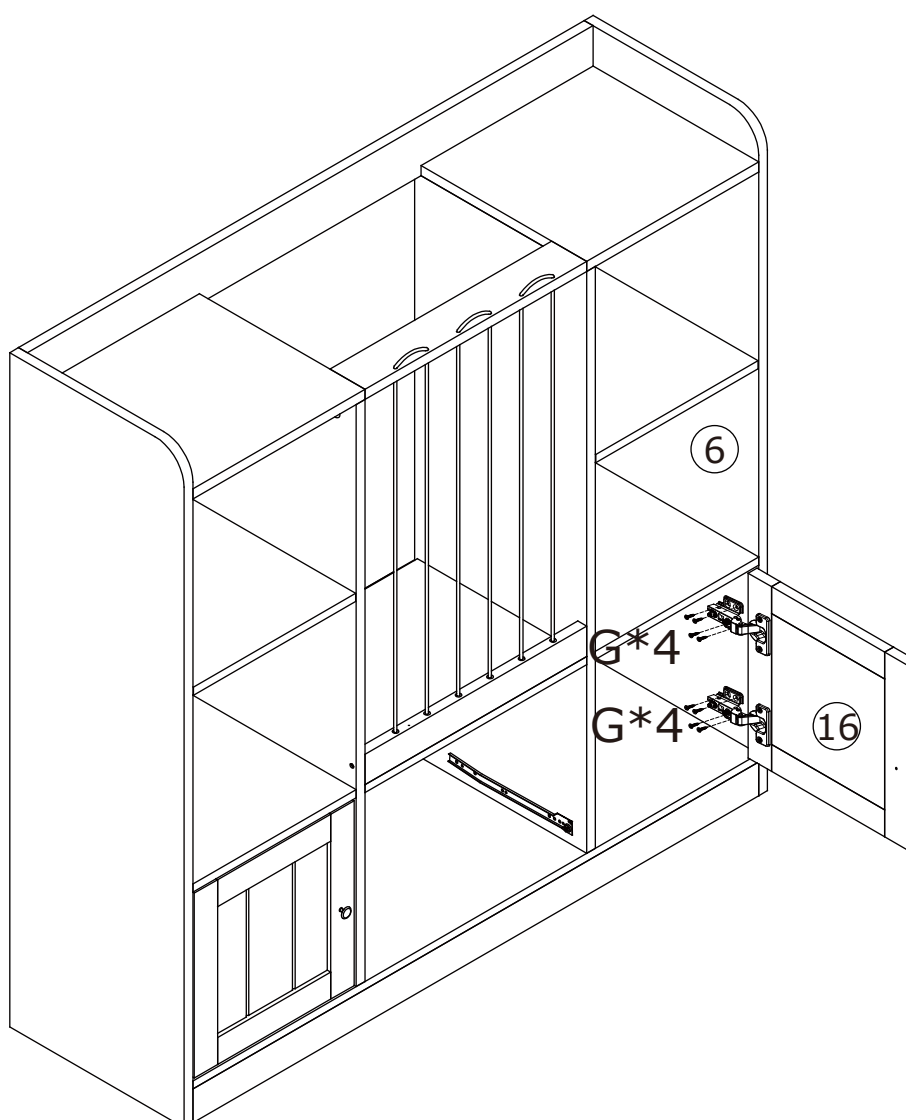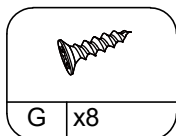


STEP 27

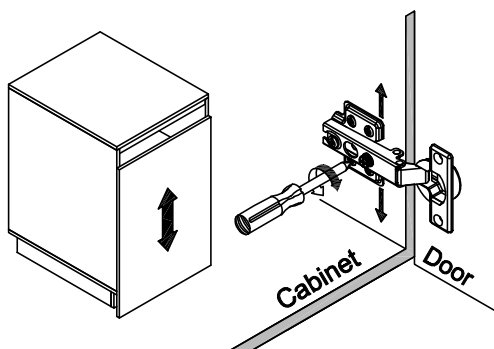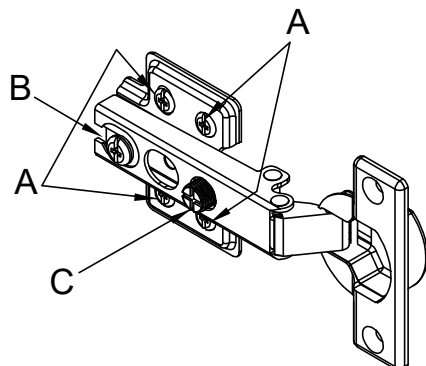


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

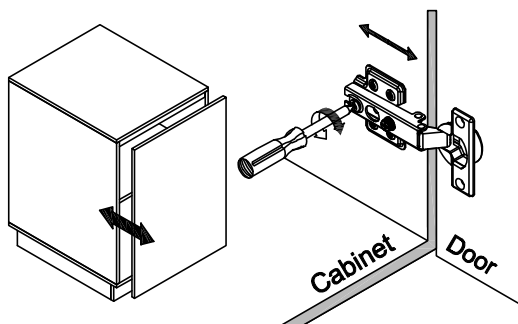

To adjust depth.












Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

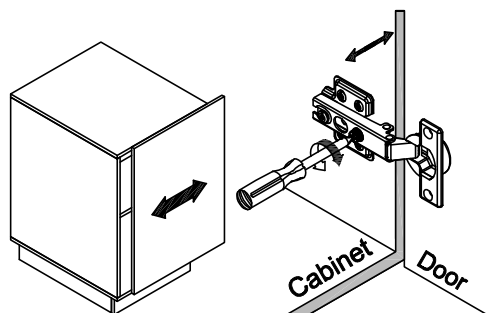



To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.



STEP 28

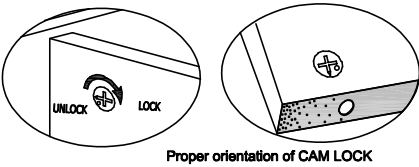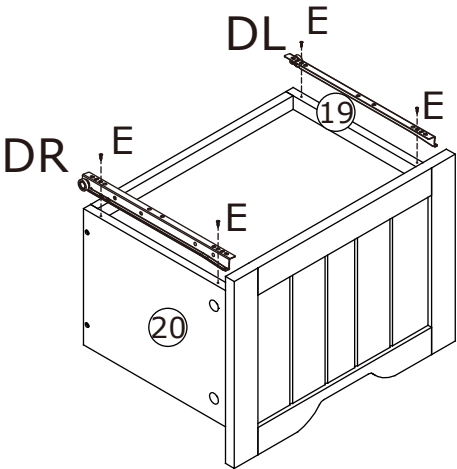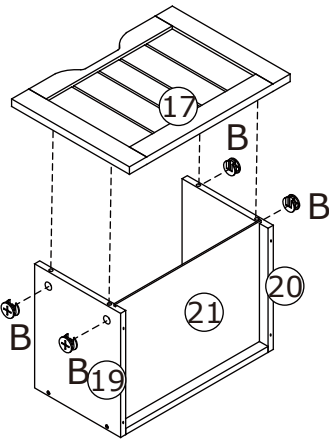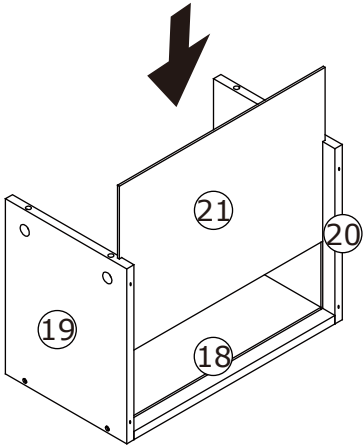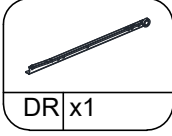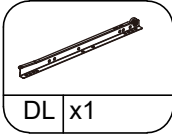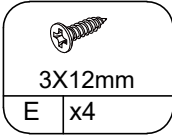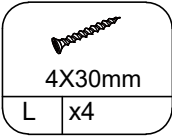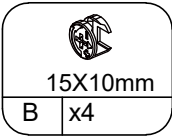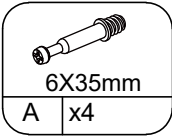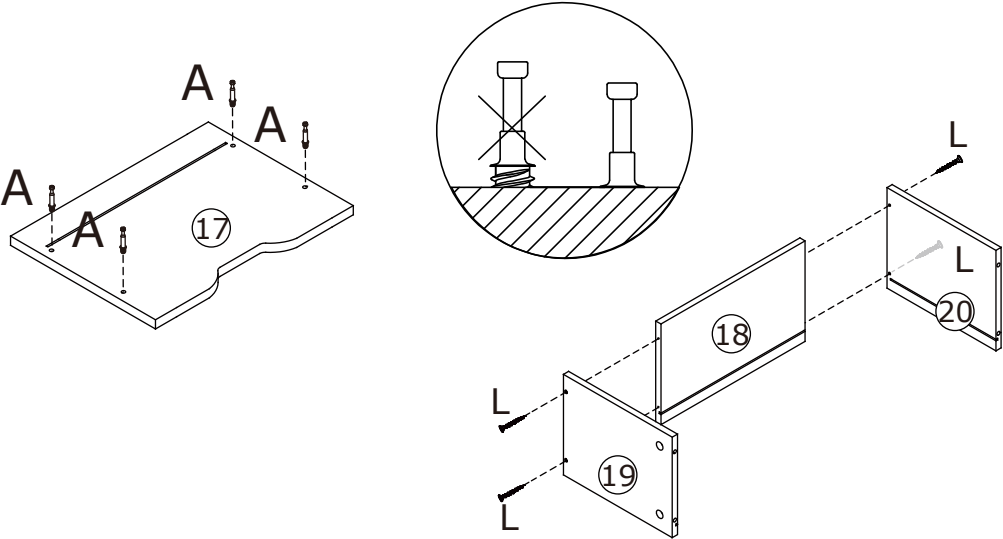

STEP 29

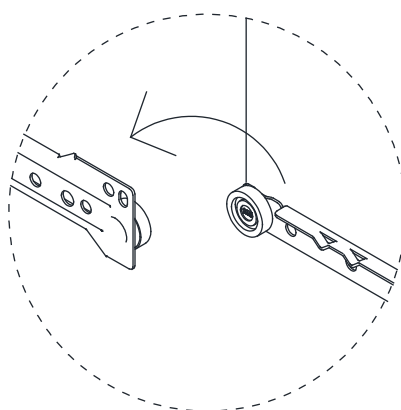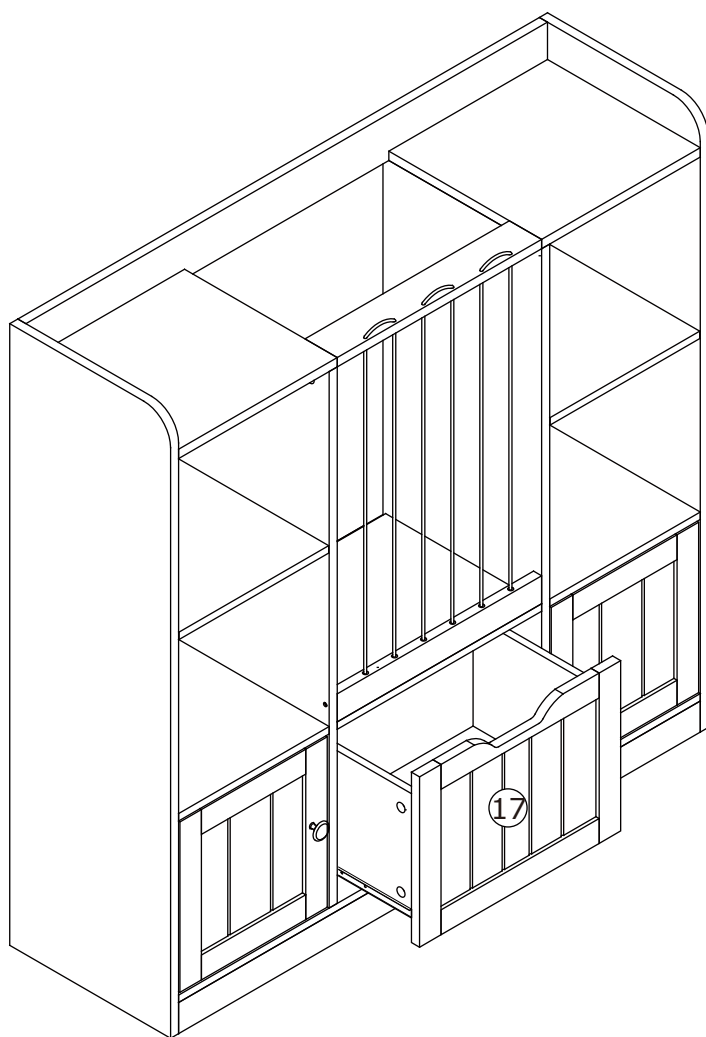

STEP 30

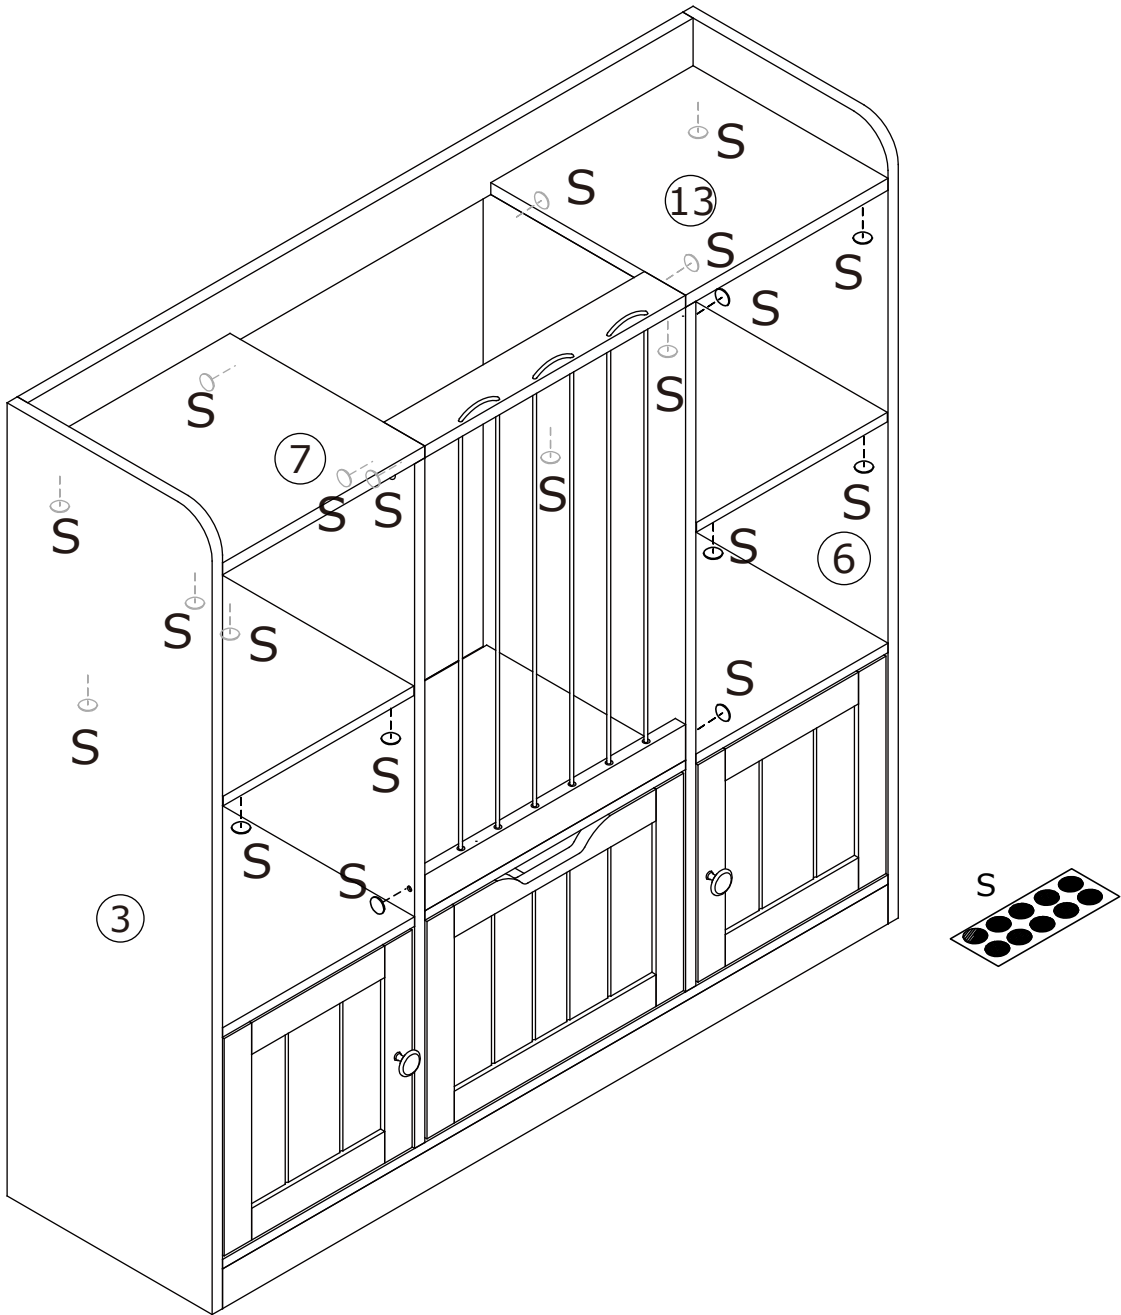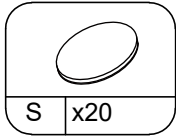

STEP 31

