


ASSEMBLY INSTRUCTIONS

Cabinet

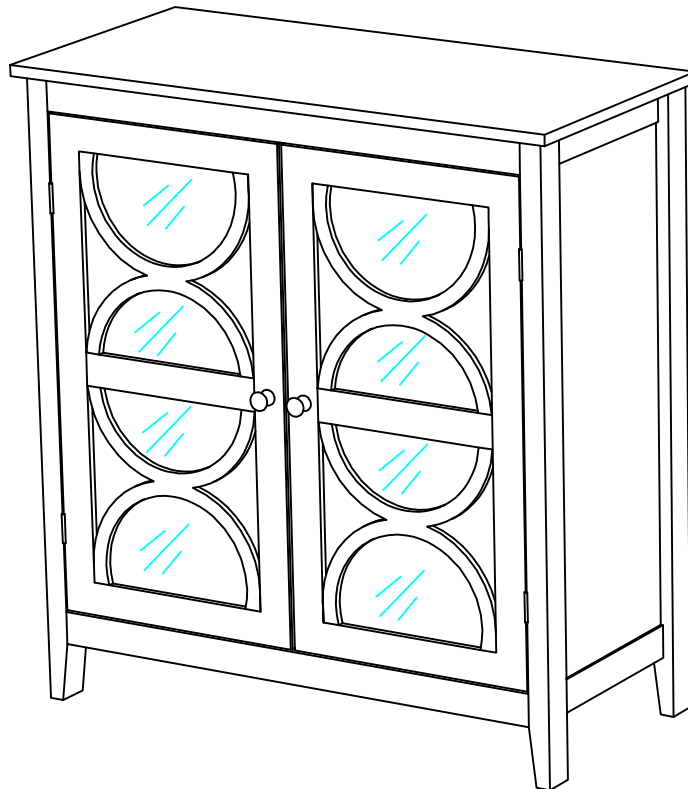

NOTE TO CUSTOMERS:

- For ease and speed of assemble we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

To insert a cam lock: (Please read below instructions before assembling)


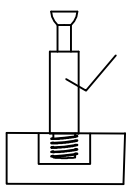


Diagram A

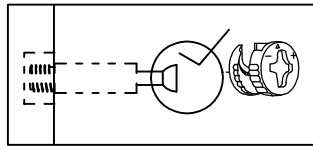

1. Insert cam screw into hole as shown in diagram A .


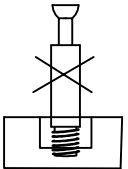


Diagram B

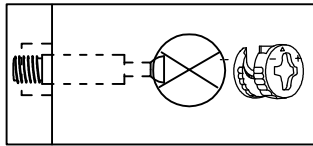

Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the
cam screw to be misaligned and unable to
interlock properly.



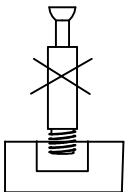



Diagram C

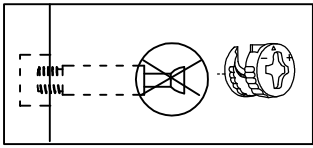

Also avoid inserting the cam screw too close to the
surface of the hole as shown in figure C, as this will
cause the cam lock to be too loose, and not interlock
properly.

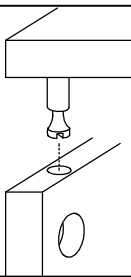


2. Connect the panels together.

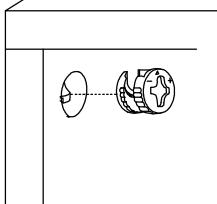

ARROW SIGN



3. When inserting the cam lock make sure the arrow
of the cam lock faces the cam screw.

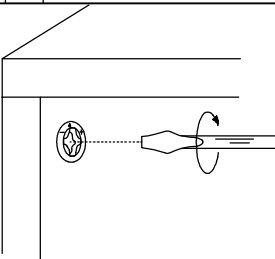







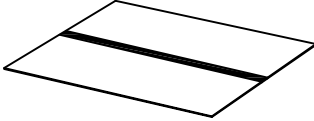


4. To tighten the cam lock turn the cam lock clockwise
90-180 degree or until the arrow is facing opposite
the place cam lock was inserted.

**NOTE: DO NOT USE AN AUTOMATIC
SCREWDRIVER TO TIGHTEN CAM LOCKS.**







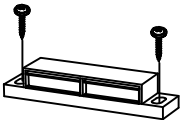


Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

Part List


<p>A1. Quantity of 1</p>  <p>Left Frame</p>	<p>A2. Quantity of 1</p>  <p>Right Frame</p>	<p>A3. Quantity of 2</p>  <p>Shelf Panel</p>	<p>A4. Quantity of 1</p>  <p>Apron</p>
<p>A5. Quantity of 1</p>  <p>Top Panel</p>	<p>A6. Quantity of 1</p>  <p>Bottom Panel</p>	<p>A7. Quantity of 1</p>  <p>Back Panel</p>	<p>A8. Quantity of 1</p>  <p>Left Door</p>
<p>A9. Quantity of 1</p>  <p>Right Door</p>			

Hardware List

<p>B1. Quantity of 12</p>  <p>Camlock&Cambolt</p>	<p>B2. Quantity of 9</p>  <p>Wood Dowel</p>	<p>B3. Quantity of 16</p>  <p>Screw</p>	<p>B4. Quantity of 8</p>  <p>Screw</p>	<p>B5. Quantity of 2</p>  <p>Knob</p>
<p>B6. Quantity of 8</p>  <p>Shelf Support</p>	<p>B7. Quantity of 1</p>  <p>Magnet</p>	<p>B8. Quantity of 1</p>  <p>Anchor with screw</p>	<p>B9. Quantity of 1</p>  <p>Anti-tip kit</p>	




Step 1

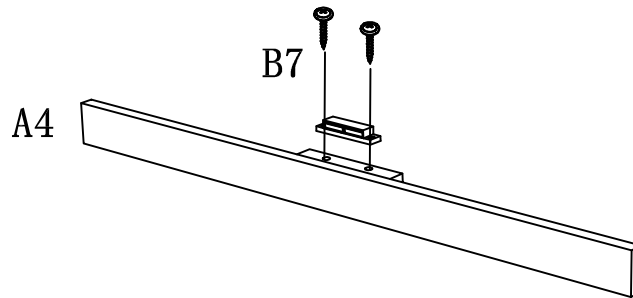
B7:  1SET



Attach Magnet B7 to Apron A4 using included screws.




Step 2


B1:   3SETS
B2:  2PCS

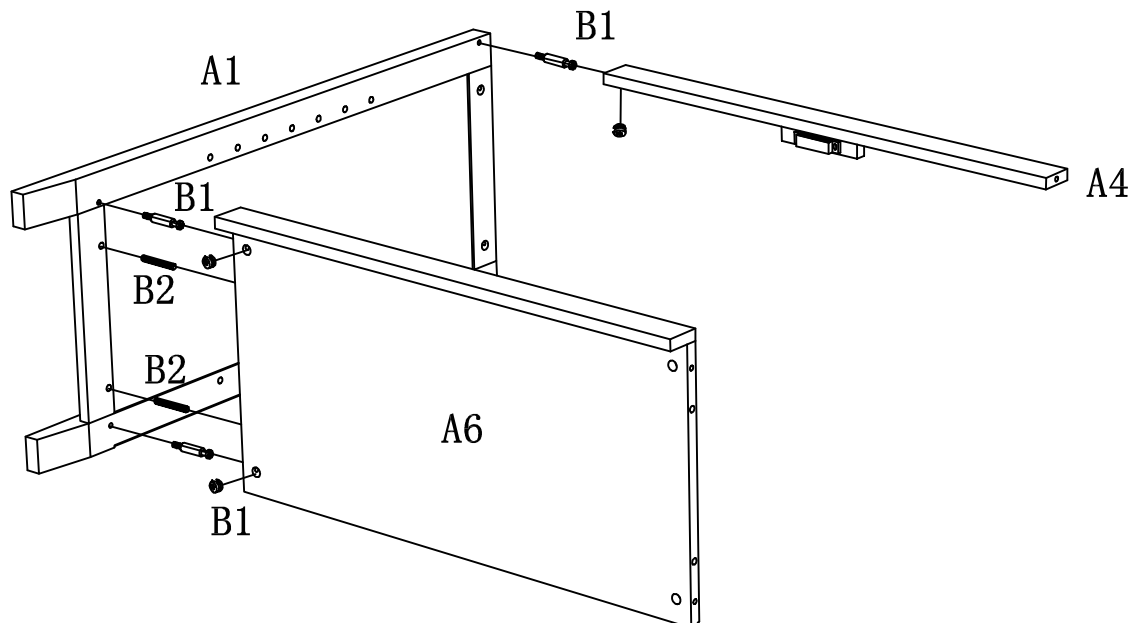

Assemble Apron A4 and Bottom Panel A6 to Left Side Frame A1 using Cambolts&Camlocks B1 and Wood Dowels B2.




Step 3


B1:			3SETS
B2:			2PCS

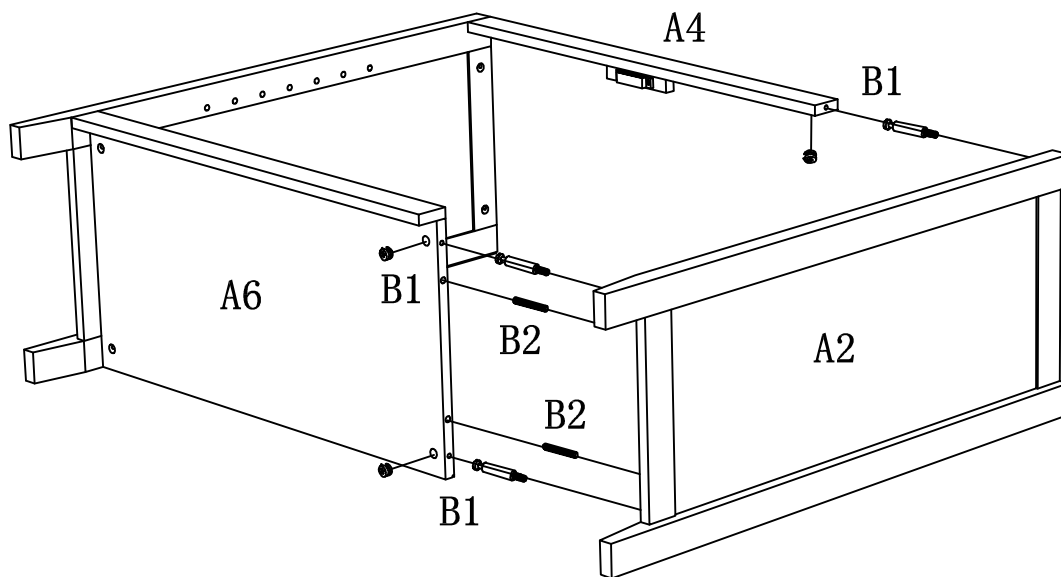

Assemble Right Side Frame A2 to Apron A4 and Bottom Panel A6 using Cambolts&Camlocks B1 and Wood Dowels B2.

Step 4


B1:			6SETS
B2:			5PCS

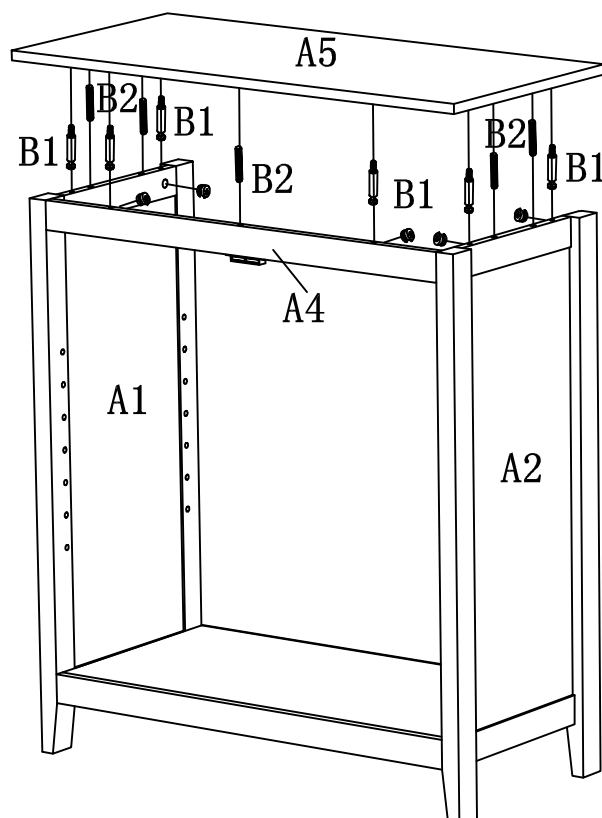

Attach Top Panel A5 to Side Frames A1&A2 and Apron A4 using Cambolts&Camlocks B1 and Wood Dowels B2.

Step 5


B3:  16PCS

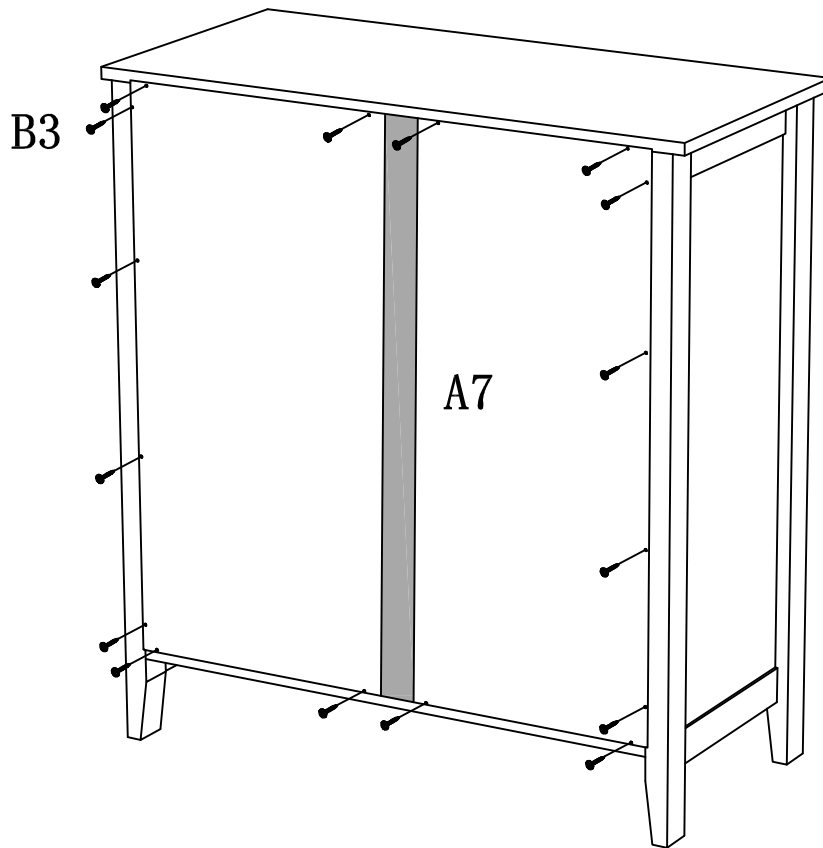

Attach Back Panel A7 to the unit using Screws B3.


Step 6

B6:  8PCS

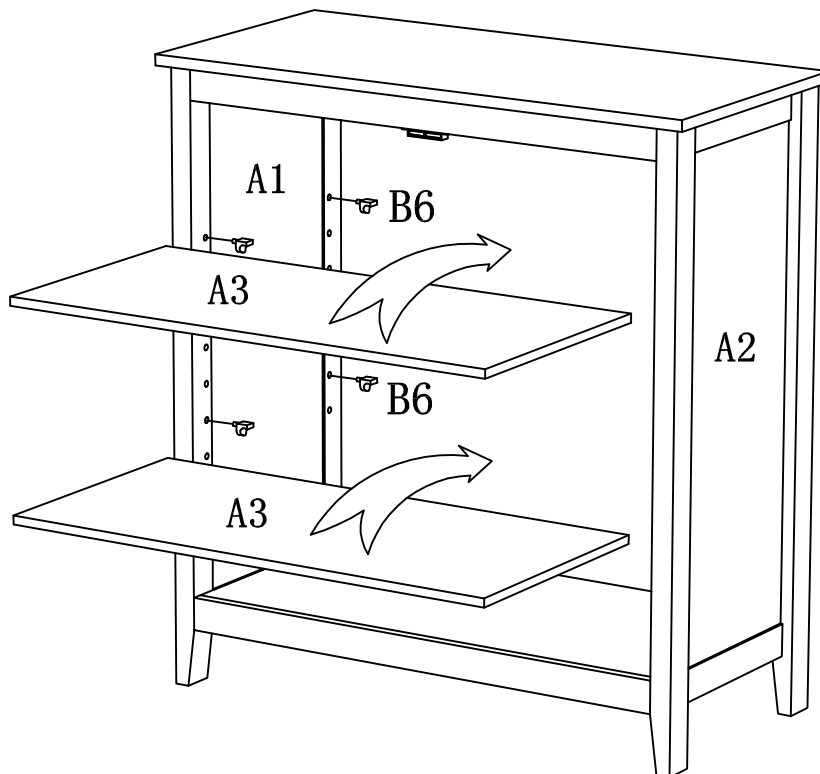

Insert Shelf Supports B6 into the holes on the Side Frames A1&A2, then place Shelf Panels A3 onto the Shelf Supports B6.

Step 7



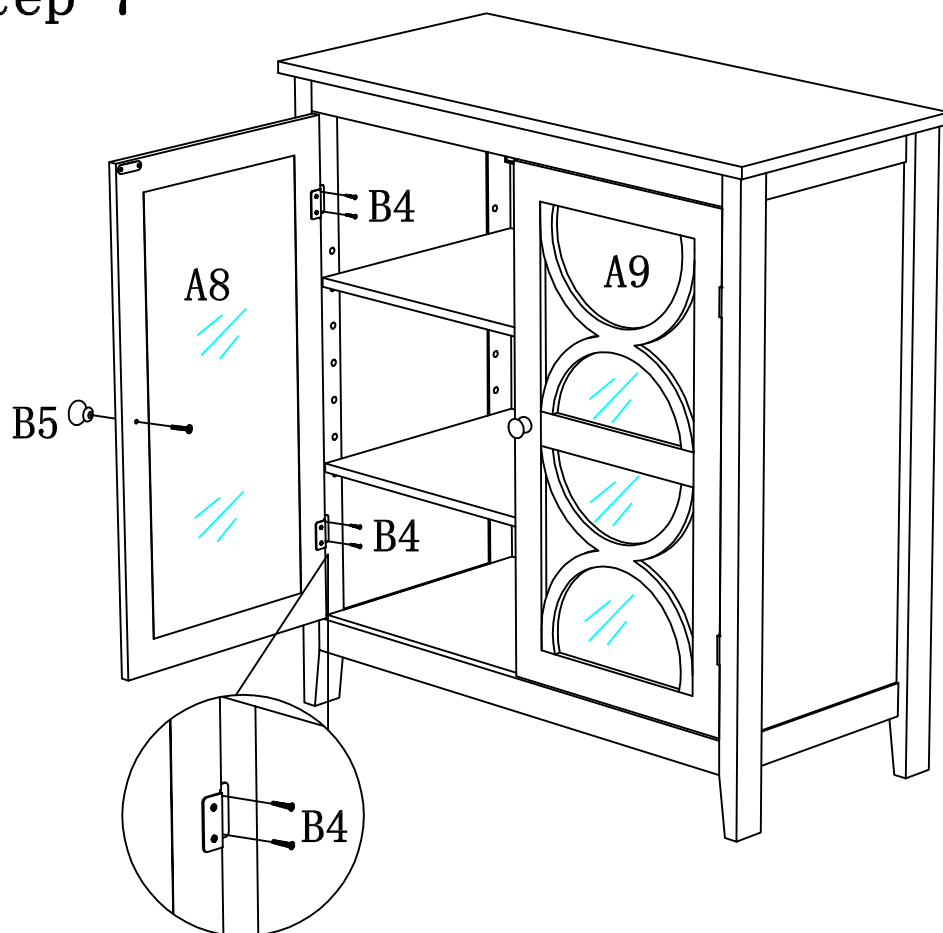


B4:		8PCS
B5:		2SETS

Assemble Doors A8&A9 to Side Frames A1&A2 using Screws B4, then attach Knobs B5 to Doors A8&A9 using included bolts.









Step 8

B8:		1SET
B9:		1SET

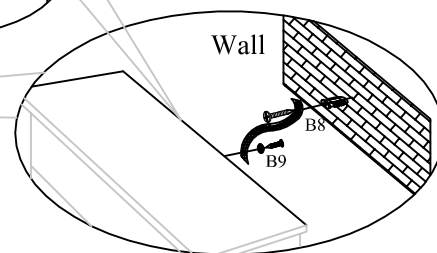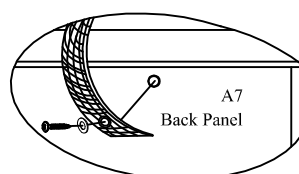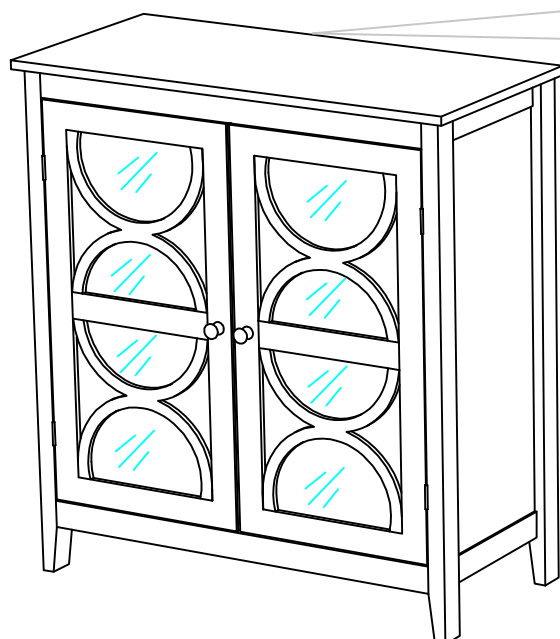

For your safety, please attach the unit to the wall by Anchor with screw B8 and Anti-tip kit B9.

APPENDIX: Dimension of Hardwares in this AI.
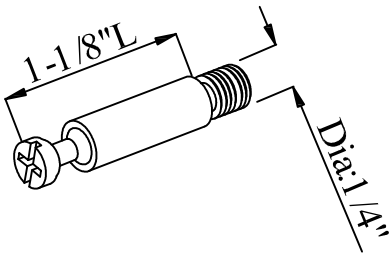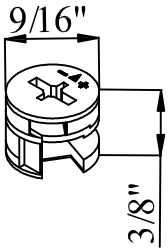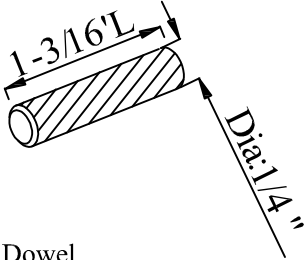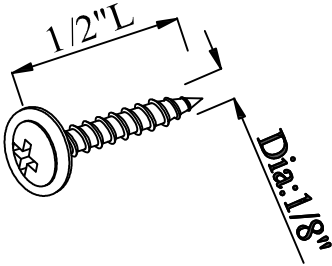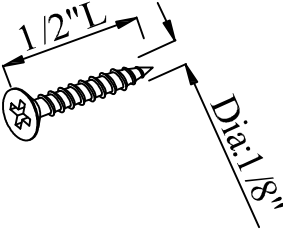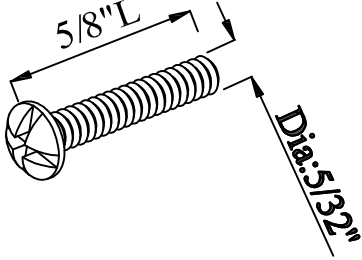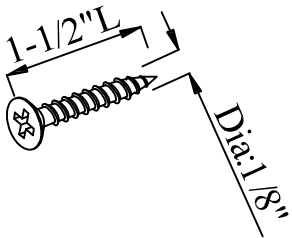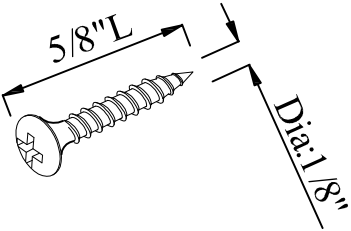
<div>B1.</div> <div></div> <div>Cambolt</div>	<div>B1.</div> <div></div> <div>Cam-nut</div>	<div>B2.</div> <div></div> <div>Wood Dowel</div>
<div>B3&B7.</div> <div></div> <div>Screw</div>	<div>B4.</div> <div></div> <div>Screw</div>	<div>B5.</div> <div></div> <div>Bolt for Knob</div>
<div>B8.</div> <div></div> <div>Screw</div>	<div>B9.</div> <div></div> <div>Screw</div>	