





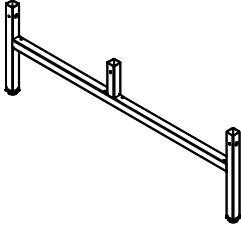


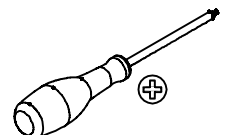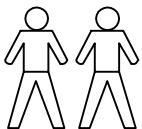








Metal Storage Locker Instructions

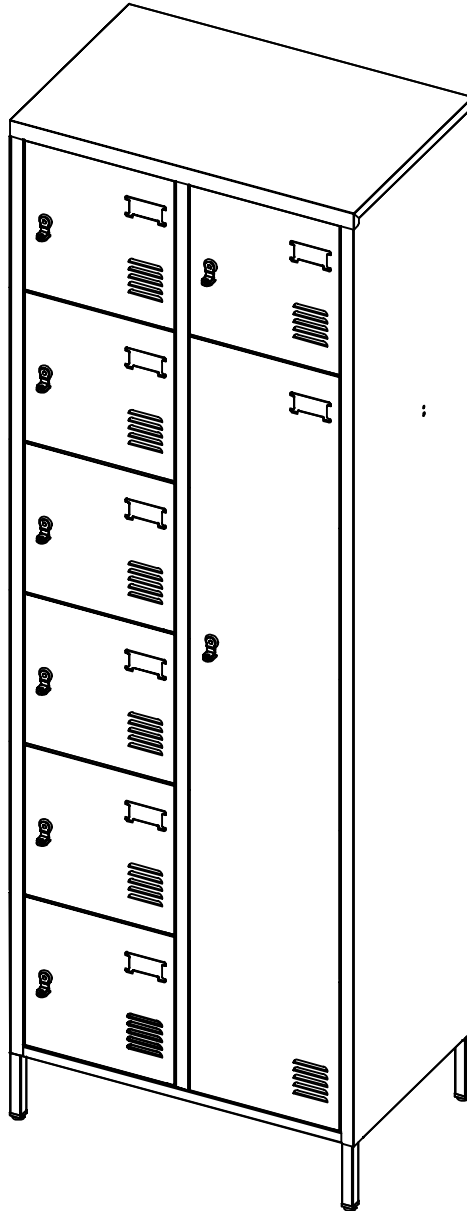


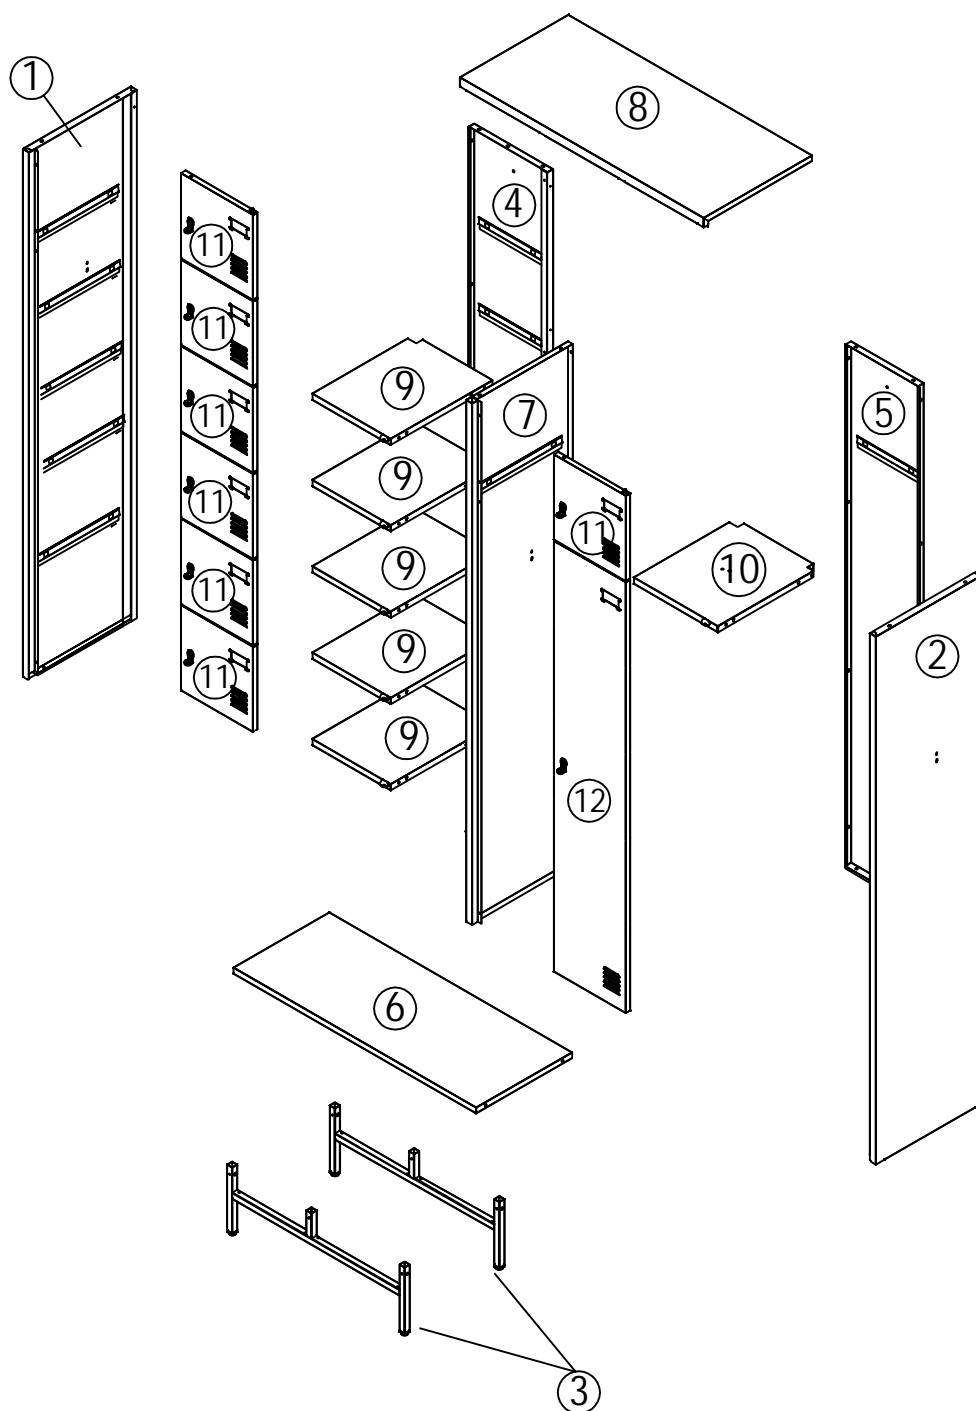

Accessories

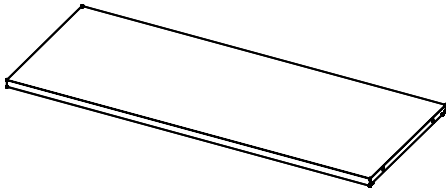
1-Left Side Panel	1PC	2-Right Side Panel	1PC
			
3-Cross Leg	2PCS	4-Left Back Panel	1PC
			
5-Right Back Panel	1PC	6-Bottom Panel	1PC
			

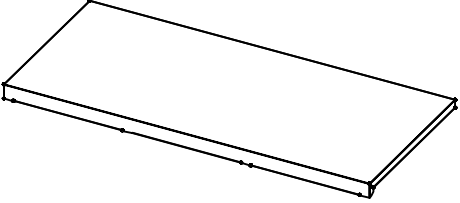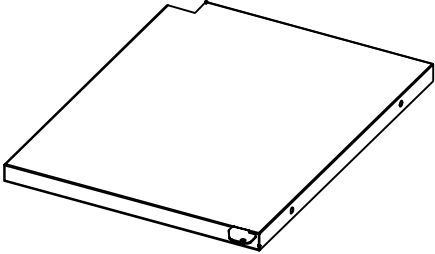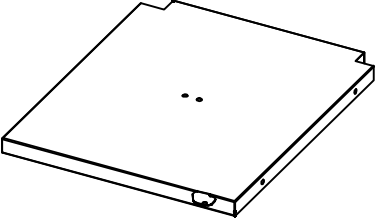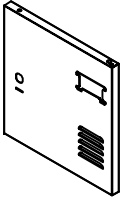7-Middle Side Panel	1PC	8-Top Panel	1PC
			
9-Left Shelf	5PCS	10-Right Shelf	1PC
			
11-Small Door	7PCS	12-Long Door	1PC
			

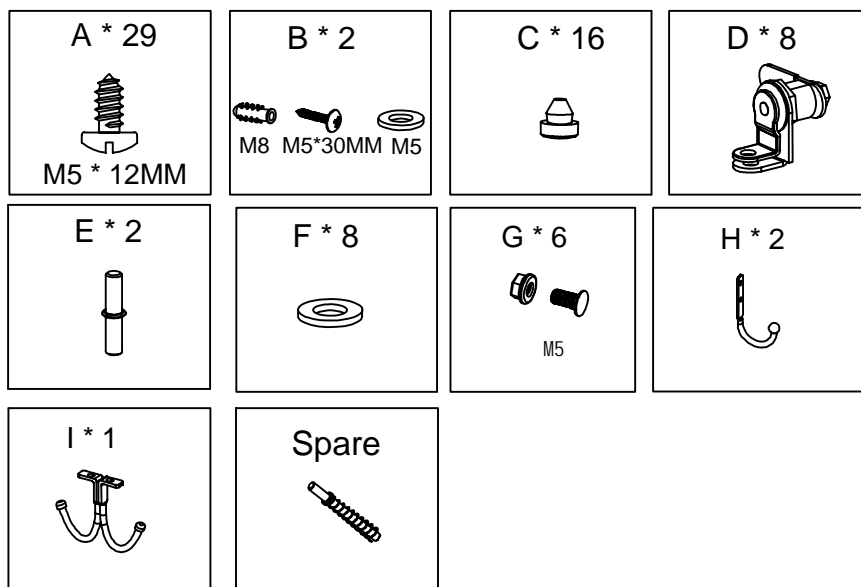


Installation Steps


Step 1: Put two cross legs 3 on a flat surface.

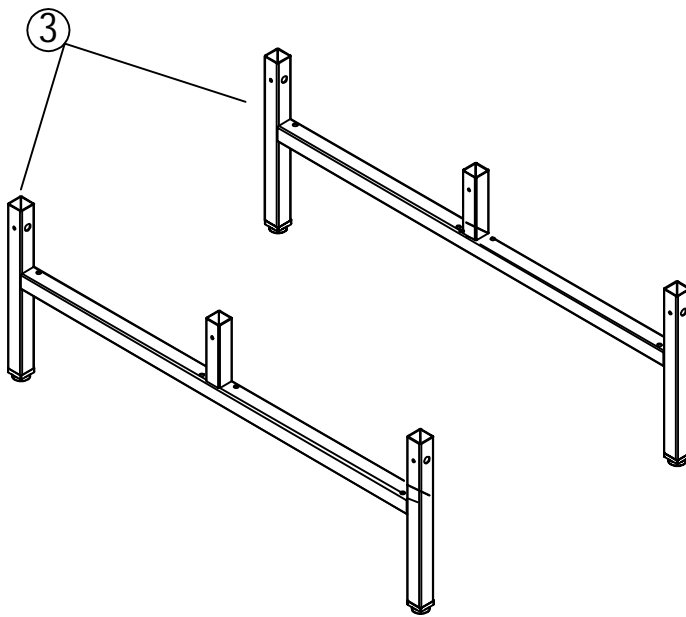



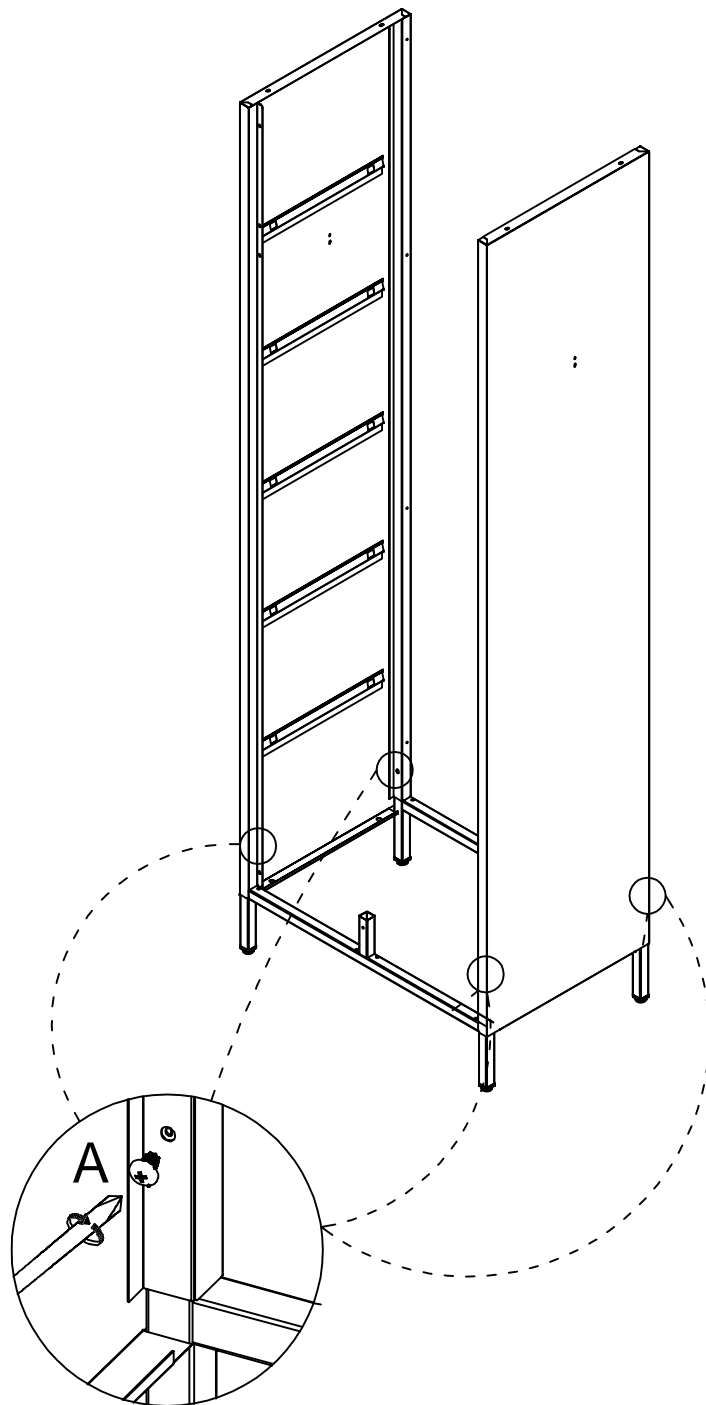
Step 2: Insert left side panel 1 into the cross legs 3 on the left

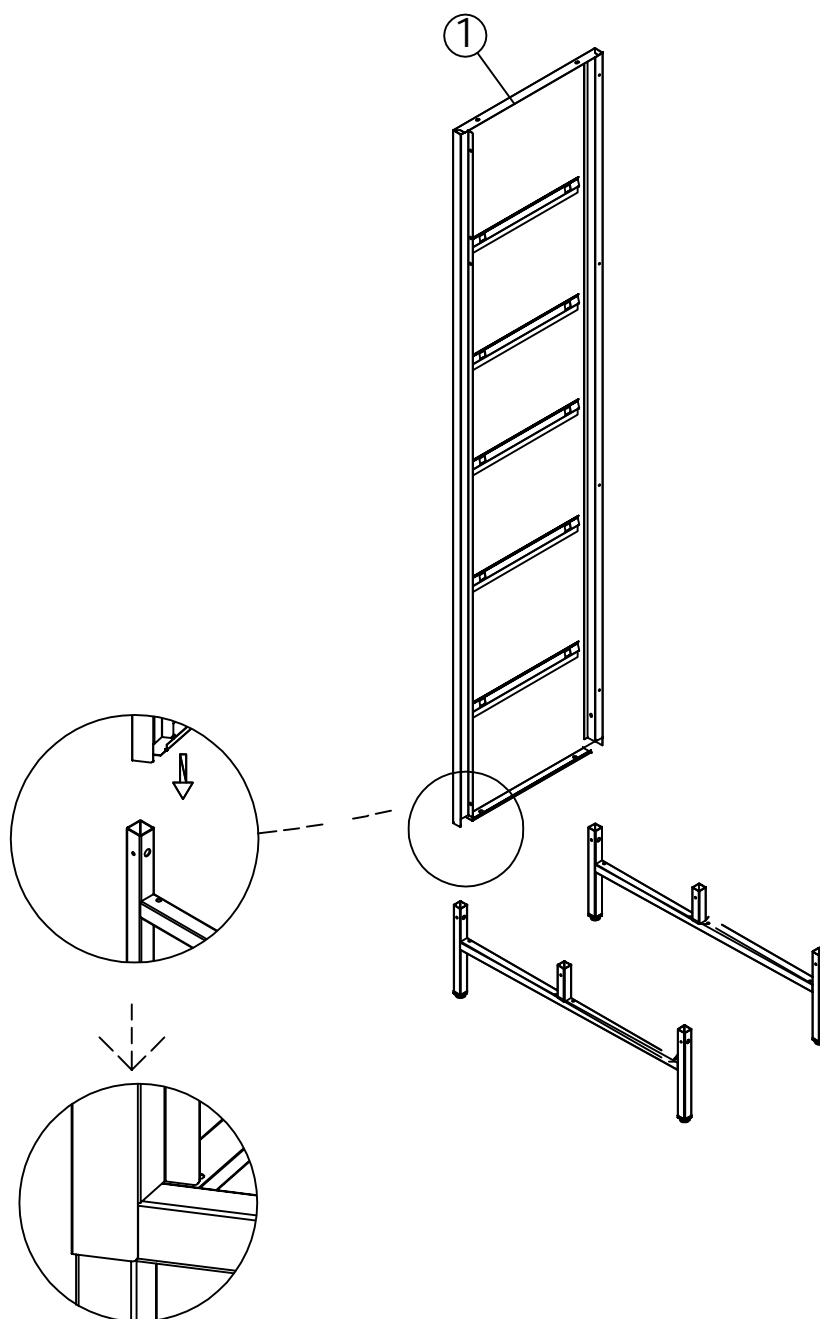

Step 3: Insert right side panel 2 into the cross legs 3 on the right

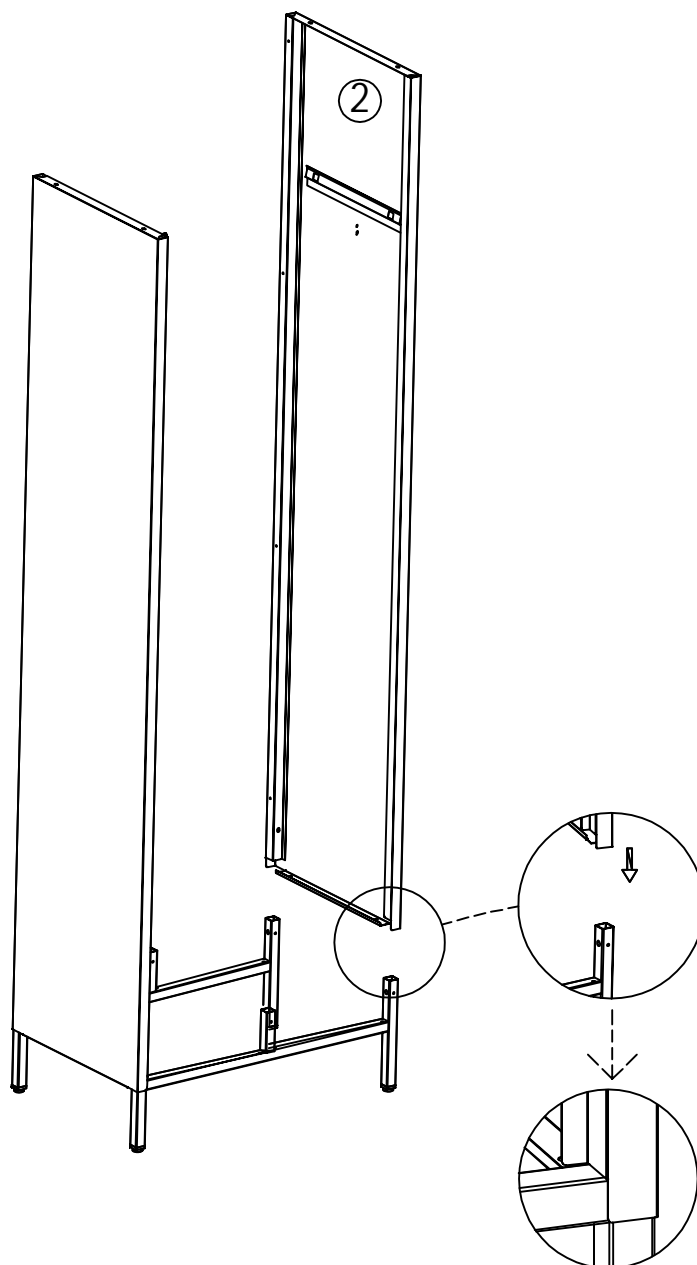

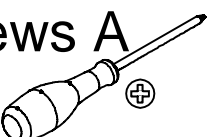A*4	Step 4: Fix 1, 2 and 3 with screws A	
 M5*12MM		




A*4



M5*12MM

Step 5: Insert left back panel 4 into the cross leg 3 and connect it with 1 by screws A


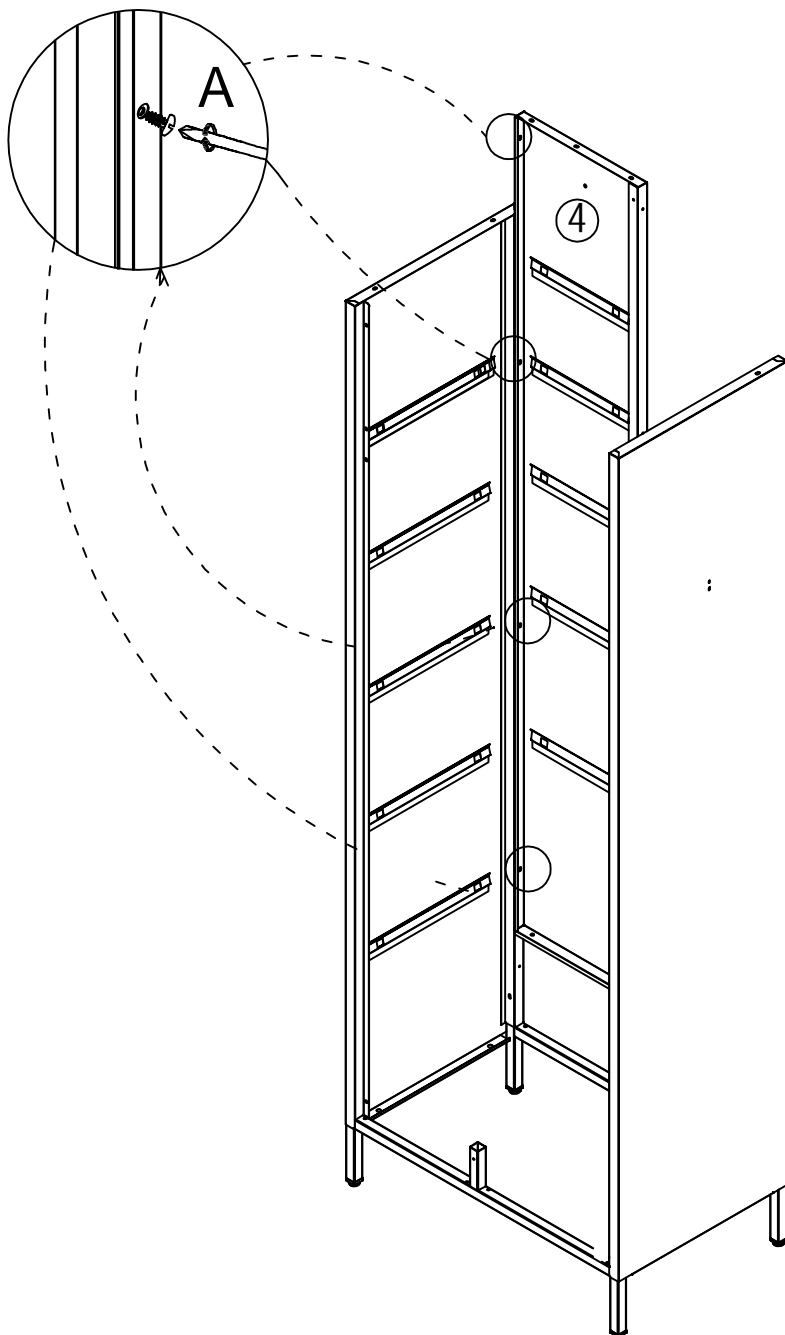


A*8




M5*12MM

Step 6: Connect right back panel
5 with 4 and 2 by screws A

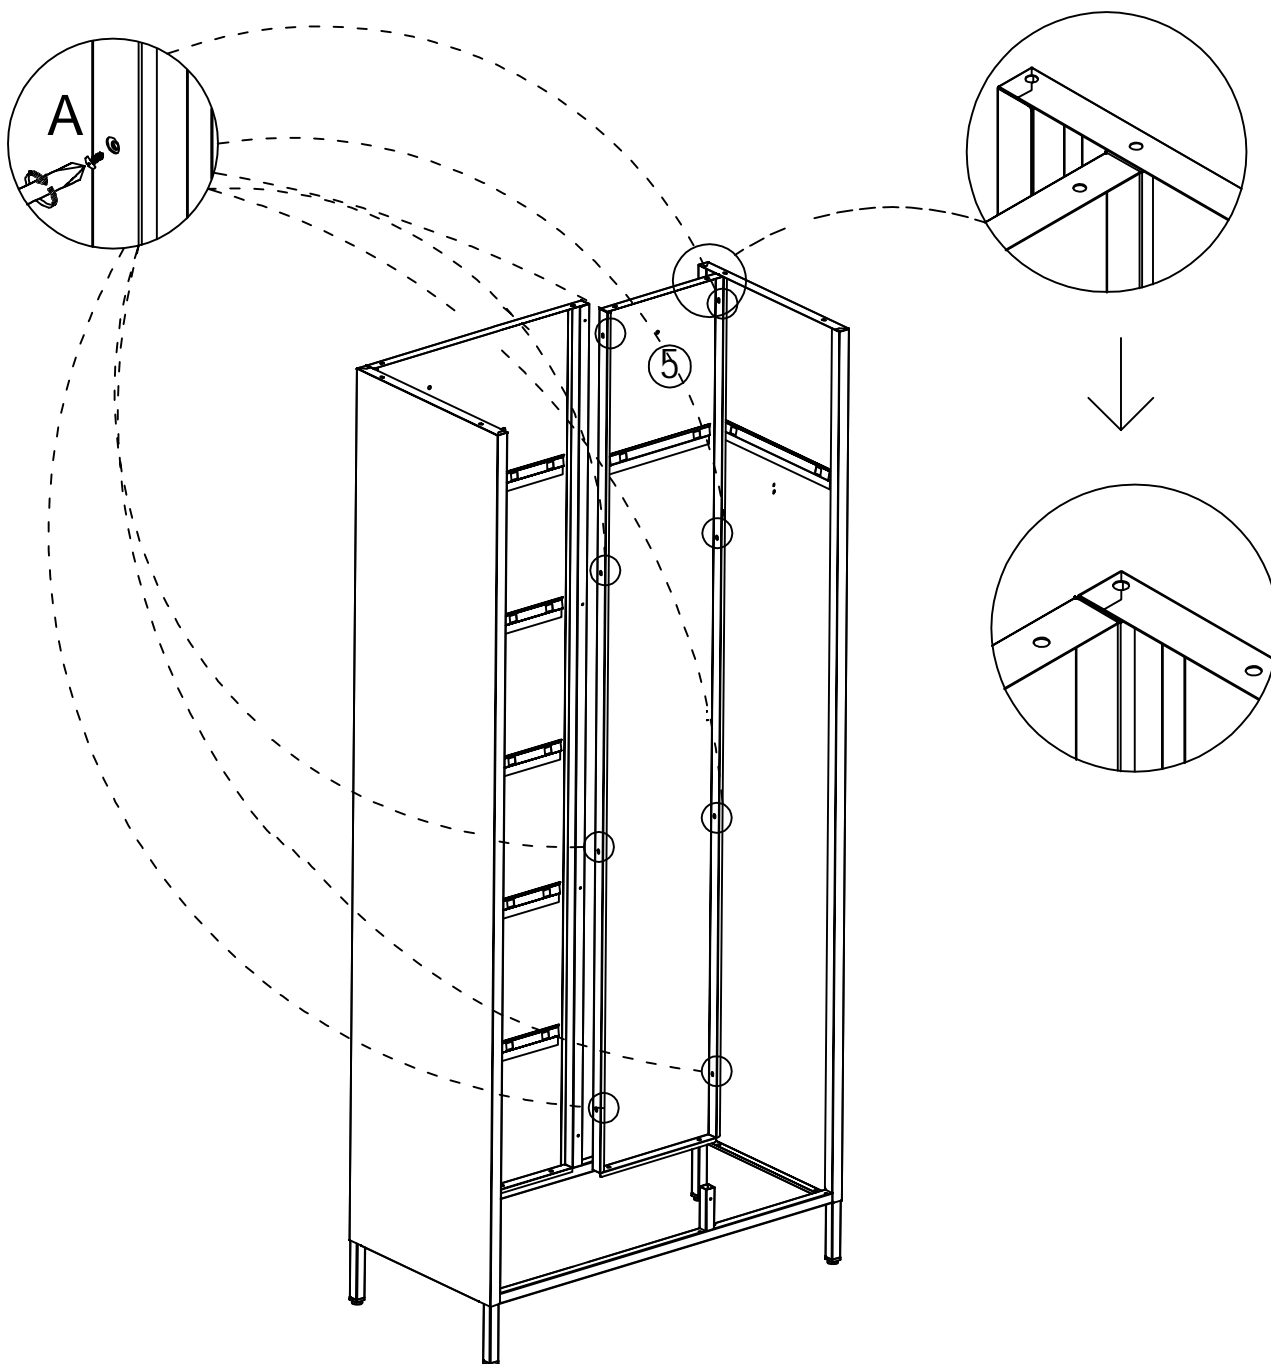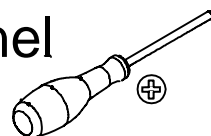

Step 7: Put the bottom panel on cross legs

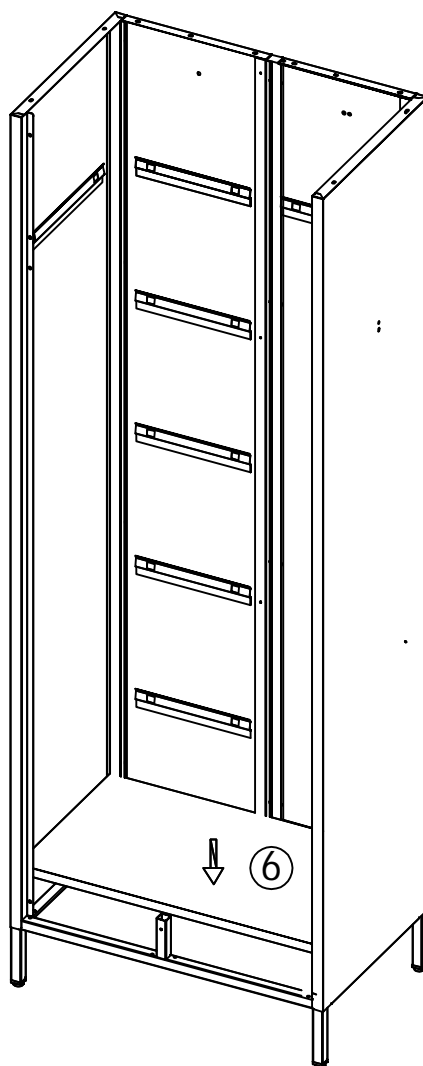




A*5




M5*12MM

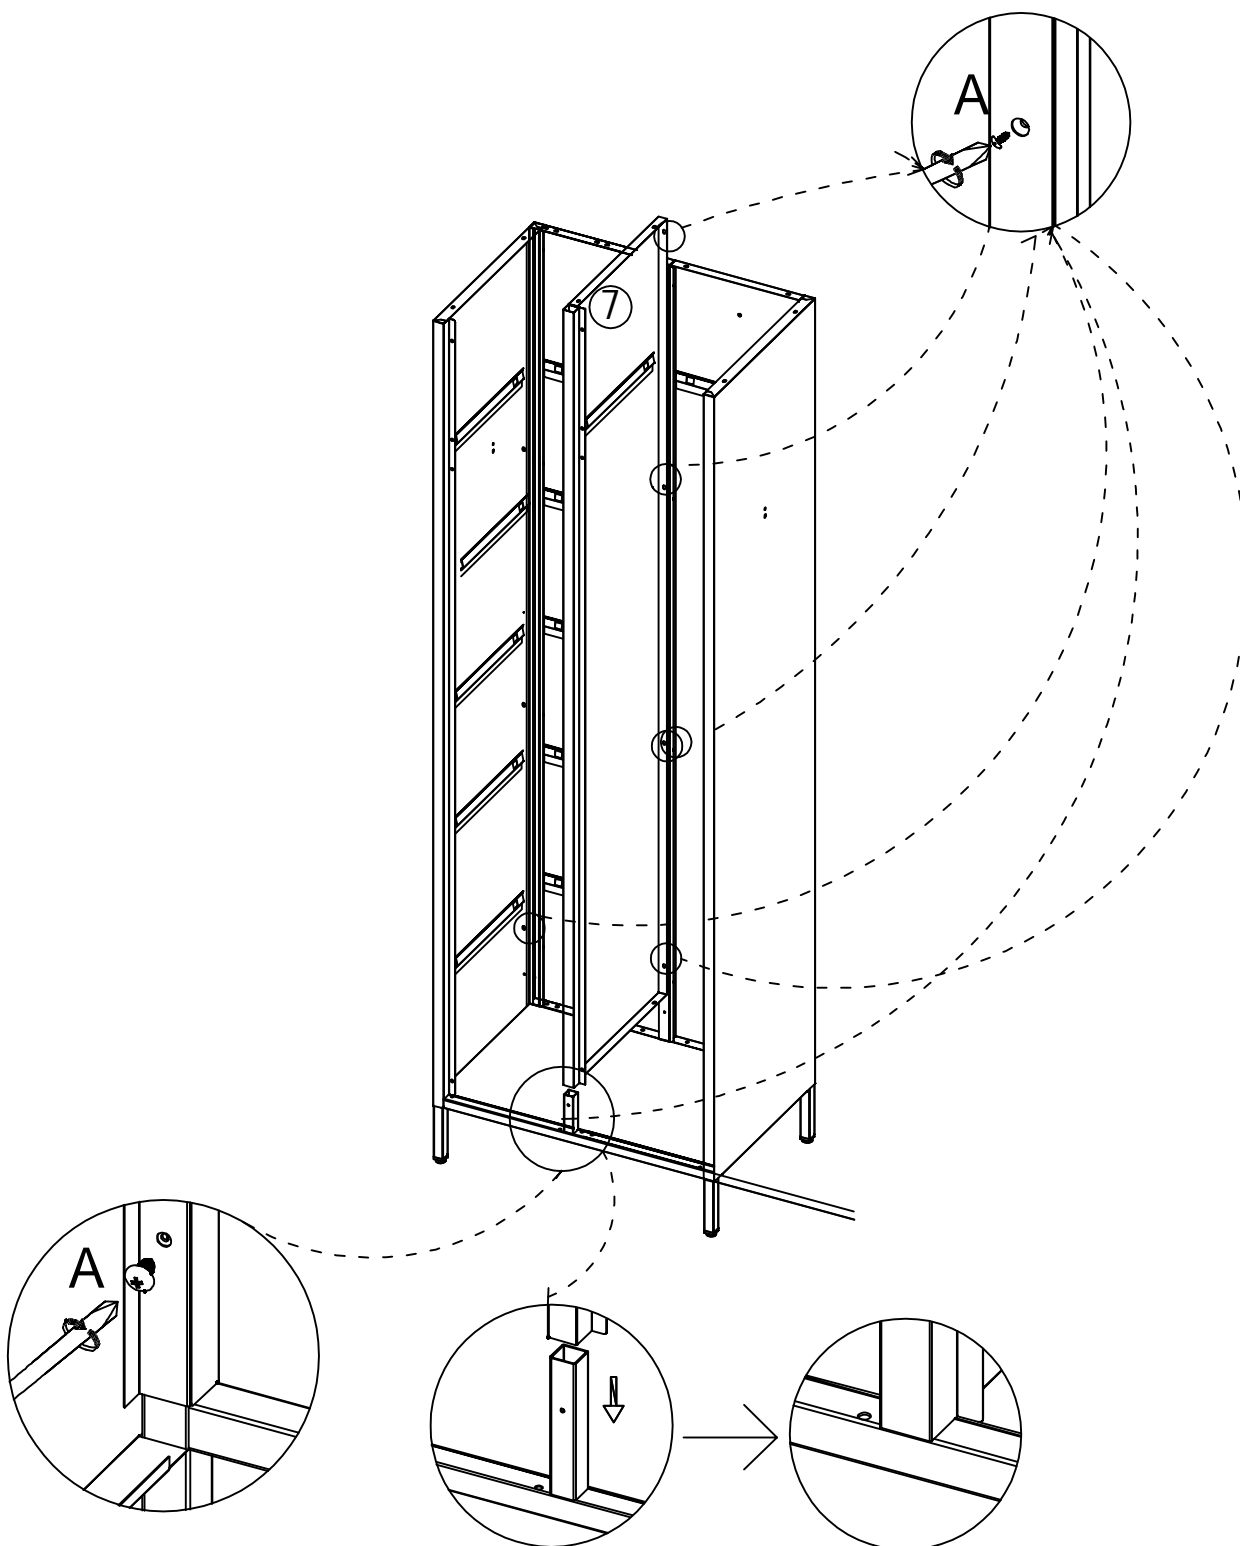
Step 8: Insert middle side panel 7 into the cross legs 3 and connect them with back panels by screws A




G*4	H*2	Step 9: Attach hooks H on the side panels 7 and 2 with screws G
		

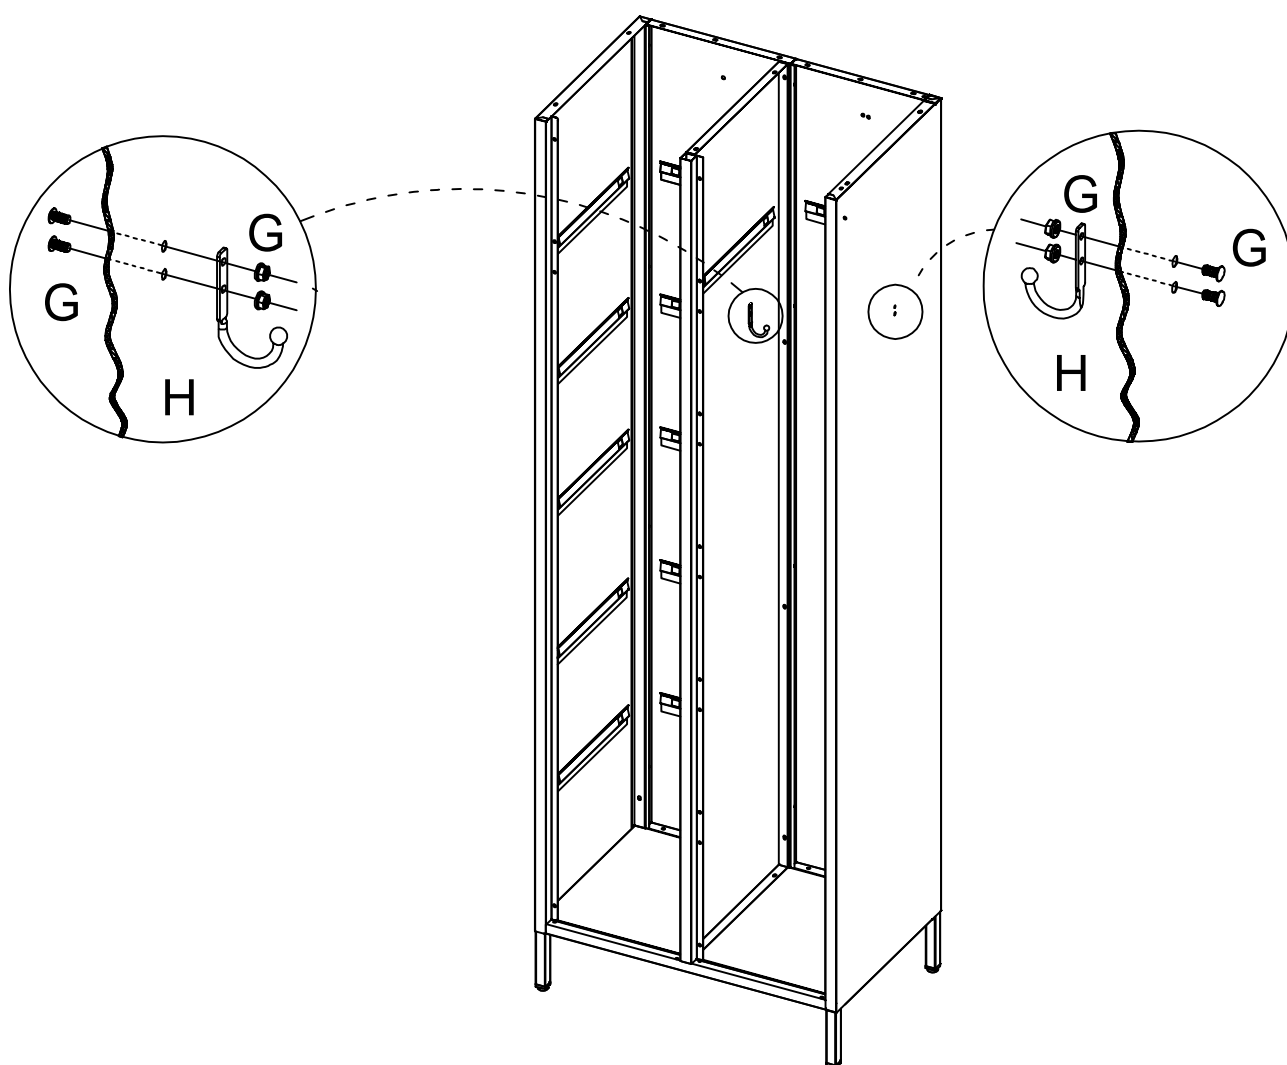



Step 10: Place the top panel on the top

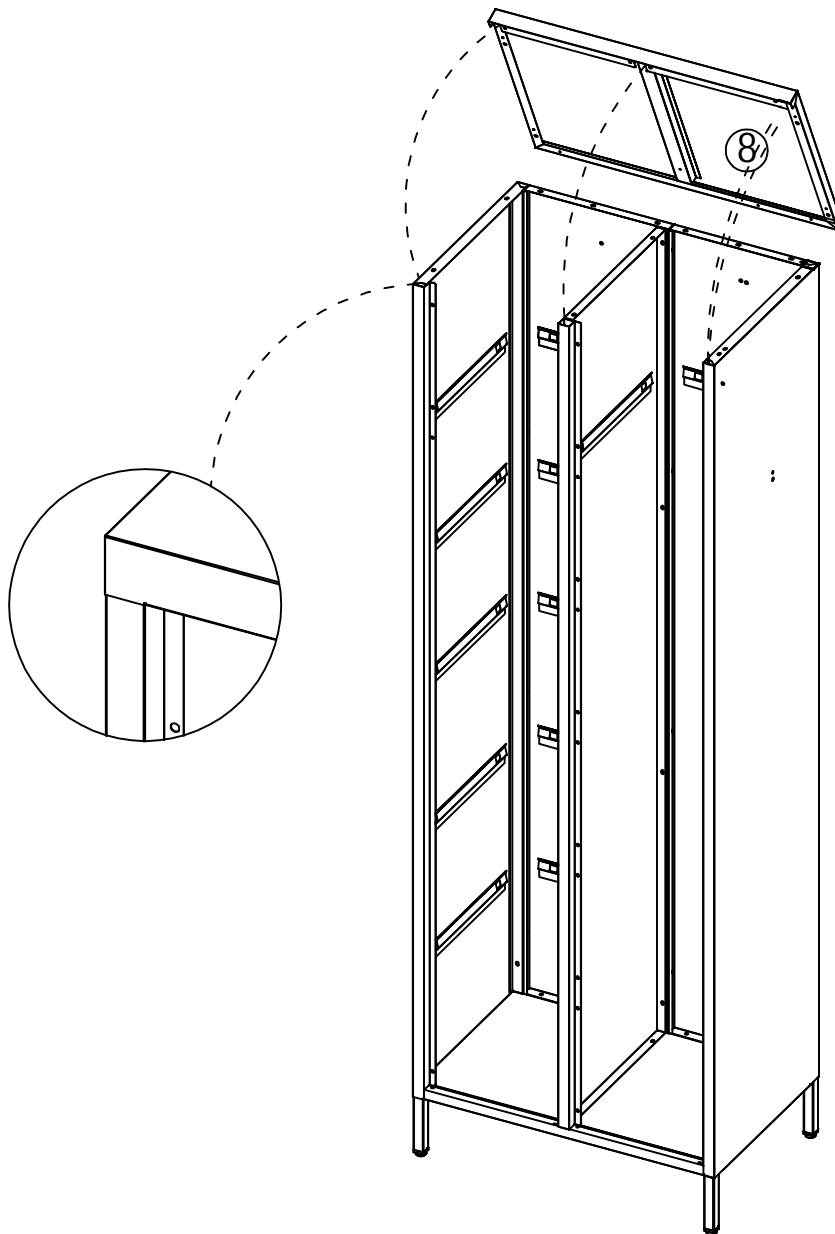


After the screws are tightened in the subsequent step, the top panel will be properly aligned.

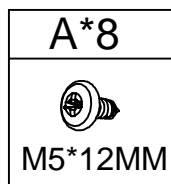


Step 11: Fix the top panel with
screws A

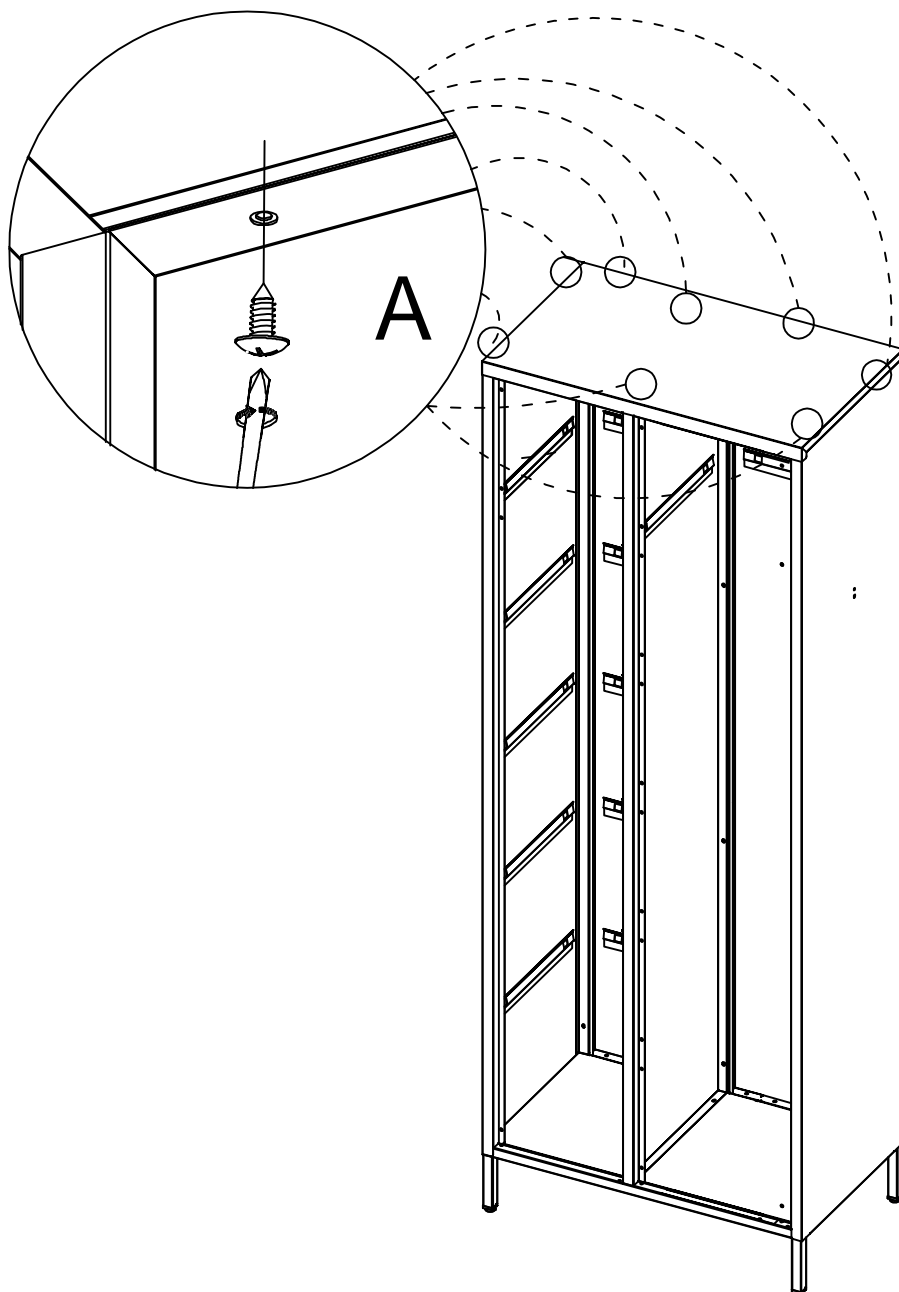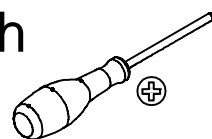

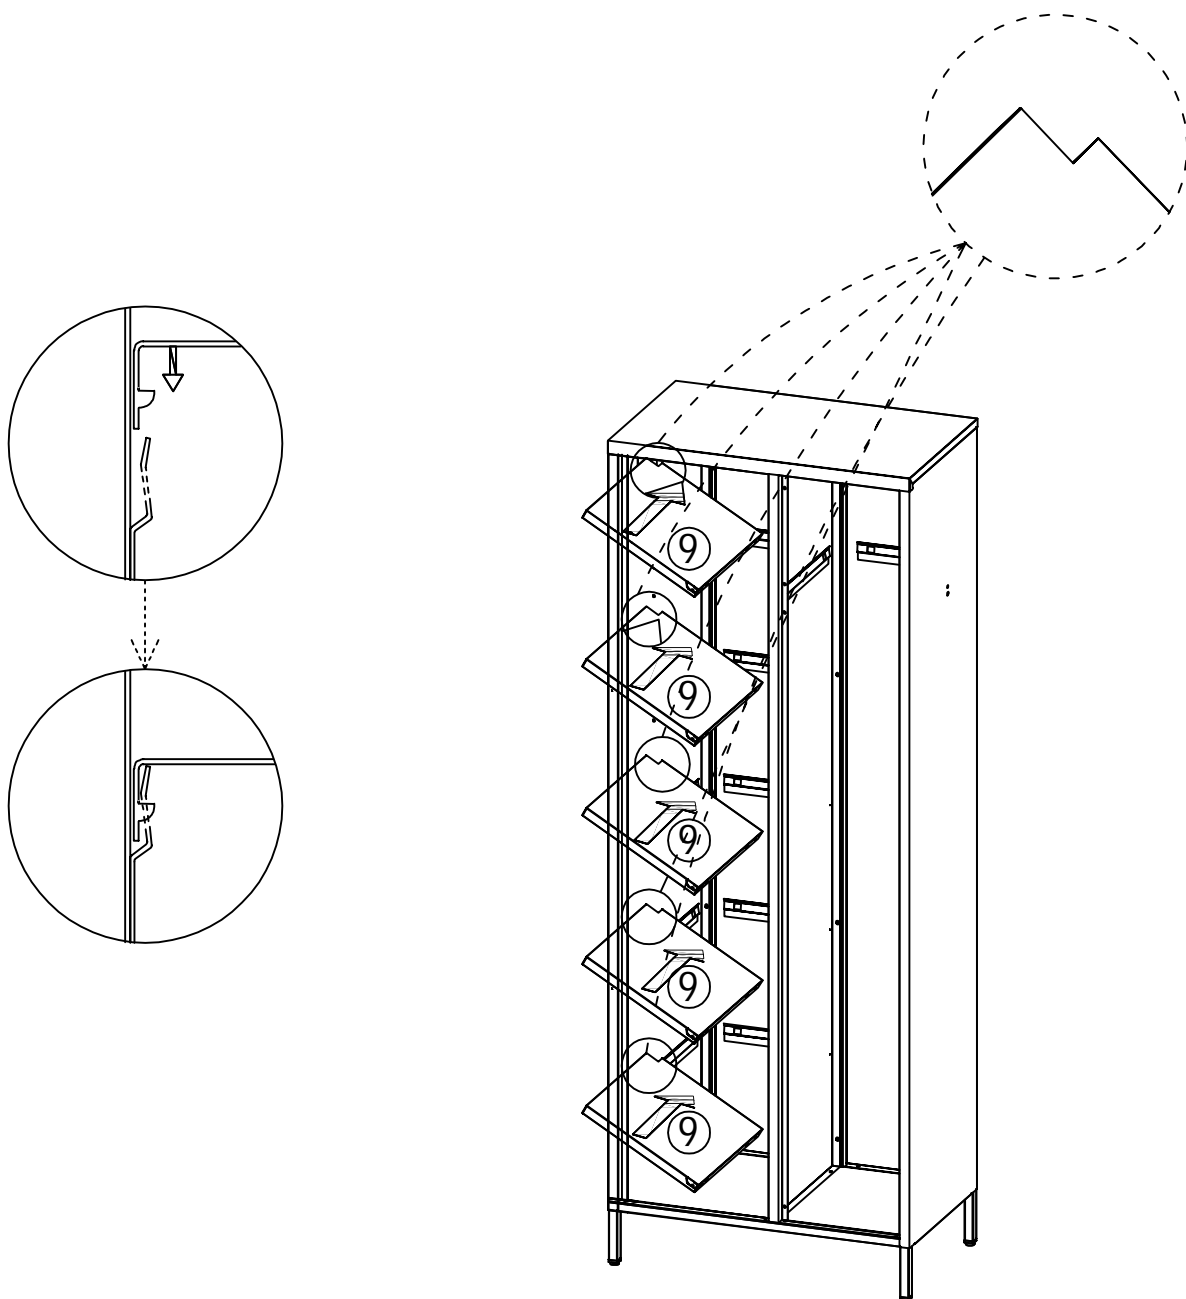



Step 12: Install left shelves 9

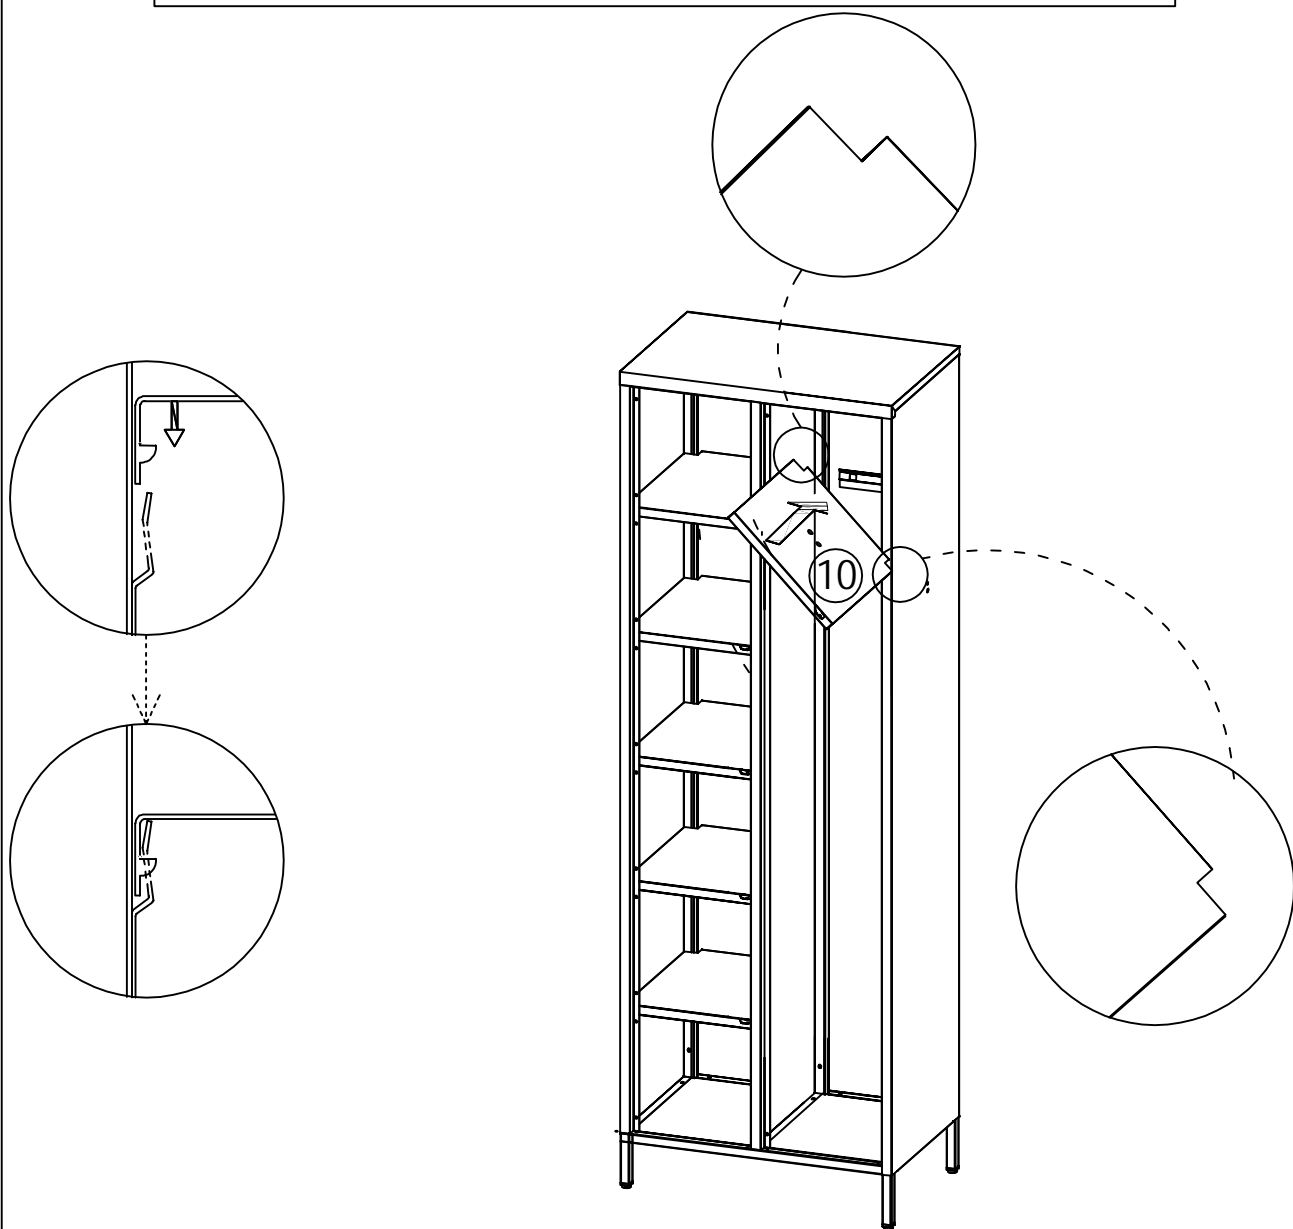

Step 13: Install right shelf 10




G*2	I*1	Step 14: Attach hook I on the right shelf 10 with screws G
		

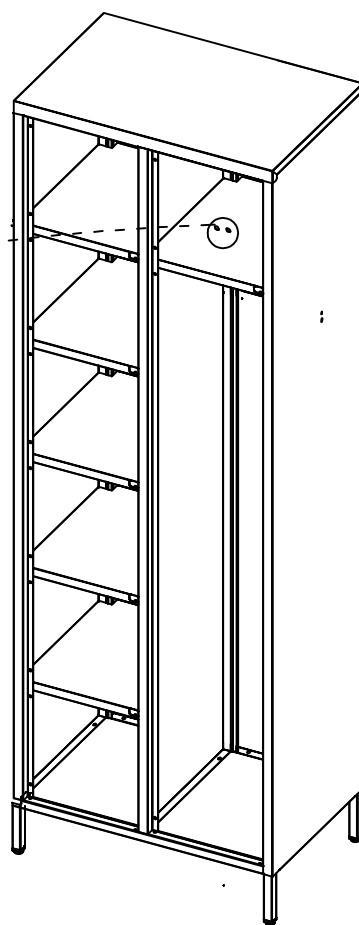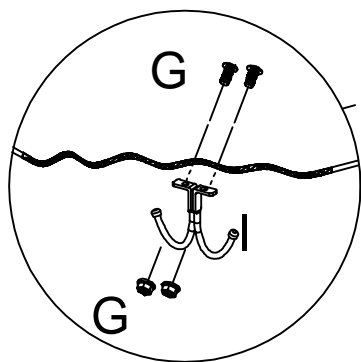

C*16



Step 15: Install the door silencers C

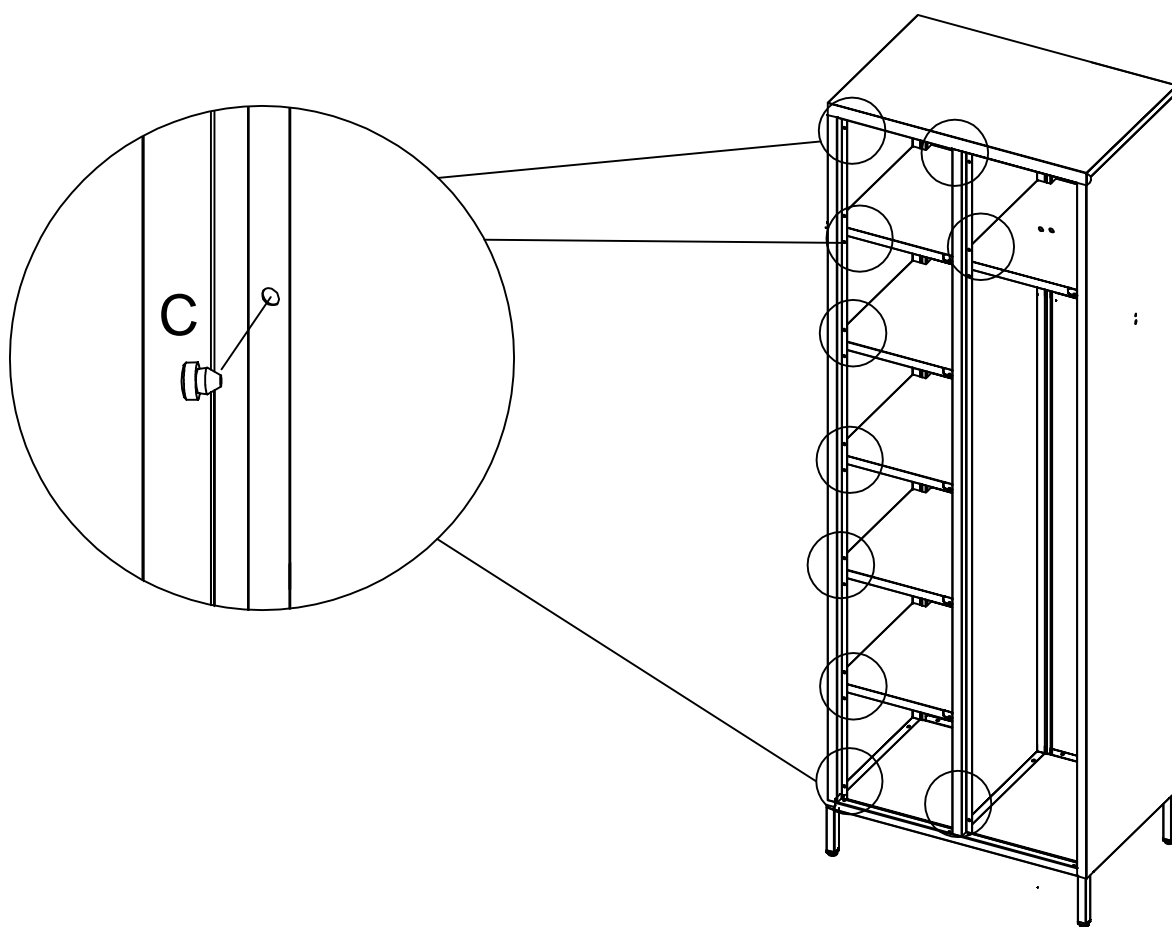

Step 16:



M8

B*2




M5*30MM



M5


Fix the locker on the wall
to prevent tipping

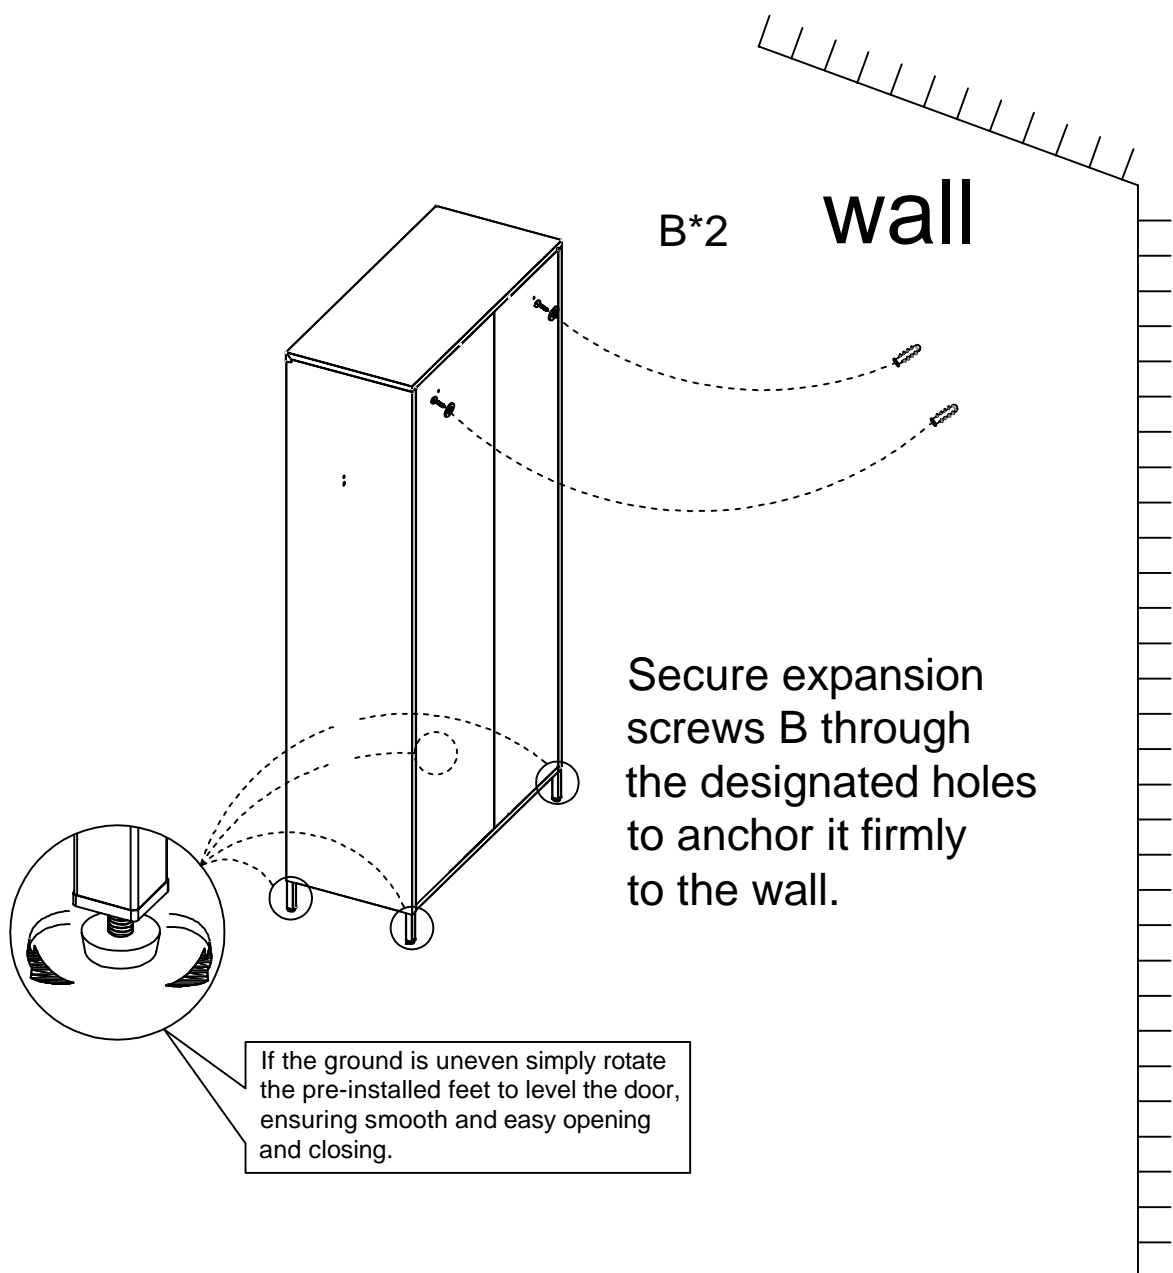




D*8

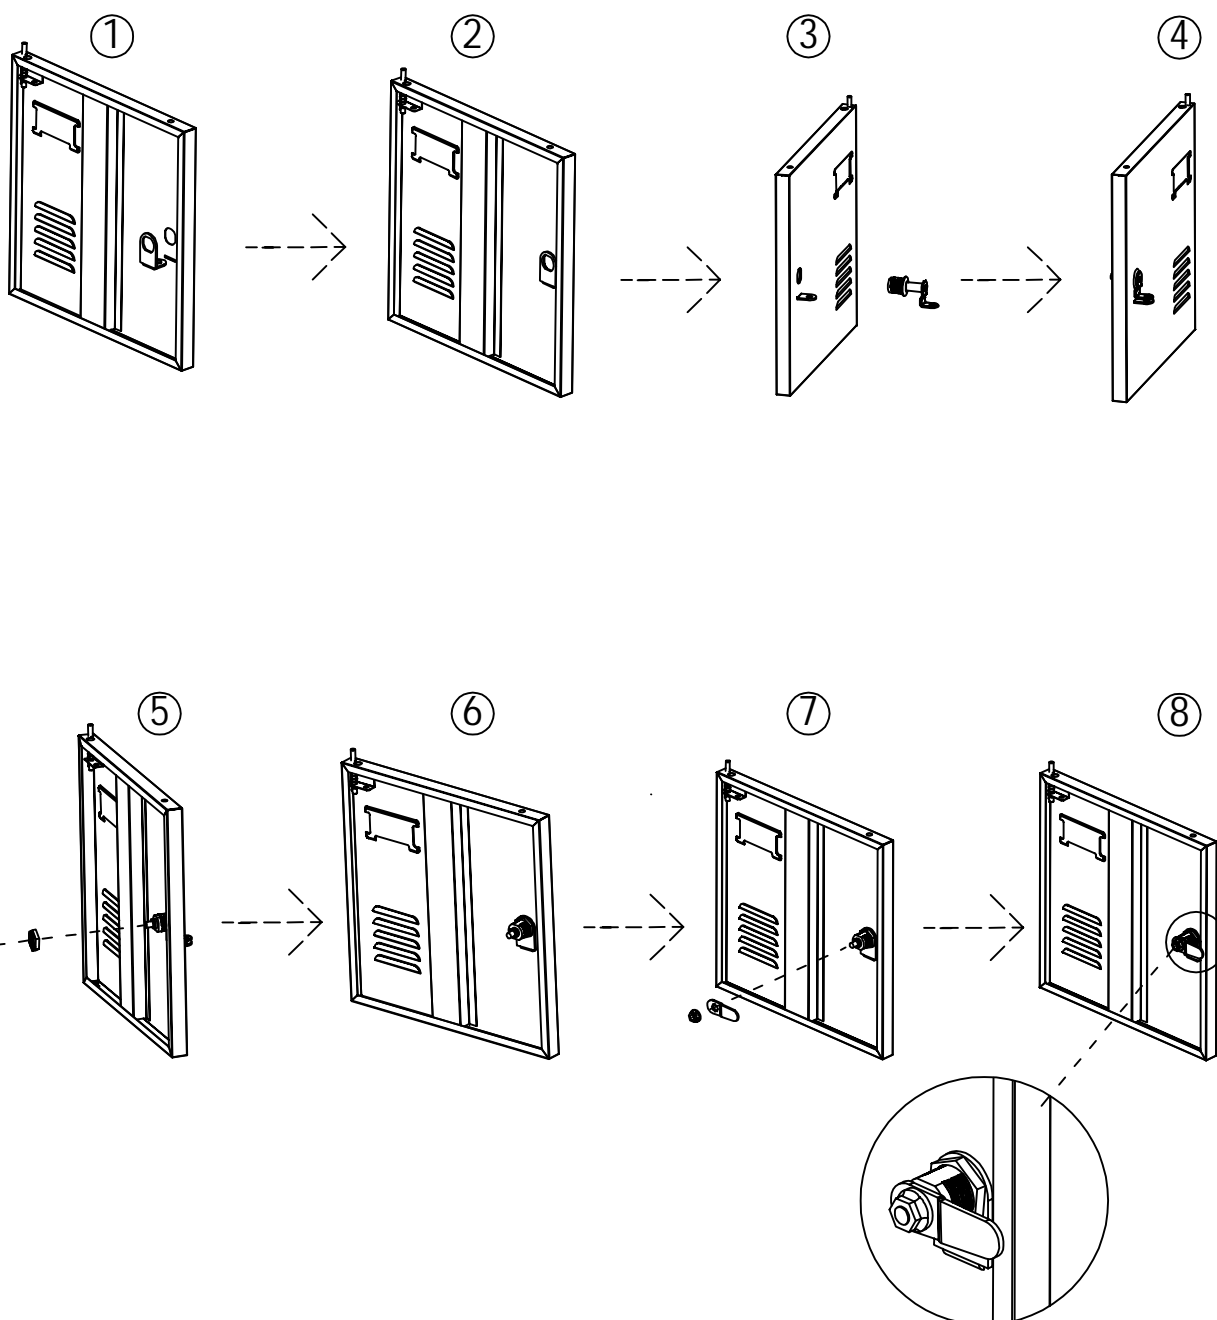


Step 17: Install the locks D on the doors
(The lock instructions video is on the last page)



E*2	F*8	Step 18: Install the doors 11 And 12
		

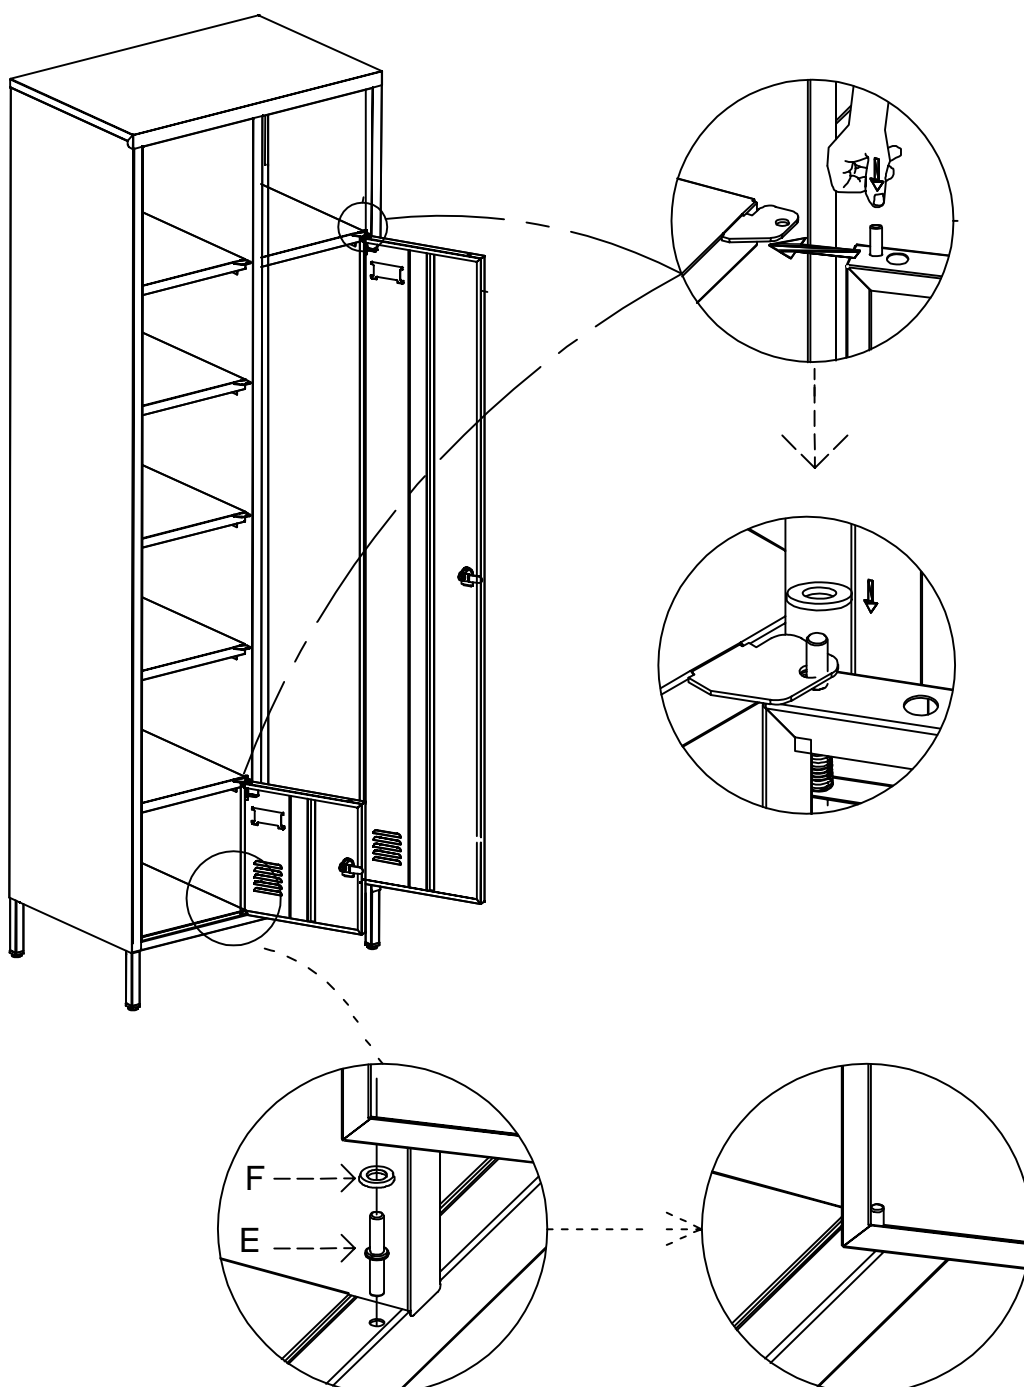


Step 19: Install all the doors

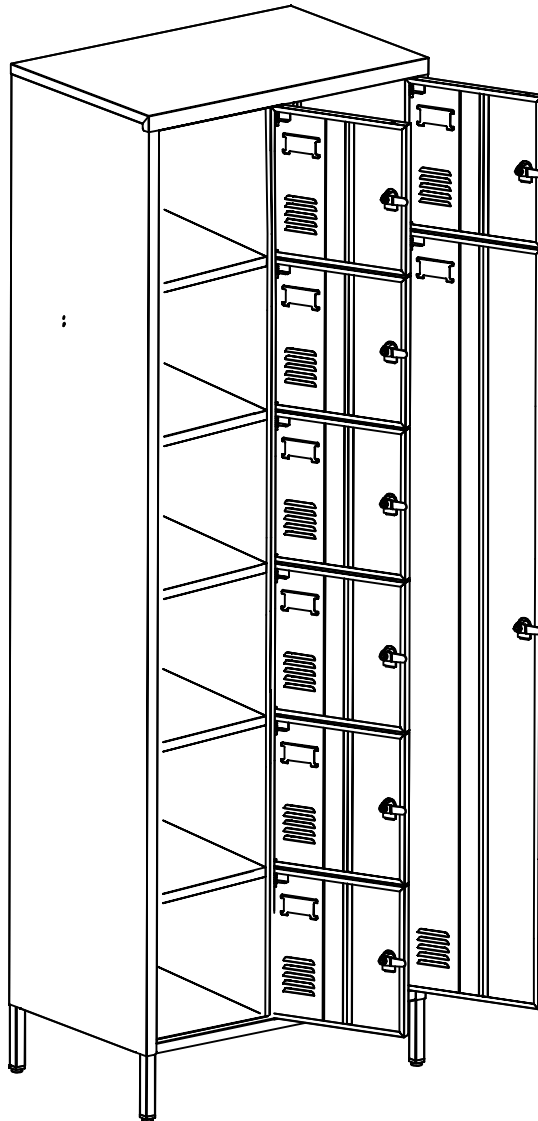

For the bottom two doors: Insert the door pivots E into the holes of the right bottom corners(shims F can be used to adjust, you can use 0/1/2 of them), then insert the doors into the door pivots on the bottom and adjust the springs (already pre-installed) on the right top corners For the other doors: Insert the doors into the lower doors' spring pivots of the right bottom corners and adjust the springs on the top

So only two E are needed

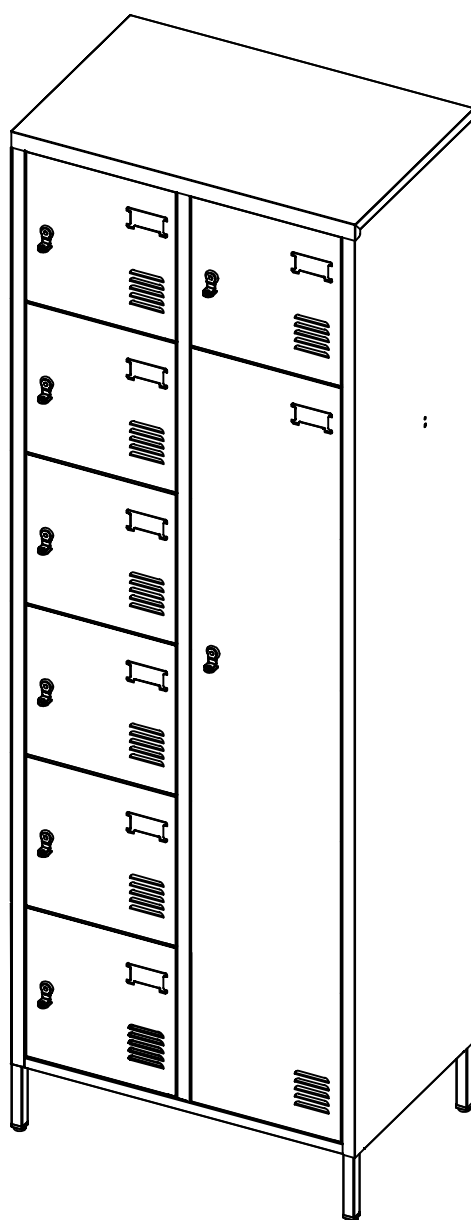



Installation Guide Video