

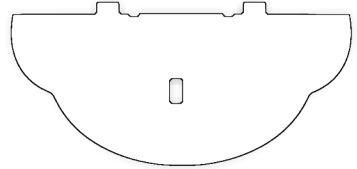





ASSEMBLY INSTRUCTION

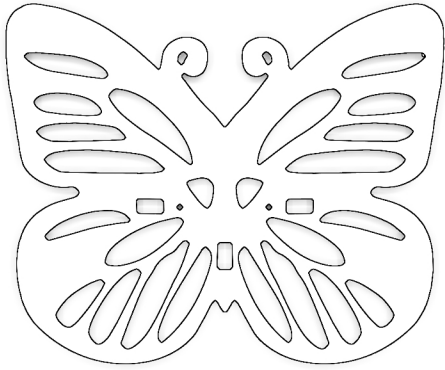


Installation Steps

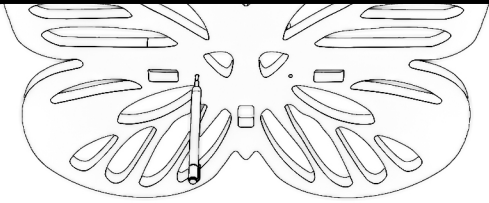


Mark the position with a pencil.

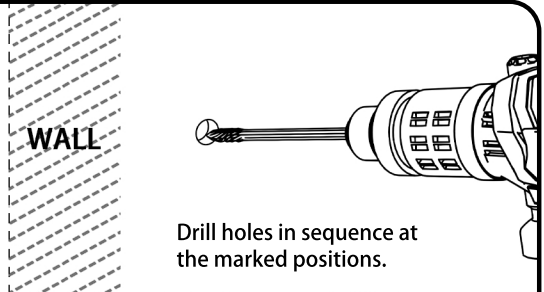

Drill holes in sequence at the marked positions.

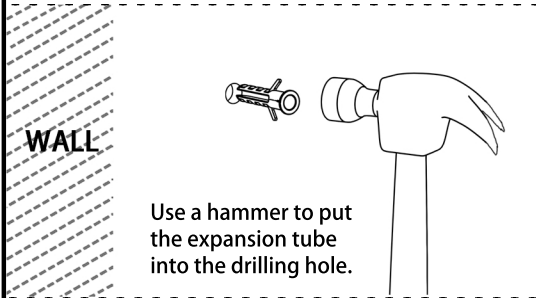

Use a hammer to put the expansion tube into the drilling hole.

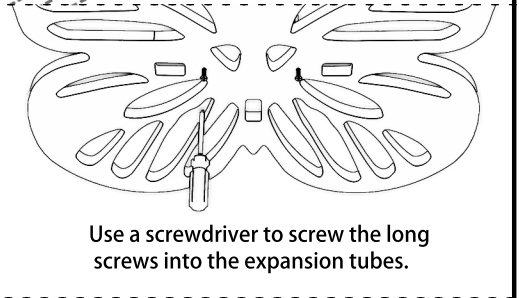

Use a screwdriver to screw the long screws into the expansion tubes.

The last step is to splice the boards together.

