

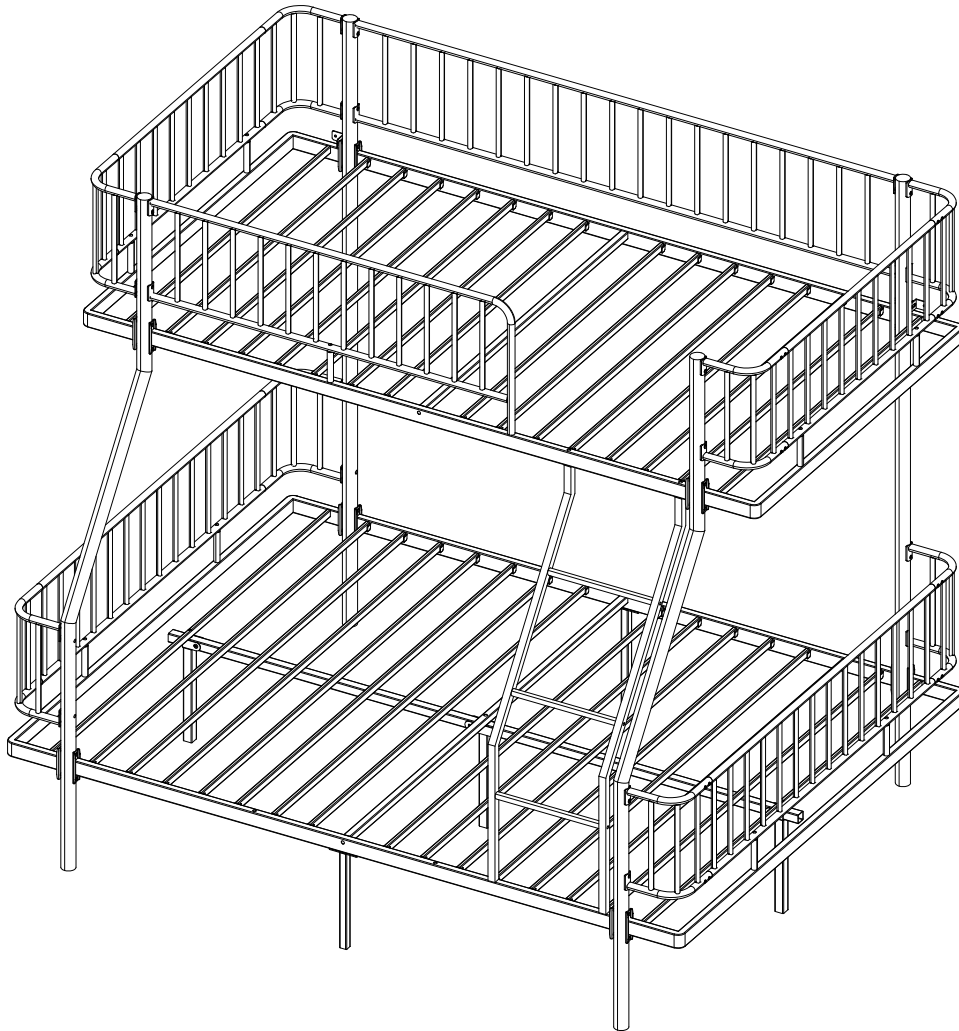
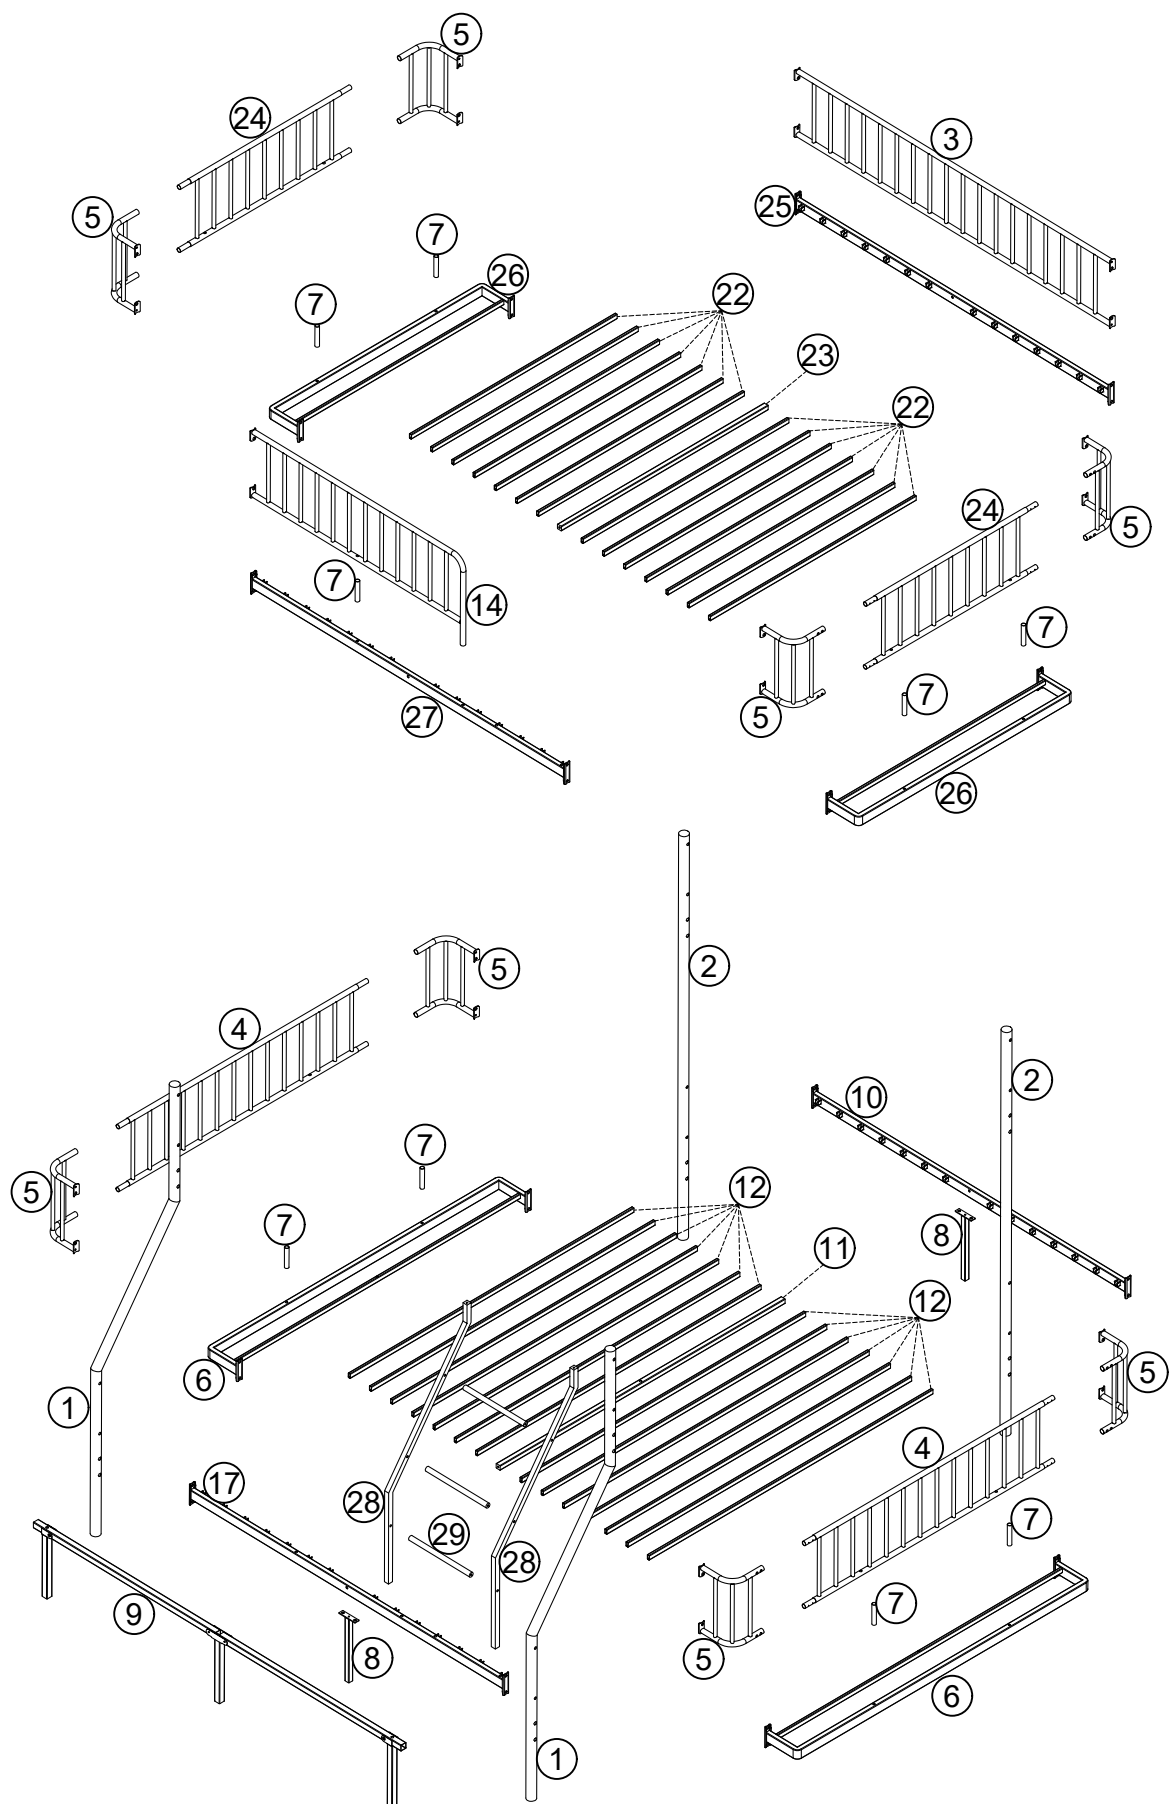
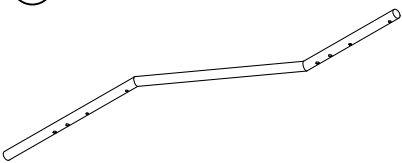
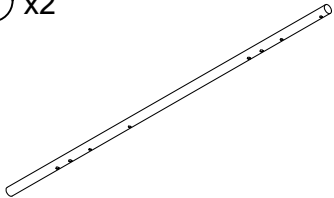
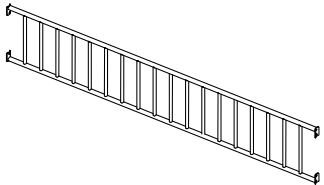
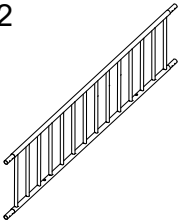
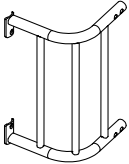
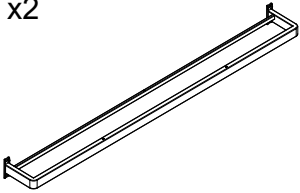

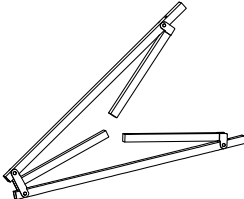
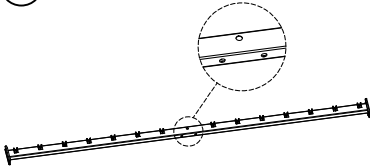
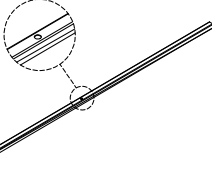
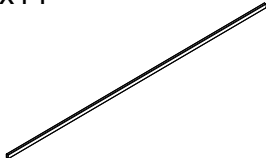
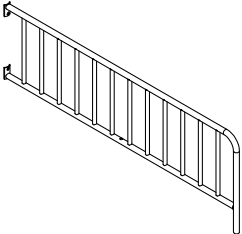
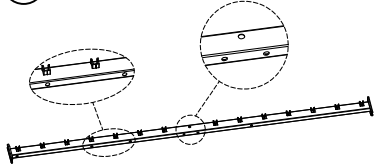
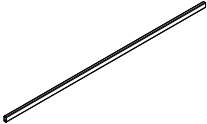
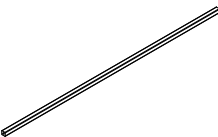
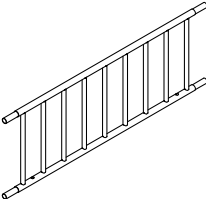
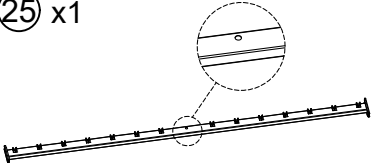
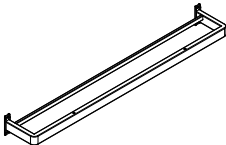
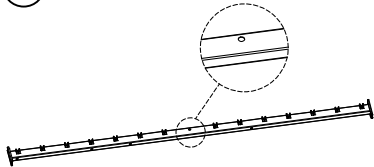


Assembly instruction (TF)










Assembly instruction (TF)



① x2 	② x2 	③ x1 
④ x2 	⑤ x8 	⑥ x2 
⑦ x9 	⑧ x2 	⑨ x1 
⑩ x1 	⑪ x1 	⑫ x14 
⑭ x1 	⑰ x1 	⑳ x14 
㉓ x1 	㉔ x2 	㉕ x1 
㉖ x2 	㉗ x1 	㉘ x2 
㉙ x3 		

Hardware List

A×32 (3+extra)  M8×20mm	B×17(2+extra)  M6×55mm	C×4(1+extra)  M6×40mm
D×23 (2+extra)  M6×32mm	E×26 (1+extra)  M6×15mm	F×49 (4+extra)  M6×10mm
G×8 (1+extra)  M6×15mm	H×2  M4	I×2 
J×2  M8×40mm	K×2  M5×40mm	


1

F×16pcs





M6×10mm

Step 1

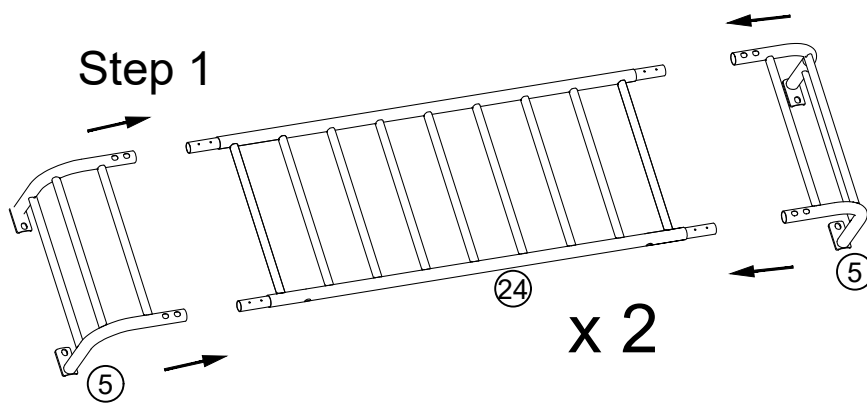

Step 2

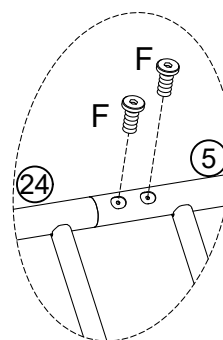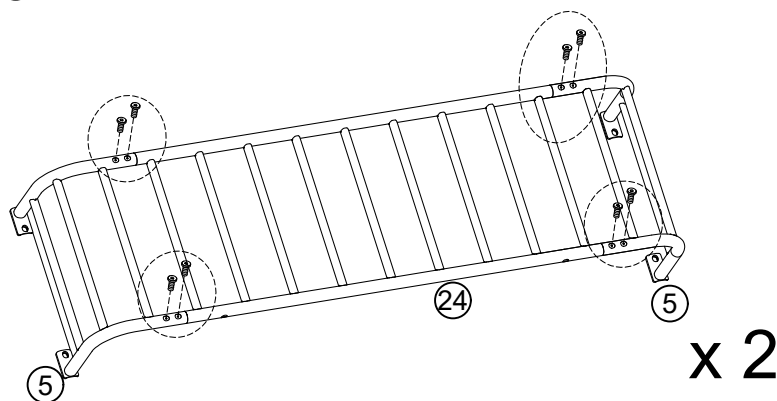


2


F×16pcs





M6×10mm






Step 1

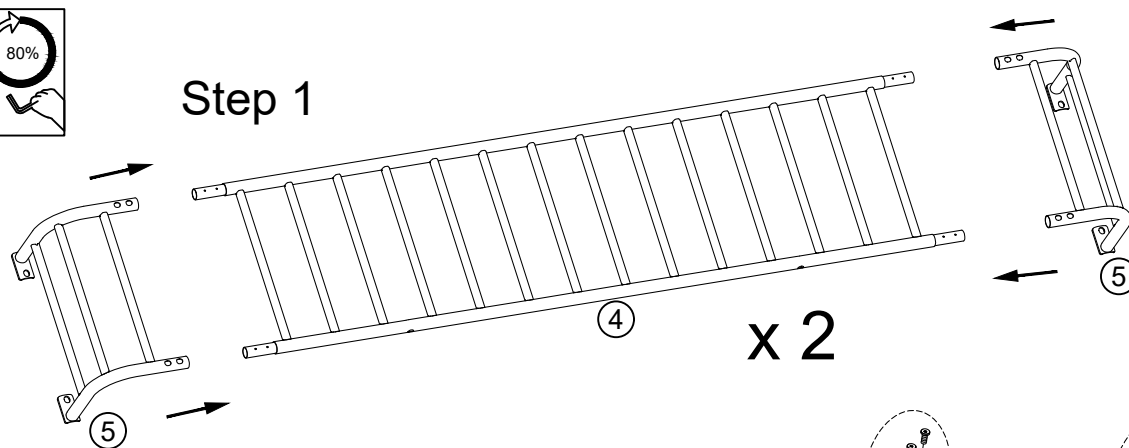

Step 2

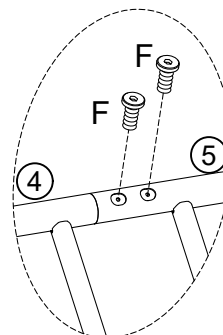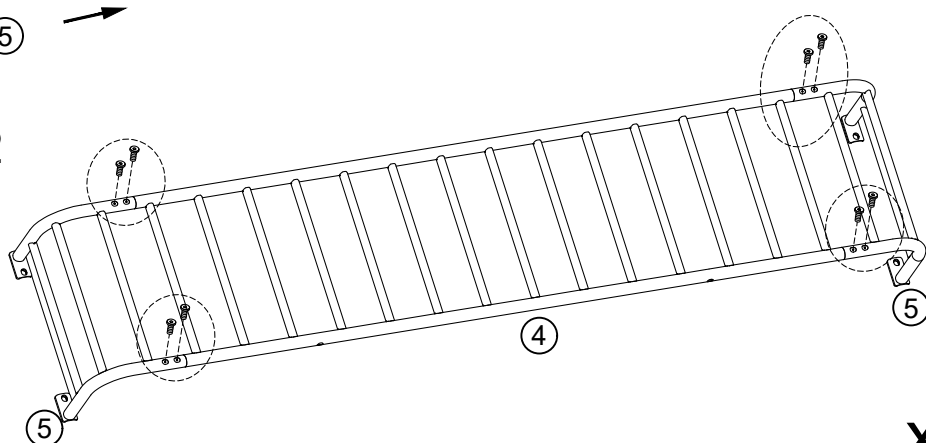

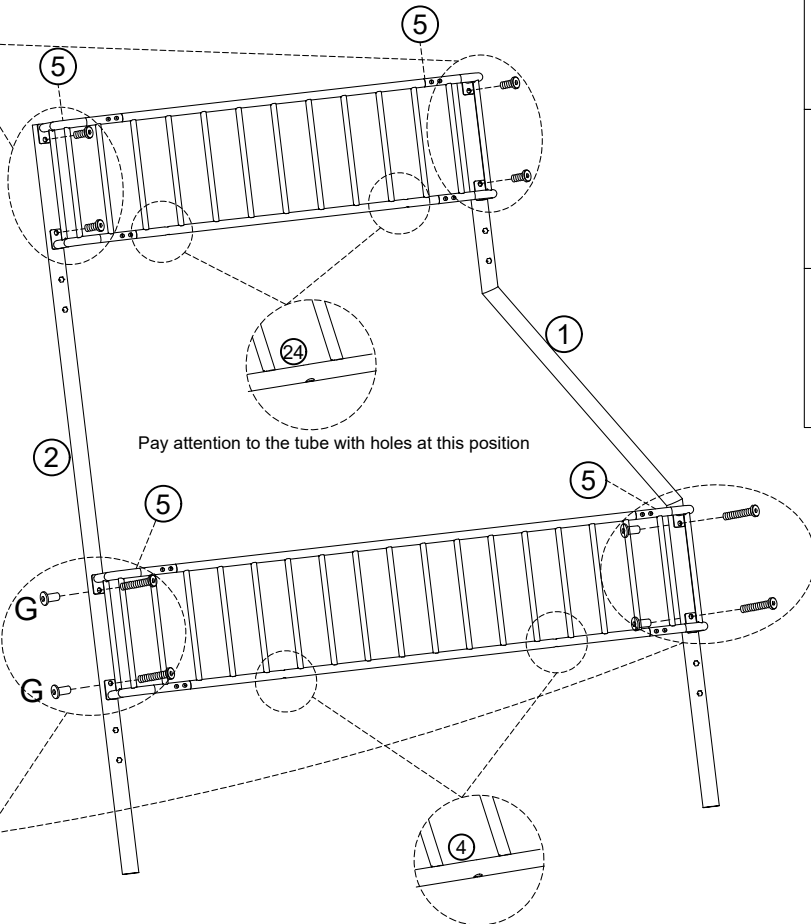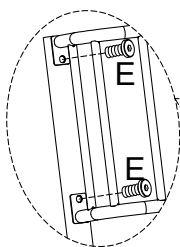

Pay attention to the tube with holes at this position

Pay attention to the tube with holes at this position

D×4pcs



M6×32mm

E×4pcs







M6×15mm

G×4pcs



M6×15mm

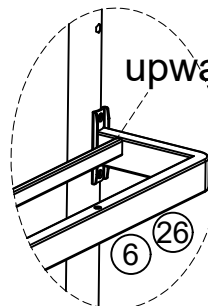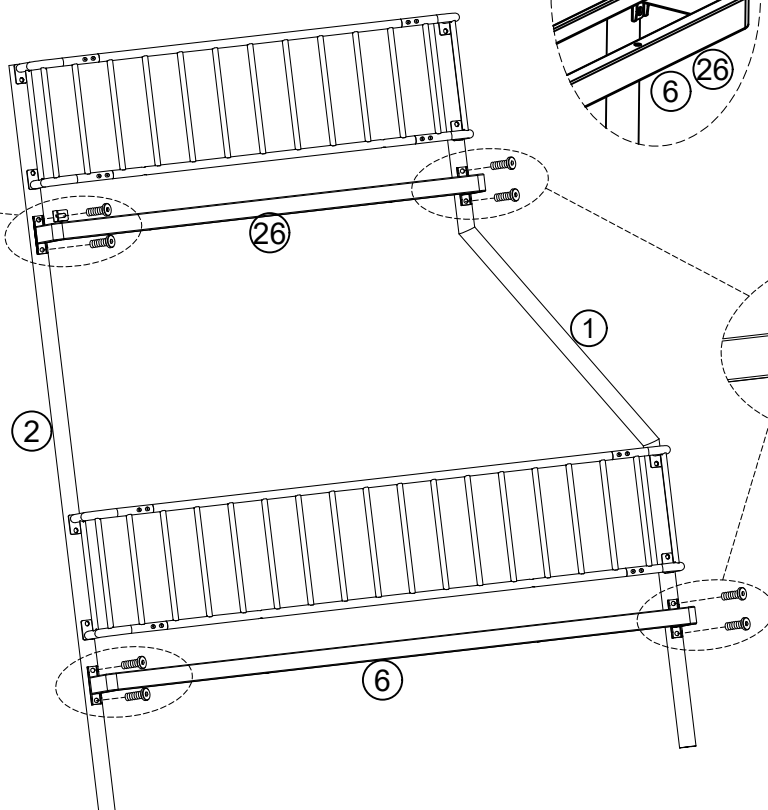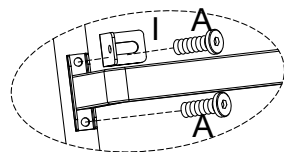



upward

A×8pcs




M8×20mm

I×1pc

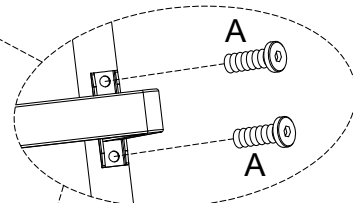

5

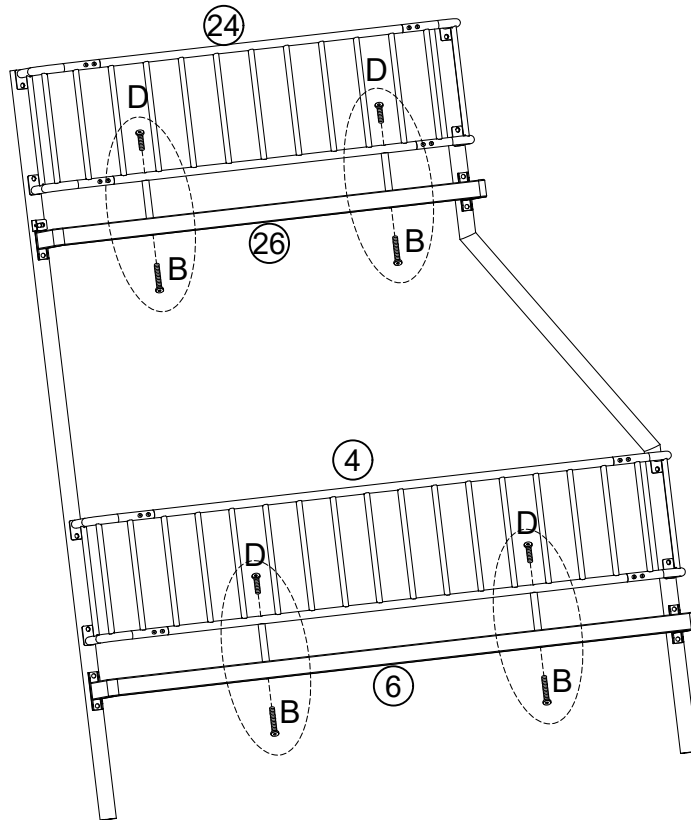


B×4pcs




M6×55mm


D×4pcs




M6×32mm

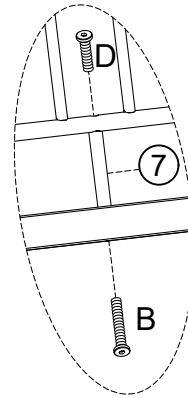

6

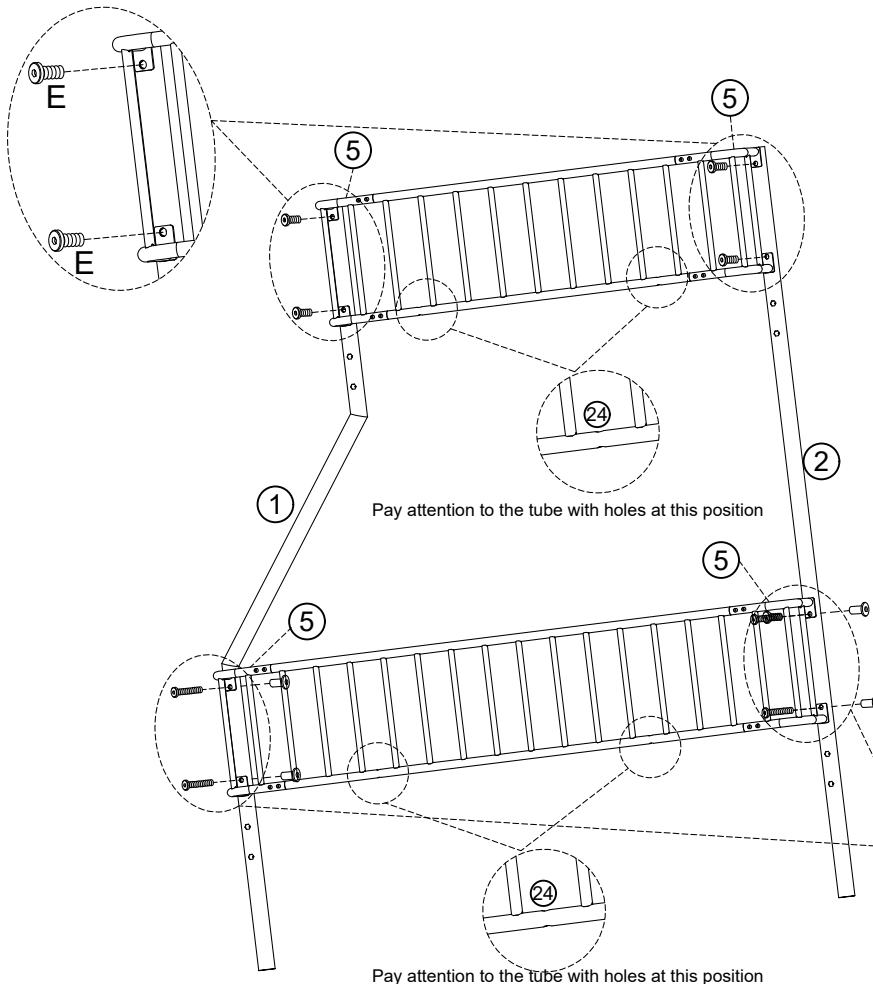

D×4pcs



M6×32mm

E×4pcs




M6×15mm

G×4pcs




M6×15mm

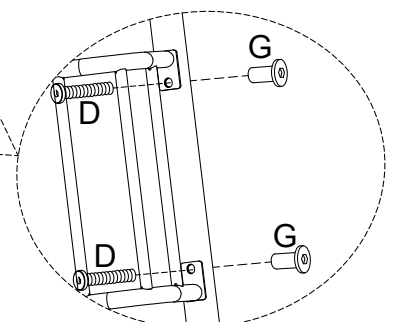

7





A×8pcs



M8×20mm


I×1pc

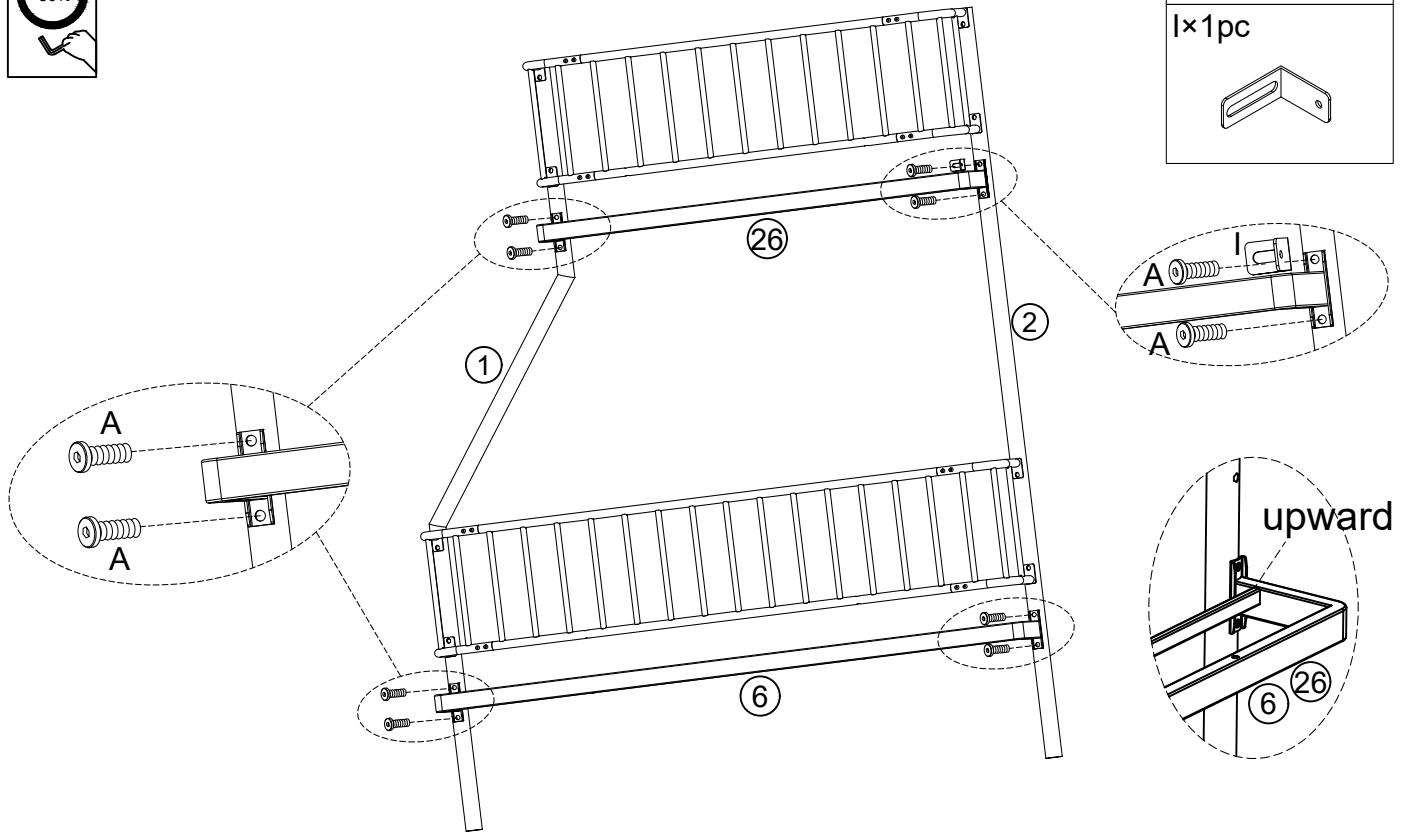

8



B×4pcs




M6×55mm

D×4pcs



M6×32mm

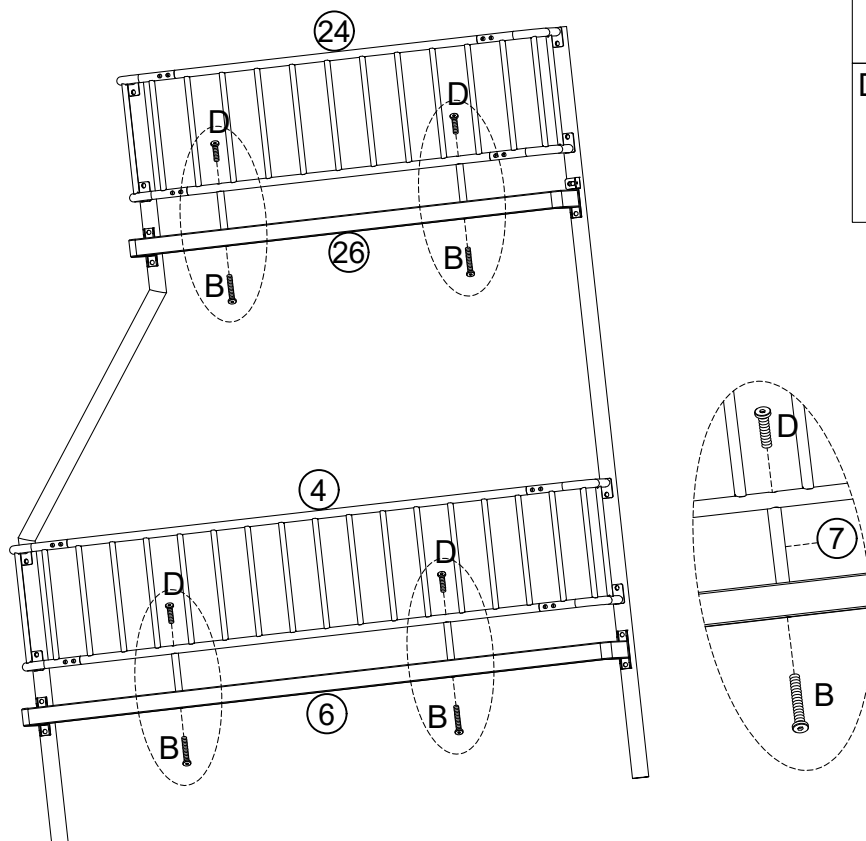


9


F×4pcs



M6×10mm

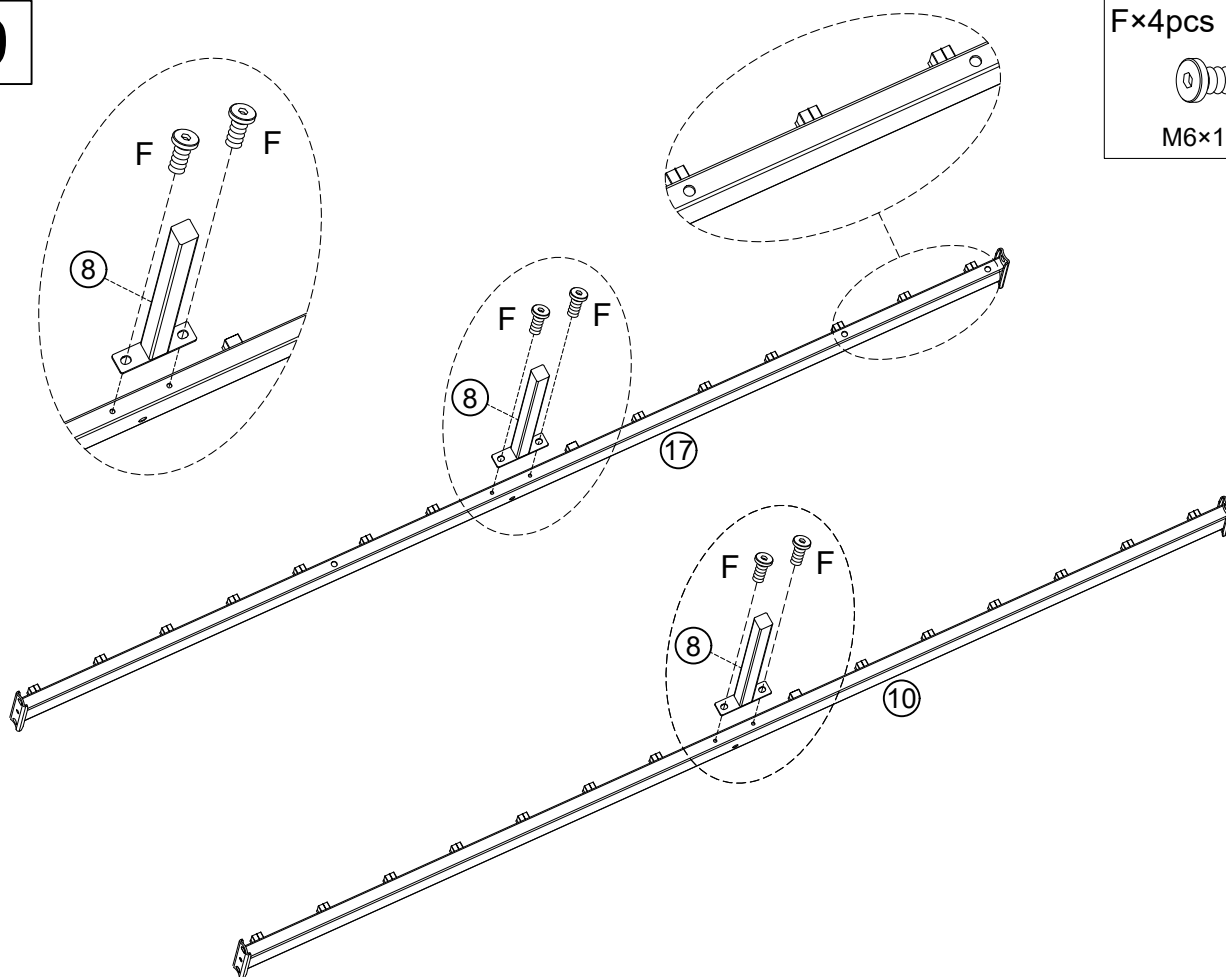


10




A×8pcs



M8×20mm

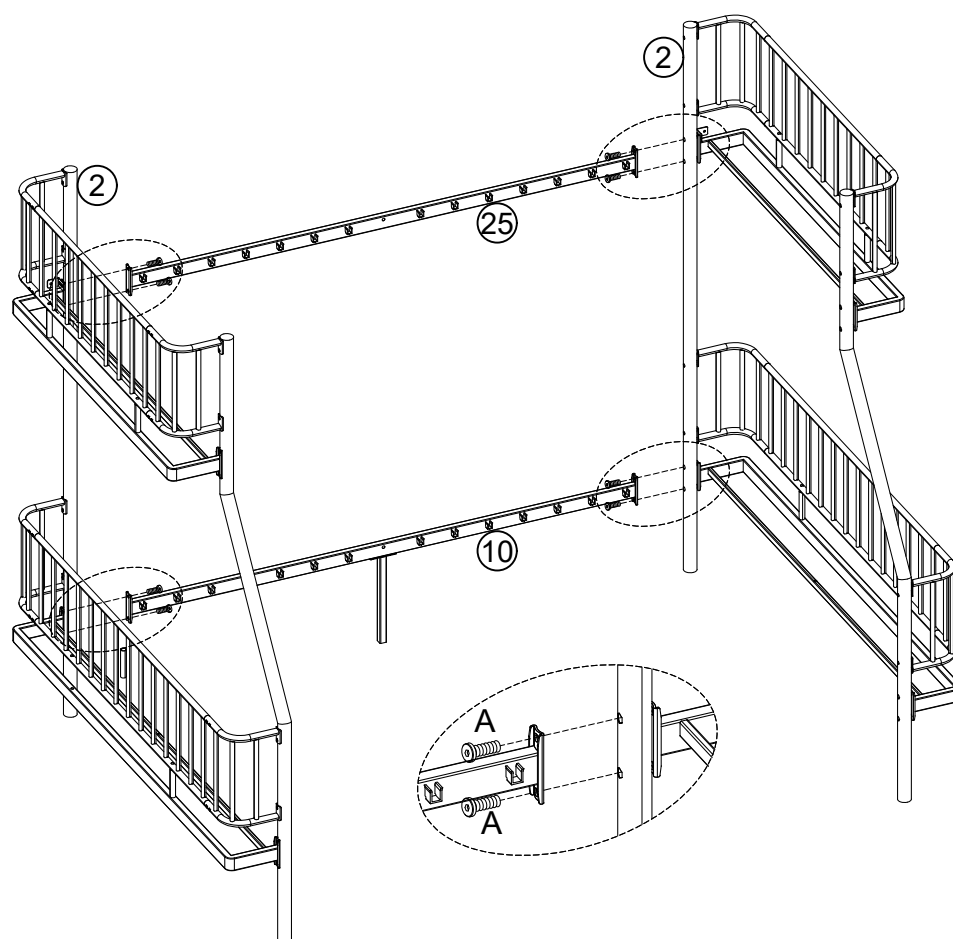



11




E×4pcs



M6×15mm

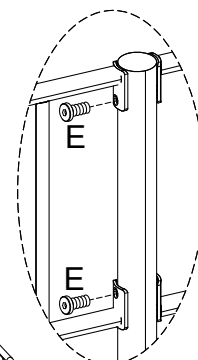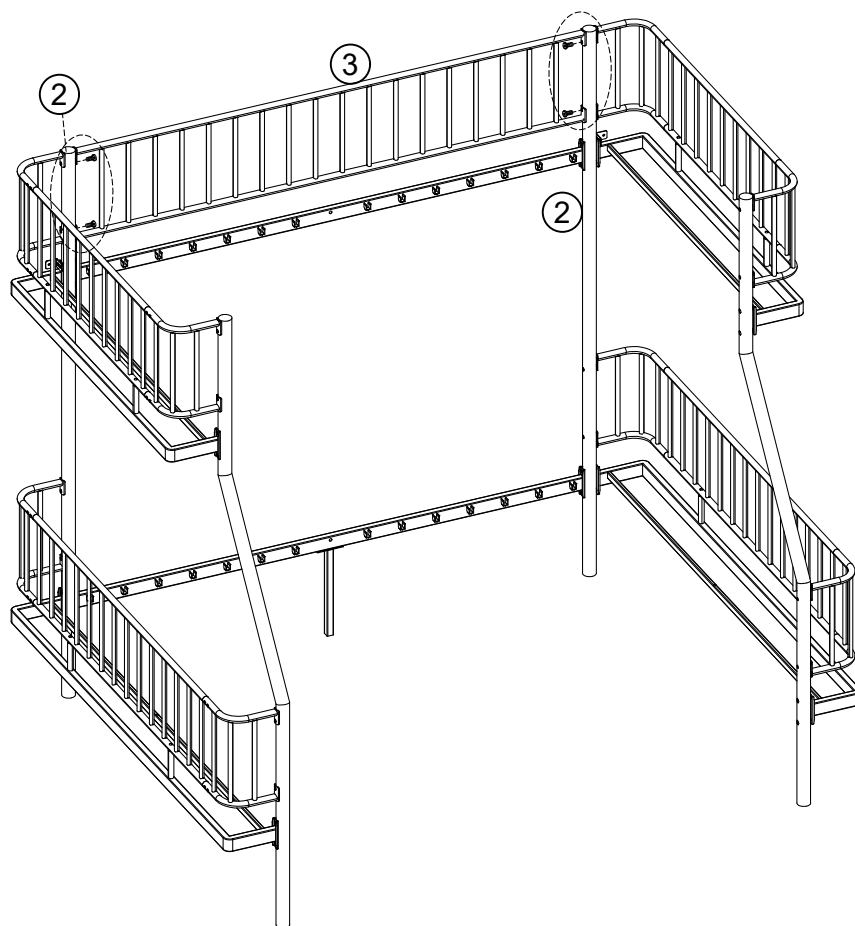



12




A×8pcs




M8×20mm

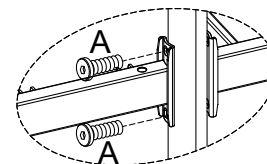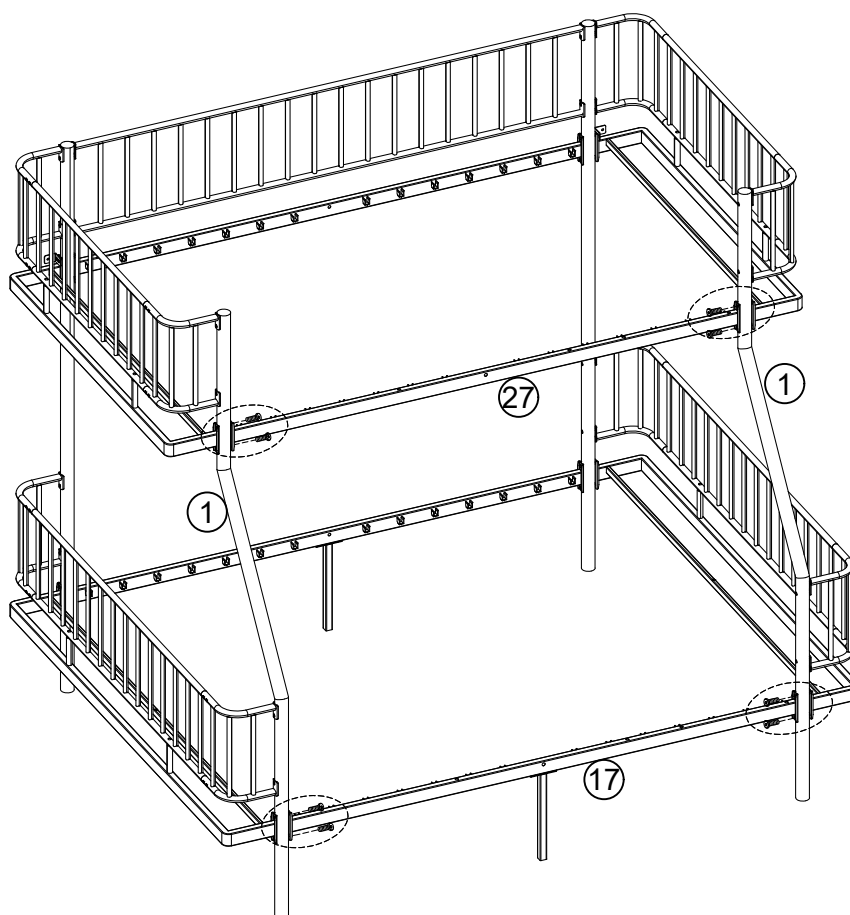

13



B×1pc






M6×55mm

E×2pcs




M6×15mm

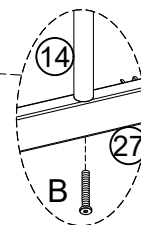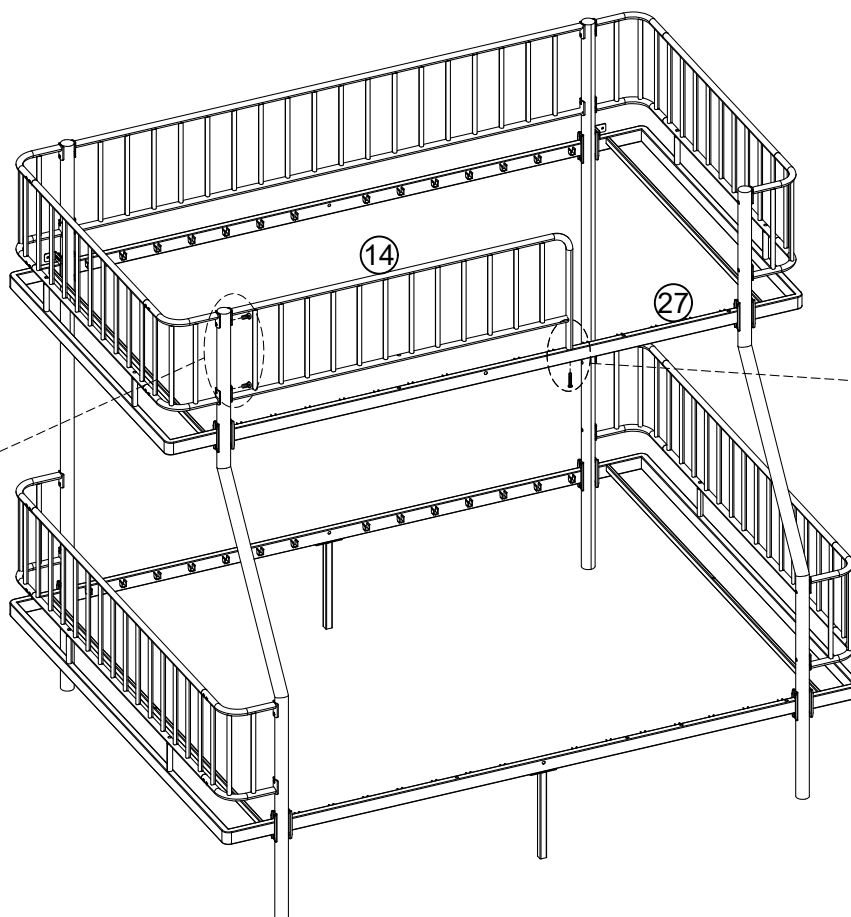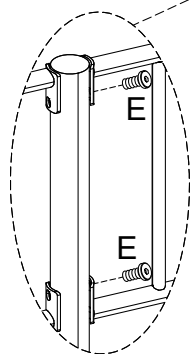

14



B×1pc





M6×55mm


D×1pc




M6×32mm

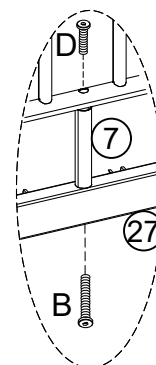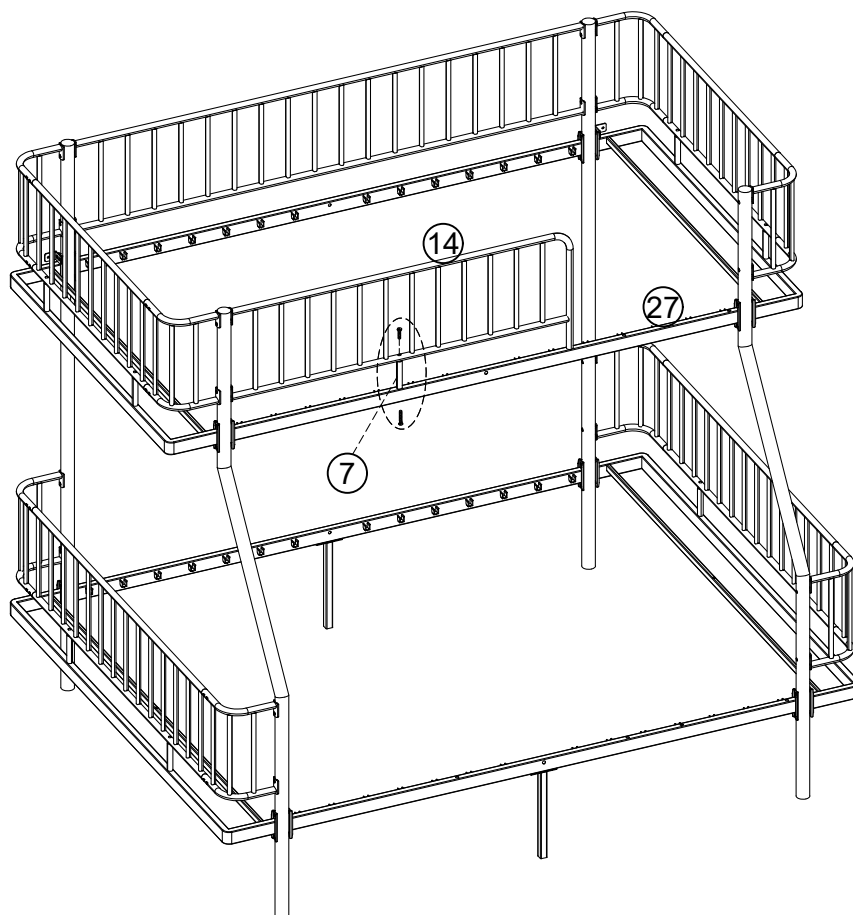


15




C×4pcs



M6×40mm

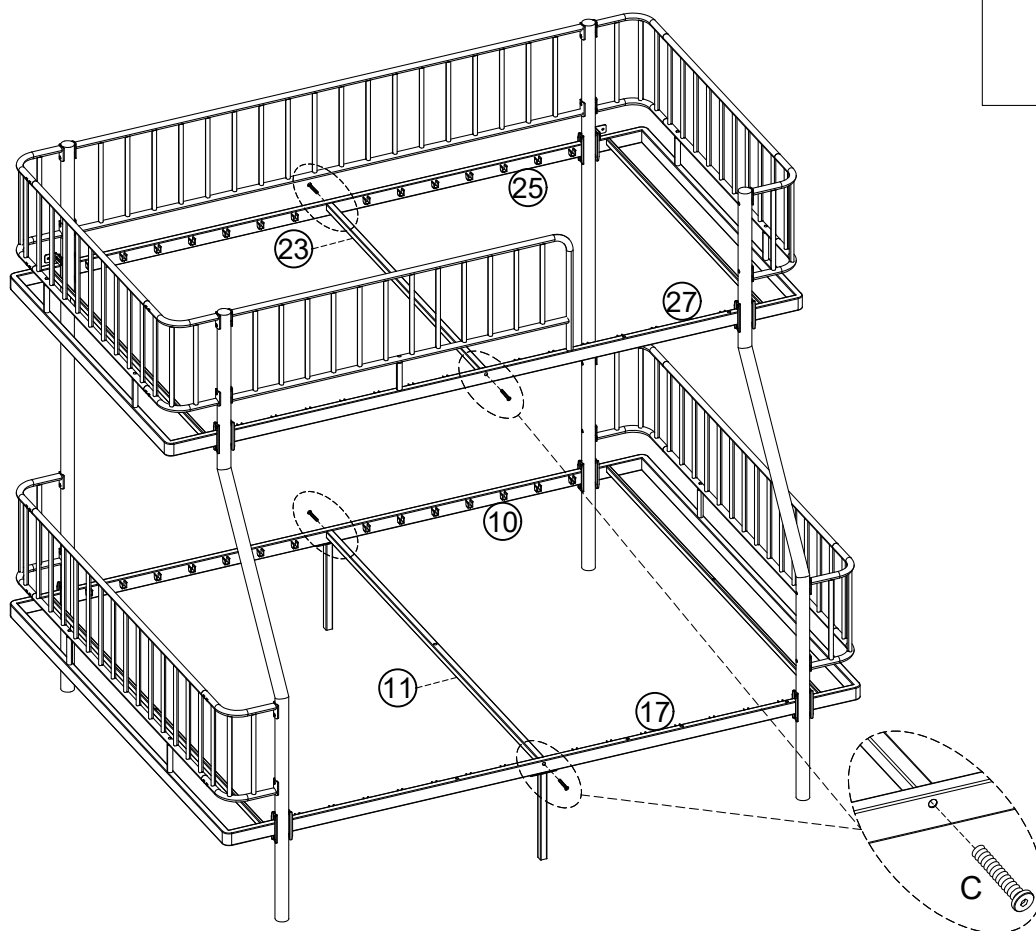

16

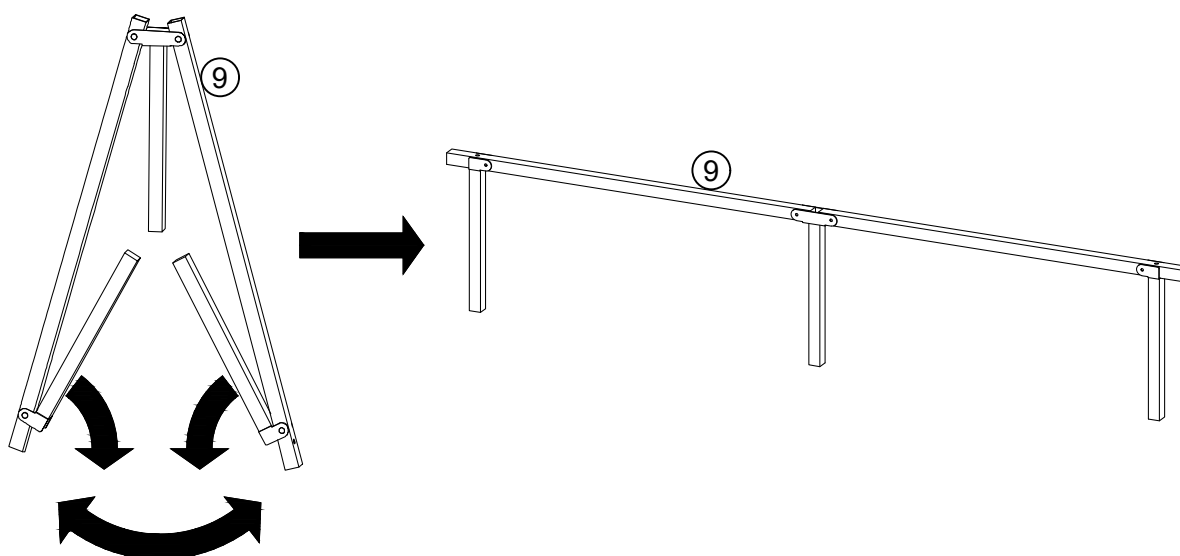


Watch out for pinching your hands


17



B×3pcs




M6×55mm

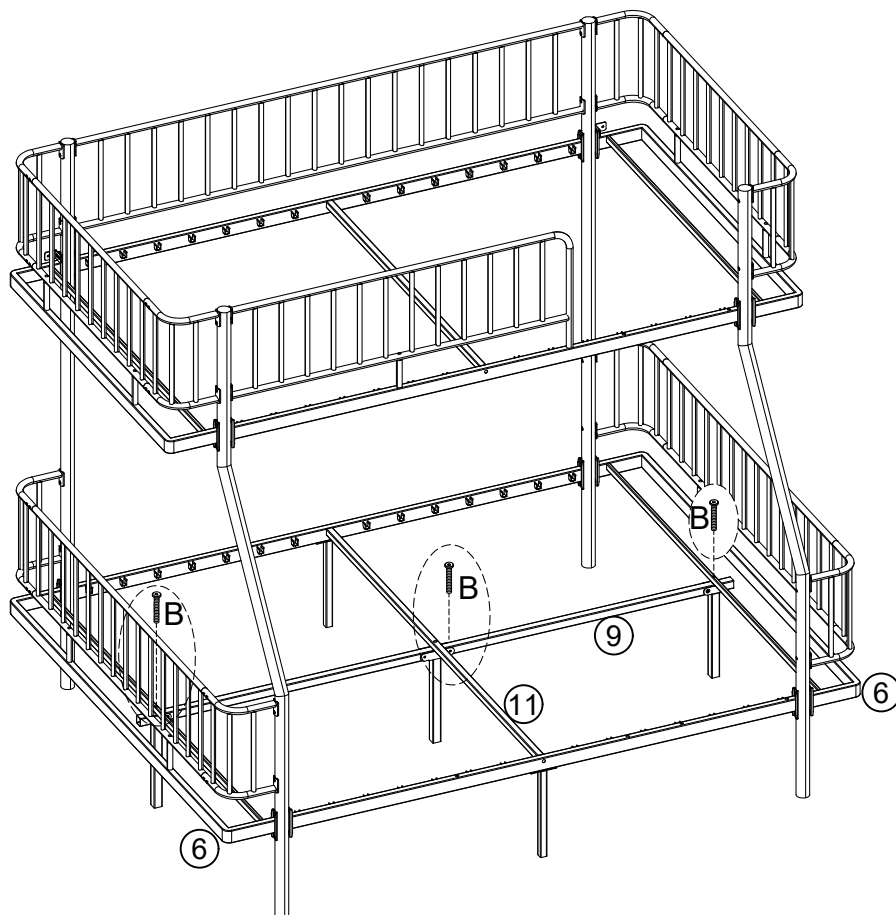


18



D×6pcs




M6×32mm

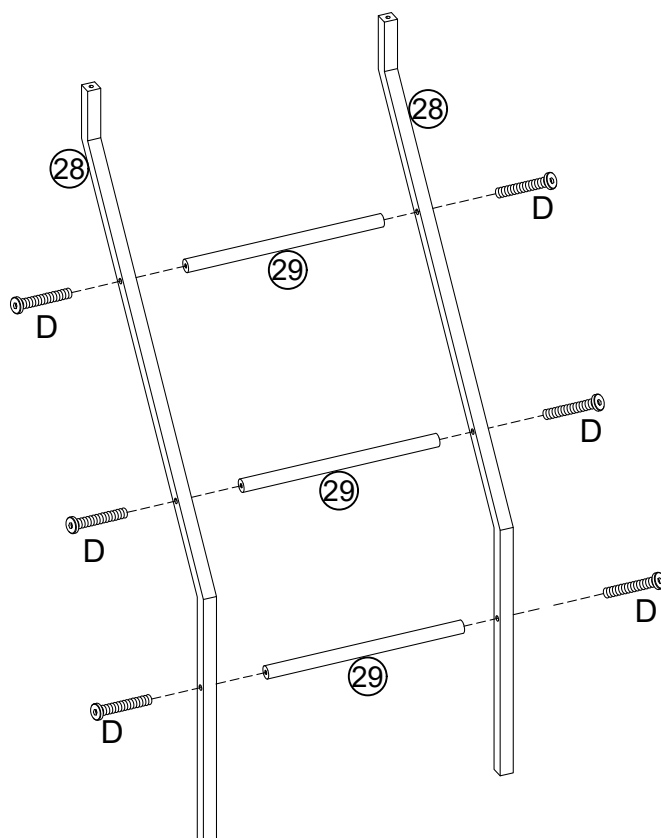


19





B×4pcs





M6×55mm

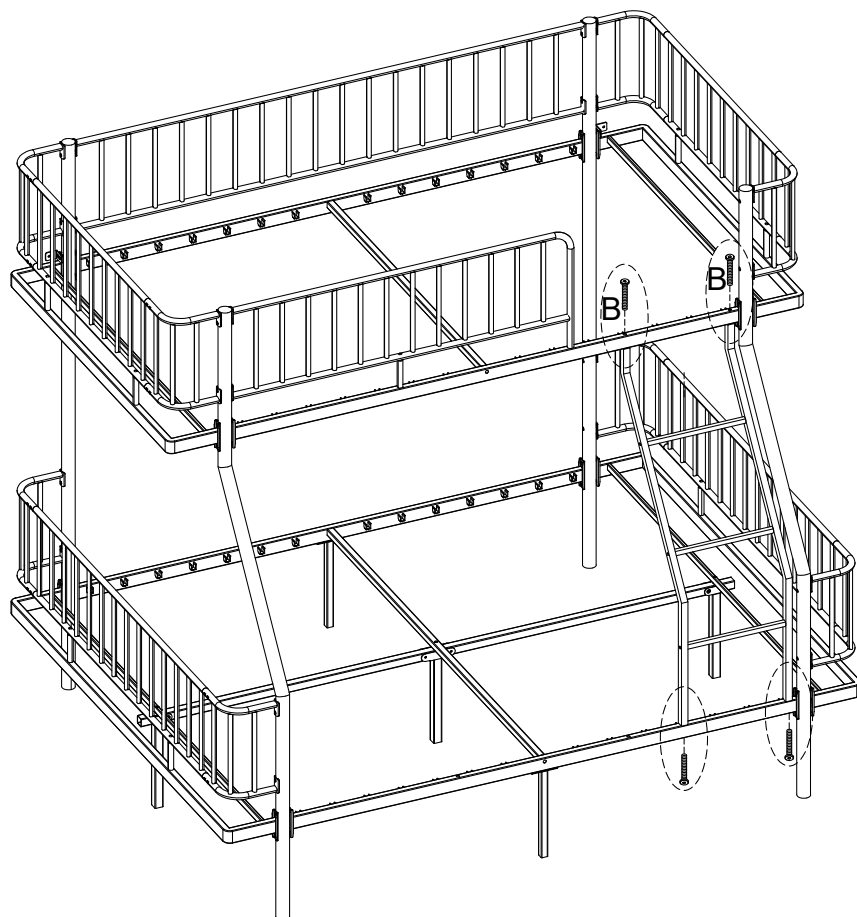

20

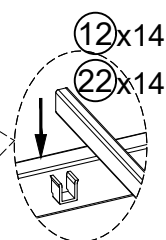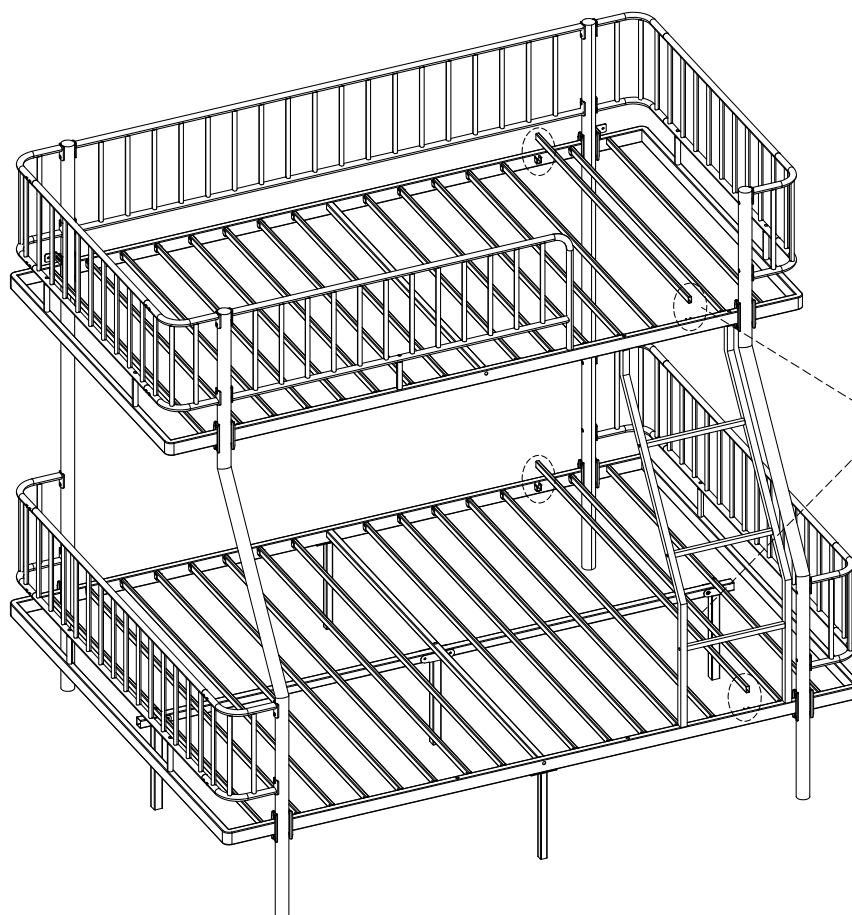

21

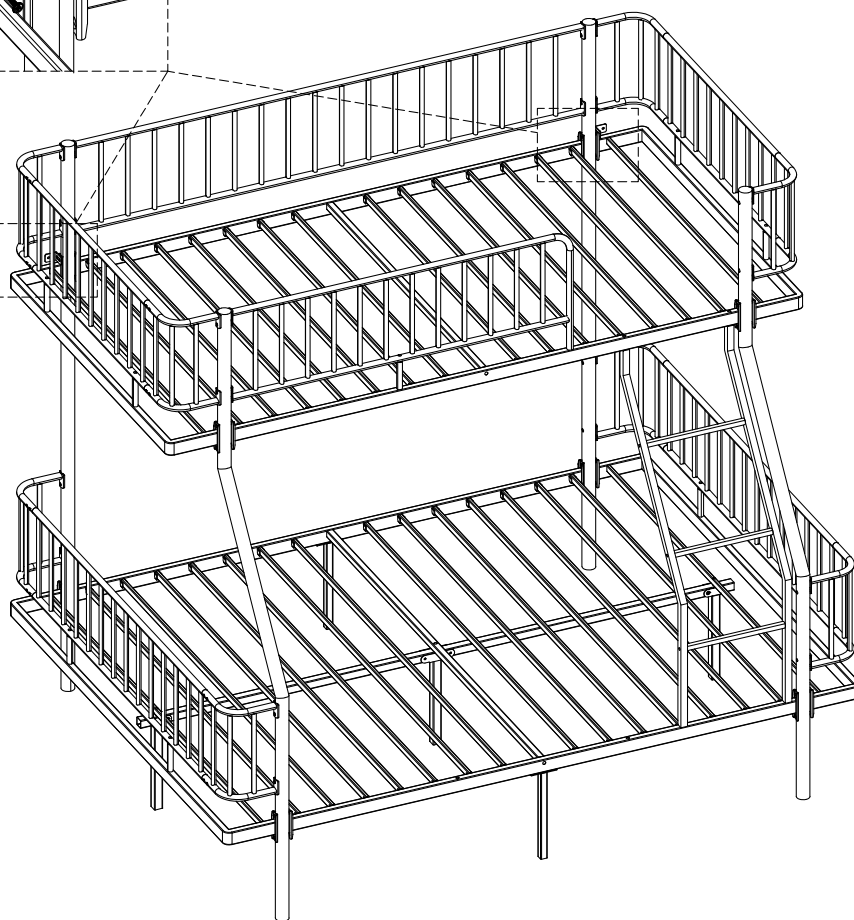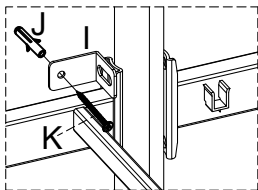

J×2pcs



M8×40mm

K×2pcs



M5×40mm

Tighten all screws 100%