

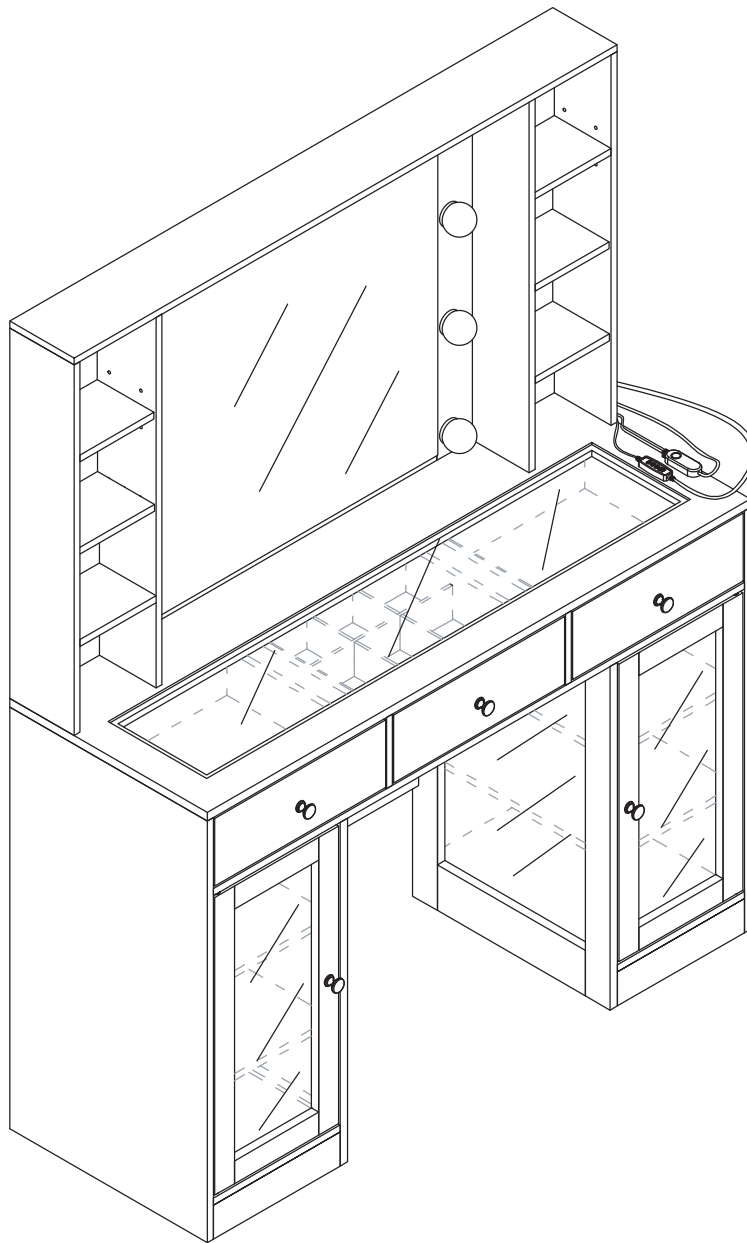
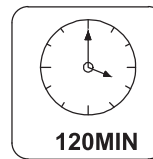



Installation & Assembly

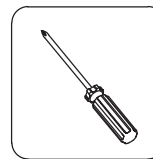


IT IS RECOMMENDED
TO USE POWER TOOLS

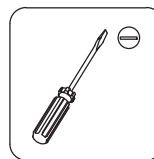


120MIN

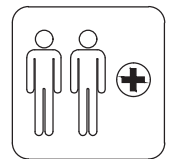


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

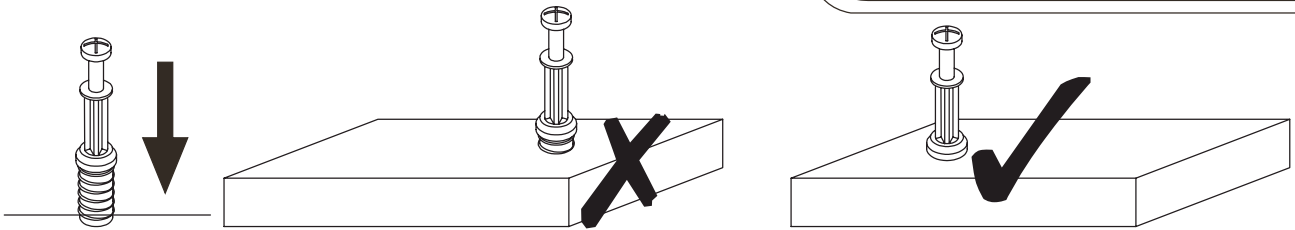


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

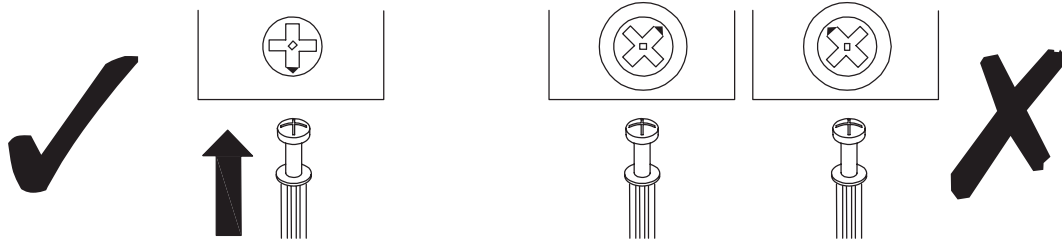












EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.











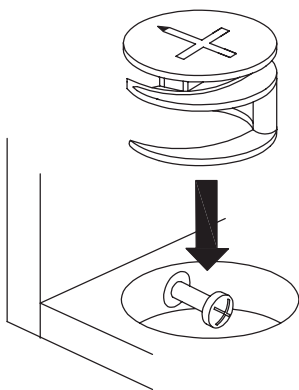


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.











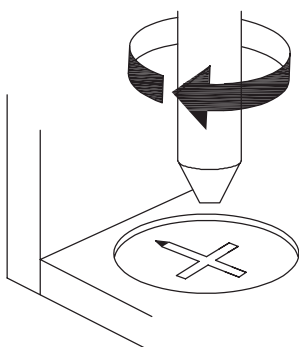






EN_Turn cam lock clockwise to tighten.

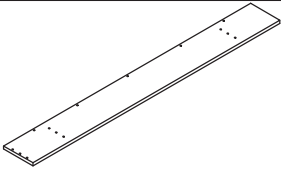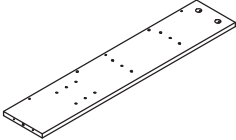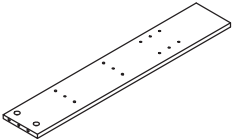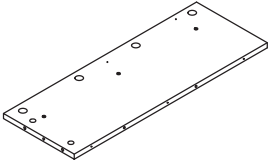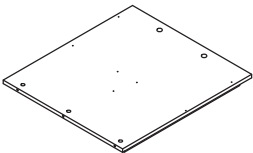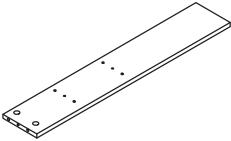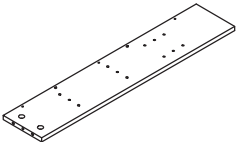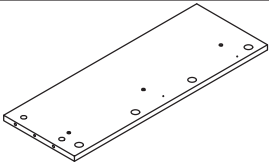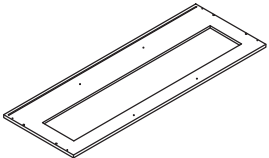
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x4	
⑥		x2	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x1	
⑪		x1	

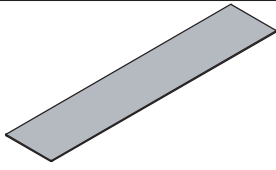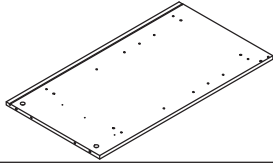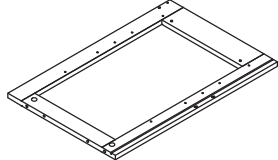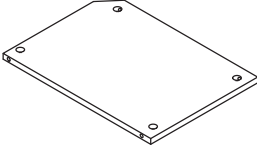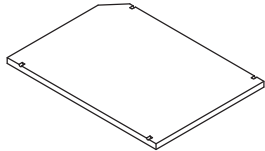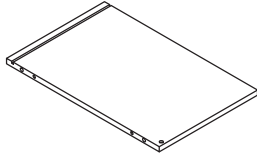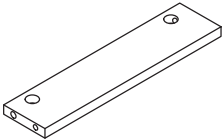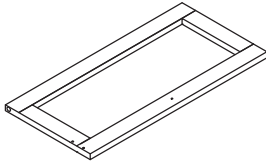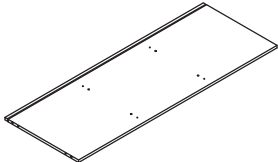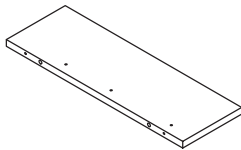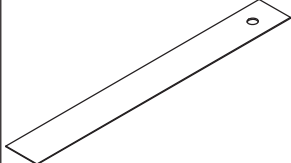NO.	PARTS	QTY	SPARE
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x1	
⑰		x1	
⑱		x2	
⑲		x1	
⑳		x1	
㉑		x2	
㉒		x1	


PACKING DELALS

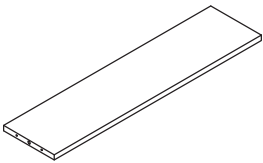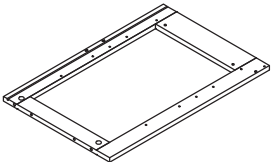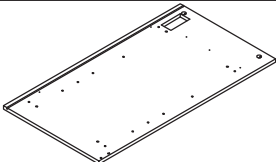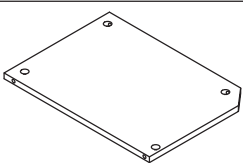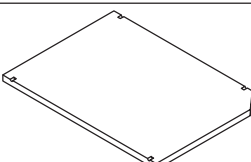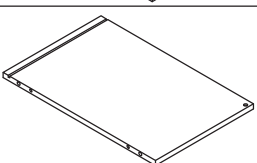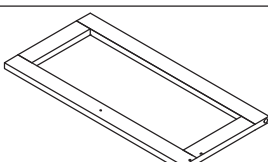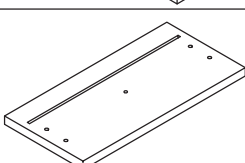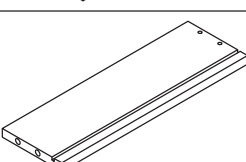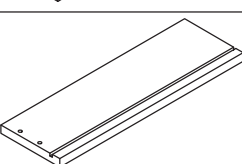
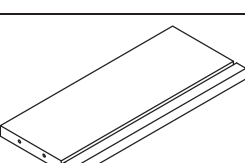
NO.	PARTS	QTY	SPARE
23		x1	
24		x1	
25		x1	
26		x1	
27		x1	
28		x1	
29		x1	
30		x3	
31		x3	
32		x3	
33		x3	

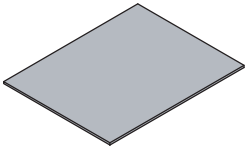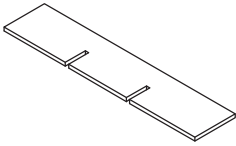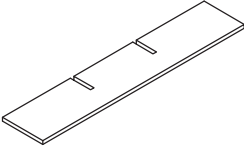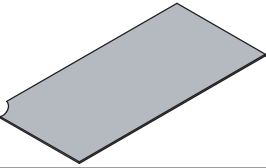NO.	PARTS	QTY	SPARE
34		x3	
35		x2	
36		x2	
37		x2	
	 Hardware Kit		

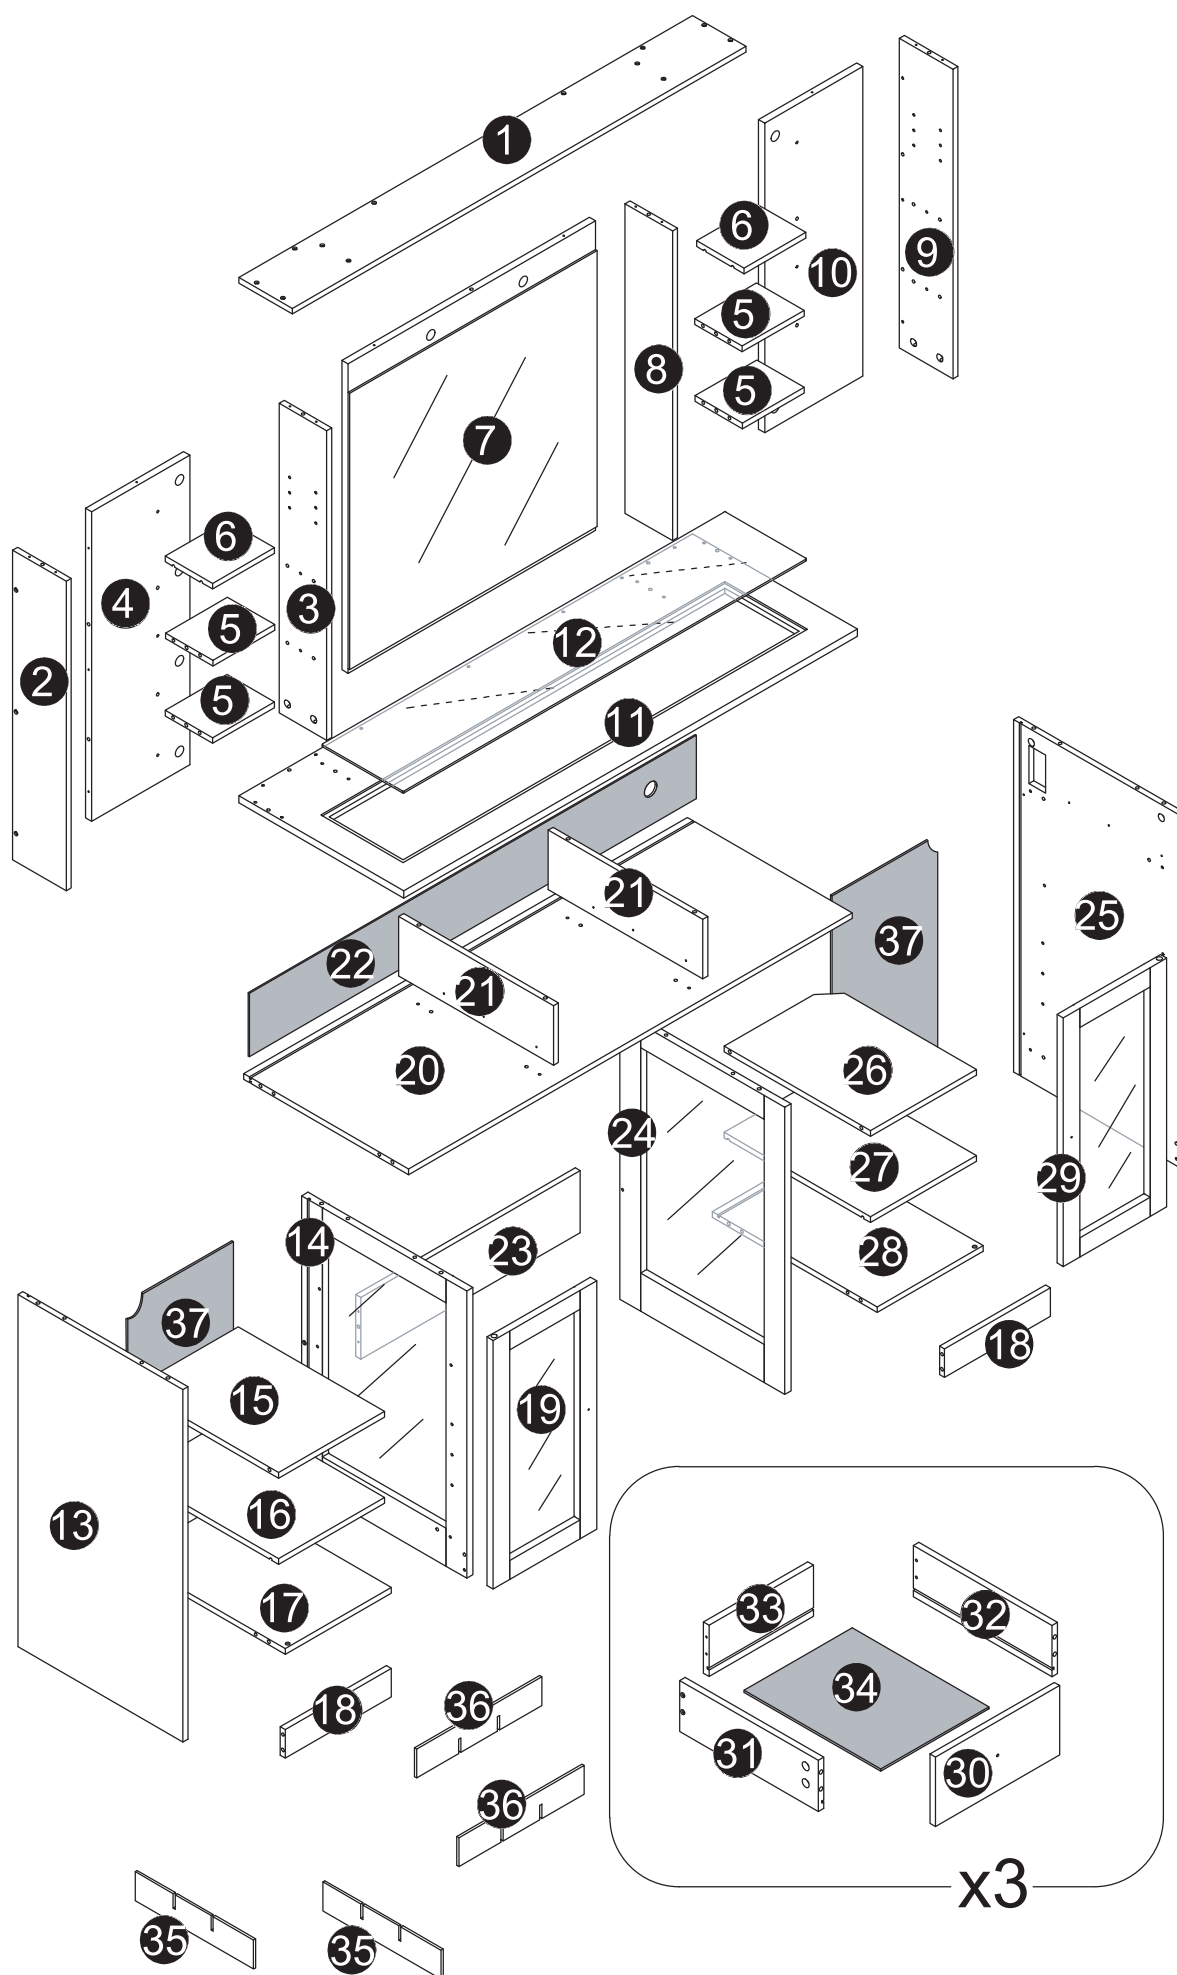


A x71 $\varnothing 6 \times 35 \text{mm}$ +2(spare)		B x71 $\varnothing 15 \times 10 \text{mm}$ +2(spare)		C x65 $\varnothing 6 \times 30 \text{mm}$ +3(spare)		D x44 $\varnothing 4 \times 35 \text{mm}$ +3(spare)		E x36 $\varnothing 3.5 \times 12 \text{mm}$ +3(spare)		F x3 F-1 F-2	
G-1 G-2 G x2 $\varnothing 4 \times 14 \text{mm}$ G-3		H-1 H-2 H x18 $\varnothing 3 \times 16 \text{mm}$ +2(spare)		I-1 I-2 I x2		J x4 $\varnothing 4 \times 12 \text{mm}$		K x16		L x2 $\varnothing 3 \times 16 \text{mm}$ L-1 L-2	
M-1 M-2 M x6 $\varnothing 3.5 \times 12 \text{mm}$		N-1 N-2 N x8 $\varnothing 4 \times 12 \text{mm}$ +1(spare)		O x1		P-1 P-2 P-3 P-4 x10 x10 x1 x1		P x1		R x1	
S x1		T x26 +2(spare)		U x4		V-1 V-2 x2					
CL x3 $L300 \text{mm}$		CR x3 $L300 \text{mm}$		DL x3 $L300 \text{mm}$		DR x3 $L300 \text{mm}$					

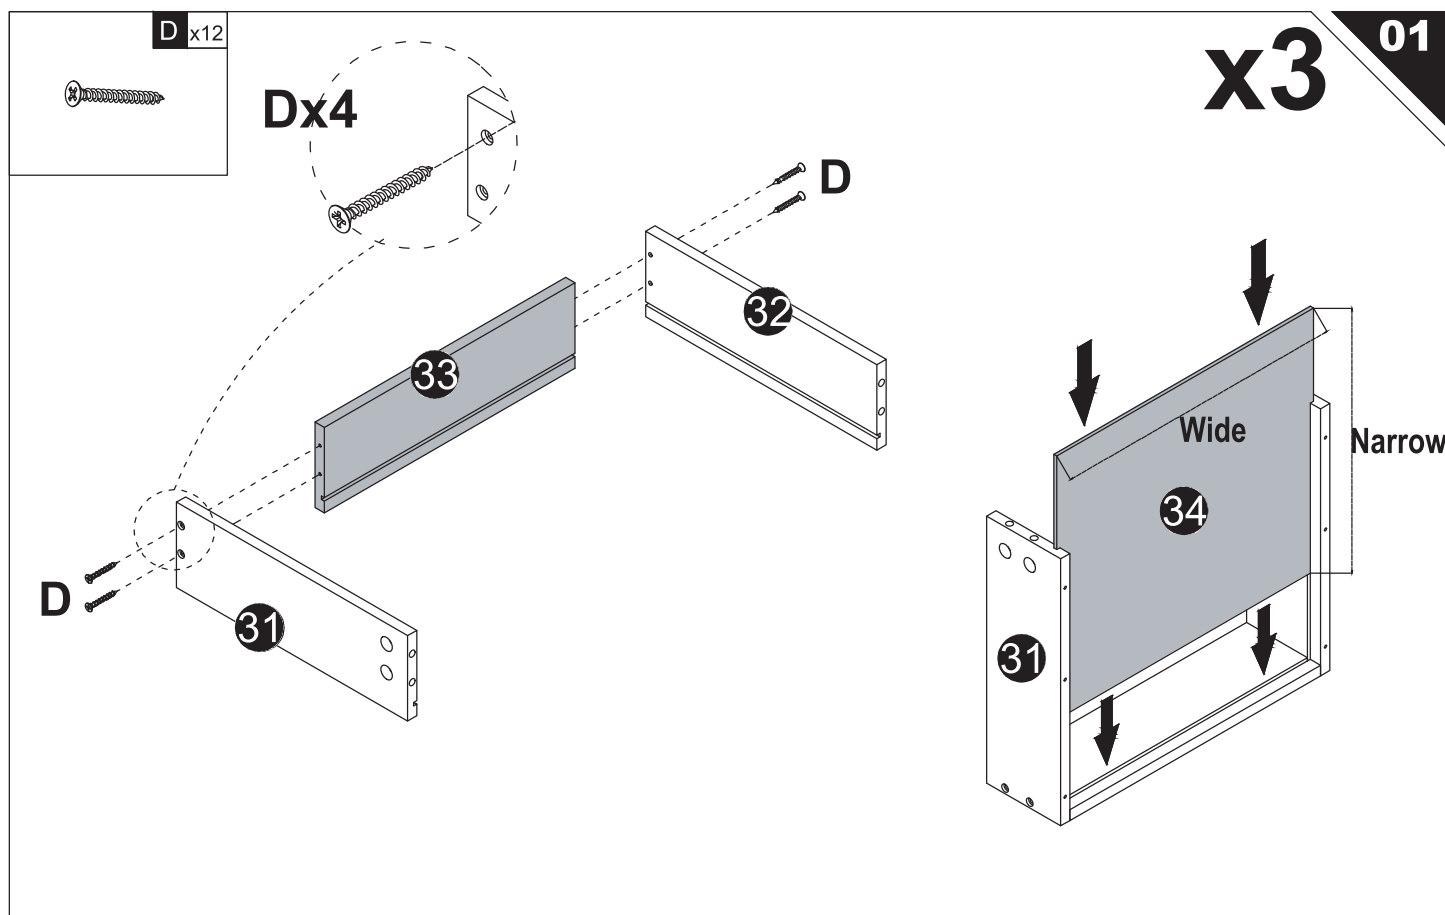


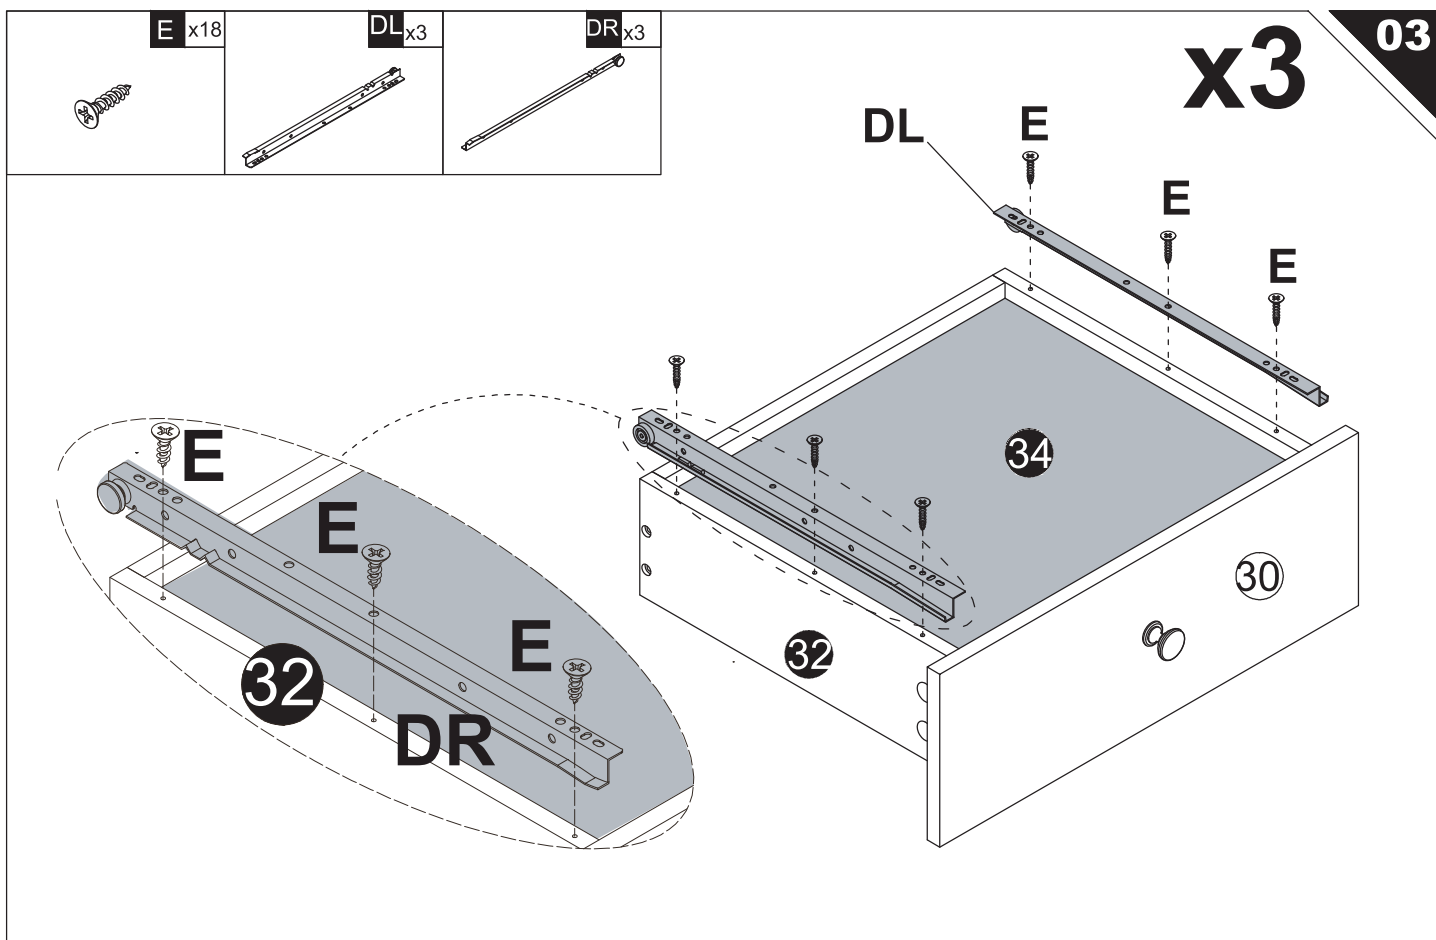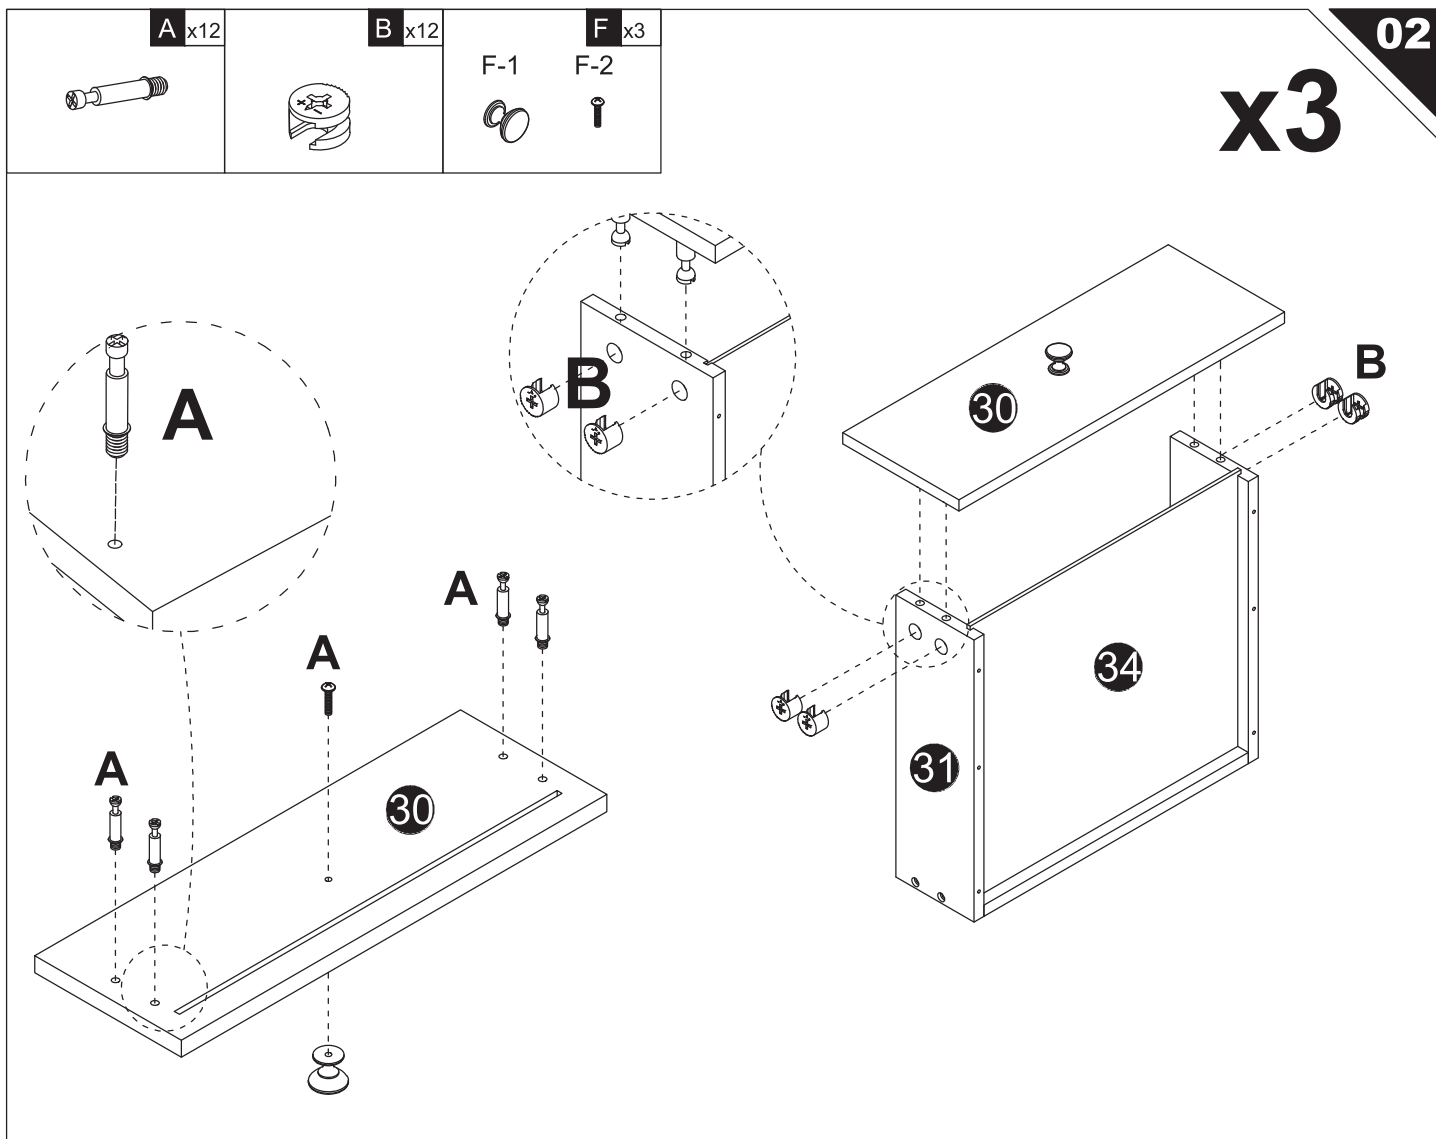

A x5




04

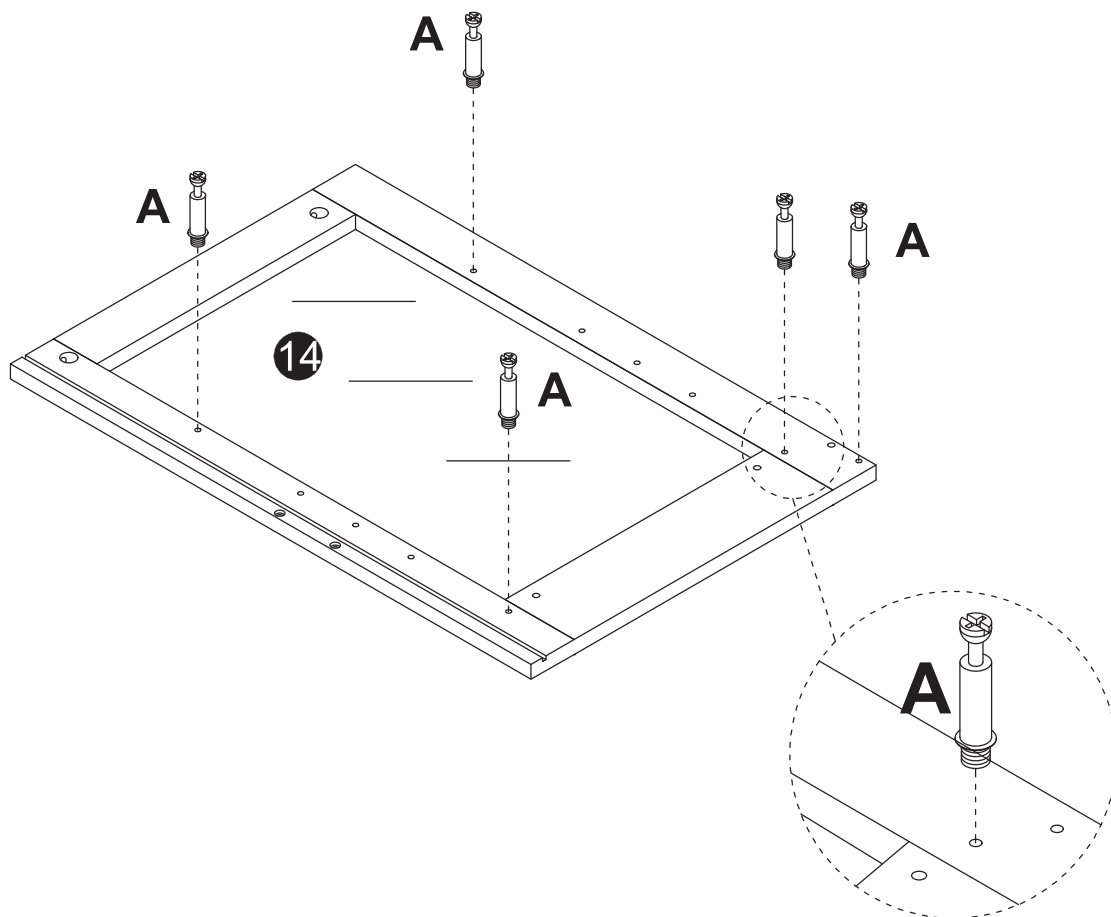

A x5




05

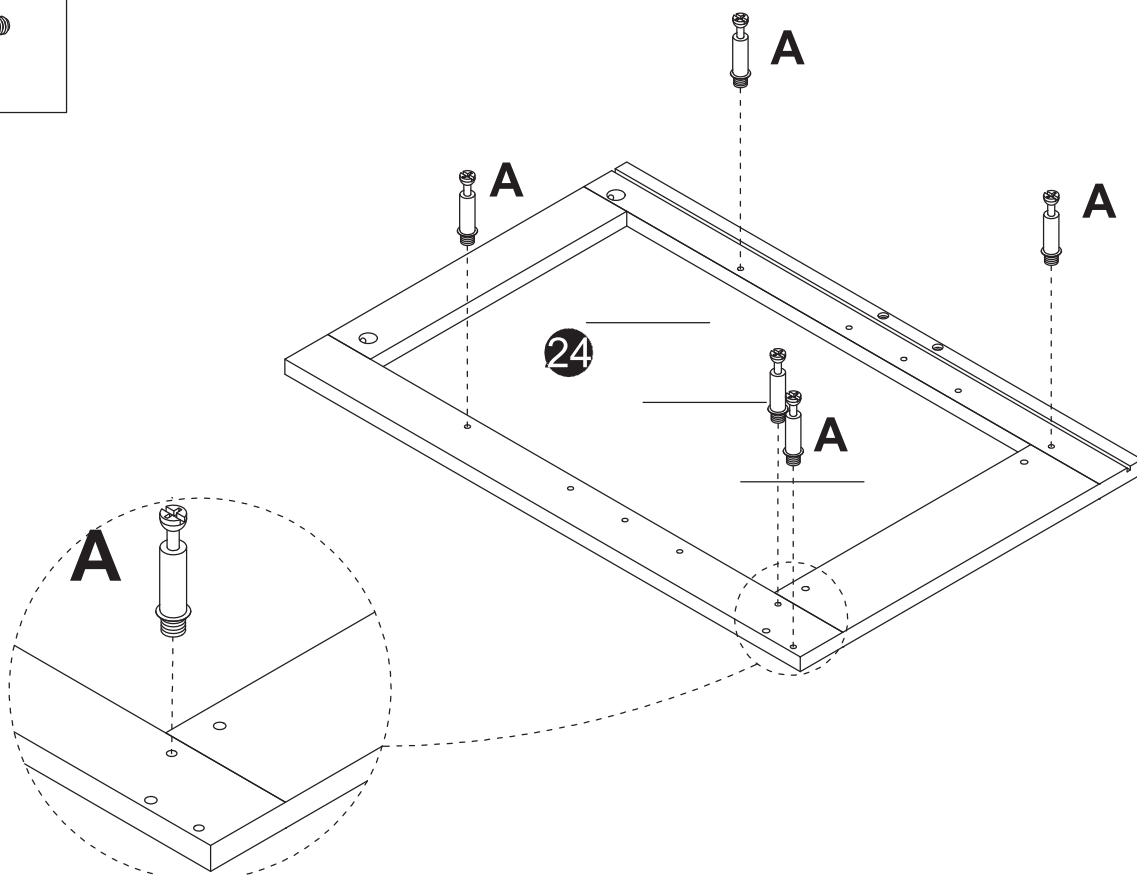

C x2



D x4

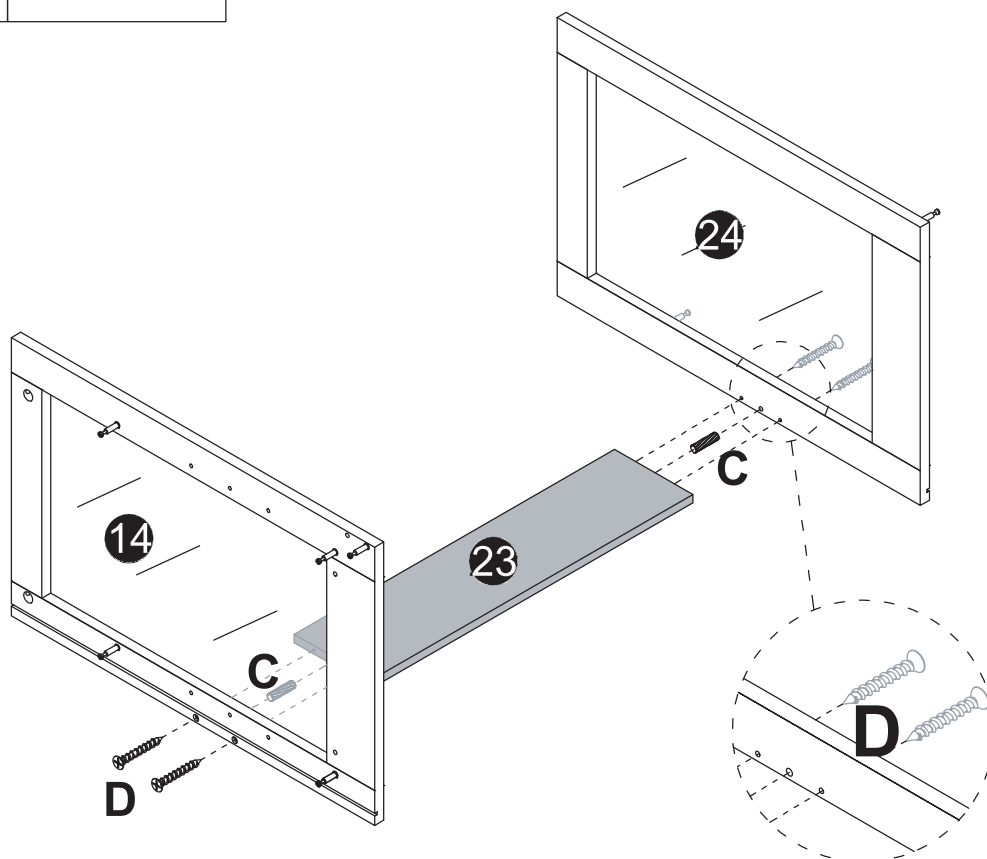





E x12

CL x2


CR x2



x2

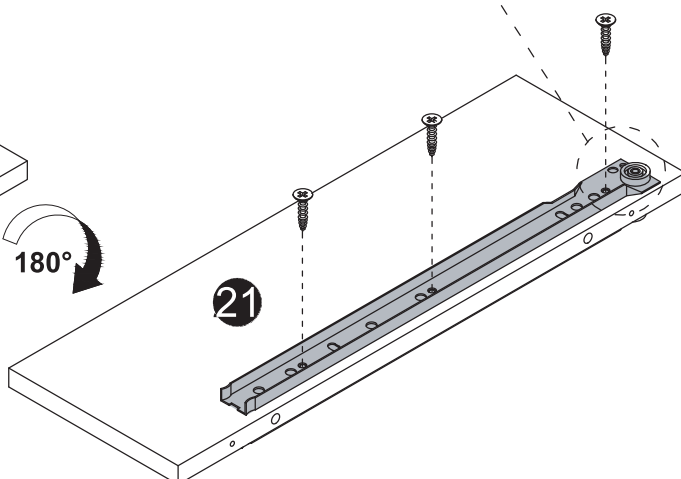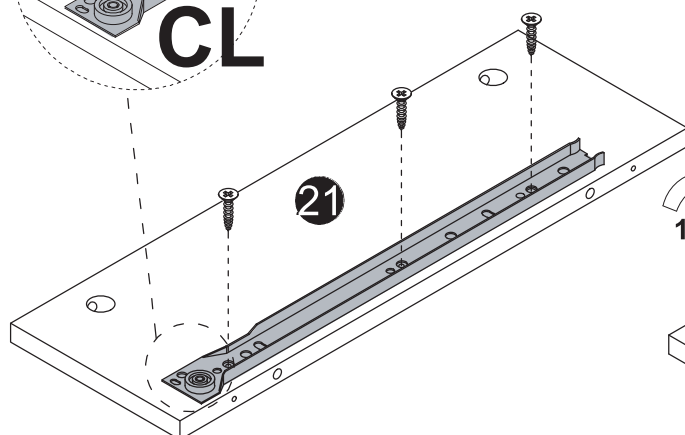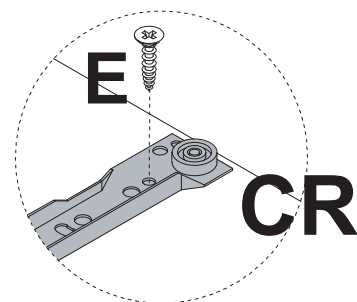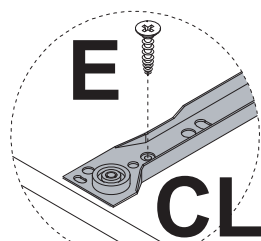

A x4




L x2

L-1




L-2


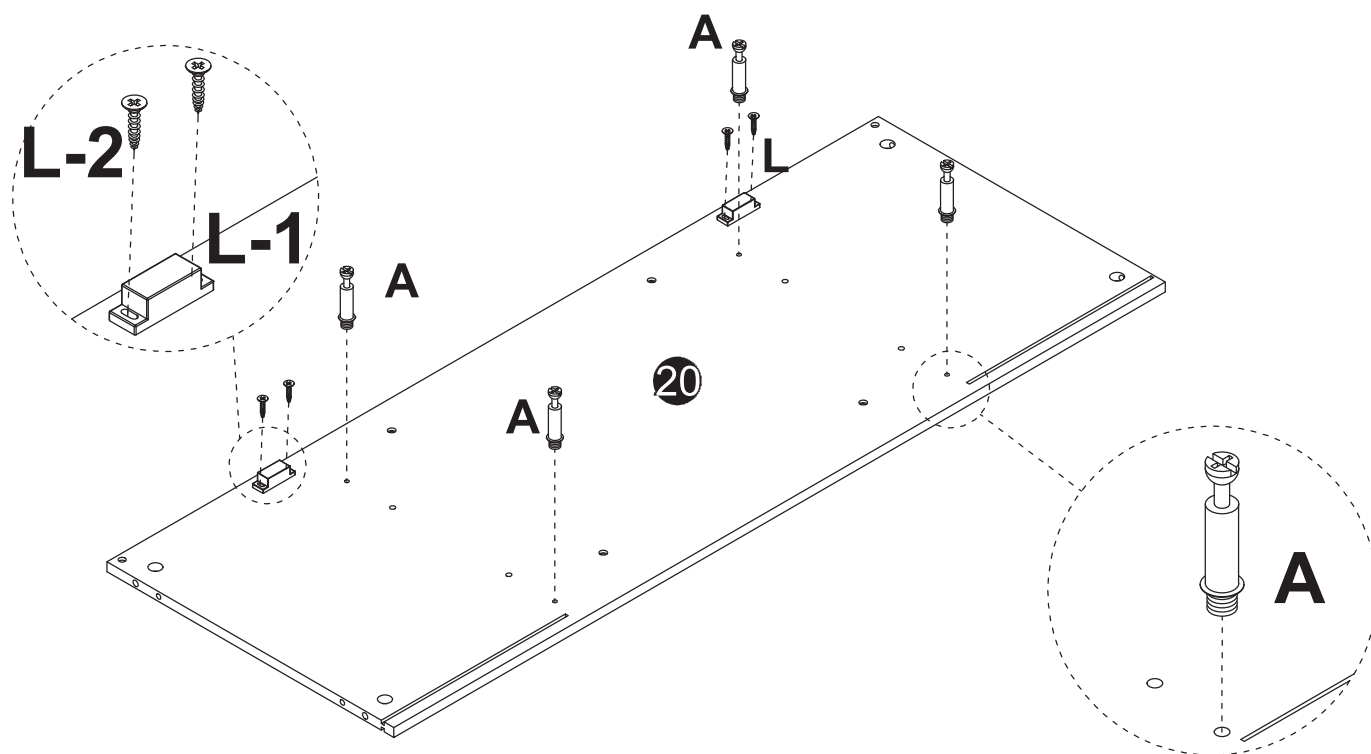


C x4



D x4


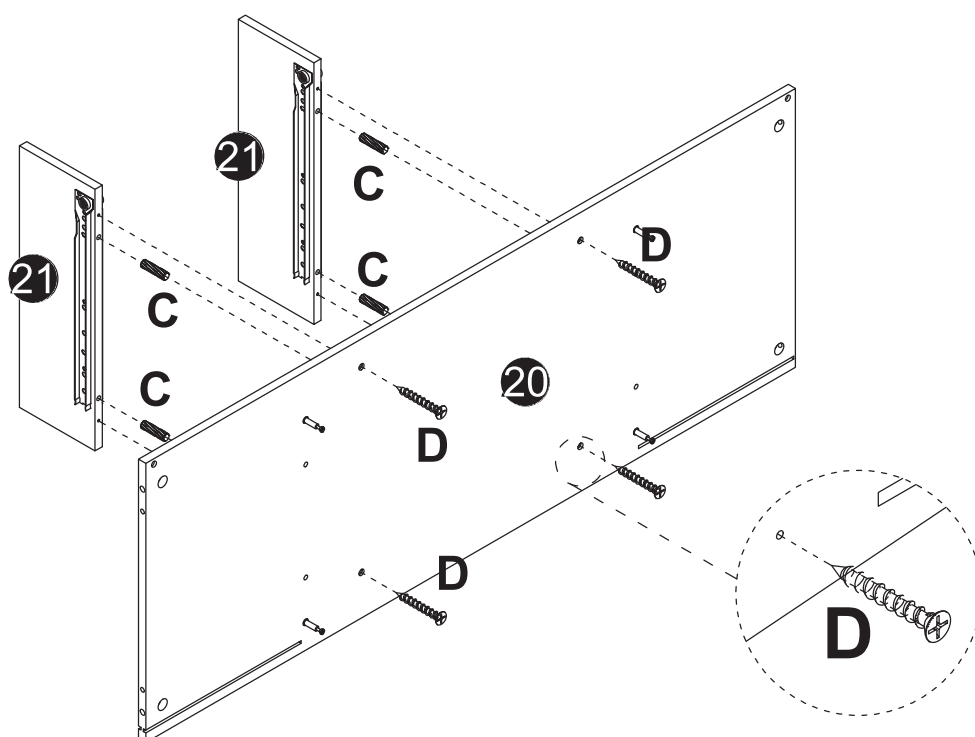


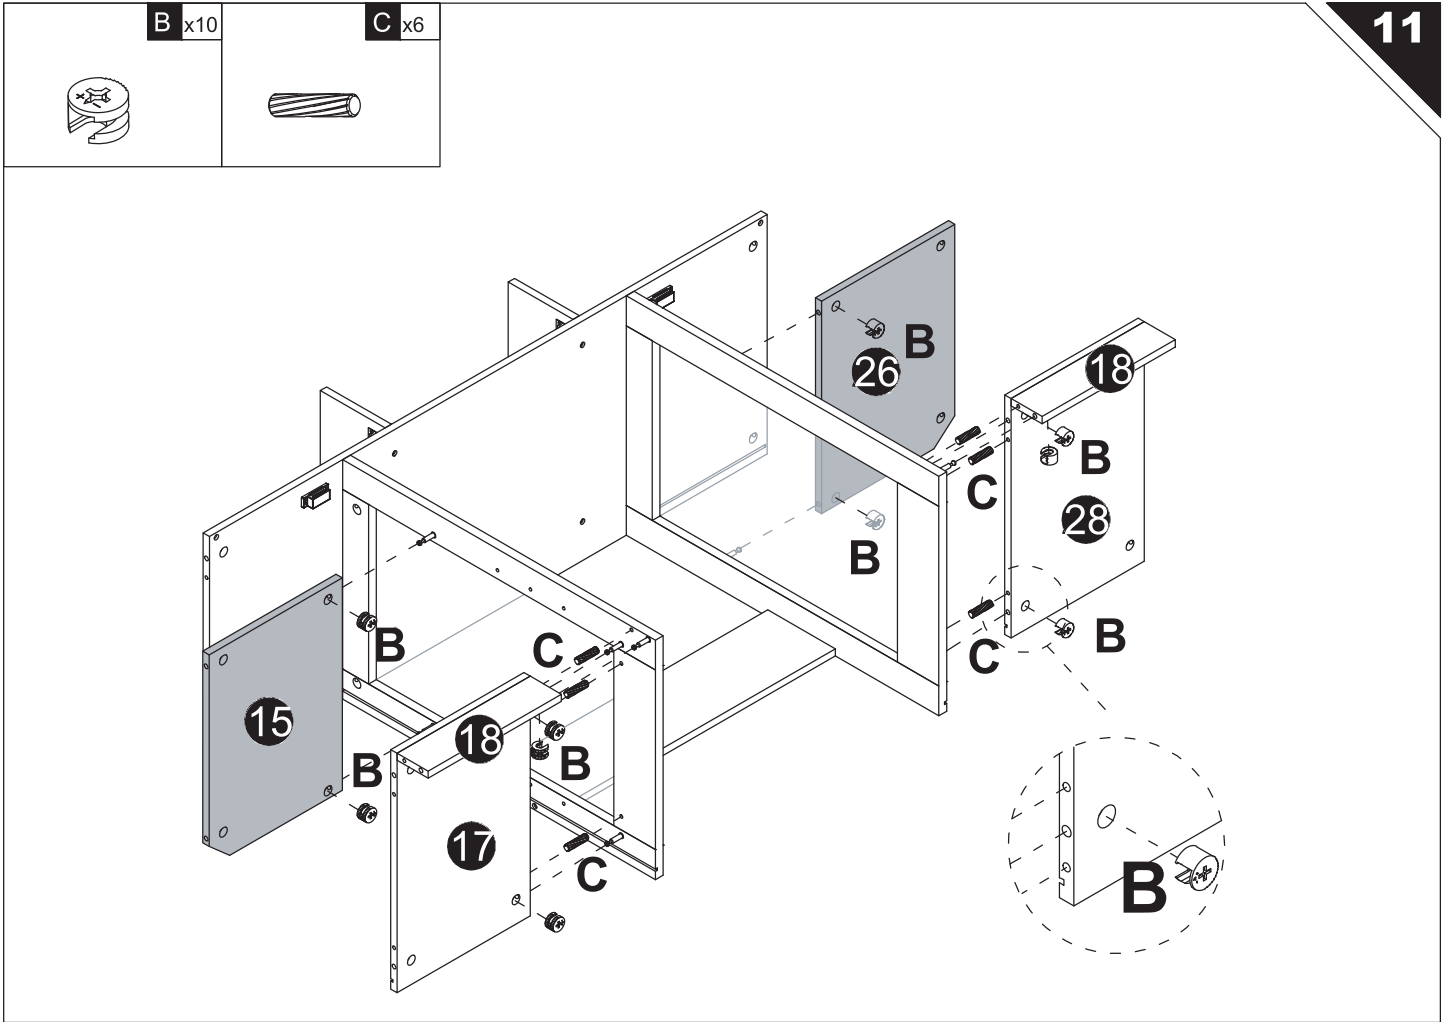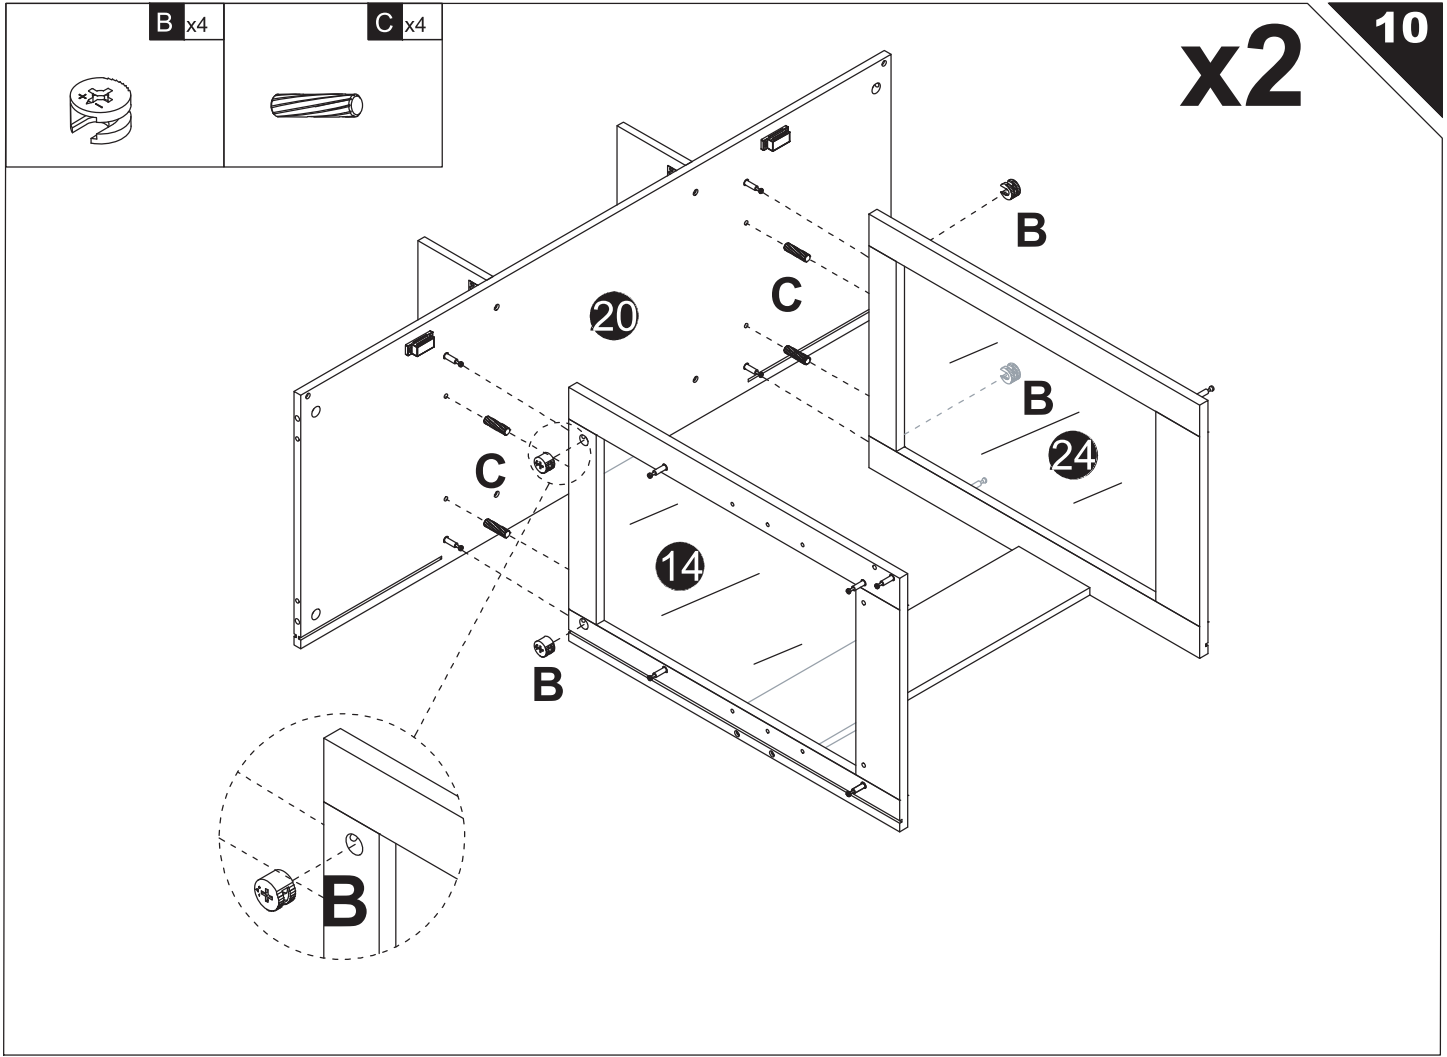

A x7

E x3




CL x1

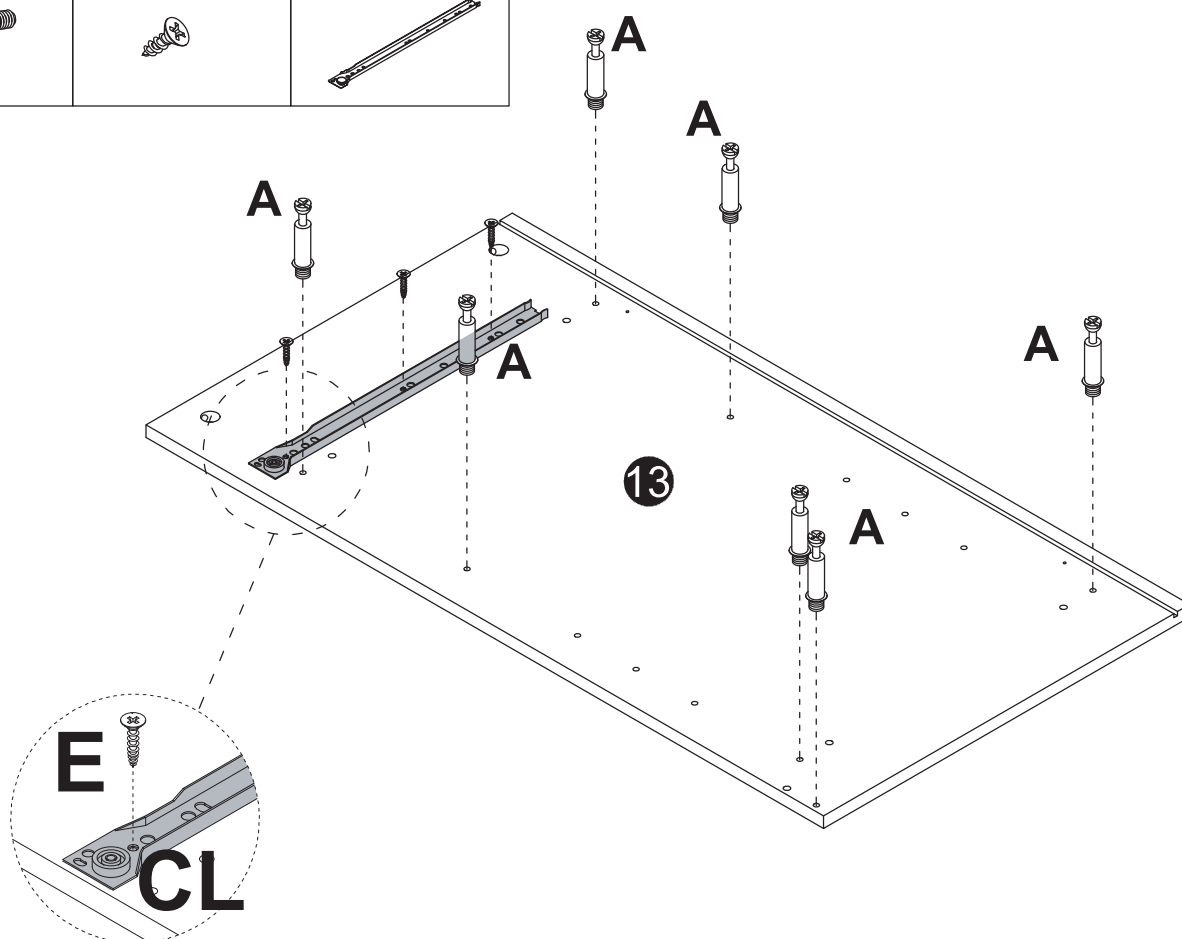

A x7

E x3

CR x1

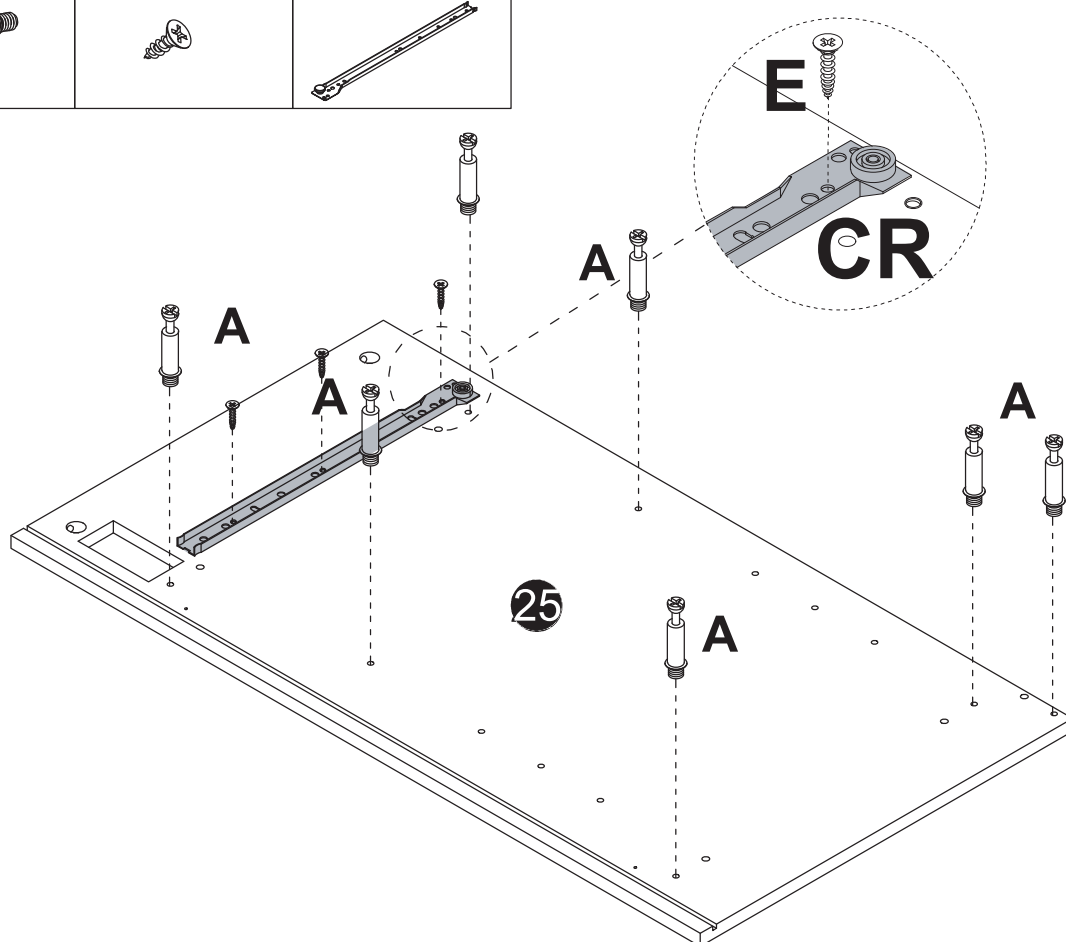

N x4


O x1





N-1



N-2

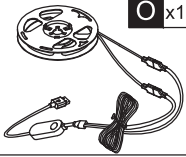


Tear off the back
glue of the light strip

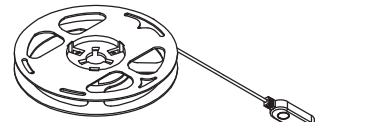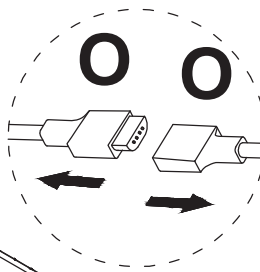

O

O


! Cord length LED strip light

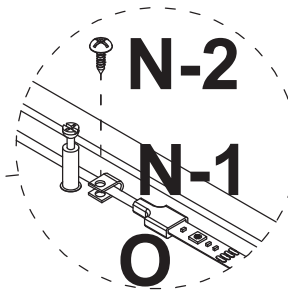

N-2

N-1


O

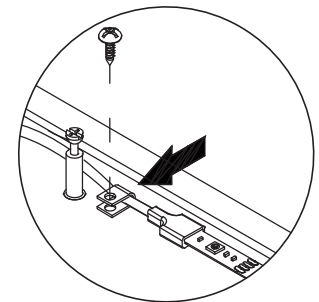

LED light strips installed along
channel edges.


! Short line LED strip light

O

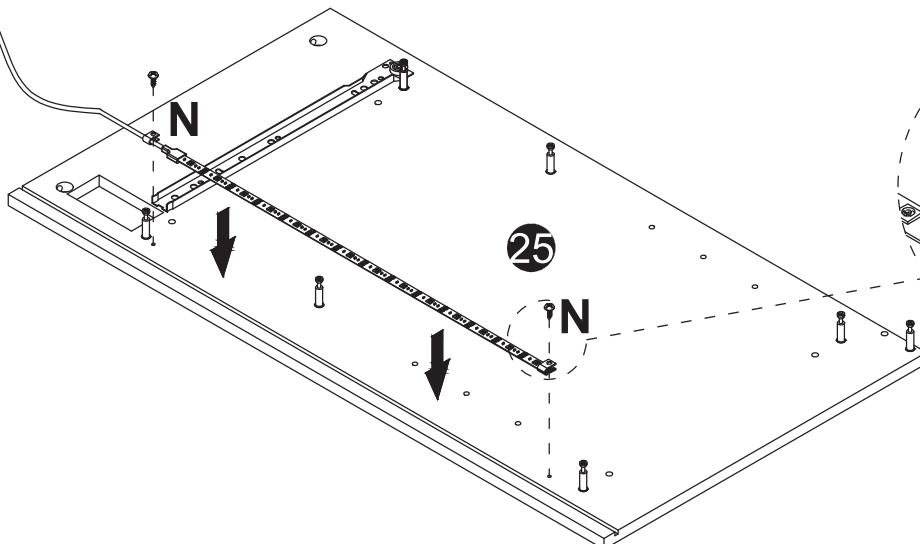

25

N

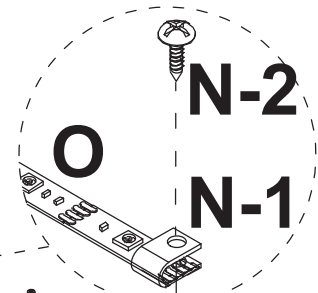


N-2

N-1


O

B x14


C x10

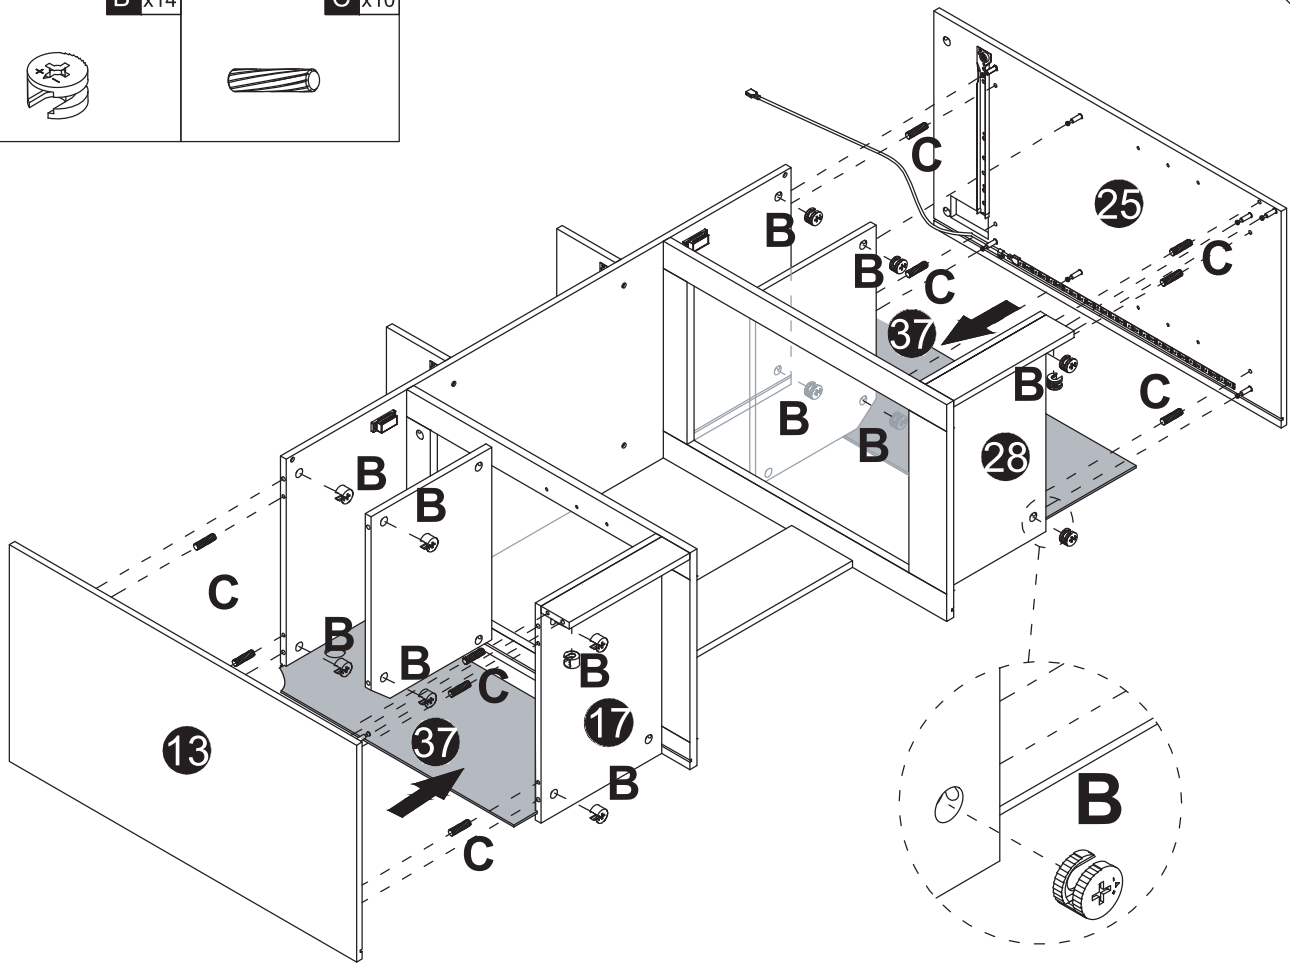


Peel off the sticker
on the glass

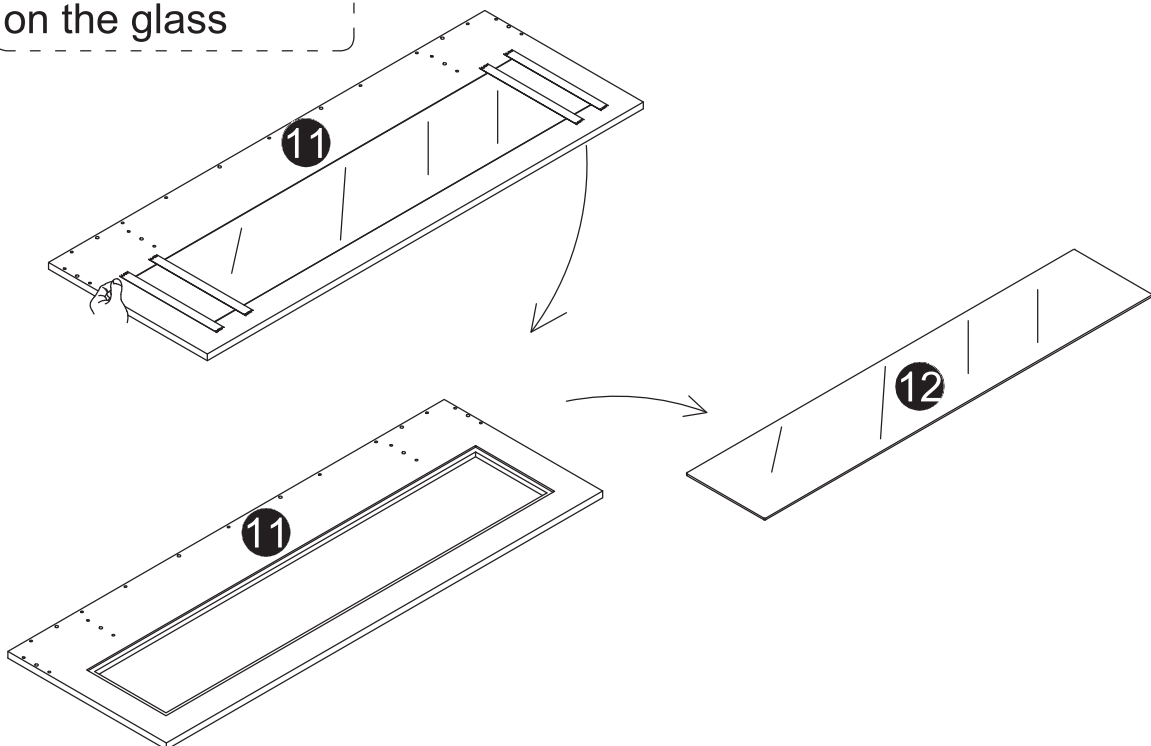

A x8



17

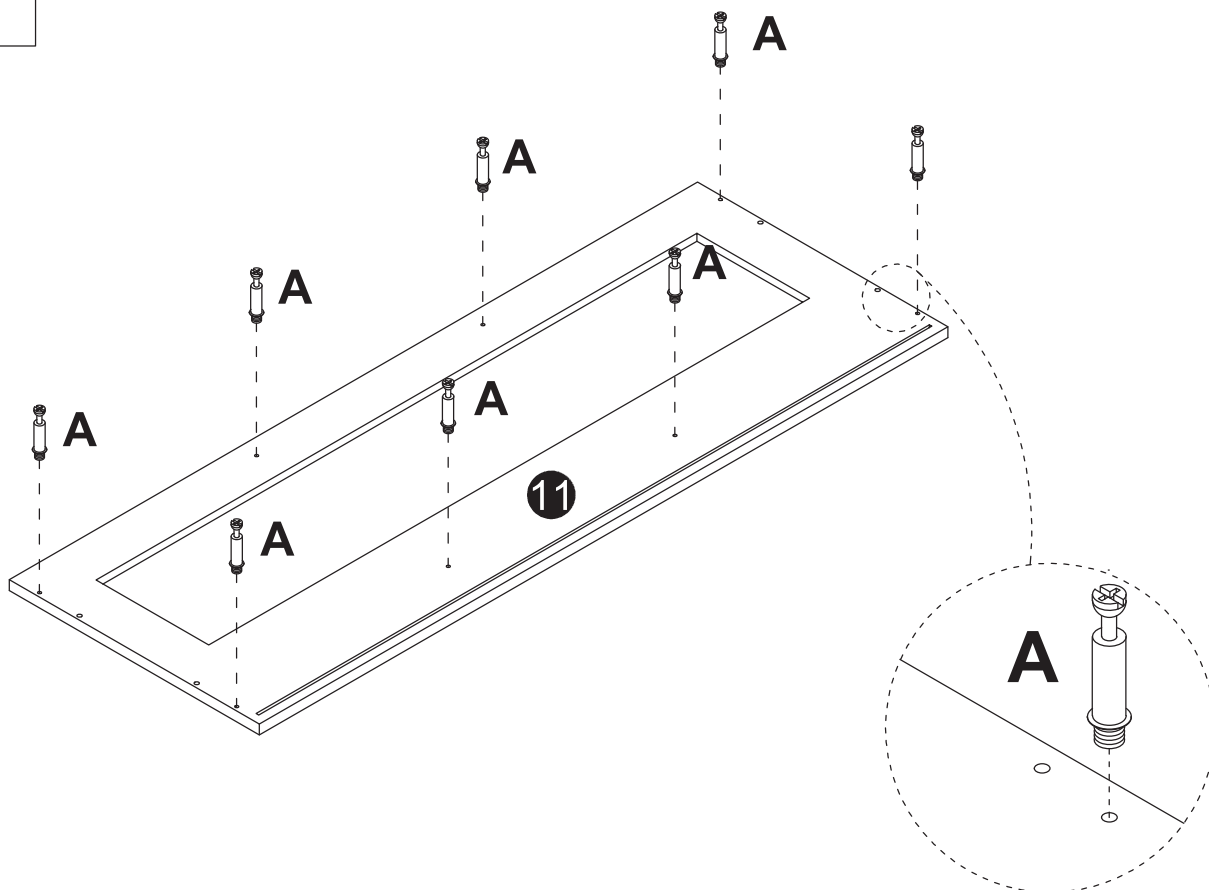


B x8




C x4



18

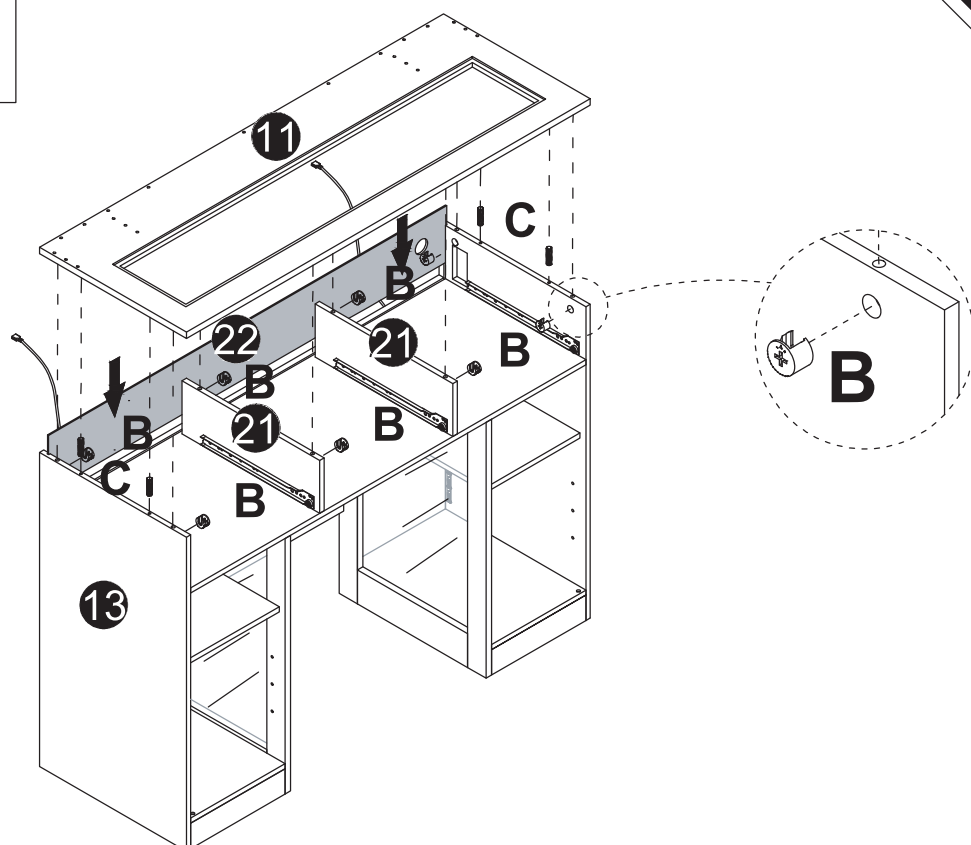


A x4

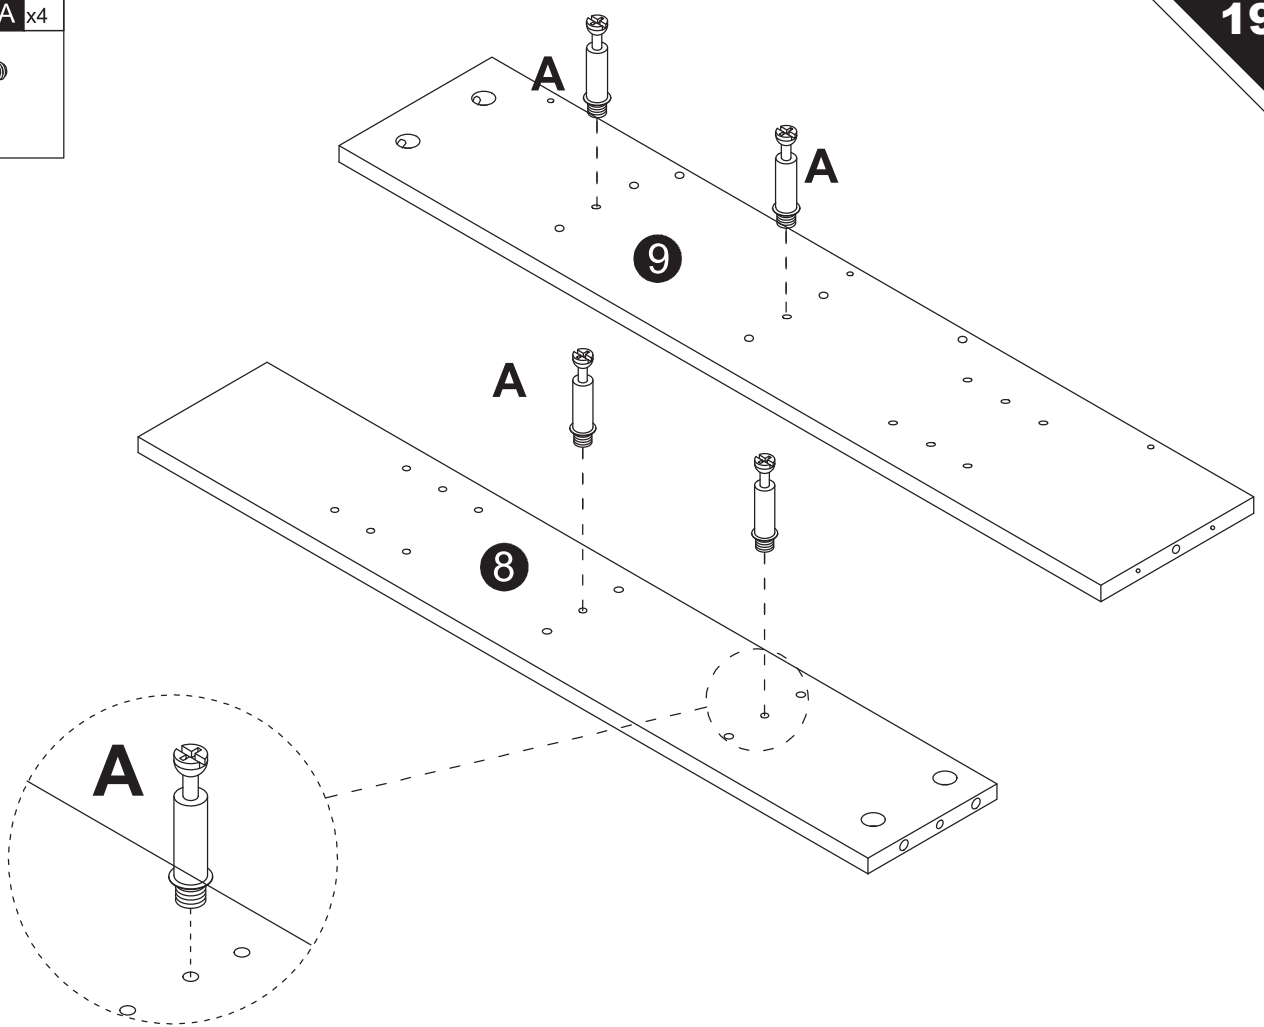

B x2




C x4

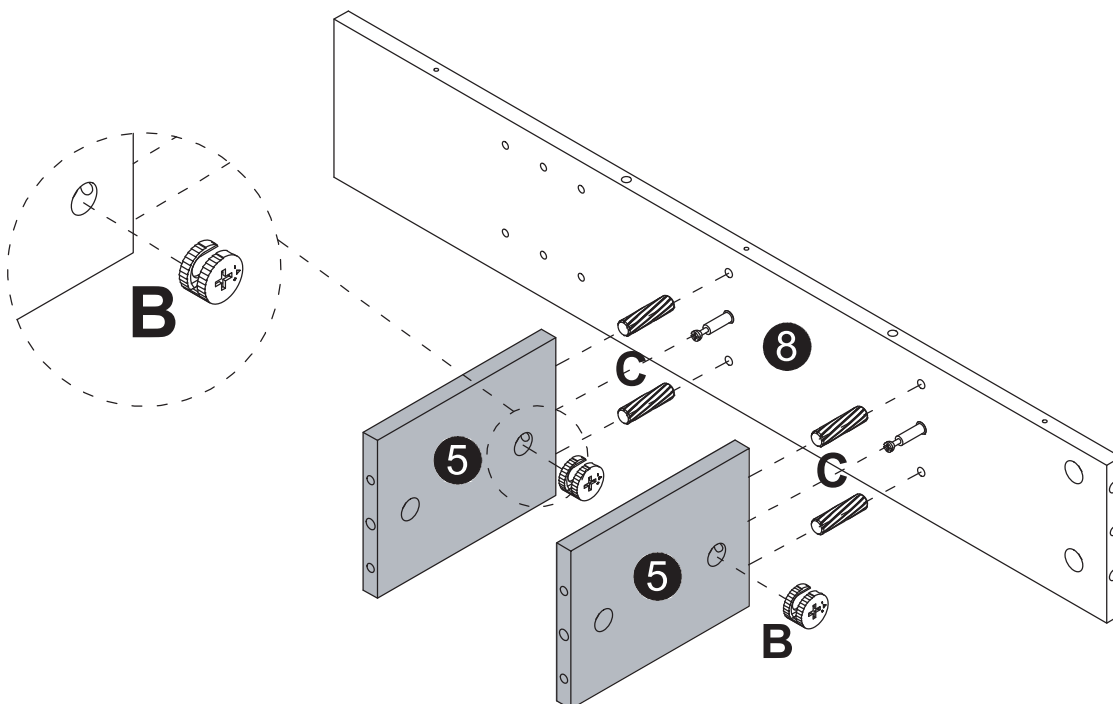

C x2


D x3

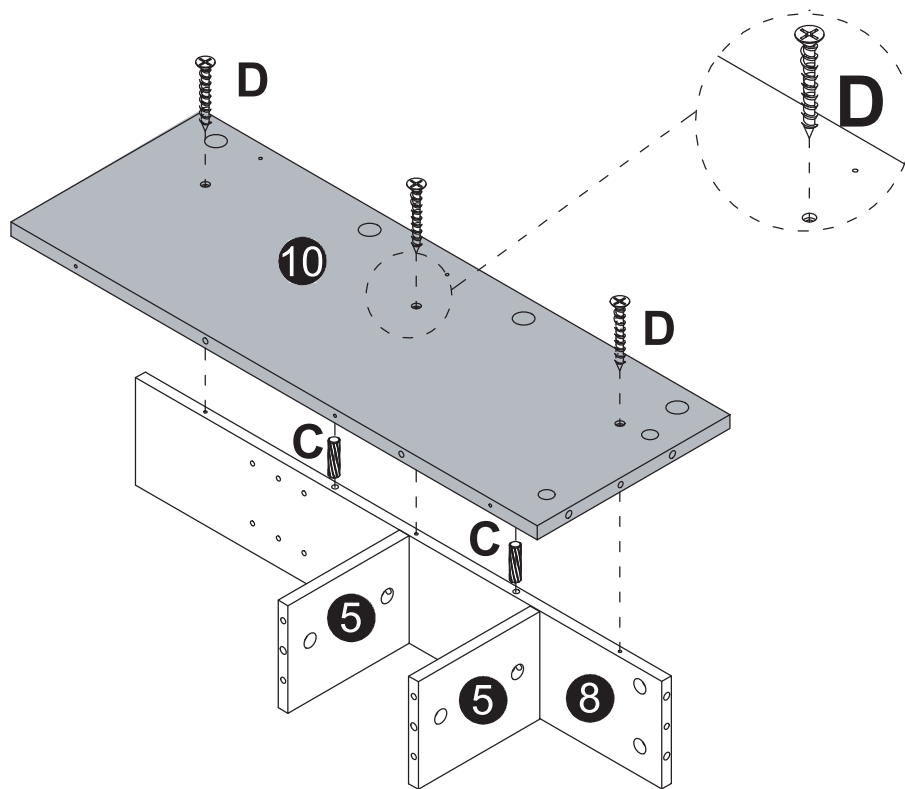

B x2

C x6


D x3

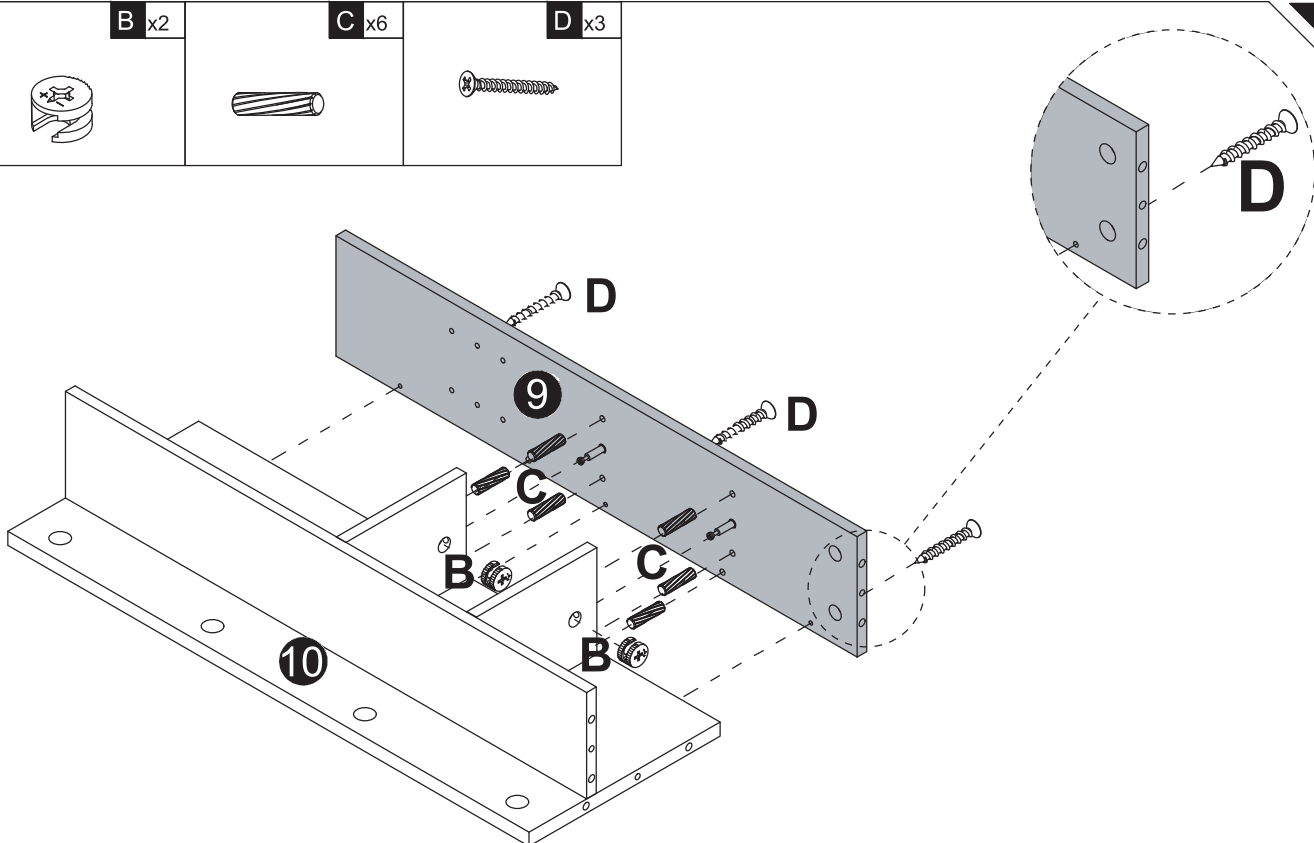

A x4



23

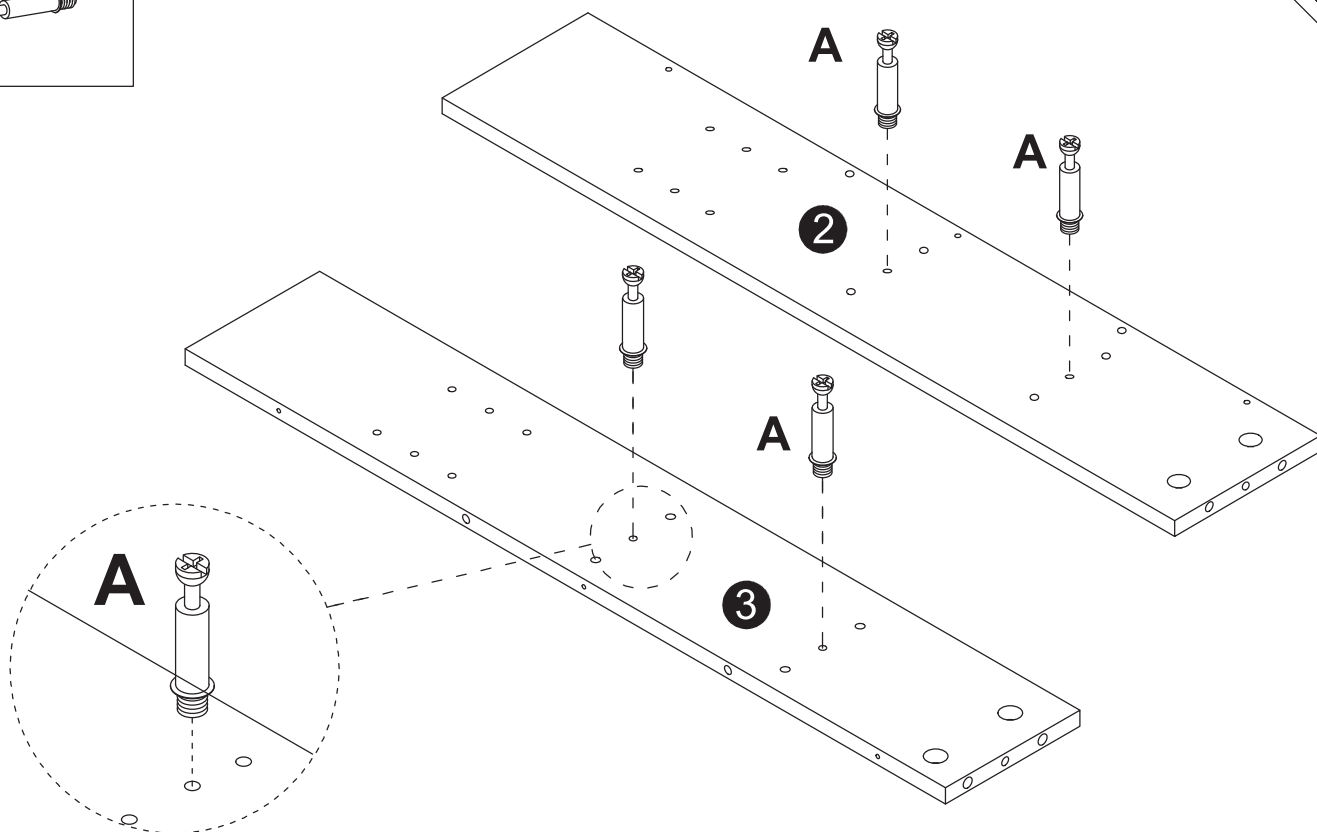


B x2



C x4




24

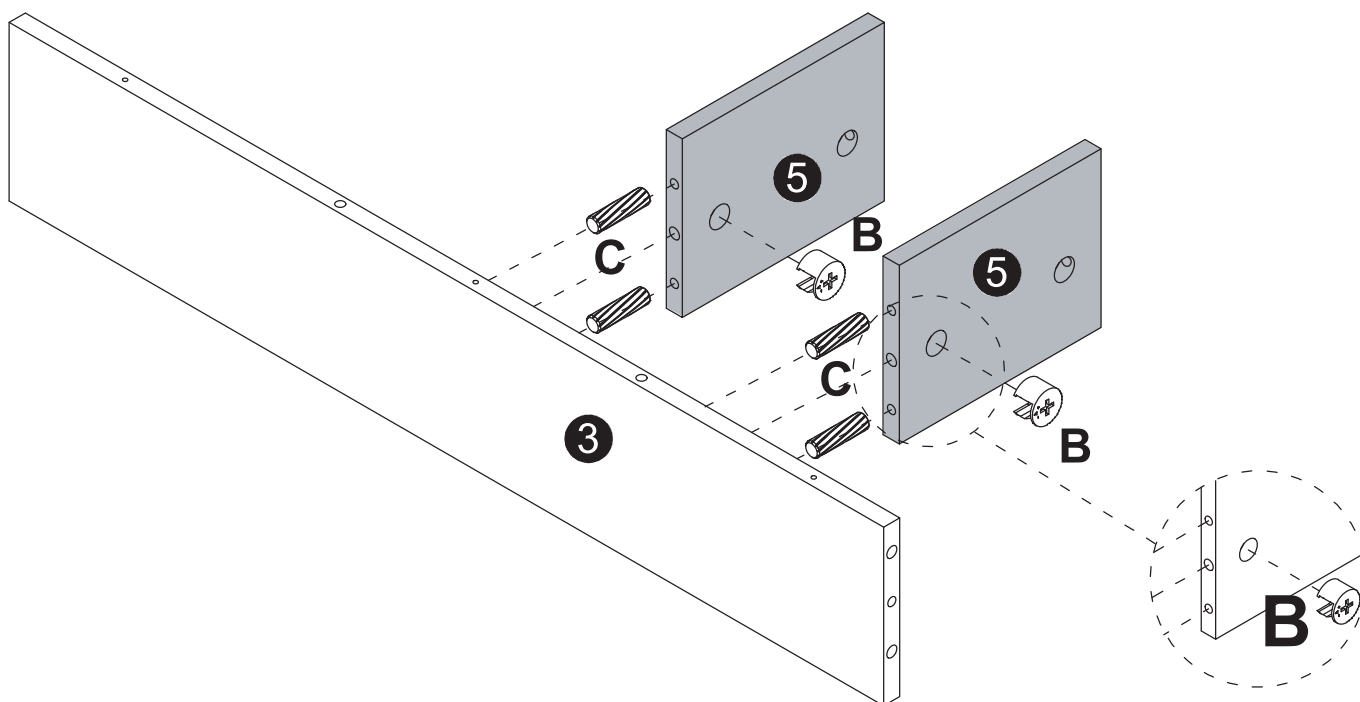

C x2


D x3

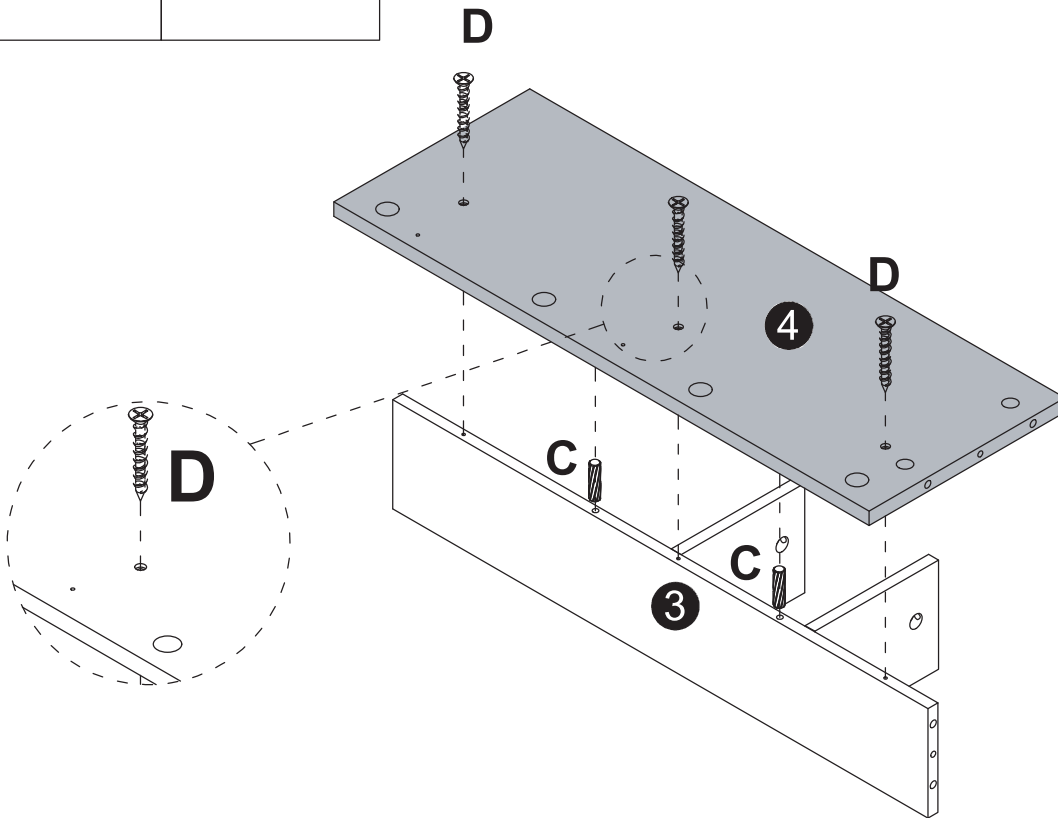


B x2

C x6

D x3

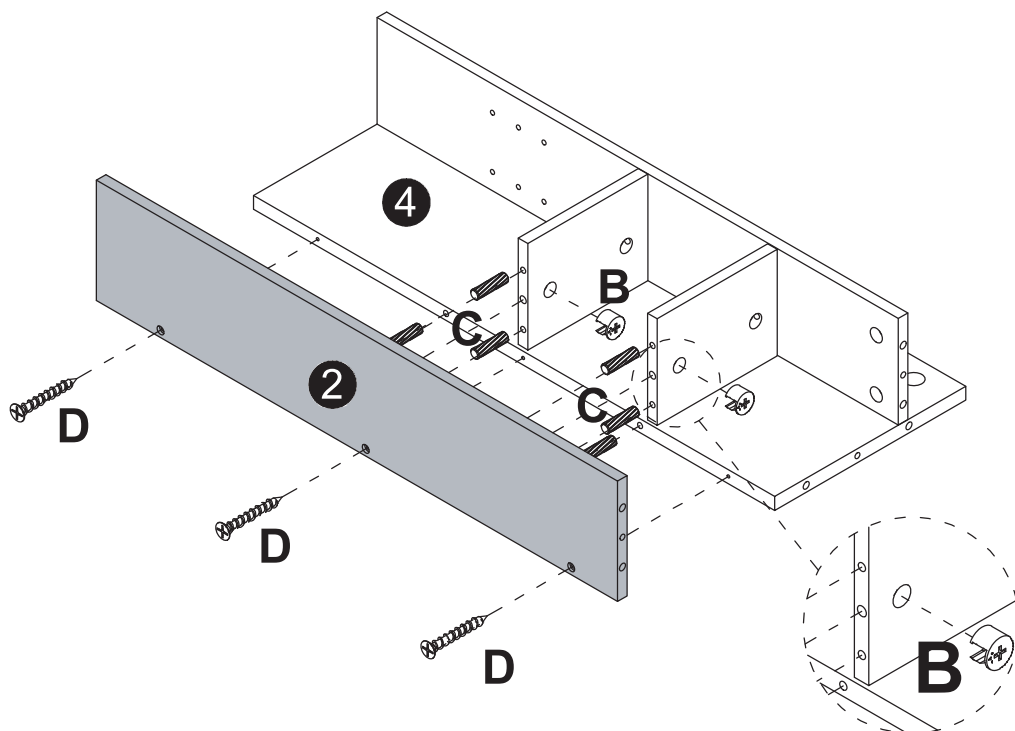


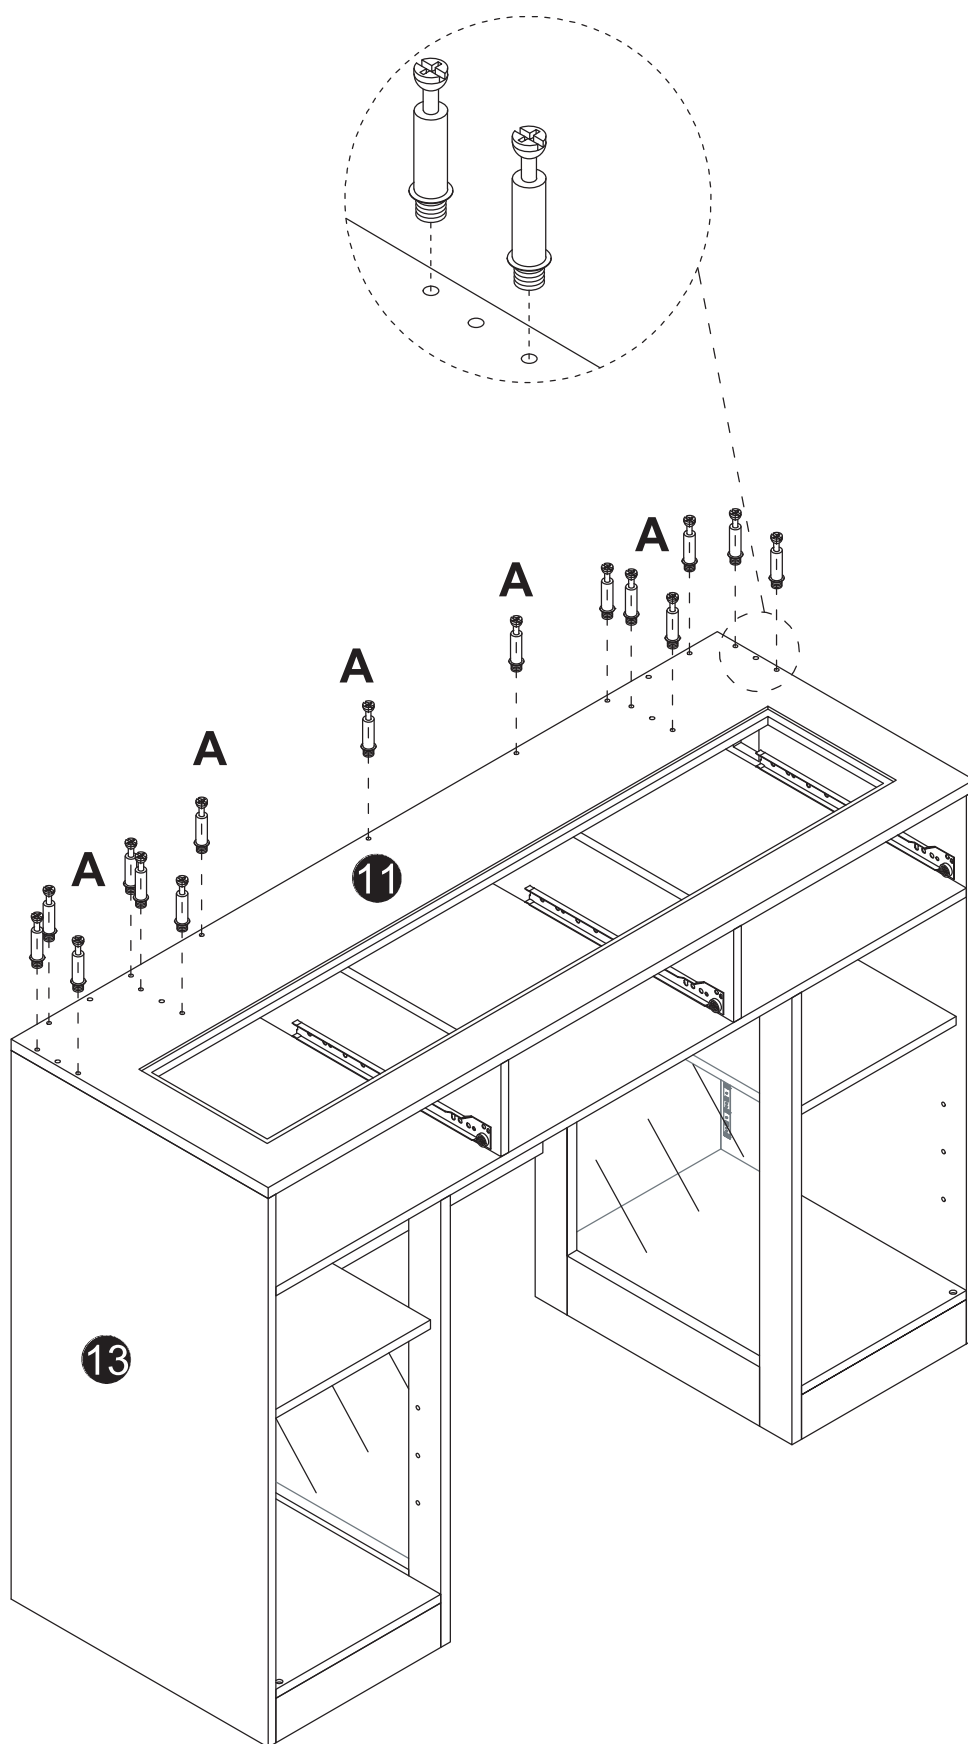


M-1



M x4


M-2

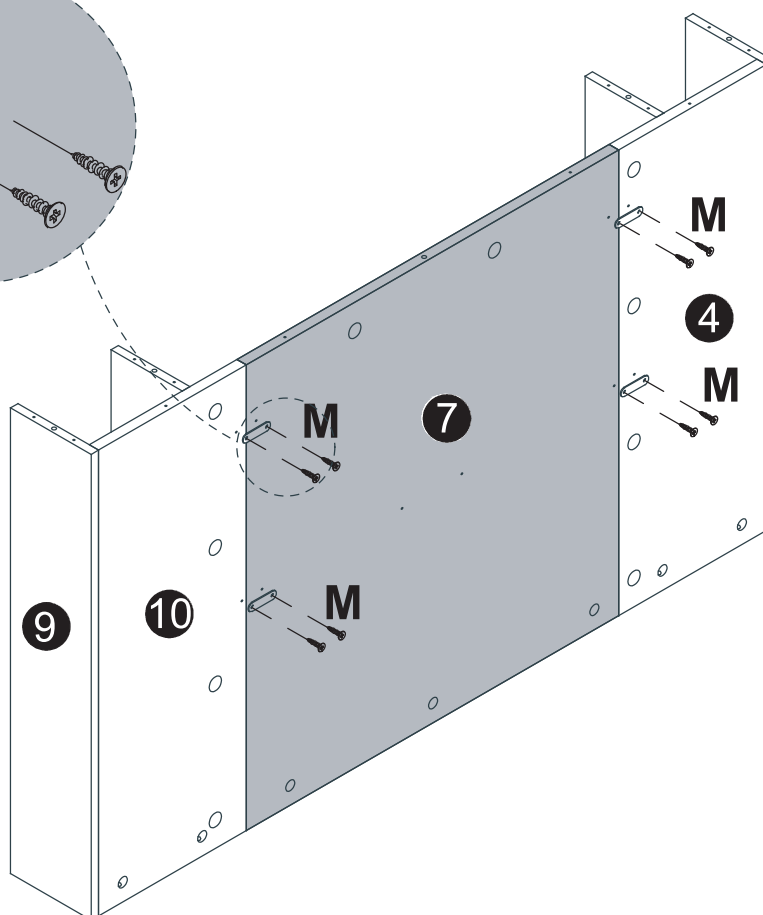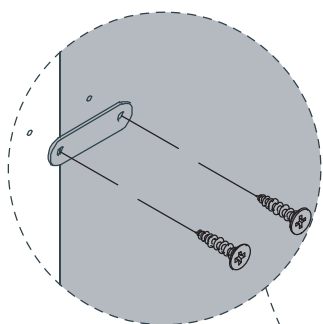

C x5



D x12

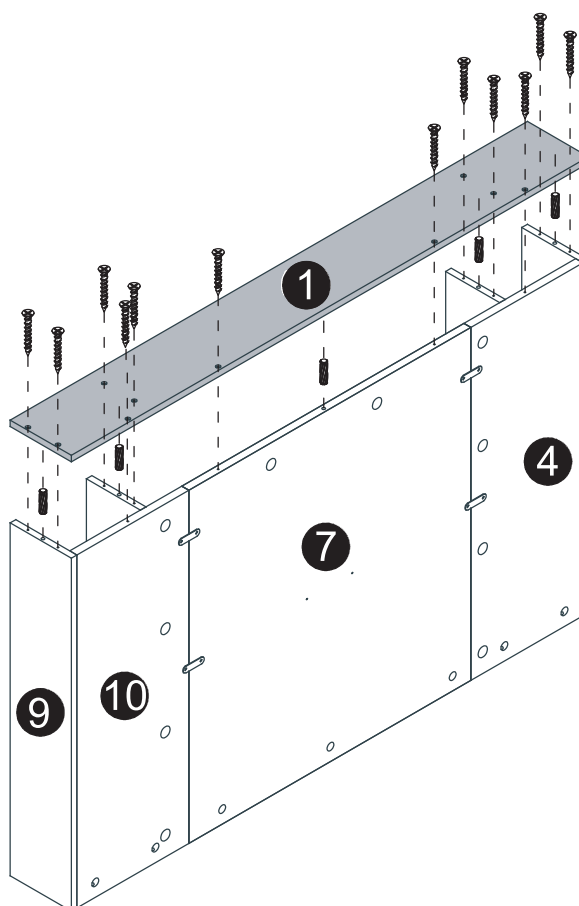


B x15


C x6



30

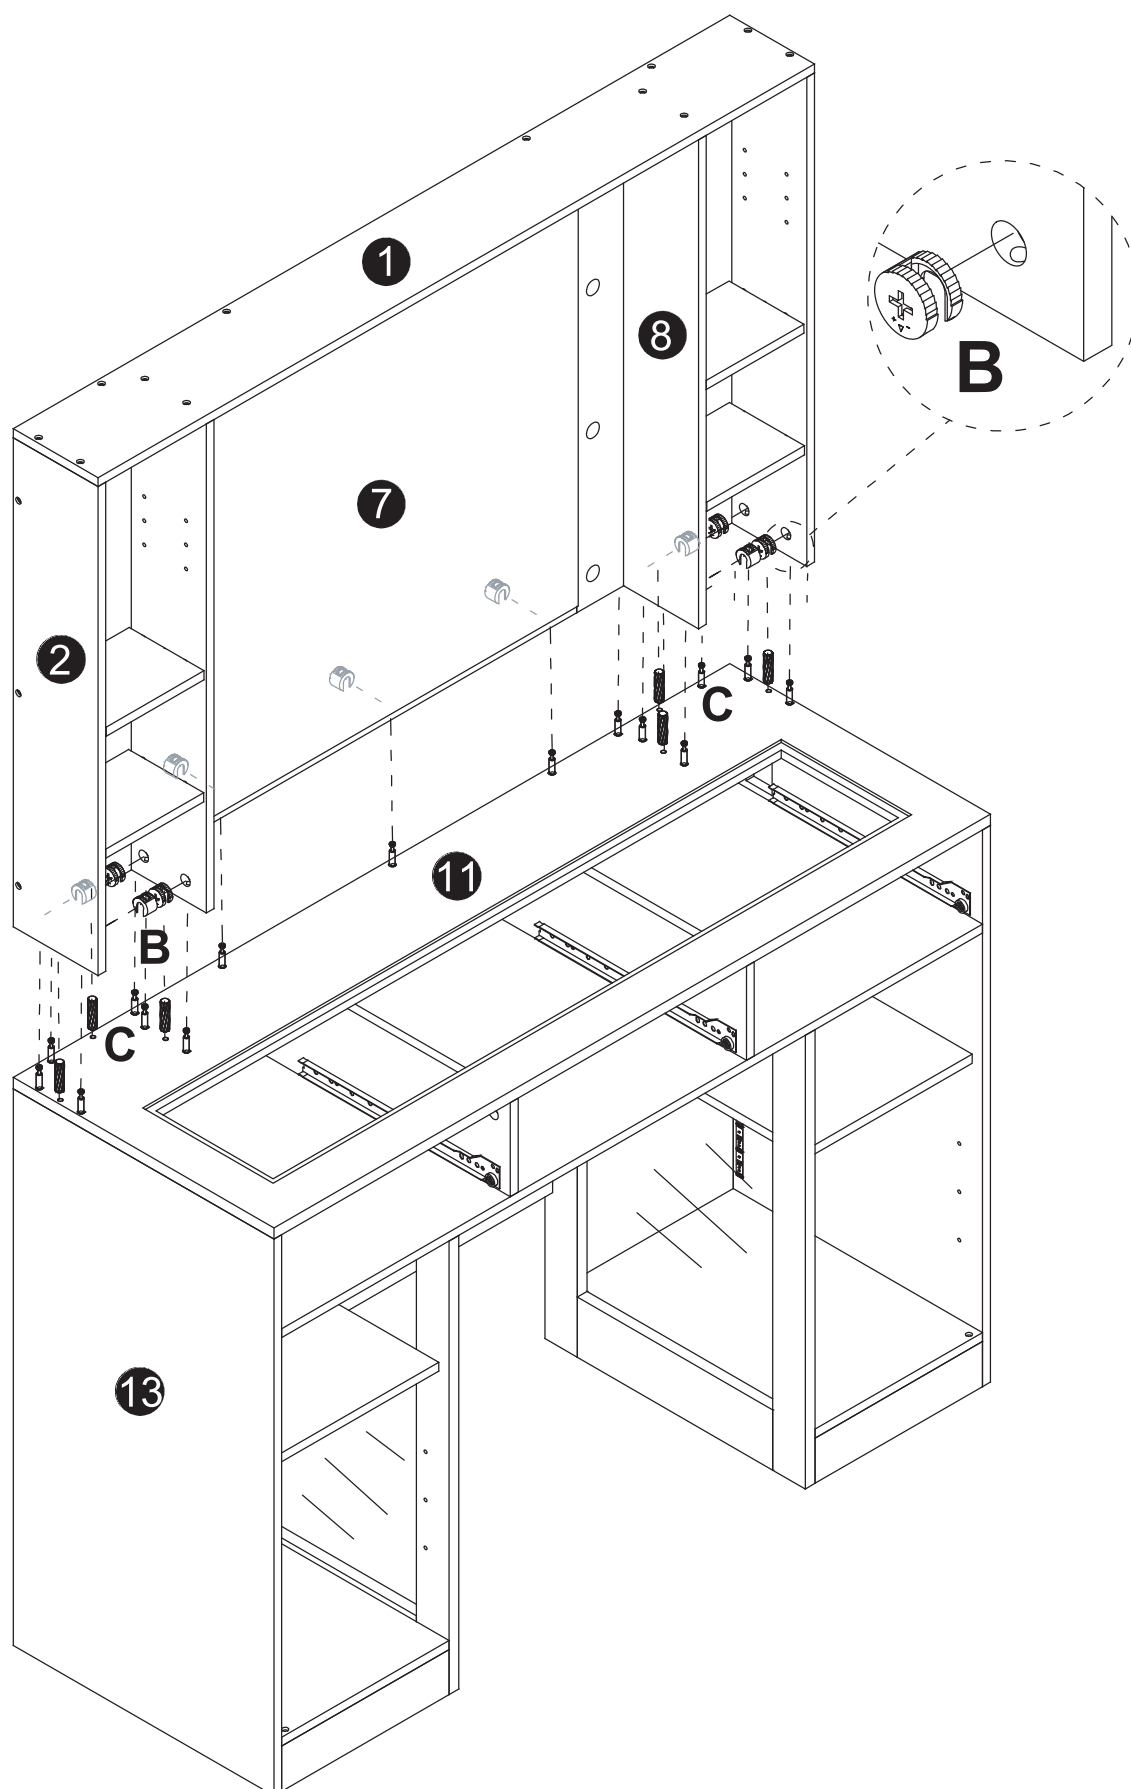

S x1



J x2



N x3





N-1



N-2

O x1

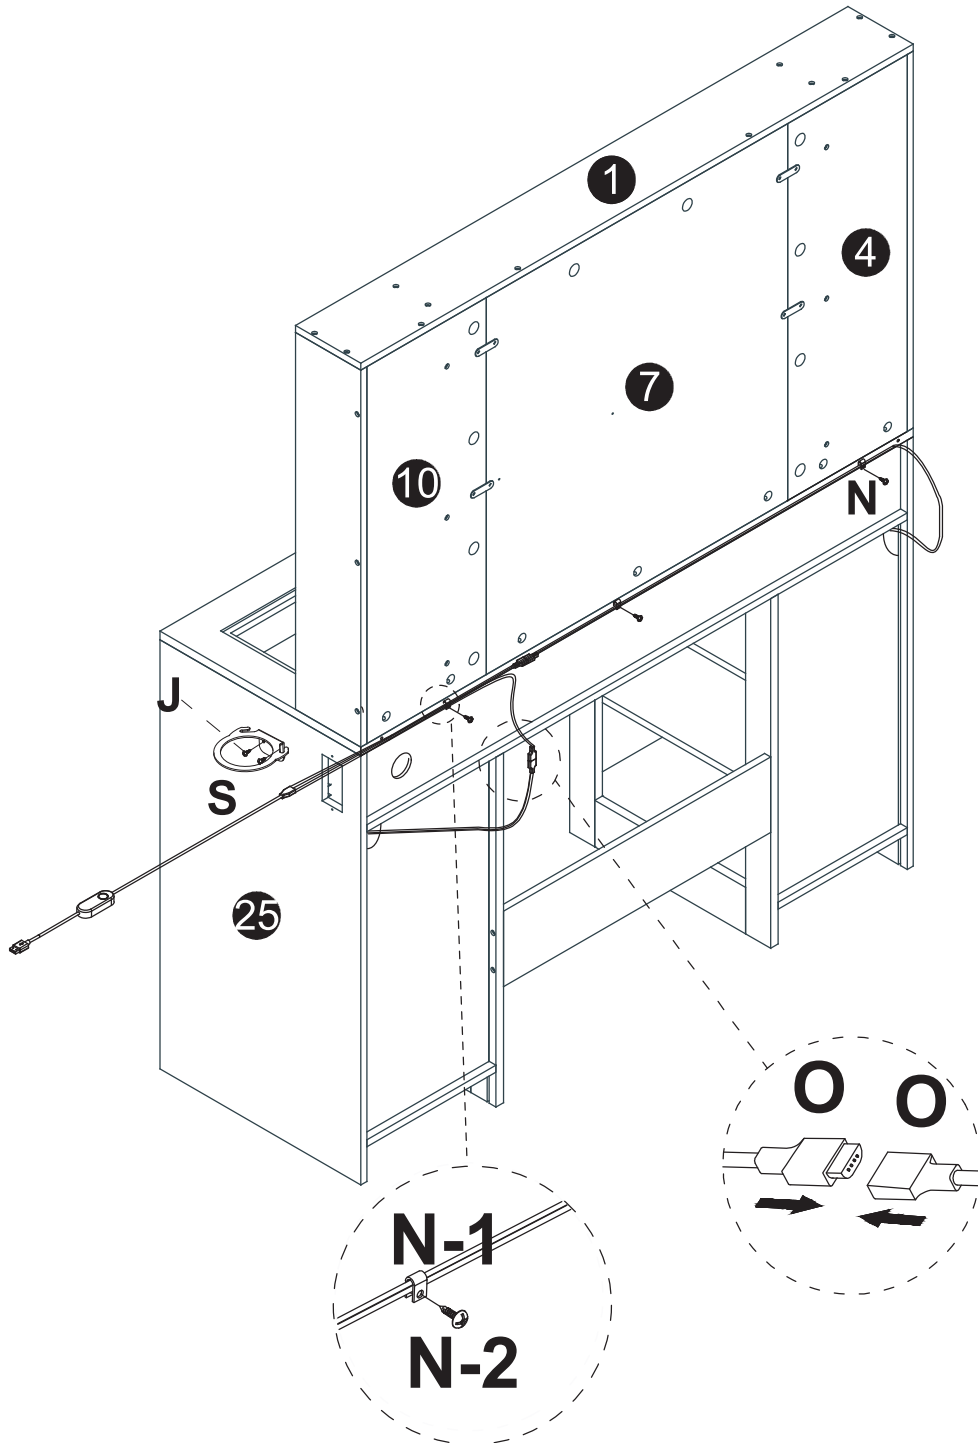

H x18

P x1

R x1

H-1


H-2

P-1 x10

P-2 x10

P-3 x1

P-4 x1

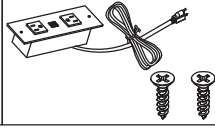

(1)

P-1

x10

(2)

P-1

P-2

x10

(3)

P-2

x10

S

R

H-1

H-1

H-2

N x1

J x2

P x1



N-1



N-2



P-1




P-2




P-3




P-4

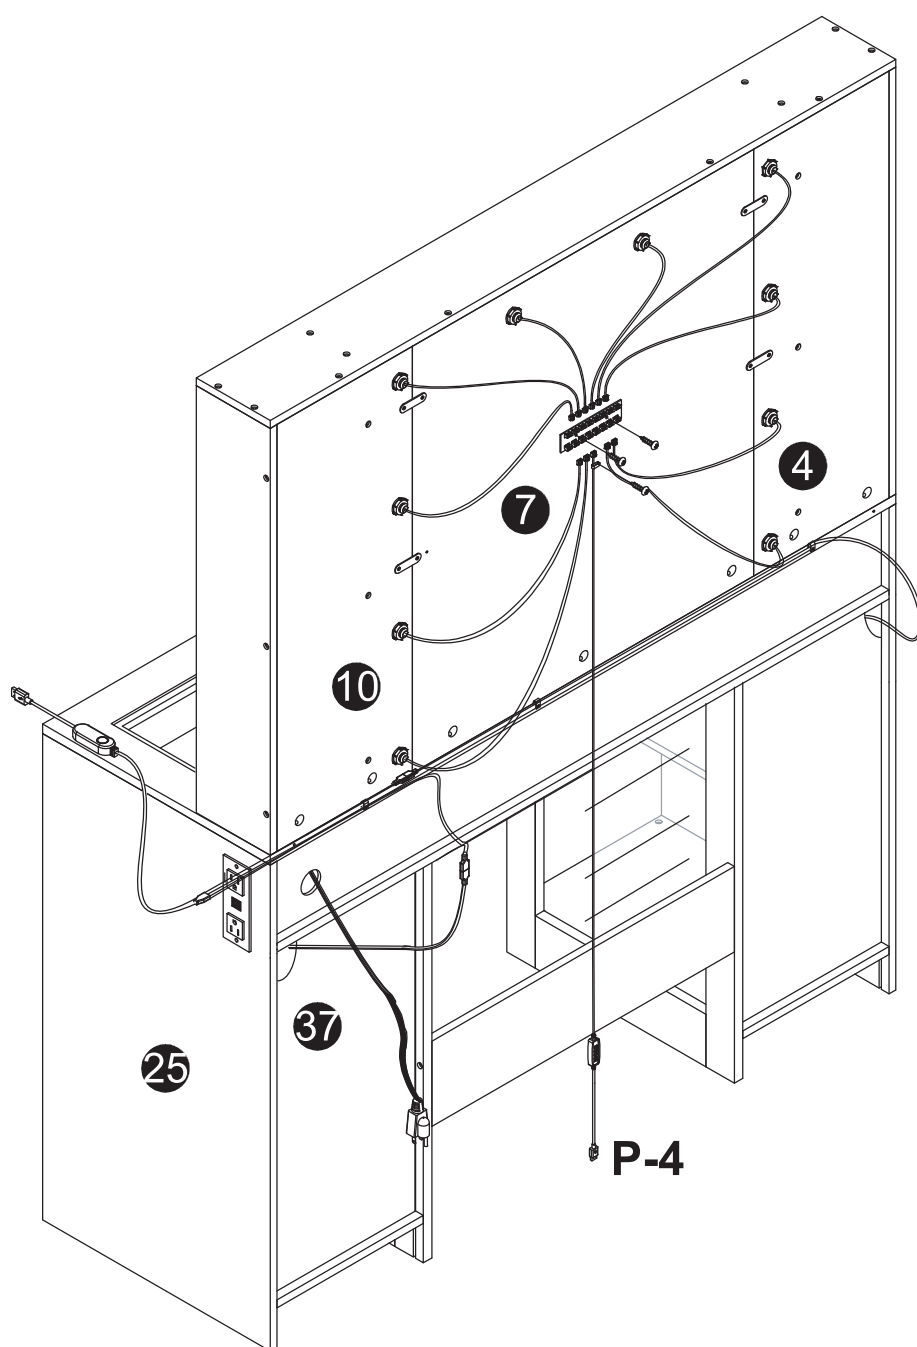


(1)

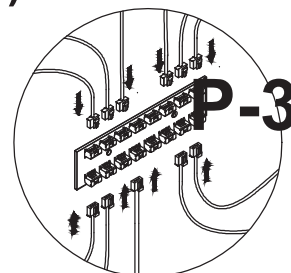


(4)

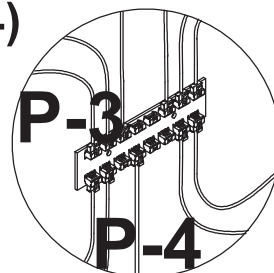




(3)

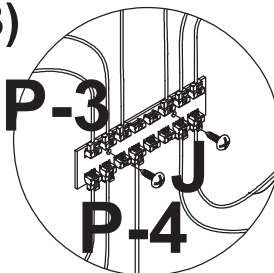


(4)

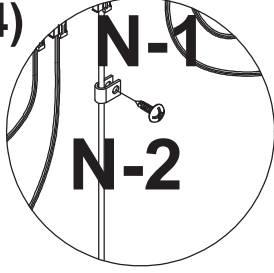


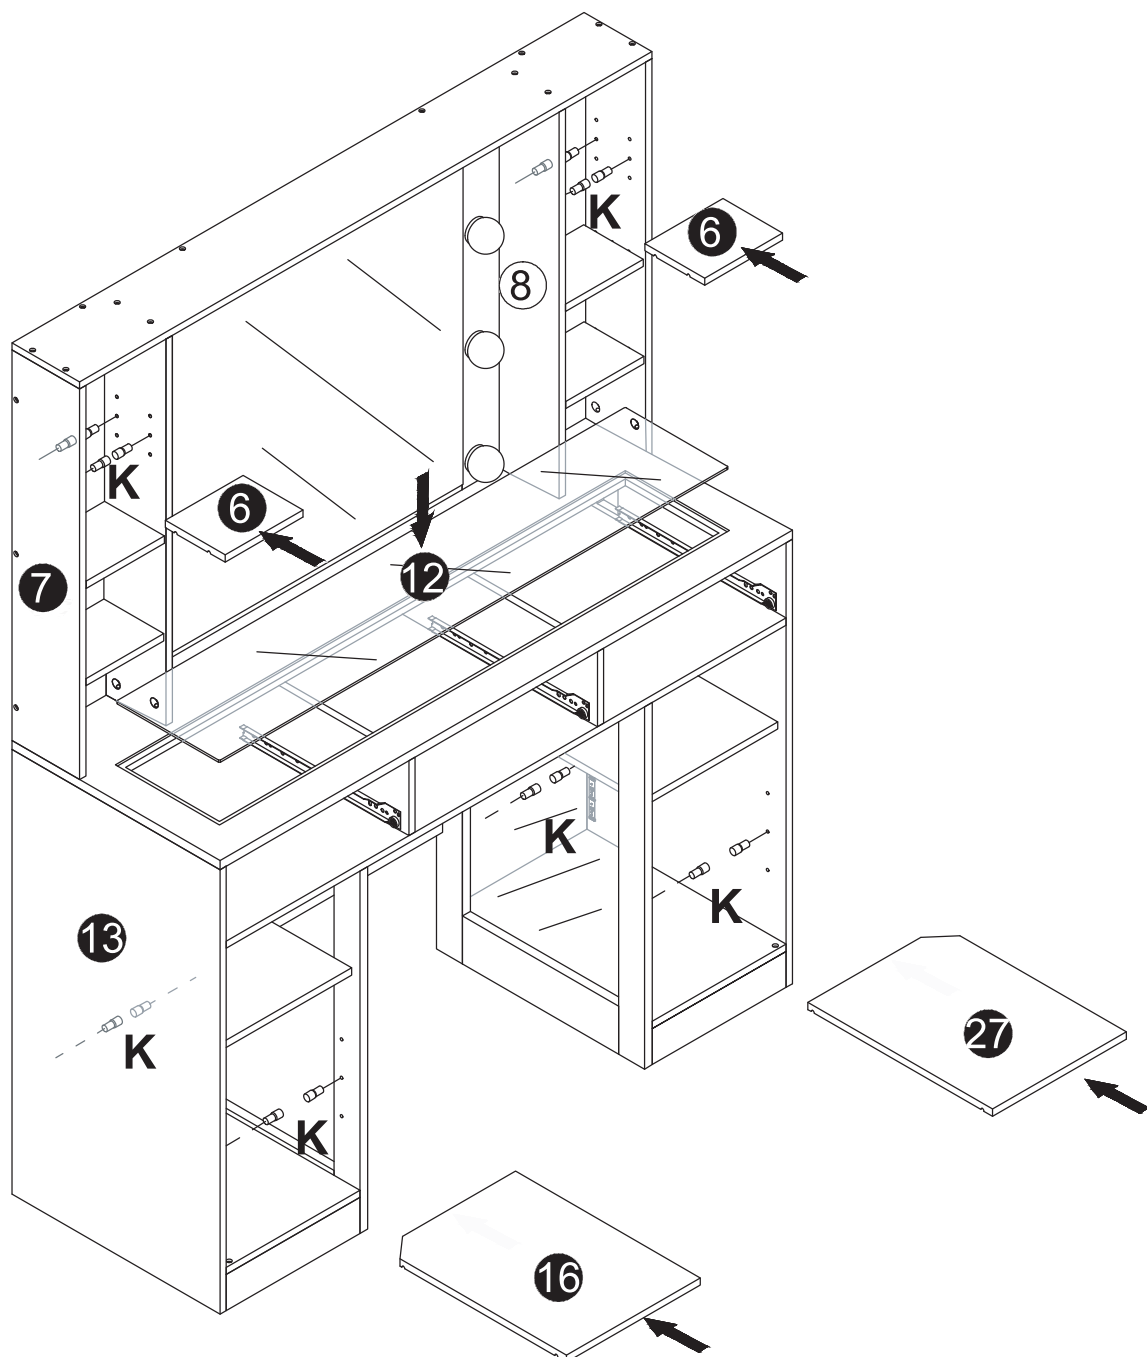




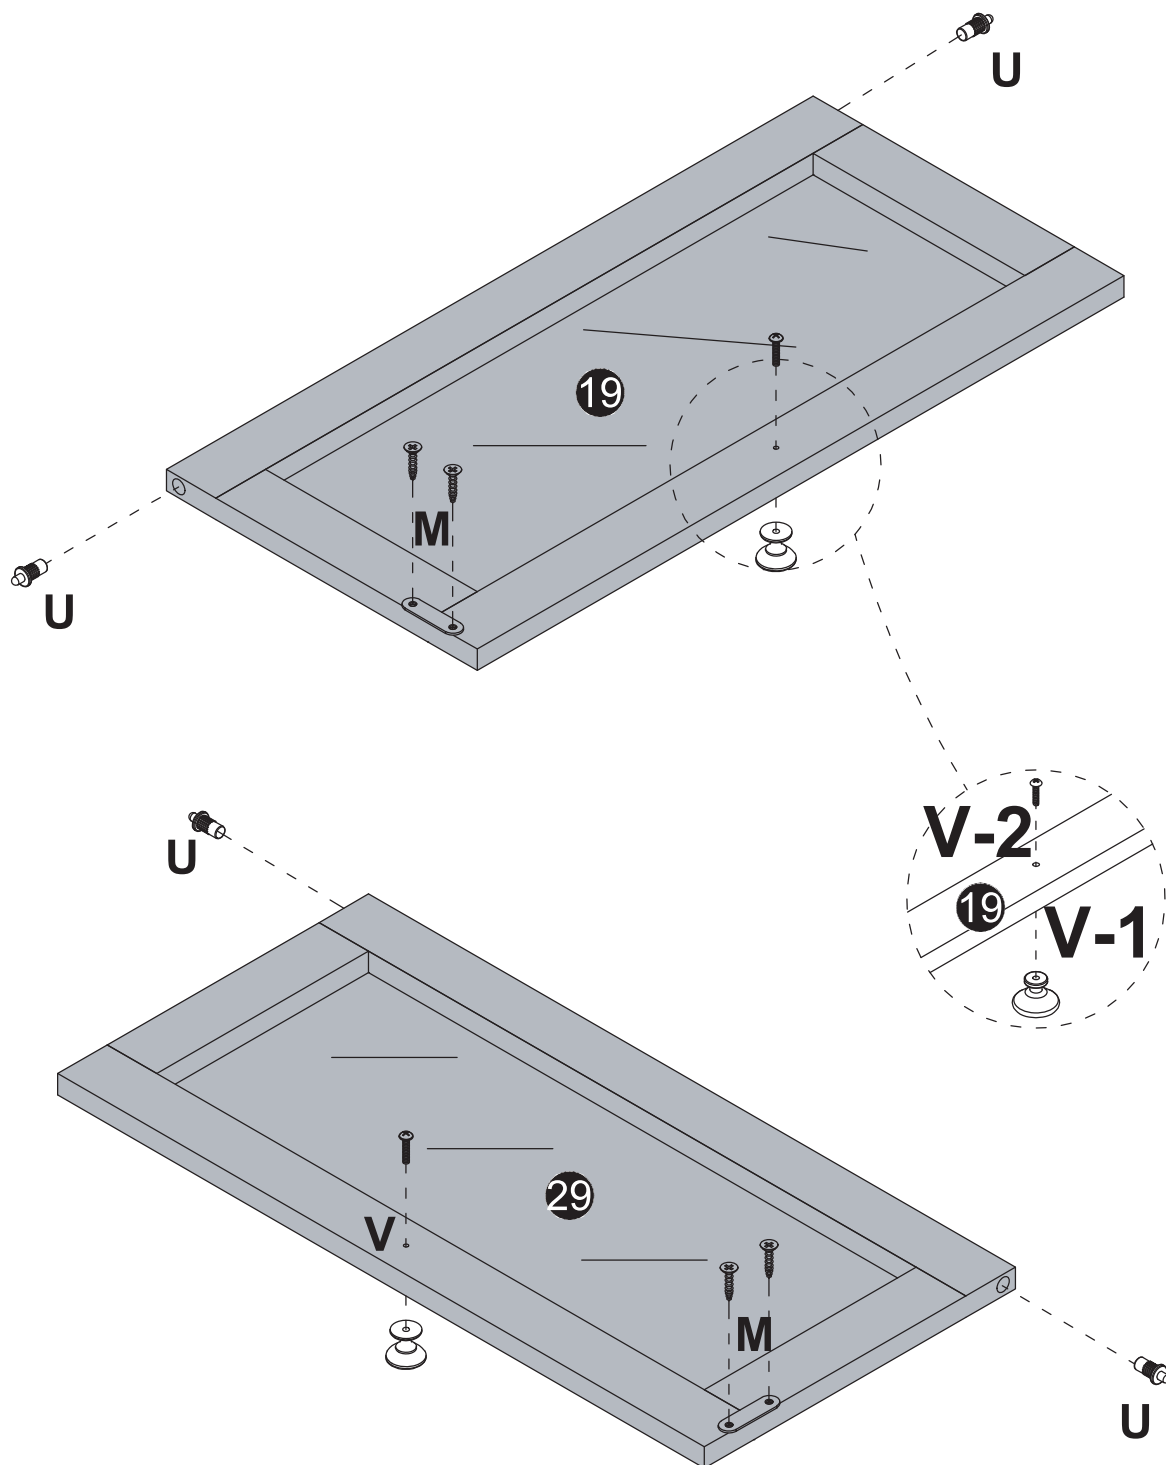
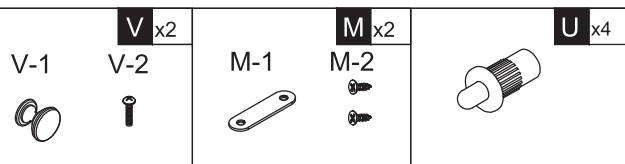


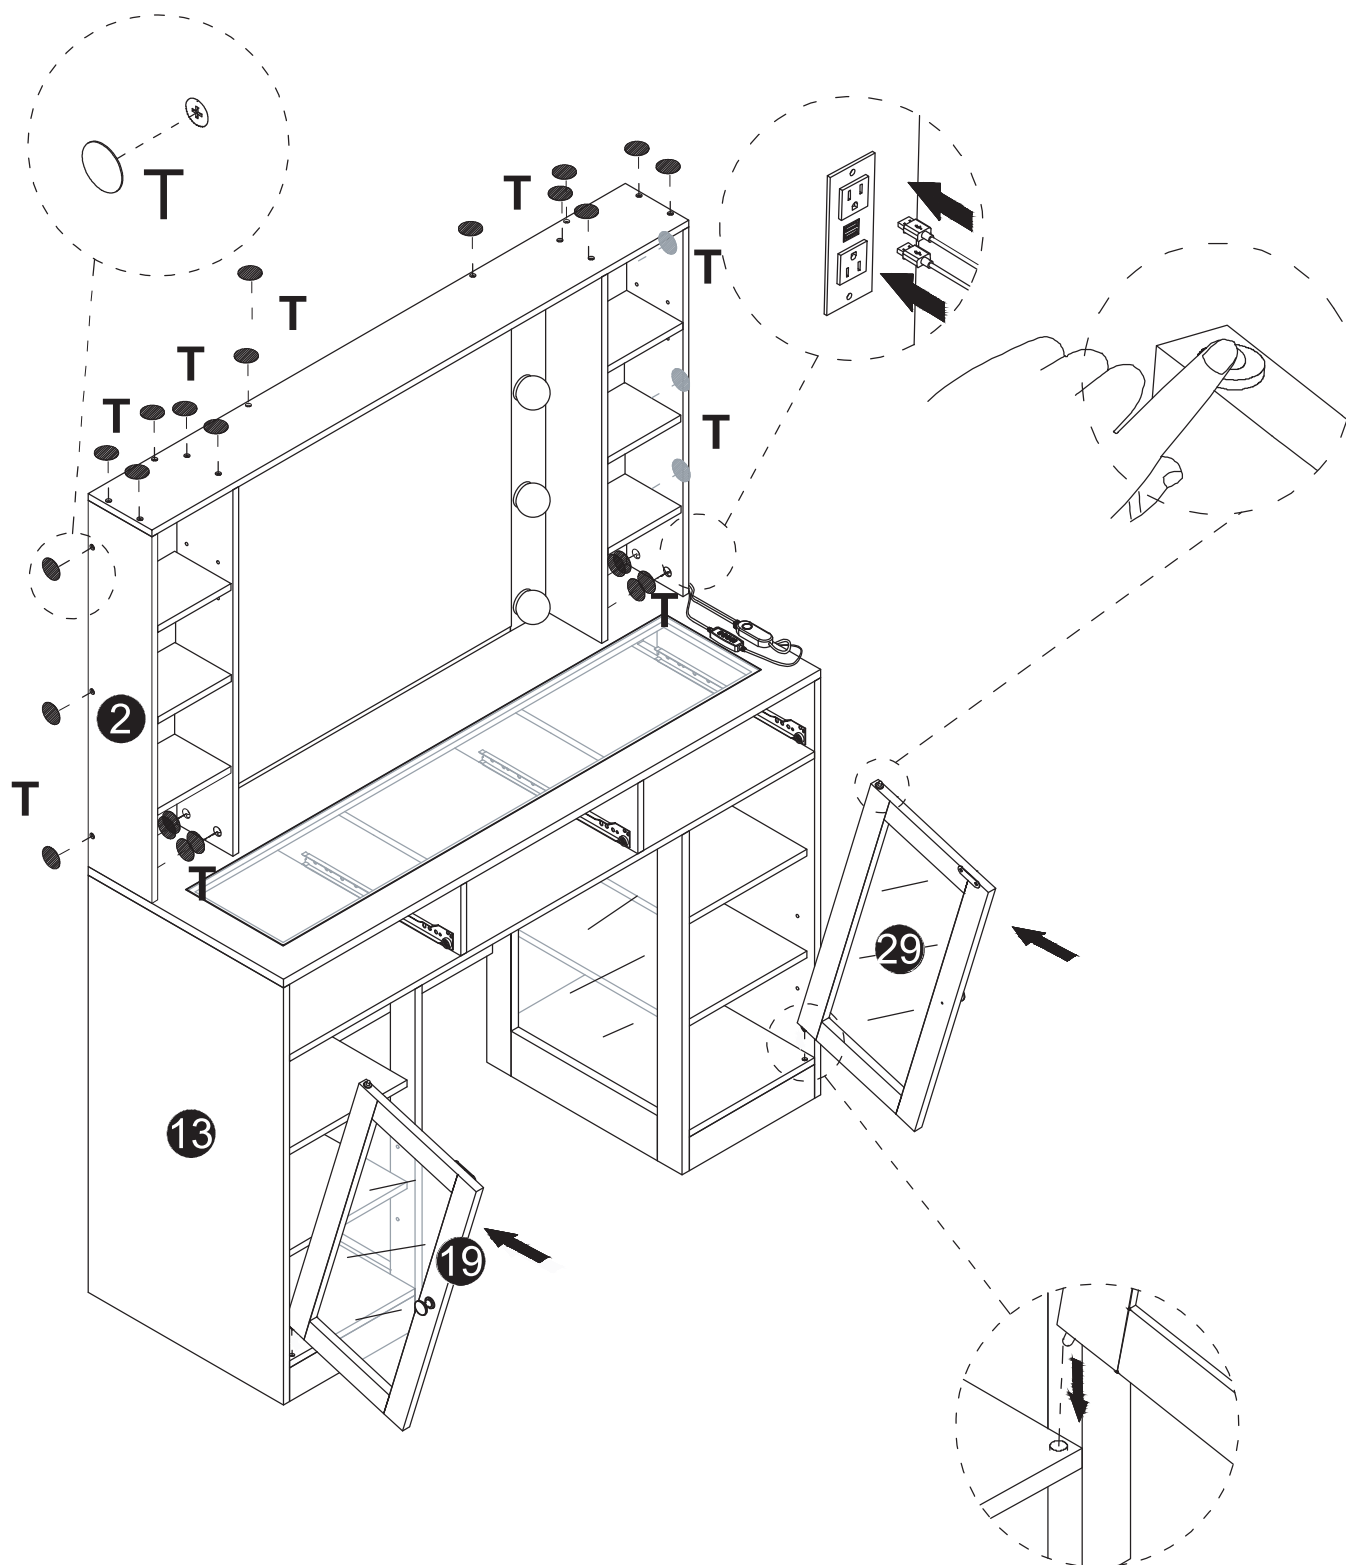




(1)

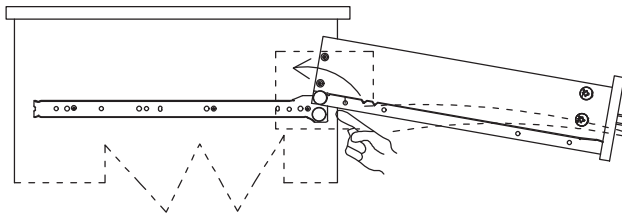


(2)

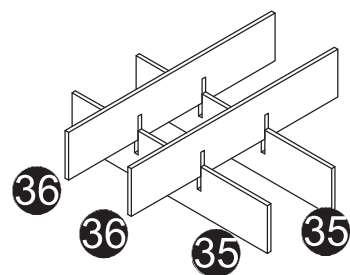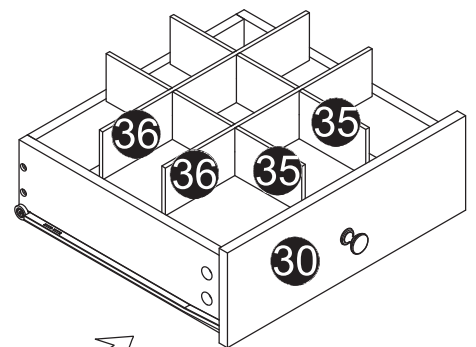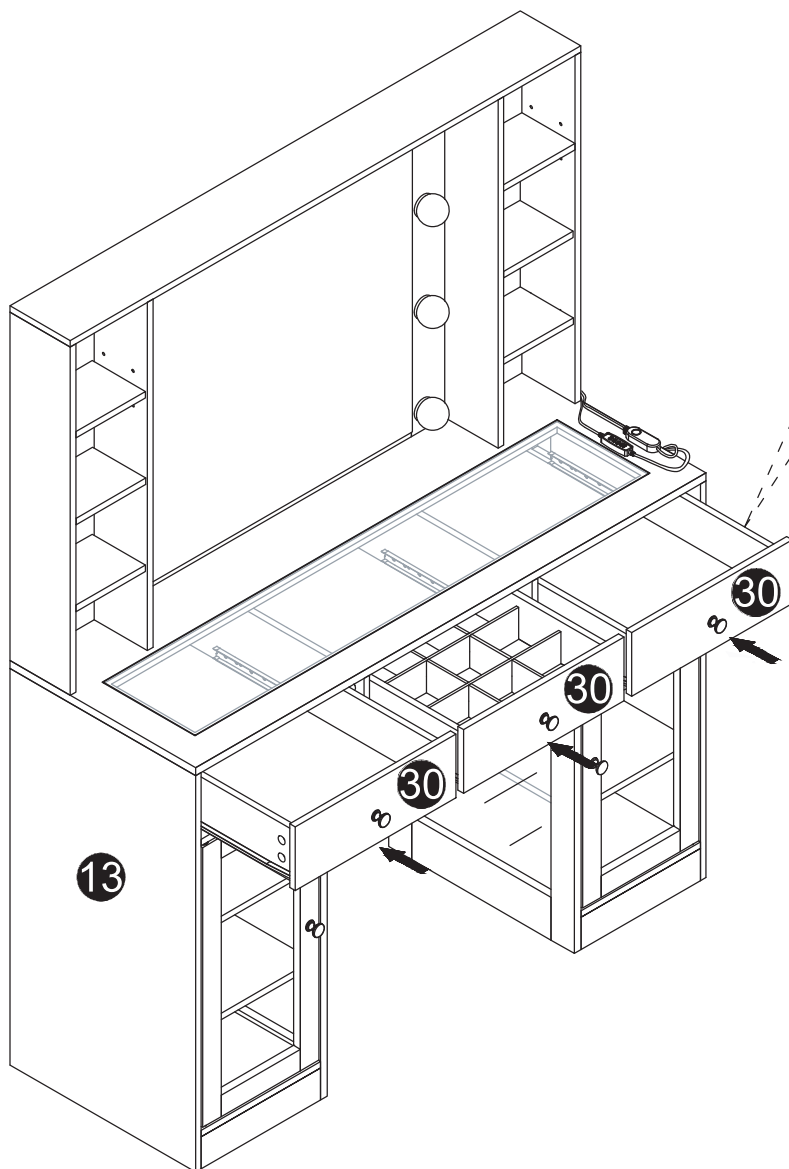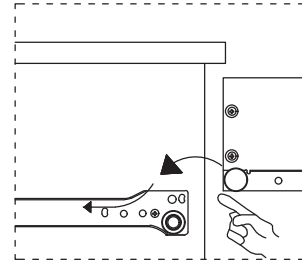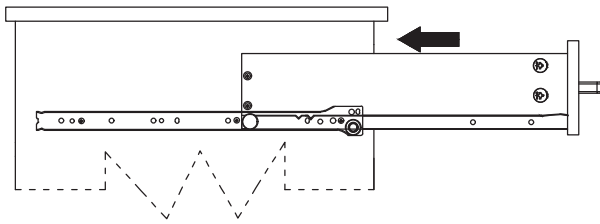


Done

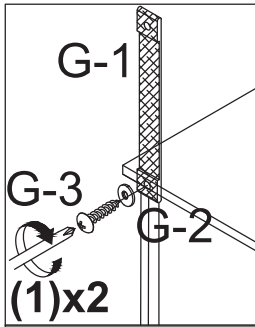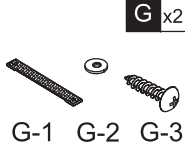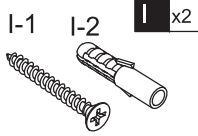


First fix the anti-rewind screw in the reserved hole of the product.

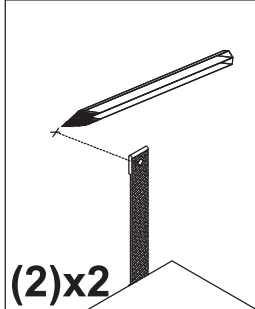


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

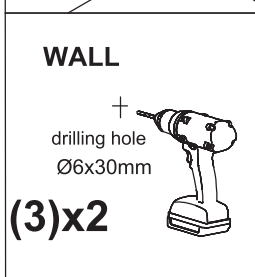


Then use a tape drill to make holes in the wall that are suitable for the product screws.

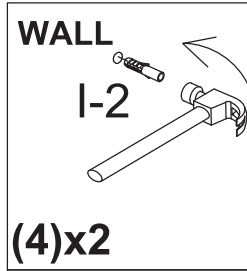



Then, put the expansion bolt into the hole

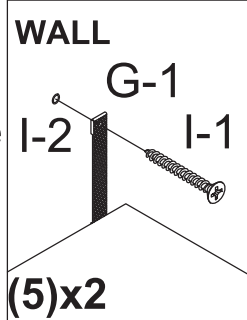

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

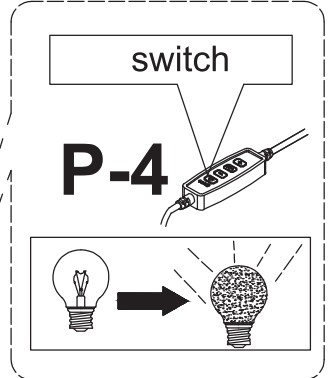

Power supply

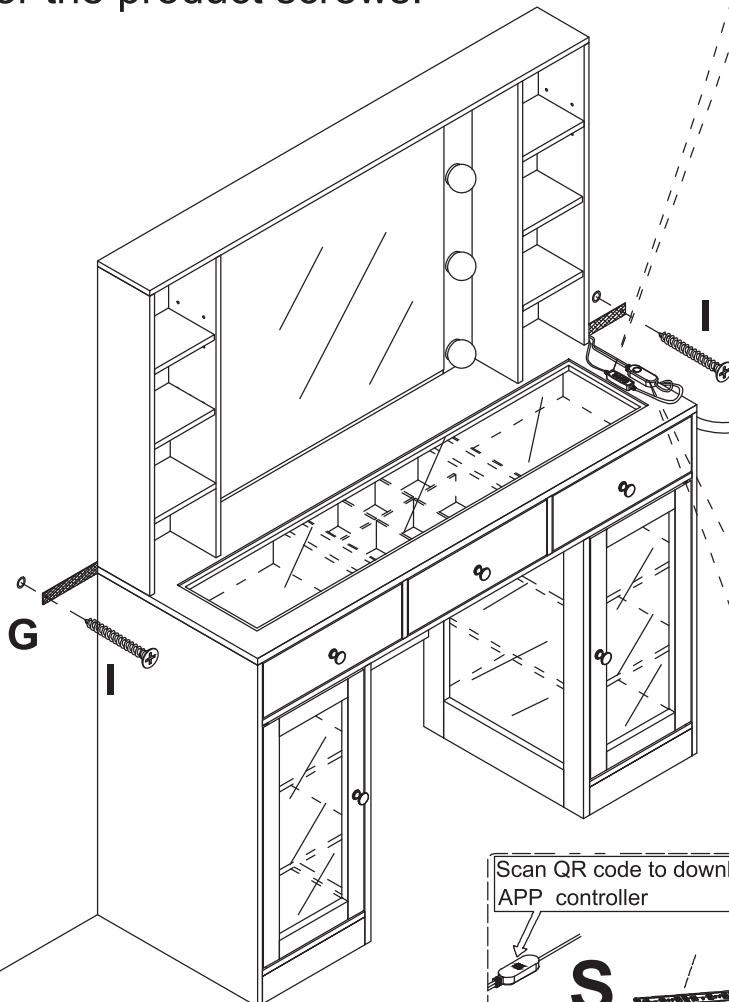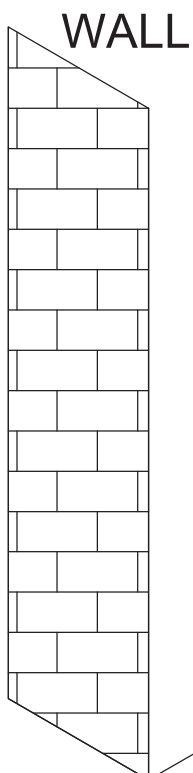

Scan QR code to download APP controller

OR

Flip to the other side to find the control button

