


12' ×14' Metal Patio Gazebo

ASSEMBLY MANUAL

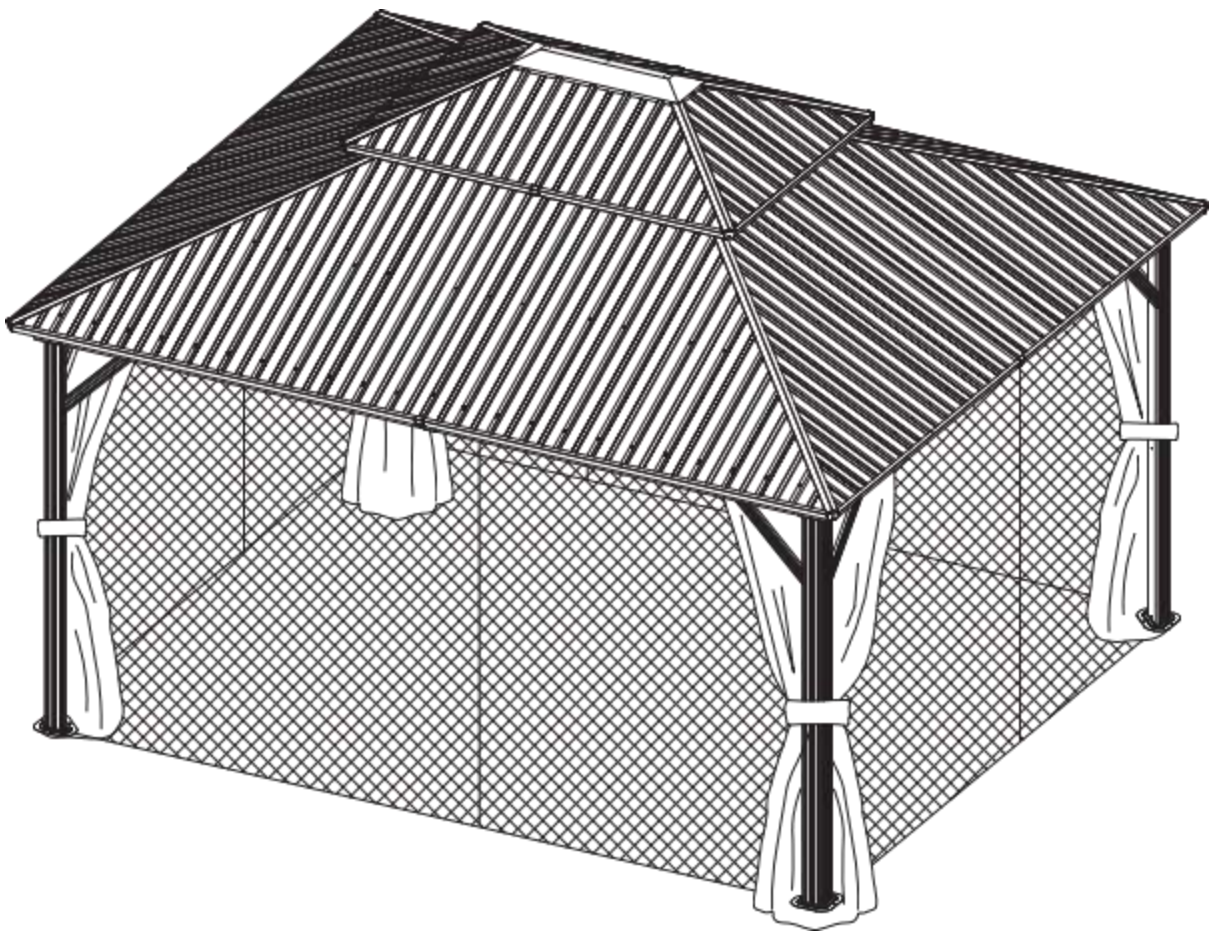

MODEL# : LGMF1589

Missing part? Damaged? Contact us via email at
domiservice01@outlook.com

© Copyright 2022-2024 domi LLC. | All Rights Reserved.

Pre-assembly



1. Two or more people are required for assembly.



2. You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4. You may need a safety hat.



5. Please use a Phillips screw driver.



6. For ease of construction, you may need a drill.



7. You may need a safety goggle.



8. Do not fully tighten screws prior to complete assembly.

Warning & Attention


-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;

-It would be much easier to assemble the product with three or more people;

-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.



▲ Use bolts to secure the frame to the ground to against the strong wind.

1

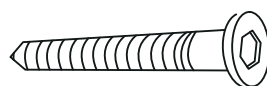

×12


If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. ×4 in. Structural Wood Screw** to mount the gazebo.

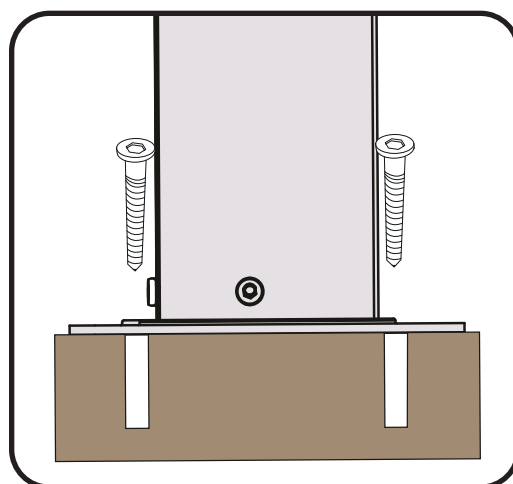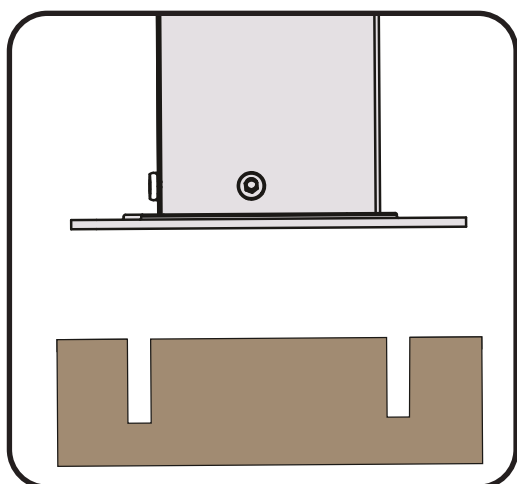


The diagram illustrates a transition from a simple vertical support to a more complex, adjustable support system. On the left, a grey rectangular block is supported by a simple base with two vertical white pillars. An orange arrow points to the right, where the same block is shown supported by a more complex base. This base features two adjustable clamps or brackets that can be moved along the vertical pillars, allowing for height adjustment. The entire system is mounted on a blue base with a white dotted pattern at the bottom.

If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the gazebo

IMPORTANT:
Anchor is not recommended

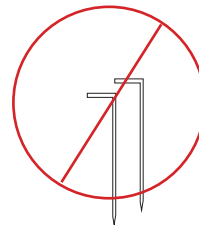


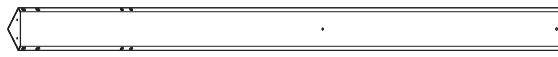

A 4x Pole



C 2x Beam

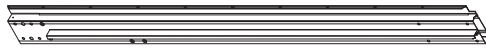

C1 2x Beam



D 2x Beam



D1 2x Beam




E 4x Corner Roof Bar




E1 4x Corner Roof Bar Connector




E2 4x Roof Bar

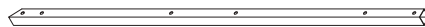

F 4x Solidfying Bar

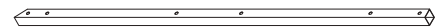


G 2x Solidfying Bar

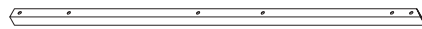


G1 2x Solidfying Bar




H 2x Finishing Bar

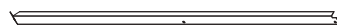


H1 2x Finishing Bar

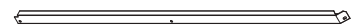

H2 2x Finishing Bar

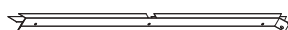

J 2x Finishing Bar

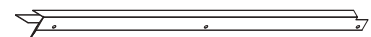

J1 2x Finishing Bar



J2 2x Finishing Bar



K 2x Finishing Bar




K1 2x Finishing Bar




K2 2x Finishing Bar




K3 2x Finishing Bar

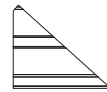


L1 2x Roof Panel

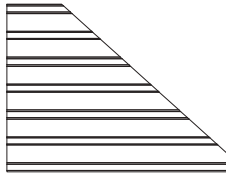


L2 2x Roof Panel

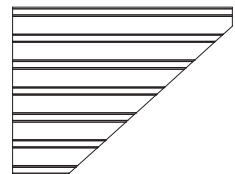


L3 2x Roof Panel

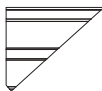


L4 2x Roof Panel

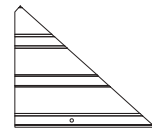


M1 2x Roof Panel

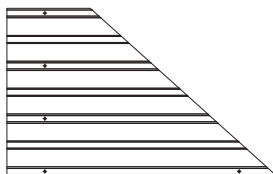


M2 2x Roof Panel

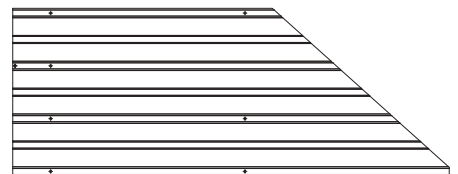


M3 2x Roof Panel

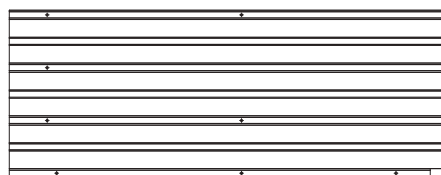


M4 2x Roof Panel

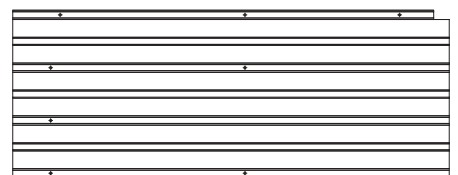


M5 2x Roof Panel

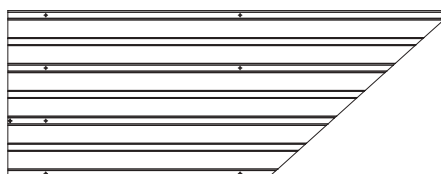


M6 2x Roof Panel

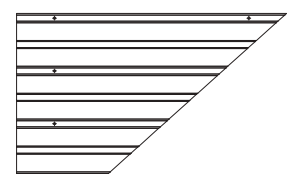


M7 2x Roof Panel

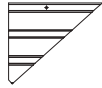


M8 2x Roof Panel

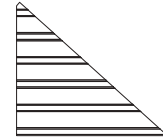


N1 2x Roof Panel

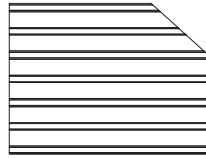


N2 2x Roof Panel

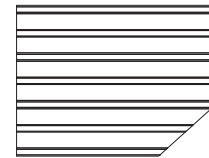


N3 2x Roof Panel

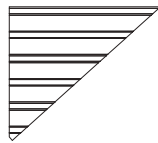


N4 2x Roof Panel

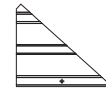

P1 2x Roof Panel

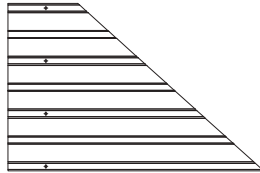


P2 2x Roof Panel

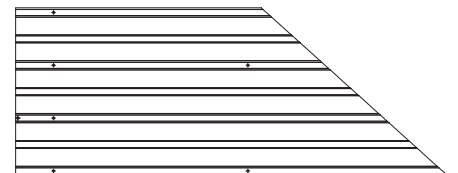

P3 2x Roof Panel



P4 2x Roof Panel

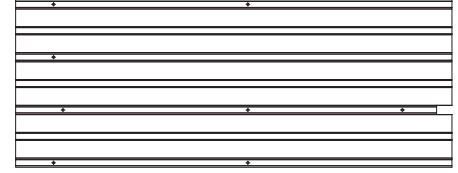


P5 2x Roof Panel




P6 2x Roof Panel




P7 2x Roof Panel

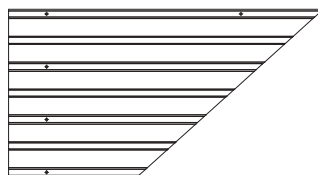


P8 2x Roof Panel

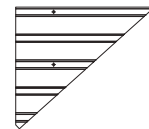

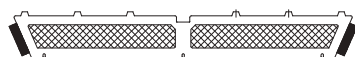









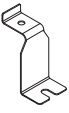
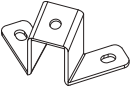


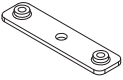

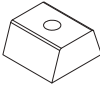

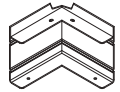






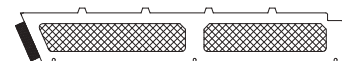


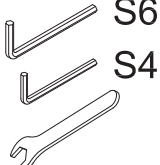


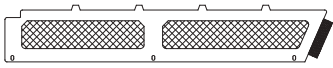P9 2x Roof Panel

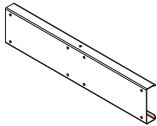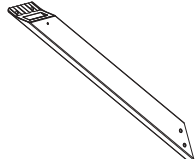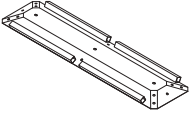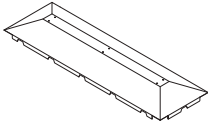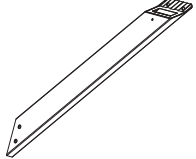


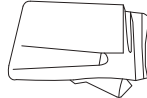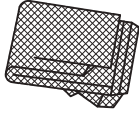Q 2x Net Frame



Q1 2x Net Frame

5	 <p>Q2 2x Net Frame</p>	 <p>B 4x Base</p>	 <p>B1 8x Joint Cover</p>
	 <p>B2 8x Joint Cover</p>	 <p>C2 4x Union Bar</p>	 <p>R 4x Corner Solidifying Bar</p>
	 <p>S 1x Inside Roof Connector</p>	 <p>S1 1x Outside Roof Connector</p>	 <p>R1 4x Corner Solidifying Bar</p>
	 <p>T 3x J-Hook</p>	 <p>T1 4x Bracket</p>	
	 <p>U 4x Bracket</p>	 <p>U1 4x Bracket</p>	 <p>U2 4x Bracket</p>
	 <p>U3 4x Joint Cover</p>		
	 <p>V 120x Hook</p>	 <p>W 126x Spacer</p>	 <p>X 4x Bracket</p>
	 <p>X1 4x Corner Cover</p>		
	 <p>X2 6x Finishing End</p>	 <p>X3 12x Finishing End</p>	 <p>Y 4x Solid Sidewall</p>
	 <p>Y1 4x Mosquito Sidewall</p>		
	 <p>Z 76x Plastic Bracket</p>	 <p>Z1 4x Plastic Bracket</p>	 <p>Z2 4x Plastic Bracket</p>
	 <p>Z3 2x Plastic Bracket</p>		
	 <p>Z4 2x Plastic Bracket</p>	 <p>S6 S4</p> <p>1 1x</p>	 <p>ST6.3x15</p> <p>2 12x</p>
			 <p>ST5x16</p> <p>3 24x</p>

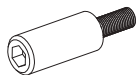

M6x15

4 32x



M6

5 130x



M5x12

6 16x



M6x10

7 20x



M6x16

8 188x




M6x25

9 8x




M6x28

10 80x

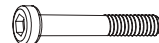


M6x45



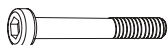




11 4x

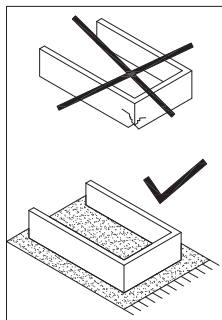


M6x50


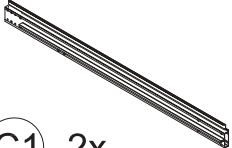
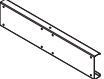










12 34x

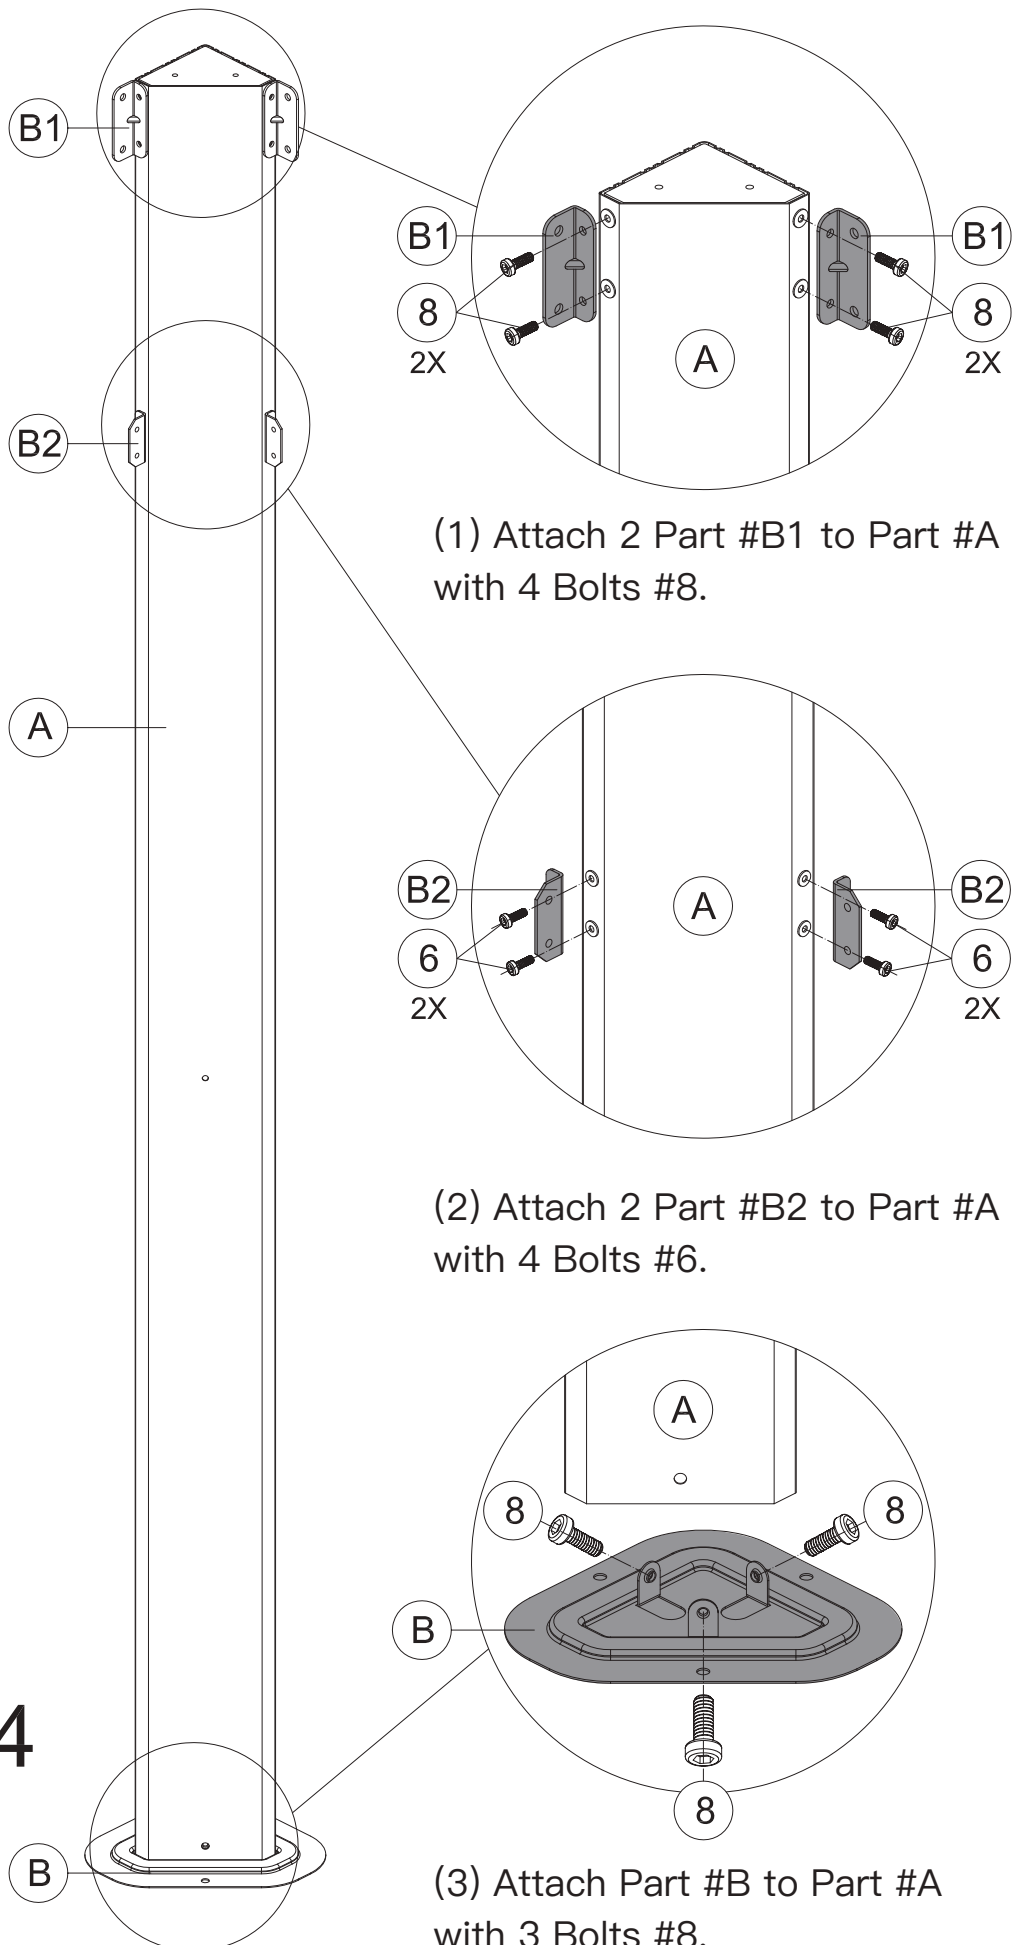



A 4x

B 4x

B1 8x

B2 8x
 S4
1 1x

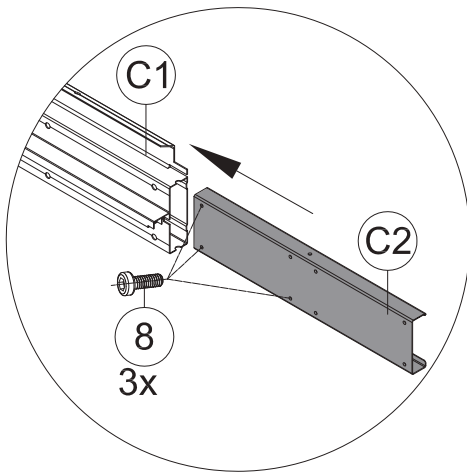M5x12
6 16x

M6x16
8 28x
7


X4






C 2x

C1 2x

C2 2x

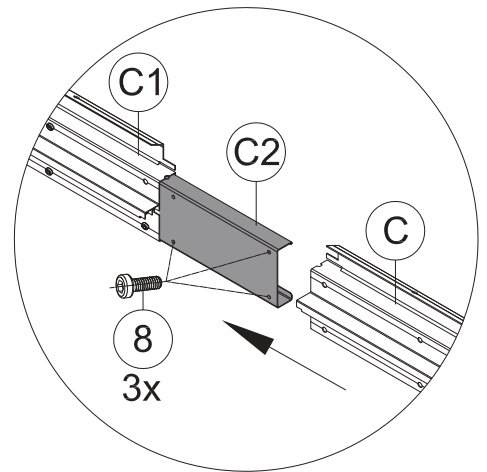X 2x

1 1x

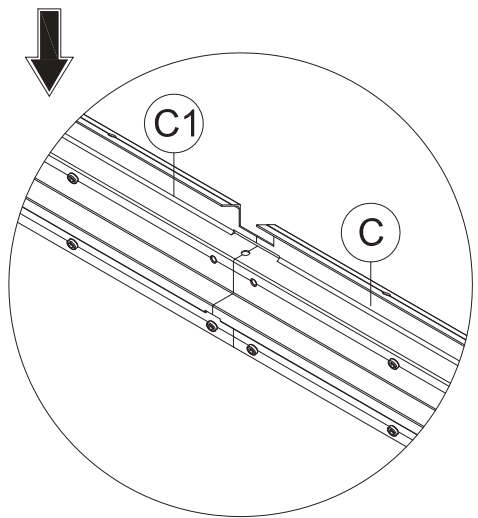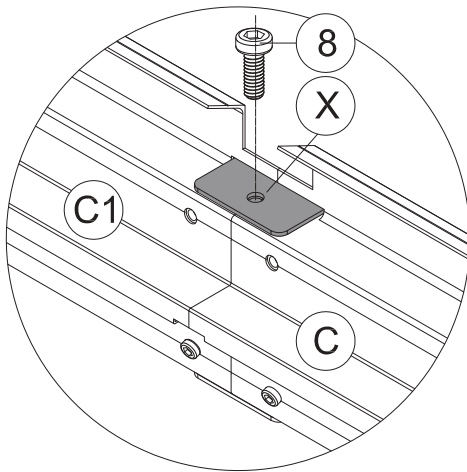8 20x

S4 1x

8 20x

8 20x

8 20x

8 20x

8 20x

8 20x



(1) Insert Part #C2 into Part #C1 and secure with 3 Bolts #8.




(2) Insert the other side of Part #C2 into Part #C and secure with 3 Bolts #8.



(4) Insert Part #X into the beam.




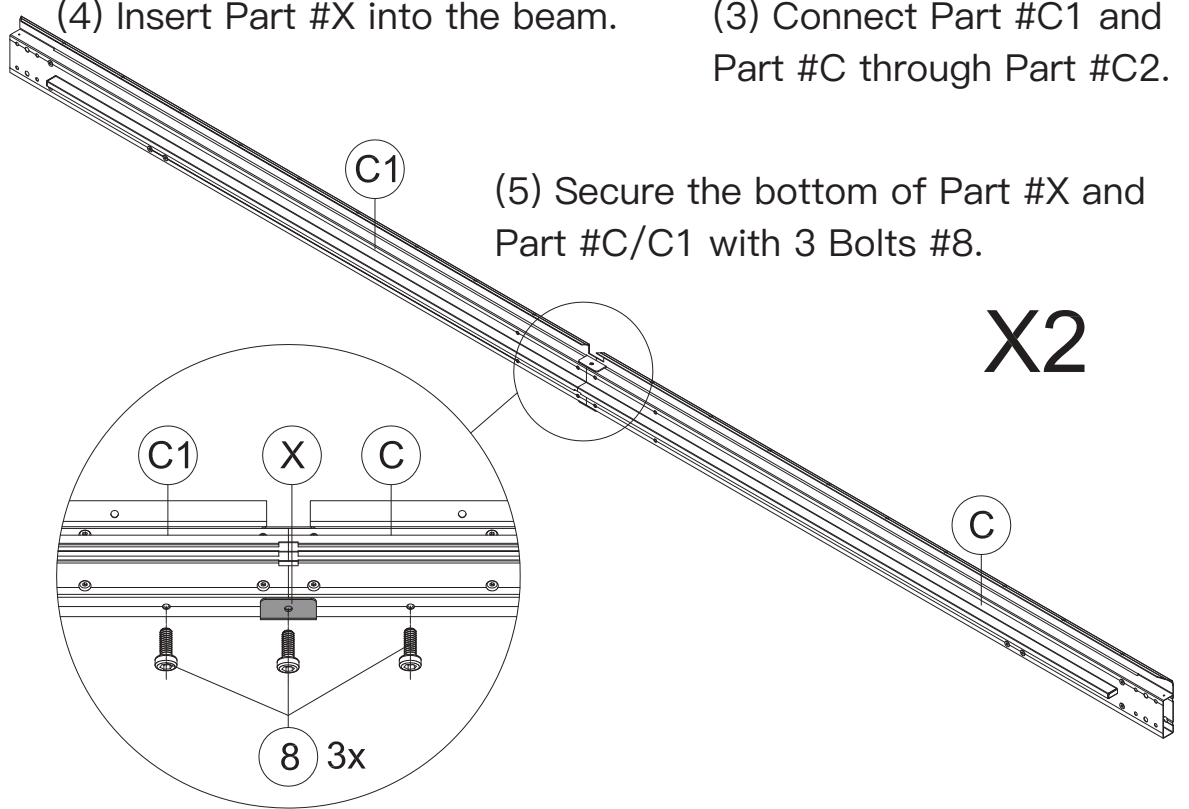



(3) Connect Part #C1 and Part #C through Part #C2.




(5) Secure the bottom of Part #X and Part #C/C1 with 3 Bolts #8.


X2

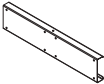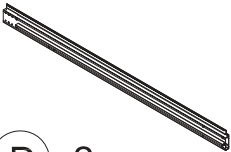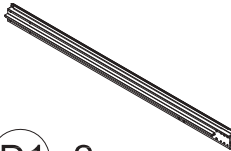(6) Repeat the above procedures to assemble the other Part #C and Part #C1.



	
C2 2x	
	
D 2x	
	
D1 2x	
	
X 2x	
	
S4 1x	
	
1 1x	
	
M6x16	
8 20x	
9	

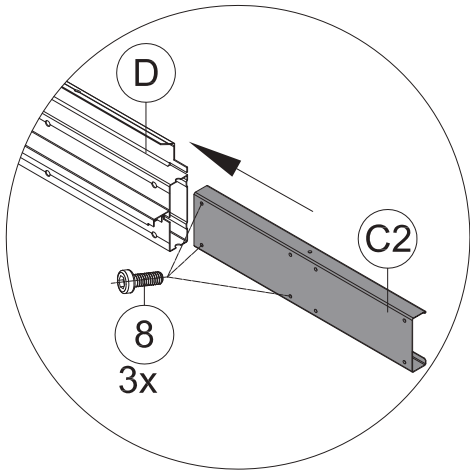

(1) Insert Part #C2 into Part #D, and secure with 3 Bolts #8.

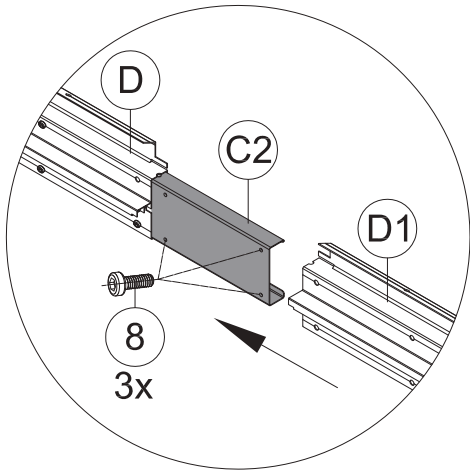


(2) Insert the other side of Part #C2 into Part #D1 and secure with 3 Bolts #8.

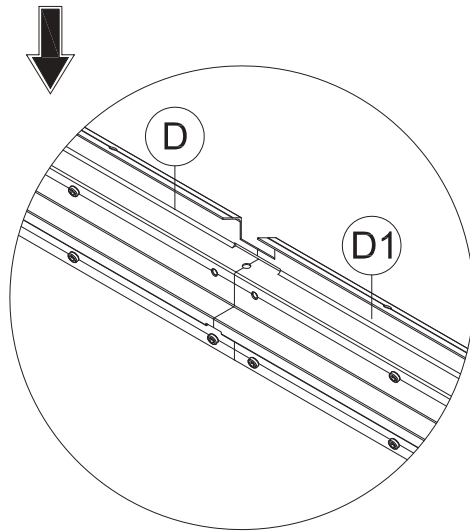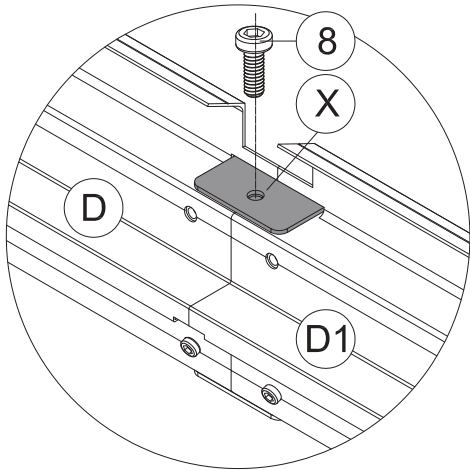

(4) Insert Part #X into the beam and secure with 1 Bolt #8.

(3) Connect Part #D and Part #D1 through Part #C2.

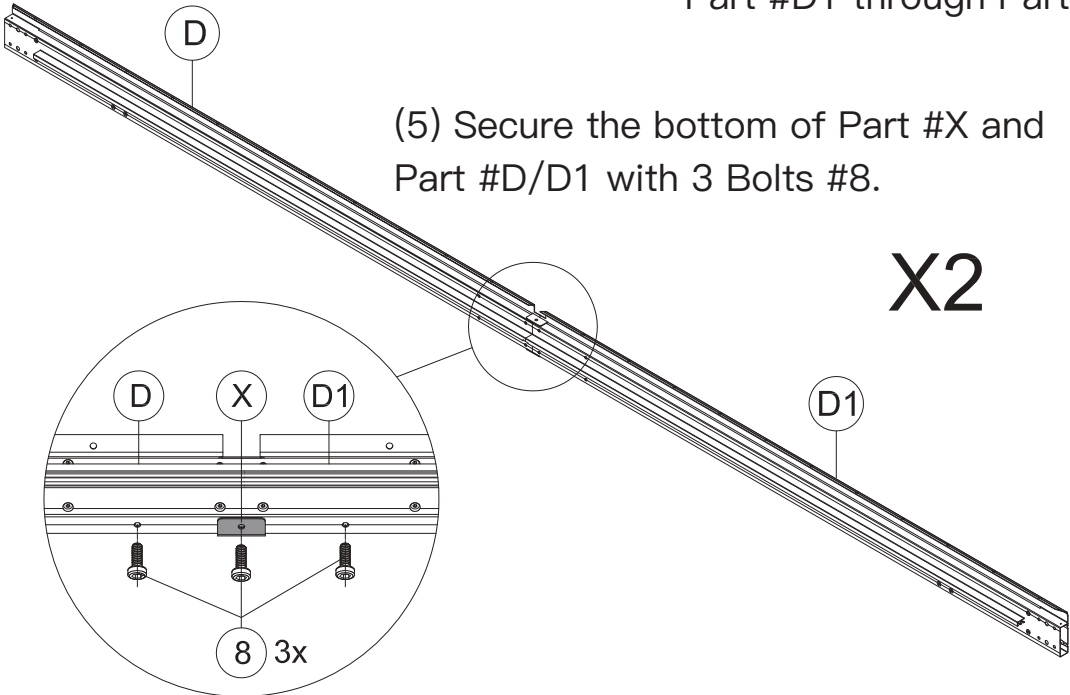

(5) Secure the bottom of Part #X and Part #D/D1 with 3 Bolts #8.


X2

(6) Repeat the above procedures to assemble the other Part #D and Part #D1.




S6

1 1x

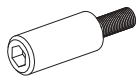

M6x15

4 32x

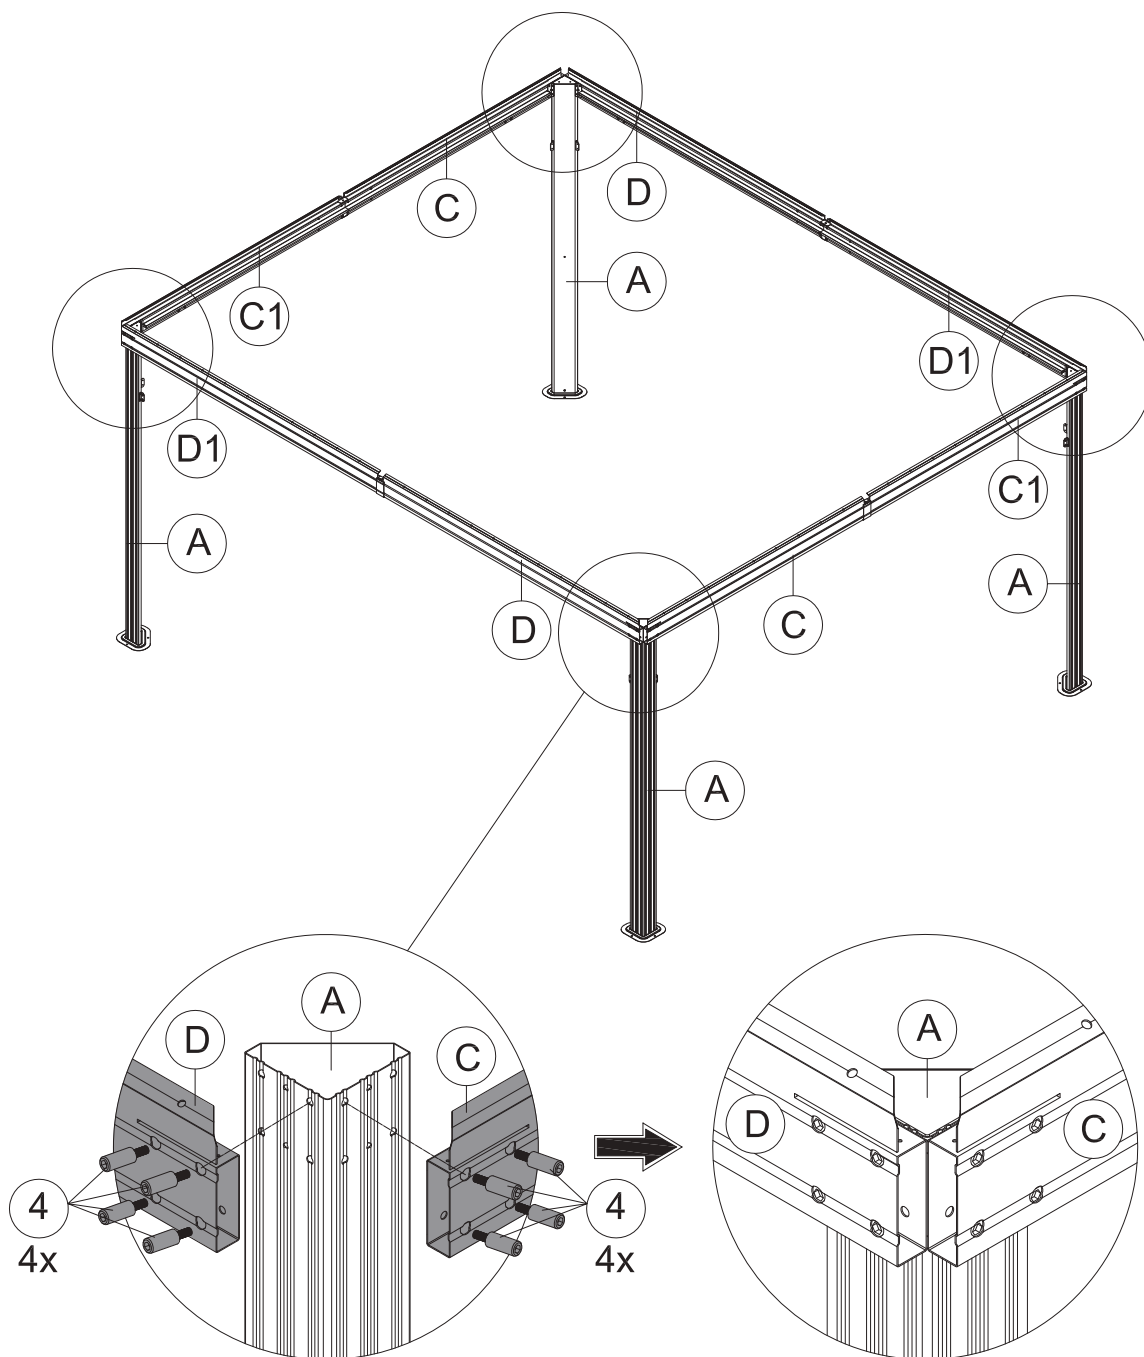

(1) Connect Part #C/C1 and #D/D1 to Part #A with 8 Bolts #4.
(From Outside)

(2) Repeat the above procedures to assemble the other 3 corners.

▲ Please don't tighten all bolts.

✓ S4


1 1x









M6x16

8 16x


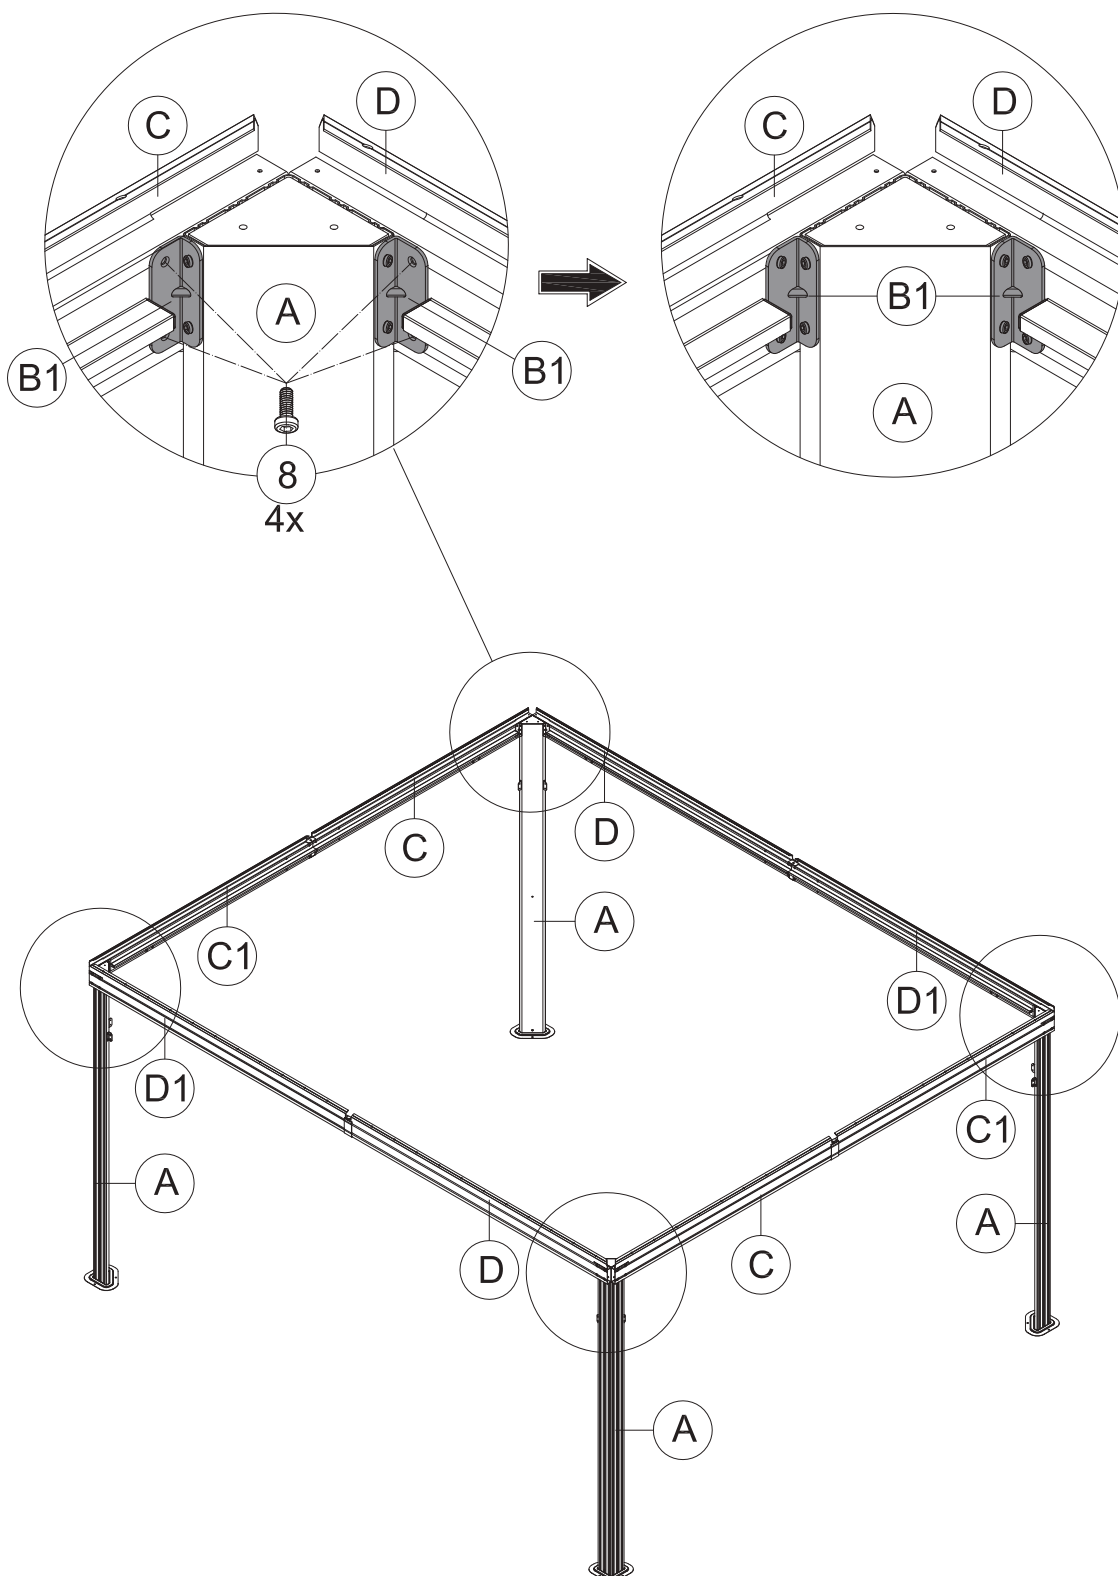
(1) Connect Part #C/C1 and #D/D1 to Part #A with 4 Bolts #8.
(From Inside)

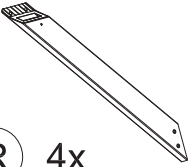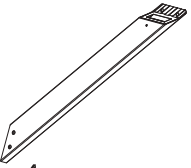


(2) Repeat the above procedures to assemble the other 3 corners.
▲ Please don't tighten all bolts.

-  (R) 4x
-  (R1) 4x
-  S4
-  1 1x
-  M6x16
-  8 32x

(1) Affix Part #R and Part #R1 to the frame with 8 Bolts #8.

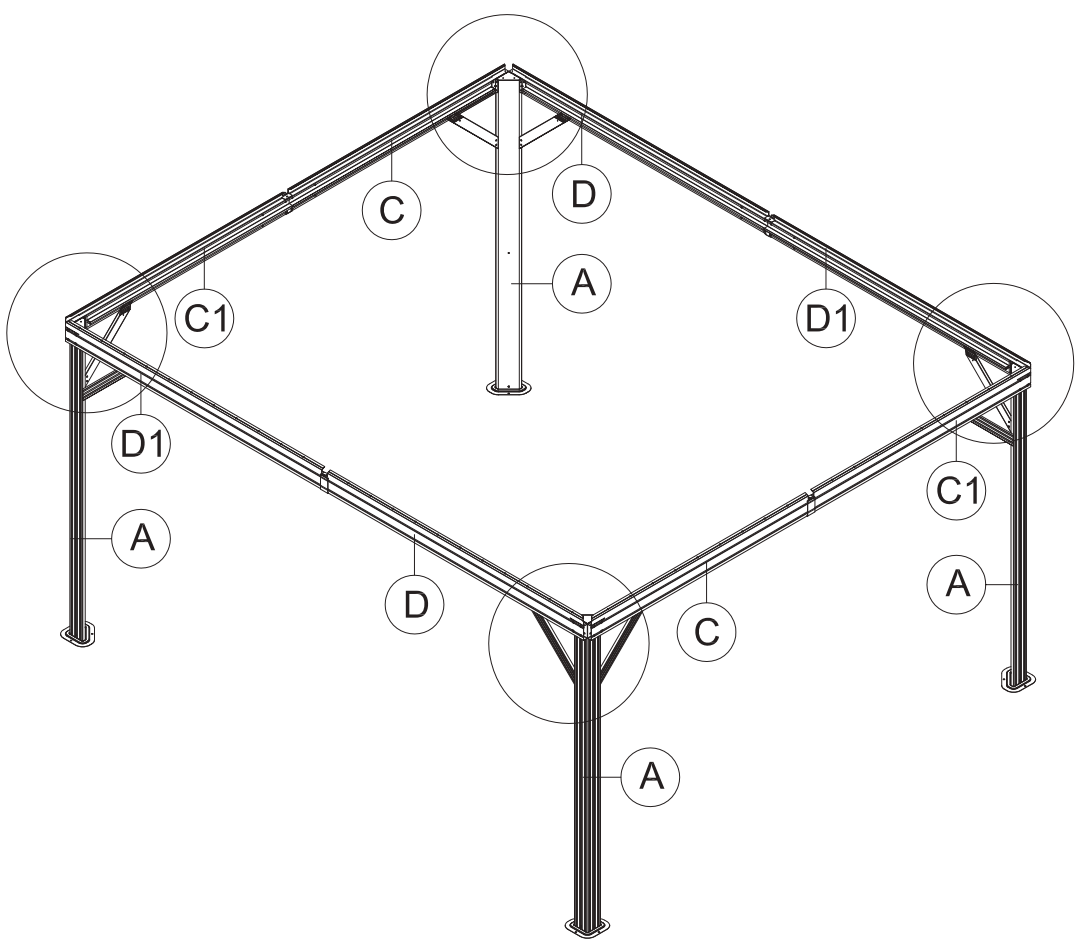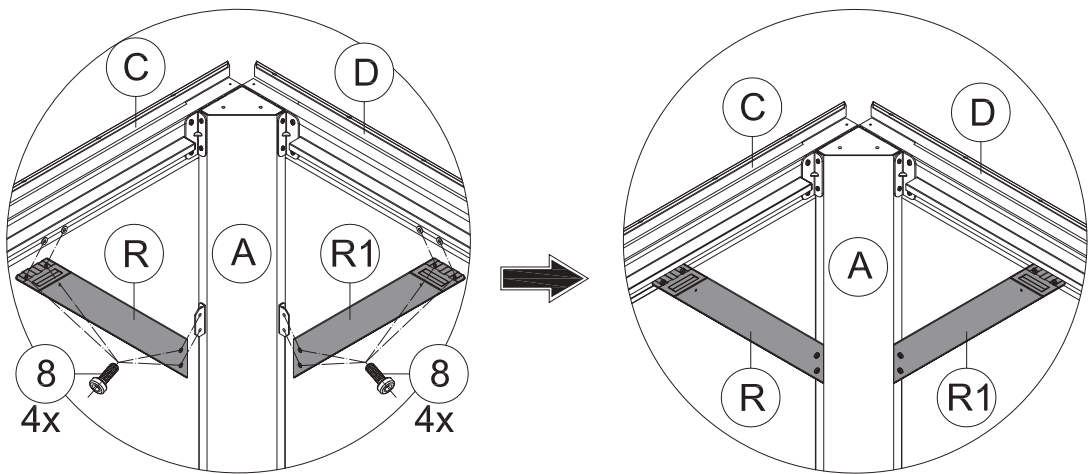

(2) Repeat the above procedures to assemble the other 3 corners.
 ▲ Please don't tighten all bolts.


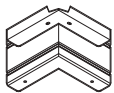


X1 4x



ST5x16



3 16x

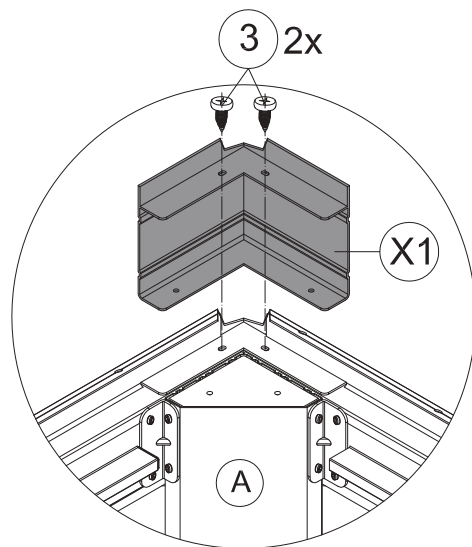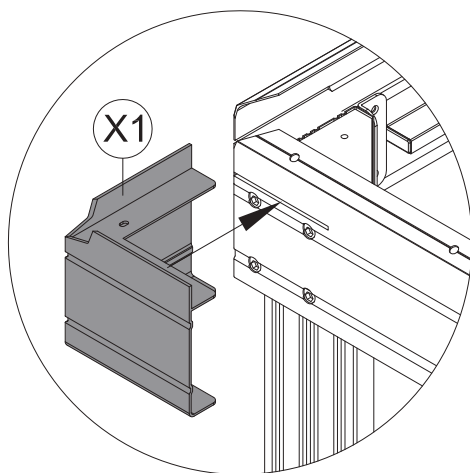




(1) Cover the corner with Part #X1. (2) Secure with 2 Self-tapping Screws #3. (from top to bottom)




(3) Secure with 2 Self-tapping Screws #3. (from bottom to top)

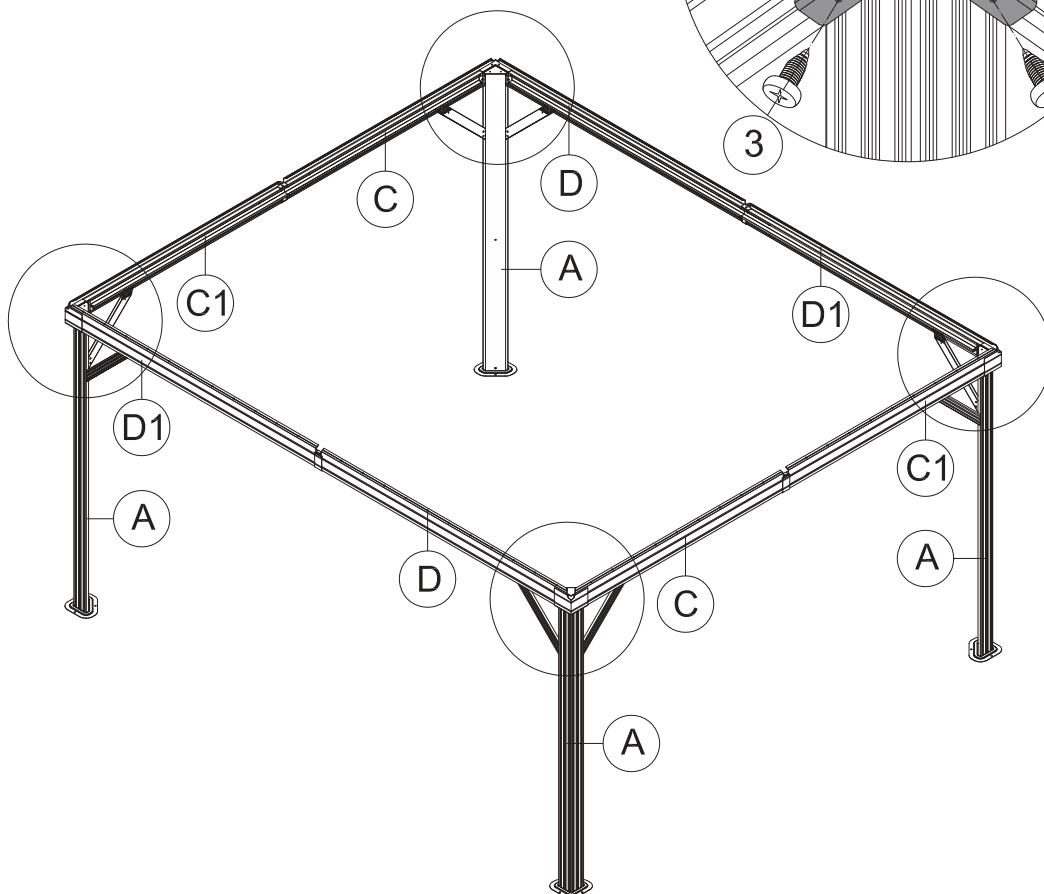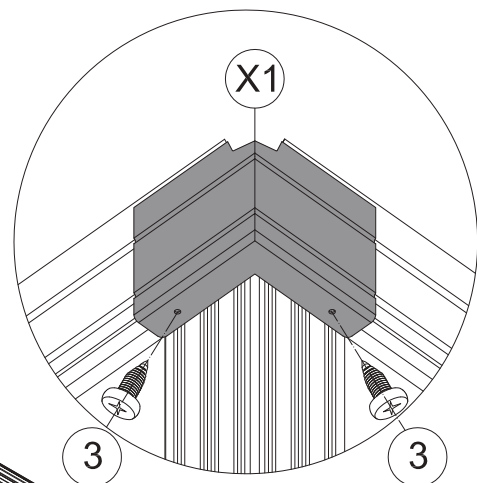


(4) Repeat the above procedures to assemble the other 3 corners.
▲ Tighten all bolts.

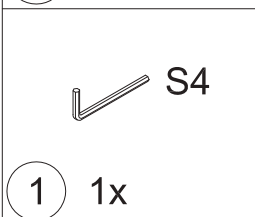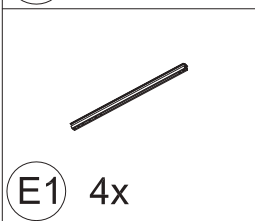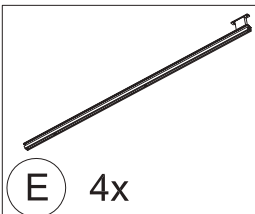

Assemble the 4 Corner Roof Bars:

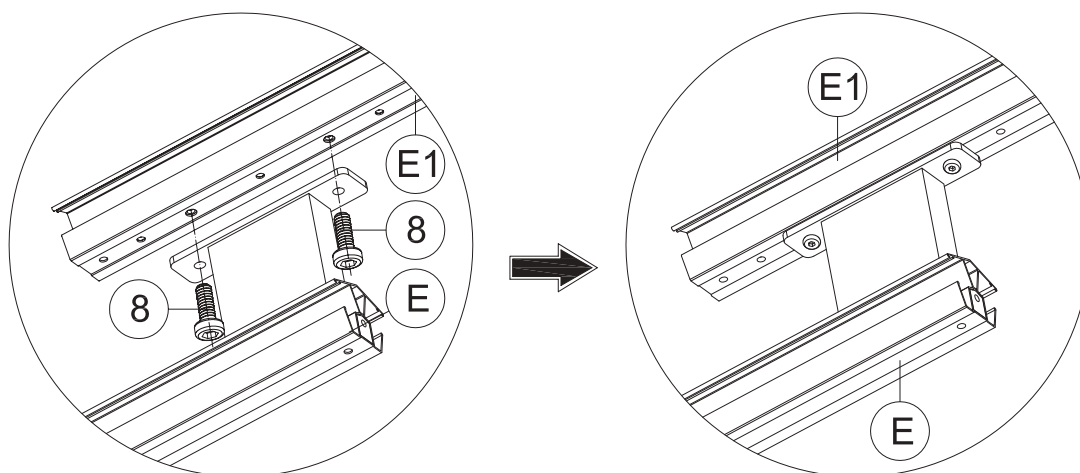


(1) Connect Part #E1 and Part #E with 2 Bolts #8 .

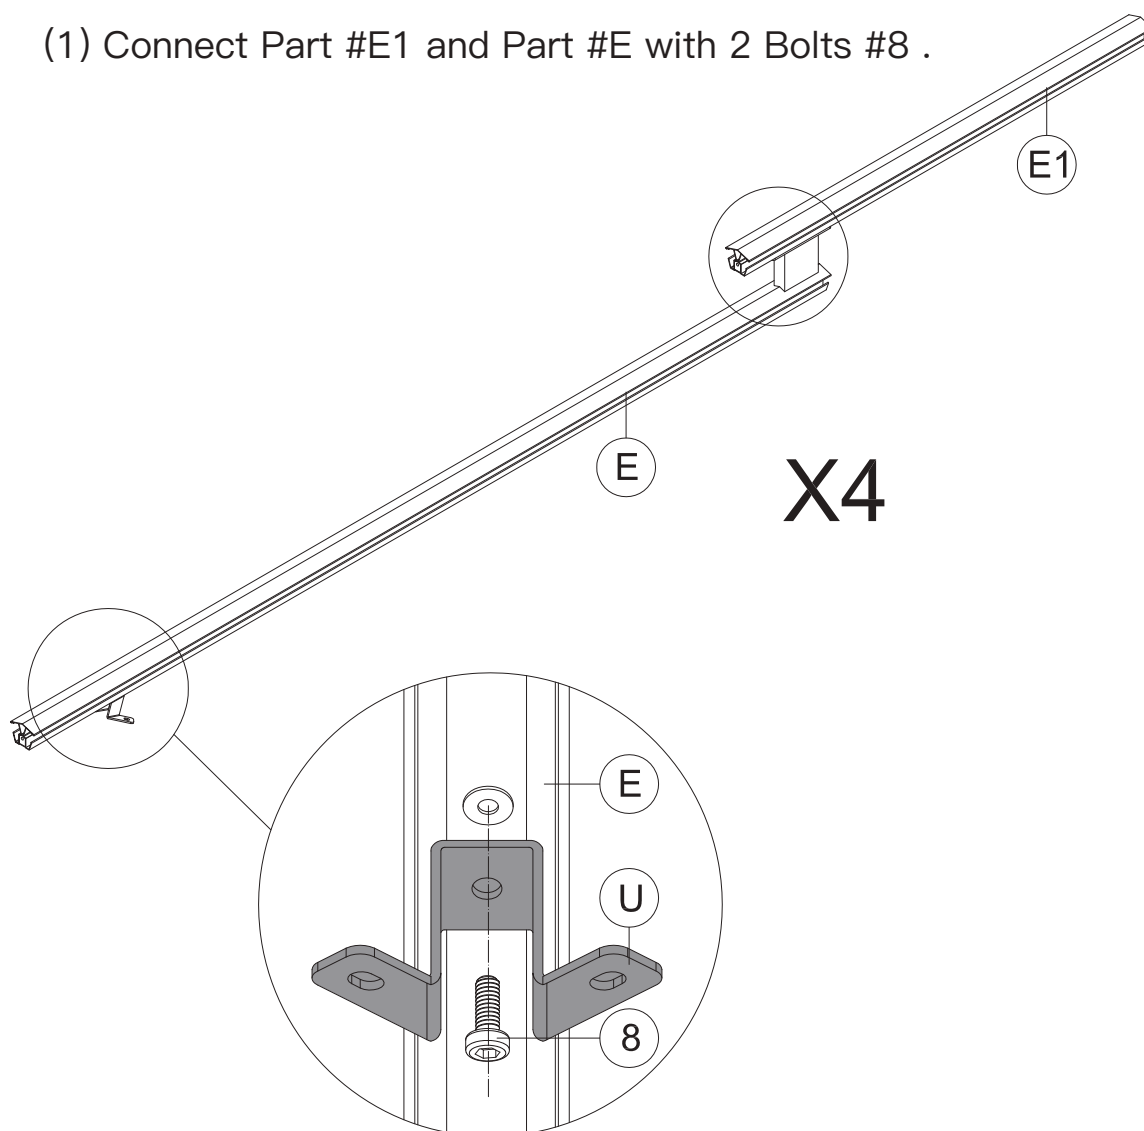

(2) Attach Part #U to Part #E with Bolt #8 .

(3) Repeat the above procedures to assemble the other 3 corner roof bars.

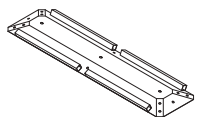

(S) 1x



(1) 1x




M6x16

(8) 16x


Please have a freestanding ladder ready at the center of the gazebo.

(1) Place 4 Part #E1 on the 4 corners of Part #S.
Secure with 8 Bolts #8 (from bottom to top)

ATTENTION: You can also finish this step on the ground and then lift 4 corner roof bar and inside roof connector to the top together.
(Need 2 people and 2 ladder)




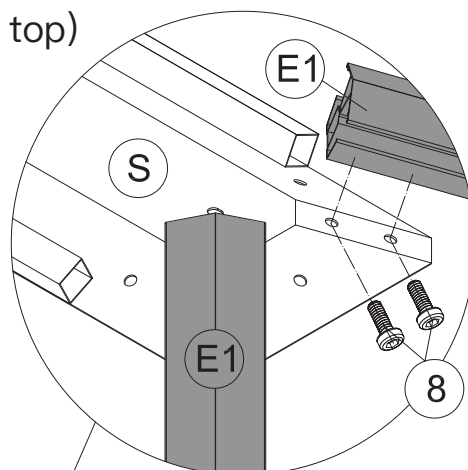



Outside View

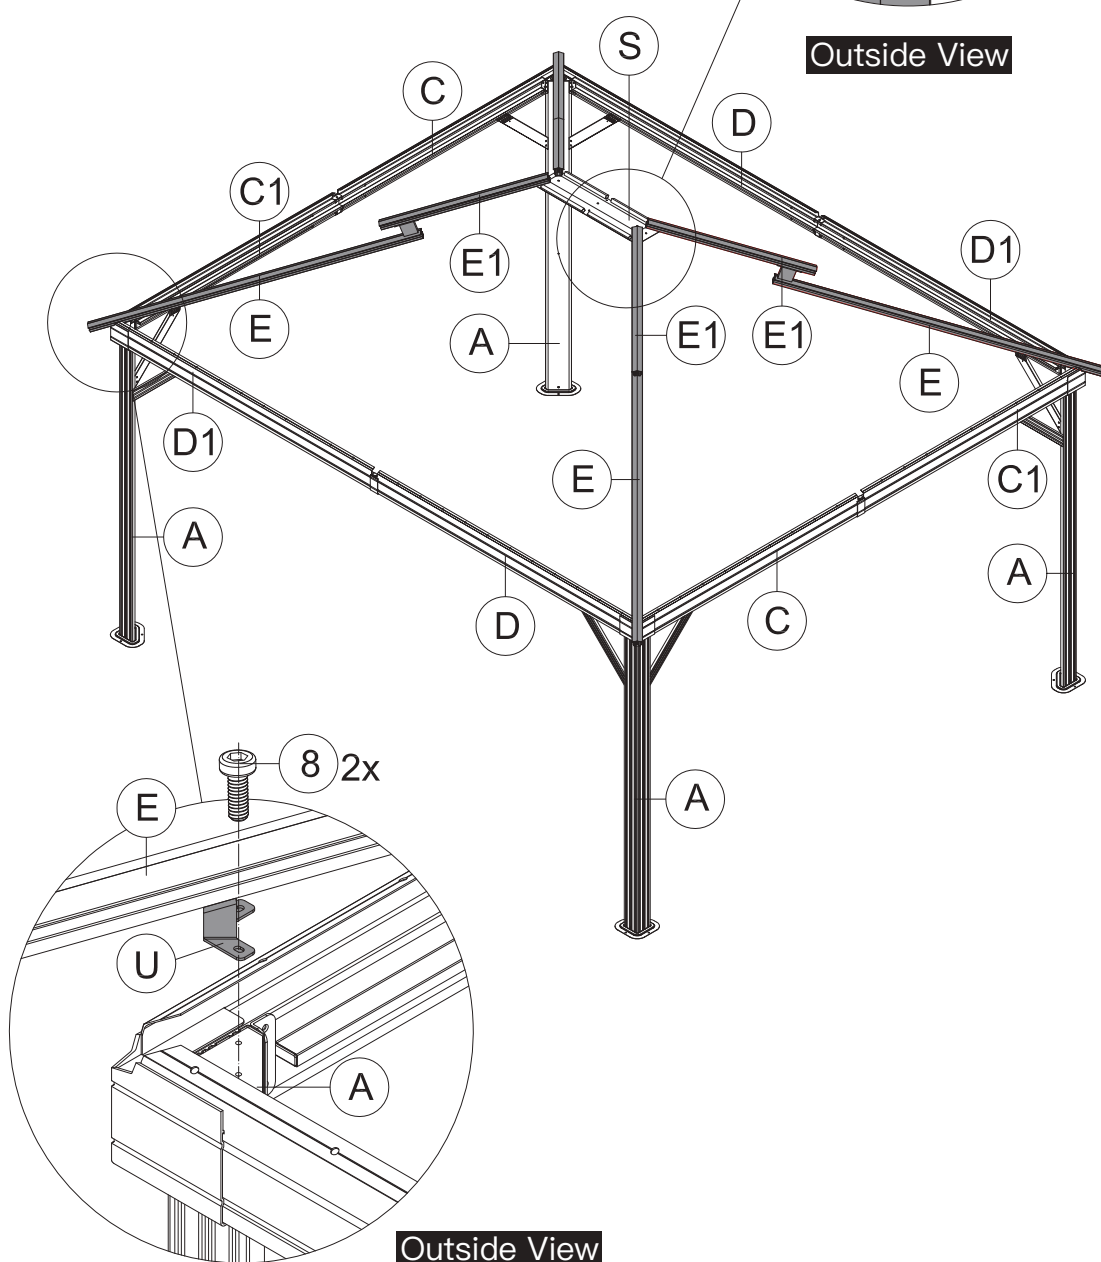


Outside View

(2) Place 4 Part #E on 4 Part #A; Secure with 8 Bolts #8.

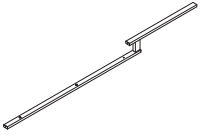
E2 4x

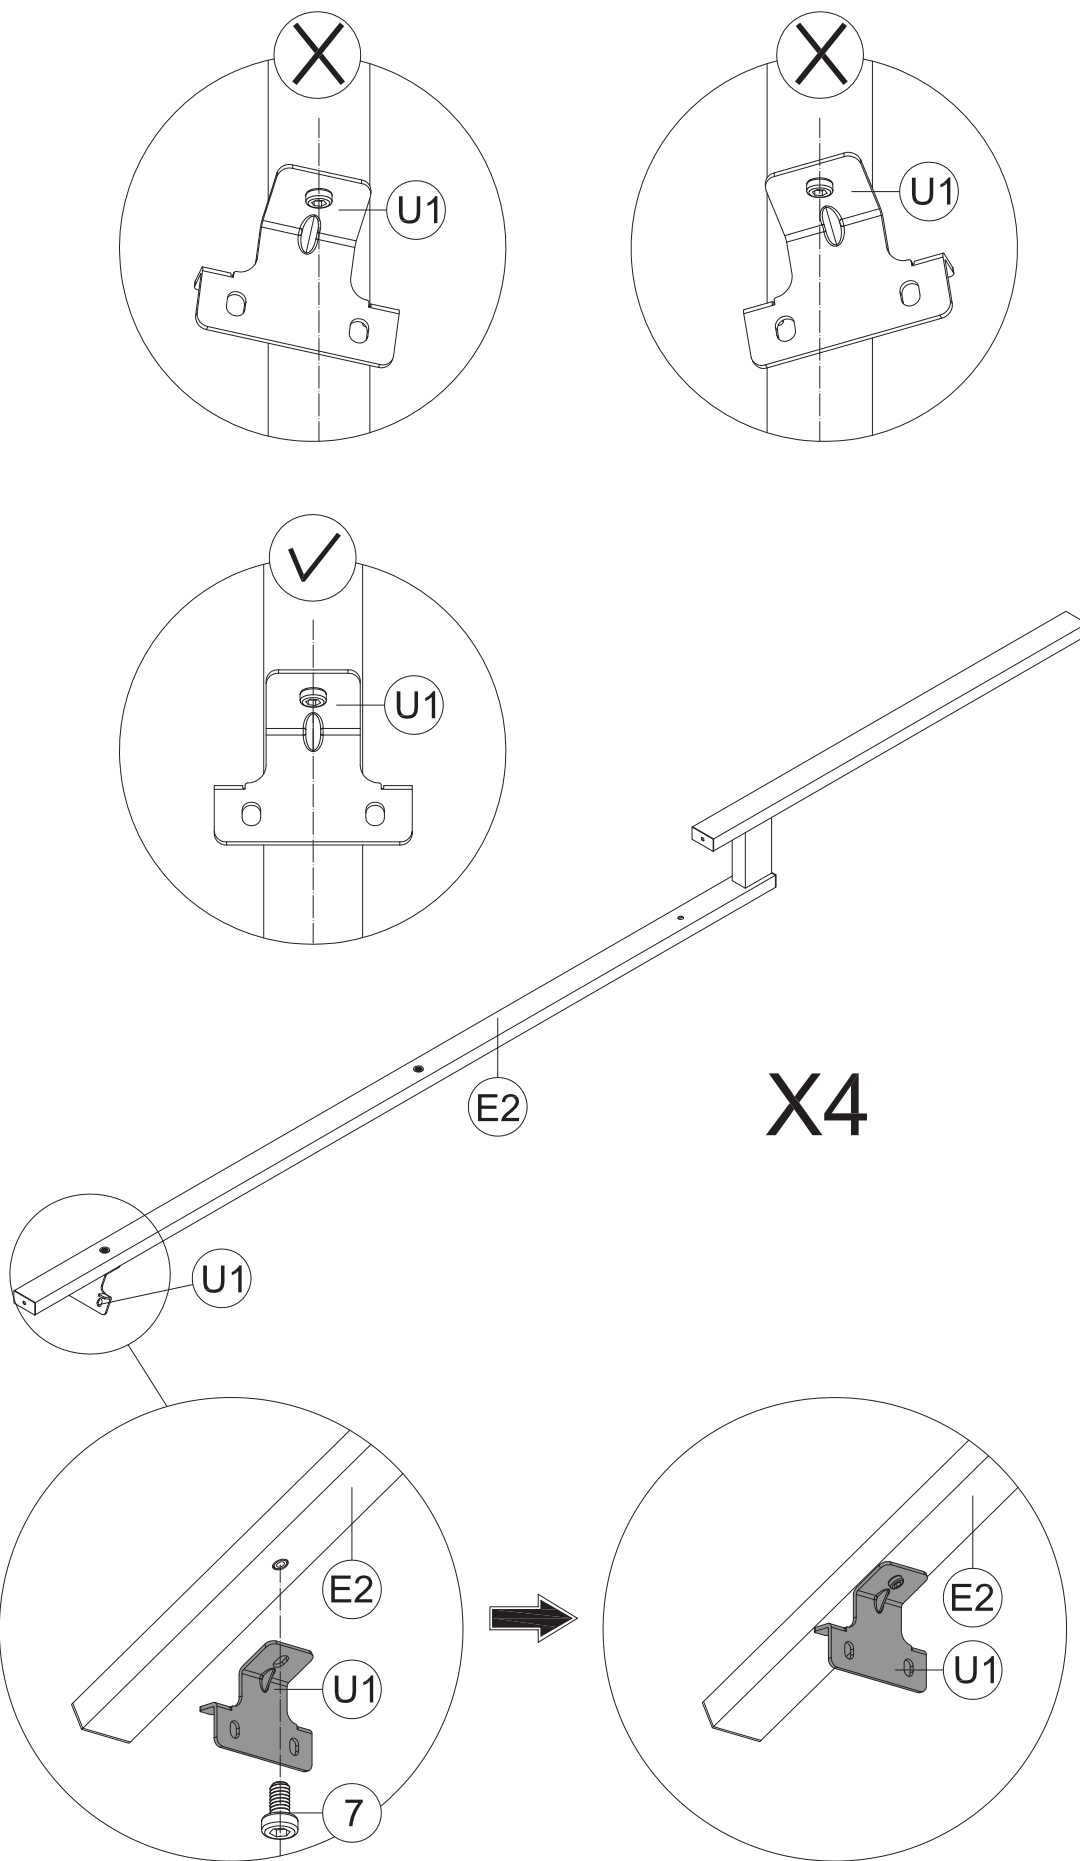U1 4x

S4
1 1x

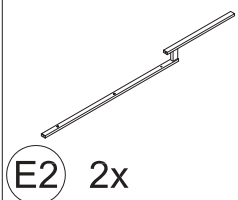M6x10
7 4x




- (1) Attach Part #U1 to Part #E2 with Bolt #7 .
 (2) Repeat the above procedures to assemble the other 3 roof bars.



1 1x






8 6x

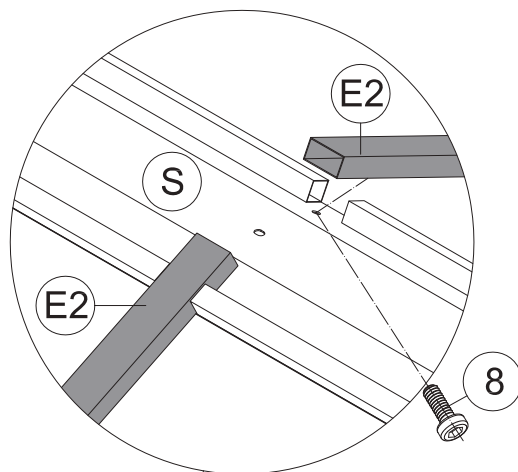

Outside View


(1) Place Part #E2 on Part #S.
Secure with Bolt #8 (from bottom to top).

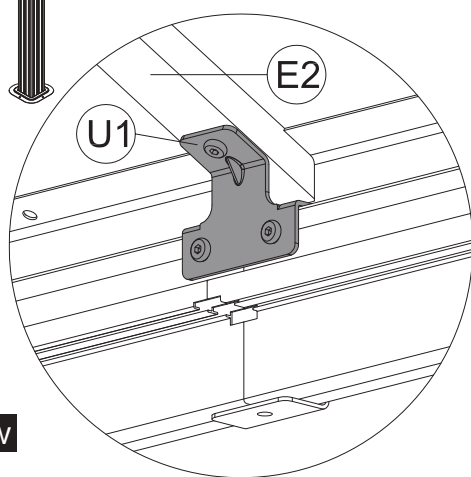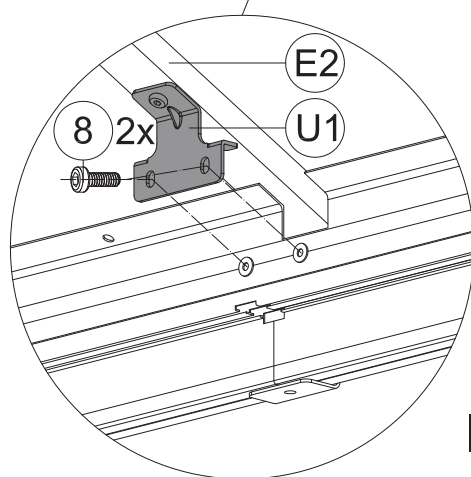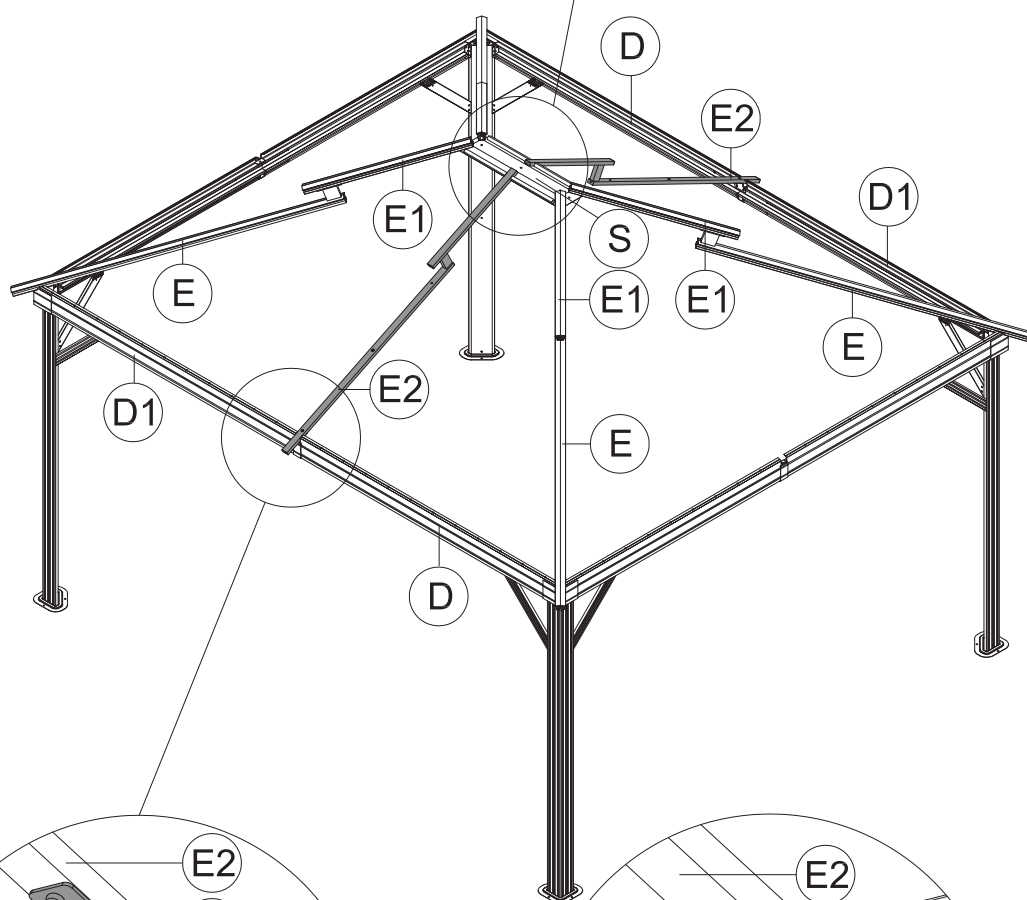

Inside View

(2) Connect Part #E2 and the Assembled Beam(D&D1) with part #U1.
Secure with 2 Bolts #8.

(3) Repeat the above procedures to assemble the opposite side.

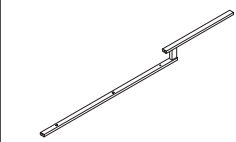

E2 2x



S4


1 1x






M6x16

8 6x

(1) Place Part #E2 on part #S. Secure with Bolt #8 (from bottom to top).

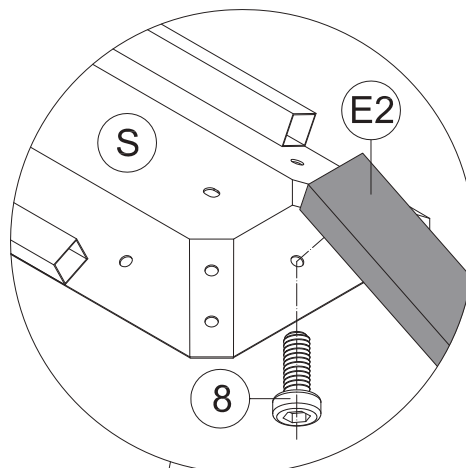


Outside View

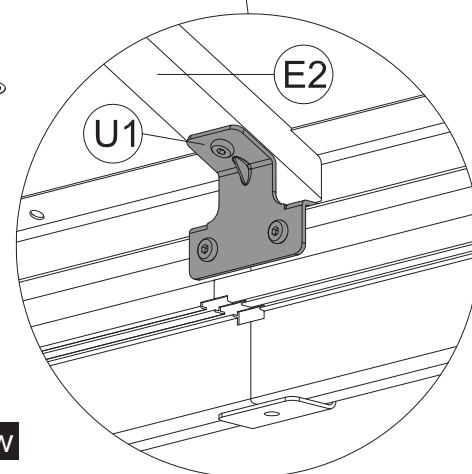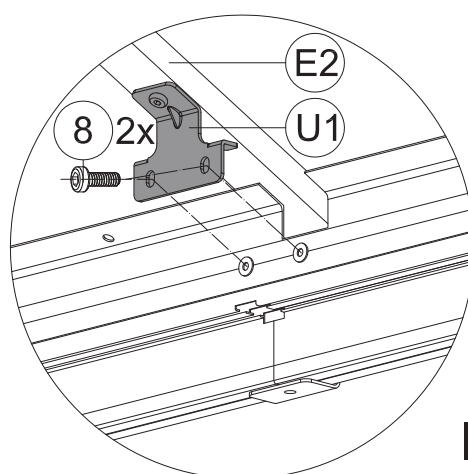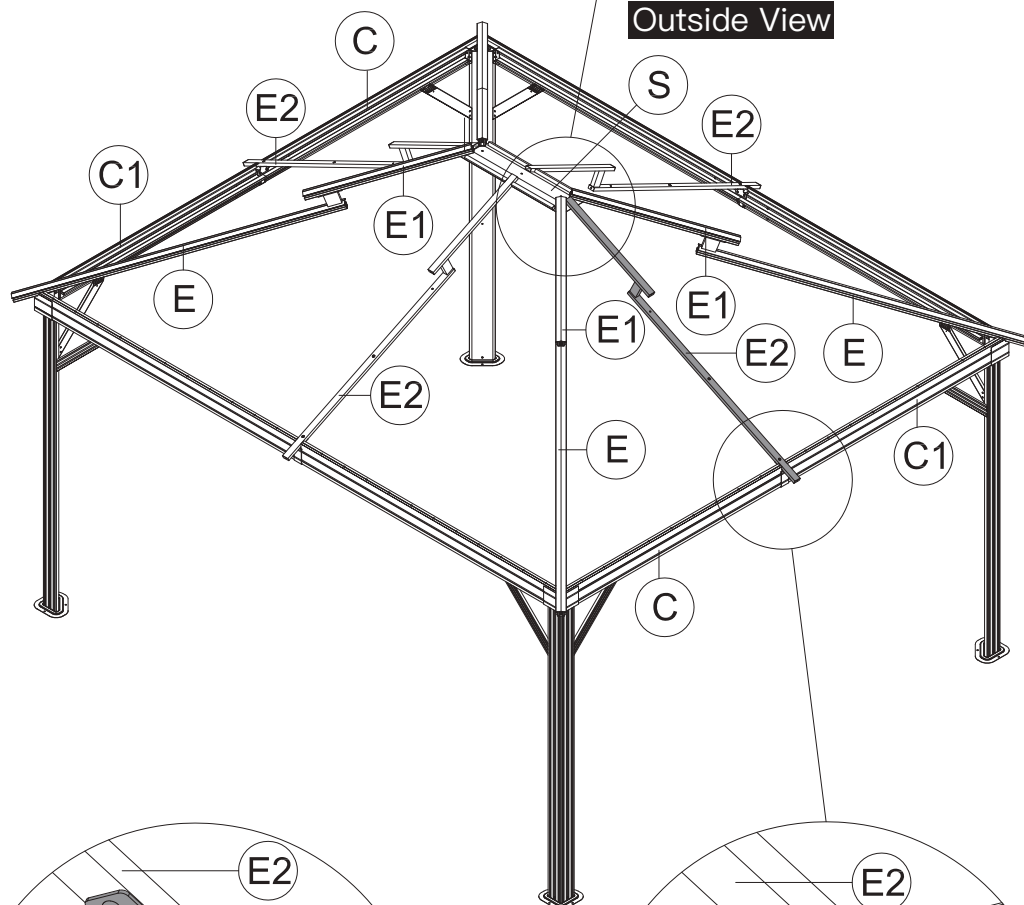


Inside View

(2) Connect Part #E2 and the Assembled Beam(C&C1) with part #U1. Secure with 2 Bolts #8 .

(3) Repeat the above procedures to assemble the opposite side.


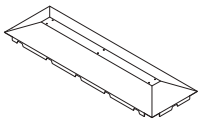


(S1) 1x

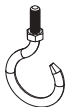


(T) 3x


Secure Part #T to Part #S and Part #S1.
(From Bottom to Top)

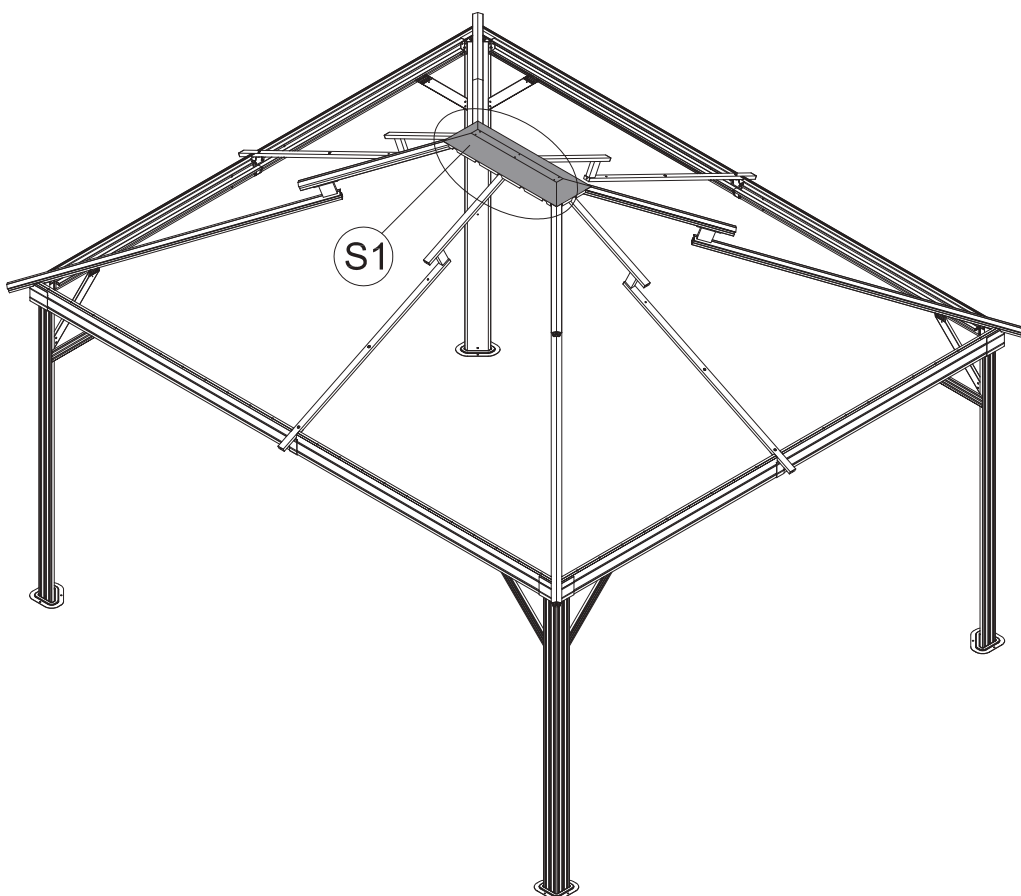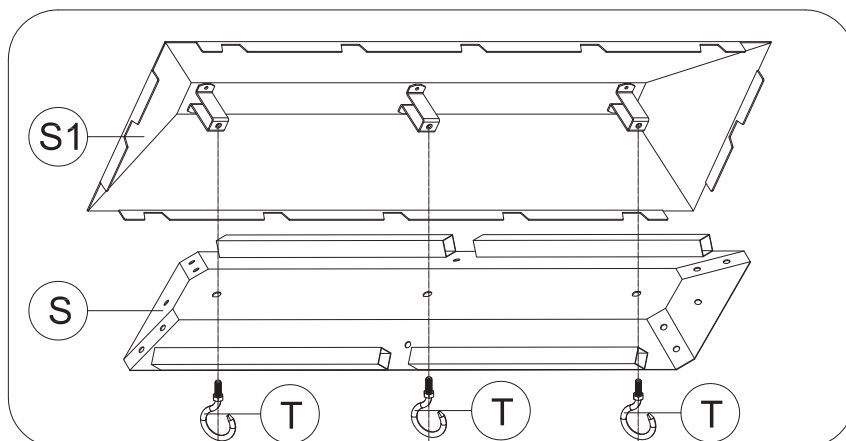


ATTENTION: The holes of Part #S and Part #S1 need to be aligned, on the same vertical line.

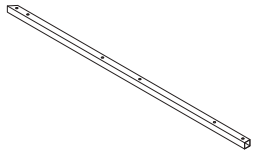

G 2x

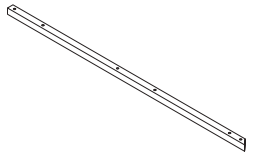

G1 2x

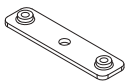

U3 2x



1 1x




M6x10

7 2x



M6x16

8 4x

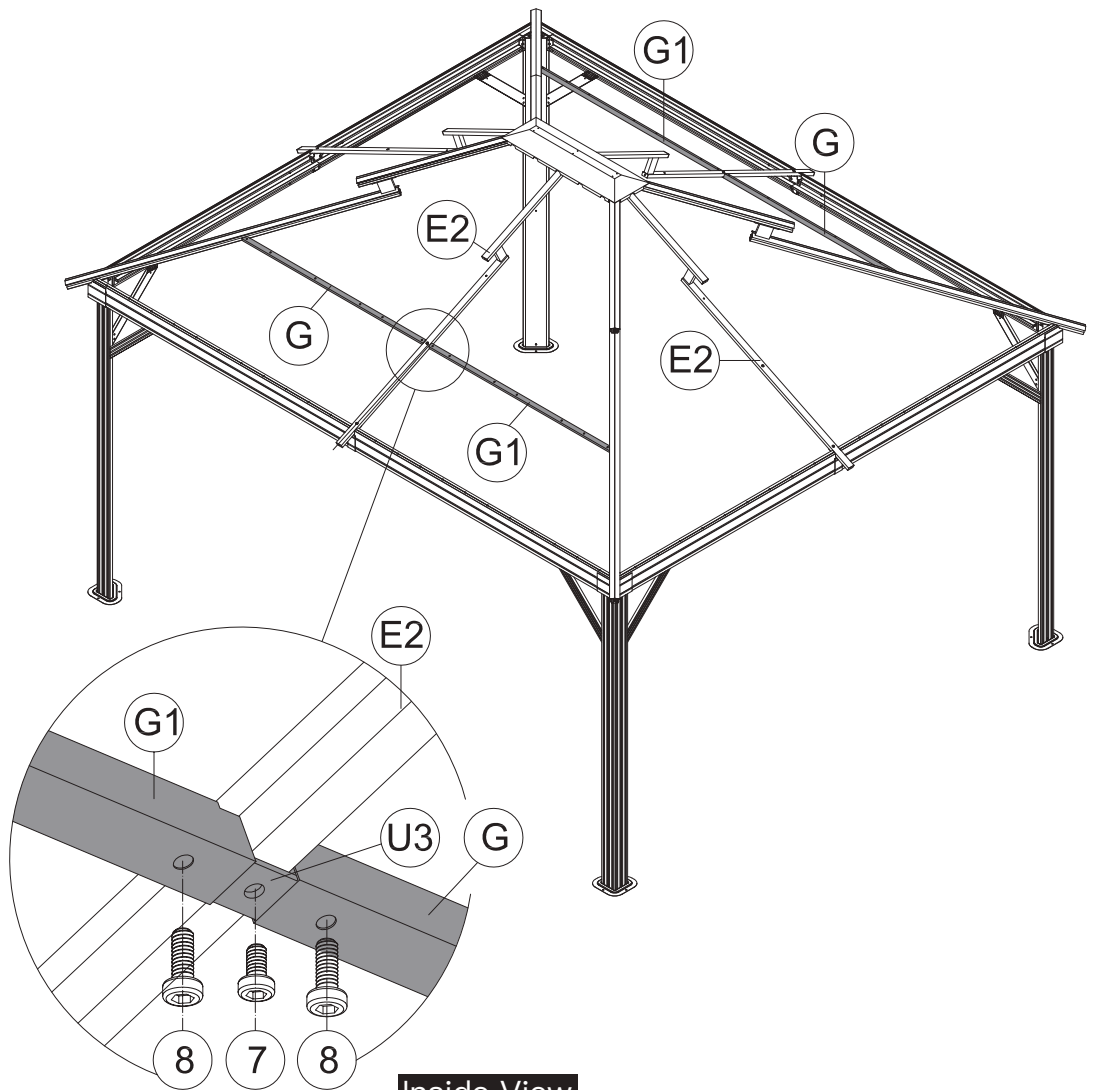


Inside View


(1) Insert Part #U3 into Part #G and Part #G1.

(2) Attach Part #G and Part #G1 to the Part #E2 with 1 Bolt #7 and 2 Bolts #8.


(3) Repeat the above procedures to assemble the opposite side.

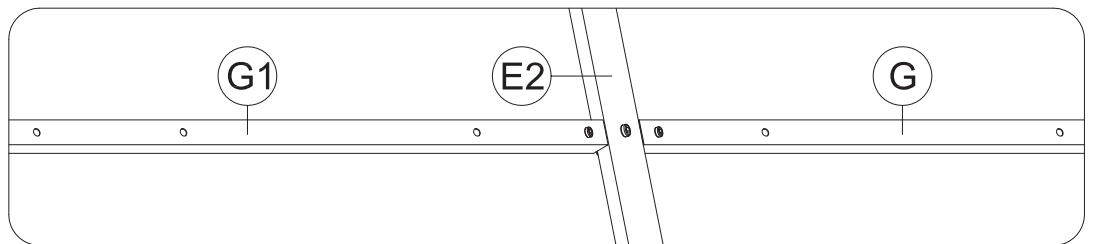

Outside View

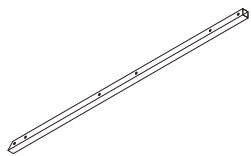

F 4x

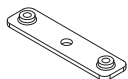

U3 2x



1 1x




M6x10

7 2x




M6x16

8 4x

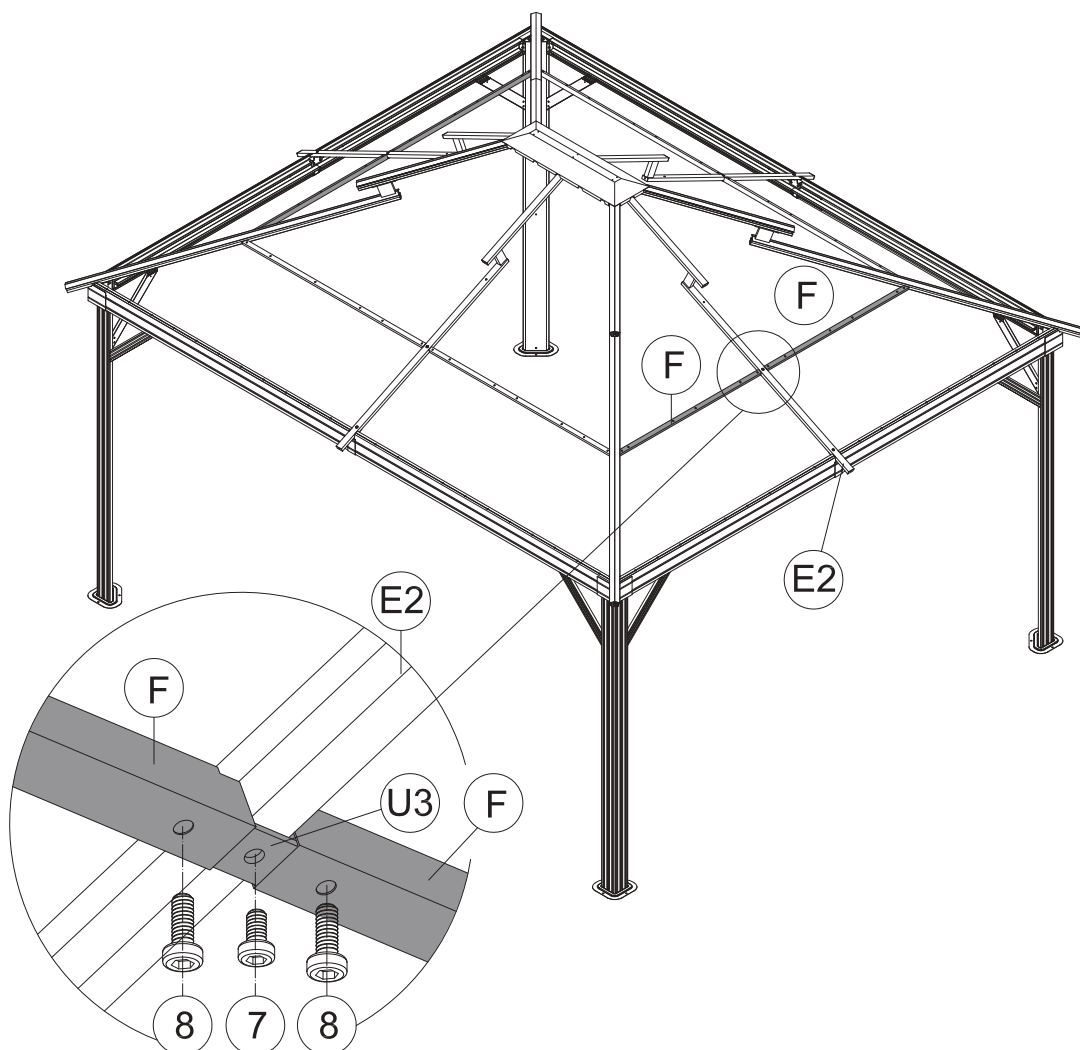

Inside View

- (1) Insert Part #U3 into 2 Part #F.
- (2) Attach Part #F to the Part #E2 with 1 Bolt #7 and 2 Bolts #8.
- (3) Repeat the above procedures to assemble the opposite side.

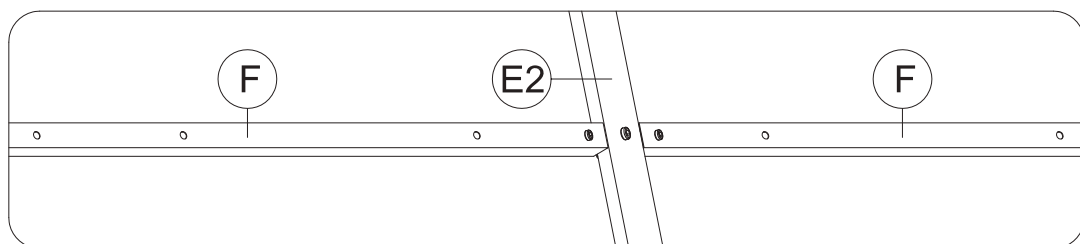

Outside View



U2 4x





1 1x




M6x16

8 12x

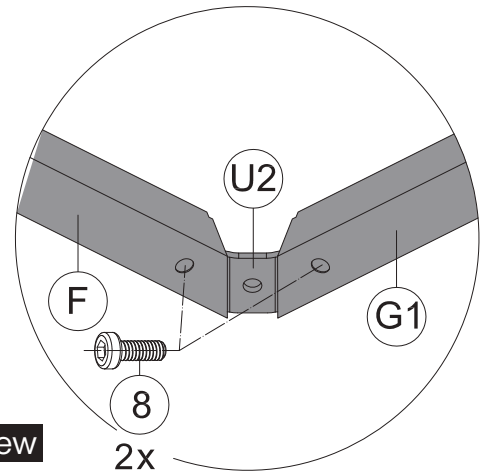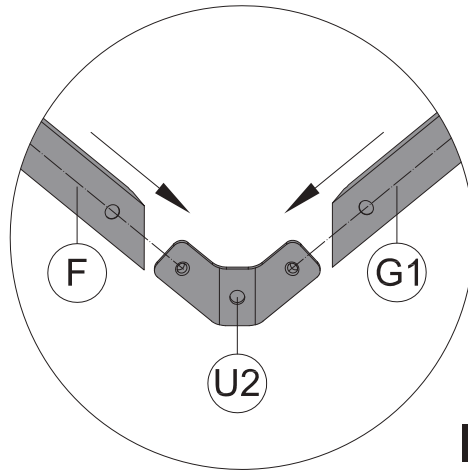


Inside View

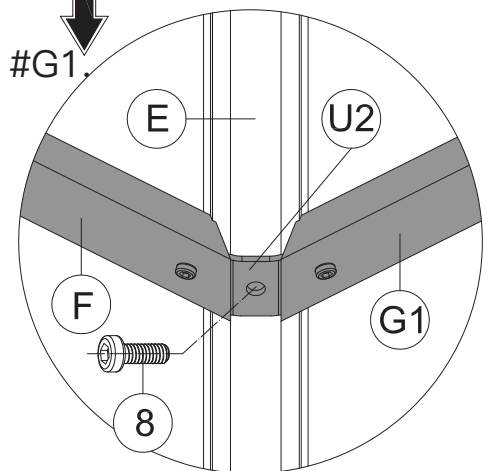

(1) Insert Part #U2 into Part #F and Part #G1.

(2) Secure with 2 Bolts #8.

(3) Secure them to Part #E with Bolt #8.

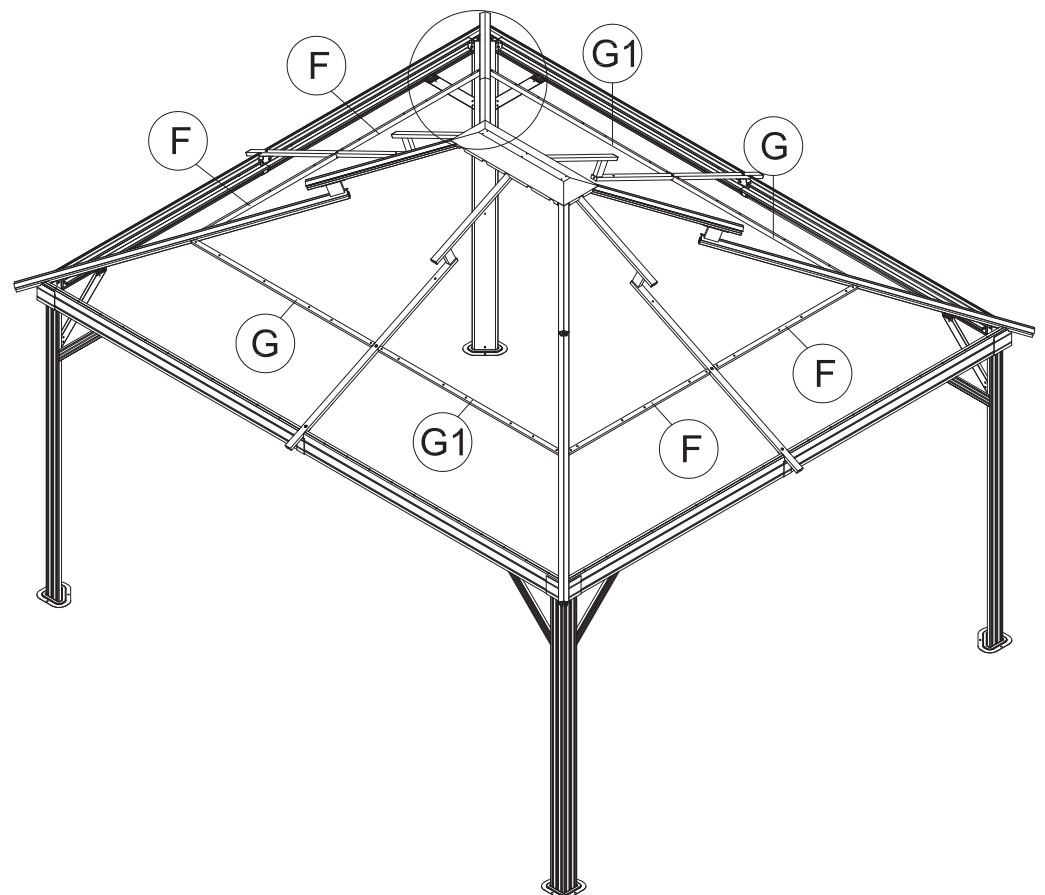

(4) Repeat the above procedures to assemble the opposite sides.



U2 4x




1 1x





M6x16

8 12x

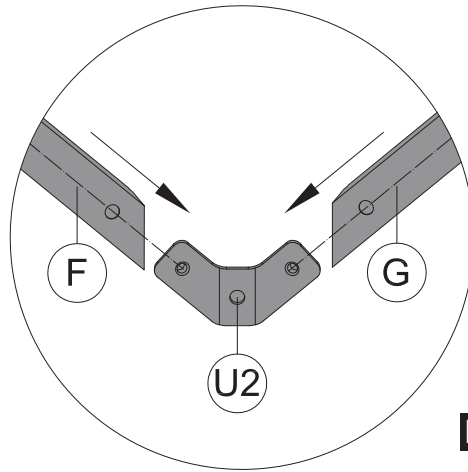


Inside View

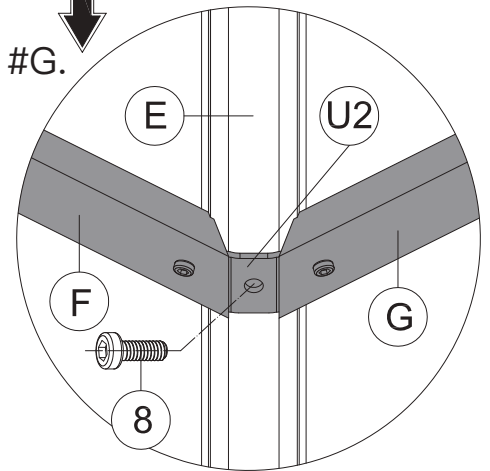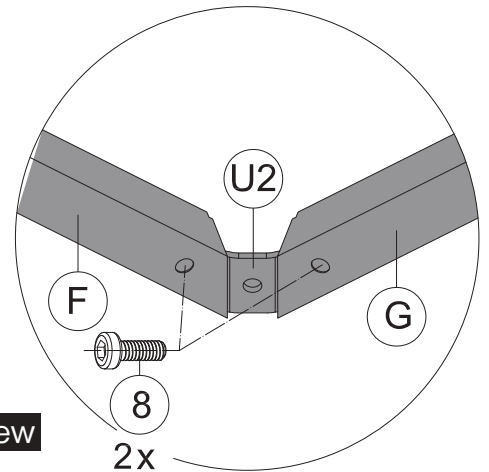


(1) Insert Part #U2 into Part #F and Part #G.

(2) Secure with 2 Bolts #8.


(3) Secure them to Part #E with Bolt #8.

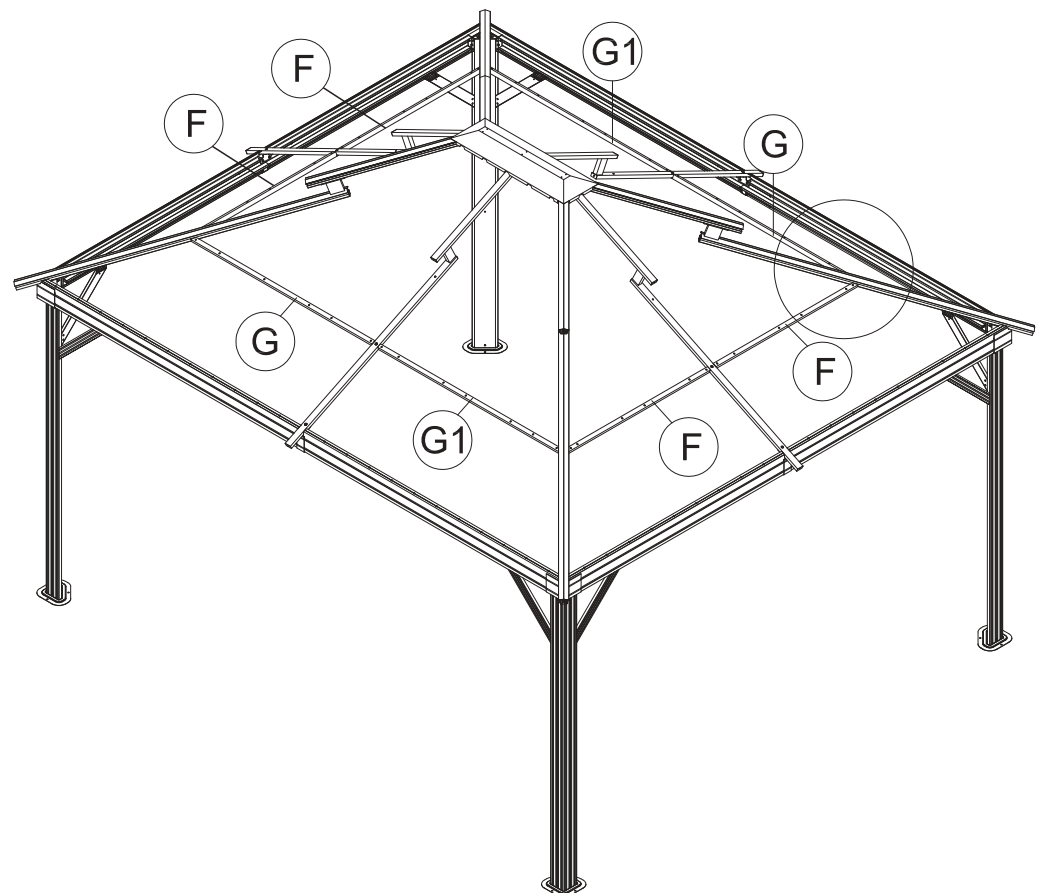


(4) Repeat the above procedures to assemble the opposite sides.

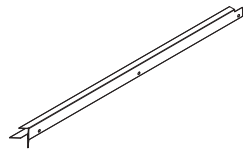


J1 2x

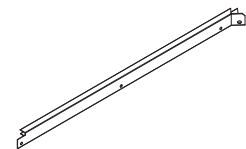

J2 2x

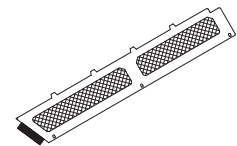

Q1 2x

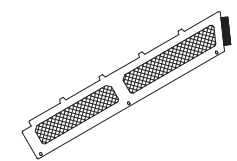

Q2 2x



1 1x



M6

5 8x




M6x10

7 8x


24

(1) Connect Part #J1 and Part #Q1 with 2 Bolts #7 and 2 Nuts #5.

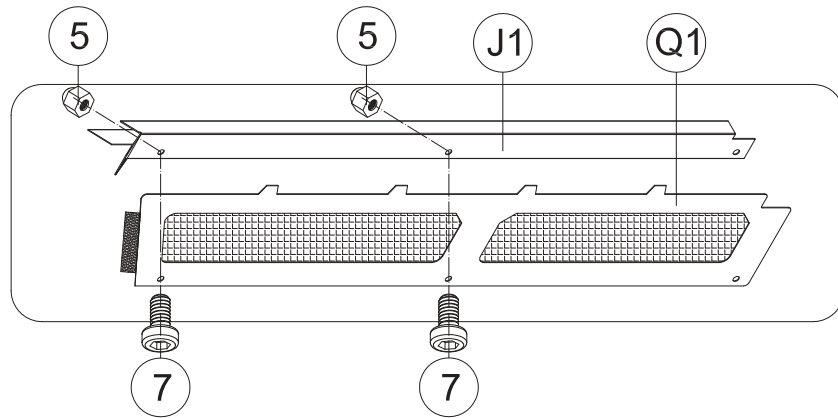


X2

(2) Connect Part #J2 and Part #Q2 with 2 Bolts #7 and 2 Nuts #5.

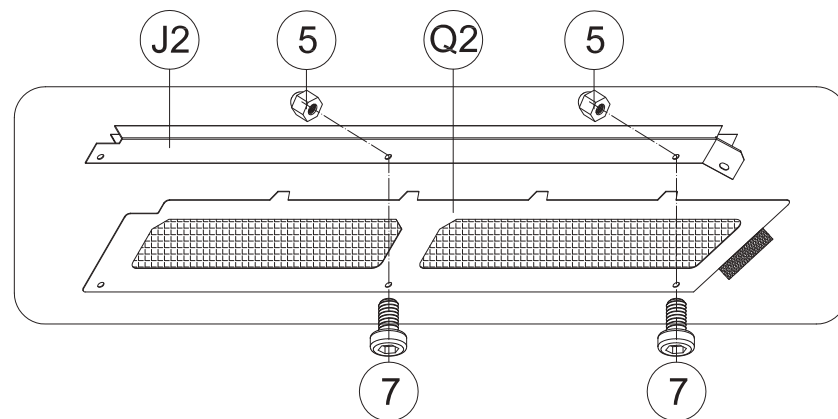

X2

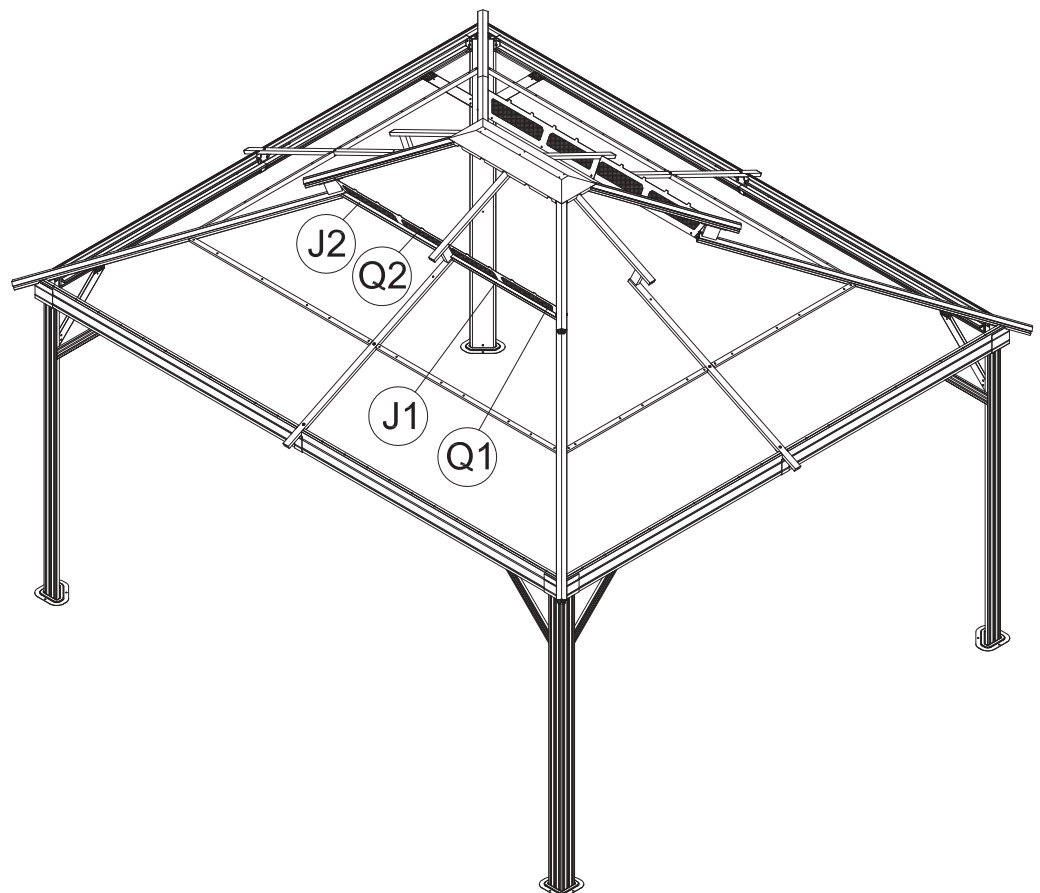


✓ S4

1 1x




M6x16


8 2x

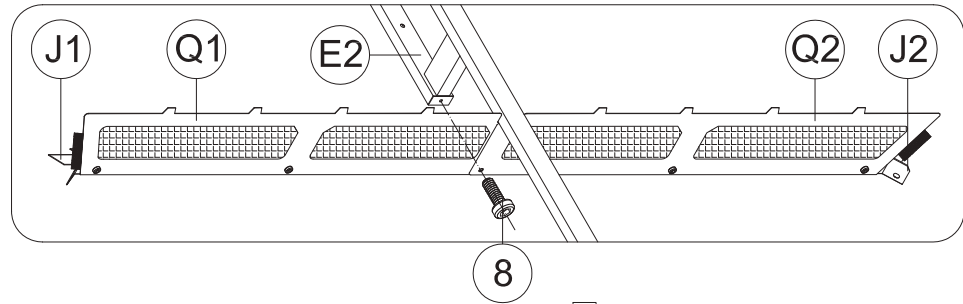


Inside View

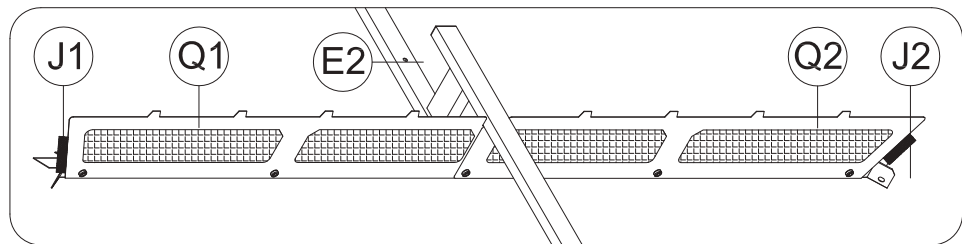


(1) Place the Assembled J1 & Q1 and J2 & Q2 on Part #E2, securing with 1 Bolt #8.

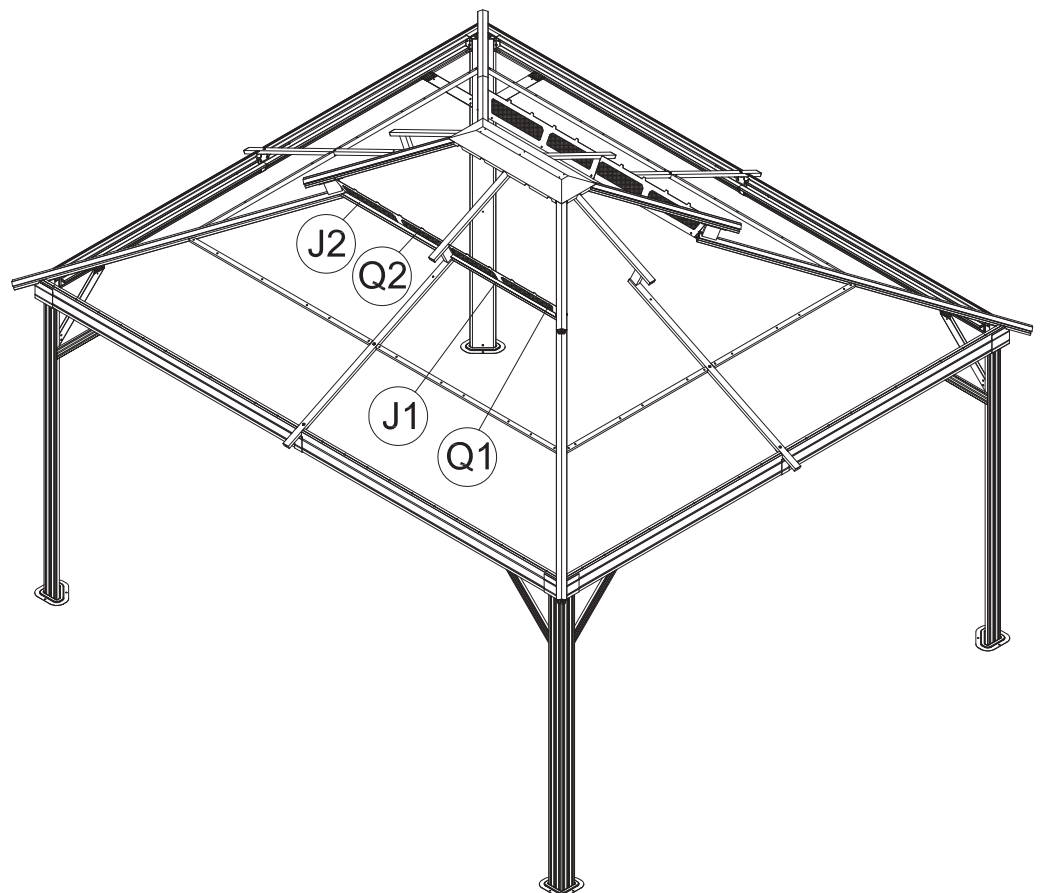


(2) Repeat the above procedures to assemble the opposite side.

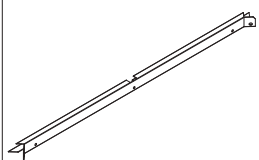

J 2x

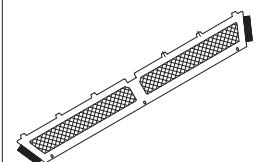

Q 2x

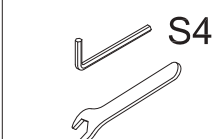

1 1x



5 4x




7 4x





8 2x

26

(1) Connect Part #J and Part #Q with 2 Bolts #7 and 2 Nuts #5.

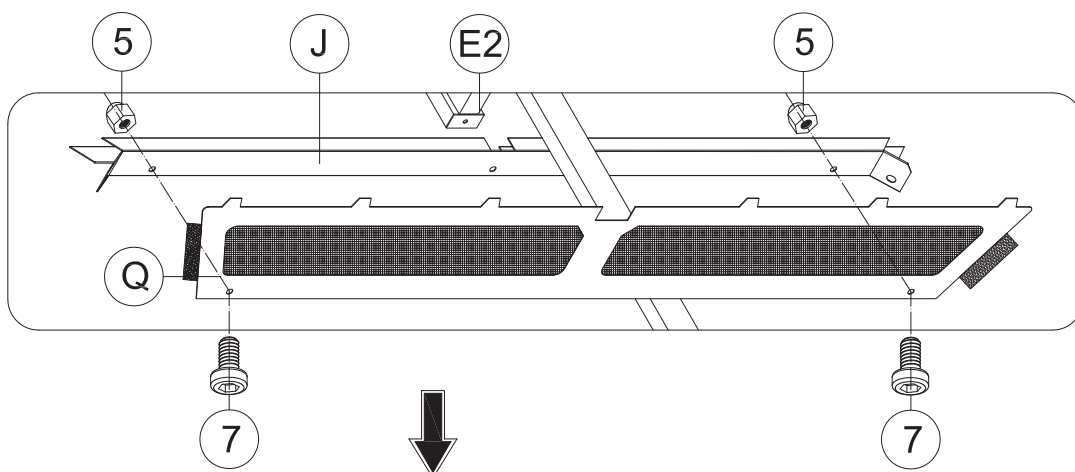

(2) Place the Assembled Part #J & #Q on Part #E2, securing with 1 Bolt #8.

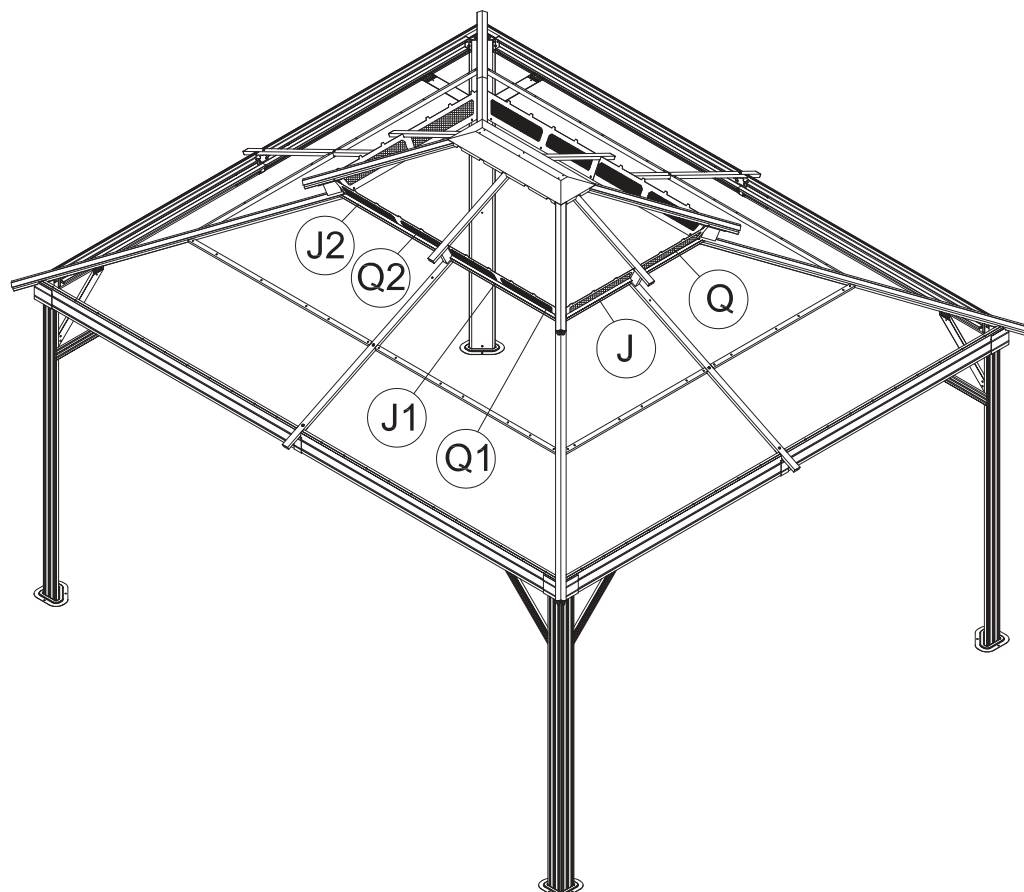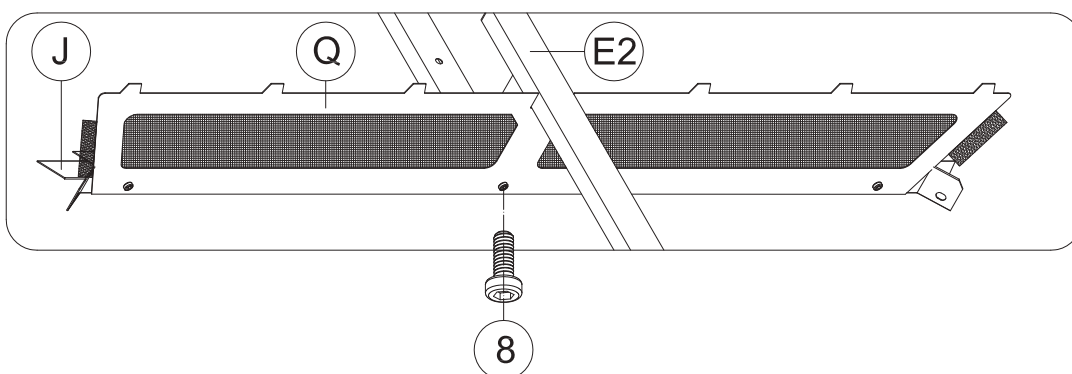

(3) Repeat the above procedures to assemble the opposite side.



(X3) 4x




(1) 1x




ST6.3x15

(2) 4x


(1) Place Part #J and Part #J1 on Part #E;
put on Part #X3 and secure with Self-tapping Screw #2.

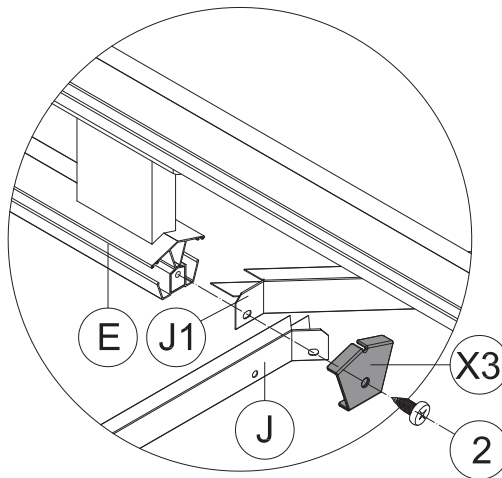

Inside View

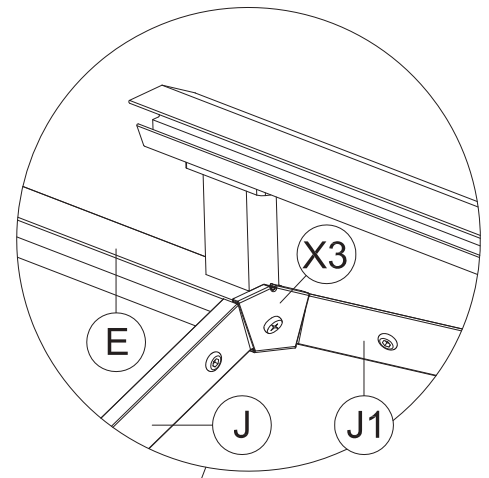

Inside View

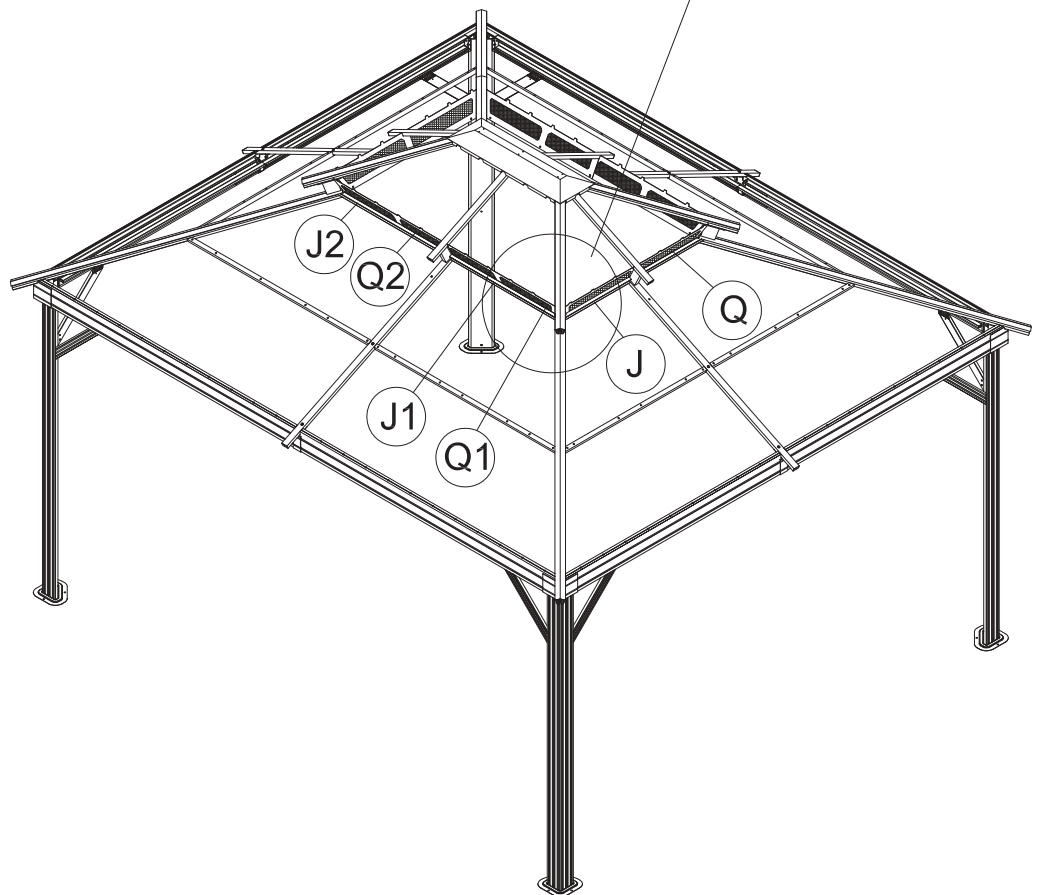

(2) Repeat the above procedures to assemble the other 3 corners.

Cover Part #Z, #Z1 & #Z2 to Roof Panels.

L1 2x

L2 2x

L3 2x

L4 2x



Z 8x

Z1 4x



Z2 4x

28

X2

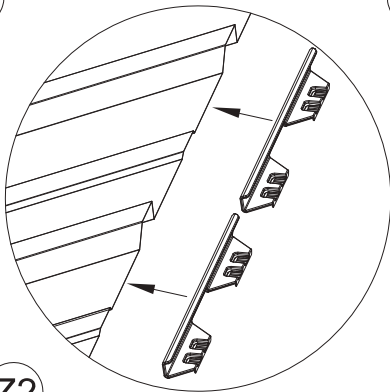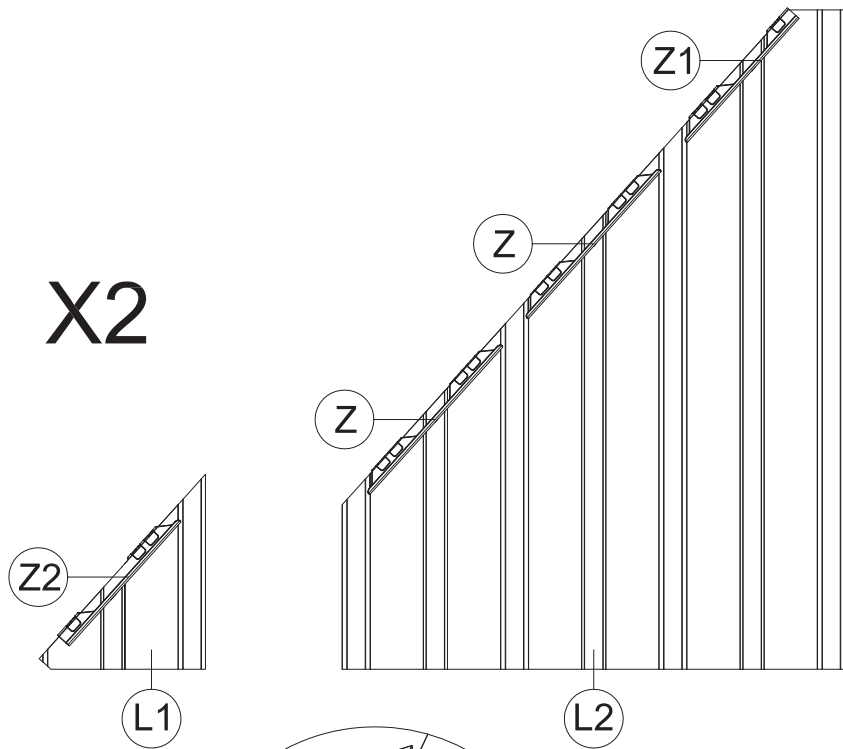


Section View

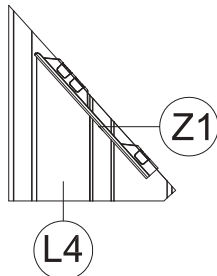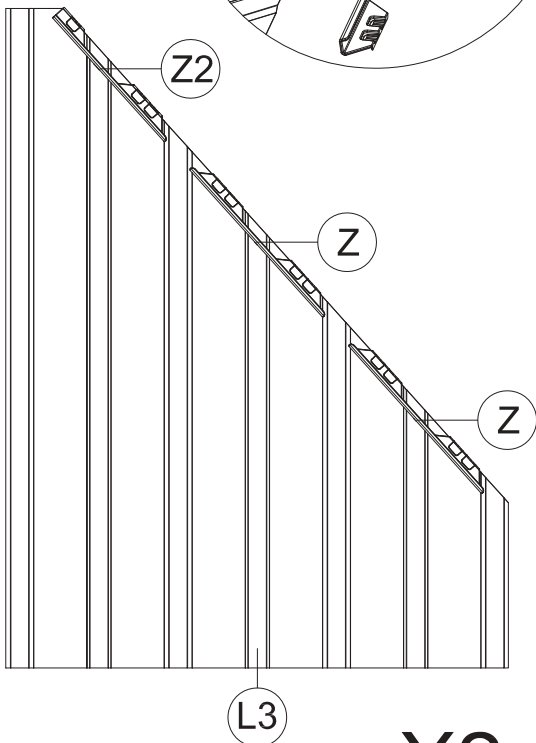


X2


Cover Part #Z, #Z3 & #Z4 to Roof Panels.

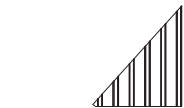

N1 2x

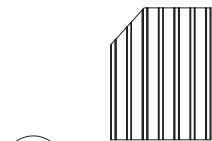

N2 2x

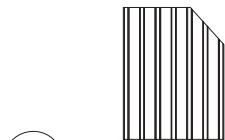

N3 2x



N4 2x



Z 12x





Z3 2x




Z4 2x

X2

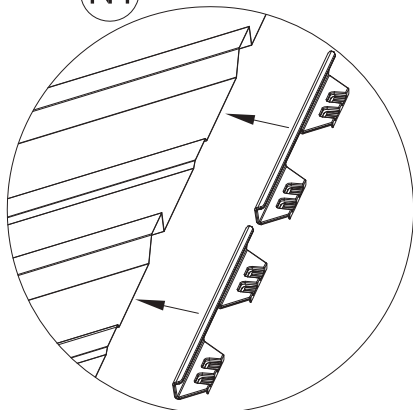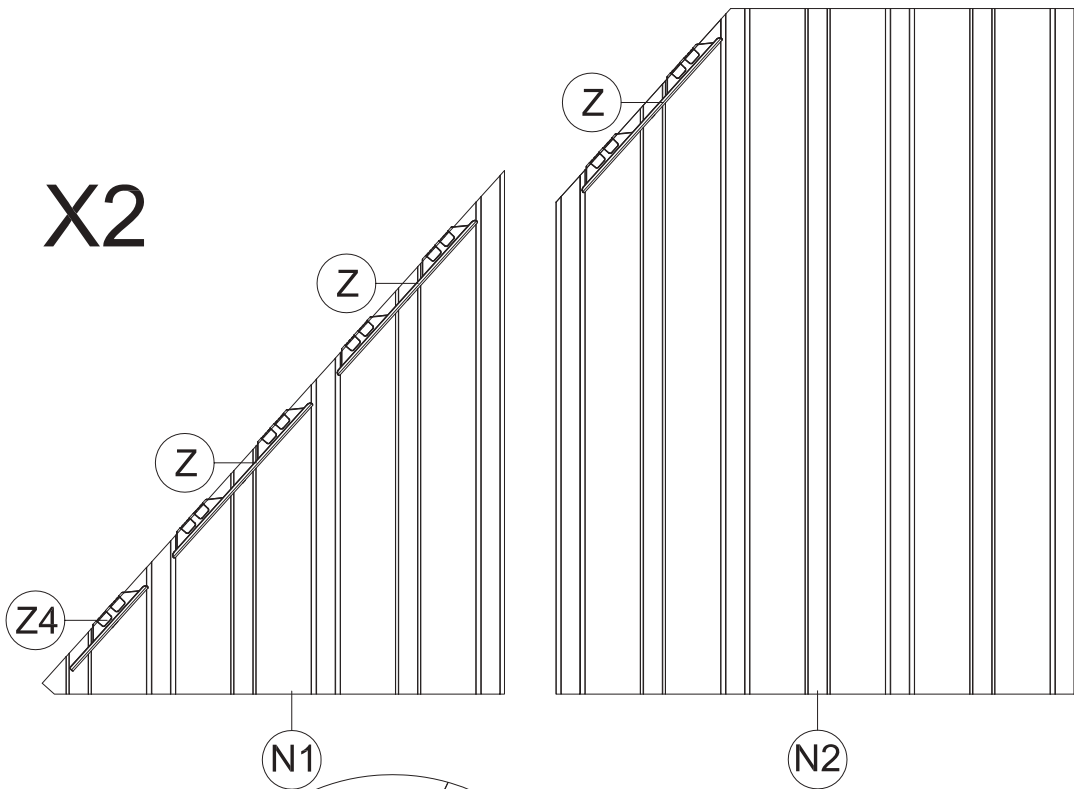


Section View

X2

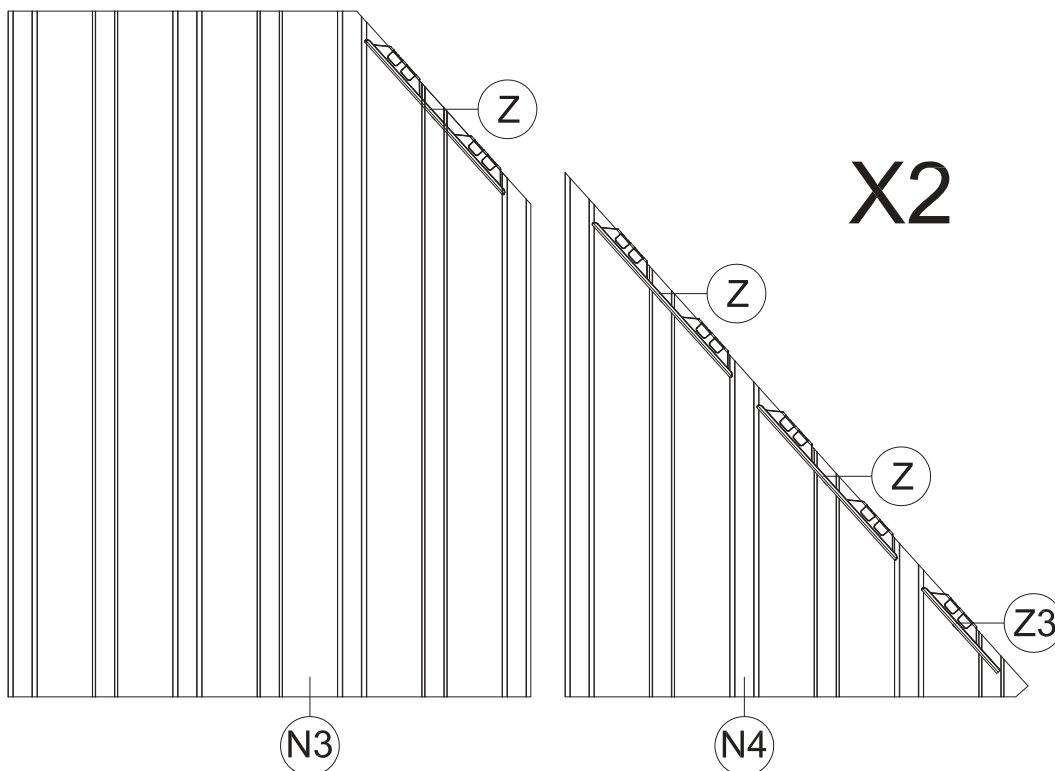


ATTENTION: The bigger roof panel need to cover the smaller one.

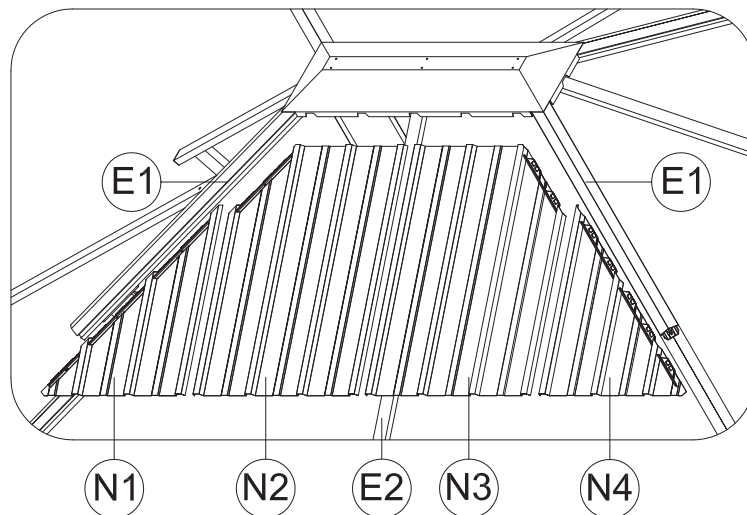


(1) Insert Part #N1 and Part #N2 into the frame.


(2) Insert Part #N4 and Part #N3 into the frame.

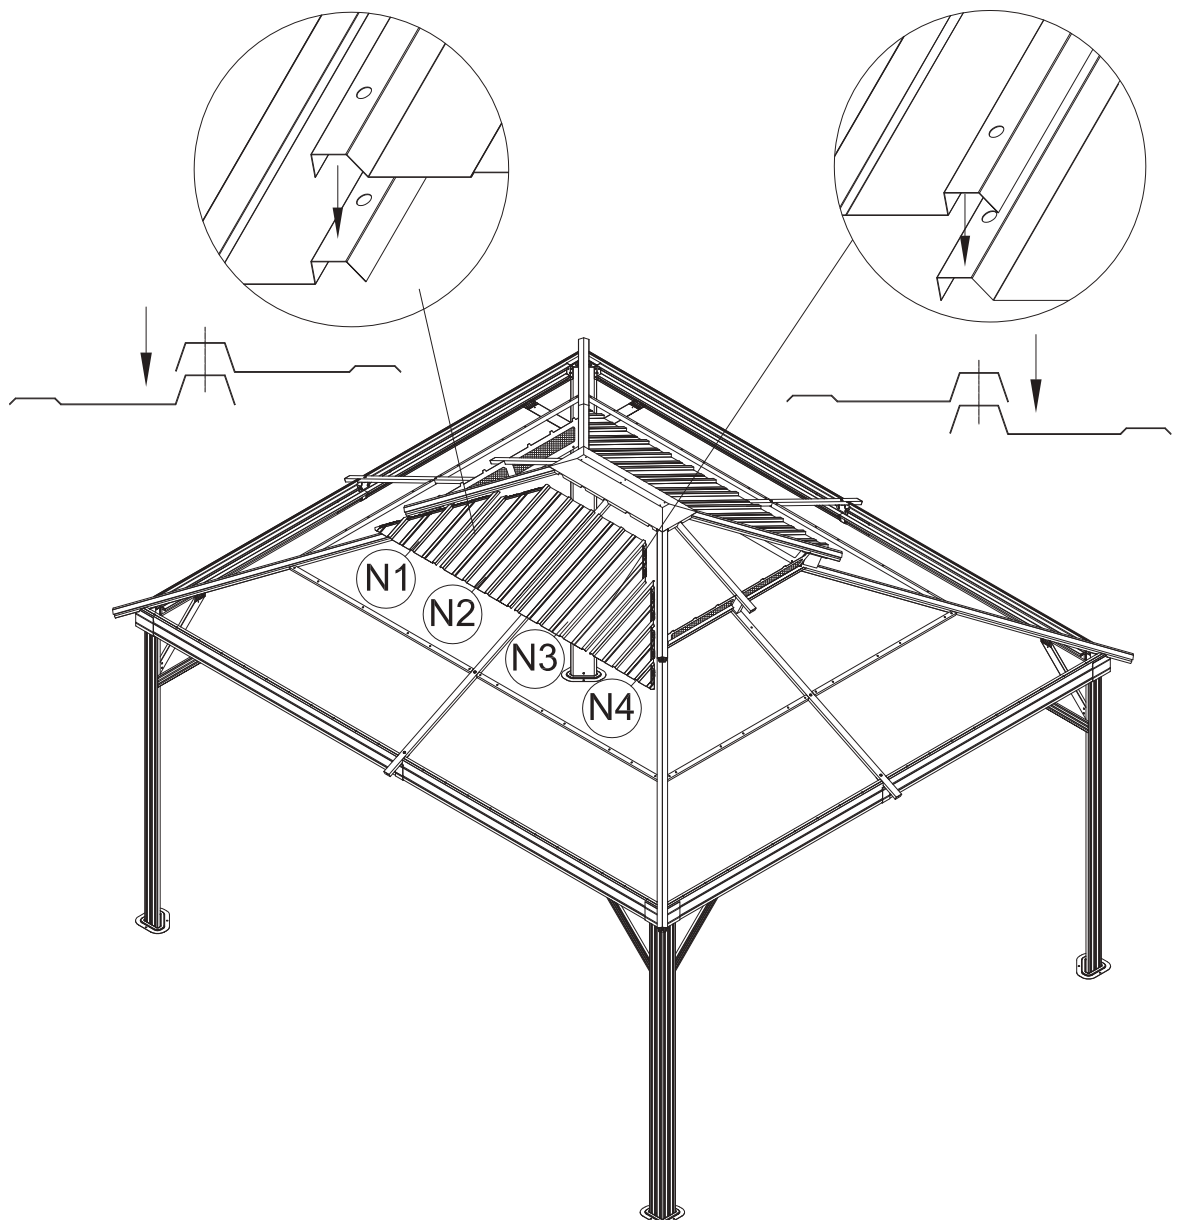

(3) Repeat the above procedures to assemble the opposite side.

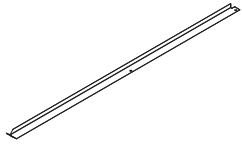

(H1) 2x

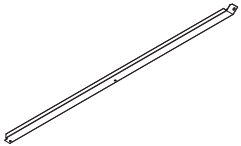

(H2) 2x



(X2) 2x





(1) 1x




M6x16

(8) 2x

(1) Place Part #H1 and Part #H2 on Part #E2;
put on Part #X2 and secure with Bolt #8.

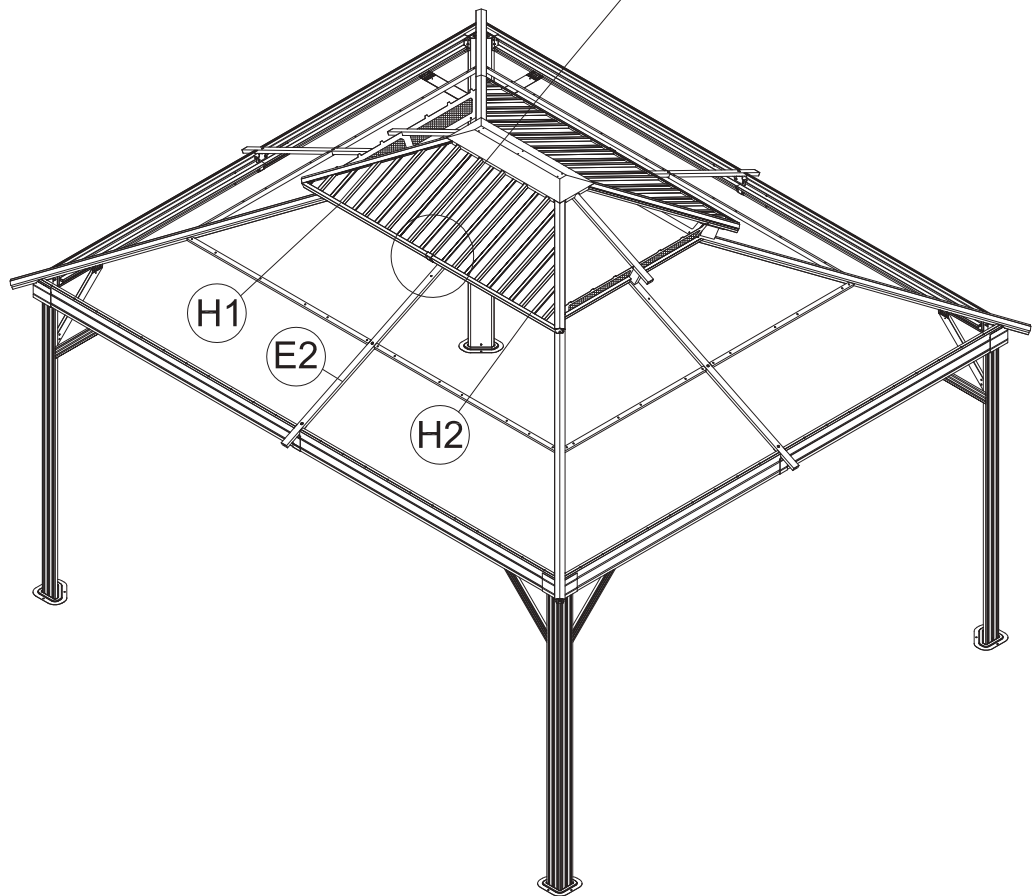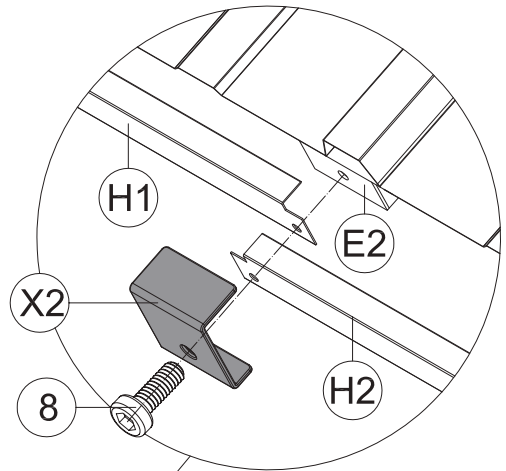

(2) Repeat the above procedures to assemble the opposite side.

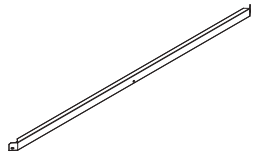

(H) 2x



S4

(1) 1x






M6x16

(8) 2x

ATTENTION: The bigger roof panel need to cover the smaller one.

(1) Insert Part #L1 and Part #L2 into the frame.

(2) Insert Part #L4 and Part #L3 into the frame.

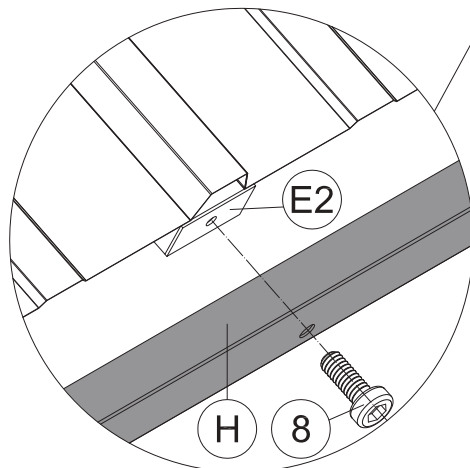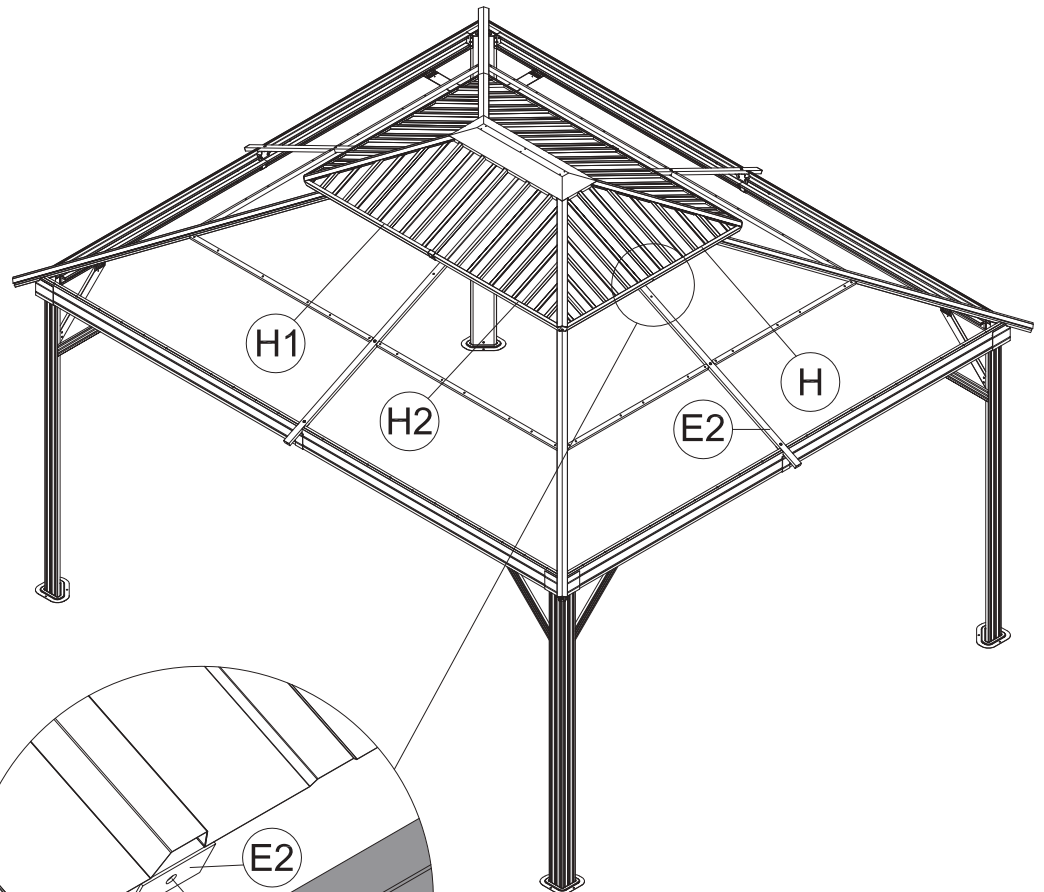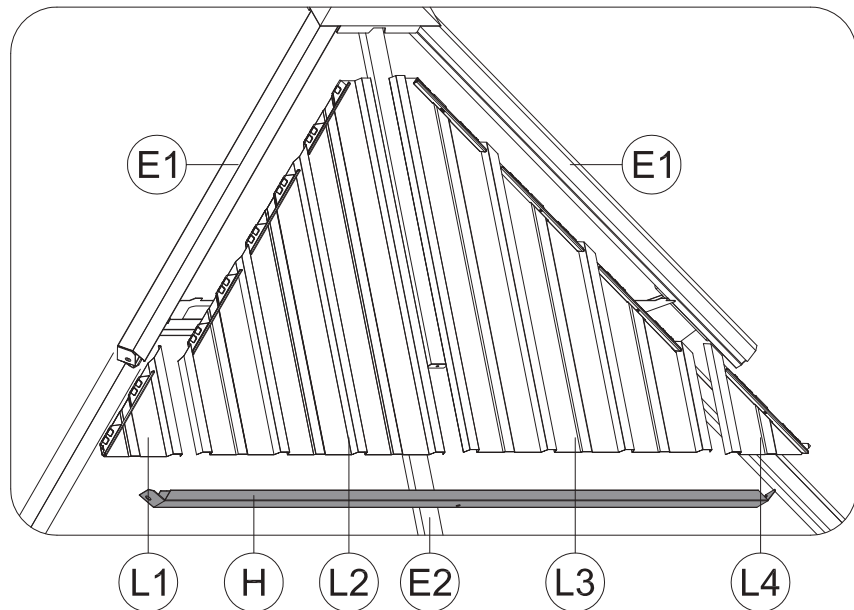

(3) Attach Part #H to Part #E2, securing with Bolt #8.

(4) Repeat the above procedures to assemble the opposite side.



(X3) 4x




(1) 1x




ST6.3x15

(2) 4x

(1) Place Part #H and Part #H2 on Part #E1;
put on Part #X3 and secure with Self-tapping Screw #2








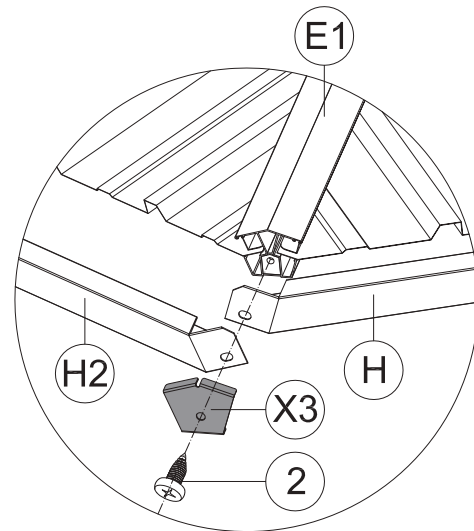


Outside View

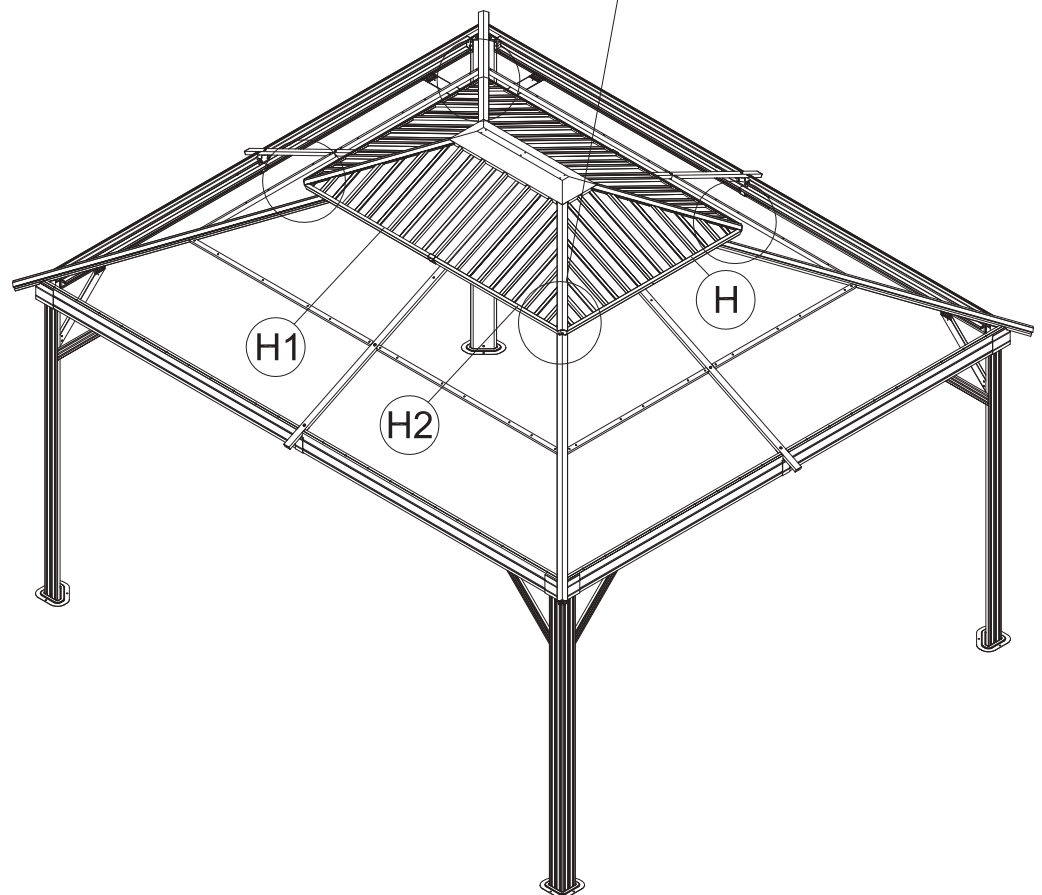


(2) Repeat the above procedures to assemble the other 3 corners.

Cover Part #Z to Roof Panels

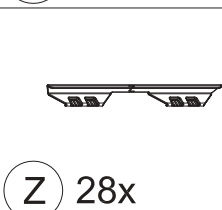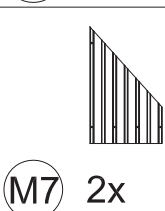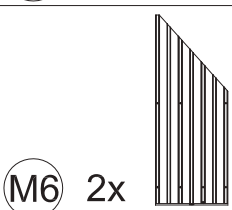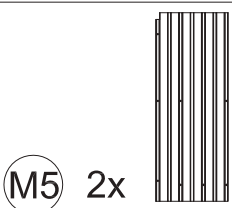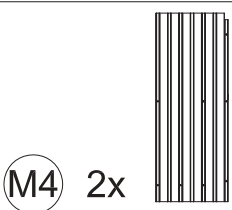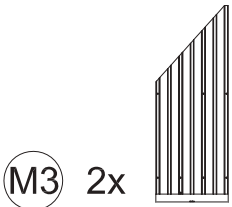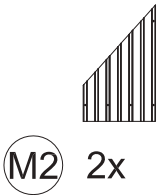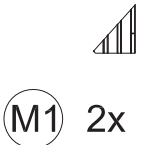

34

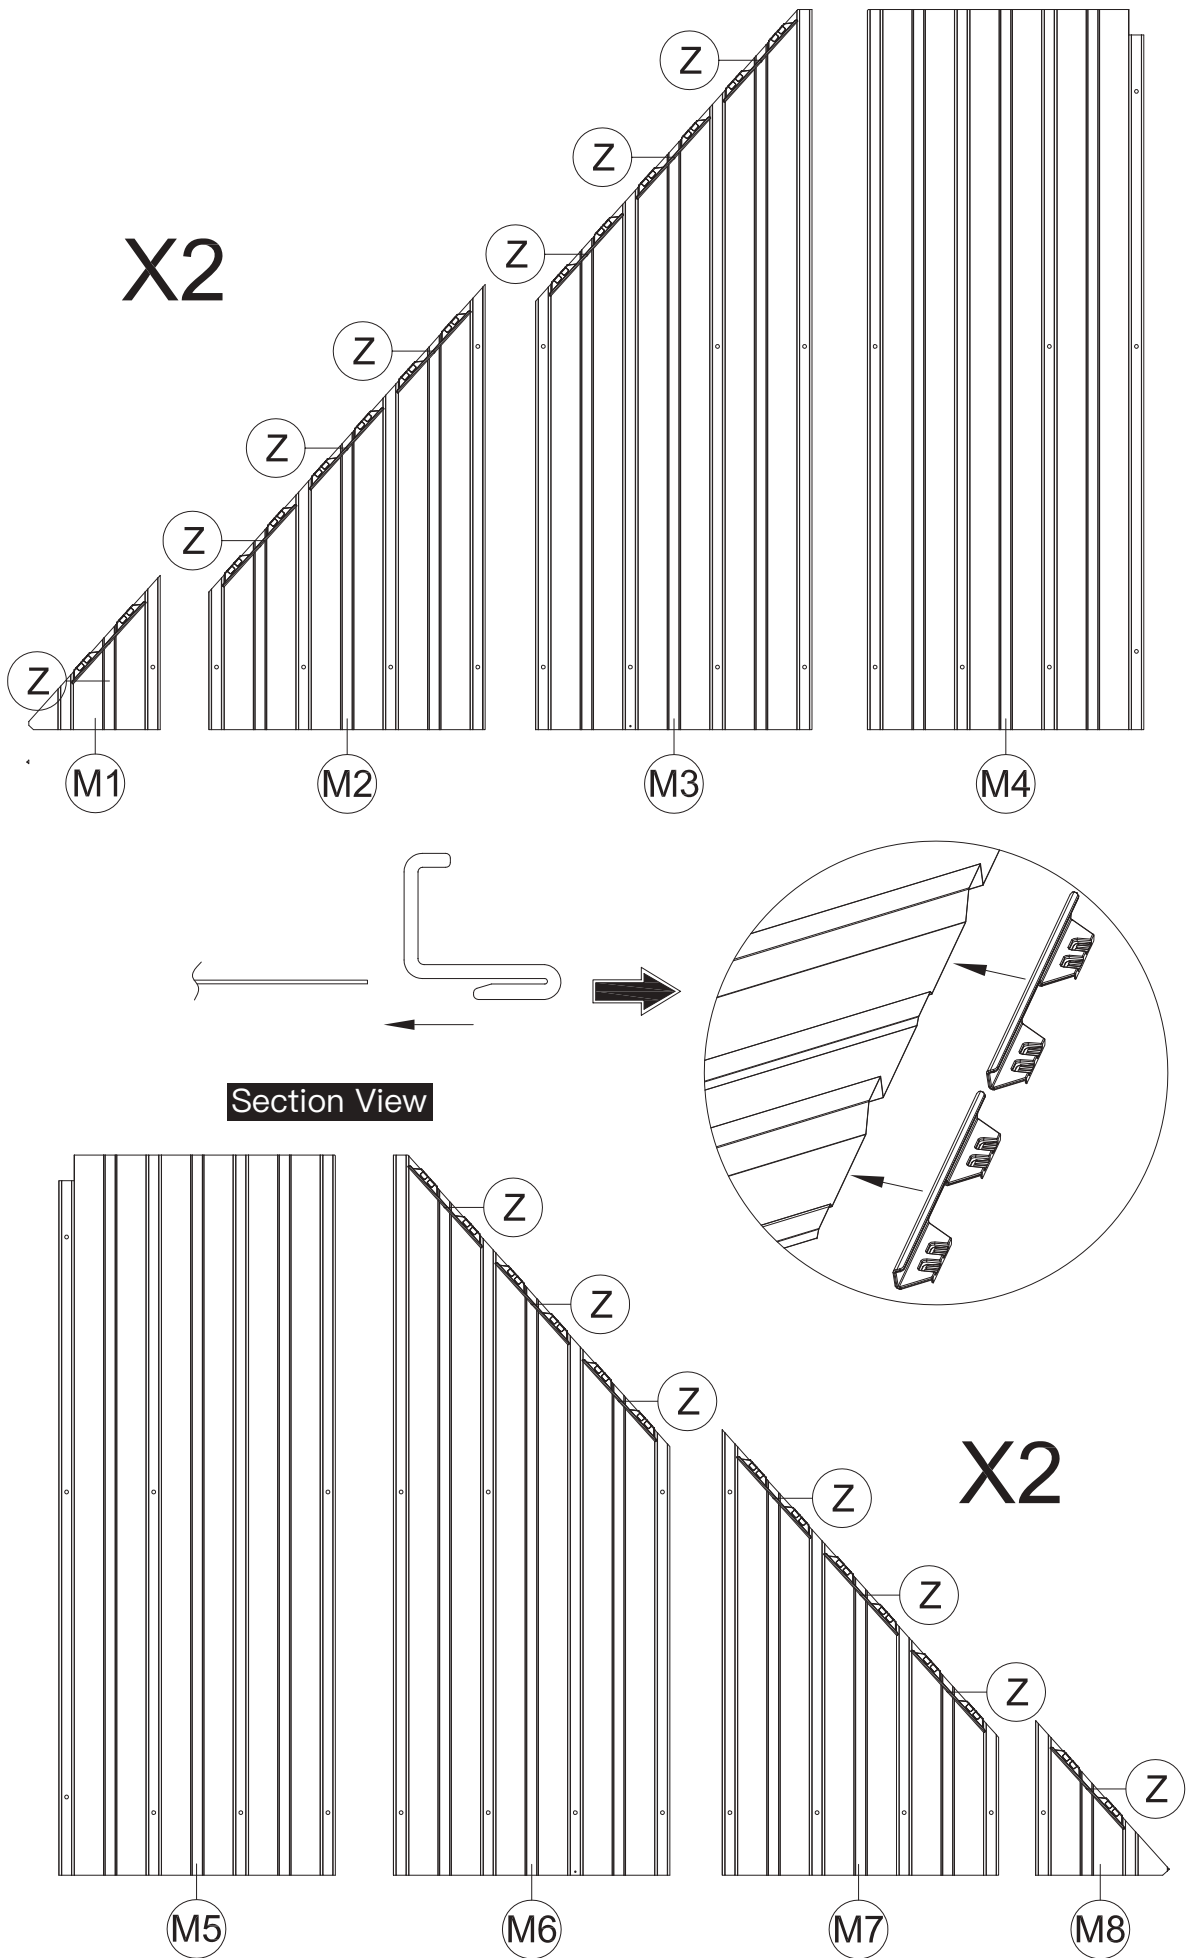

Cover Part #Z to Roof Panels

P1 2x

P2 2x

P3 2x



P4 2x

P5 2x

P6 2x

Z 14x

35

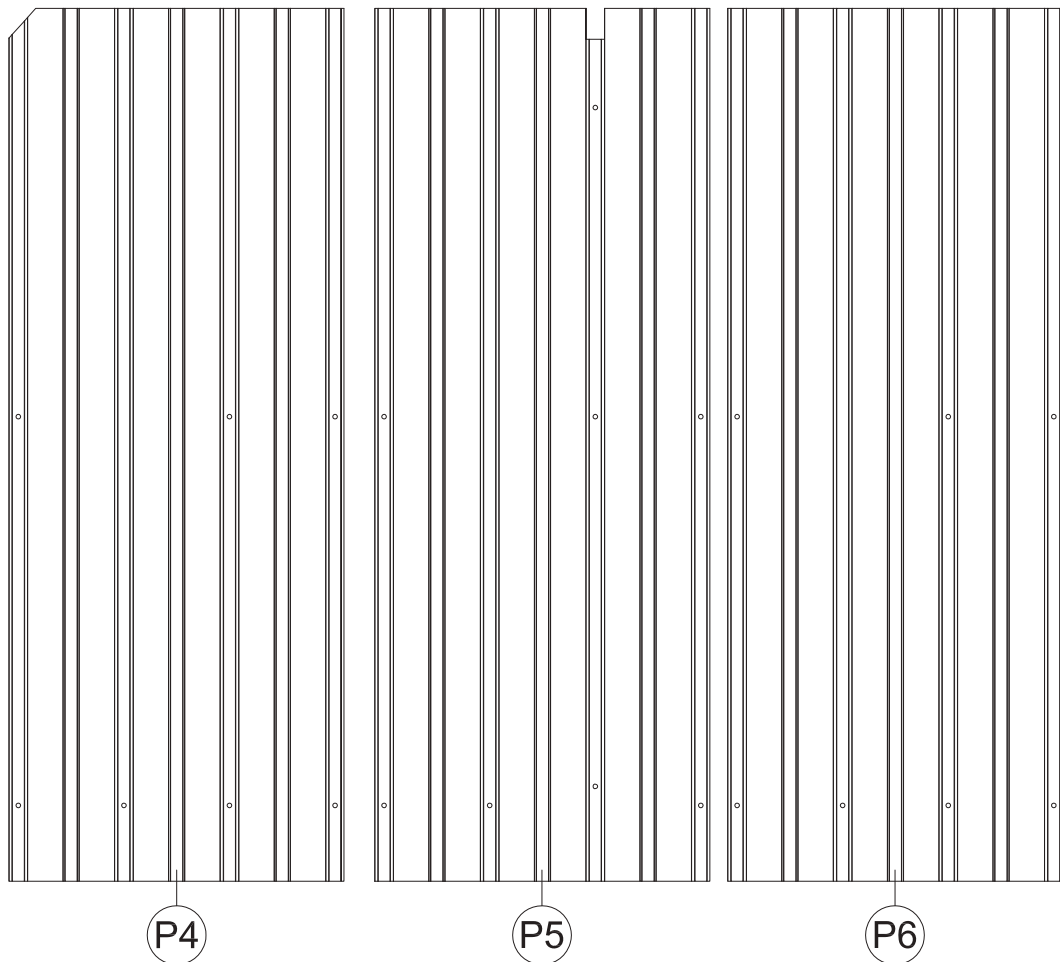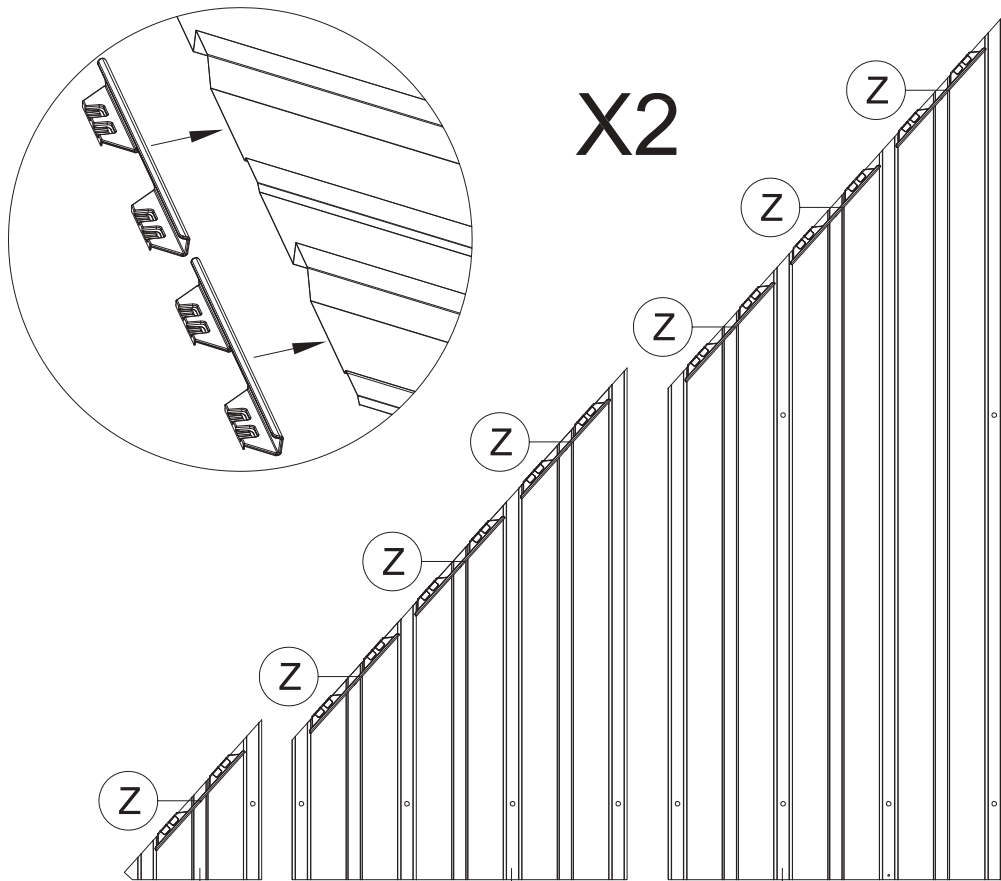


Cover Part #Z to Roof Panels

P7 2x





P8 2x

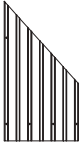


P9 2x







Z 14x

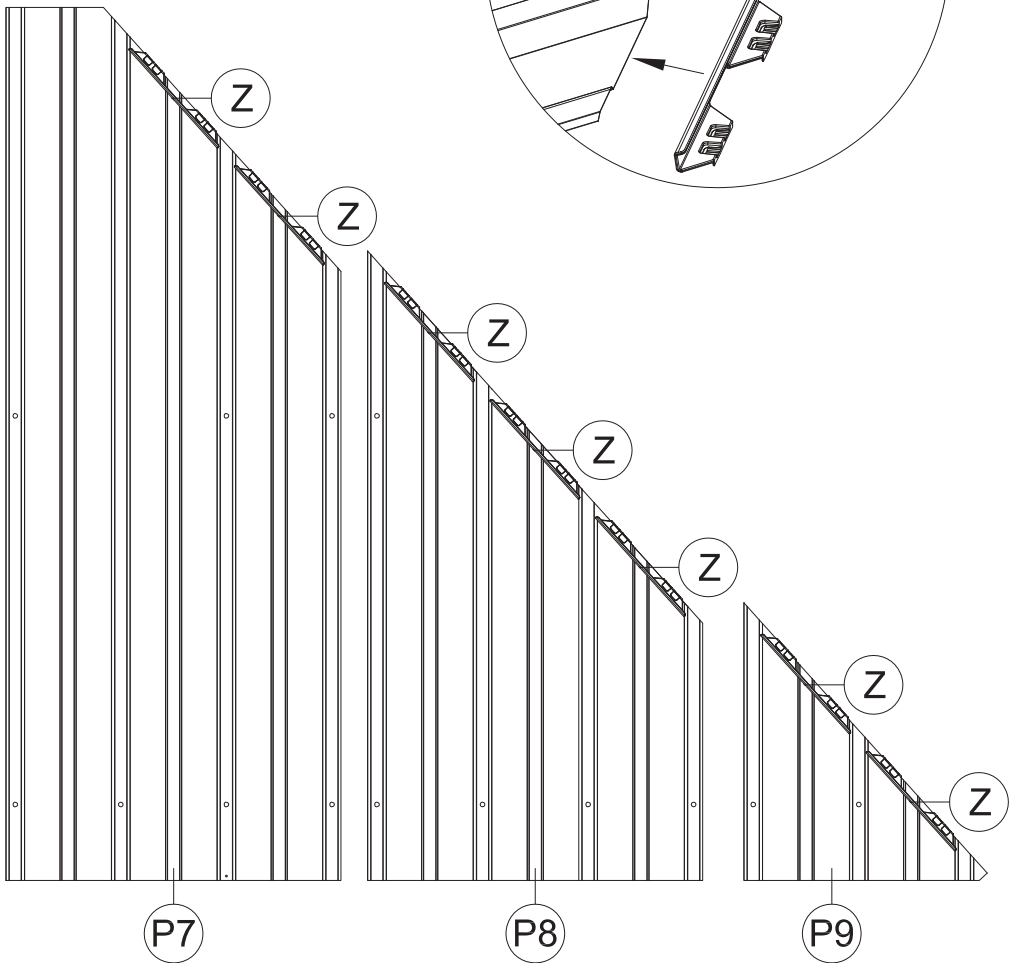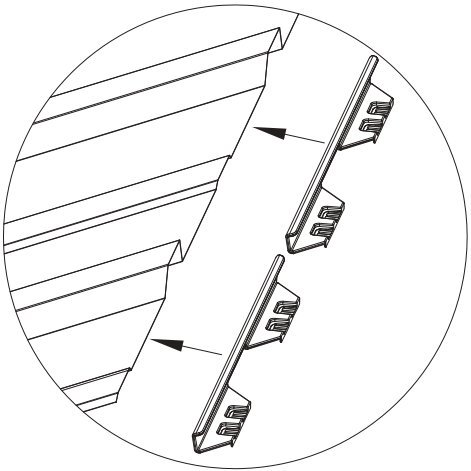


X2

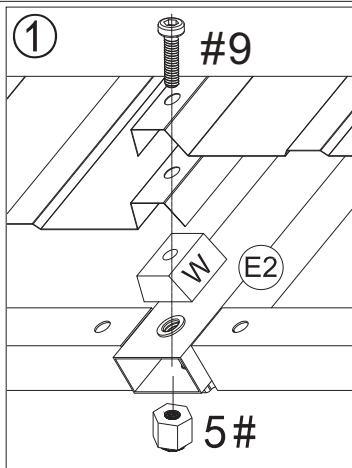


▲ Part #W should be inserted between roof panels and solidifying bar or beams, then secure with bolts and nuts.

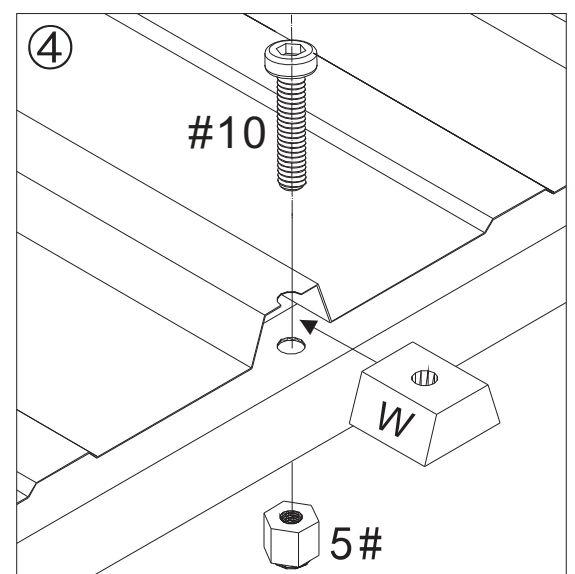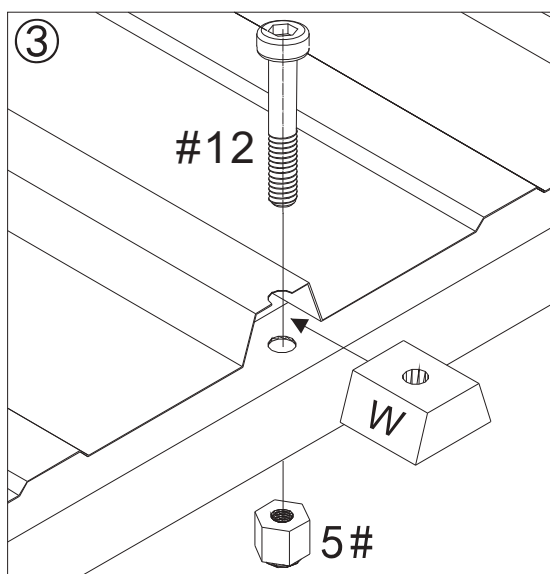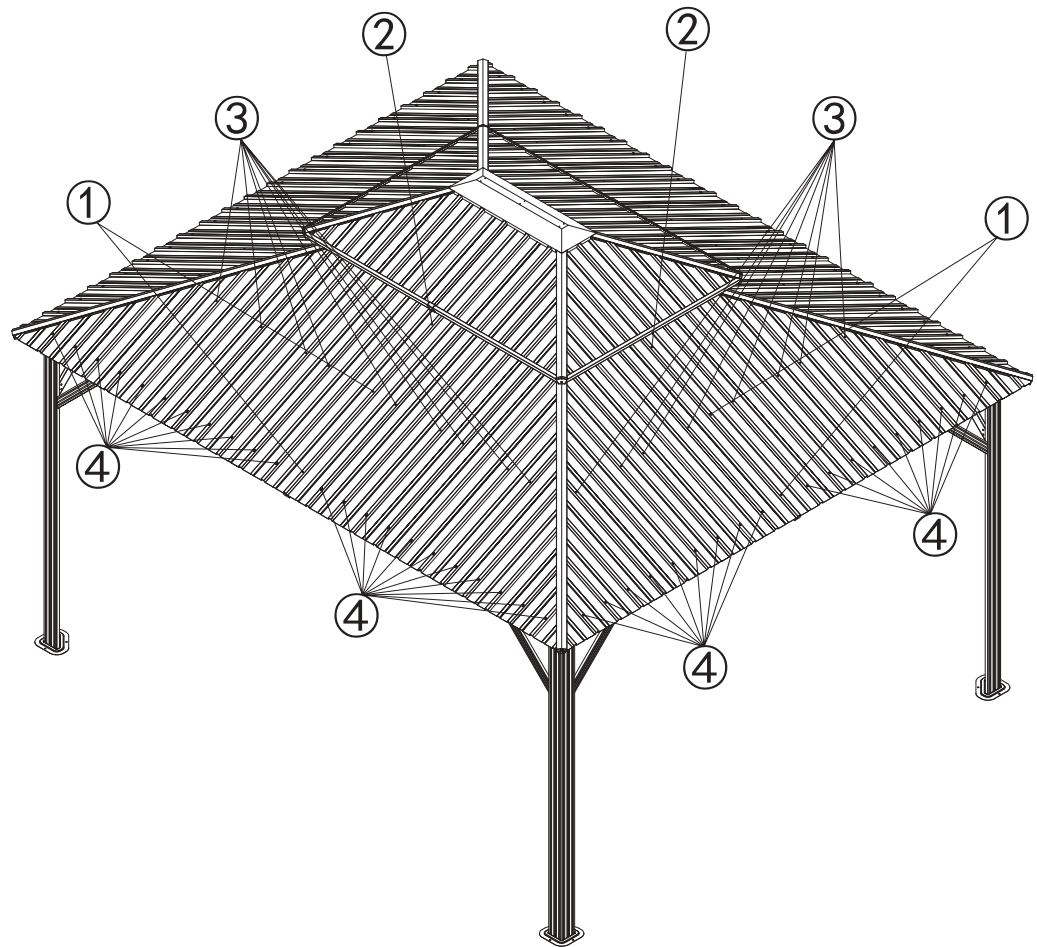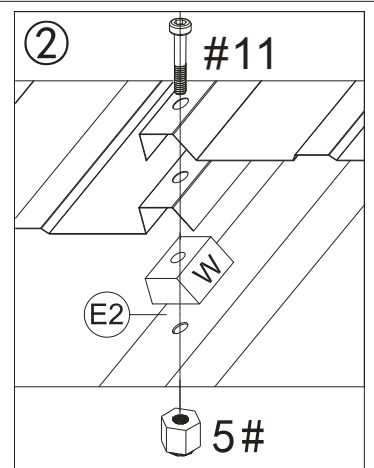

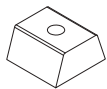

(W) 14x

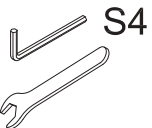

(1) 1x




M6

(5) 14x



M6x28


(10) 12x

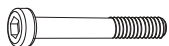

M6x50



(12) 2x

ATTENTION: The bigger roof panel need to cover the smaller one.

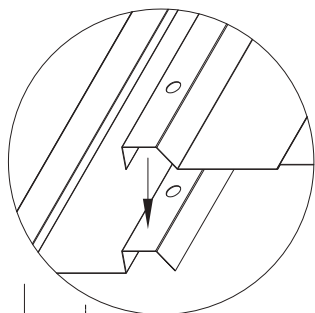


(1) Insert Part #P1,
Part #P2 and Part #P3 into the frame.


(3) Place 1 Part #W between
roof panels and solidifying bars.
Then secure with 1 Bolt #12
and 1 Nut #5.

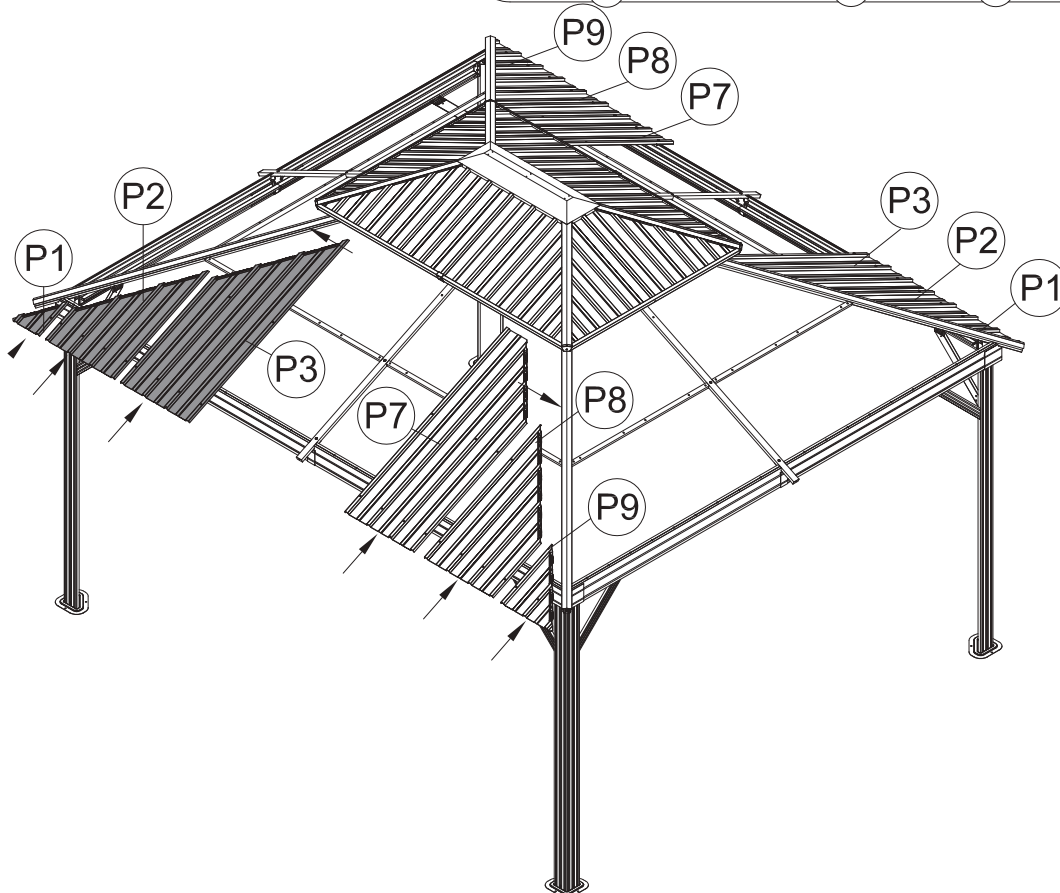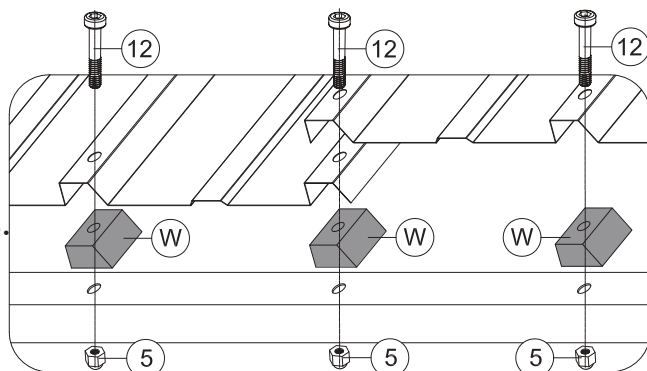


(2) Place 6 Part #W between
roof panels and beams.
Then secure with 6 Bolts #10
and 6 Nuts #5.

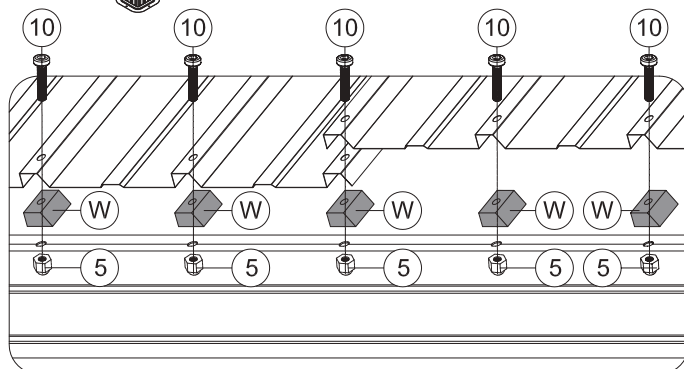

(4) Repeat the above procedures to assemble the opposite side.

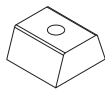

(W) 18x

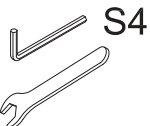

(1) 1x




M6

(5) 18x



M6x28


(10) 14x

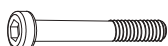

M6x50



(12) 14x

ATTENTION: The bigger roof panel need to cover the smaller one.

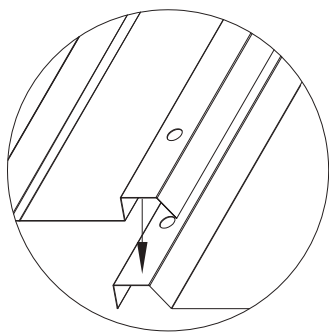


(1) Insert Part #P9,
Part #P8 and Part #P7 into the frame.


(3) Place 2 Part #W between
roof panels and solidifying bars.
Then secure with 2 Bolt #12
and 2 Nut #5.

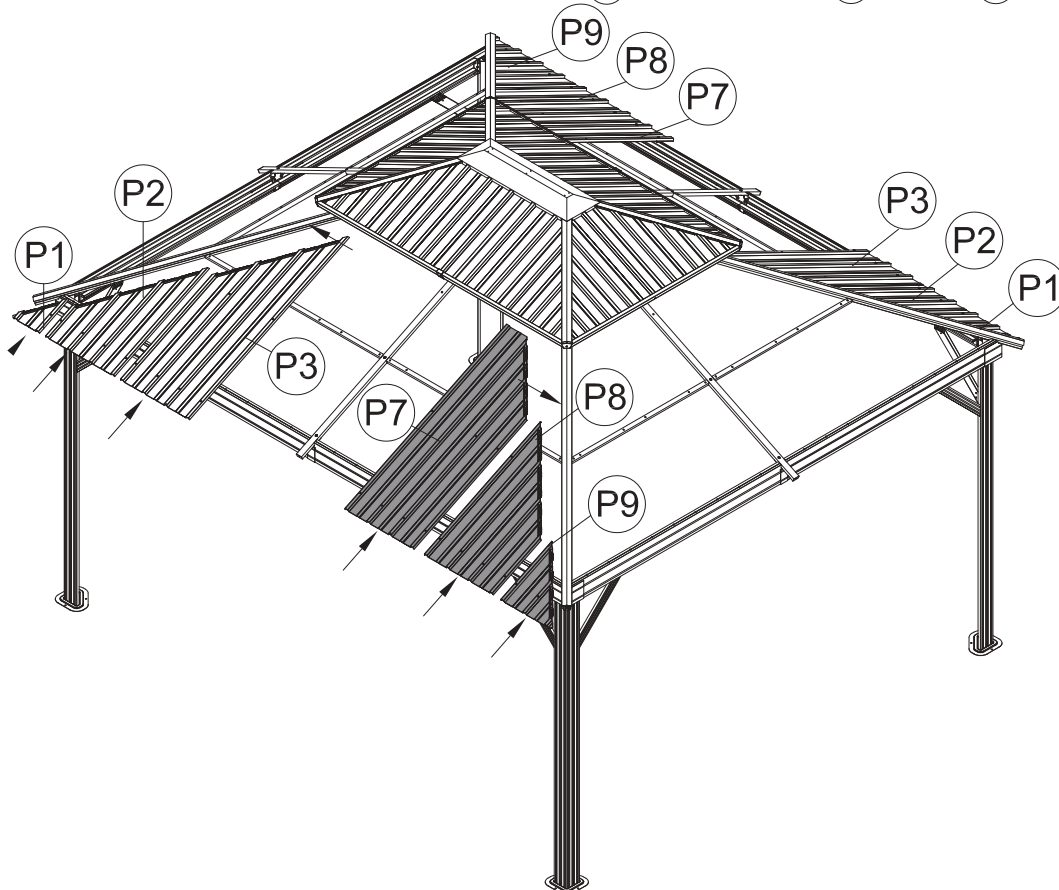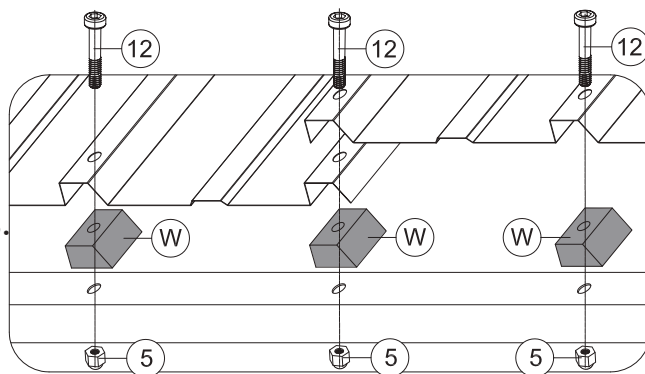


(2) Place 7 Part #W between
roof panels and beams.
Then secure with 7 Bolts #10
and 7 Nuts #5.

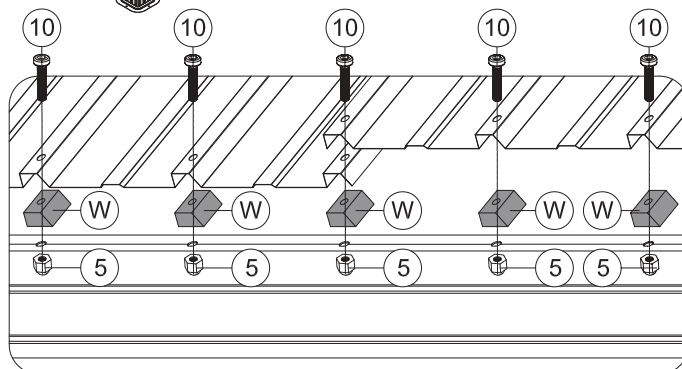

(4) Repeat the above procedures to assemble the opposite side.

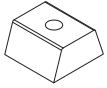

(W) 30x

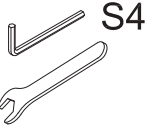

(1) 1x




M6

(5) 30x



M6x28

(10) 18x

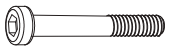



M6x50

(12) 12x


ATTENTION: The bigger roof panel need to cover the smaller one.

(1) Insert Part #P4, Part #P5 and Part #P6 into the frame.


(3) Place 6 Part #W between roof panels and solidifying bars. Then secure with 6 Bolts #12 and 6 Nuts #5.

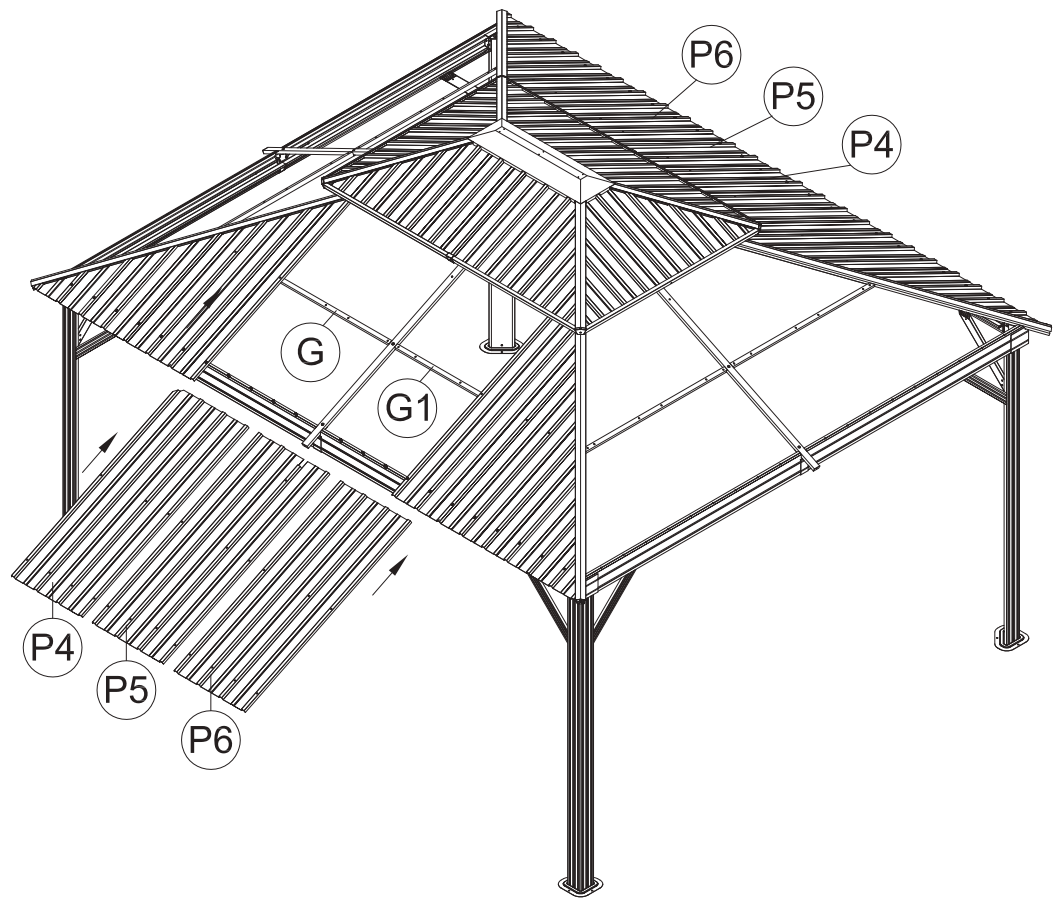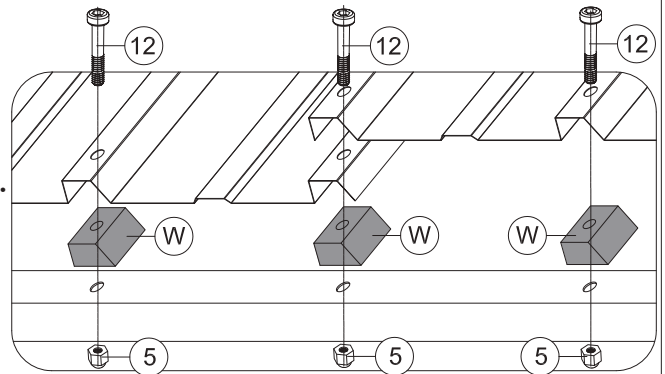


(2) Place 9 Part #W between roof panels and beams. Then secure with 9 Bolts #10 and 9 Nuts #5.

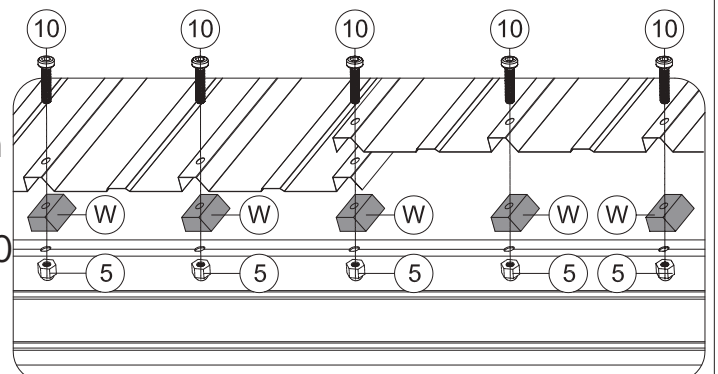


(4) Repeat the above procedures to assemble the opposite side.

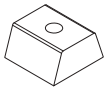

W 4x

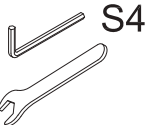


1 1x

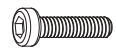


M6x25

9 4x

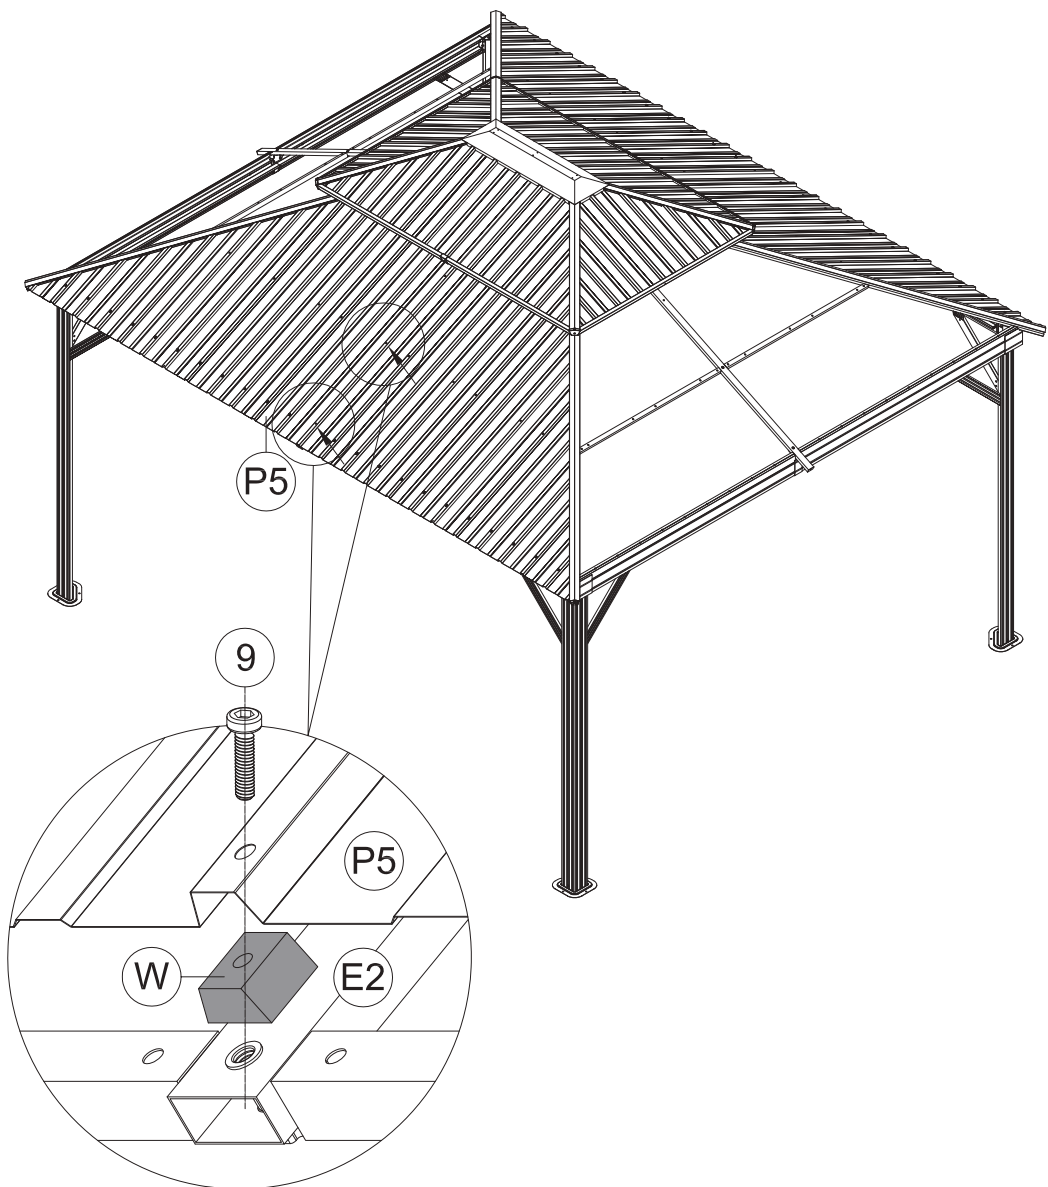

(1) Place 2 Part #W between Part #P5 and Part #E2.
Then secure with 2 Bolts #9 and 2 Nuts #5.

(2) Repeat the above procedures to assemble the opposite side.

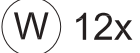


S4

① 1x




5) $12x$

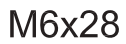


⑩ 12x

(4) Repeat the above procedures to assemble the opposite side.

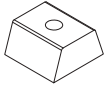

(W) 20x

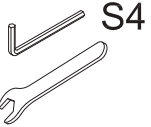

(1) 1x




M6

(5) 20x



M6x28

(10) 12x


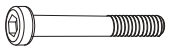


M6x50


(12) 8x

ATTENTION: The bigger roof panel need to cover the smaller one.


(1) Insert Part #M3 into the frame.

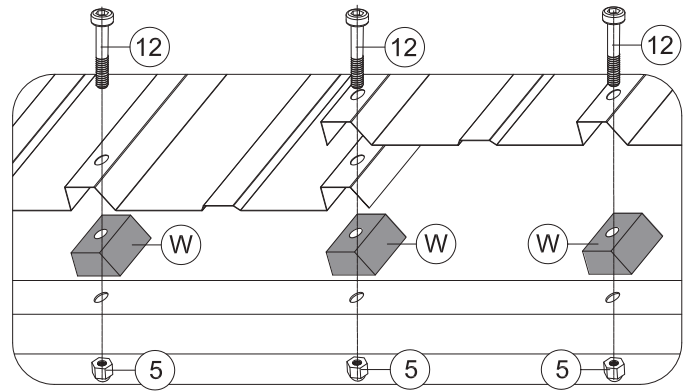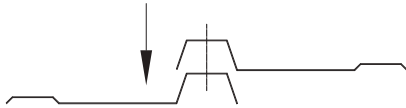


(3) Place 4 Part #W between roof panels and solidifying bars. Then secure with 4 Bolts #12 and 4 Nuts #5.

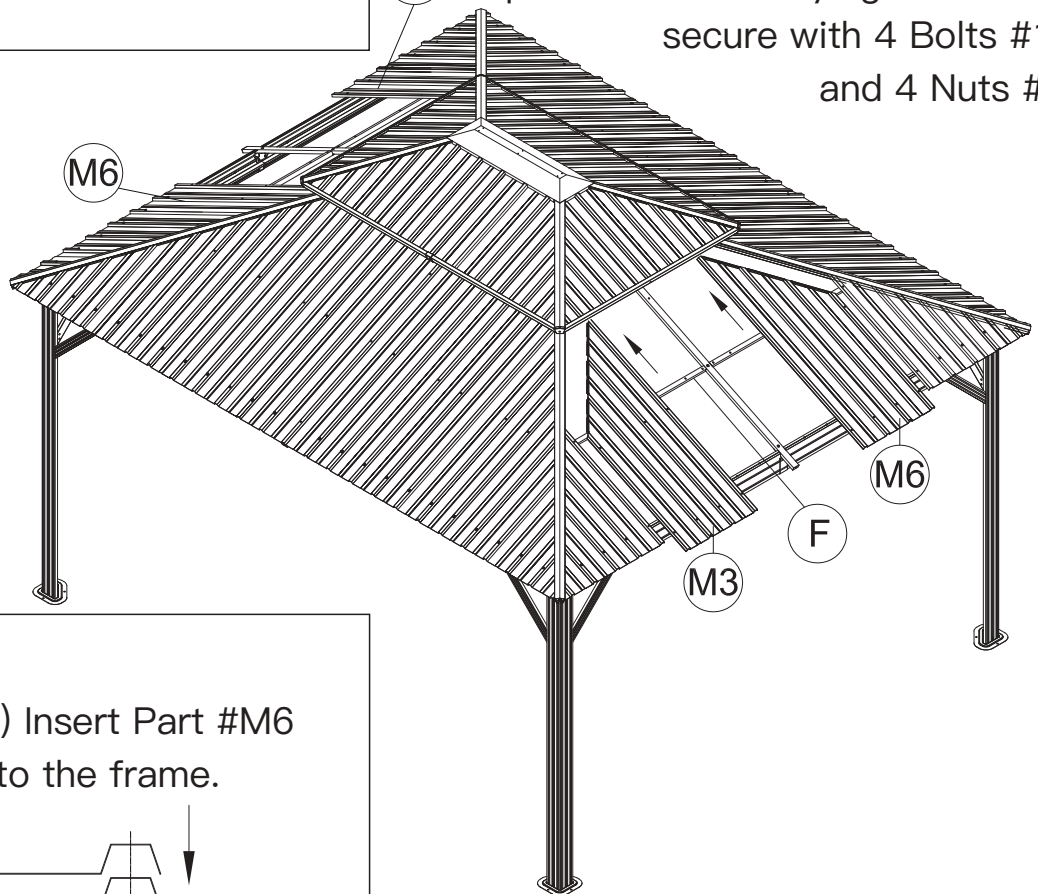


(2) Insert Part #M6 into the frame.

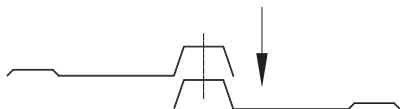

(4) Place 6 Part #W between roof panels and beams. Then secure with 6 Bolts #10 and 6 Nuts #5.

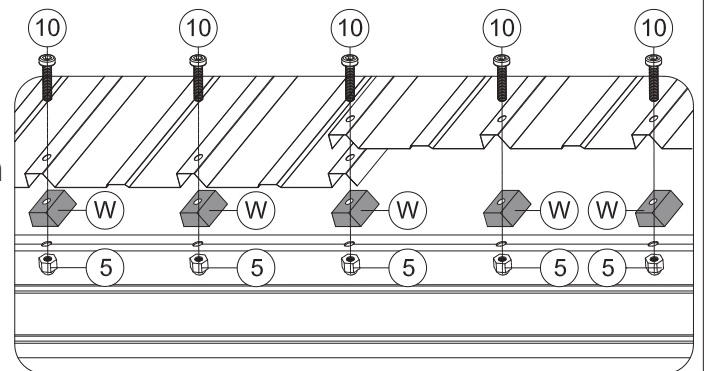

(5) Repeat the above procedures to assemble the opposite side.

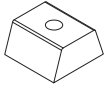

(W) 24x

S4




(1) 1x



M6

(5) 20x

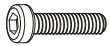


M6x25

(9) 4x



M6x28

(10) 12x

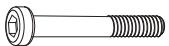


M6x50


(12) 8x

ATTENTION: The bigger roof panel need to cover the smaller one.



(1) Insert Part #M4 into the frame.

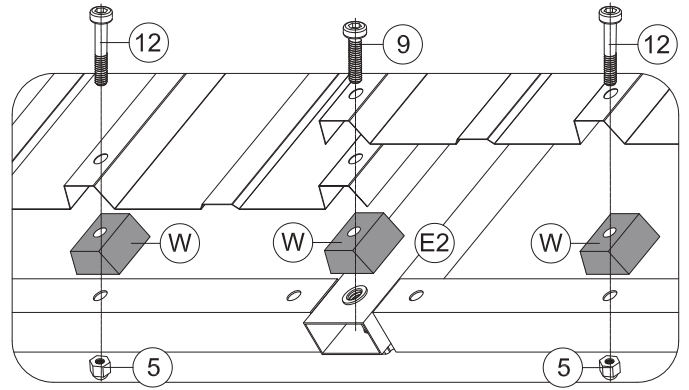

(3) Place 4 Part #W between roof panels and solidifying bars. Then secure with 4 Bolts #12 and 4 Nuts #5; Place 1 Part #W between roof panels and Part #E2. Then secure with 1 Bolt #9 and 1 Nut #5.

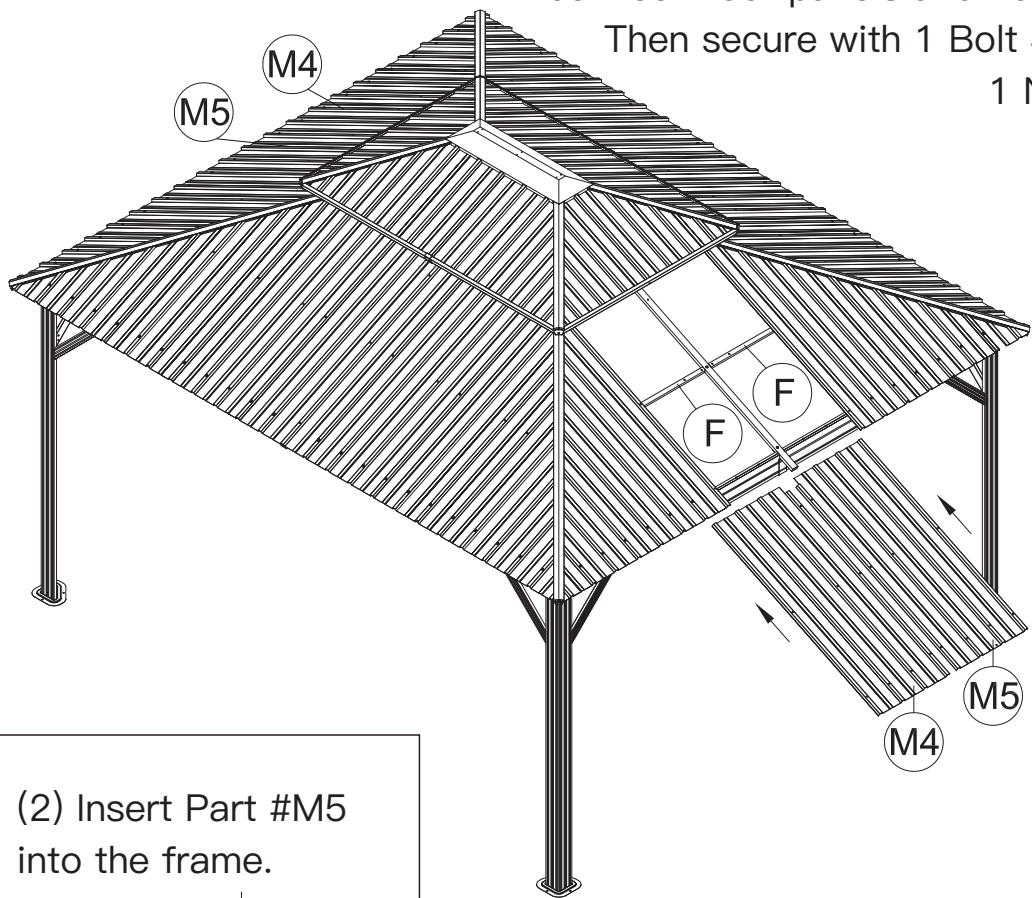


(2) Insert Part #M5 into the frame.

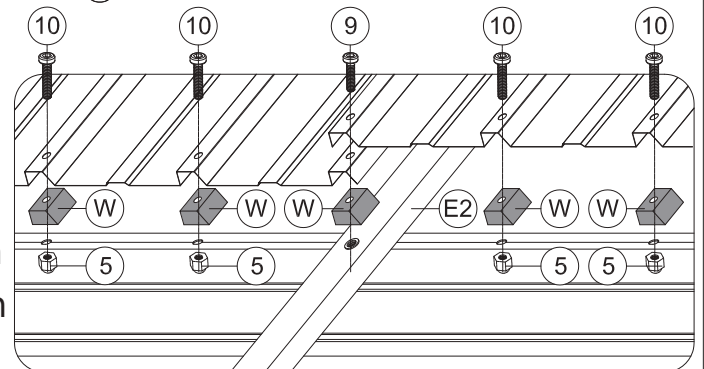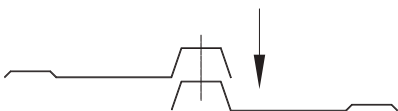


(4) Place 6 Part #W between roof panels and beams. Then secure with 6 Bolts #10 and 6 Nuts #5; Place 1 Part #W between roof panels and Part #E2. Then secure with 1 Bolt #9 and 1 Nut #5.

(5) Repeat the above procedures to assemble the opposite side.

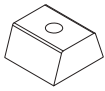

(W) 4x

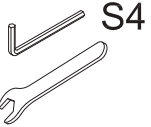


(1) 1x



M6



(5) 4x

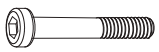


M6x45

(11) 4x


(1) Place Part #W between roof panels and Part #E2.
Then secure with Bolt #11 and Nut #5.

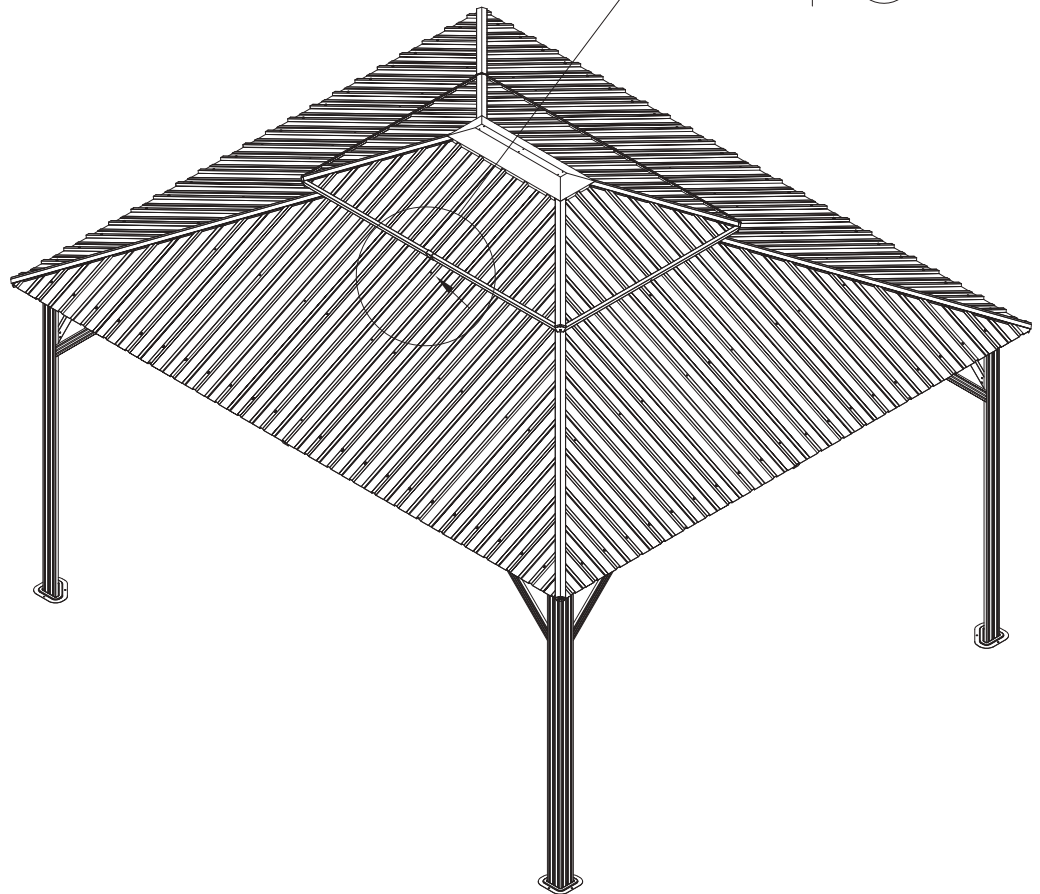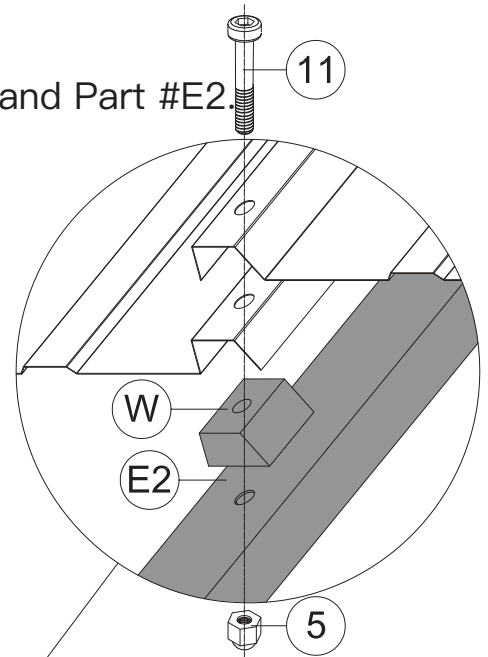

(2) Repeat the above procedures to assemble the other 3 sides.

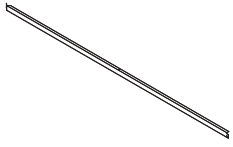

K2 2x

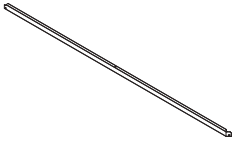

K3 2x



X2 2x





S4

1 1x




M6x16

8 2x

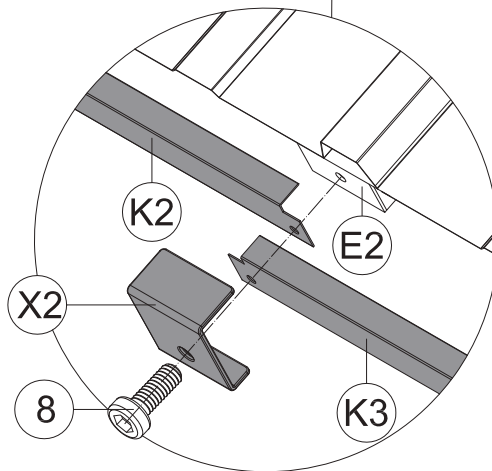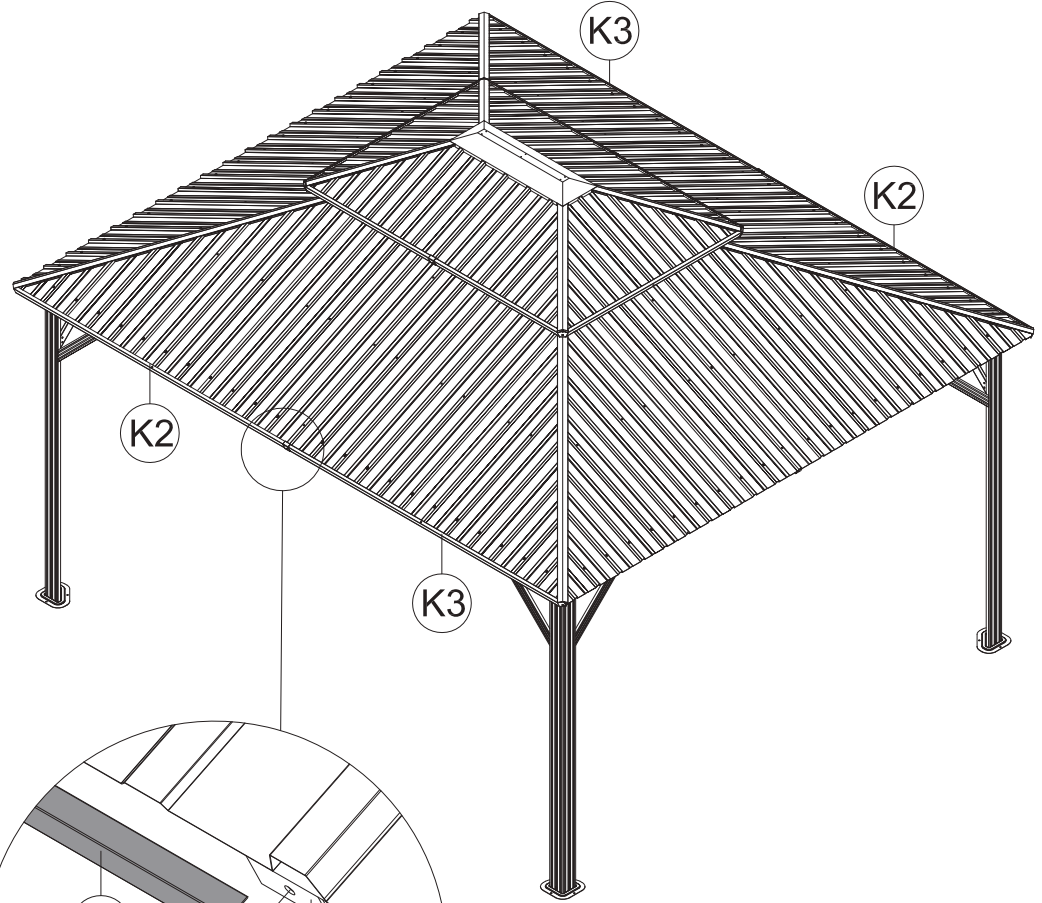


(1) Place Part #K2 and Part #K3 on Part #E2;
Put on Part #X2 and secure with Bolt #8.

(2) Repeat the above procedures to assemble the opposite side.

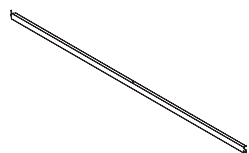

(K) 2x

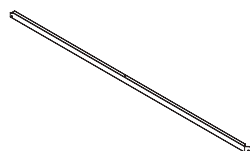

(K1) 2x



(X2) 2x





(1) 1x



M6x16

(8) 2x

(1) Place Part #K and Part #K1 on Part #E2;
Put on Part #X2 and secure with Bolt #8.

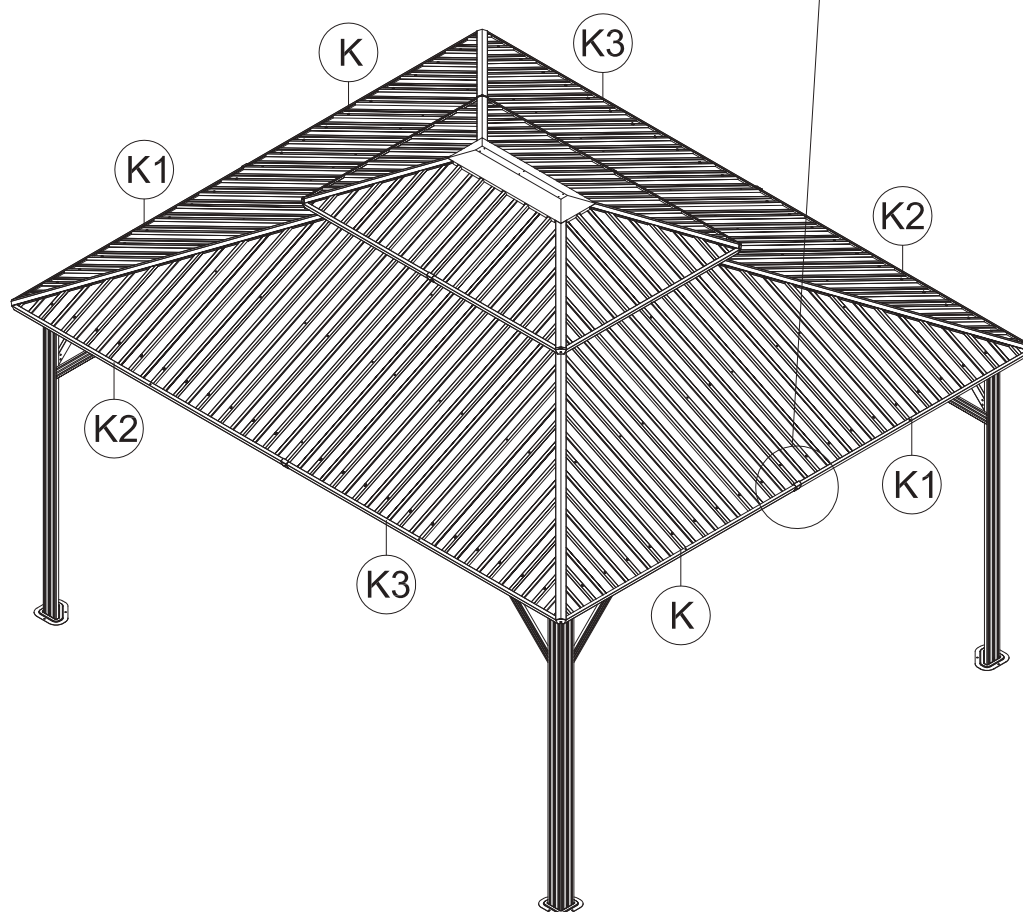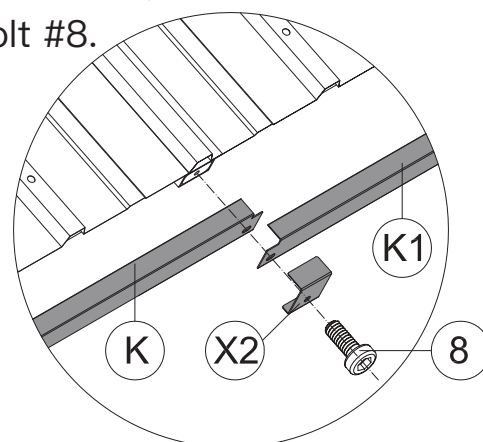

(2) Repeat the above procedures to assemble the opposite side.



X3 4x




1 1x



ST6.3x15

2 4x

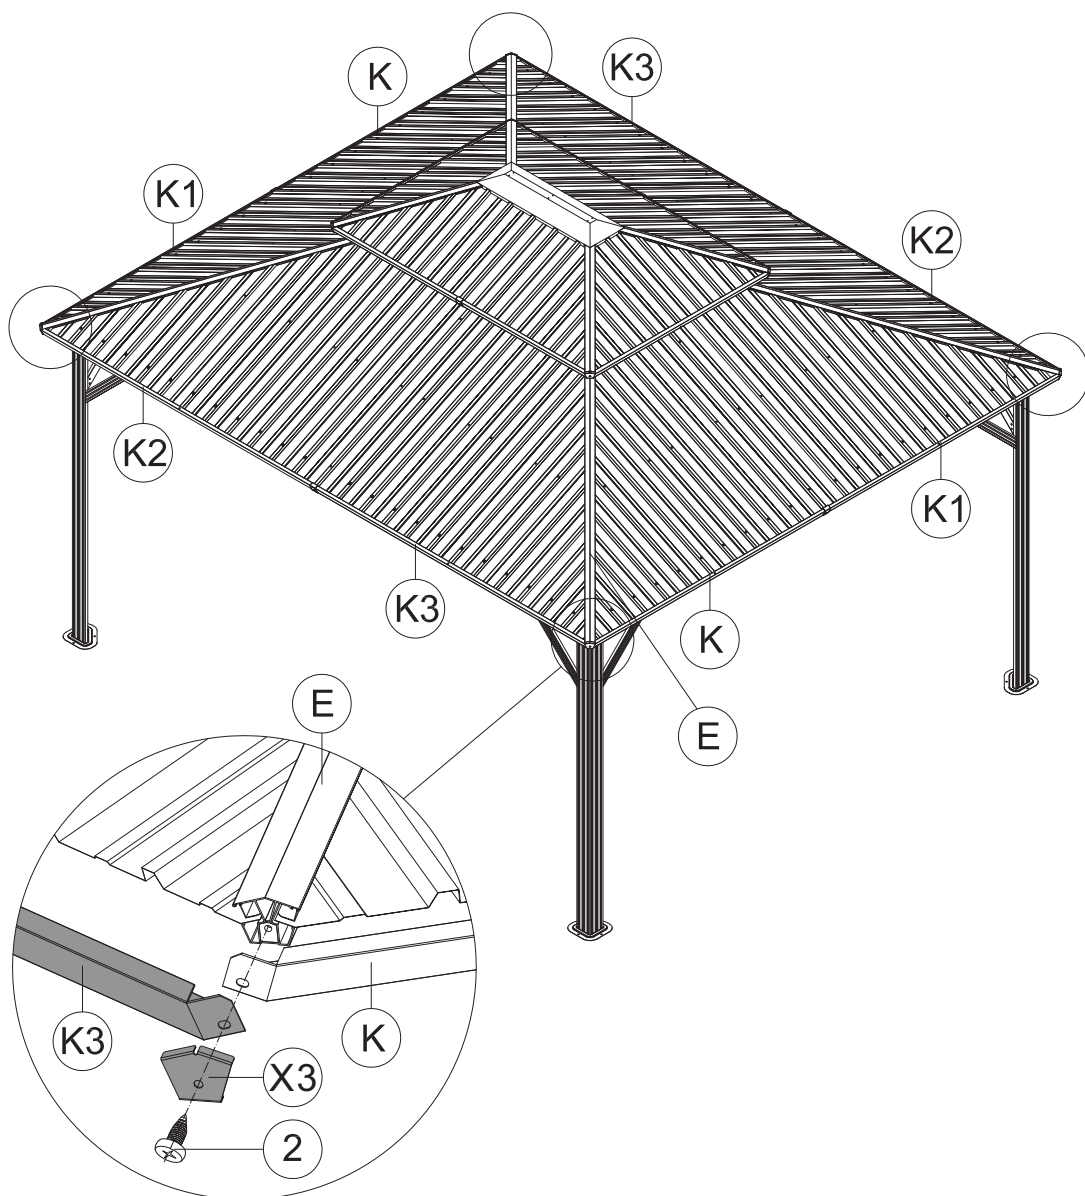


(1) Place Part #K3 and Part #K on Part #E;
Put on Part #X3 and secure with Self-tapping Screw #2.

(2) Repeat the above procedures to assemble the other 3 corners.



ST5x16


3 8x

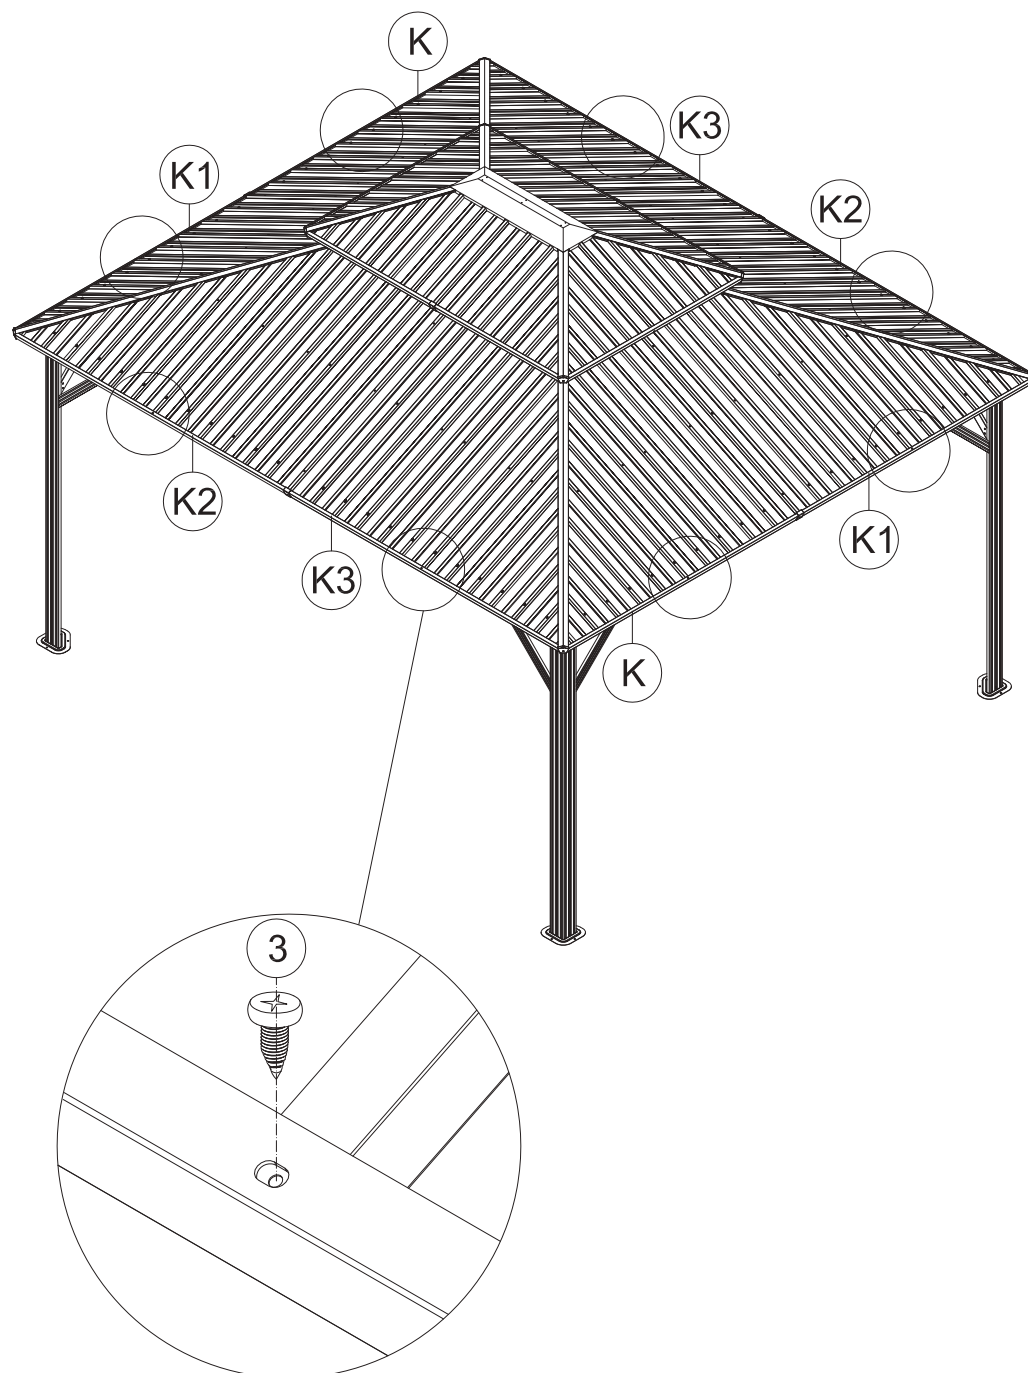


(1) Attach roof panels to finishing bars with 2 Self-tapping Screws #3.


(2) Repeat the above procedures to assemble the other 3 sides.

How to Put the 92 Hooks into the Double-track

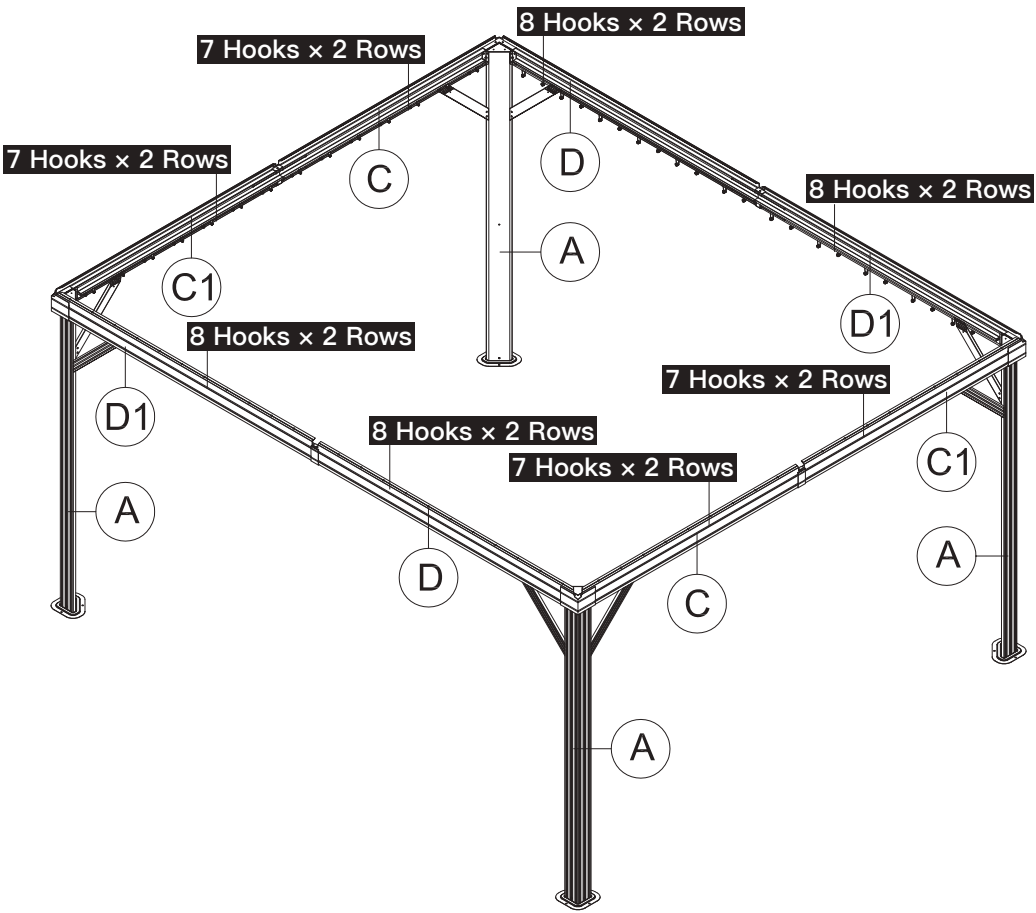

Double-track

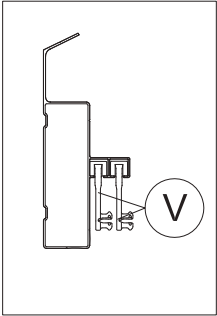

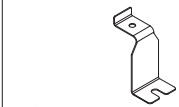

T1 2x




V 56x





1 1x


(1) Place 7 hooks on each slot of the Sidewall Track(C1&C).

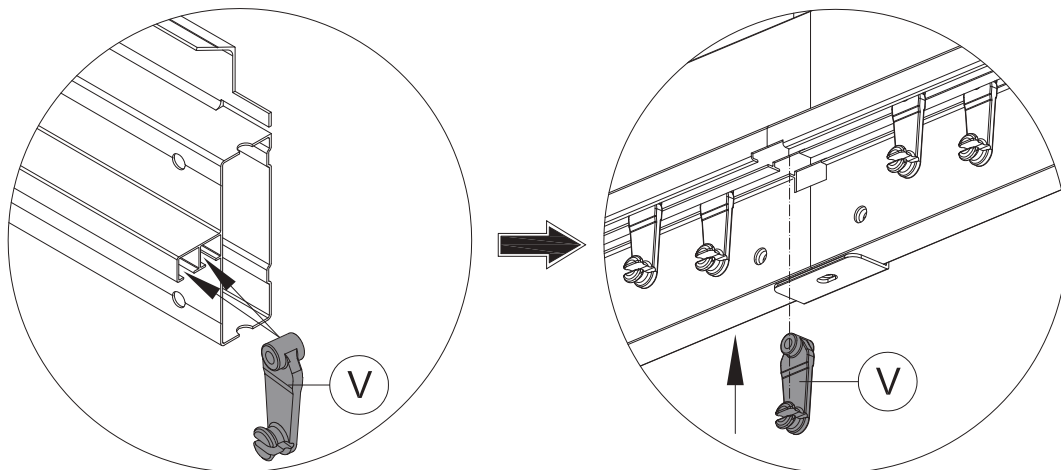

(2) Install Part #T1 at the joint of Part C&C1 with Bolt #8.

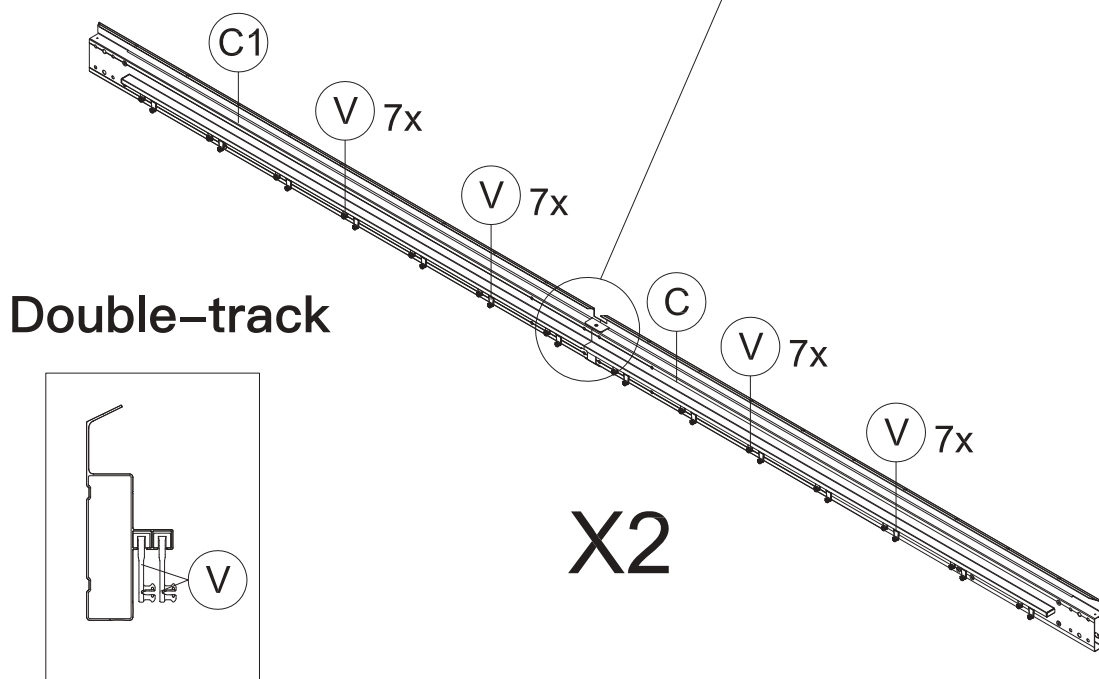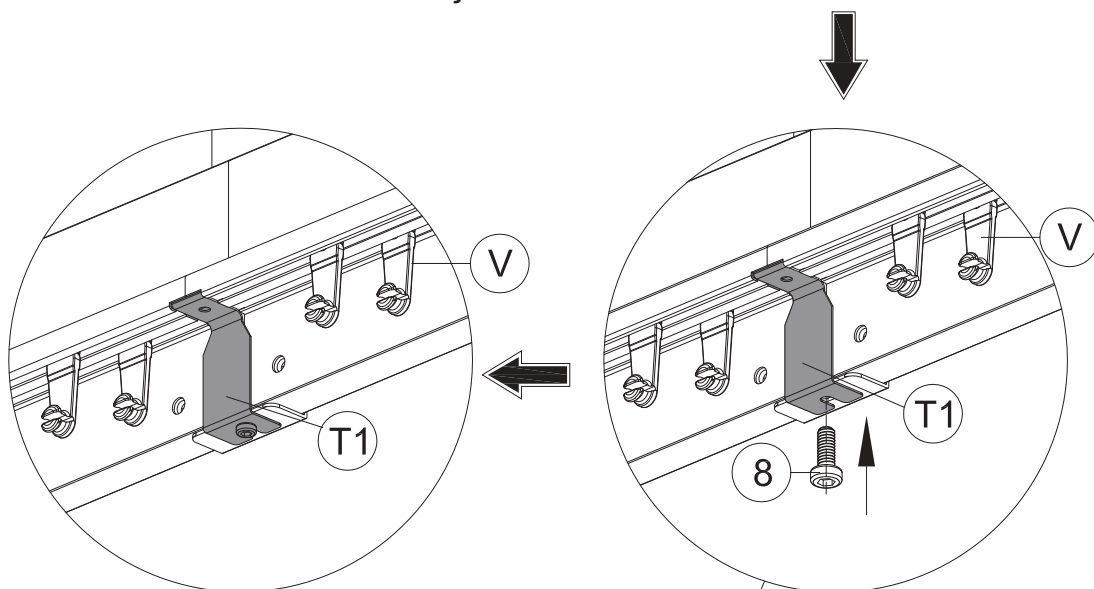

(3) Repeat the above procedures to assemble the opposite side.

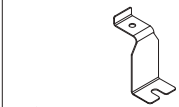

T1 2x





V 64x






1 1x


(1) Place 8 hooks on each slot of the Sidewall Track(D&D1&D2).

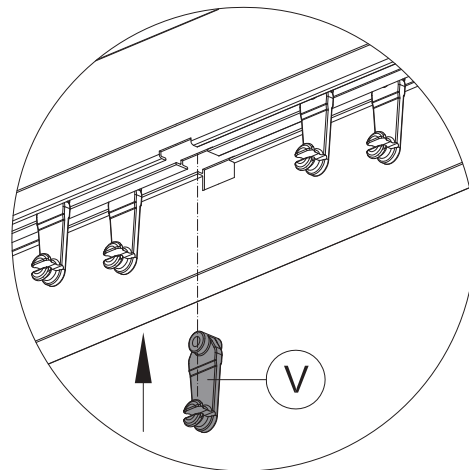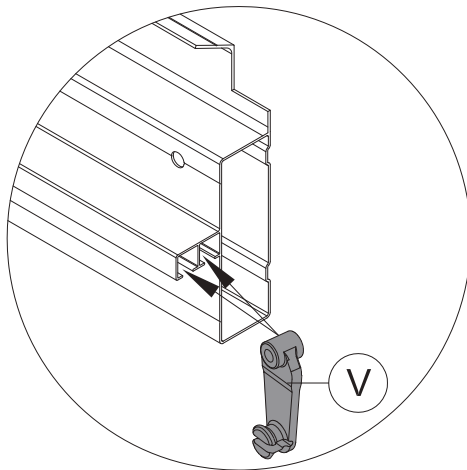


(2) Install Part #T1 at the middle of Part #D2 with Bolt #8.

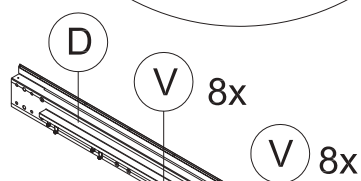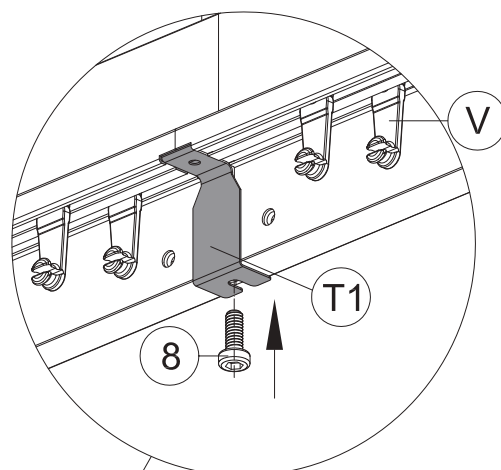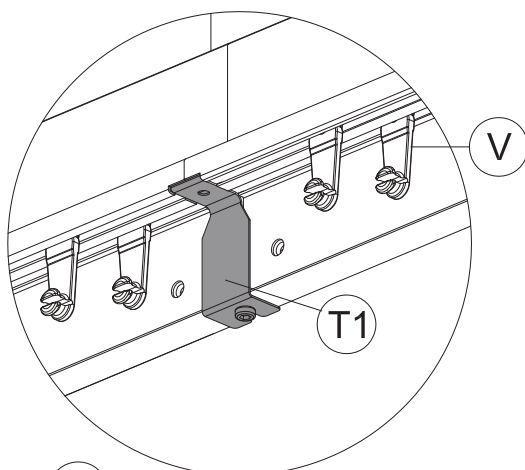


Double-track

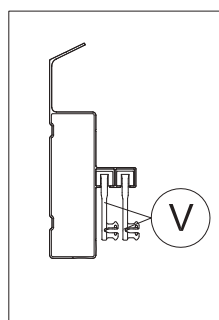

X2

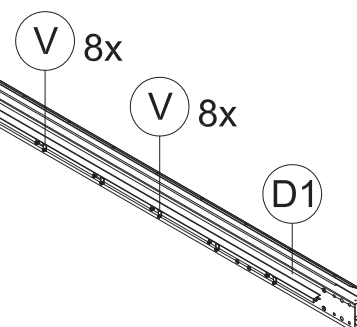


(3) Repeat the above procedures to assemble the opposite side.

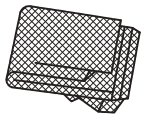


Y1 4x

Hang up Mosquito Sidewalls to **Inside Track**

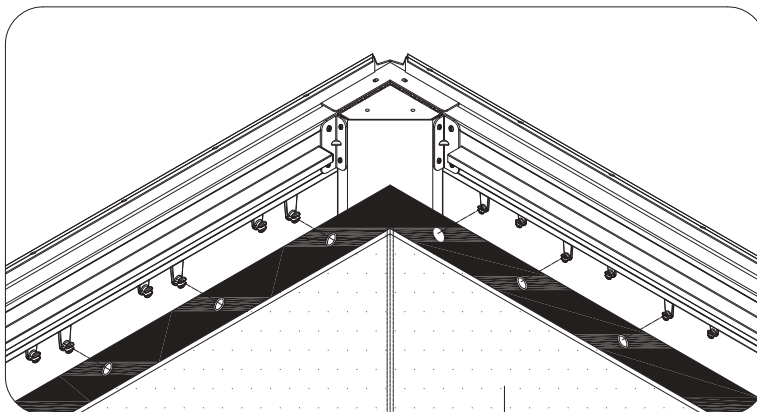


Y1

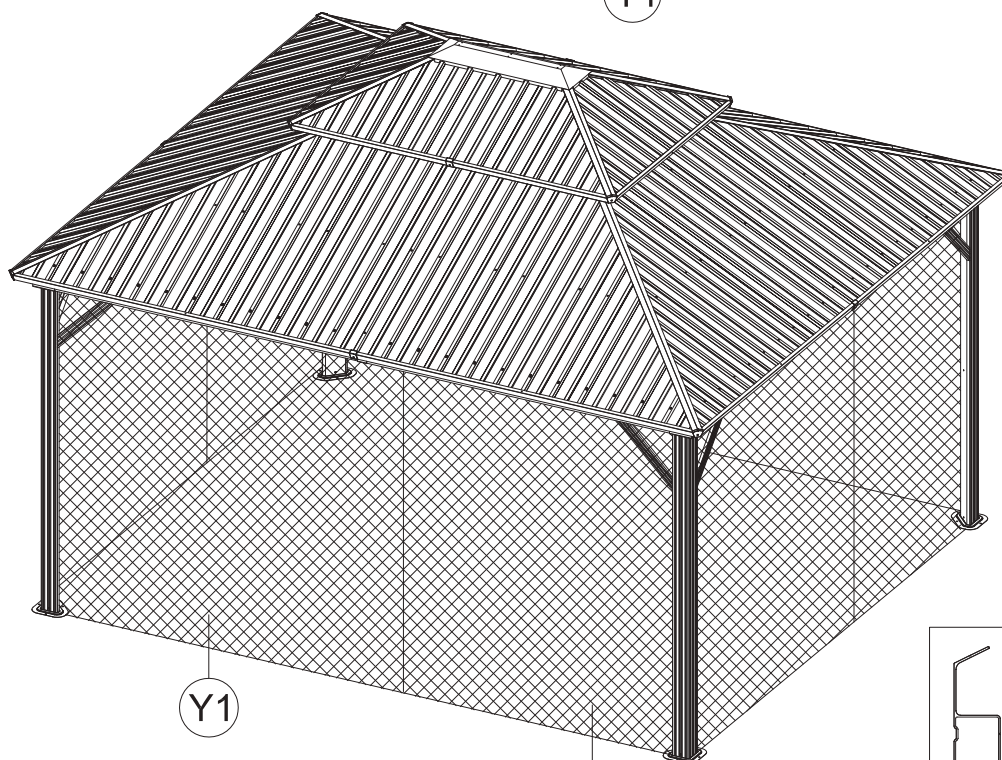

Y1


Y1

Y1

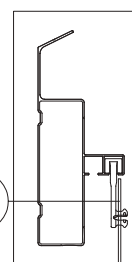


Y1


Y1

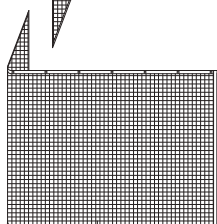


Y1

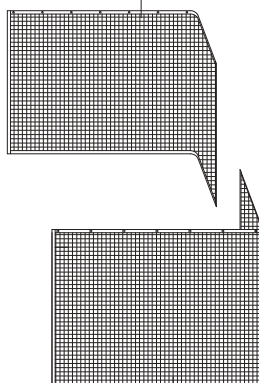

Y1

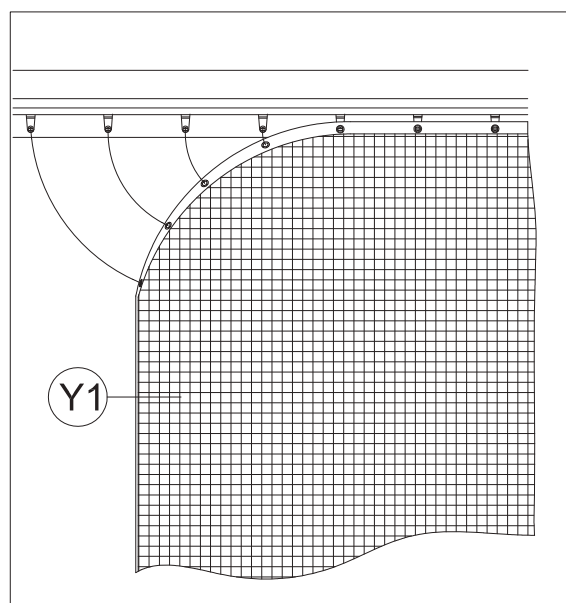

Y1

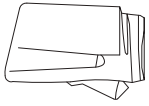

Y 4x

Hang up Solid Sidewalls to Outside Track

