

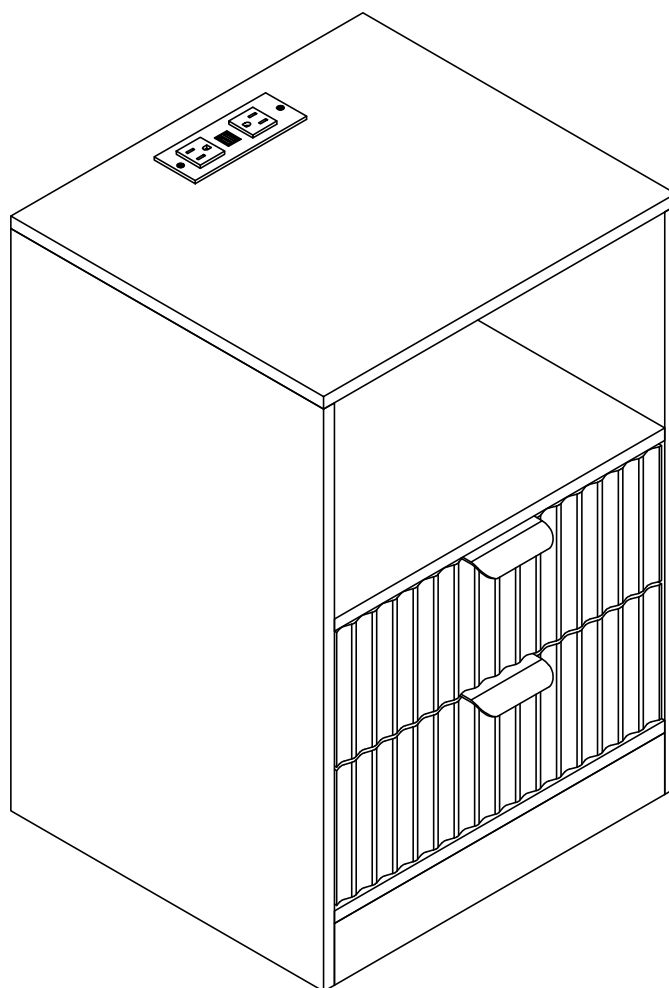
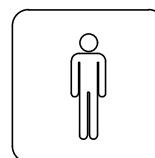


# HLG141


Version:1.0

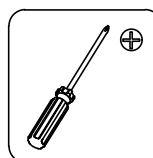


x2

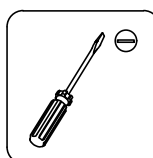


**EN\_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

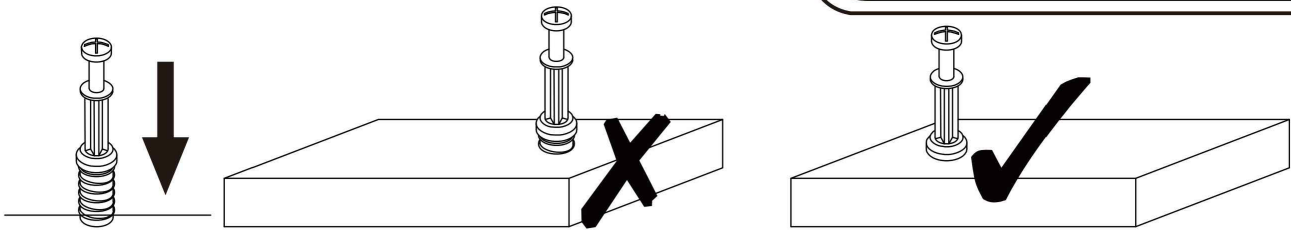


**EN\_QUICKFIT:** Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

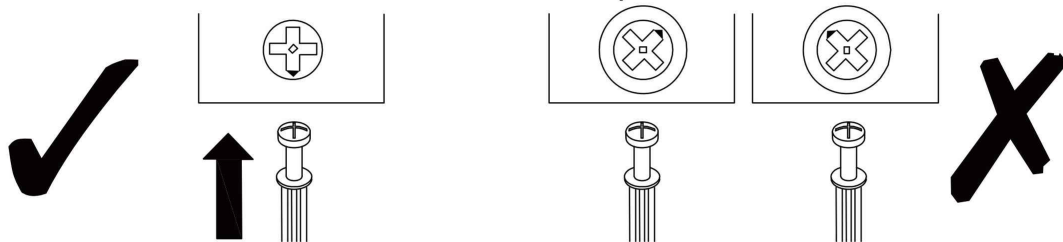









**EN\_CAM LOCK:** When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.




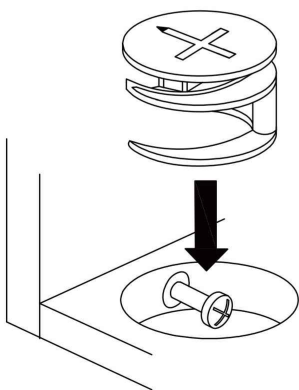




**EN\_Quickfit** head should be in the centre of the cam lock when the two panels are joined.  
Cam lock should be inserted before quickfit.

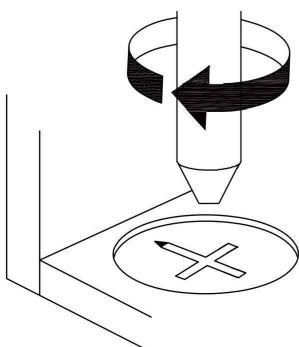


**EN\_Turn** cam lock clockwise to tighten.

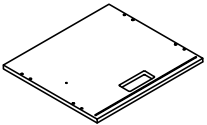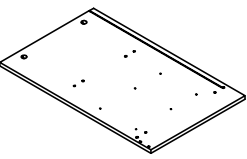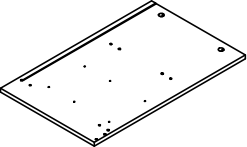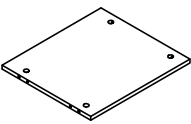

| NO. | PARTS                                                                               | QTY | SPARE |
|-----|-------------------------------------------------------------------------------------|-----|-------|
| 1   |    | x2  |       |
| 2   |    | x2  |       |
| 3   |    | x2  |       |
| 4   |    | x2  |       |
| 5   |  | x2  |       |
| 6   |  | x2  |       |
| 7   |  | x2  |       |
| 8   |  | x2  |       |
| 9   |  | x4  |       |
| 10  |  | x4  |       |

| NO. | PARTS                                                                                                       | QTY | SPARE |
|-----|-------------------------------------------------------------------------------------------------------------|-----|-------|
| 11  |                          | x4  |       |
| 12  |                          | x4  |       |
| 13  |                           | x4  |       |
| 14  |                          | x4  |       |
|     | <br><b>Hardware Kit</b> | x1  |       |

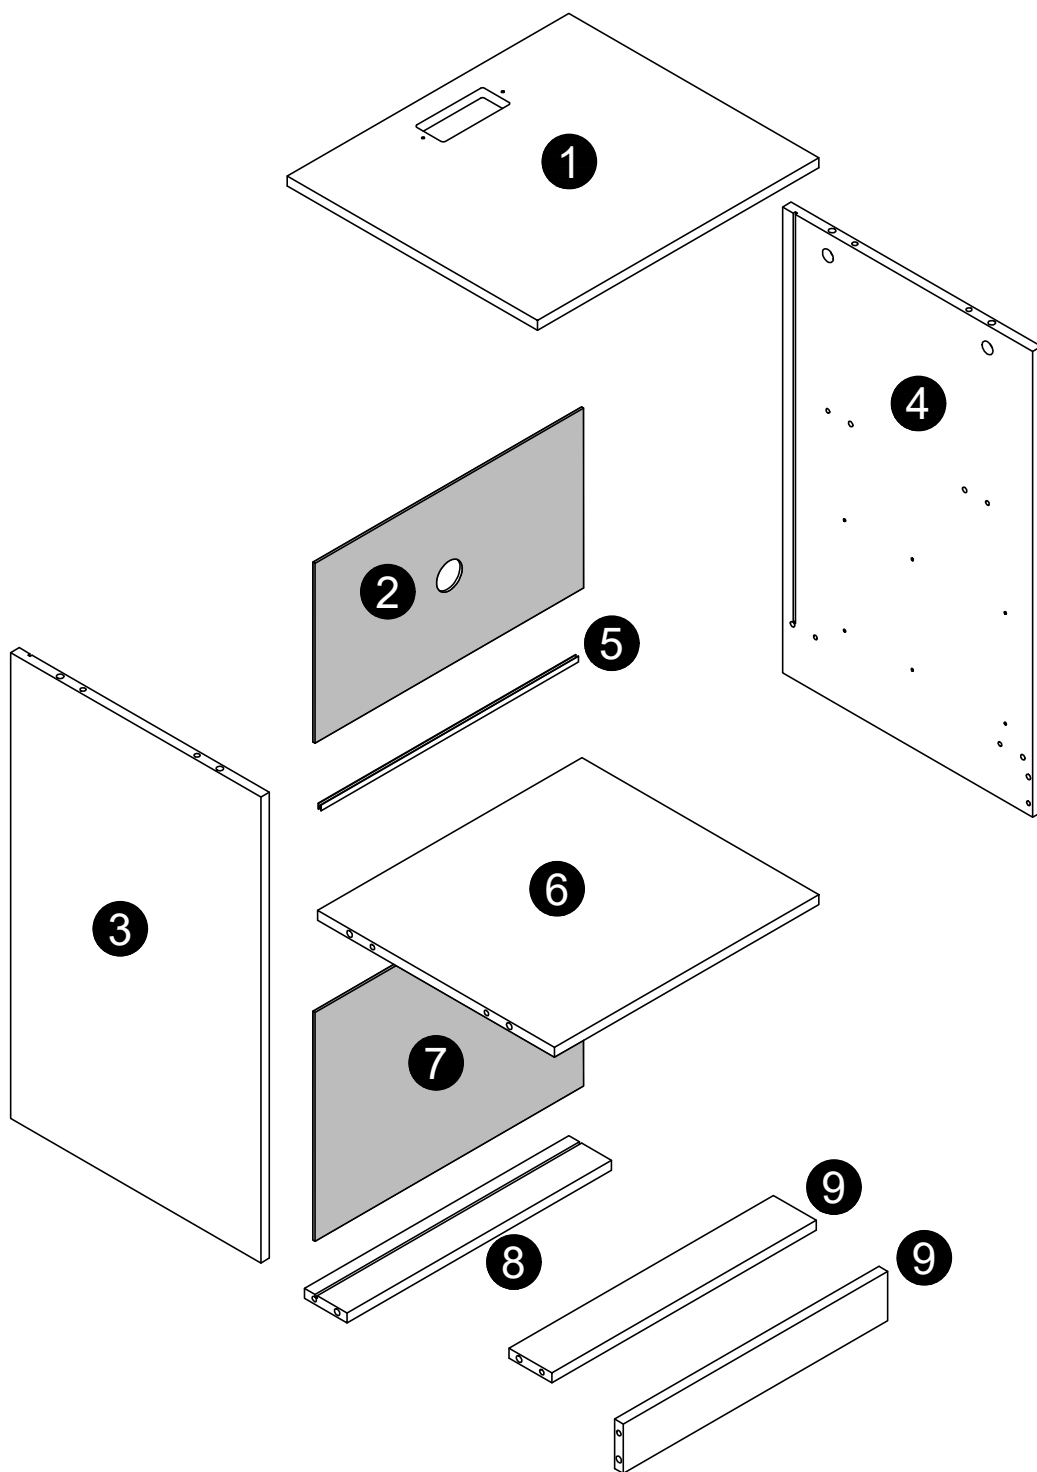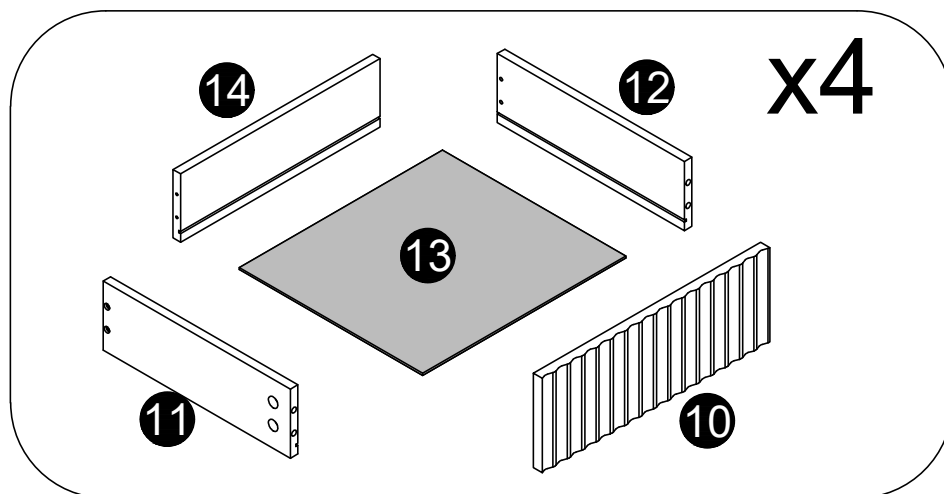**x2****x4**

|                                      |                                                    |                                      |                                      |                                        |                        |
|--------------------------------------|----------------------------------------------------|--------------------------------------|--------------------------------------|----------------------------------------|------------------------|
| <b>A</b> x44<br>Ø6x35mm<br>+3(spare) | <b>B</b> x44<br>Ø15x10mm<br>+3(spare)              | <b>C</b> x28<br>Ø6x30mm<br>+2(spare) | <b>D</b> x16<br>Ø4x35mm<br>+1(spare) | <b>E</b> x48<br>Ø3.5x12mm<br>+4(spare) | <b>F</b> x4            |
| <b>G</b> x2<br>G-1<br>G-2            | <b>H</b> x16<br>Ø3x16mm<br>+1(spare)<br>H-1<br>H-2 | <b>I</b> x2                          | <b>J</b> x2<br>Ø3x10mm<br>J-1<br>J-2 | <b>DL</b> x4<br>L300mm                 | <b>DR</b> x4<br>L300mm |
| <b>CL</b> x4<br>L300mm               | <b>CR</b> x4<br>L300mm                             |                                      |                                      |                                        |                        |

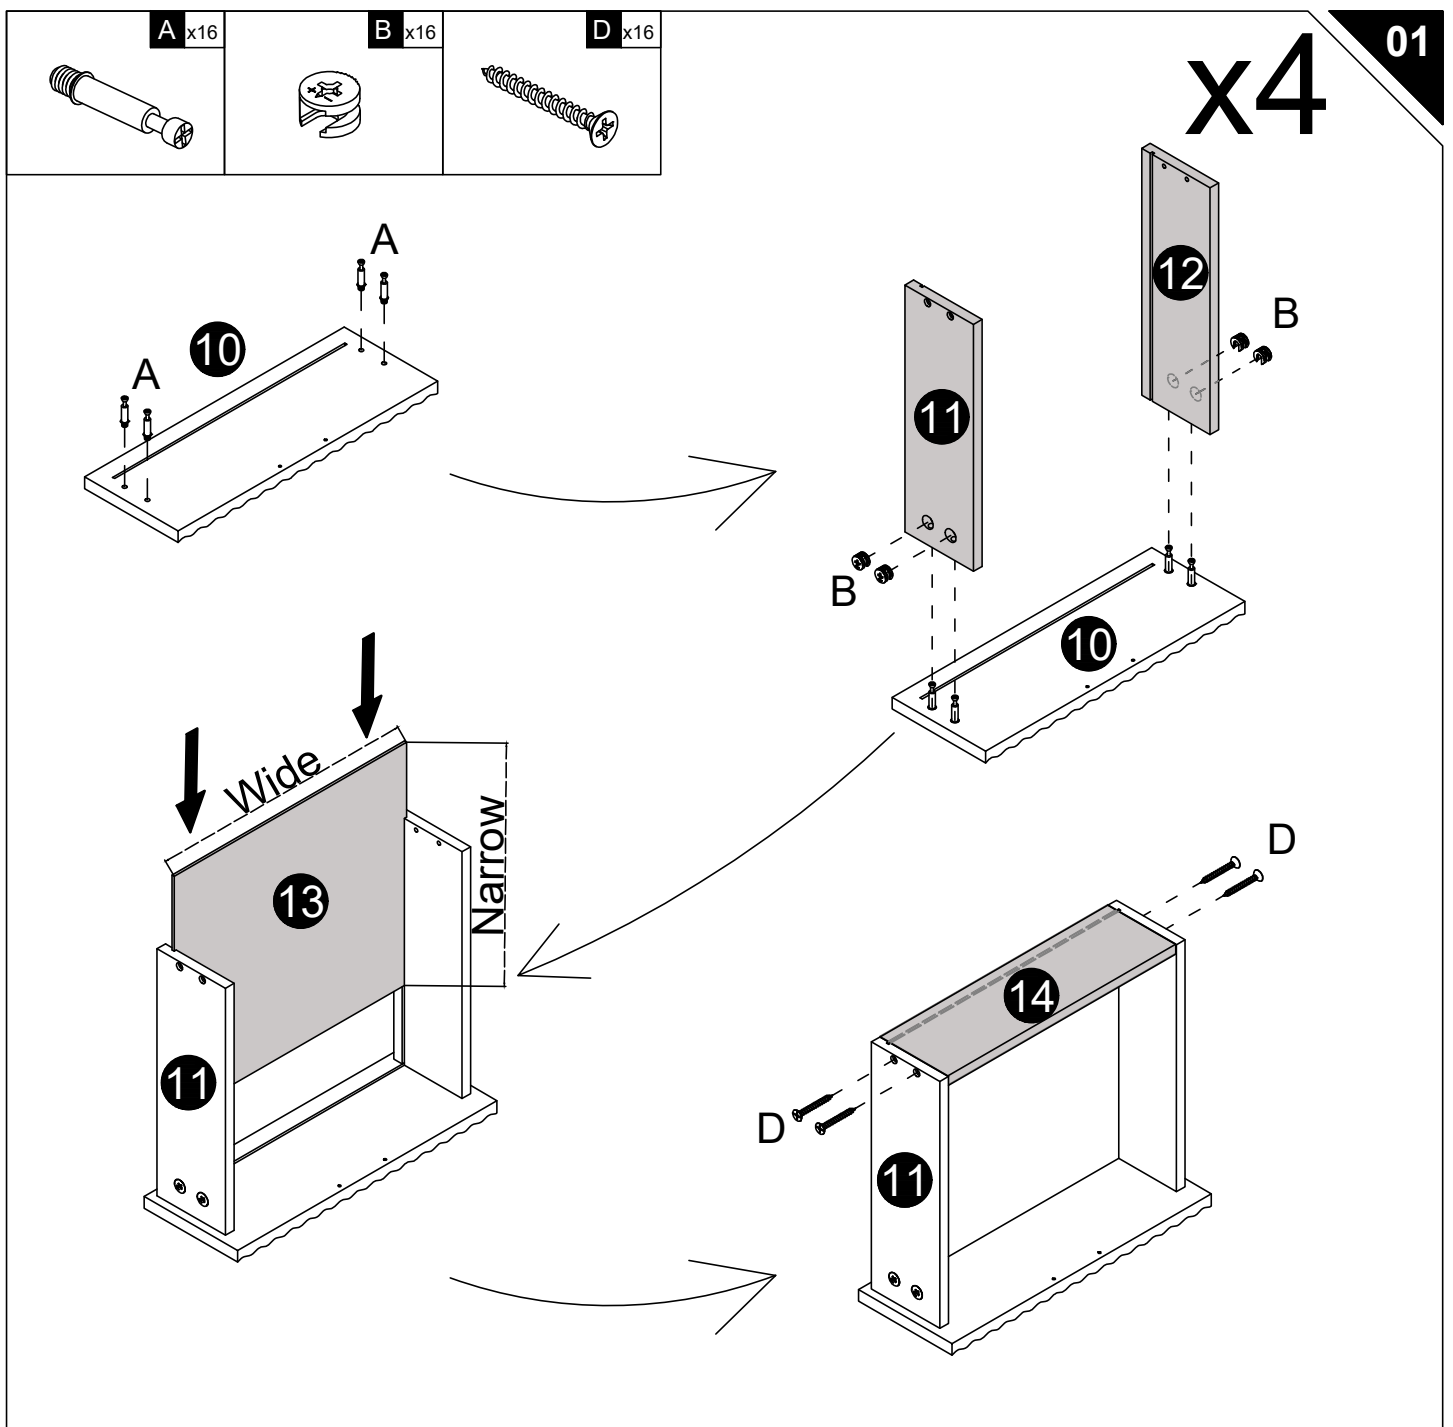

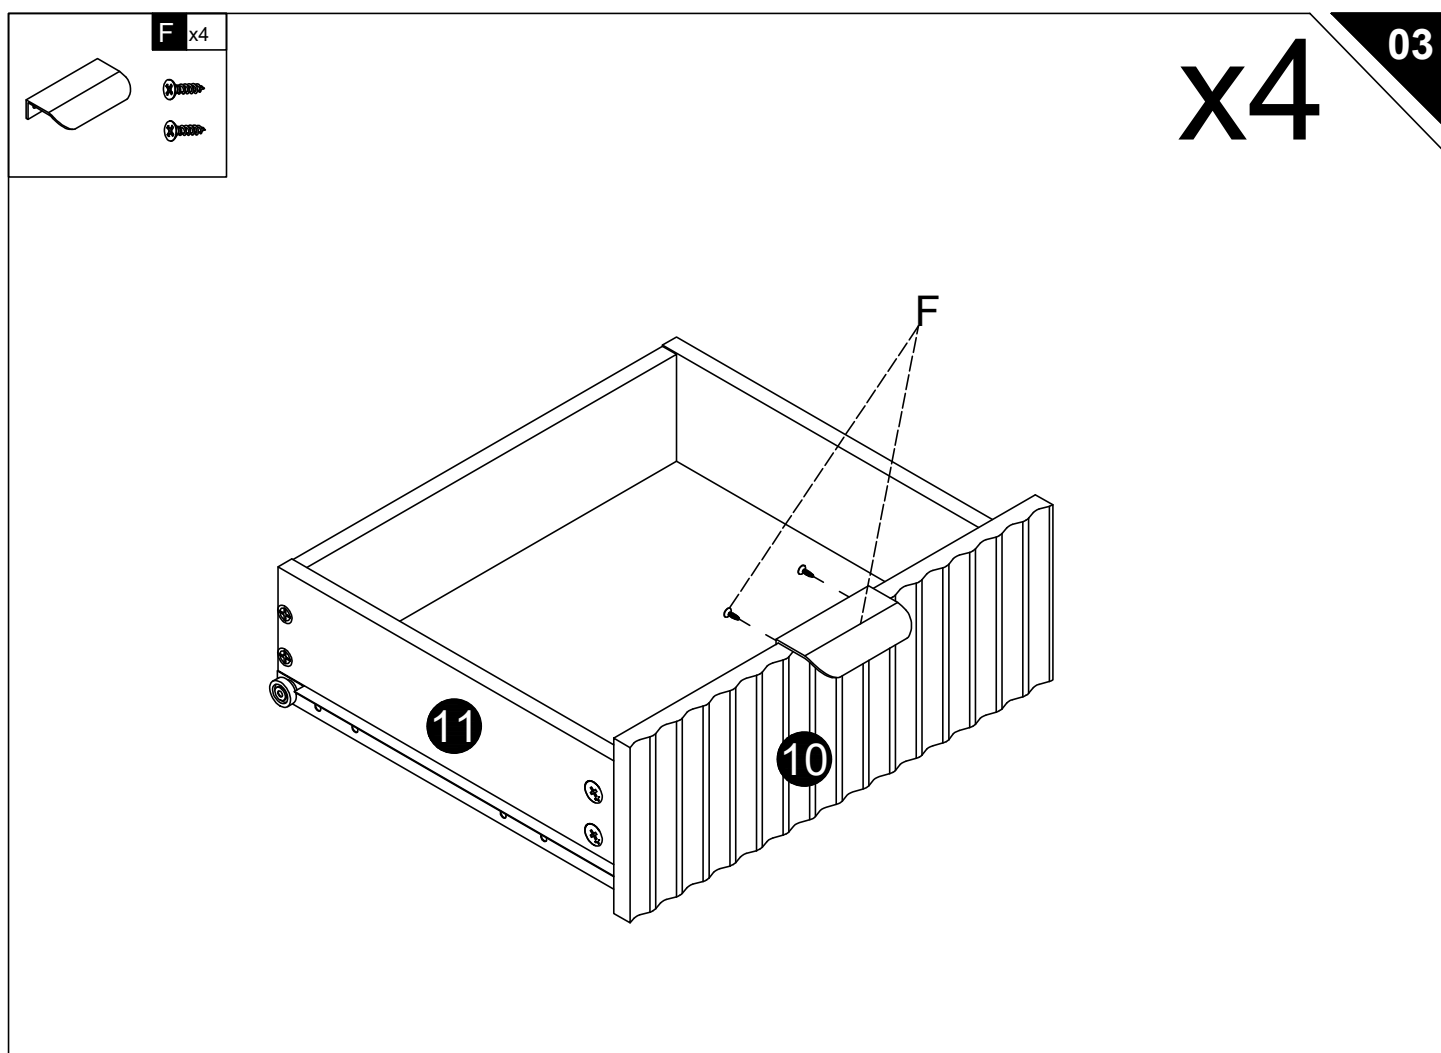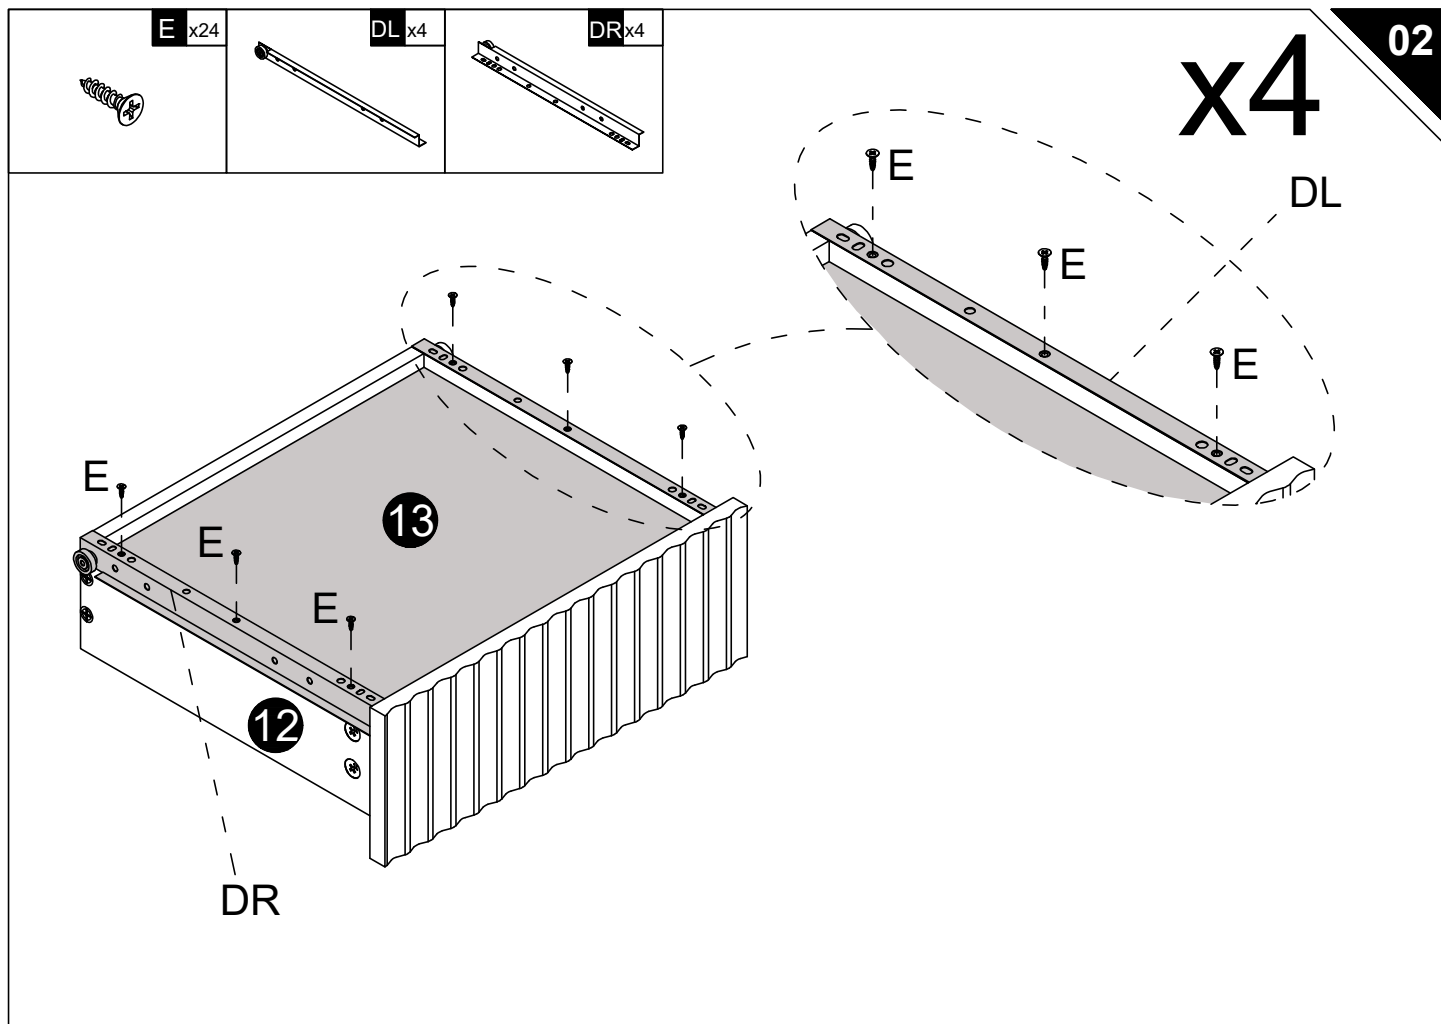


E x12

CL x4

x2

04

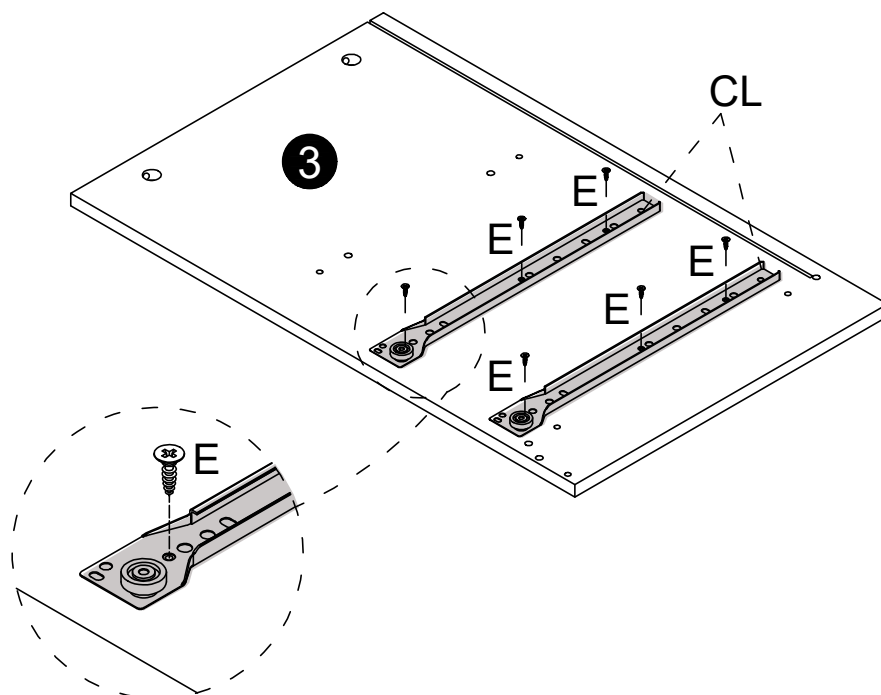


E x12


CR x4

x2

05

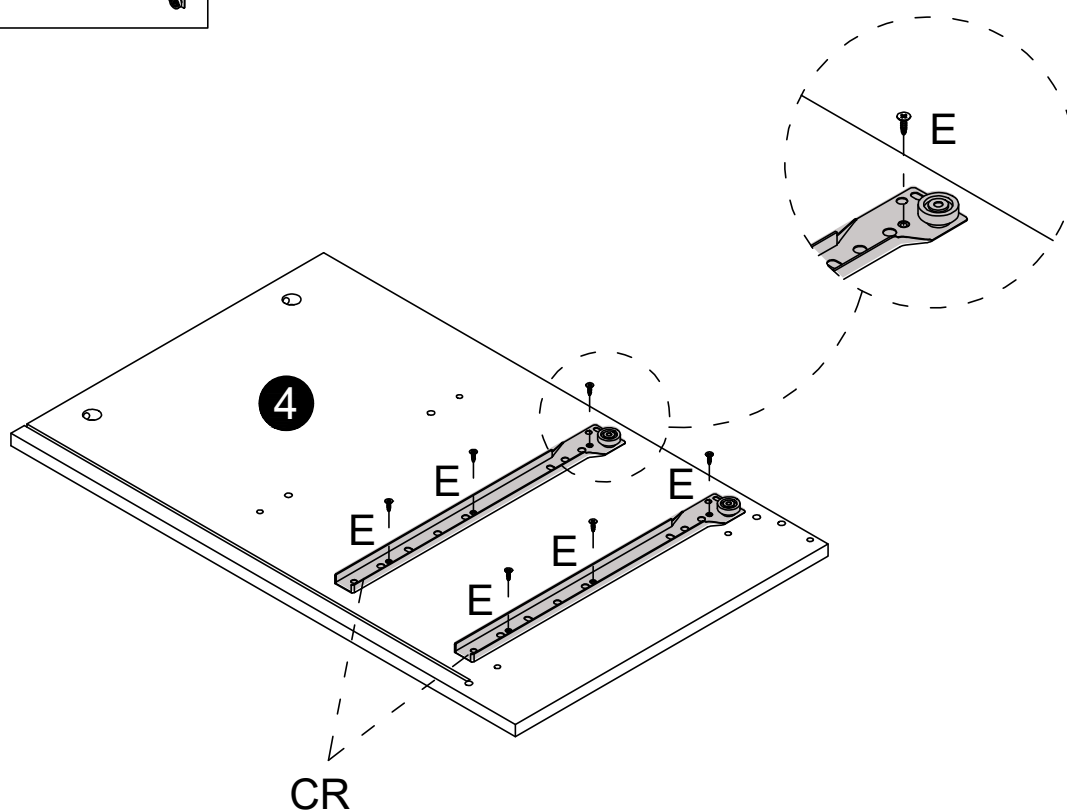


A x10




x2

06

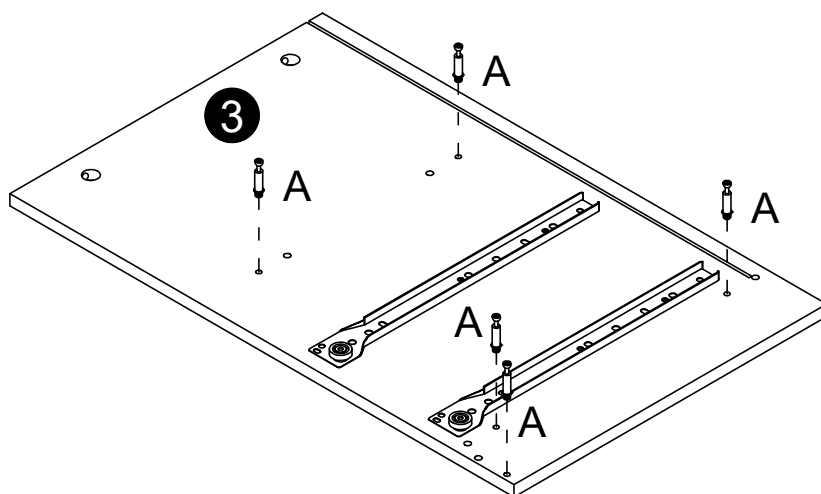


A x10



x2

07

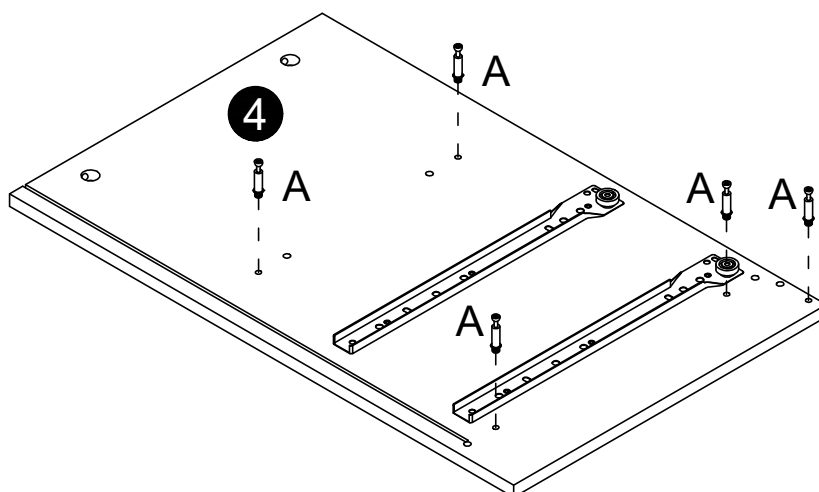


B x10

C x10



x2

08

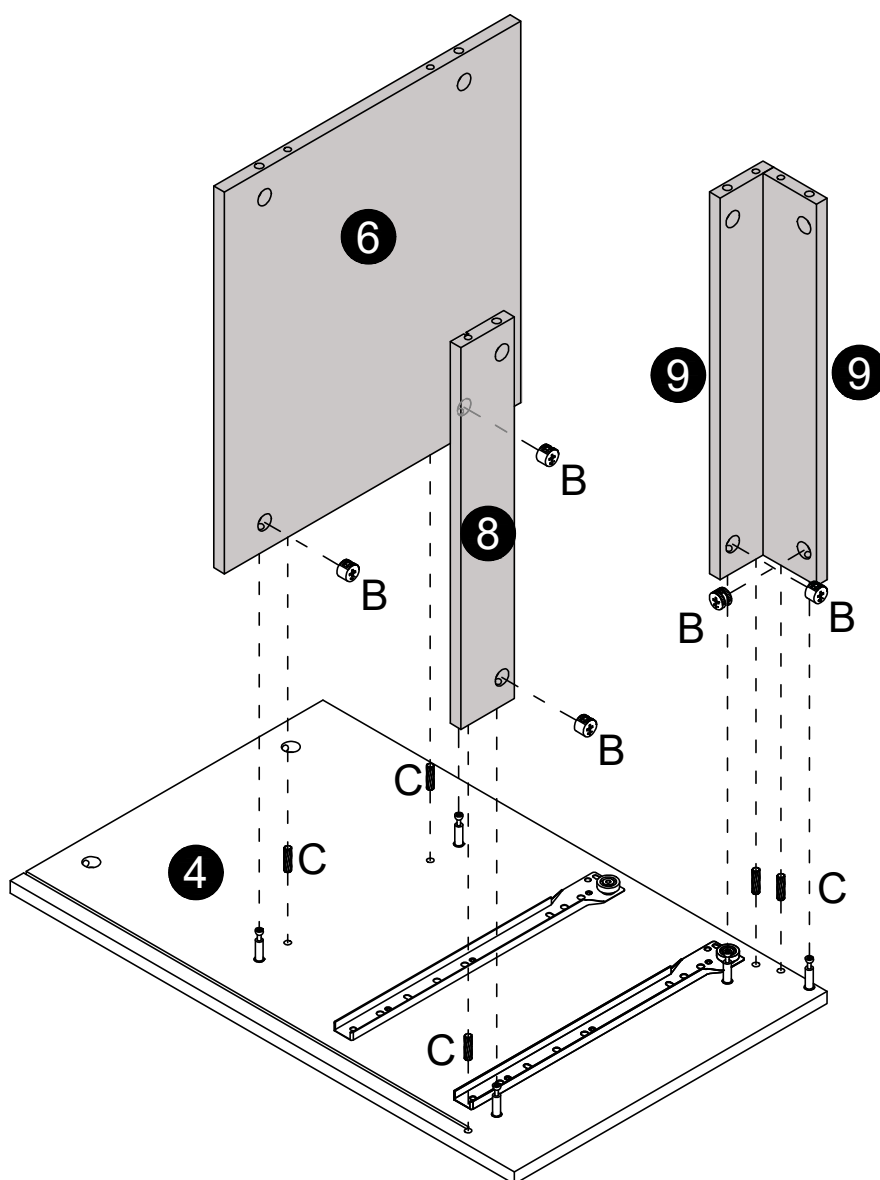


B x10

C x10







x2


09

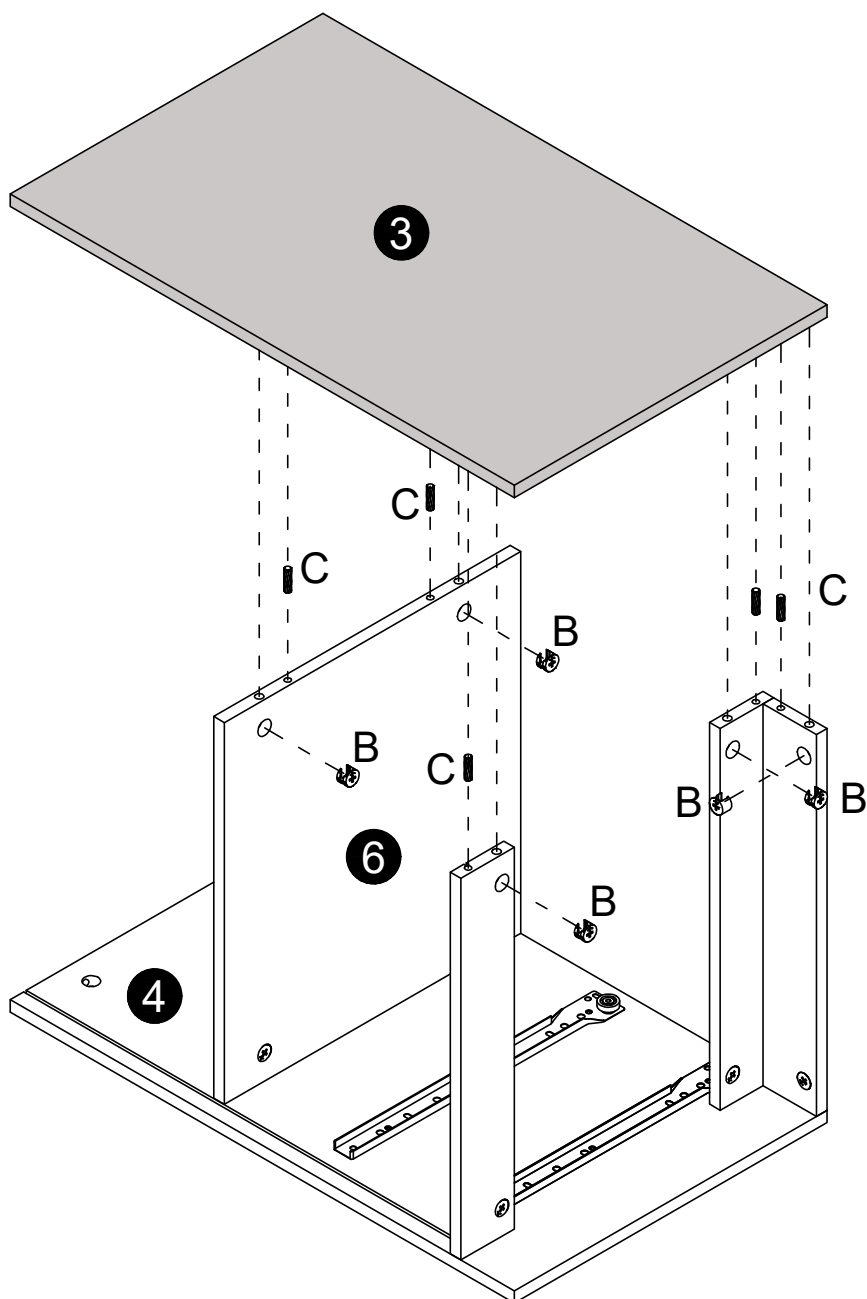

x2

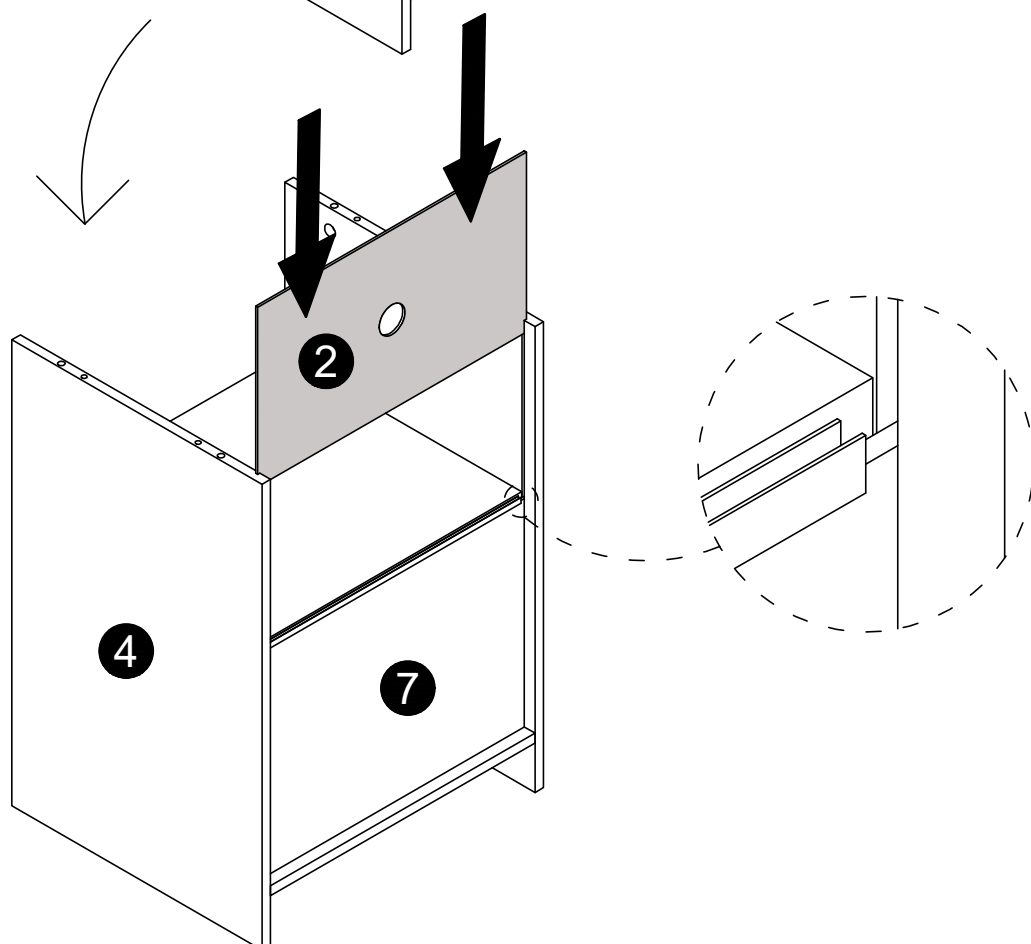
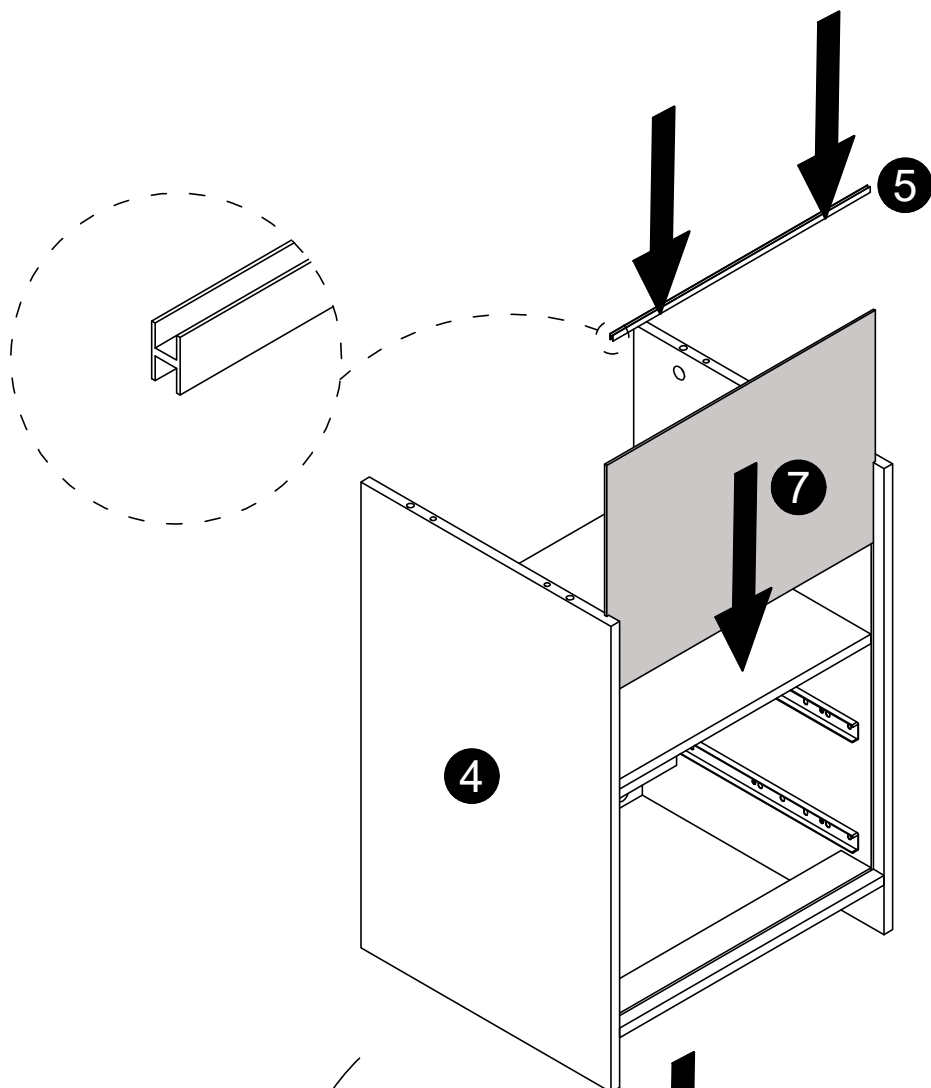


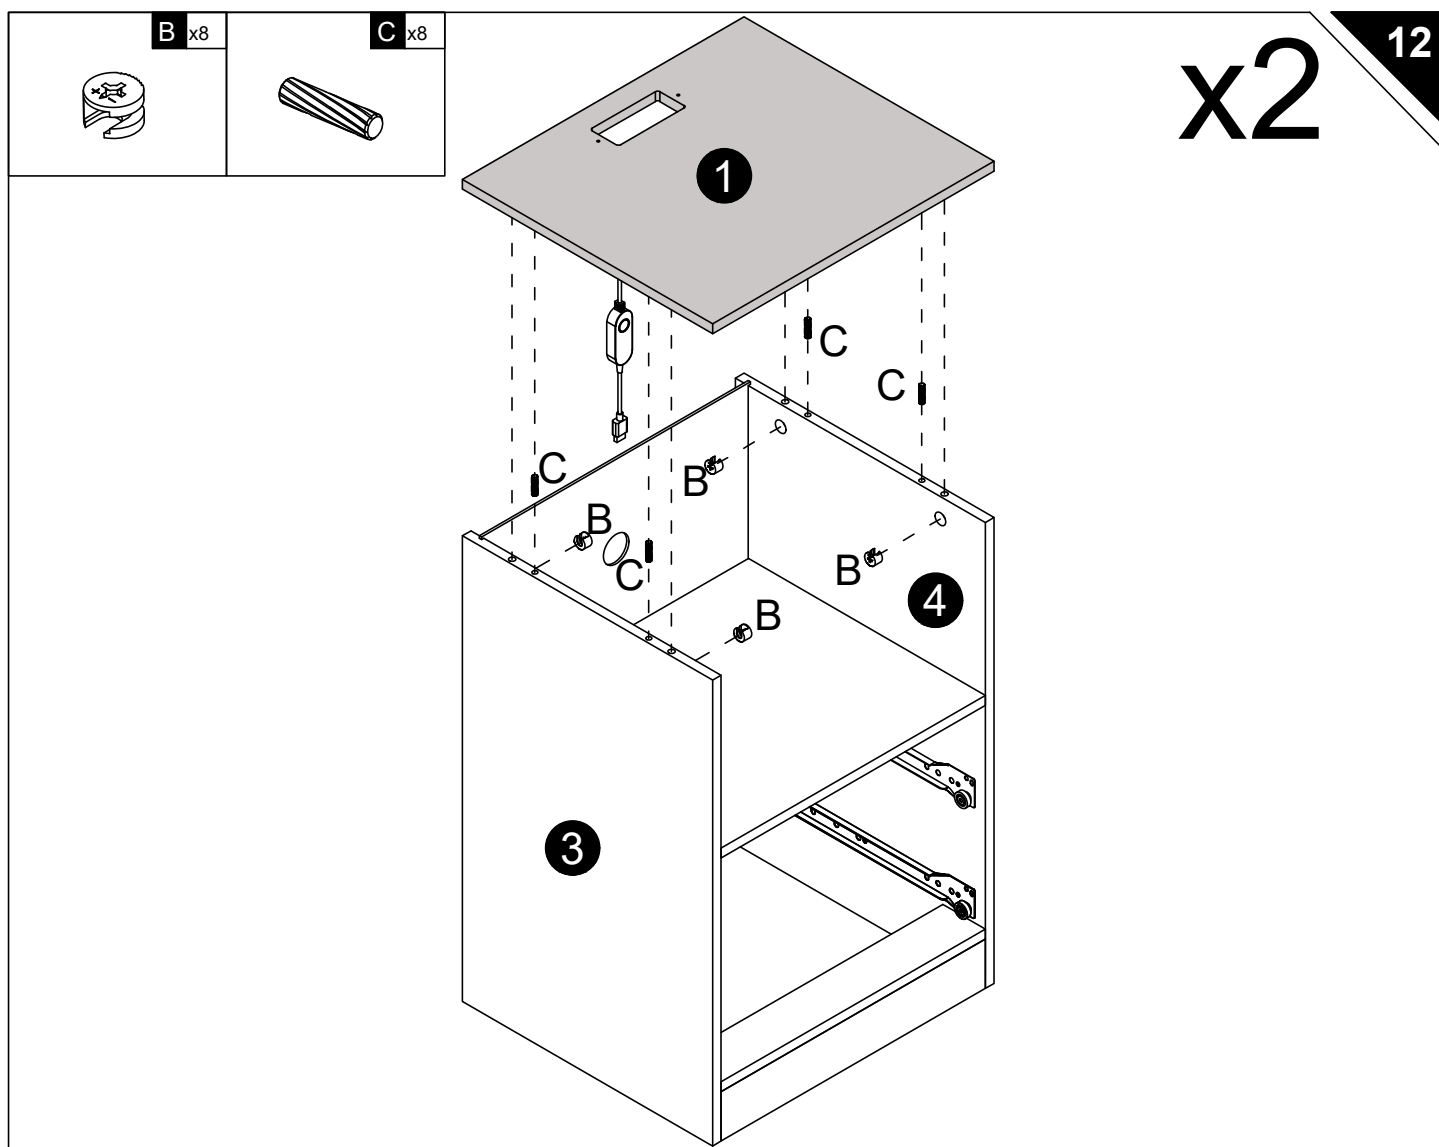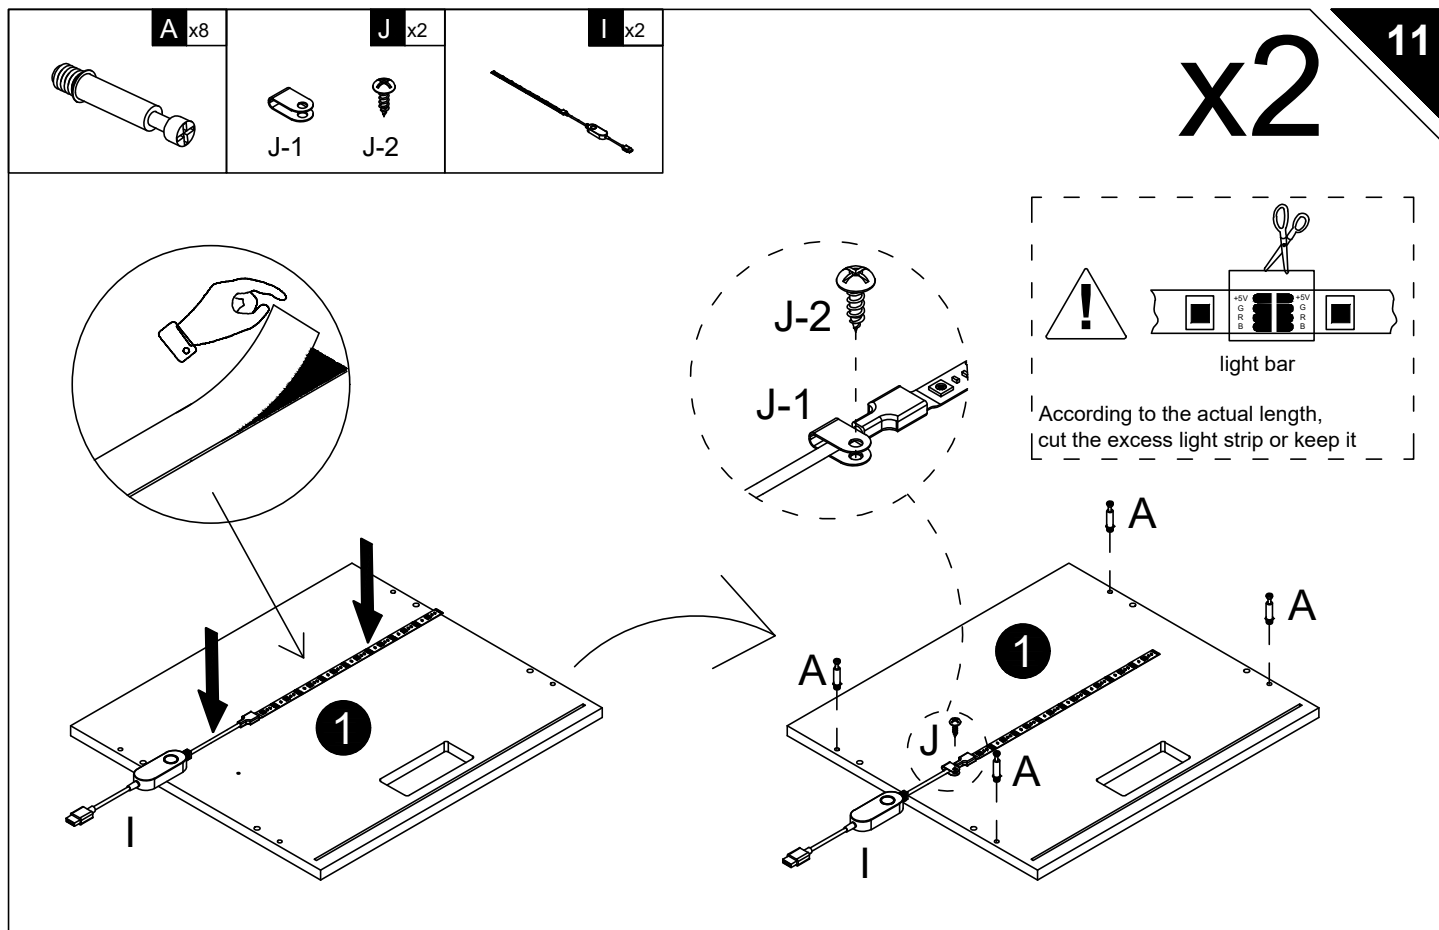


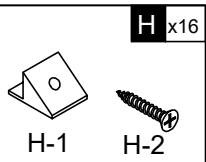

x2


13

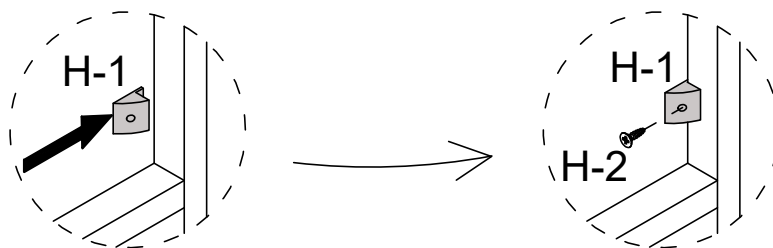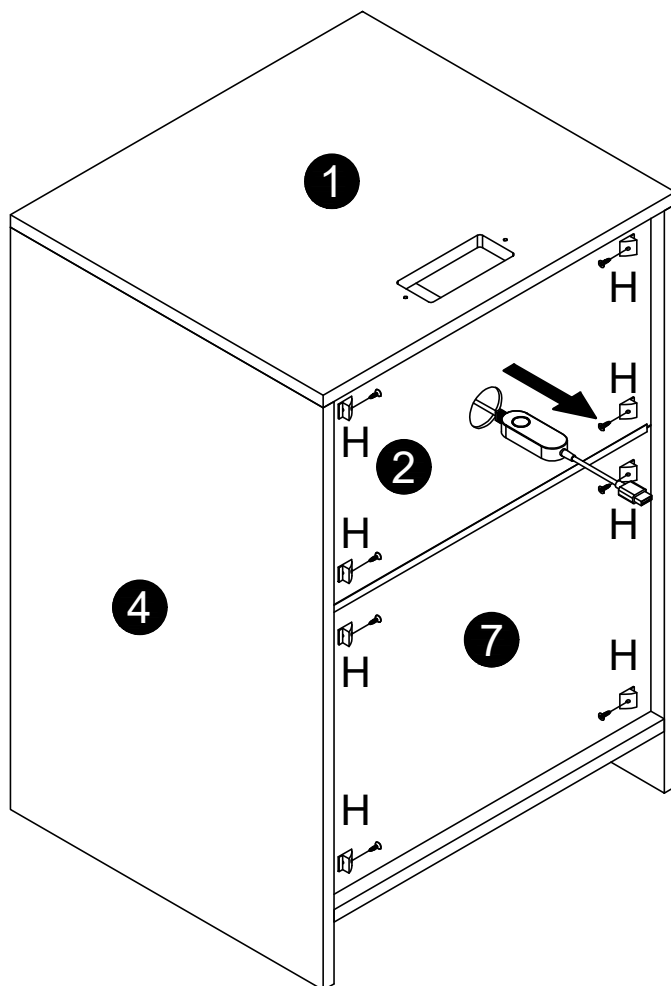

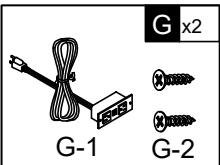


x2



14

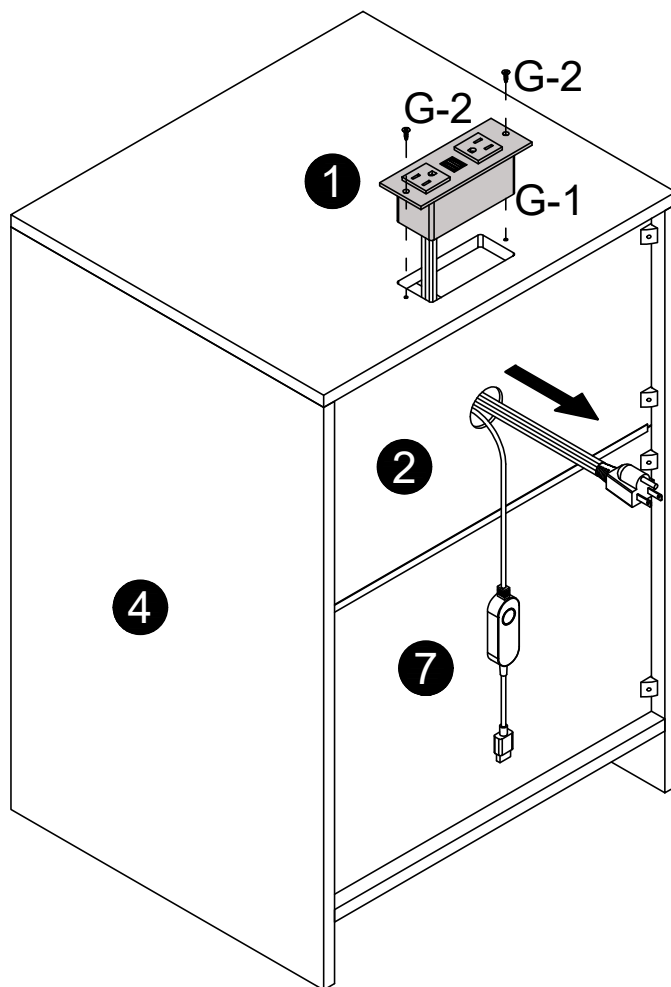


(1)

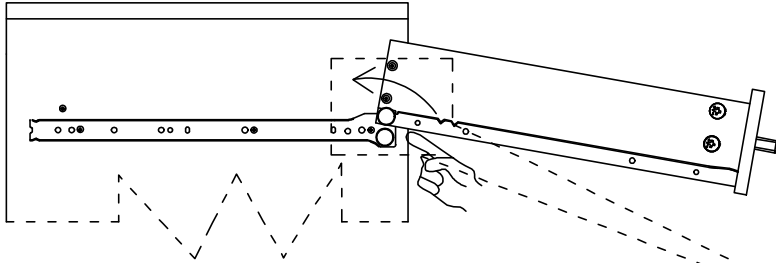

(2)

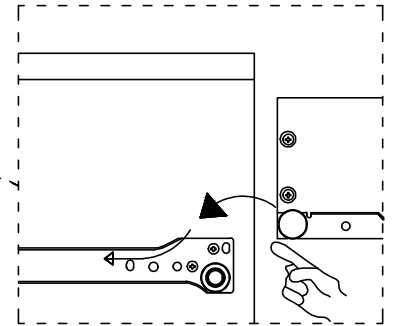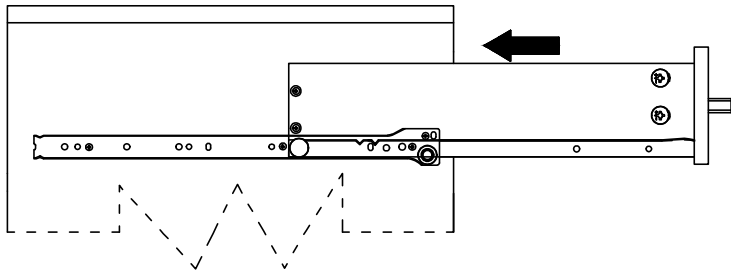

x2

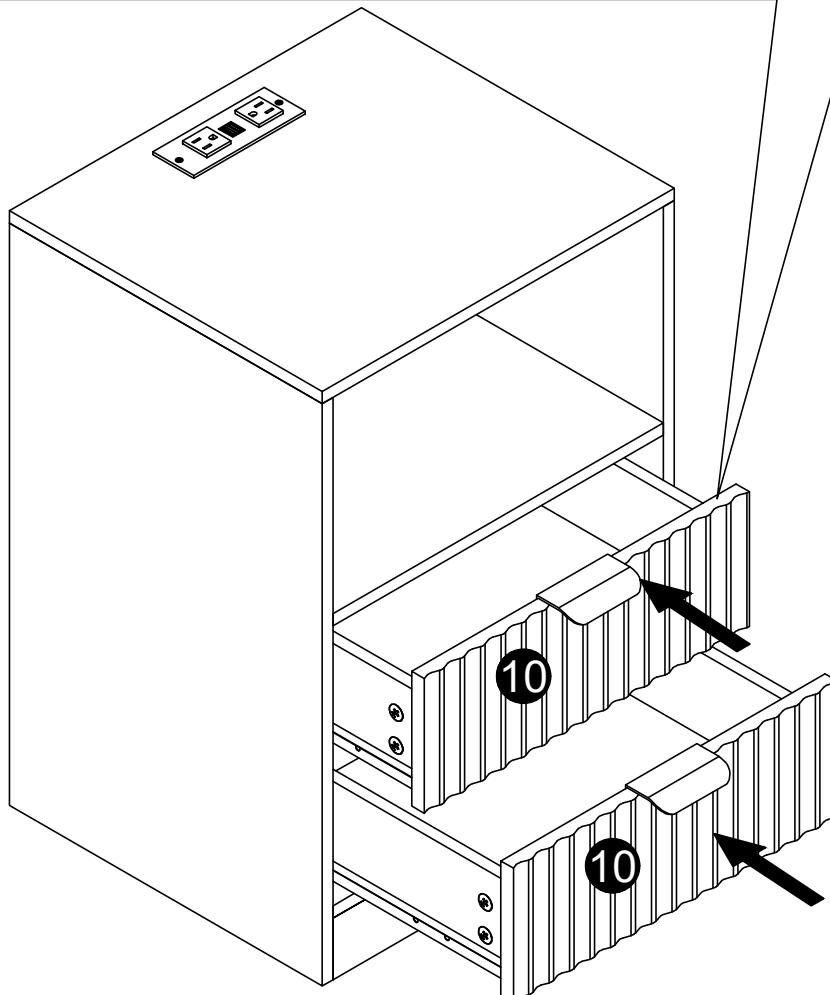

x2

x2

