


# Audrey Headboard Assembly Instructions

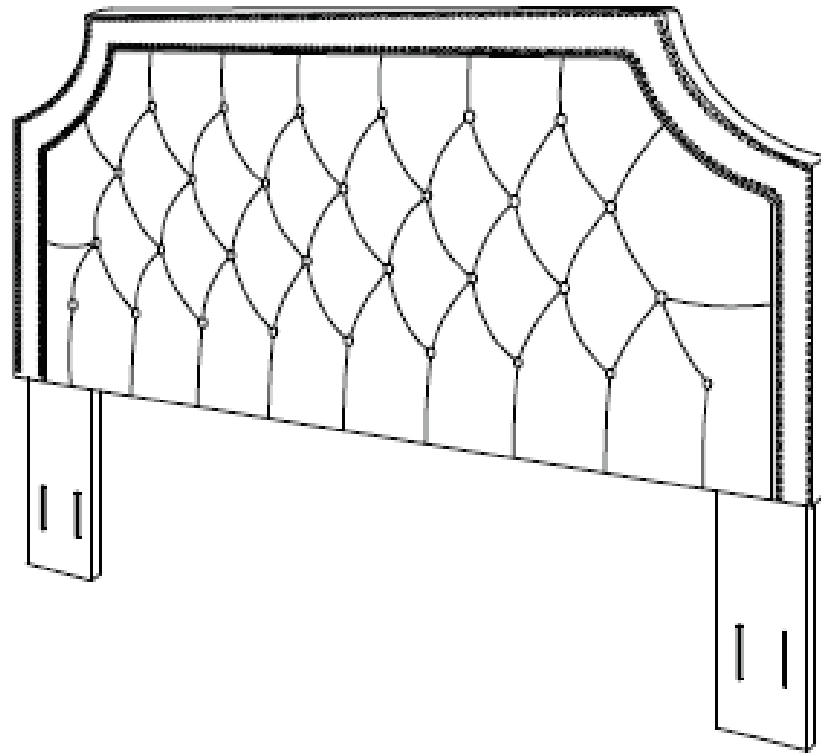

---

Republic Design House


---

# Audrey Headboard Assembly Instructions

NOTE: Place all parts on a clean and smooth surface (rug, carpet) to avoid the parts from being scratched.

NOTE: Follow assembly instructions step by step.

NOTE: Do not completely tighten screws until the headboard is fully set up.

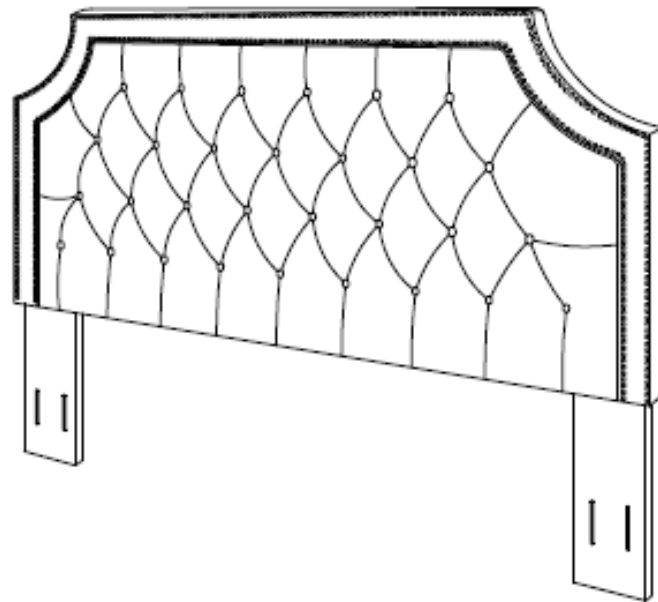


---

Republic Design House


---

# Audrey Headboard Assembly Instructions

## PART LIST:

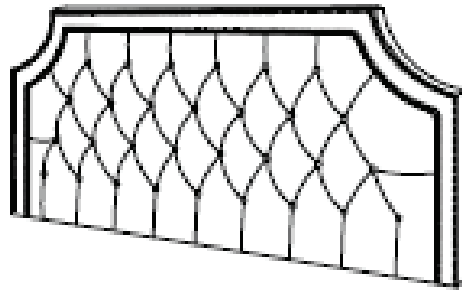



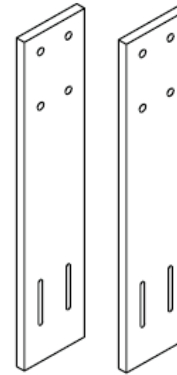



① Headboard 1pc



② Legs 2pcs


## HARDWARE LIST:

LABEL	PICTURE	DESCRIPTION	QTY	LABEL	PICTURE	DESCRIPTION	QTY
A		2" BOLT M8	<b>8</b>	C		M8 FLAT WASHER	<b>16</b>
B		M8 ALLEN WRENCH	<b>1</b>	D		M8 LOCK WASHER	<b>8</b>
E		HEX NUT (to attach headboard to metal bed frame)	<b>4</b>	F		2-1/2" BOLT M8 (to attach headboard to metal bed frame)	<b>4</b>

Republic Design House


# Audrey Headboard Assembly Instructions

STEP 1: Remove legs and hardware from behind the headboard.  
(See below diagram)

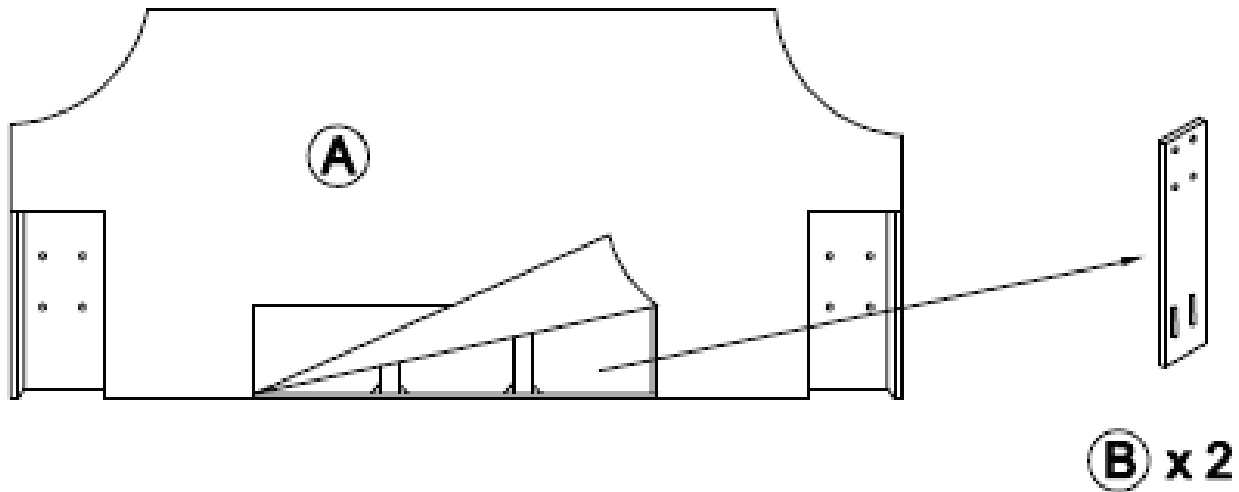

# Audrey Headboard Assembly Instructions

STEP 2: Using the provided hardware, attach legs to headboard.  
(See below diagram)  
Use the different hole patterns to customize the  
desired height of the headboard.

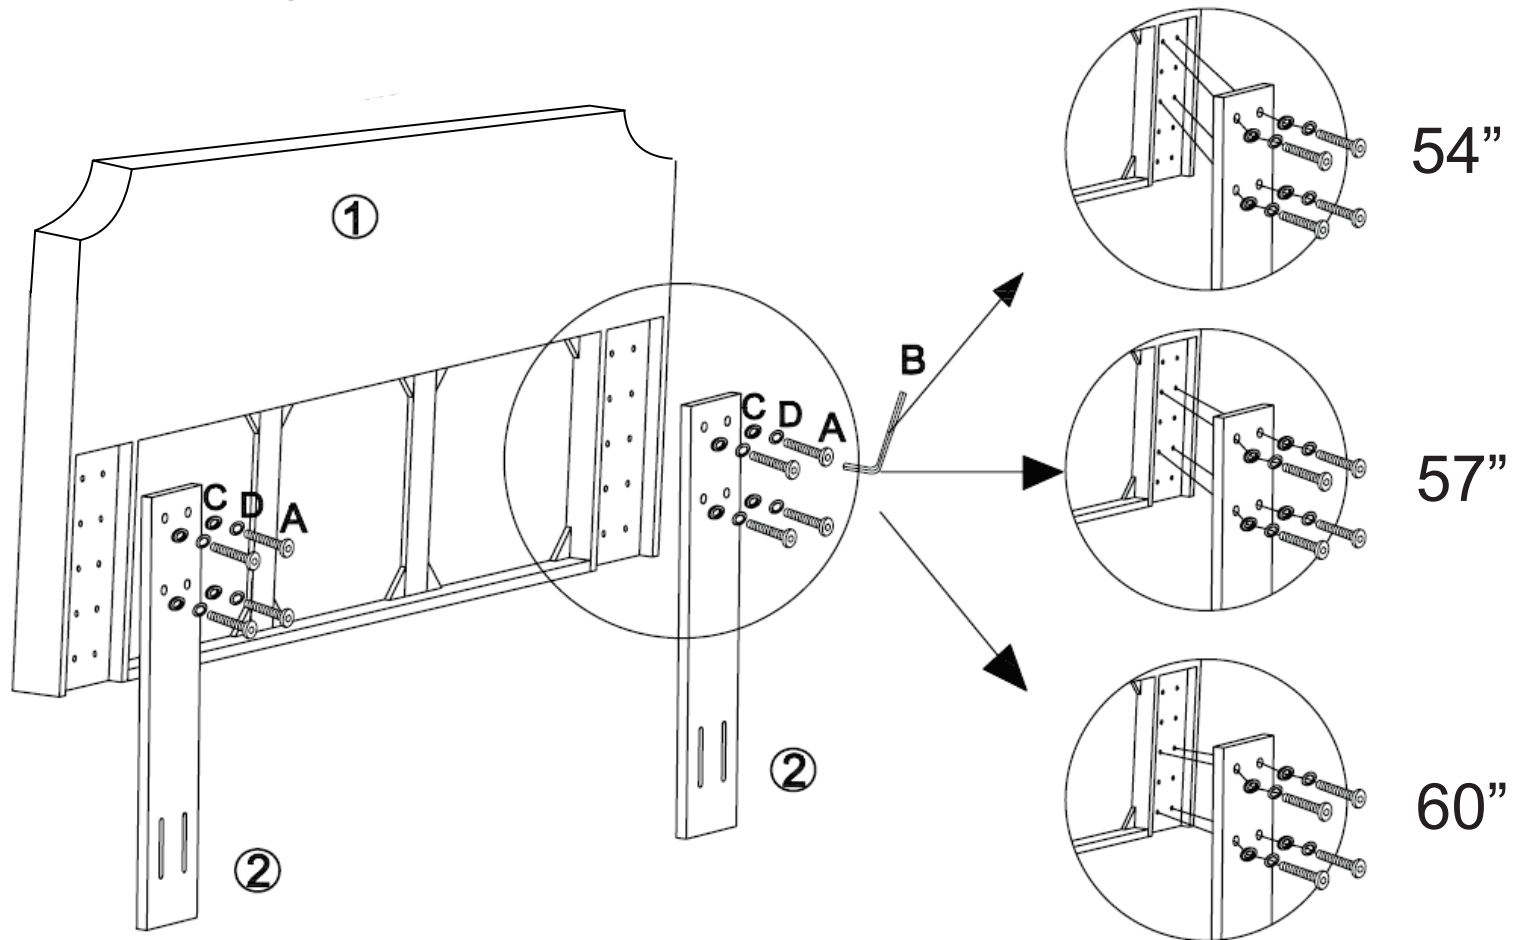


Republic Design House

# Audrey Headboard Assembly Instructions

STEP 3: After all bolts have been tightened, re-apply velcro backing.

STEP 4: After headboard is fully assembled, align slots at the bottom of headboard legs with attachment holes on metal bedframe, use the provided 2-1/2" bolts, washers & hex nuts to attach headboard to metal bed frame.

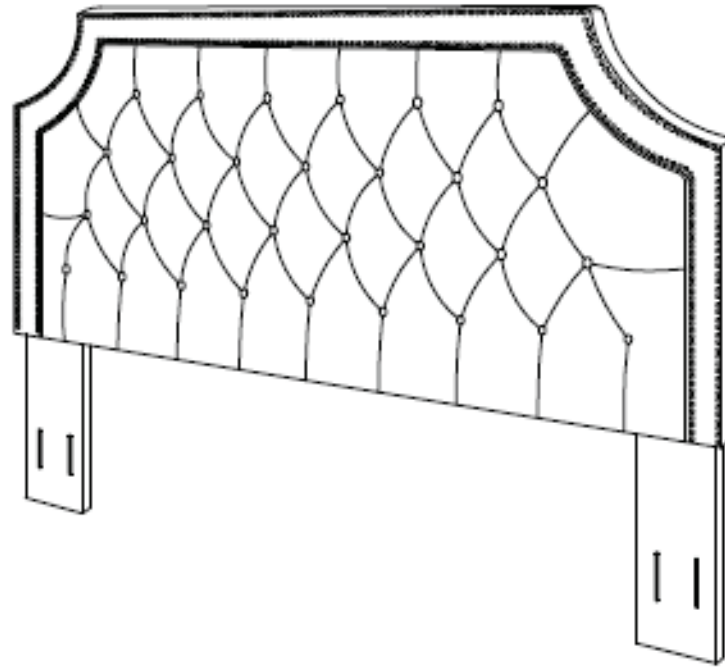

---

Republic Design House

---