


Assembly Instruction


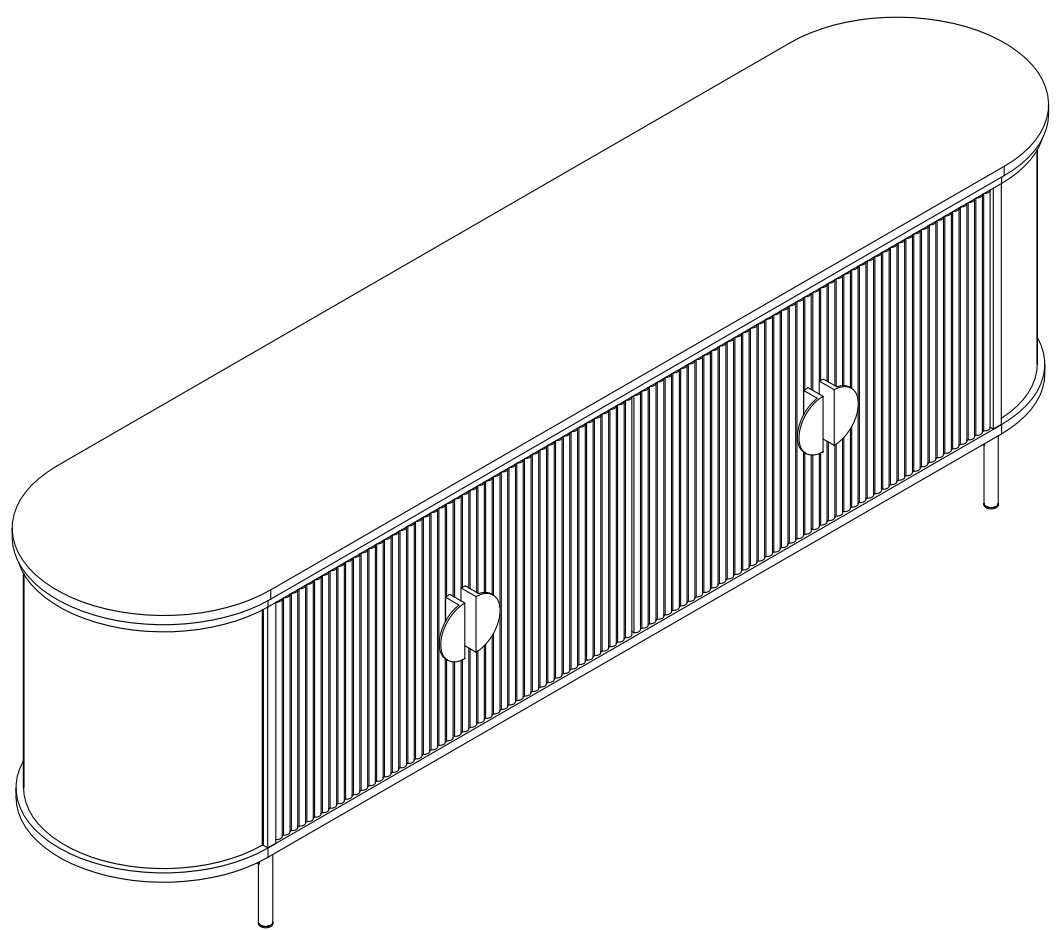


①		②		③		④	
1PC		1PC		1PC		2PCS	
⑥		⑦		⑧		⑨	
1PC		2PCS		2PCS		2PCS	
⑩		⑪		⑫			
4PCS		1PC		2PCS			


A	X6	B	X8	C	X48	D	X8	E	X1
M6x28mm		Ø5x17mm		M3.5x14mm		M3x16mm		4mm	
F	X12	G	X6	H	X8	I	X4	J	X8
M5x40mm		Ø8x30mm		M4x18mm				M6x22mm	
K	X8	L	X2	M	X4	N	X4		
		M6x40mm							

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

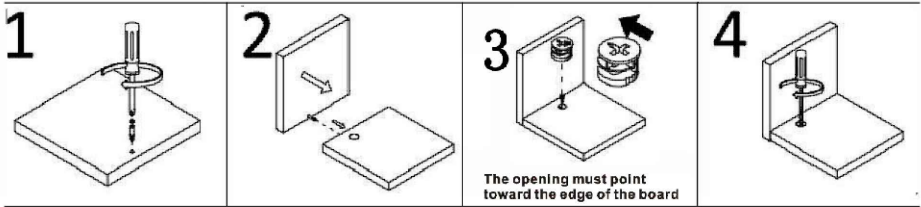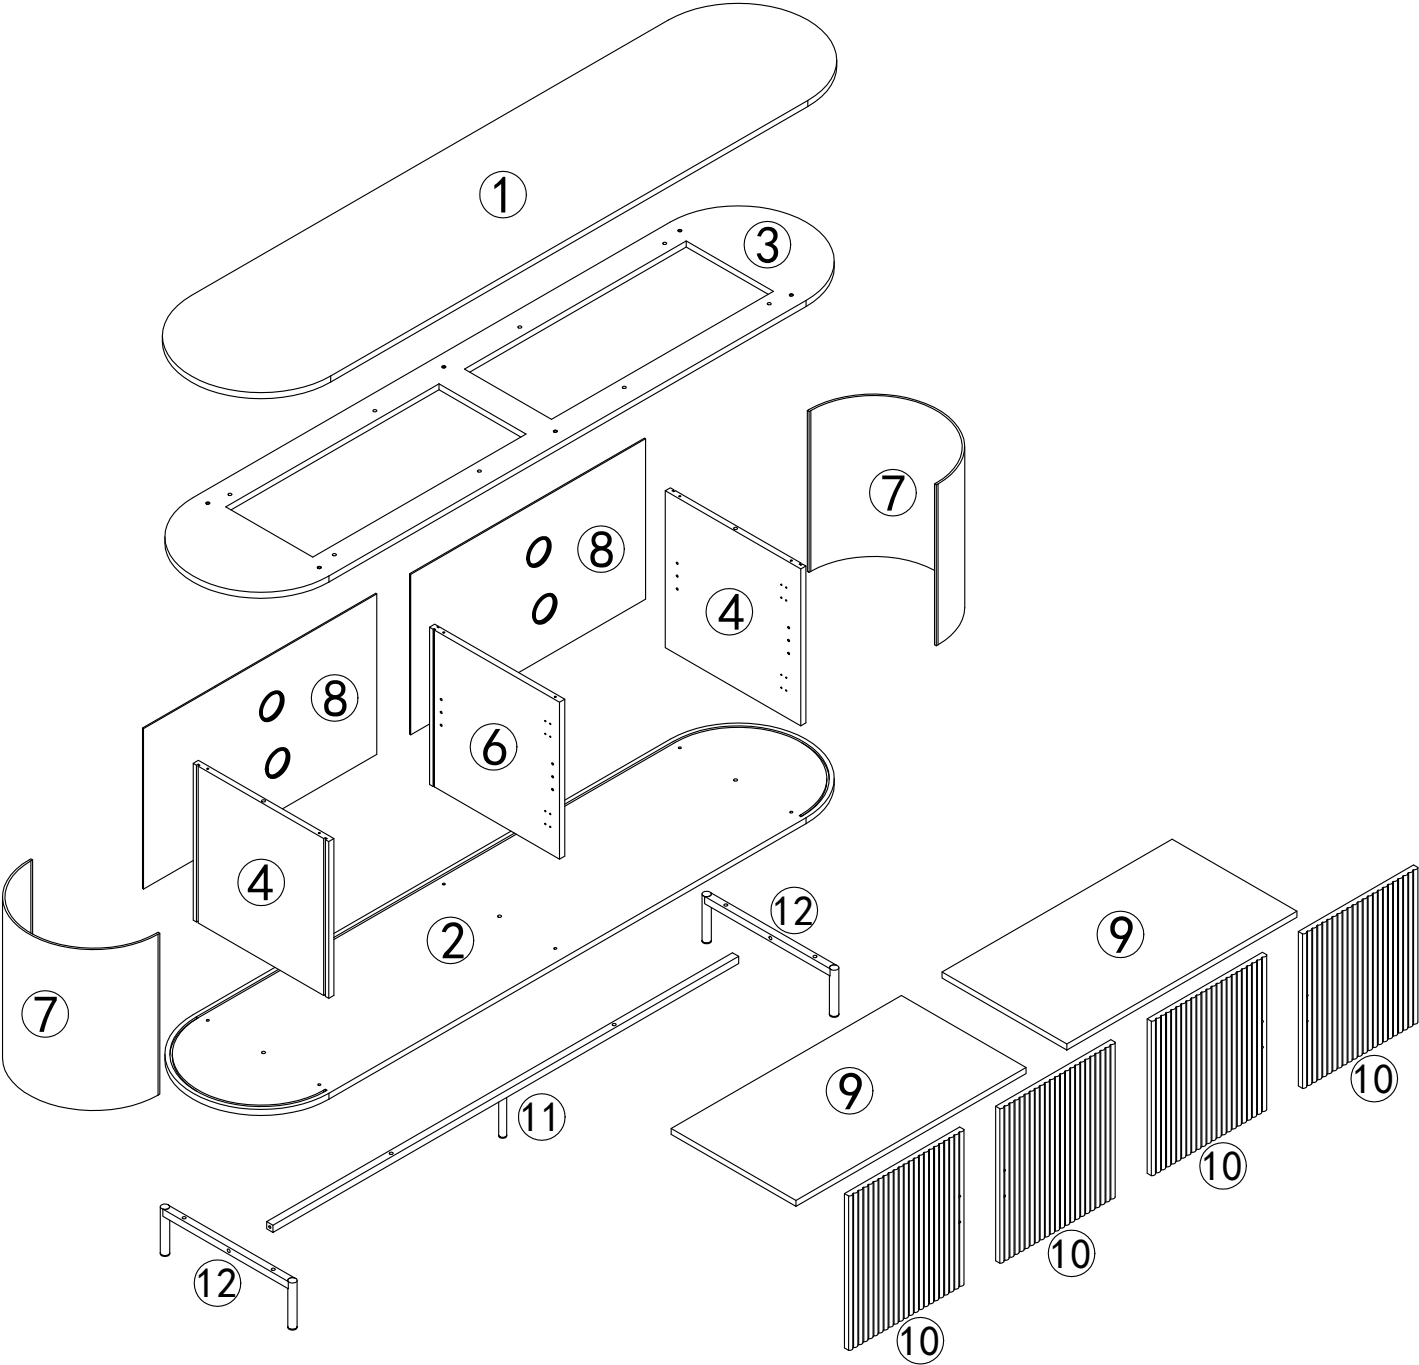


1

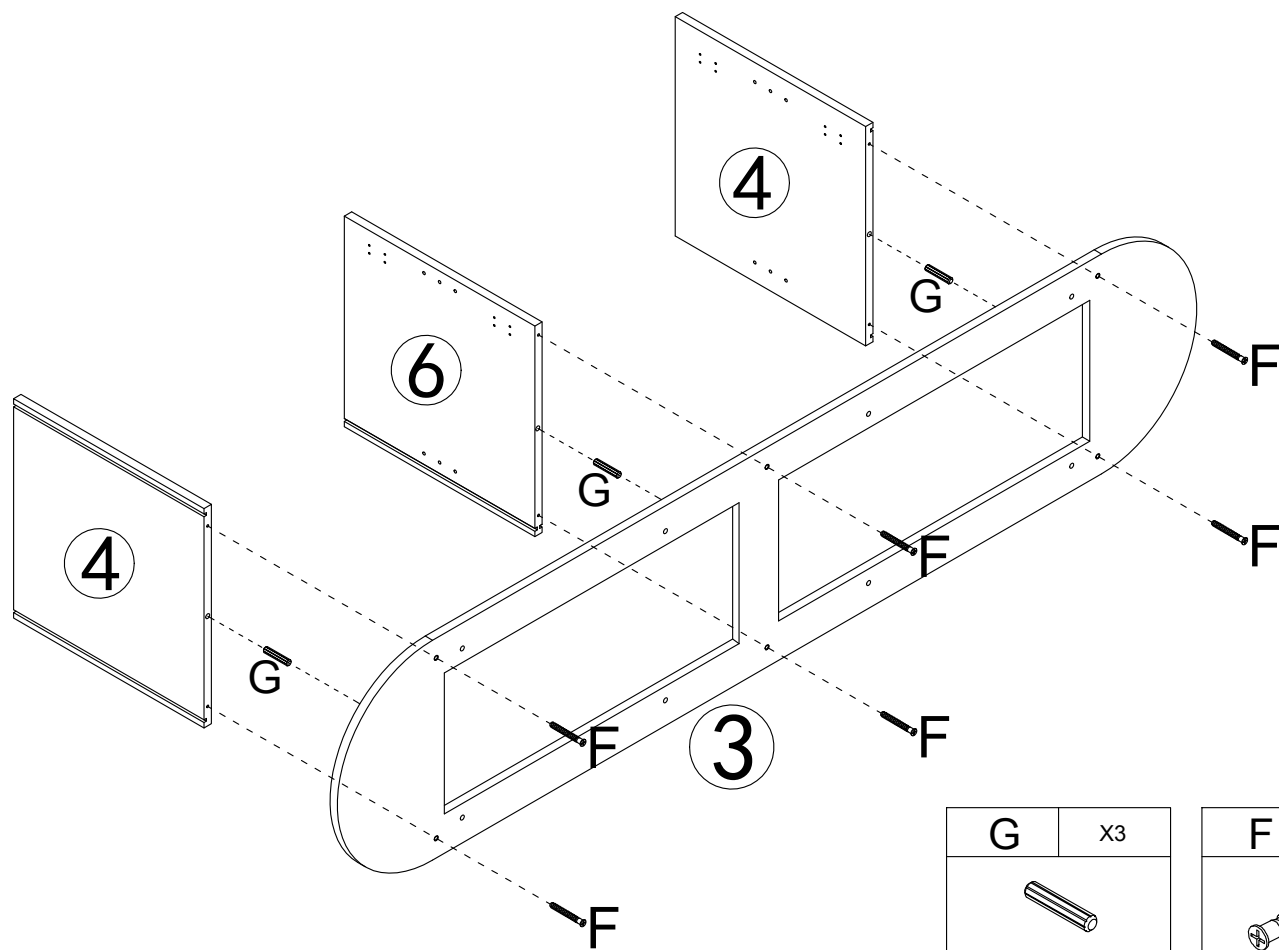


2

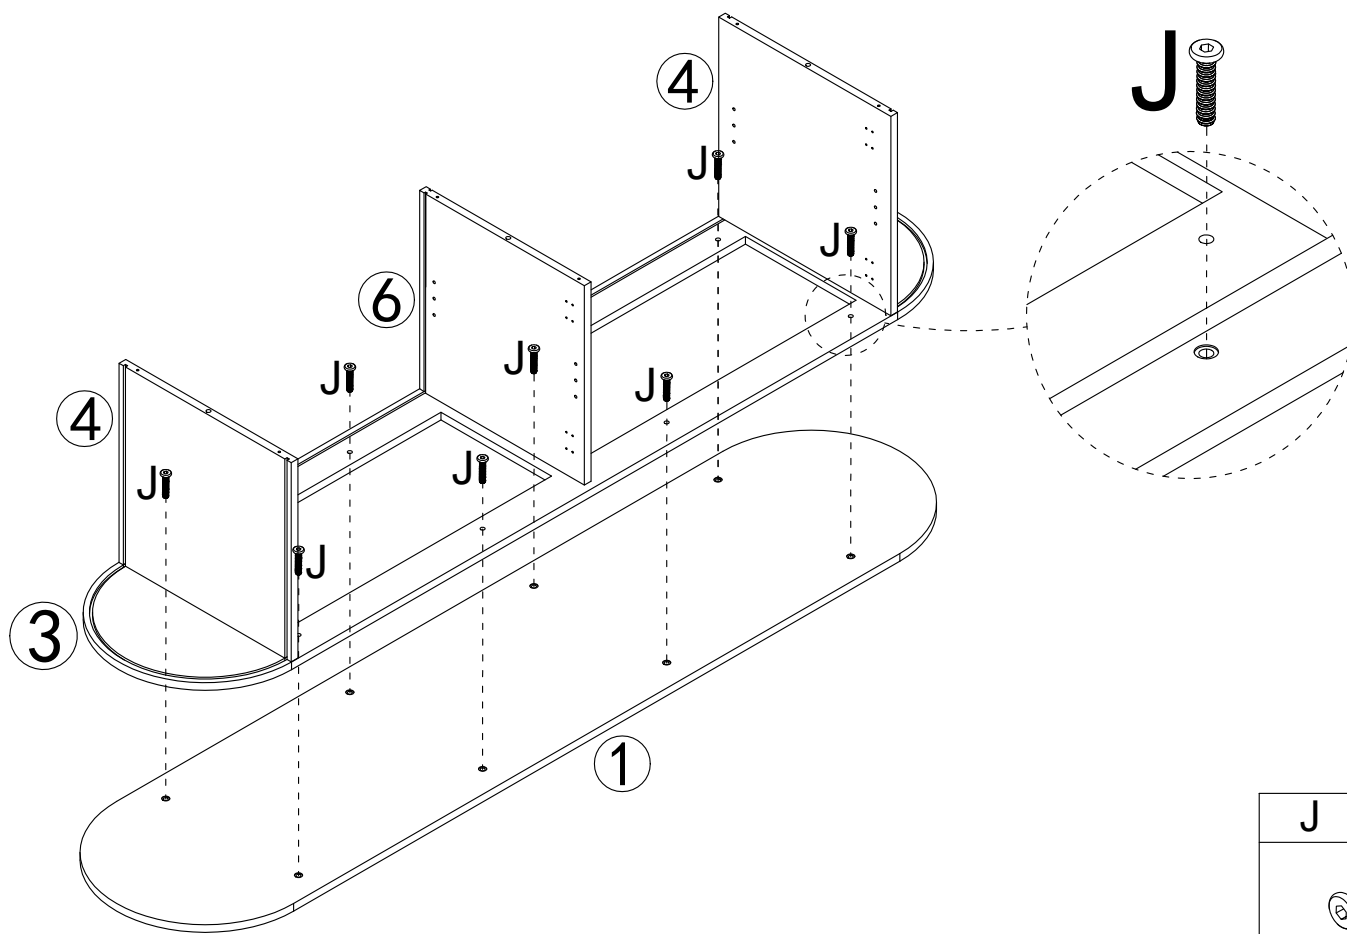


3

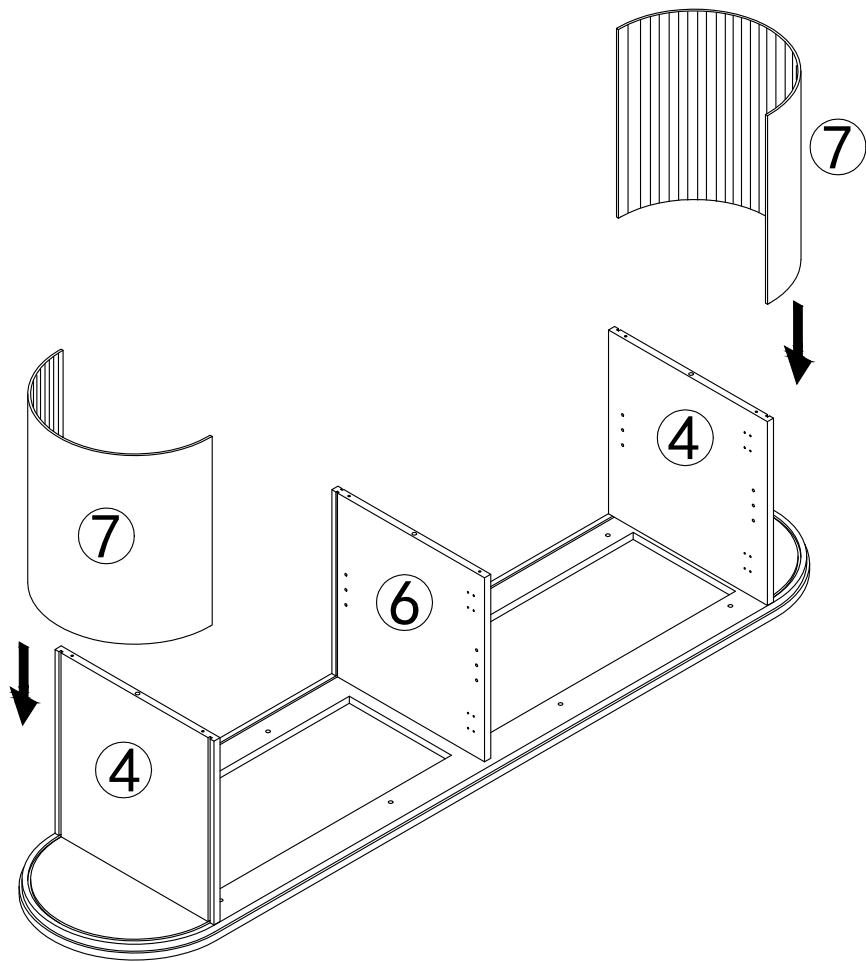

4

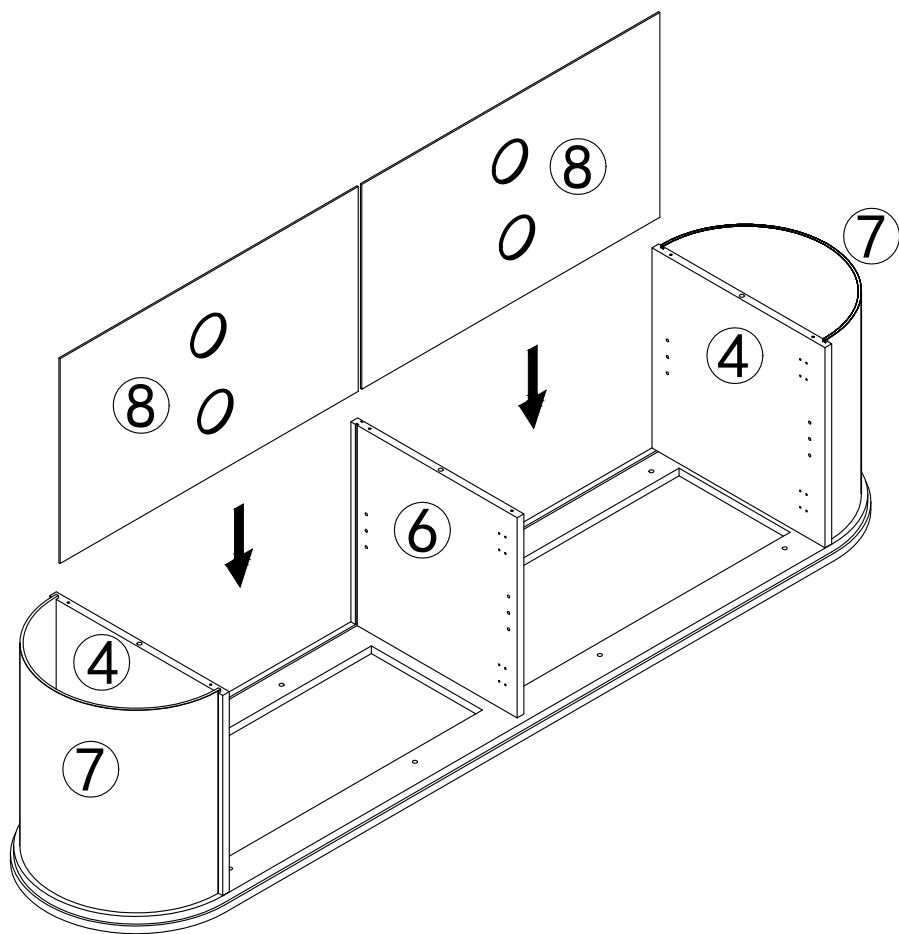


5

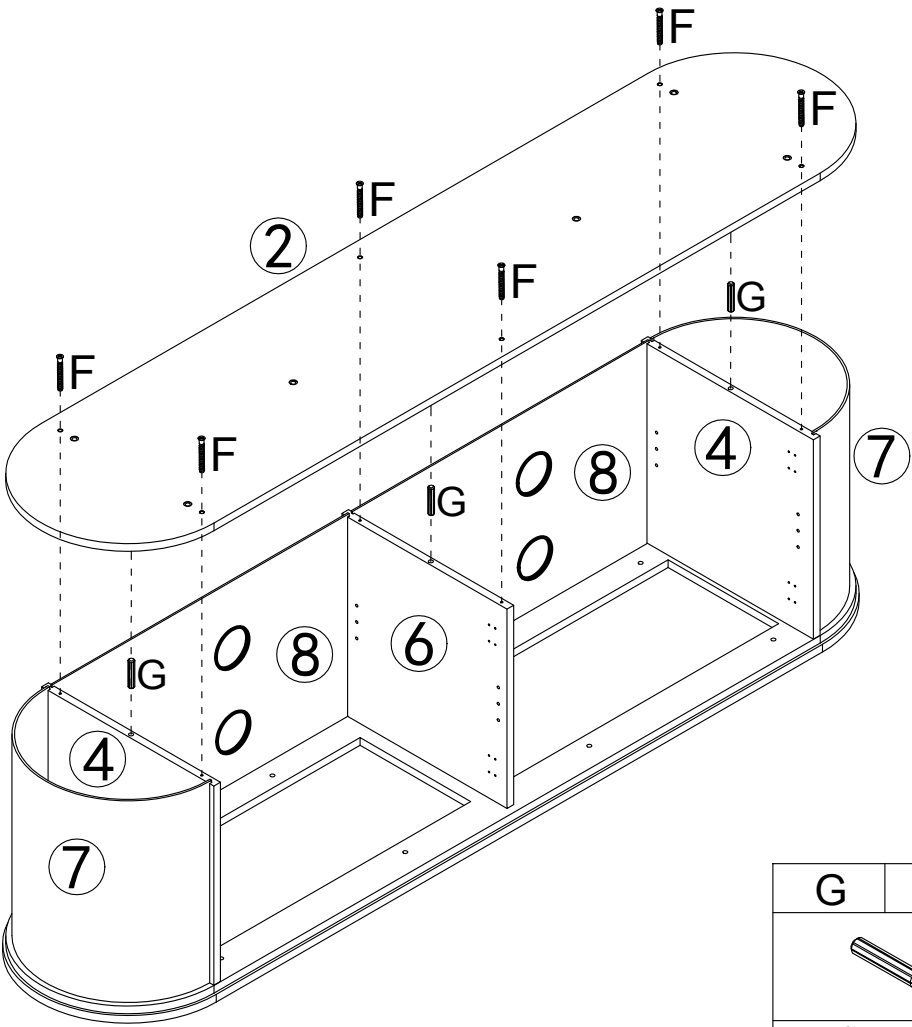

G	X3
	
Ø8x30mm	


F	X6
	
M5x40mm	

6

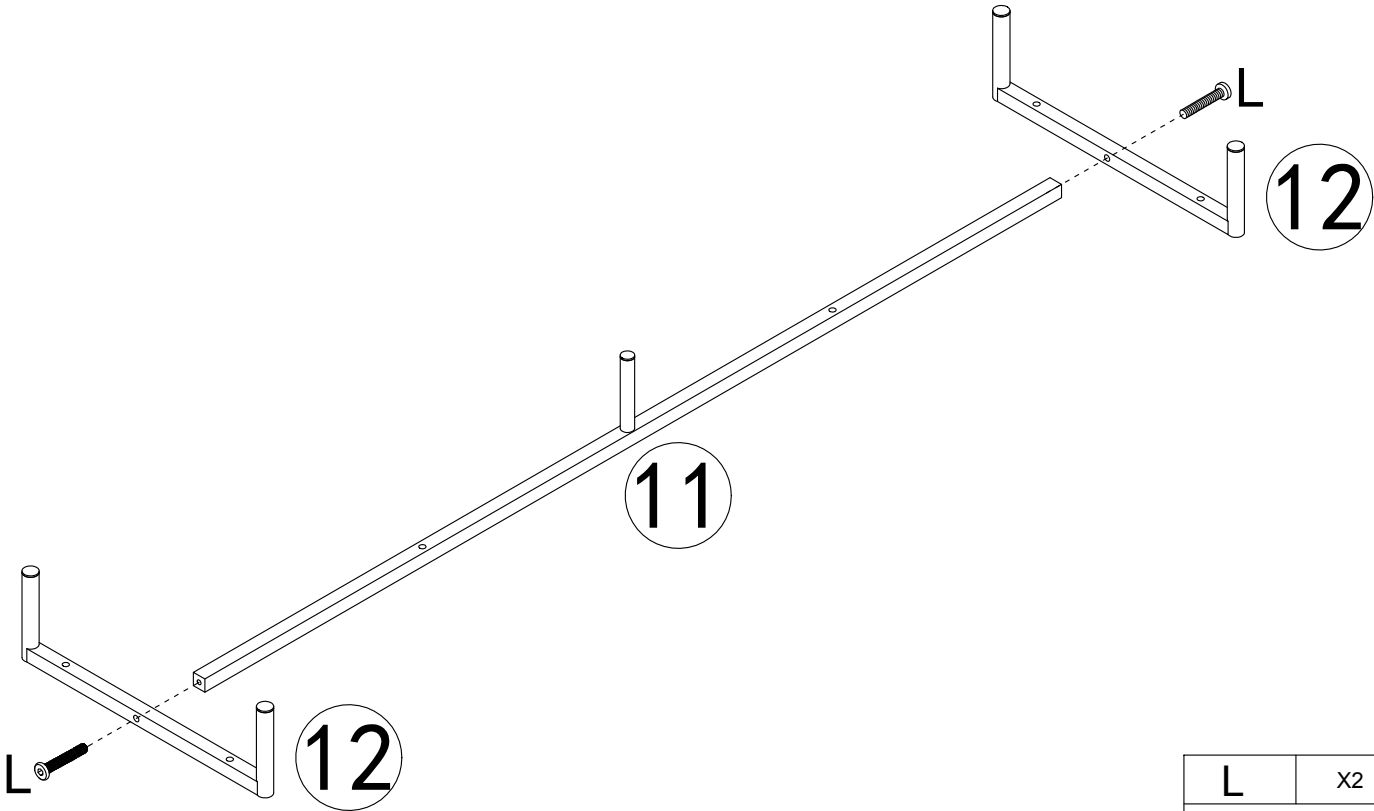


L	X2
	
M6x40mm	

7

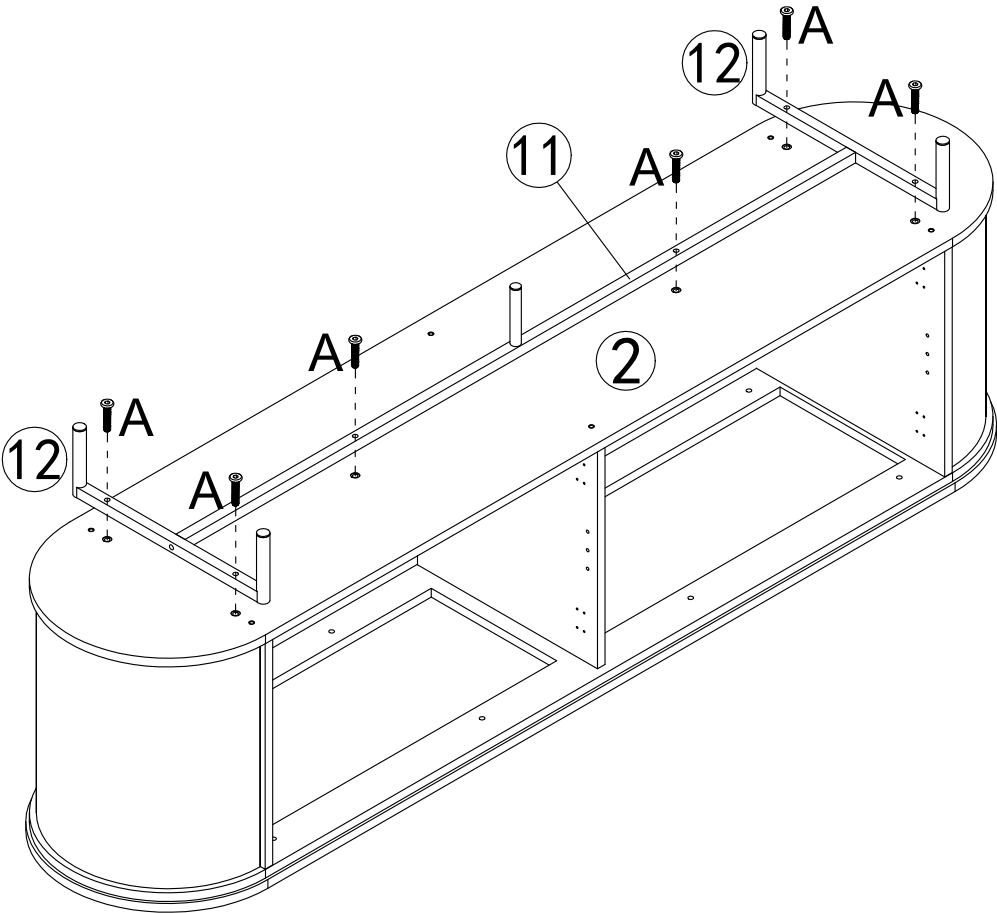

A	X6
	
M6x28mm	


8

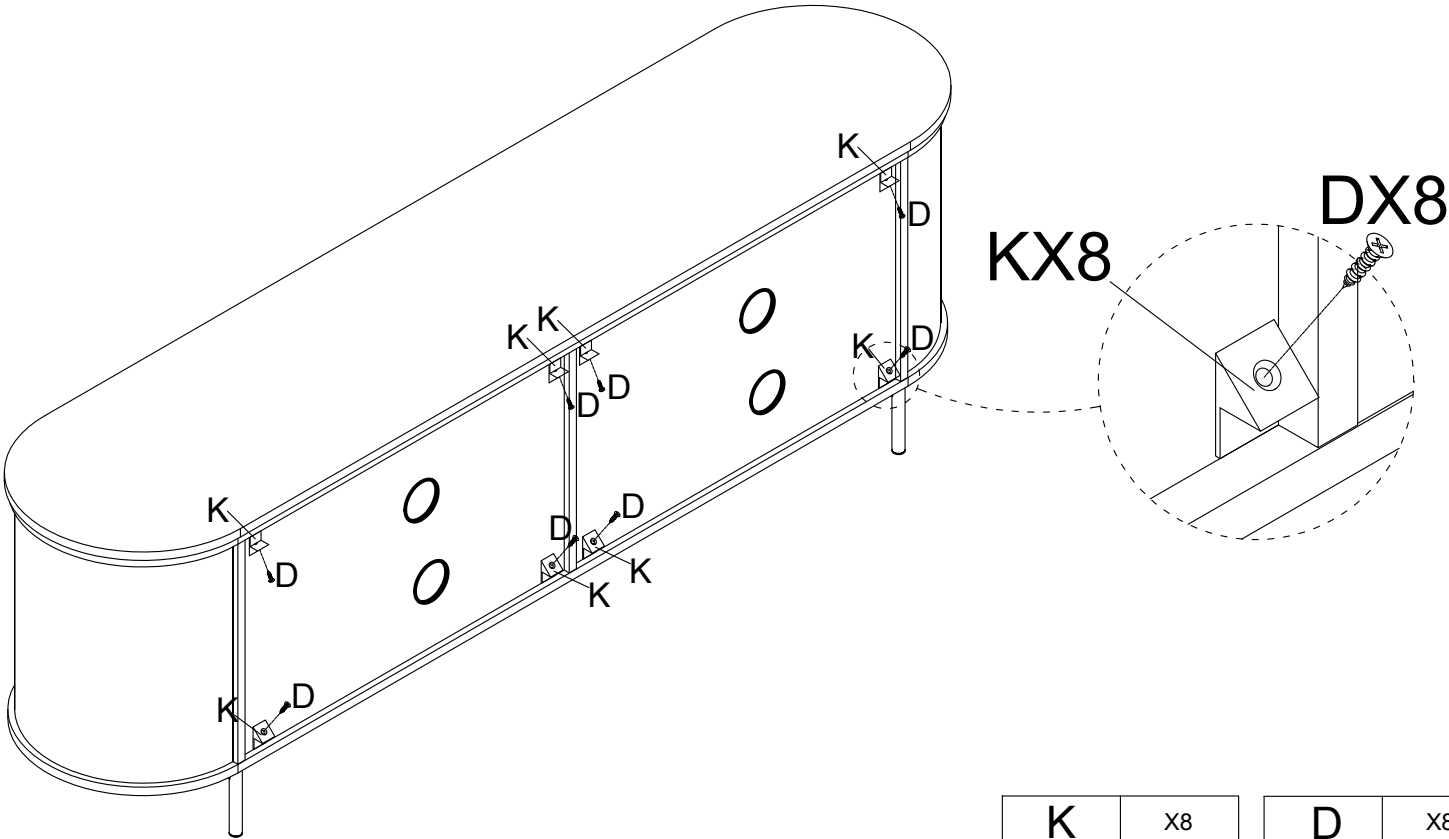


K	X8
	

D	X8
	
M3x16mm	






9

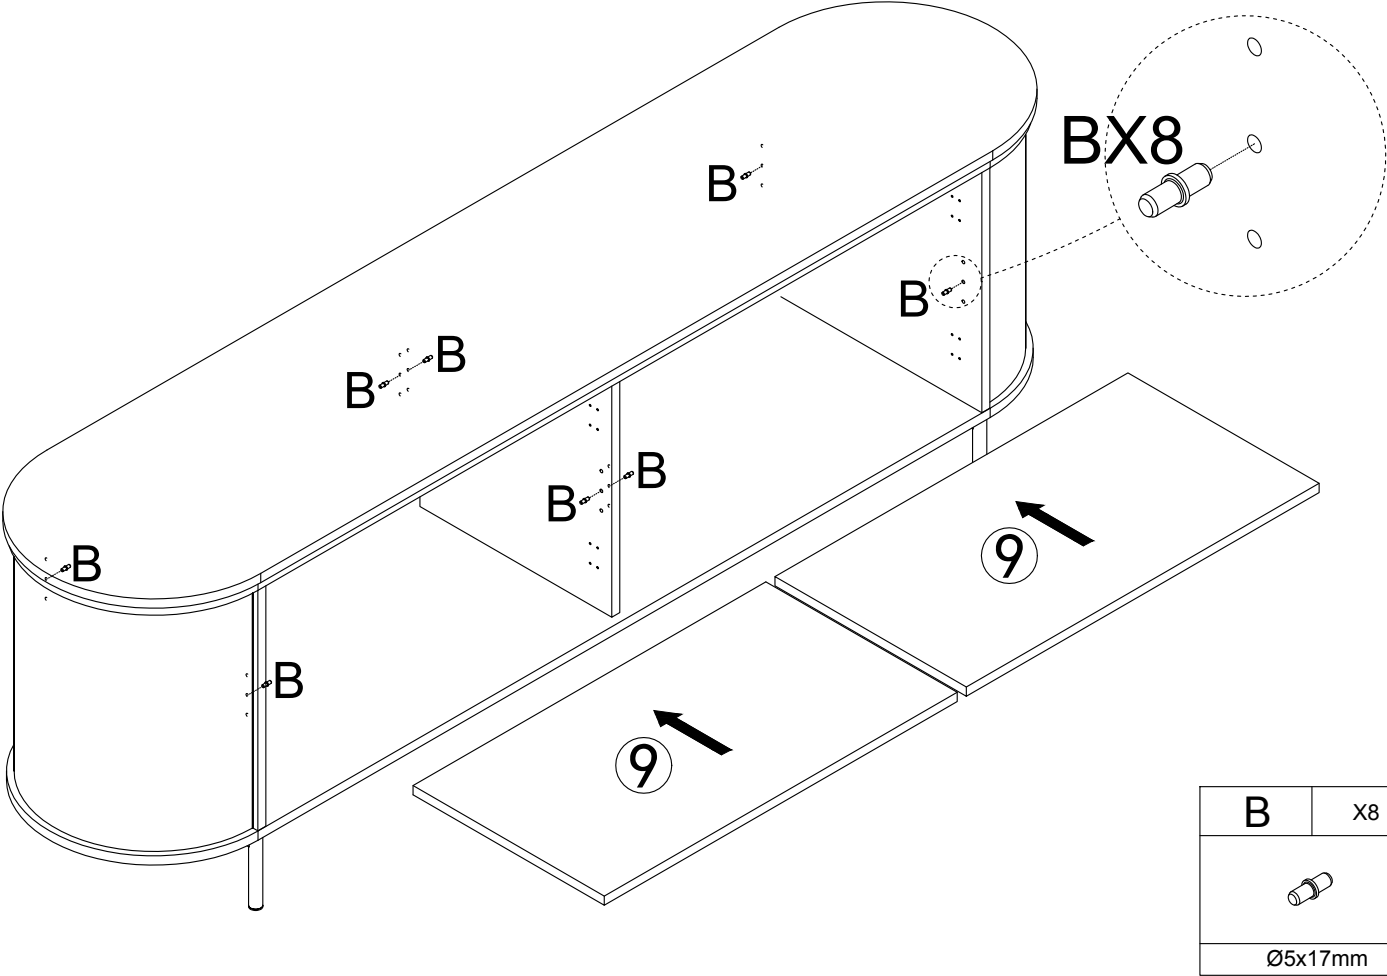

10





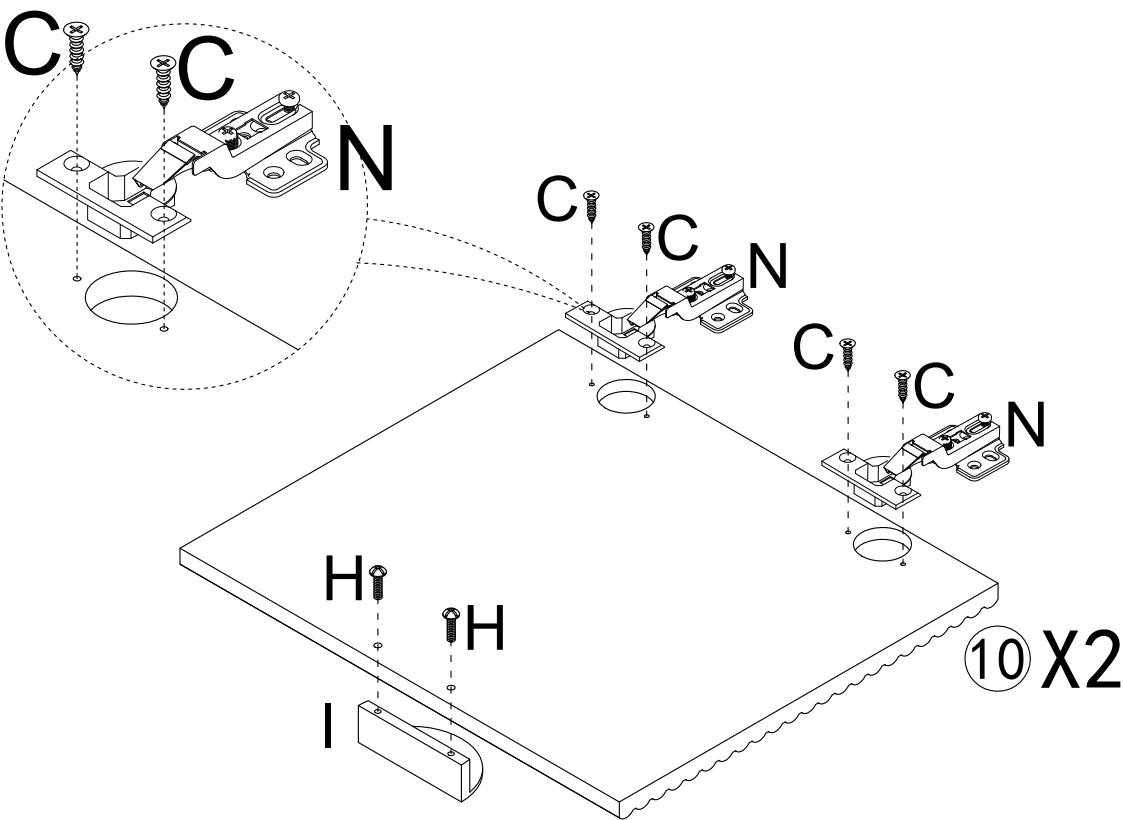


11

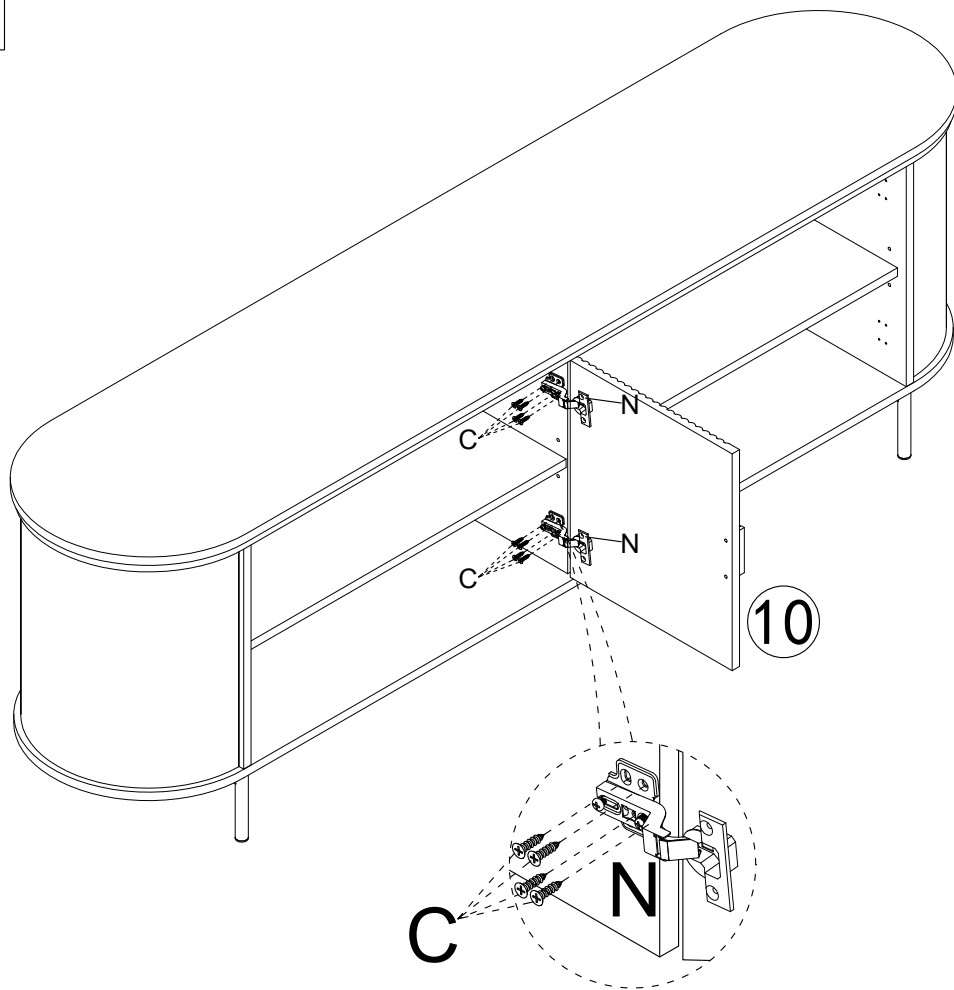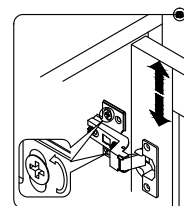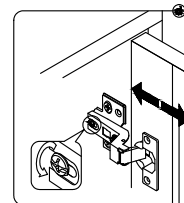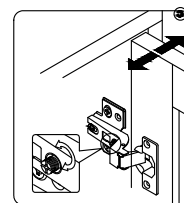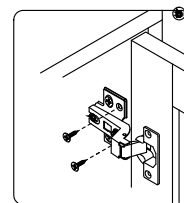


C	X8
	
M3.5x14mm	


12

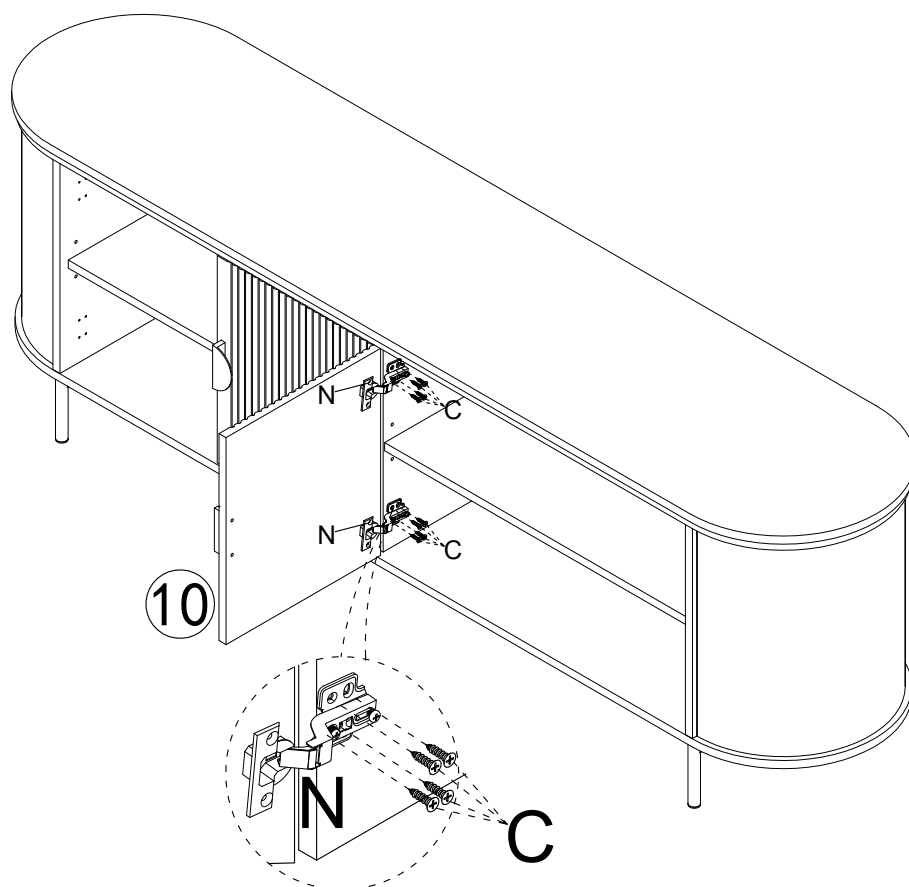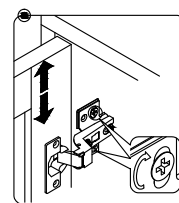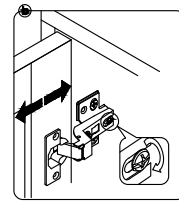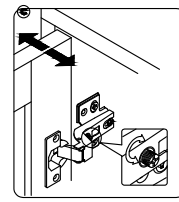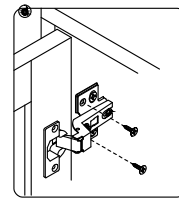



C	X8
	
M3.5x14mm	

13


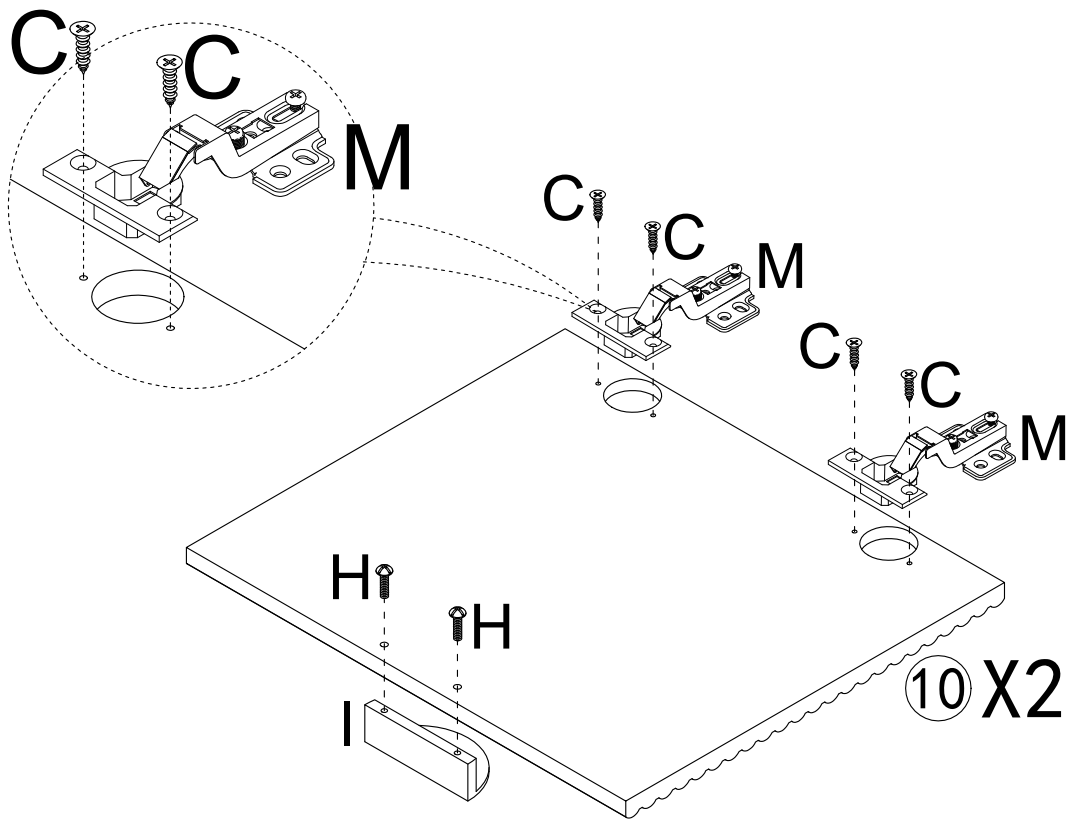


M	X4	H	X4	I	X2	C	X8
							
		M4x18mm				M3.5x14mm	

14

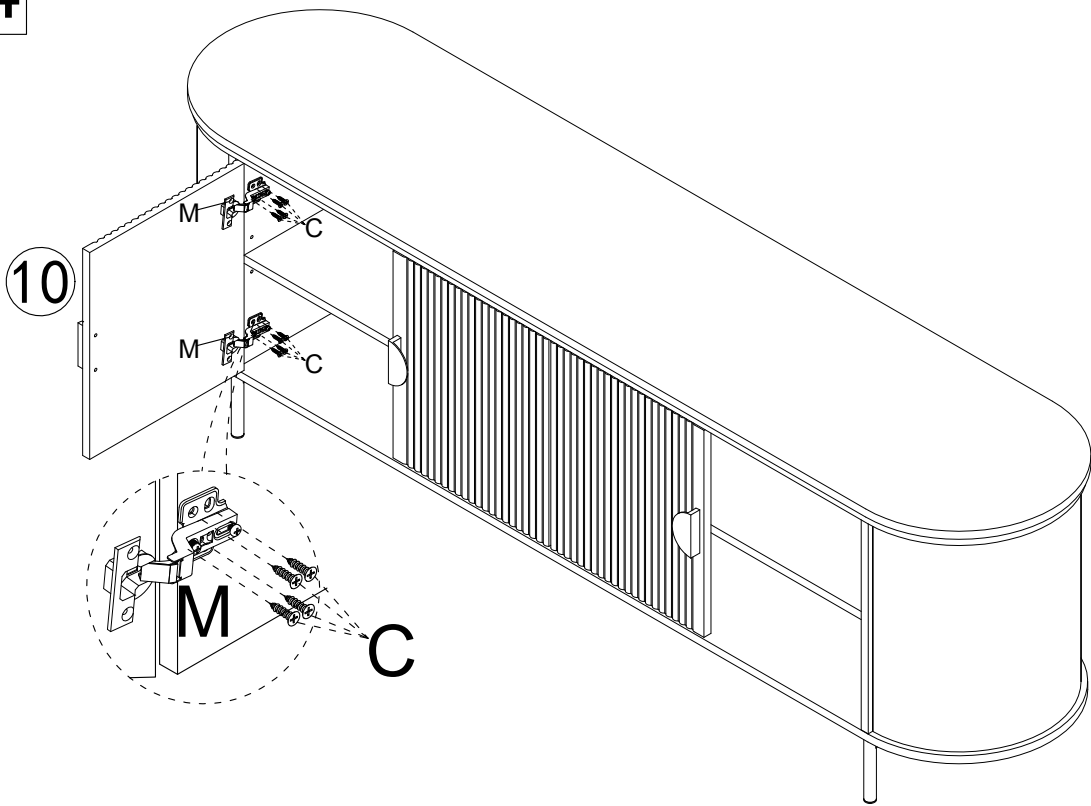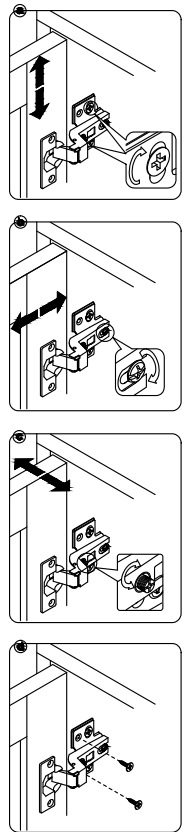

C	X8
	
M3.5x14mm	

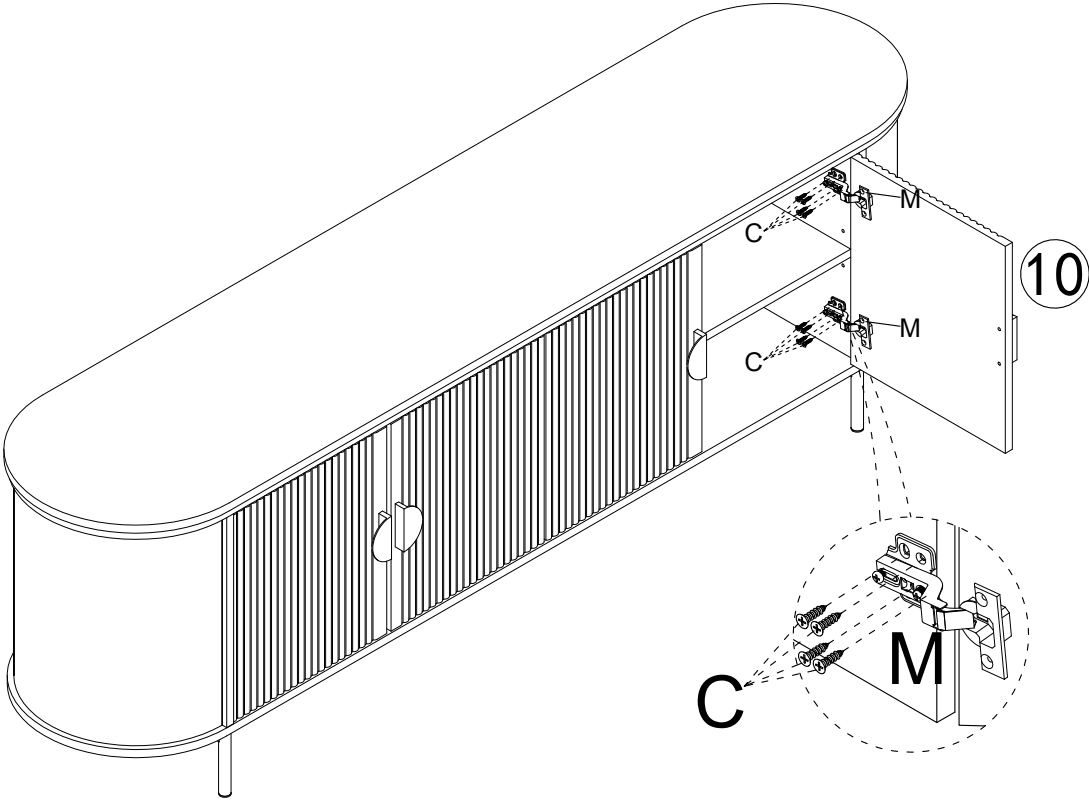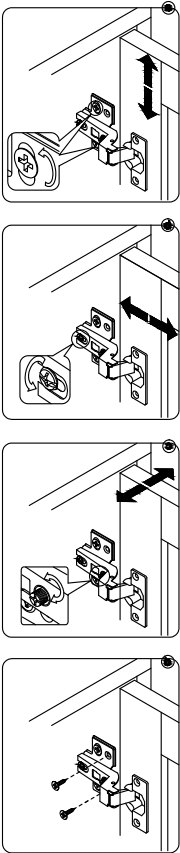

C	X8
	
M3.5x14mm	