


Screen Panel Archway Instruction Manual


I. Parameters of Accessories in Each Specification

Span x height	Upper side panel	Lower side panel with foot cap	Mesh	Elbow	Metal connection bare tube	Plastic connection two-way piece	Widened crossbar	Connection arm	Buckle	Punch tube
										
3.0m×2.5m	x2	x2	x2	x4	x6	x6	20*900mm x4	x9	x12	x1

II. Specification Display

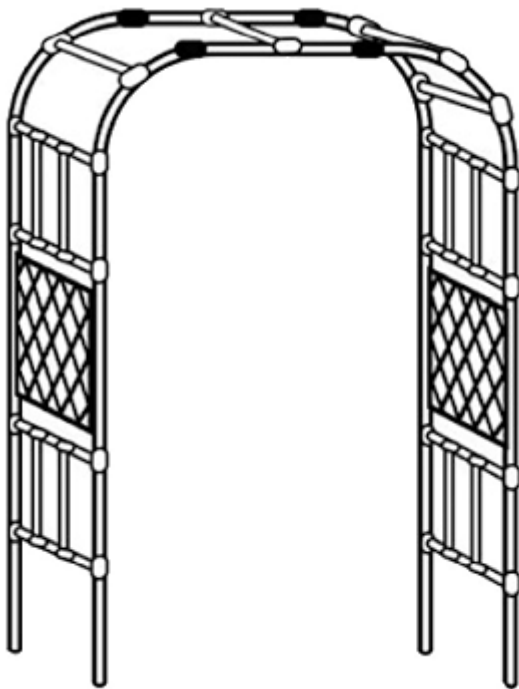


III. Installation Steps

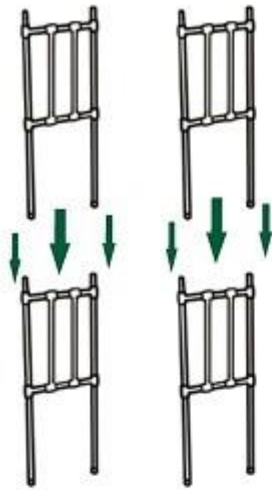


Step 1:

Splice the top and bottom side panels on the left and right sides.

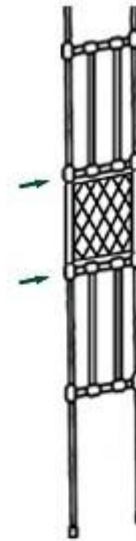


Step 2:

Attach the screen panels to the side panels with the buckles, each screen requires 6 buckles.

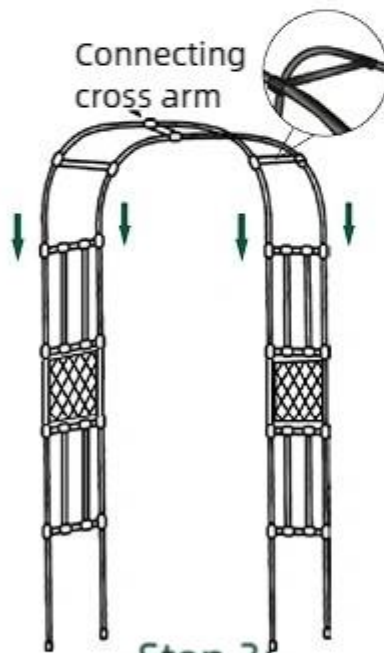

Step 3:

① Connect the elbow to the upper side plate ② Connect the two elbows through the bare tubes and put on the plastic two-way pieces ③ Reinforce the two elbows with the connecting arms.

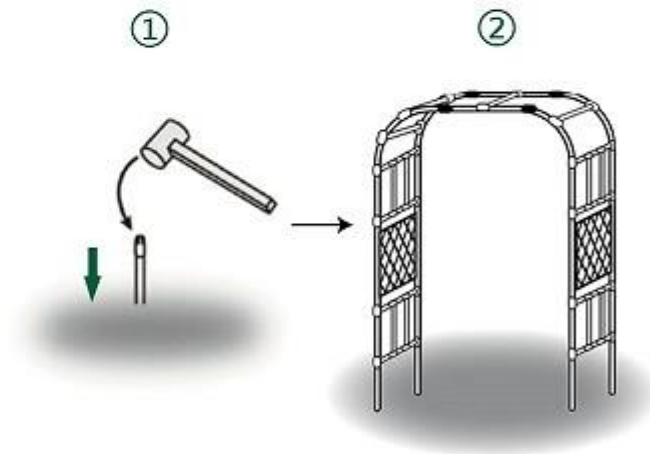

Step 4:

① Punch the punch tube into the soil for 25-30cm, and then pull it out. ② Insert the four feet of the arch into the four holes made by the punch tube.