


# Item # : LM020-SR59

## Assembly Instructions

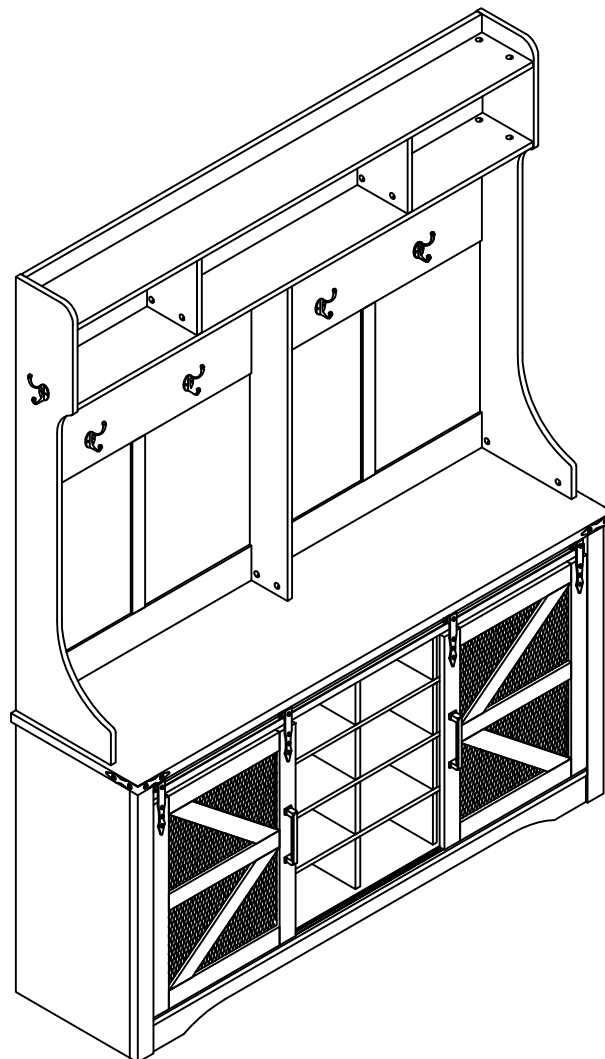


Customer Service E-mail Address: [LINGMU1703583851@163.com](mailto:LINGMU1703583851@163.com)

NOTE: There are two packages A and B for this item. Please wait patiently if you only receive one for now


Revised 18/04/2023

# General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

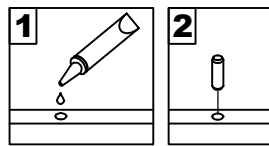


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

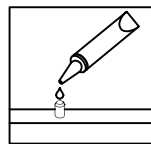


- VI. A Phillips head screwdriver is required for the assembly of this product .

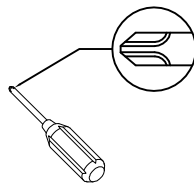


- VII. Power tools should not be used to assemble this product .

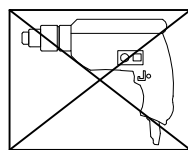


- VIII. Concealed hinges are three-way adjustable.

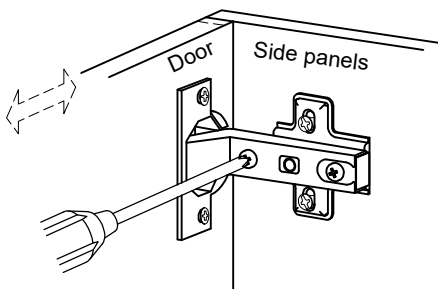

Horizontal  
by screw adjustment

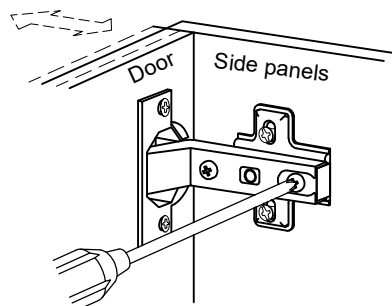


In-and-Out  
by loosening the hinge-arm  
mounting screw or via cam  
adjustment

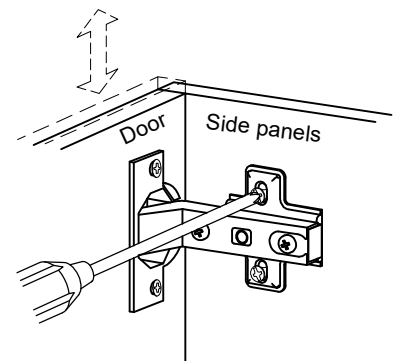





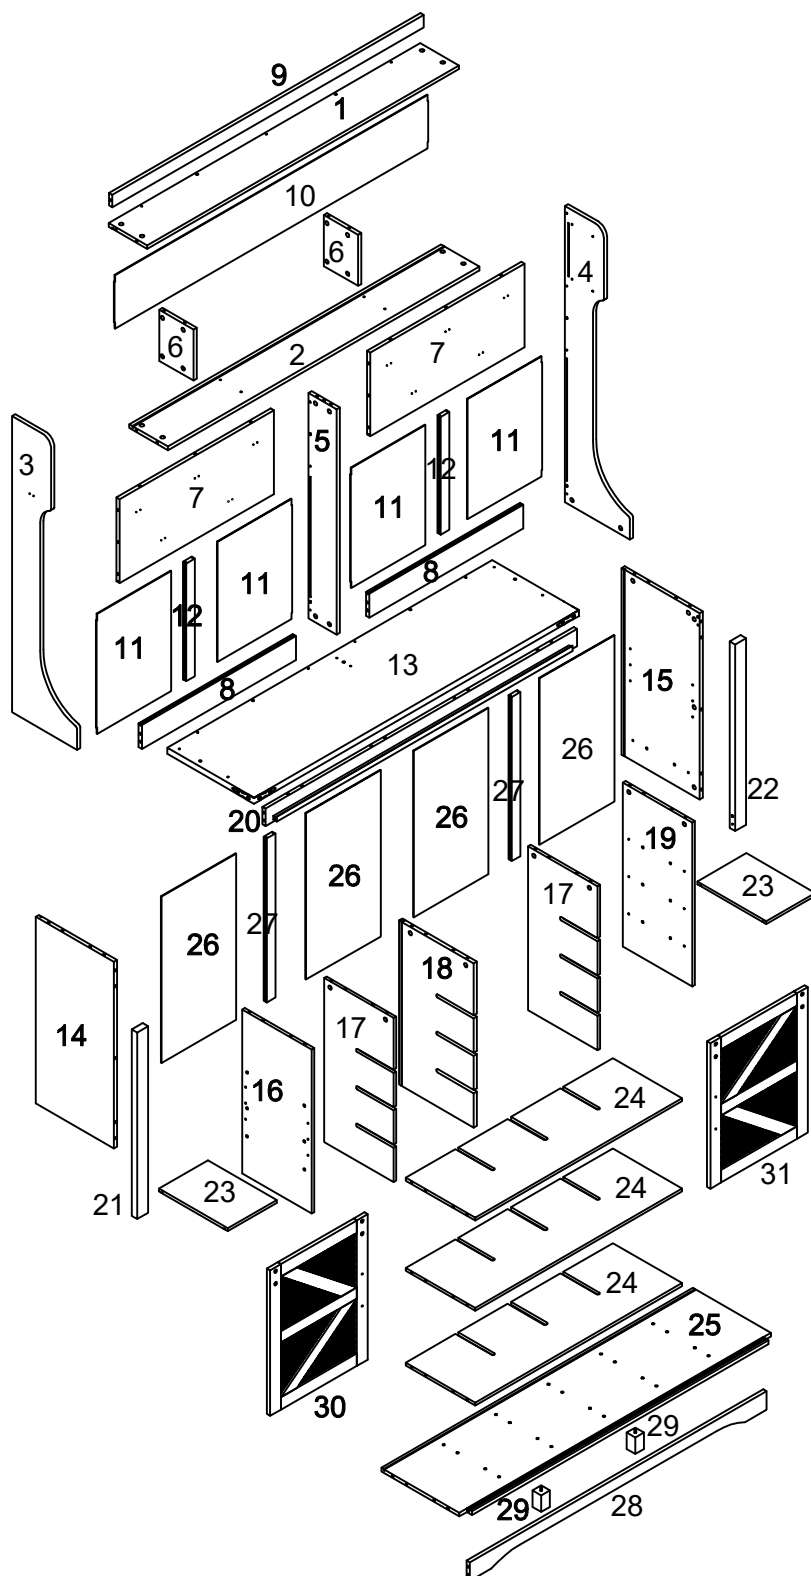










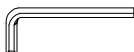







Vertical  
Via slots in the mounting  
plate or via cam adjustment

# Parts List



## Hardware List


A		Ø8x30mm	Wooden dowel	70 pcs
B		Ø6x35mm	Cam lock	78 pcs
C		Ø15x11mm	Cam lock	70 pcs
D		Ø15x9mm	Cam lock	8 pcs
E		Ø30mm	Sticker	78 pcs
F		Ø6x50mm	Bolt	10 pcs
G		M 4	Hex Key	1 pc
H		M6*12mm	Screw	6 pcs
I			Angular Code	3 pcs
J			Pulley	4 pcs
K		Ø6x12mm	Screw	8 pcs
L			Iron Sheet	4 pcs
M		Ø4*12mm	Screw	8 pcs
N			Hold hands	2 pcs
O		Ø4x19mm	Screw	4 pcs
P		Ø8x5x16mm	Shelf support pin	8 pcs
Q			Plastic wedge	30 pcs
R		Ø3x17mm	Screw	30 pcs
S		Ø4x32mm	Screw	15 pcs
T		Ø3x12mm	Screw	24 pcs
U			Clothes hanging pieces	12 pcs
V			Small White Glue	2 pcs

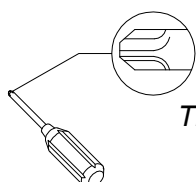


Philips head screwdriver required for assembly  
(not included)


*The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.*


# Step 1

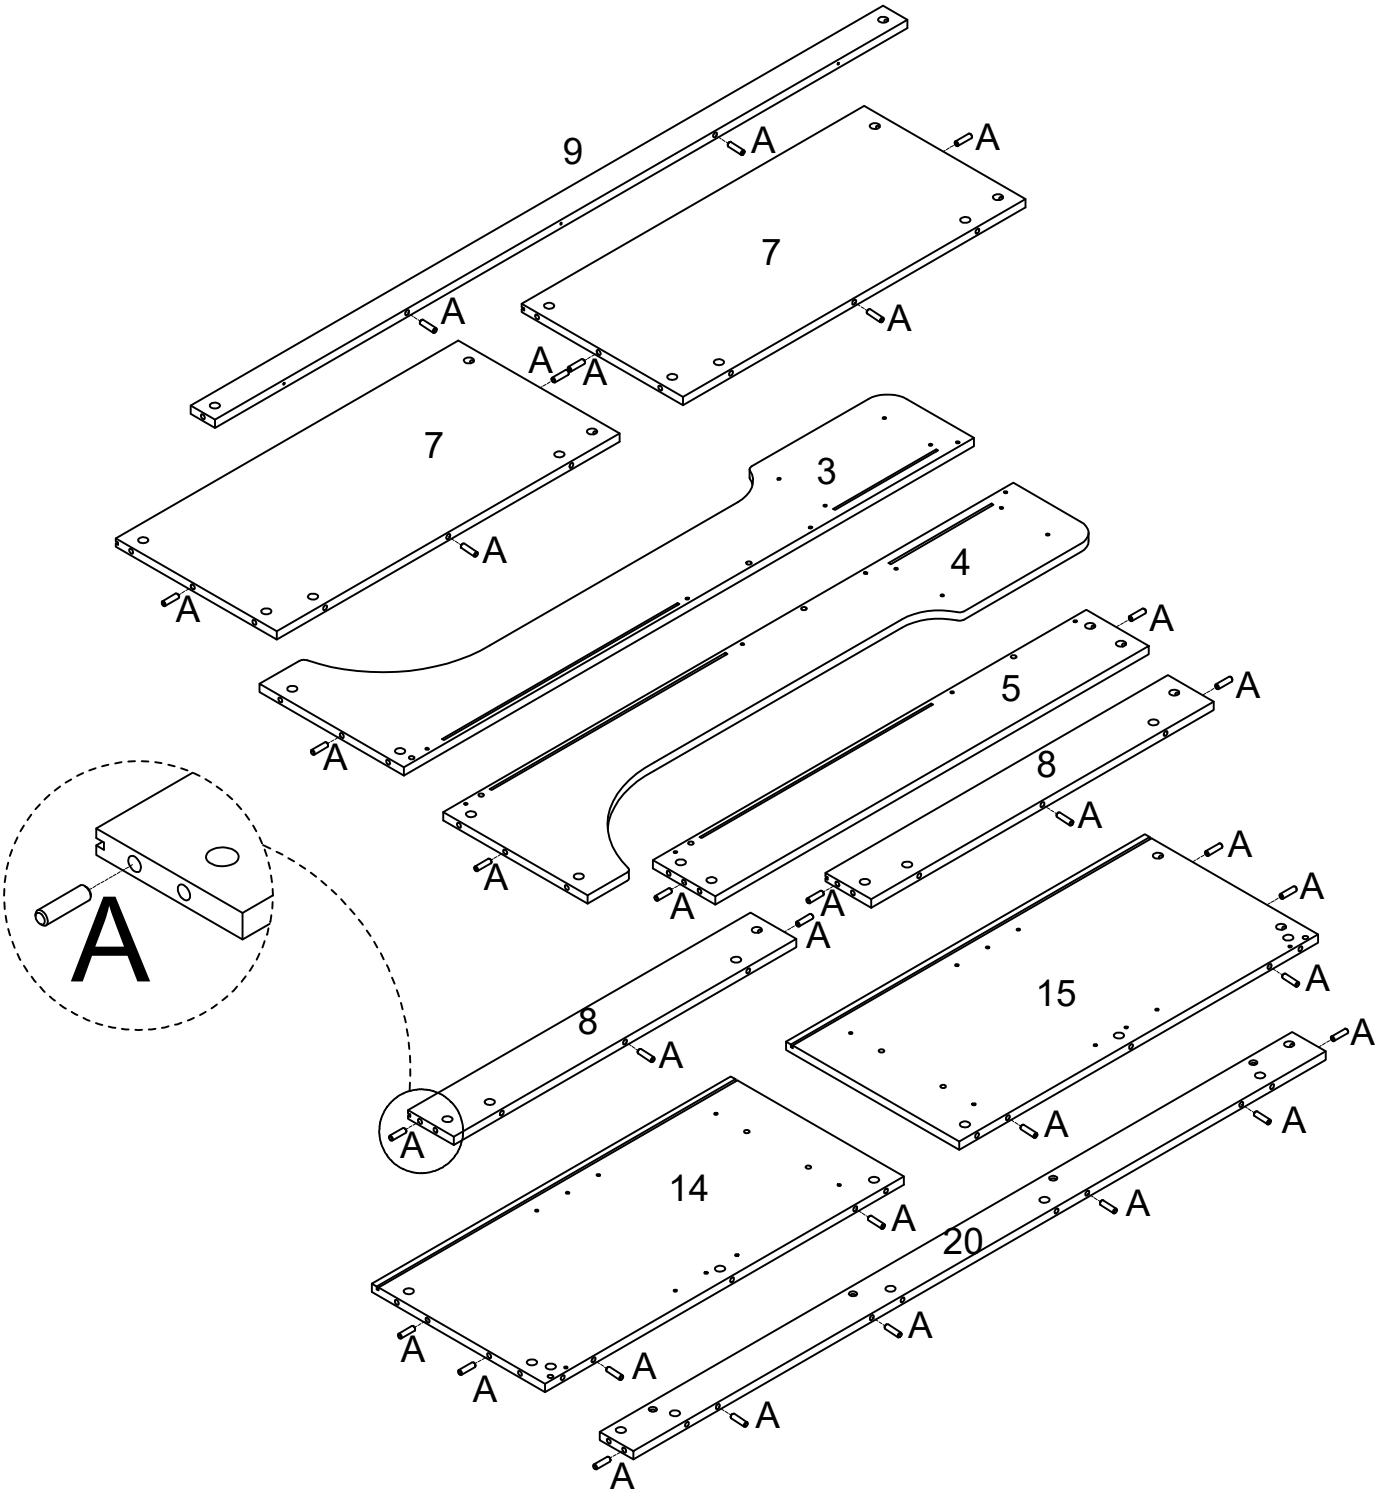


A

X32

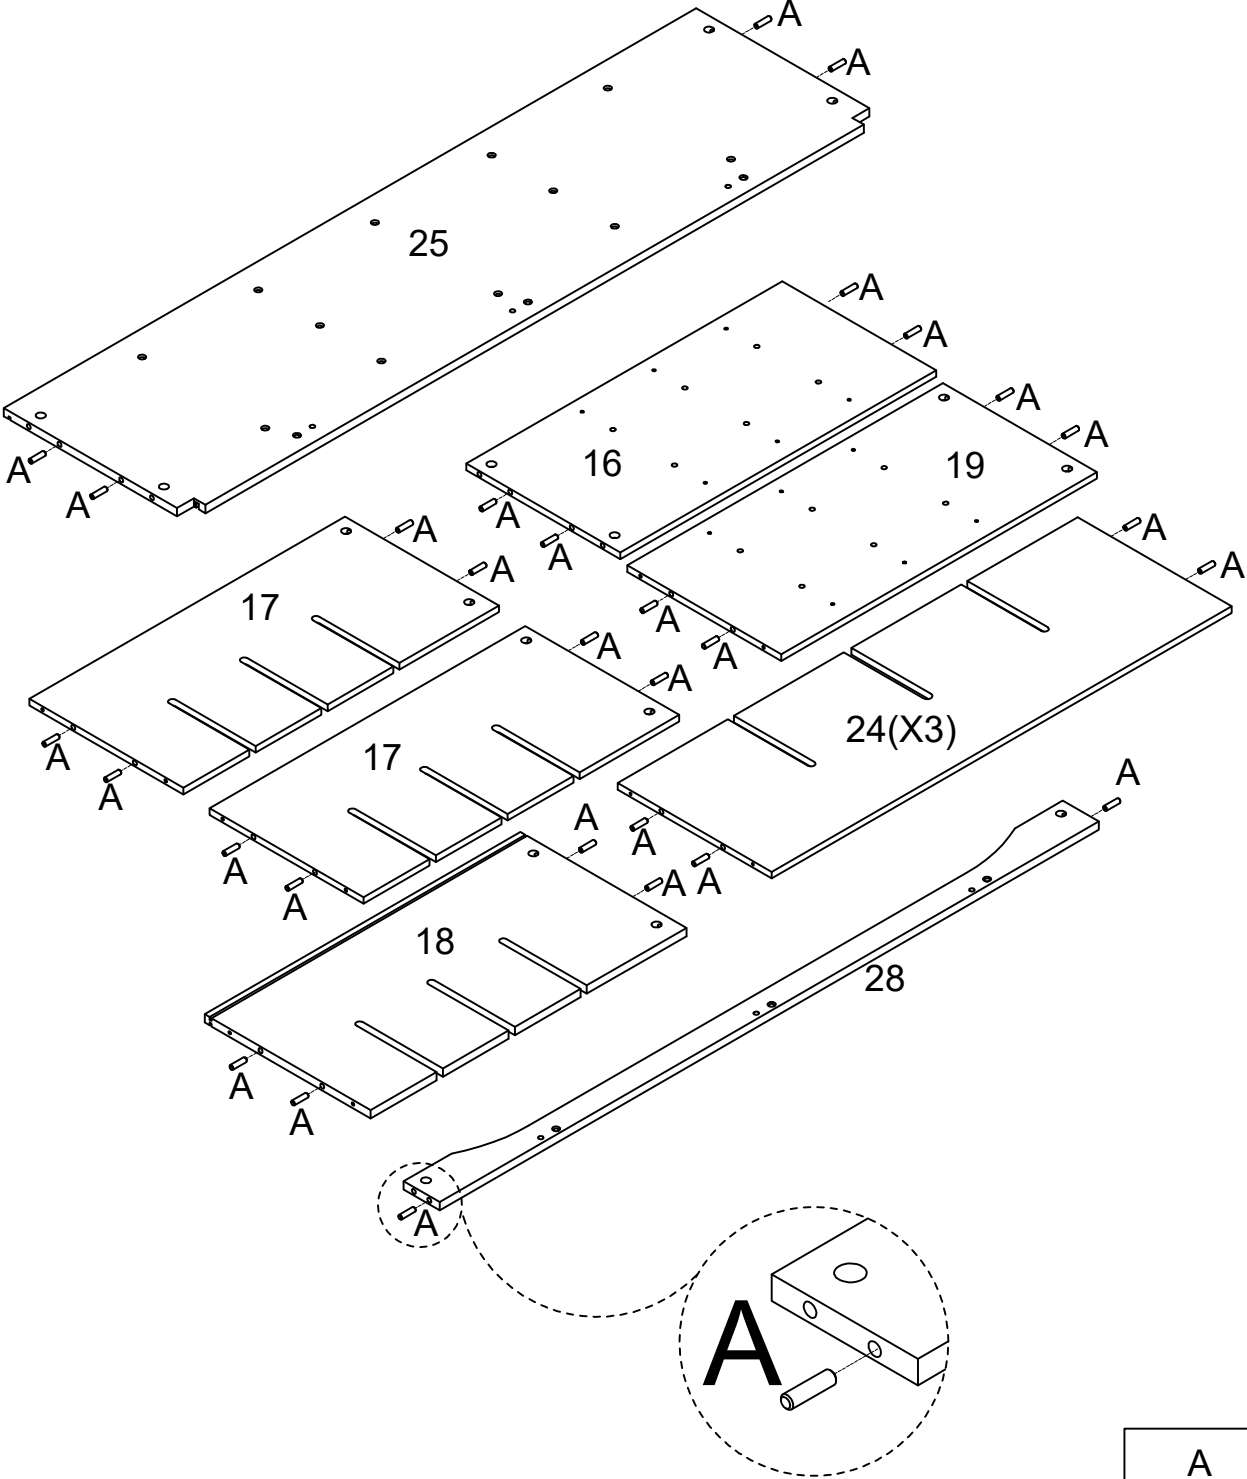
# Step 2




A

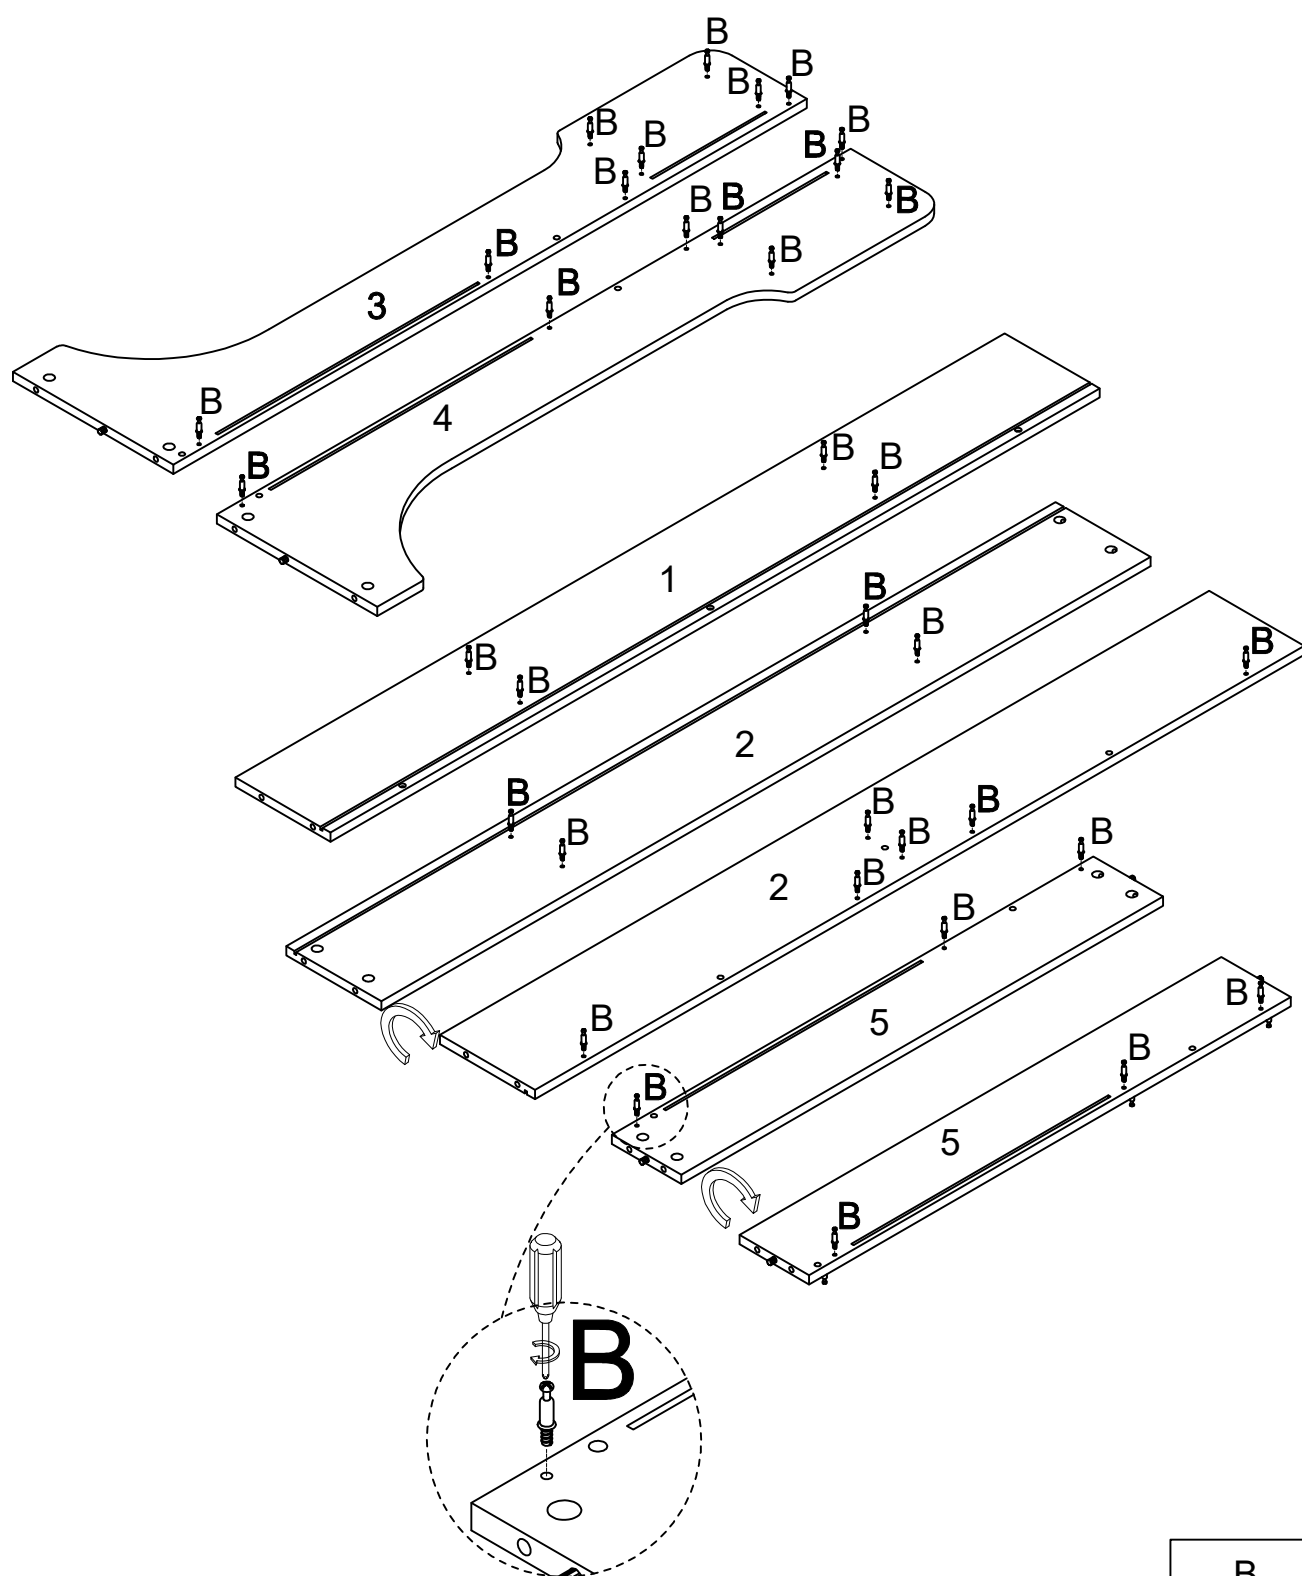X38


# Step 3



B

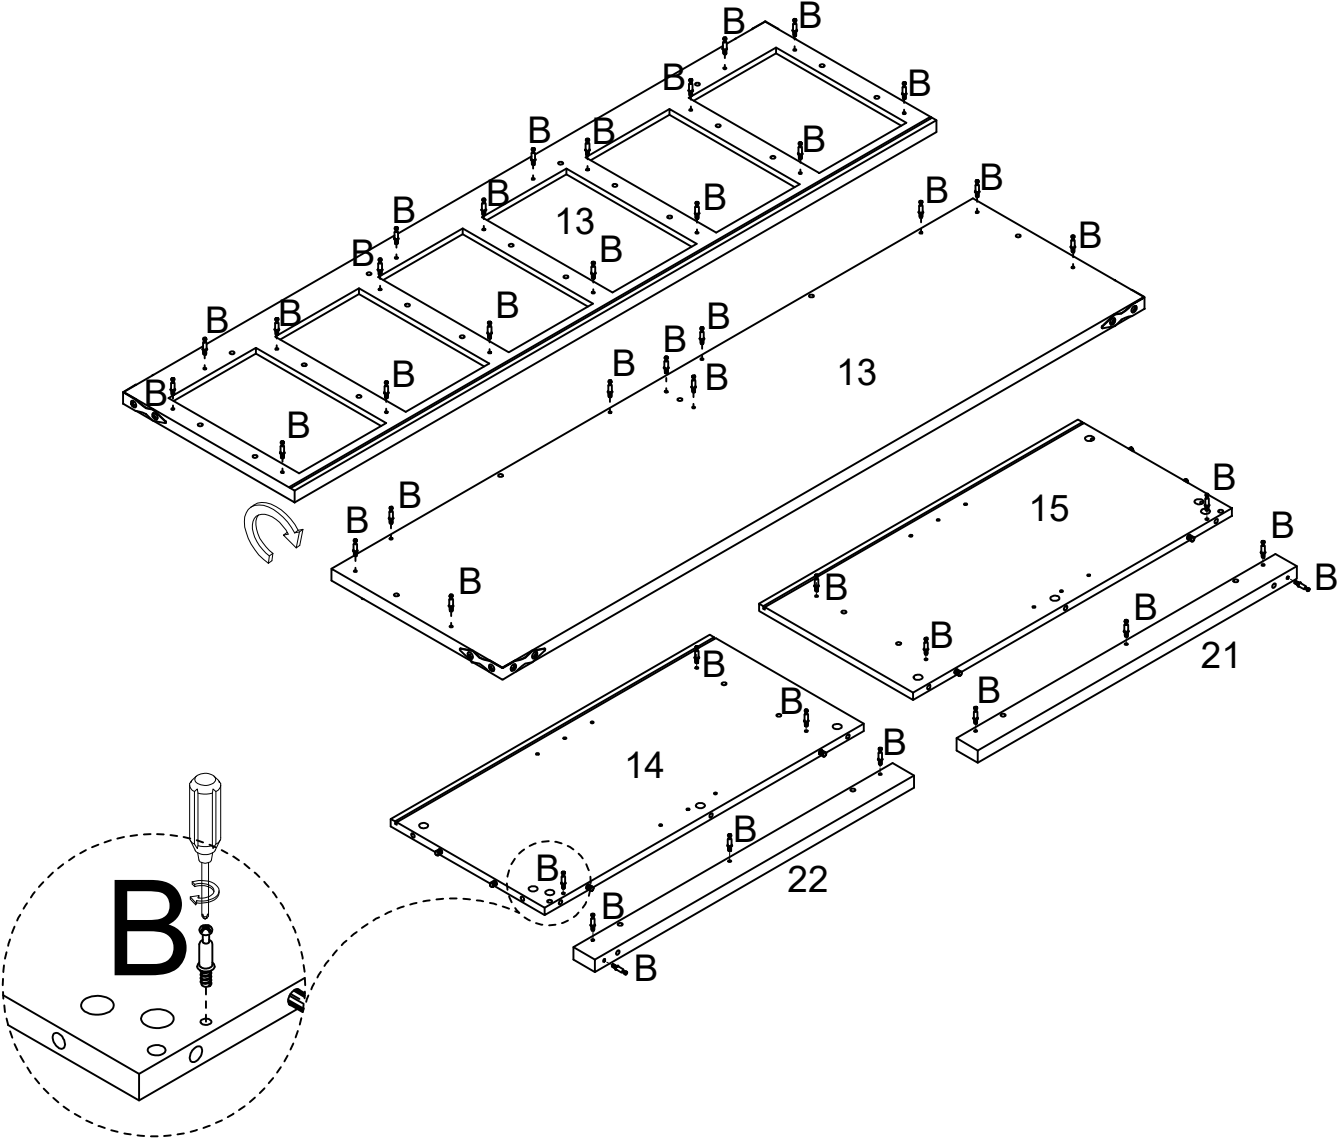X36



# Step 4




B

X42

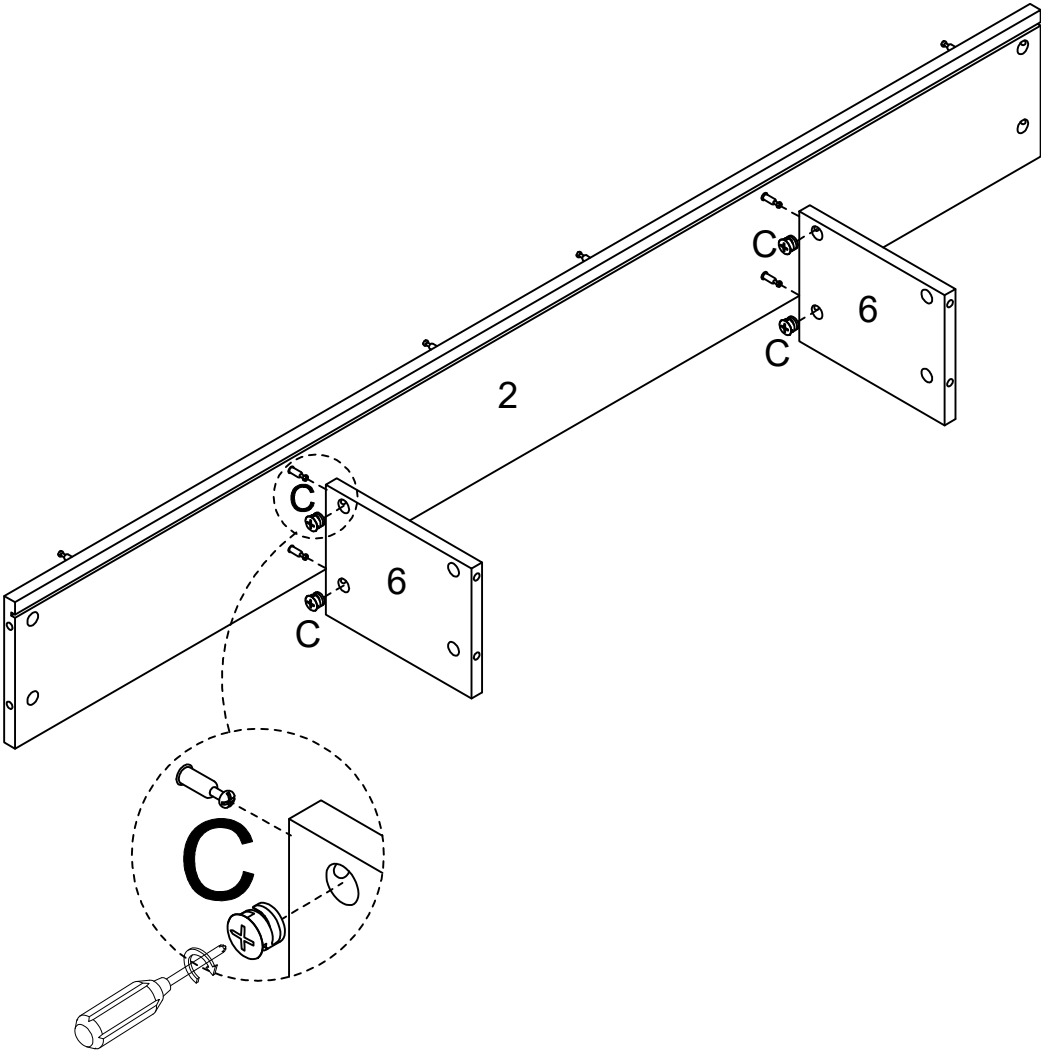
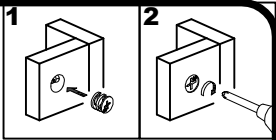



Step 5





C

X4

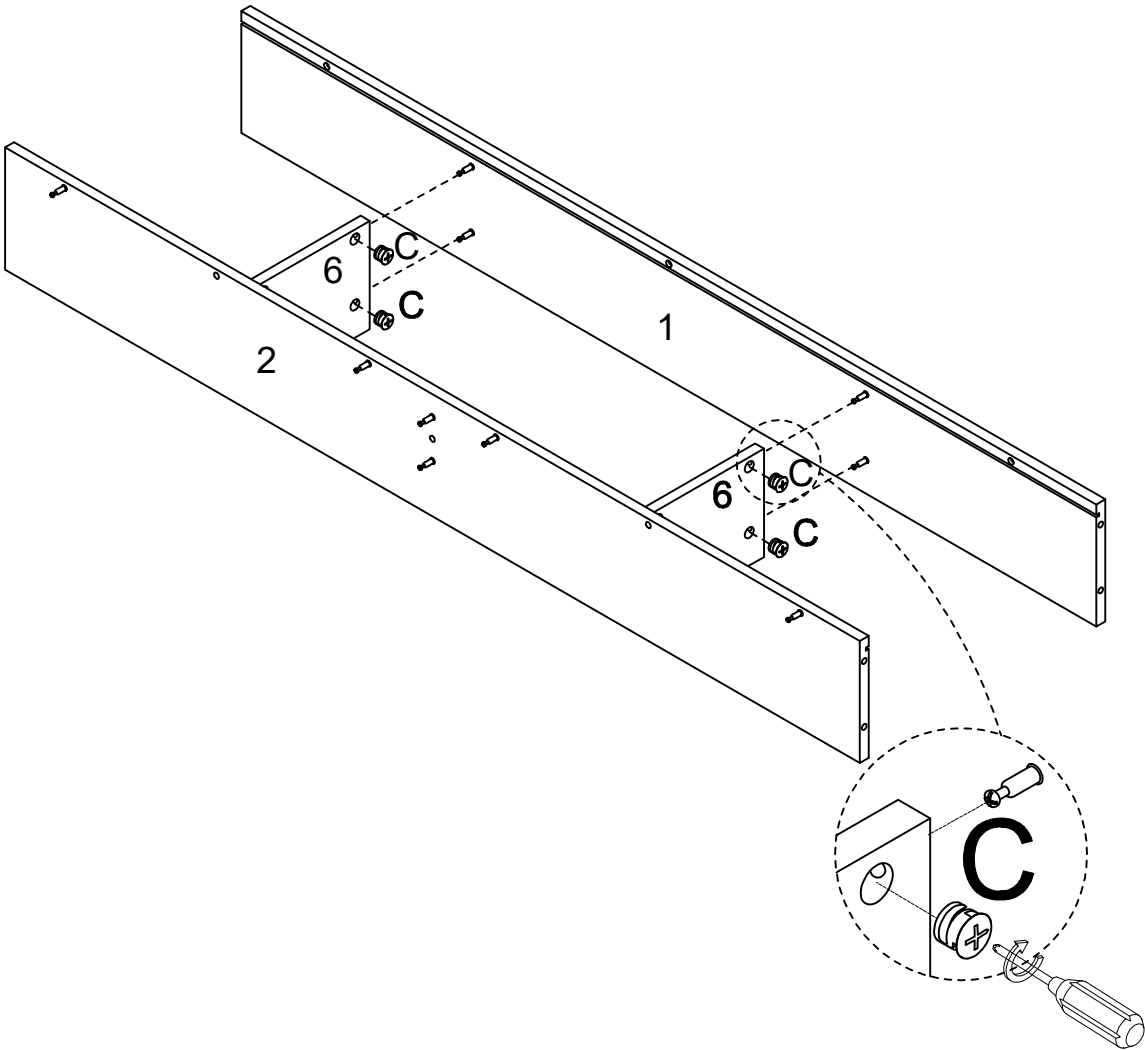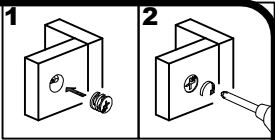
# Step 6





C

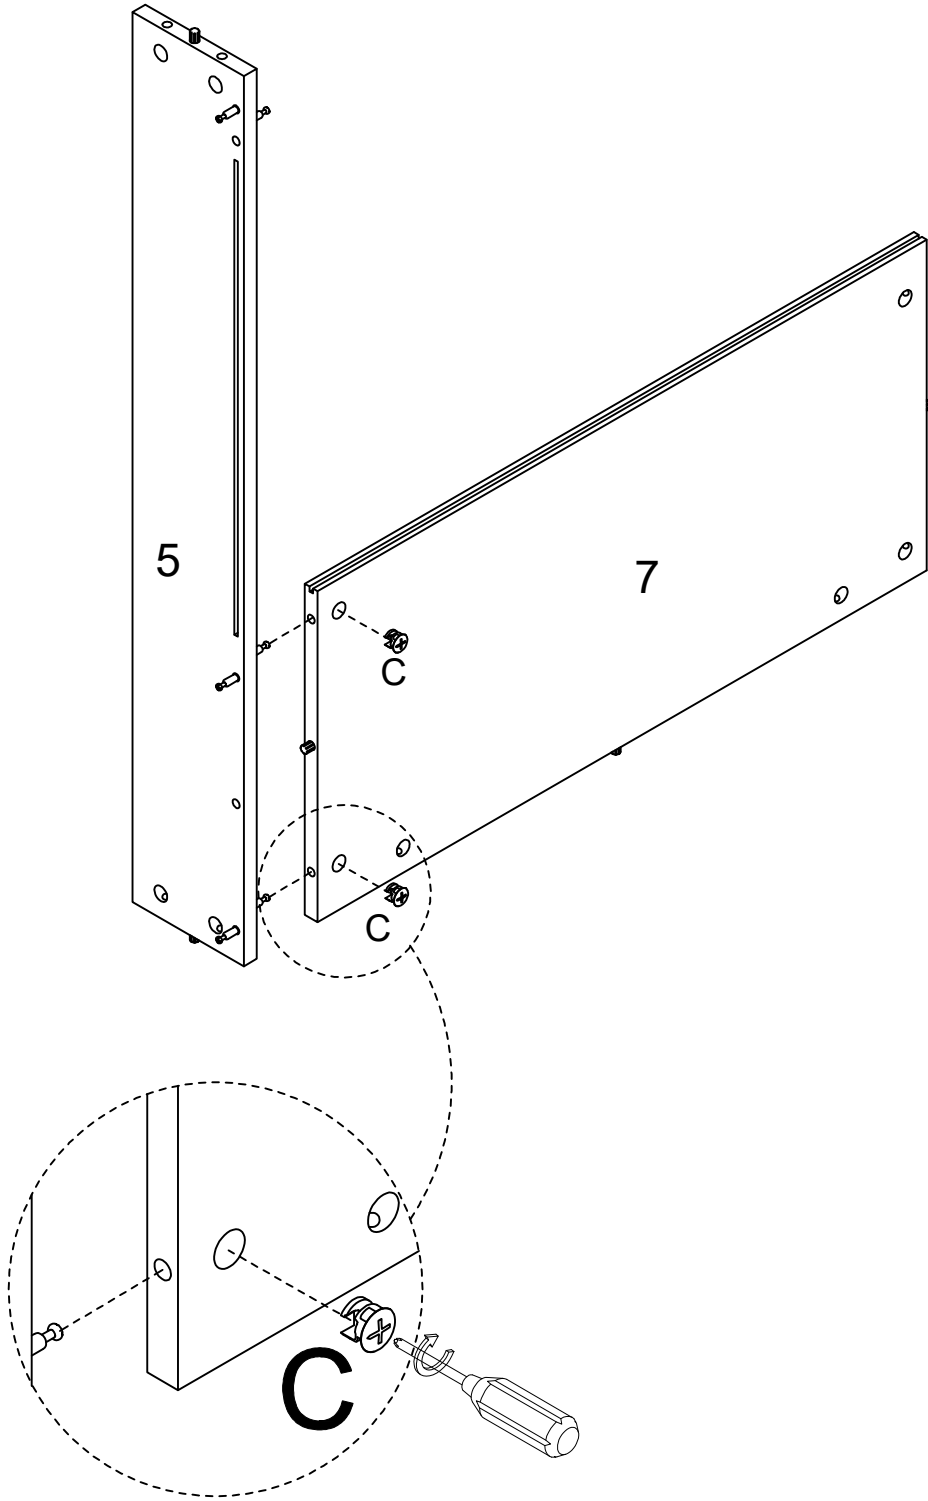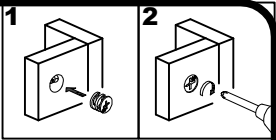X4


Step 7





C

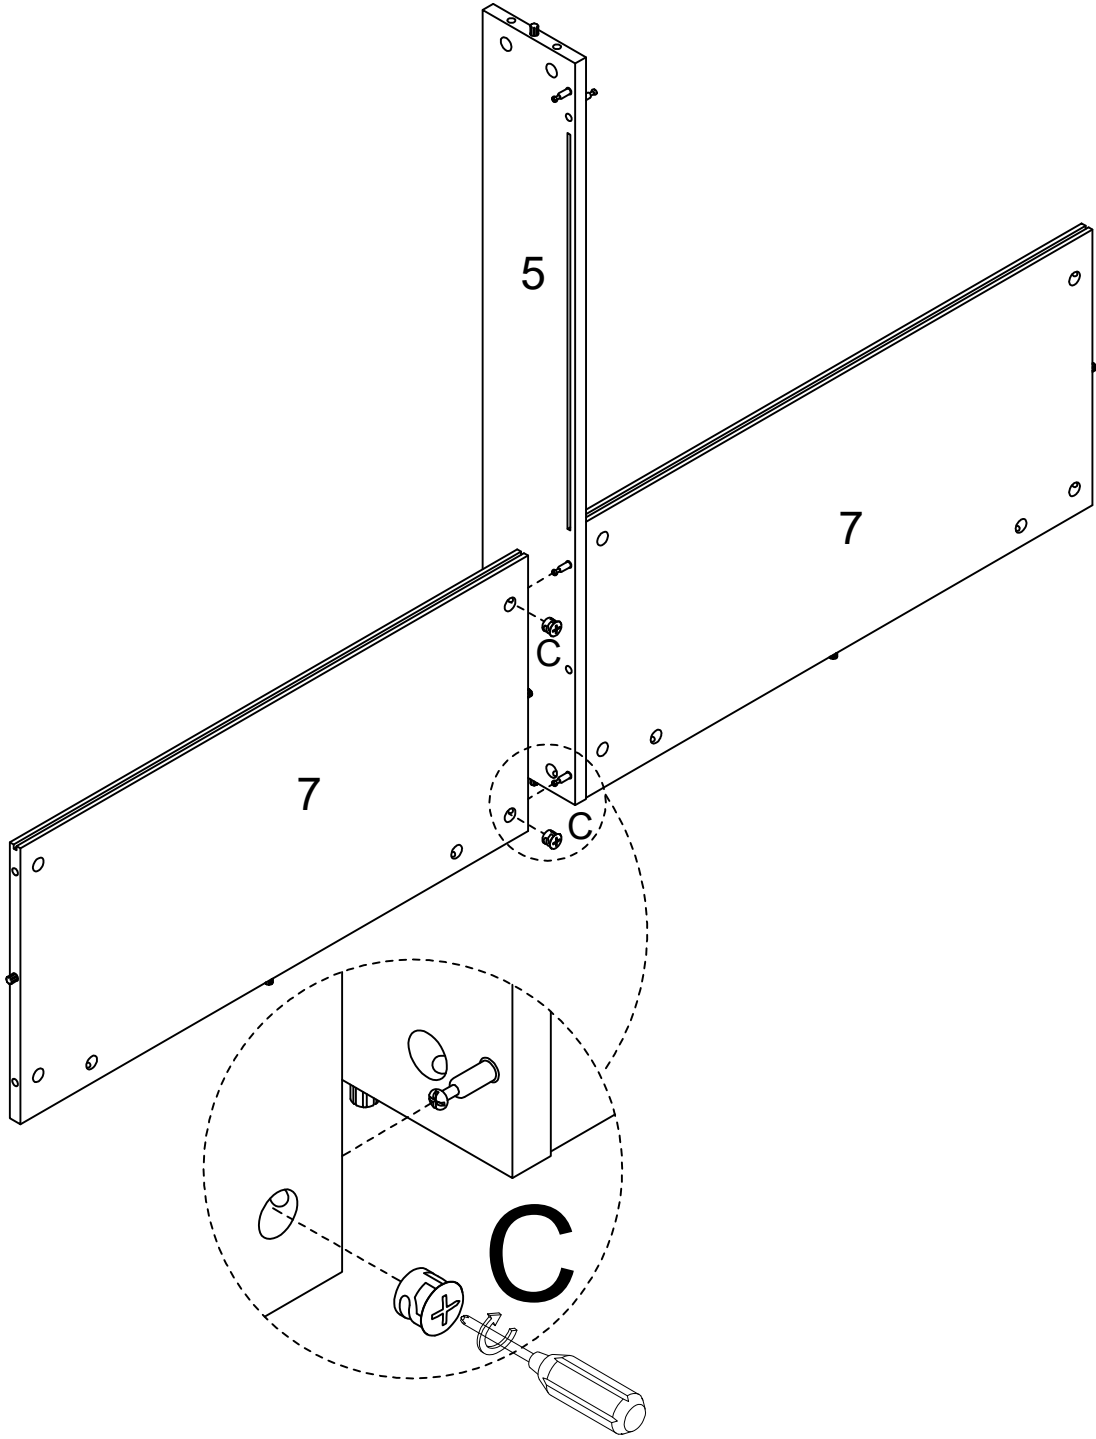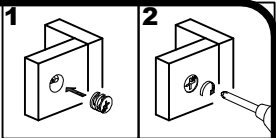X2


# Step 8





C

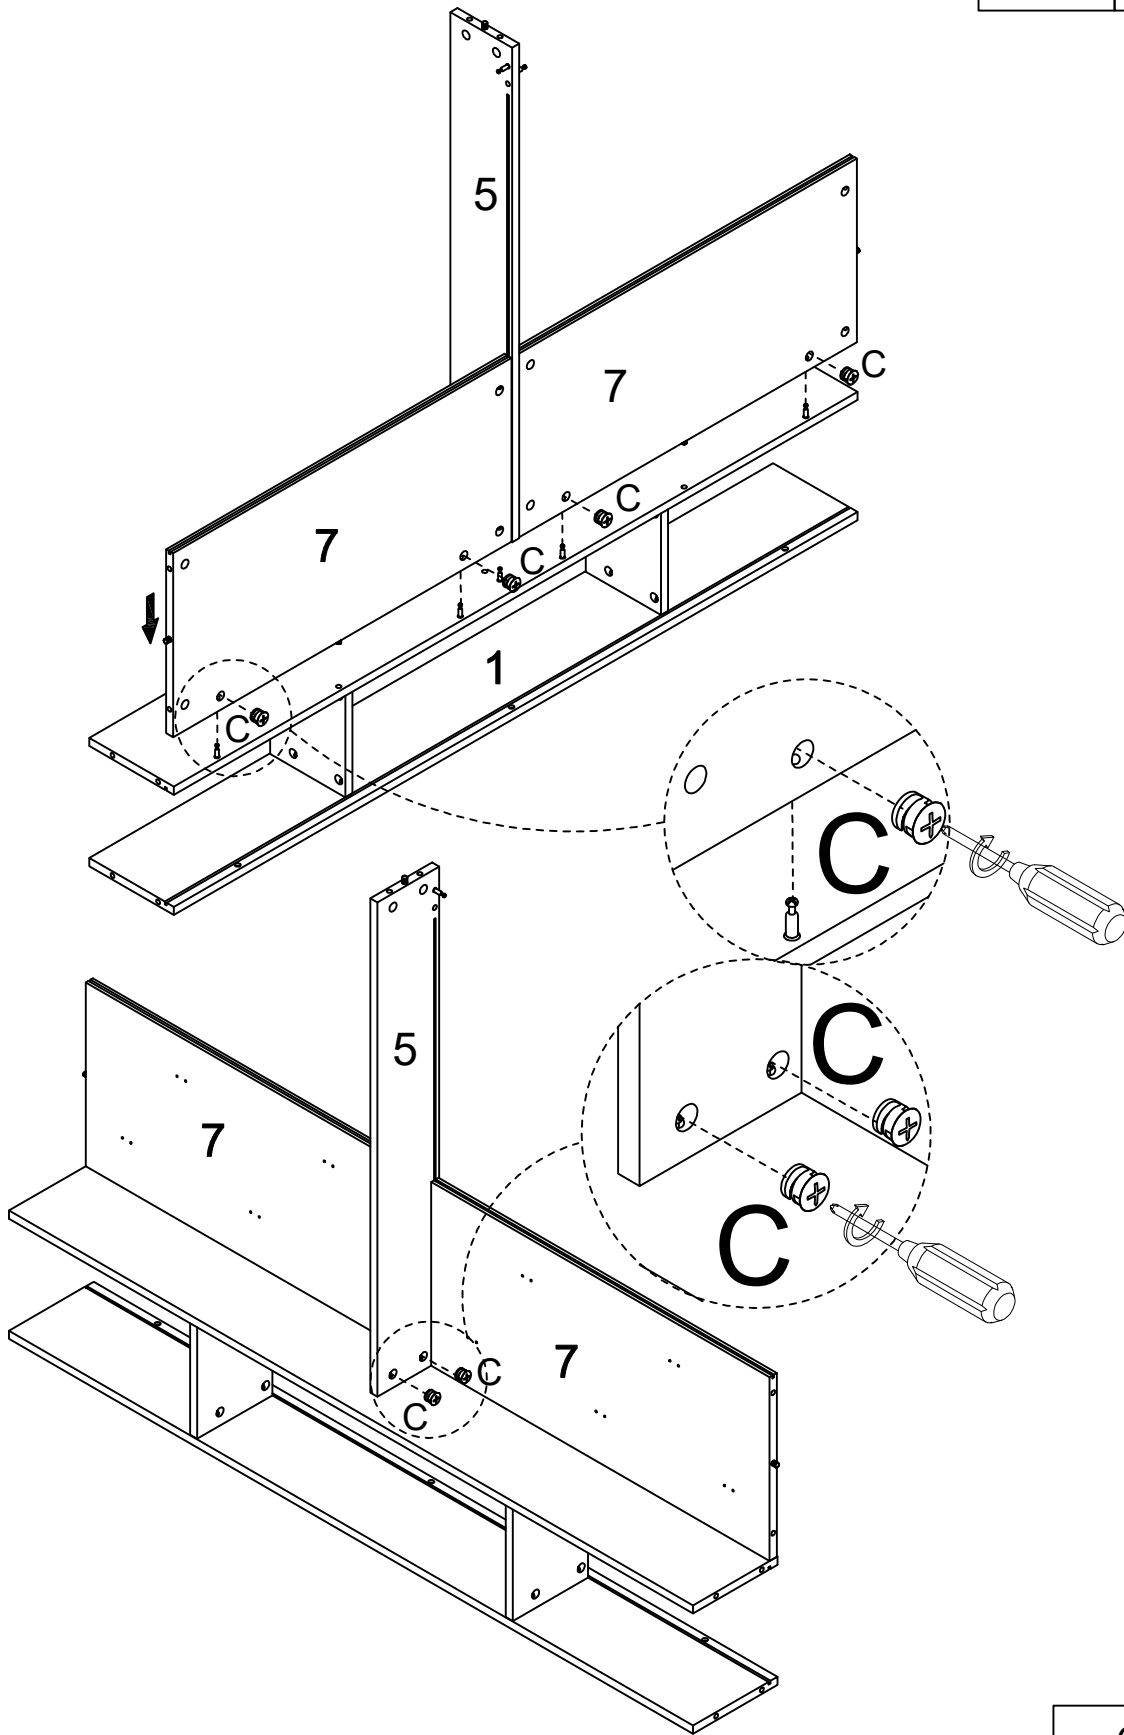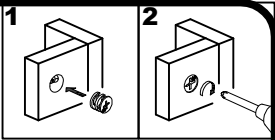X2


# Step 9




C

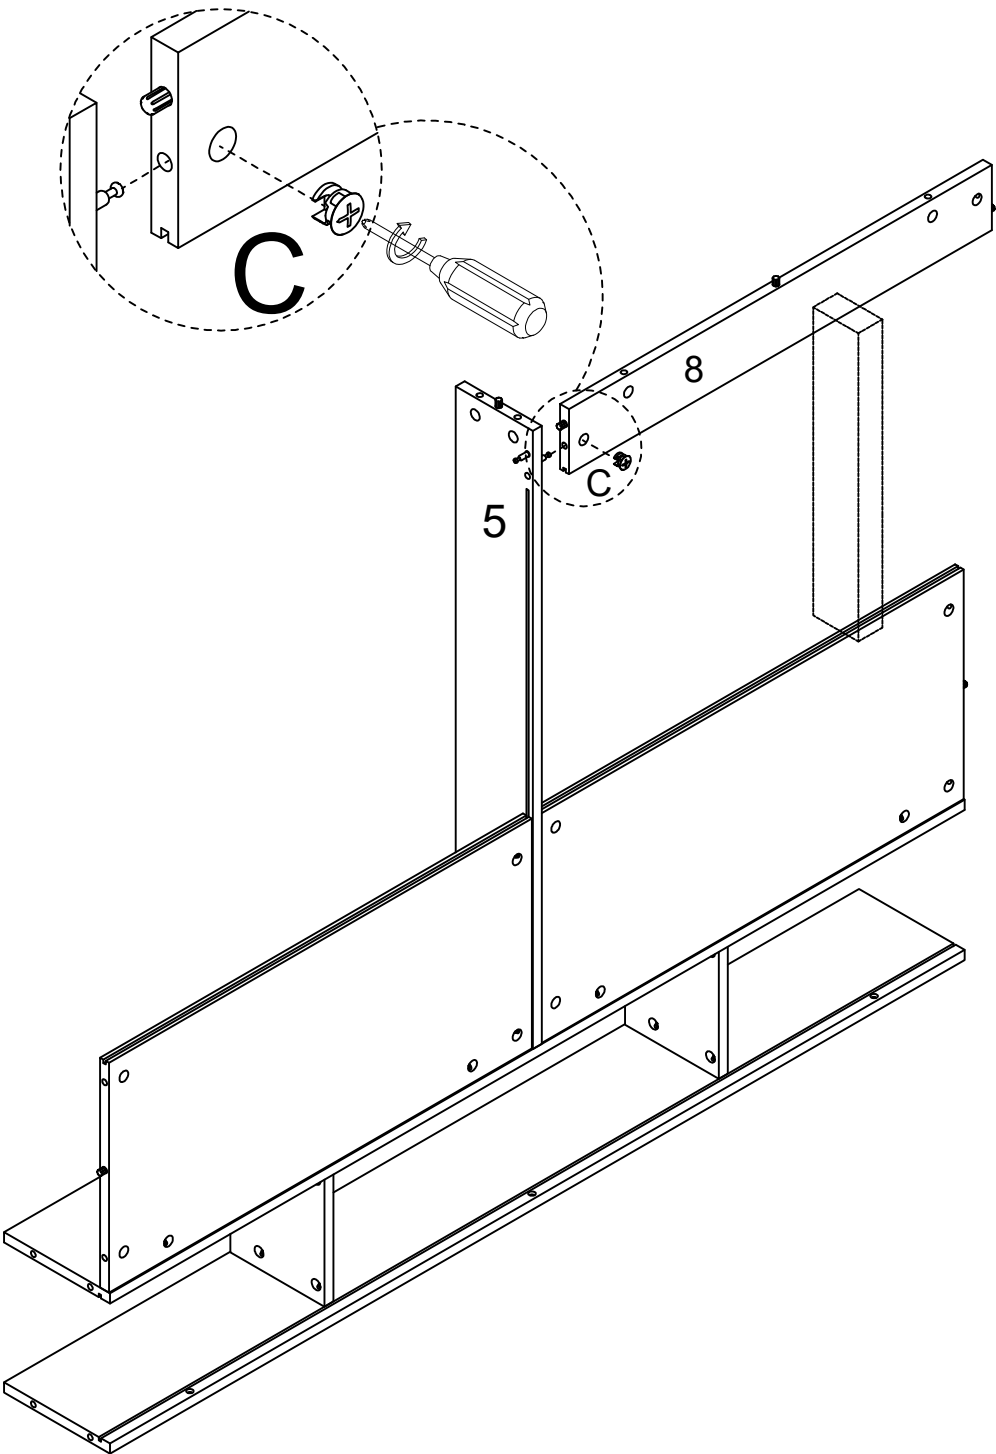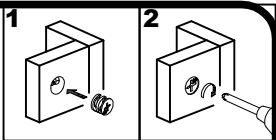X6


# Step 10




C

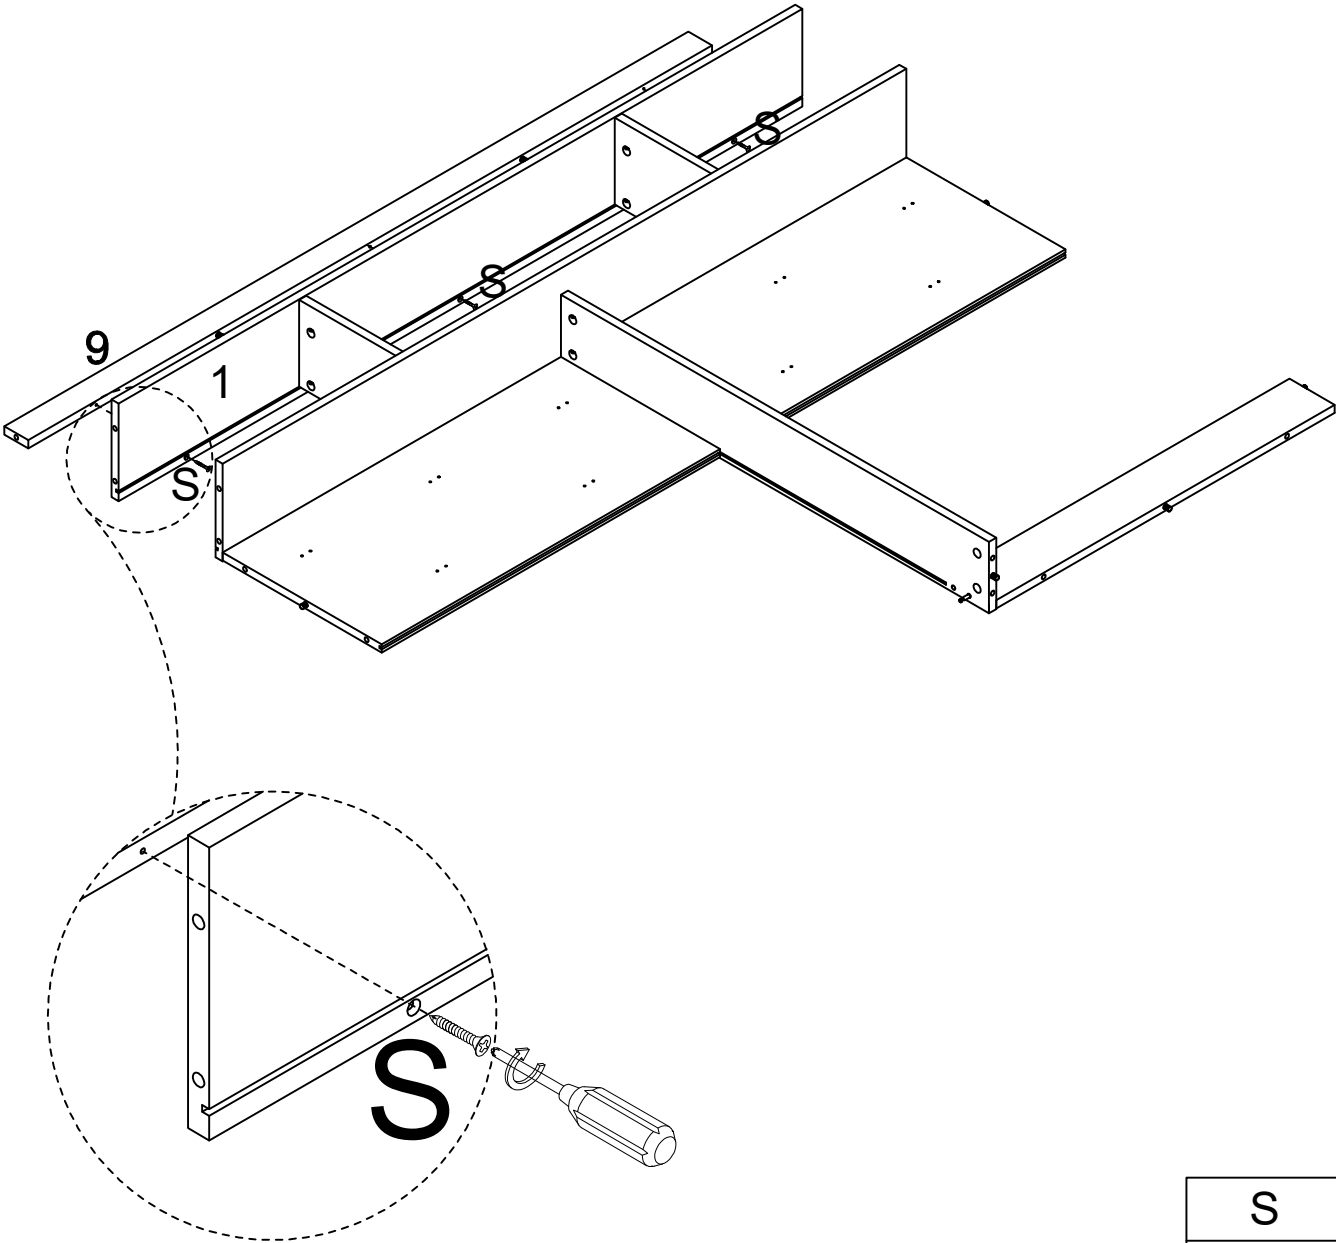X1

# Step 11





S

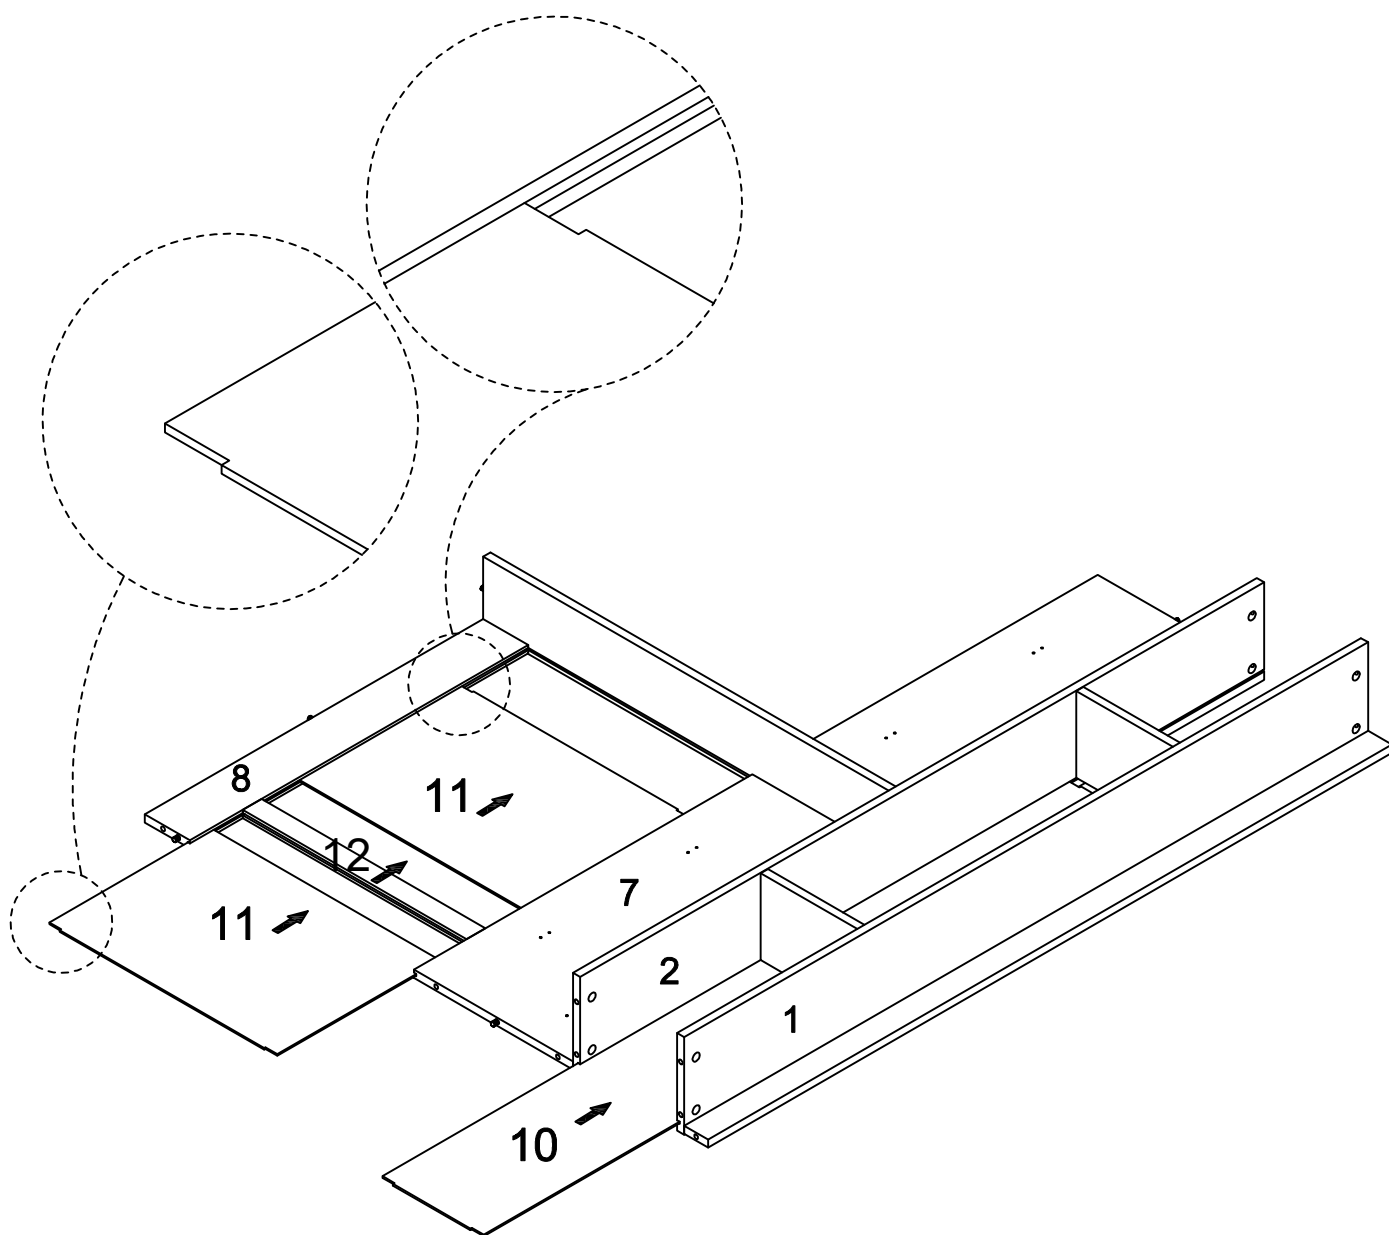X3


## Step 12



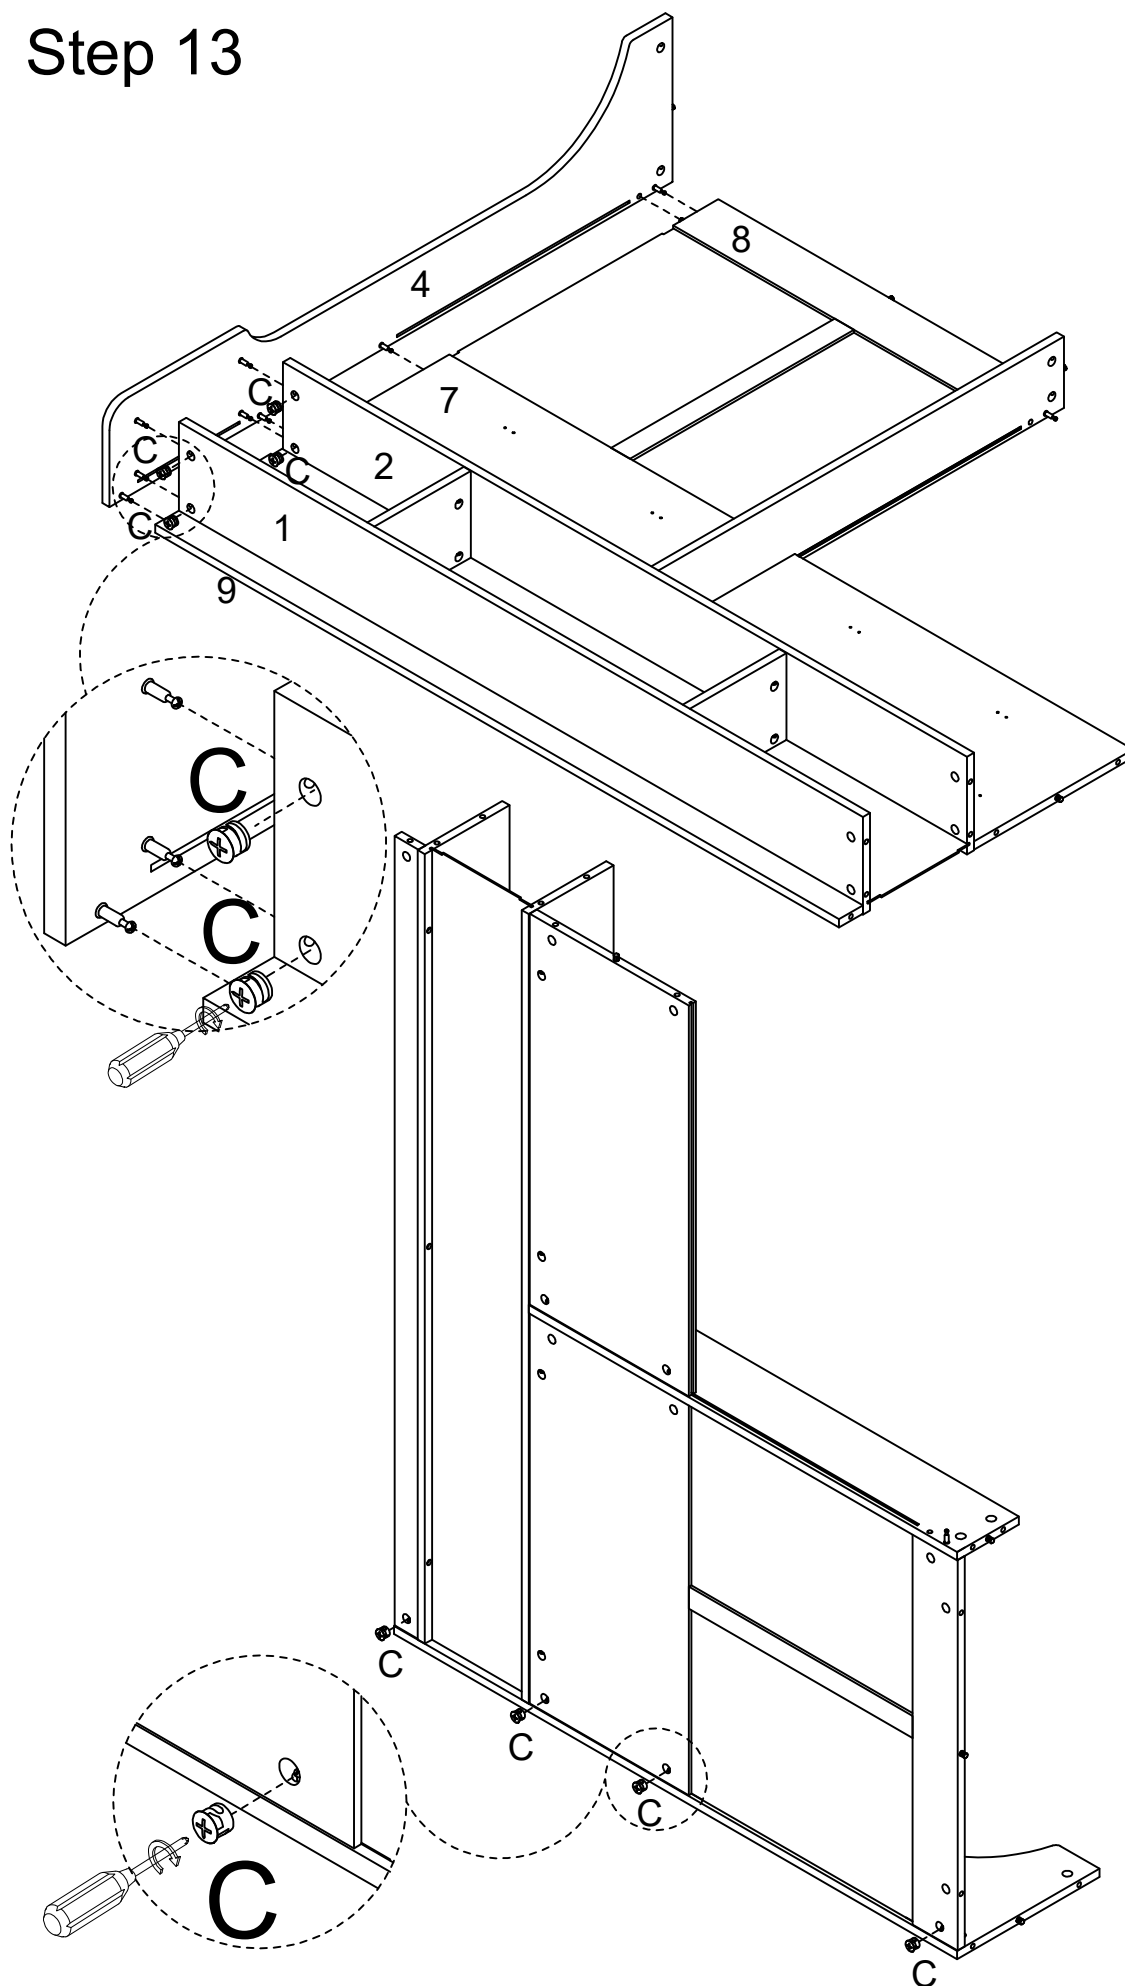
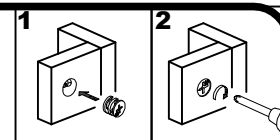



# Step 13




C

X8
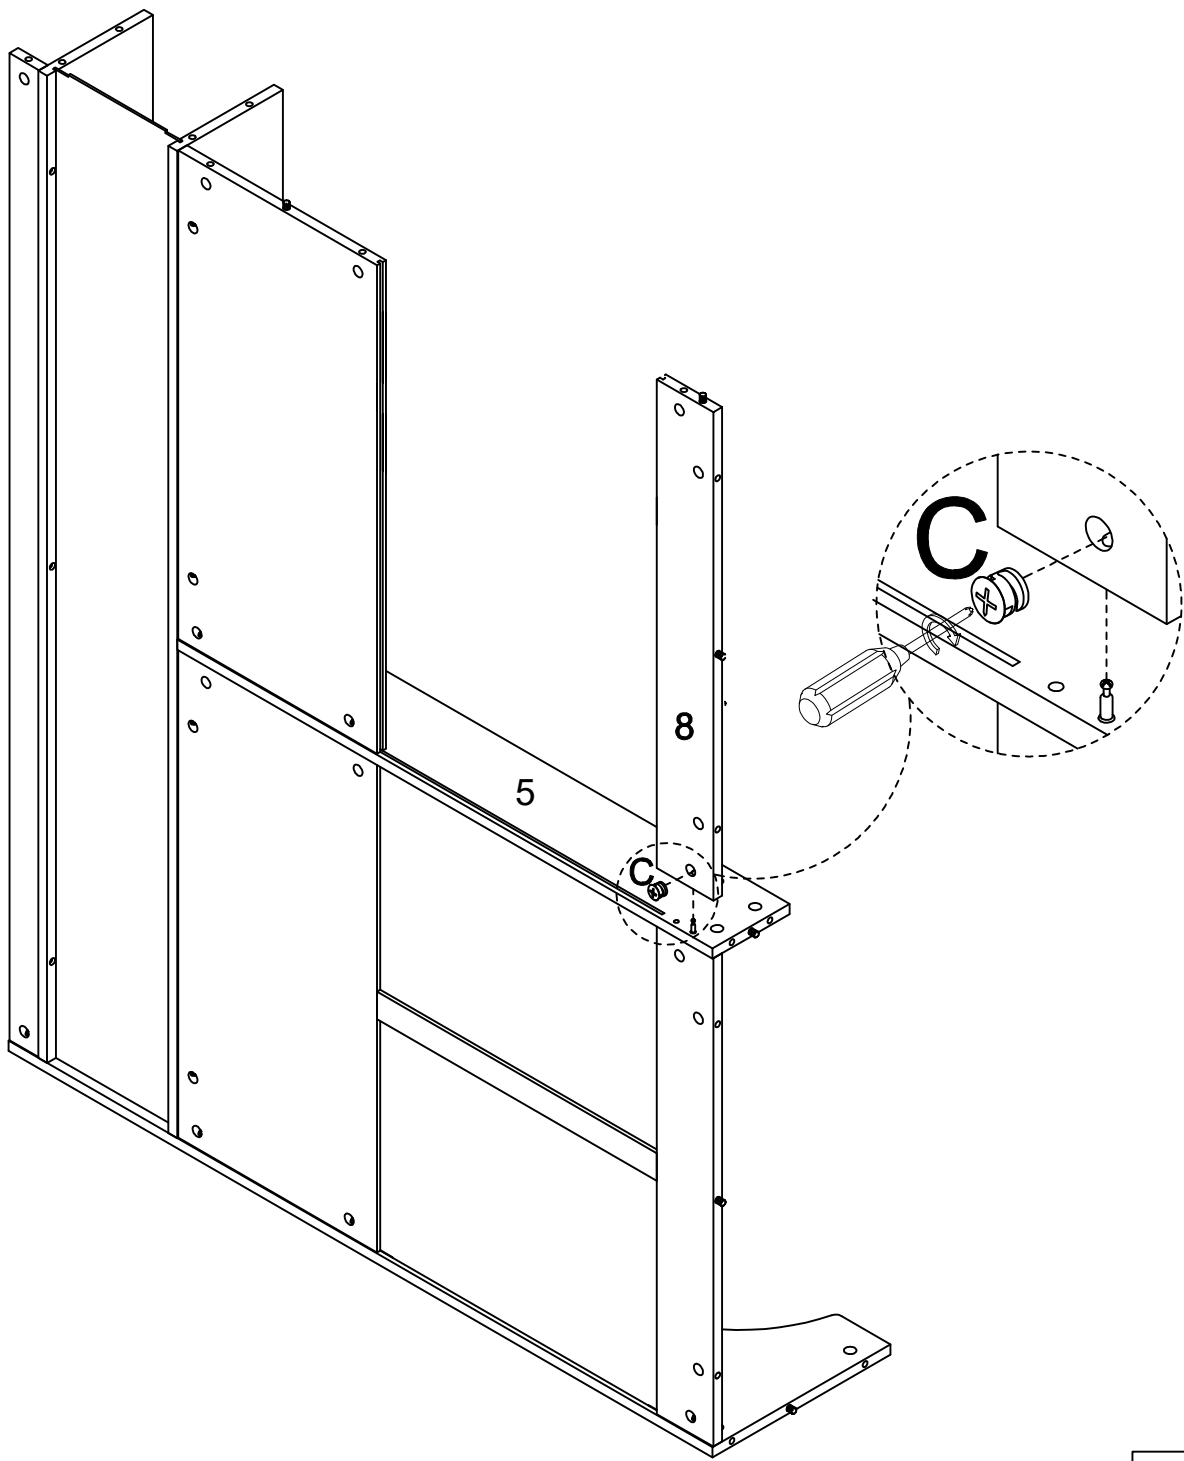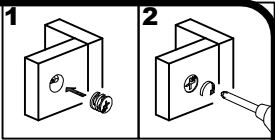
# Step 14






C

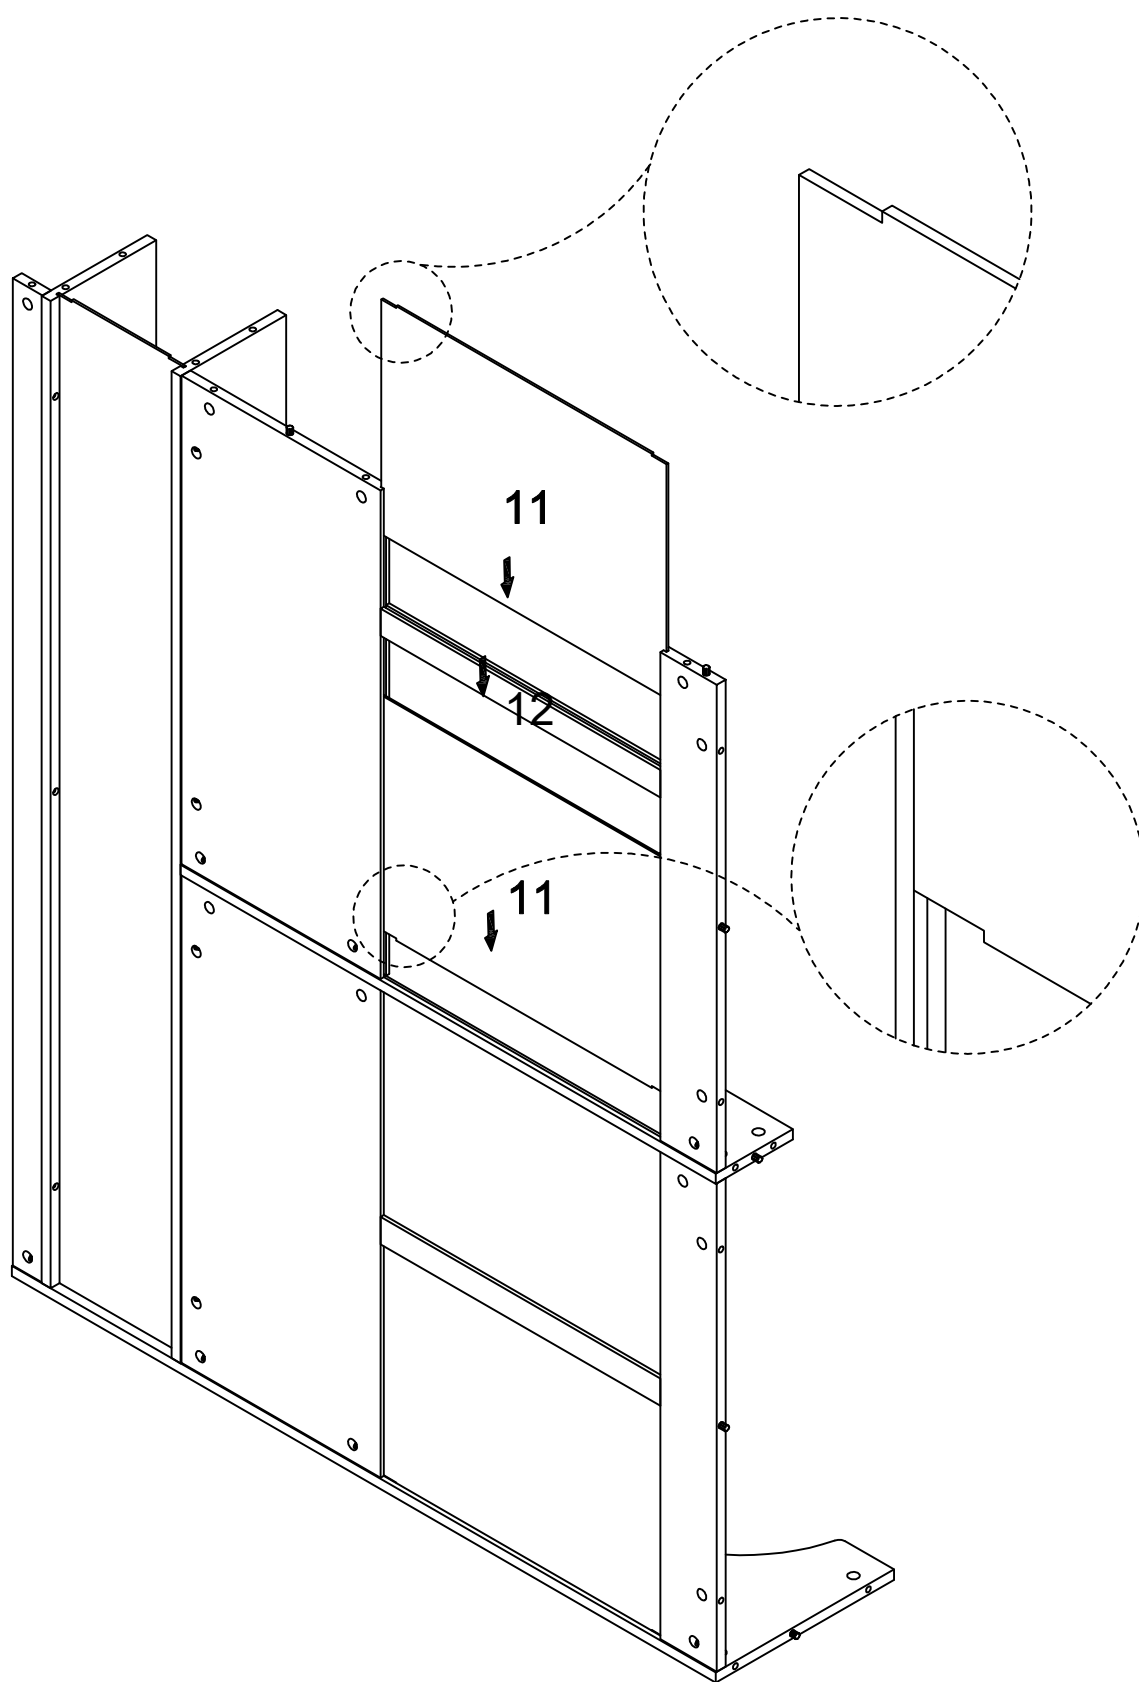X1

## Step 15

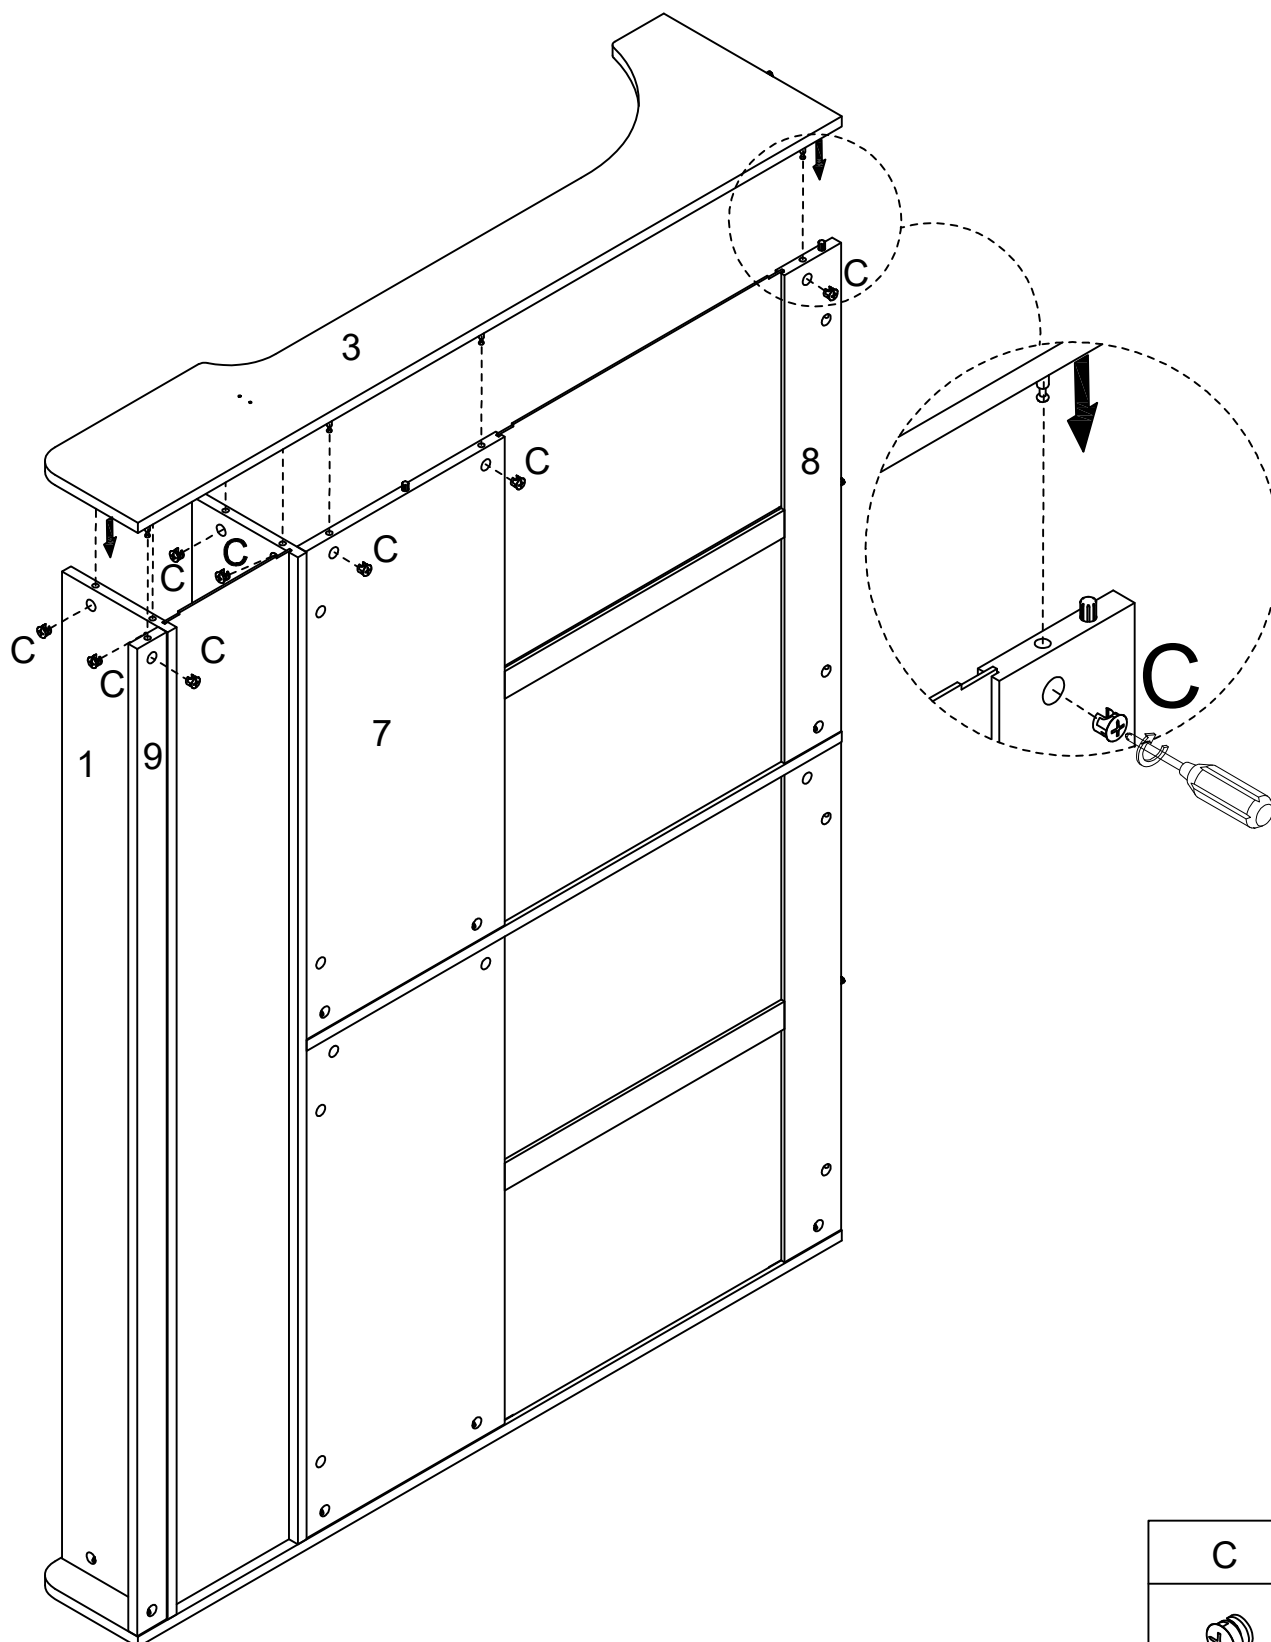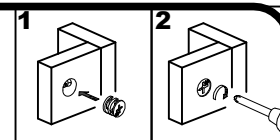


# Step 16




C

X8

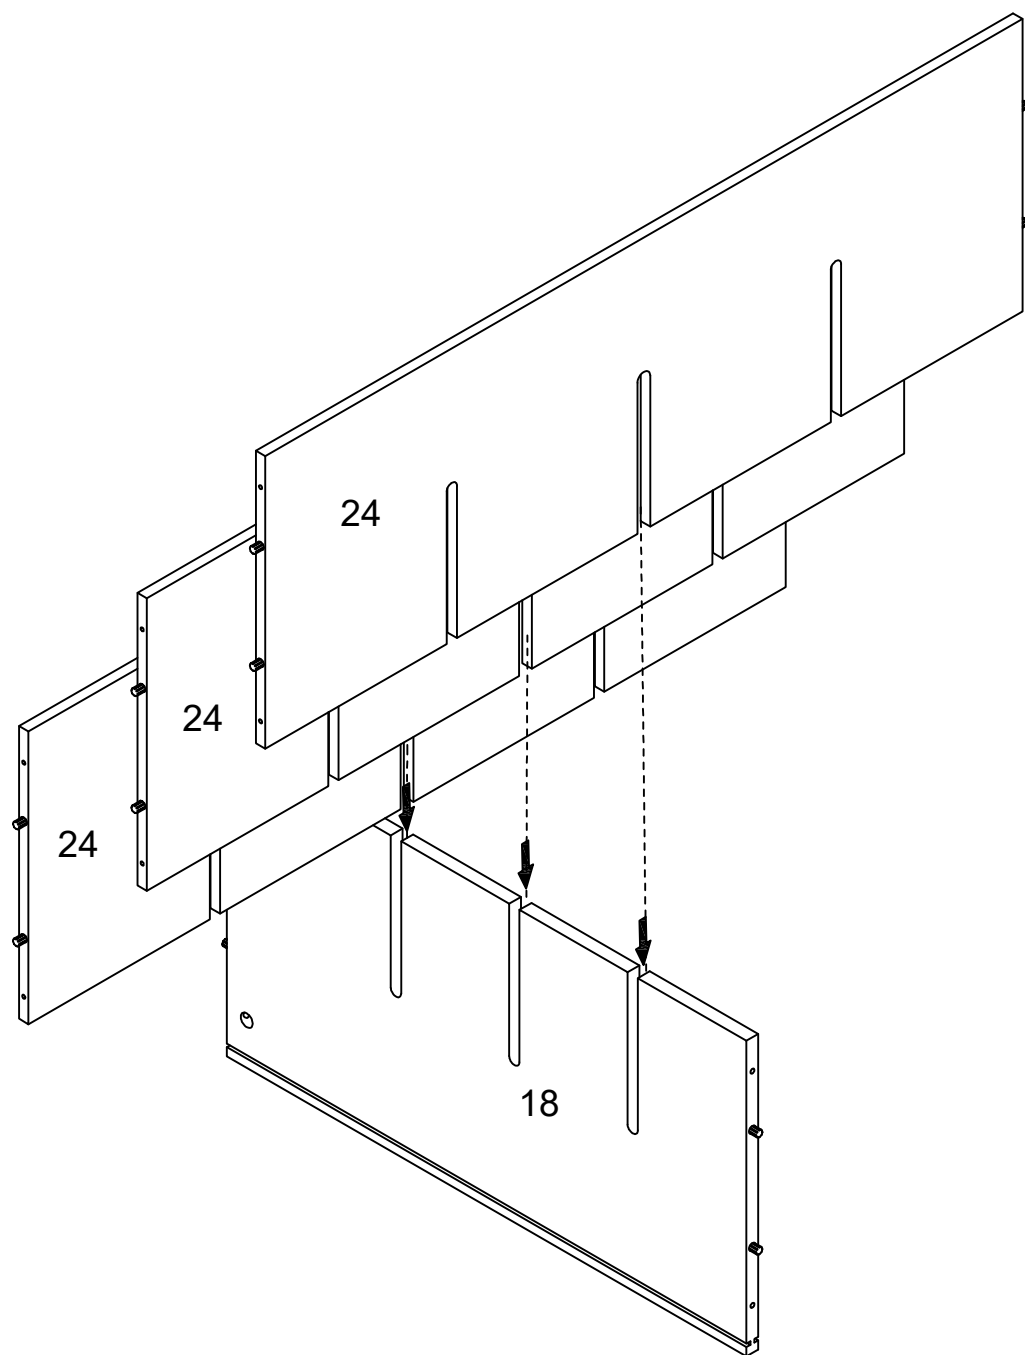
# Step 17

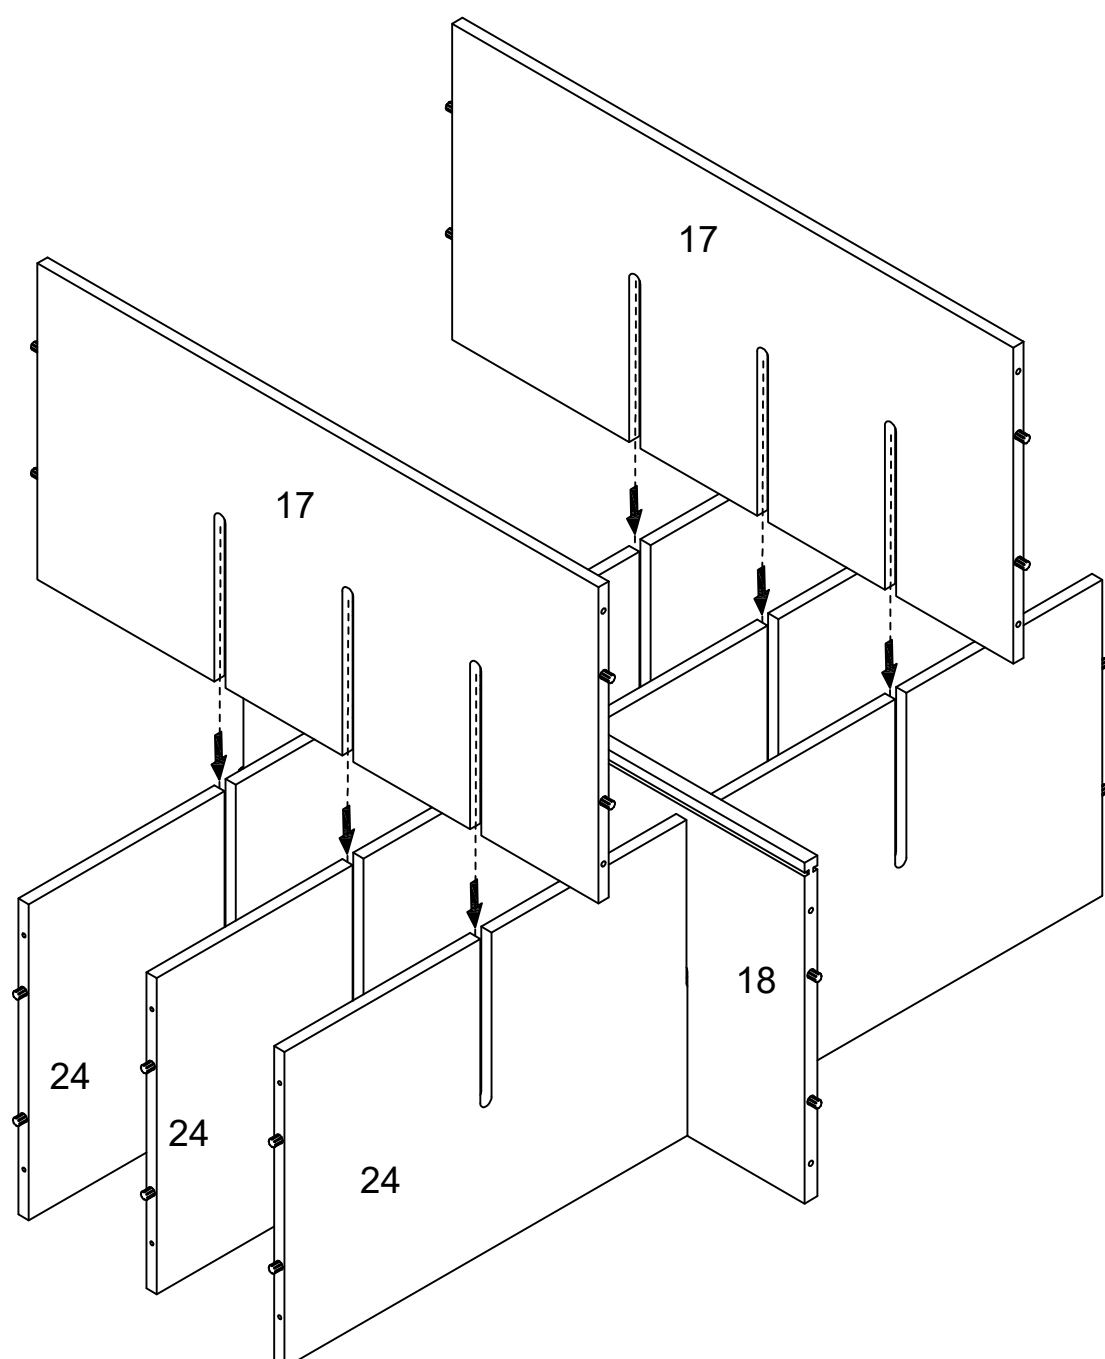


# Step 18





# Step 19

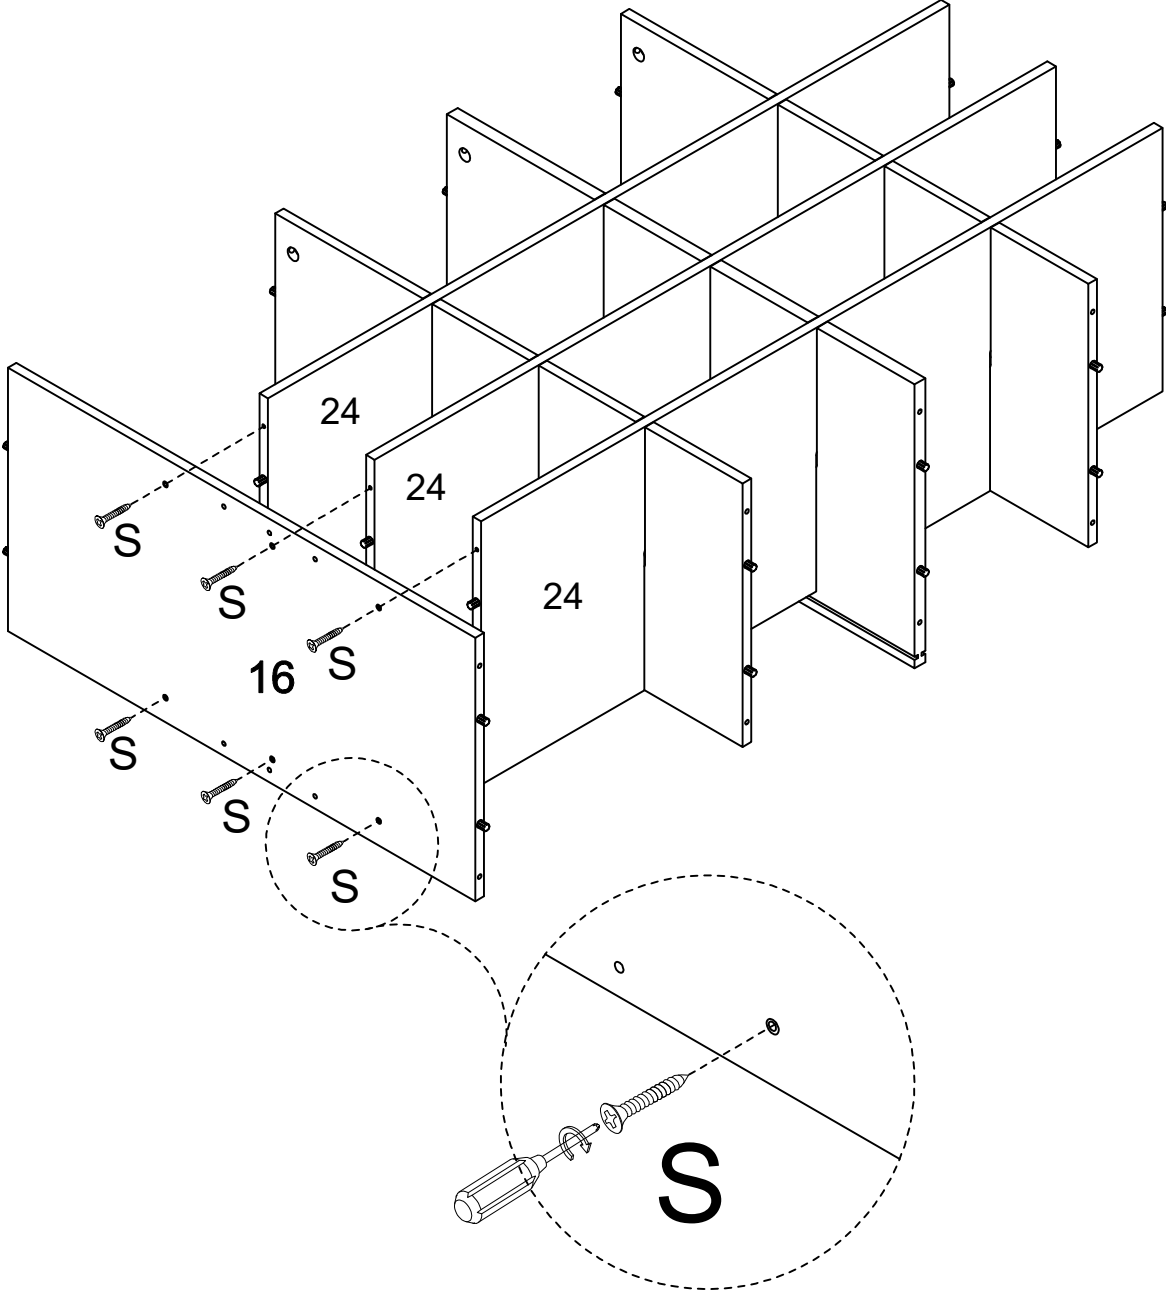

S

X6

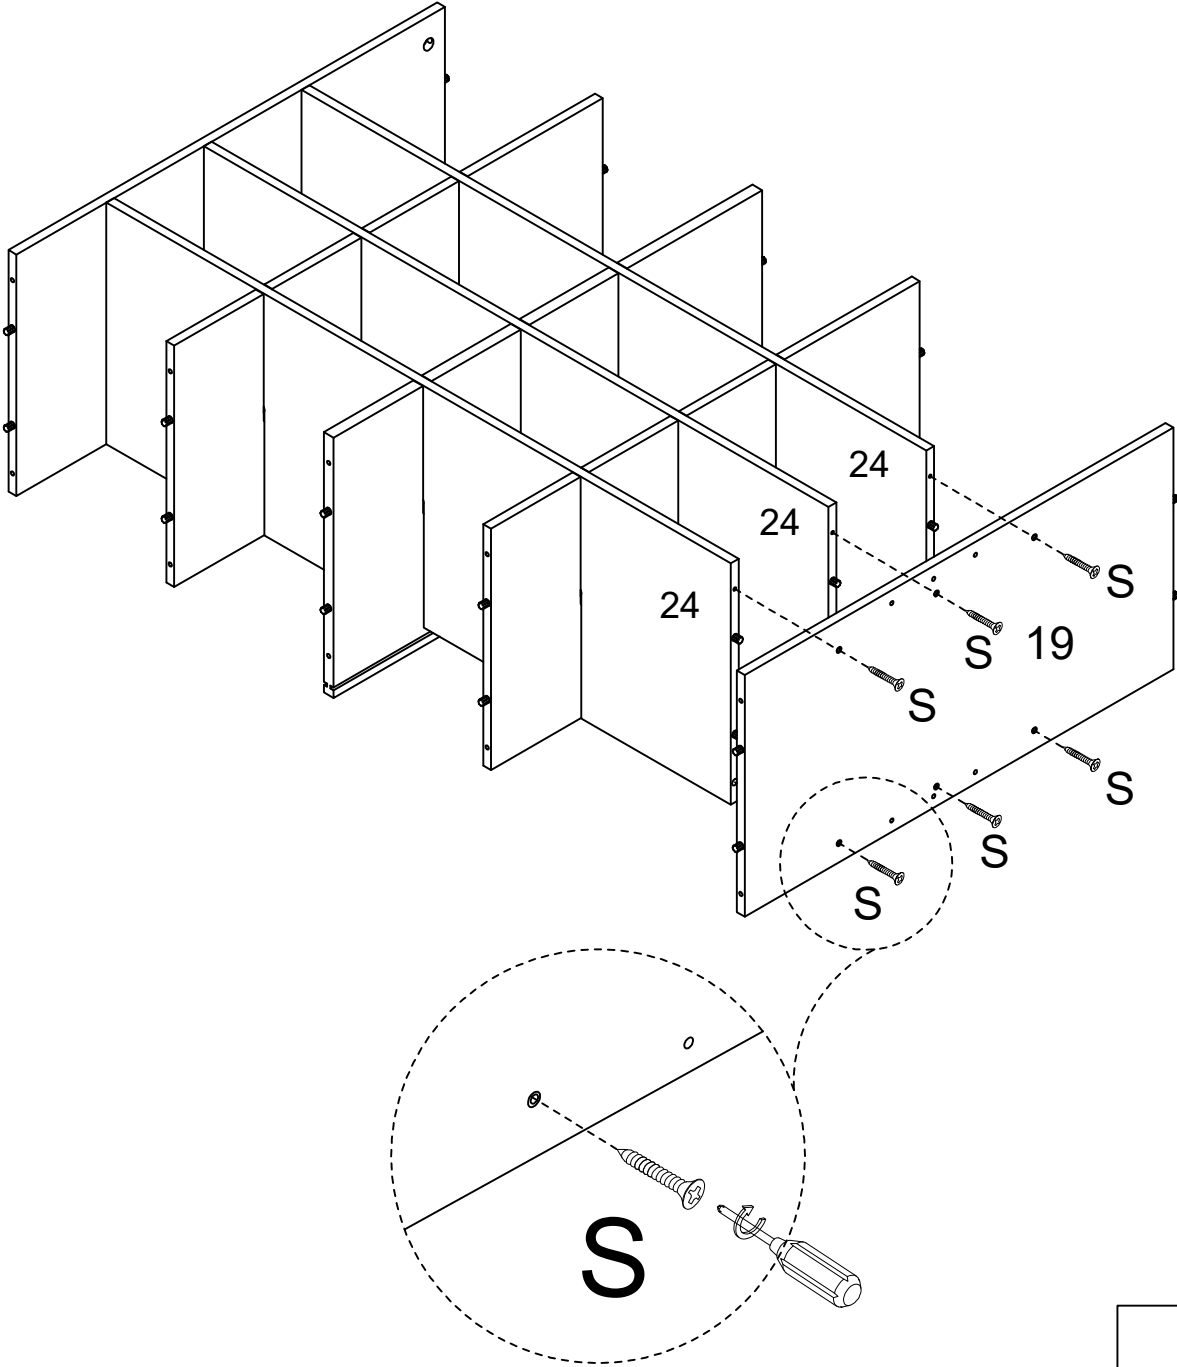
# Step 20






S

X6

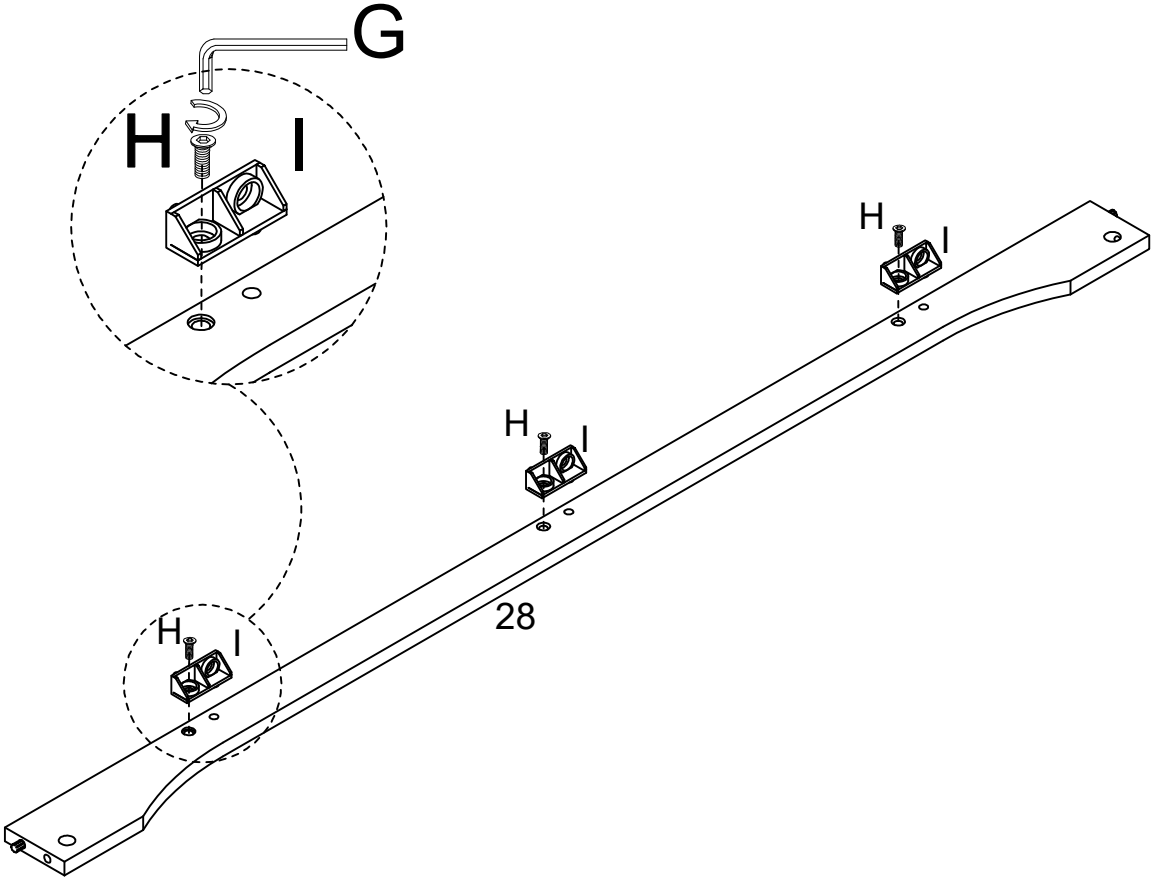




# Step 21




I	H	G
		
X3	X3	X1

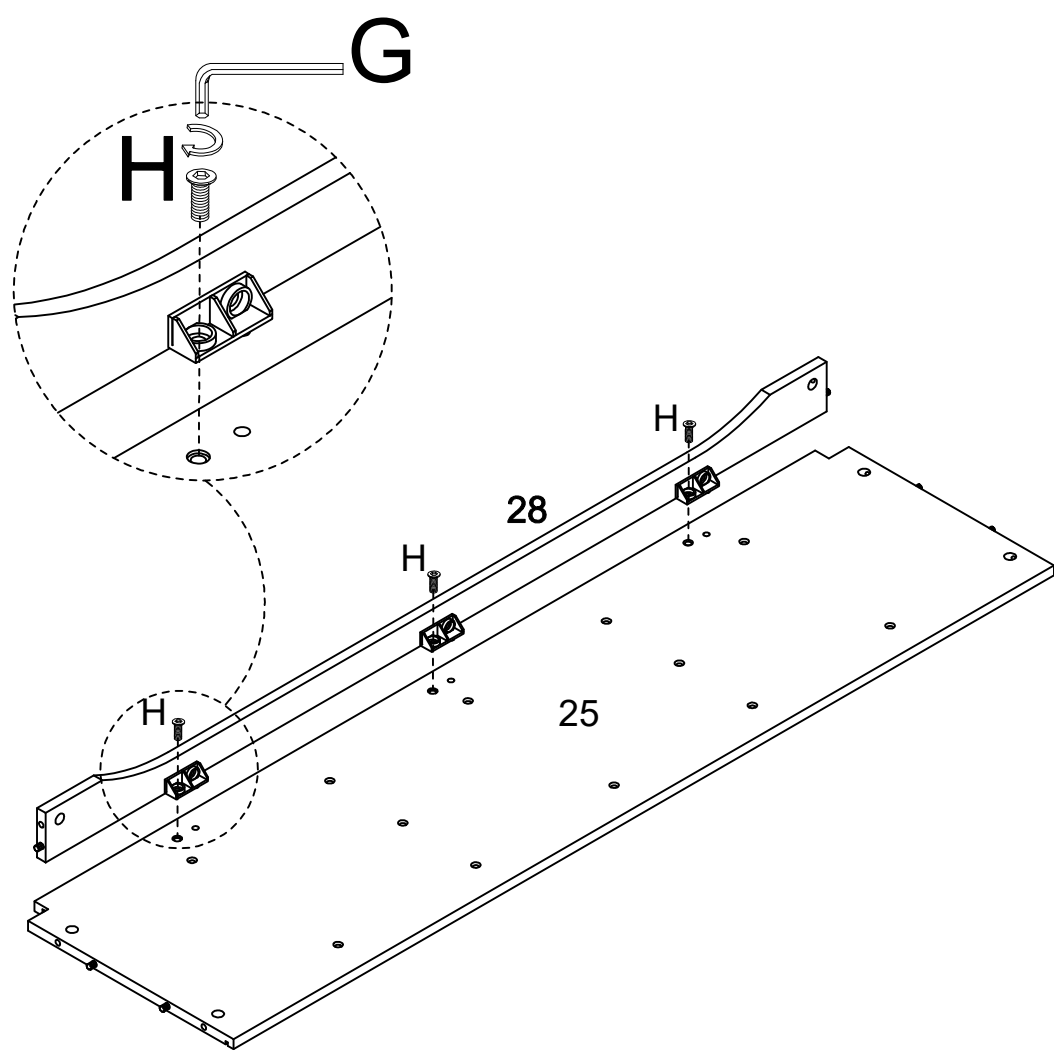

# Step 22




H	G
	
X3	X1
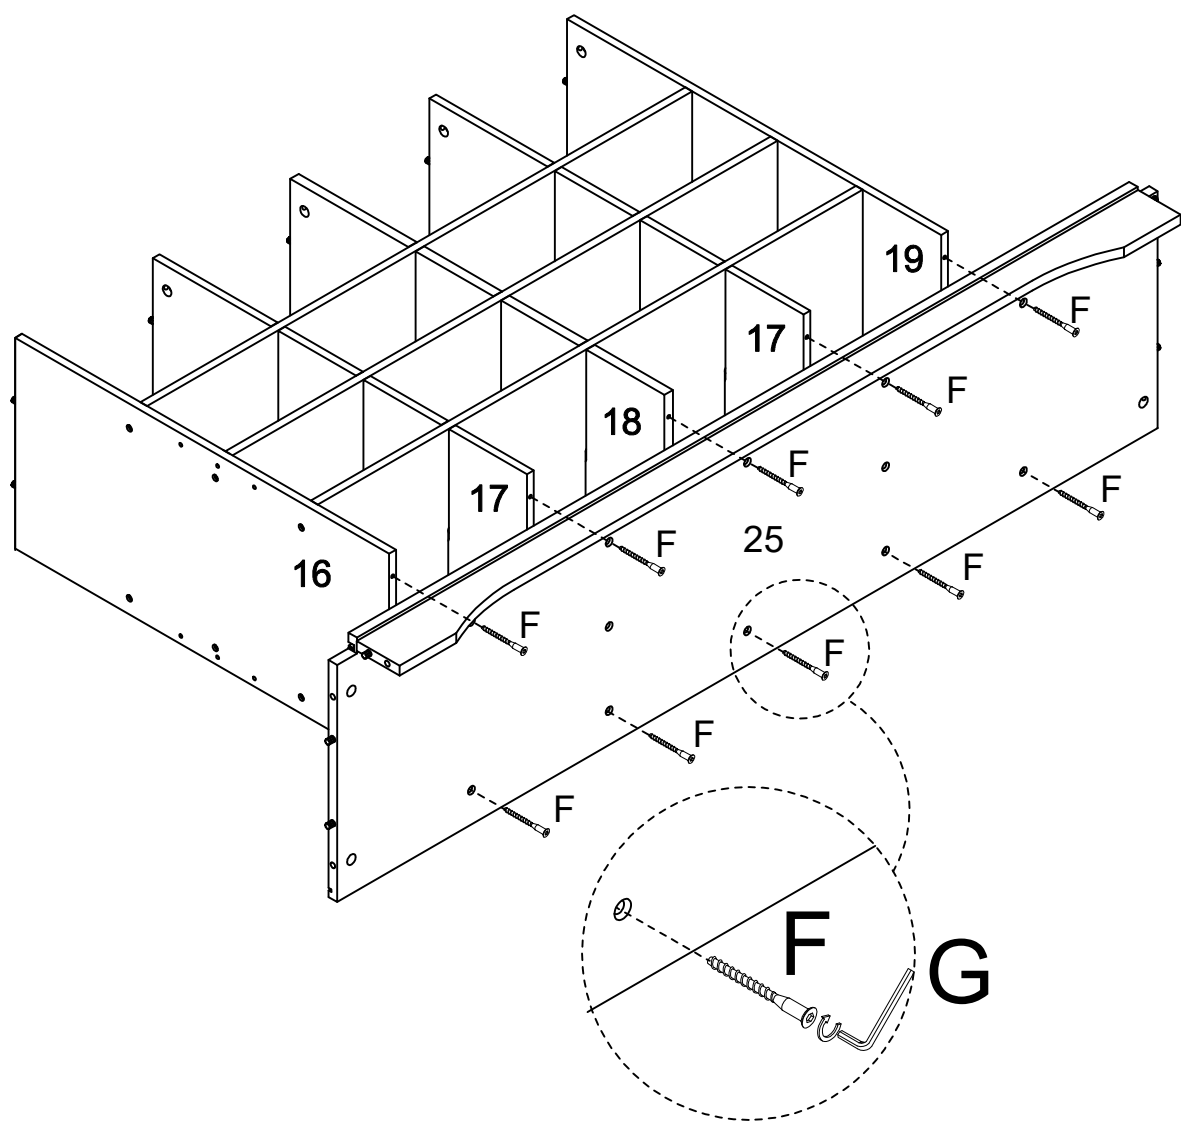
# Step 23






F	G
	
X10	X1

# Step 24


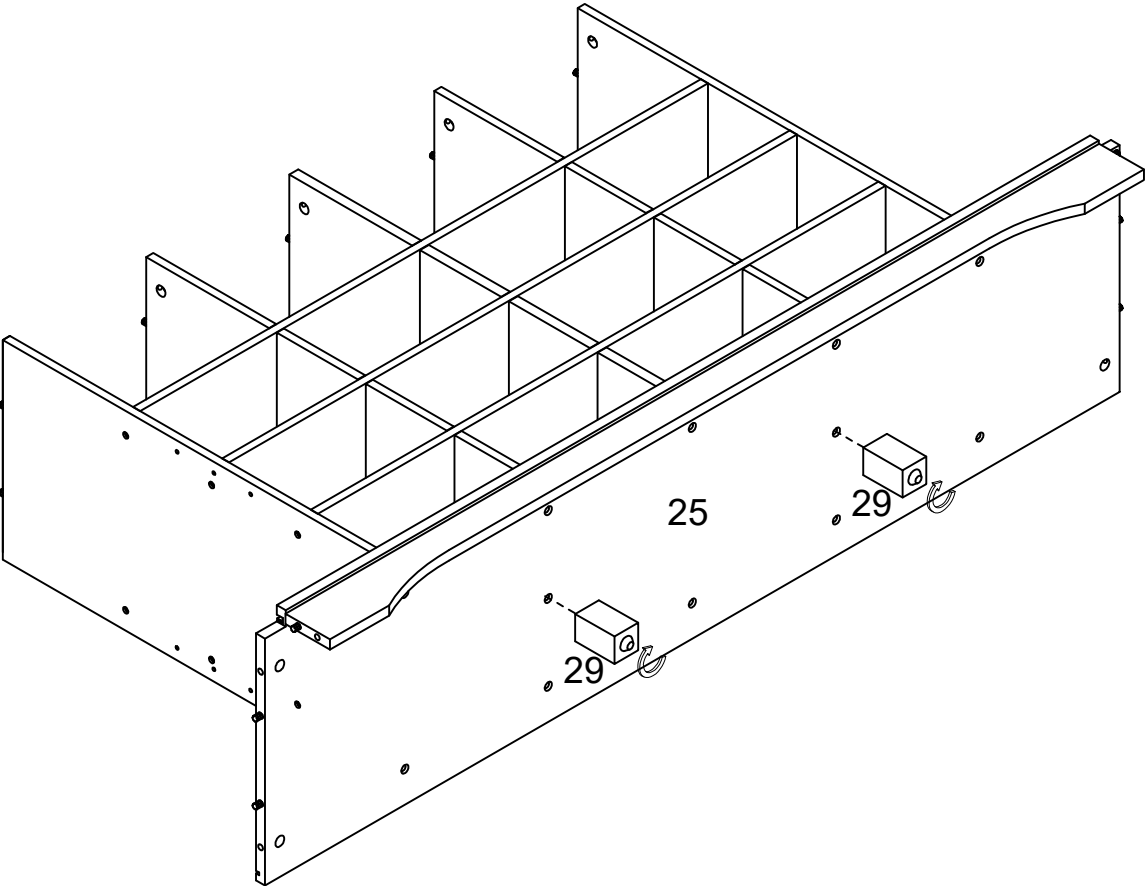



# Step 25

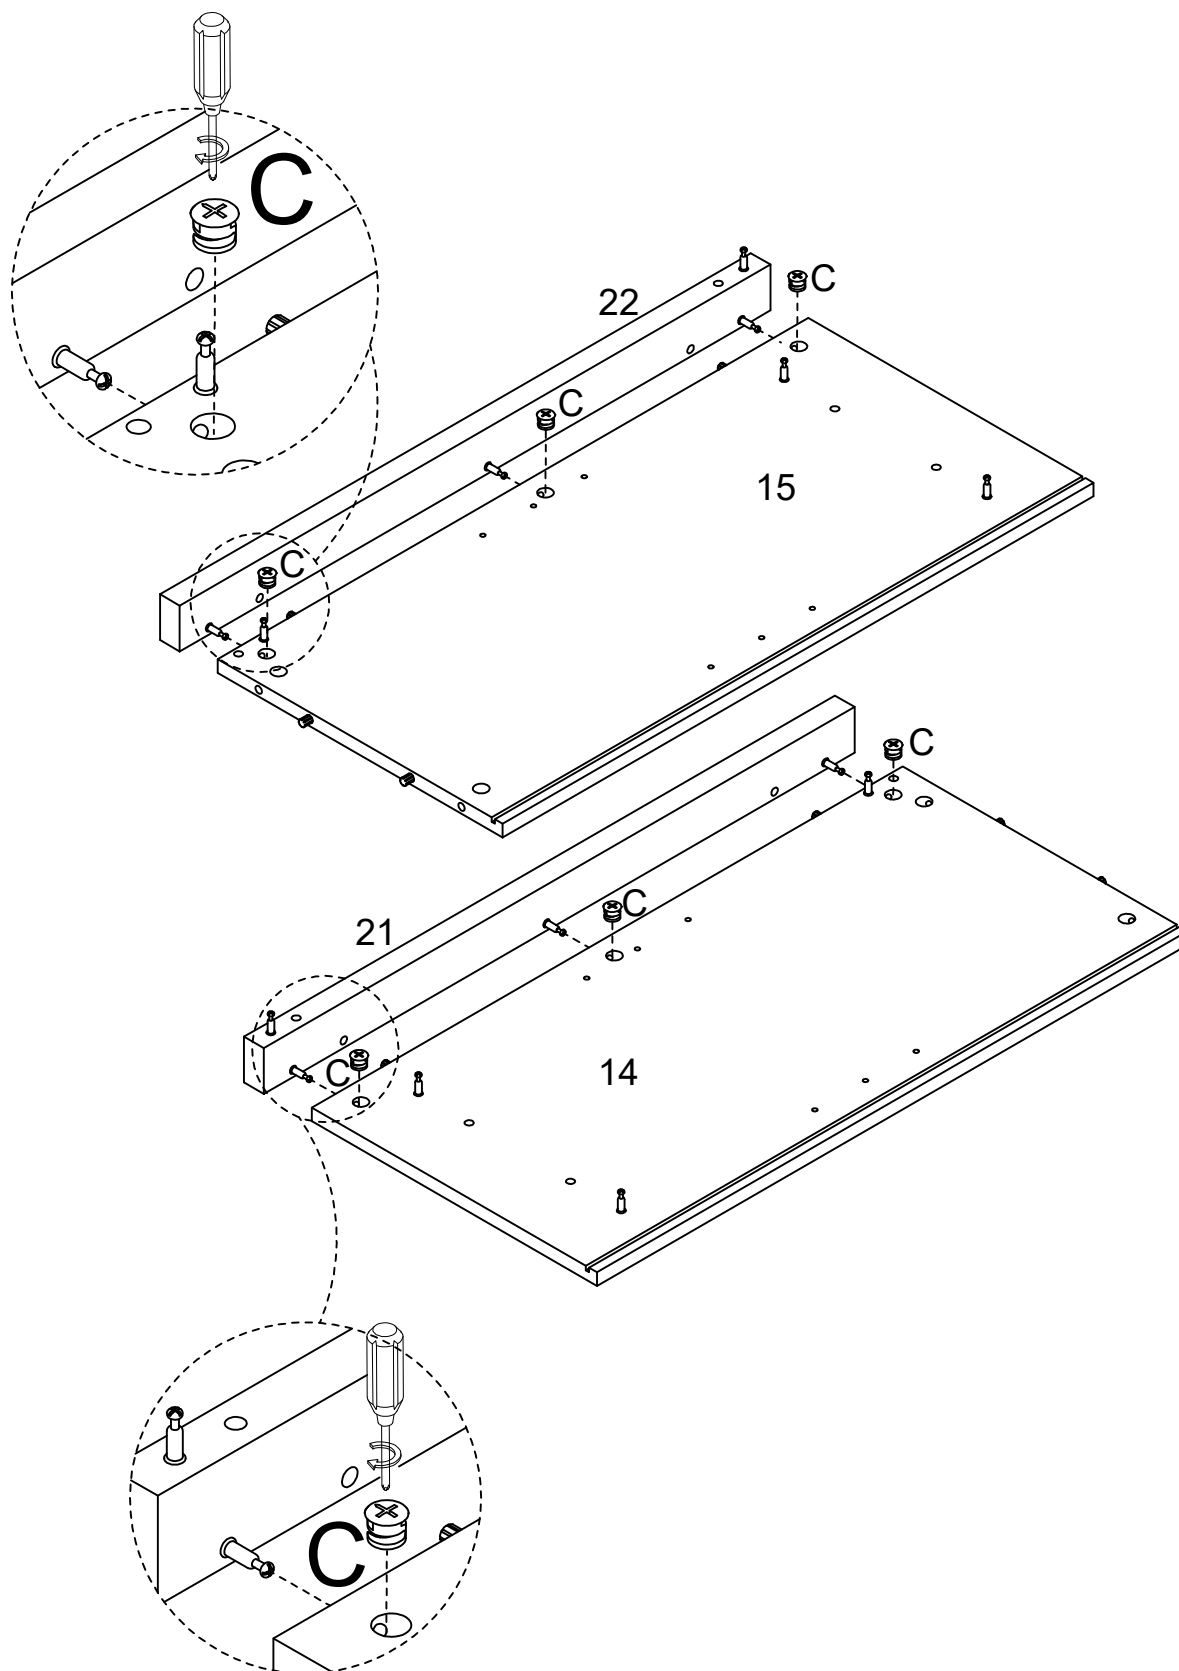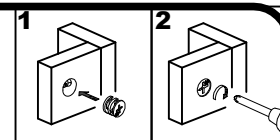



C

X6

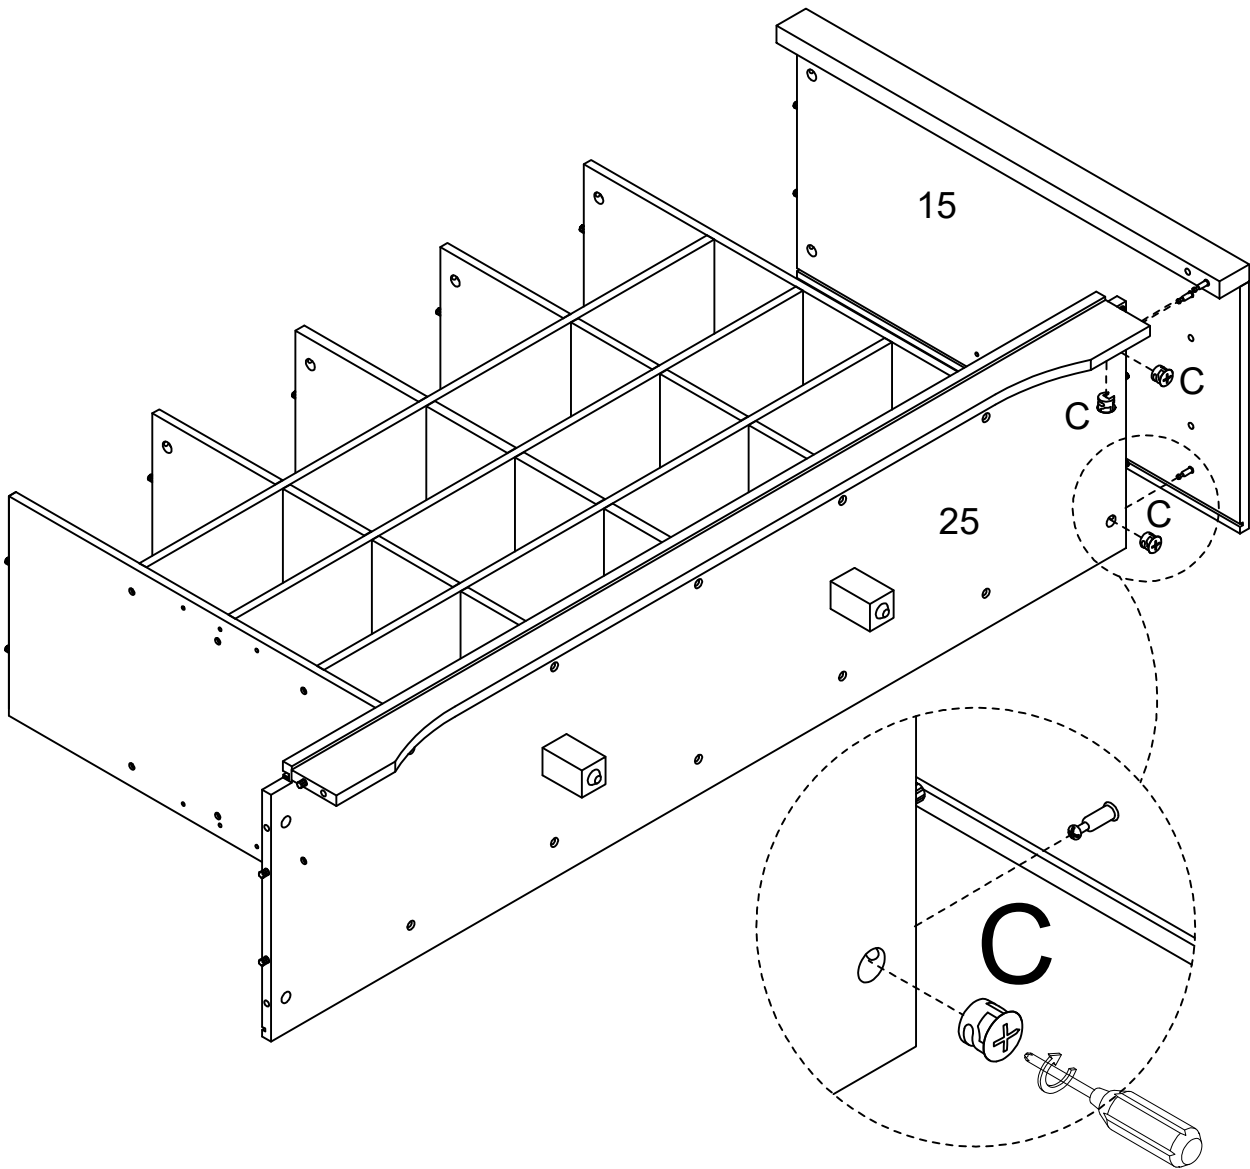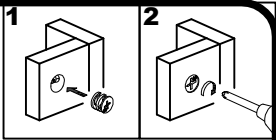
# Step 26





C

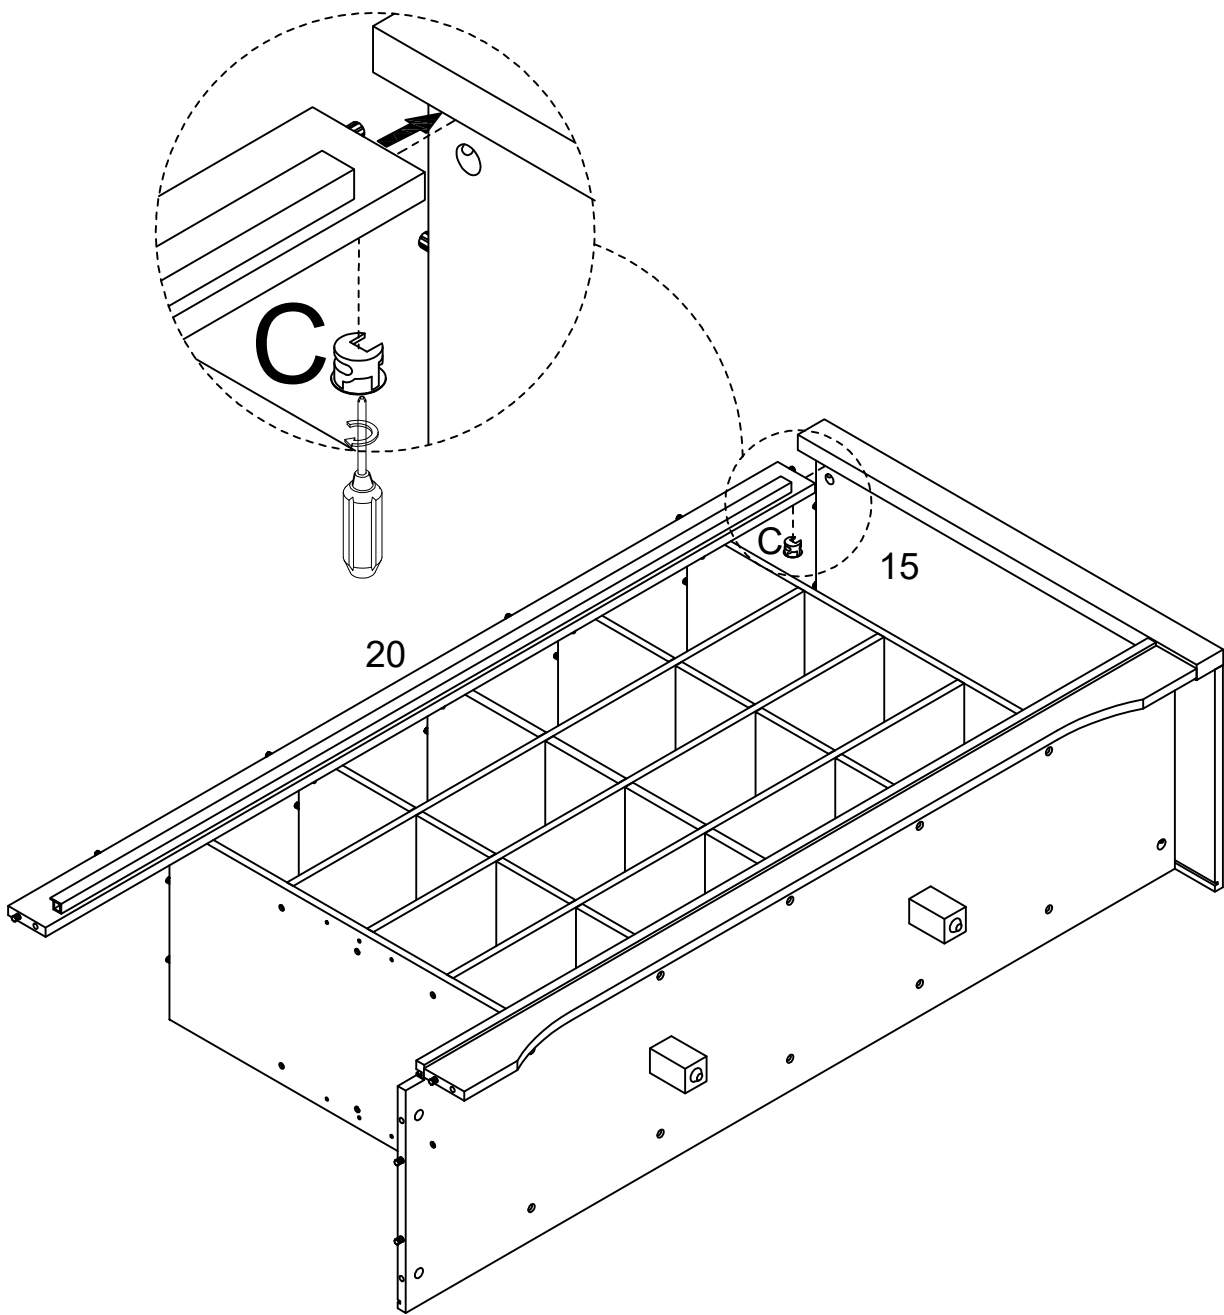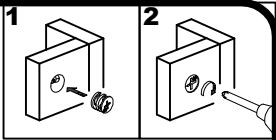X3


# Step 27



C

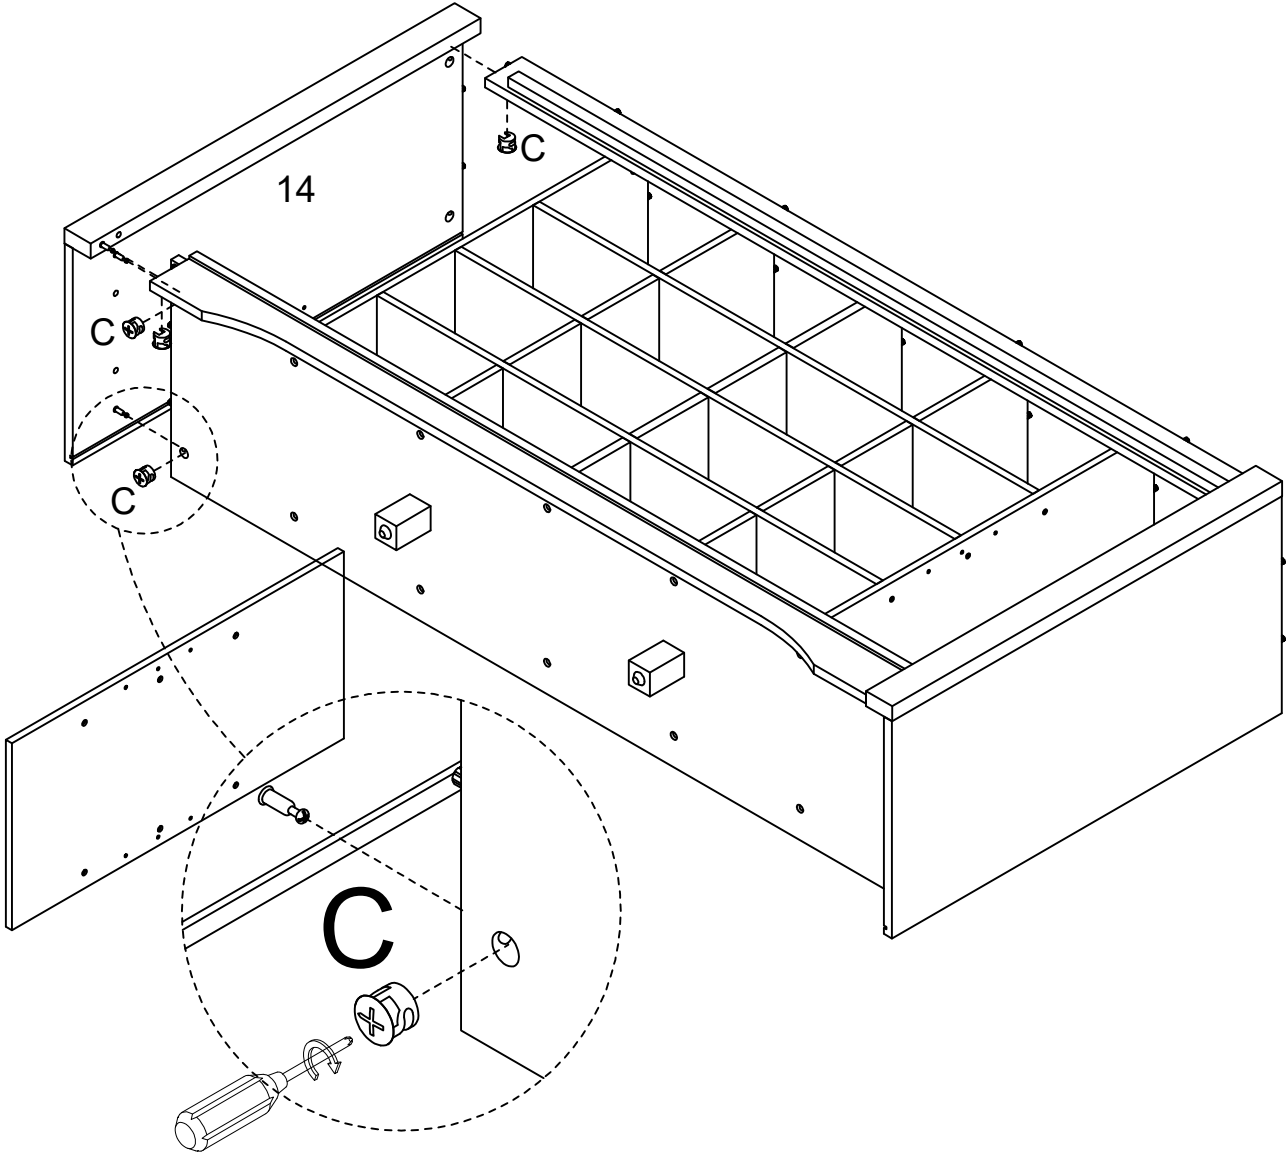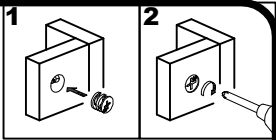X1


# Step 28



C

X4

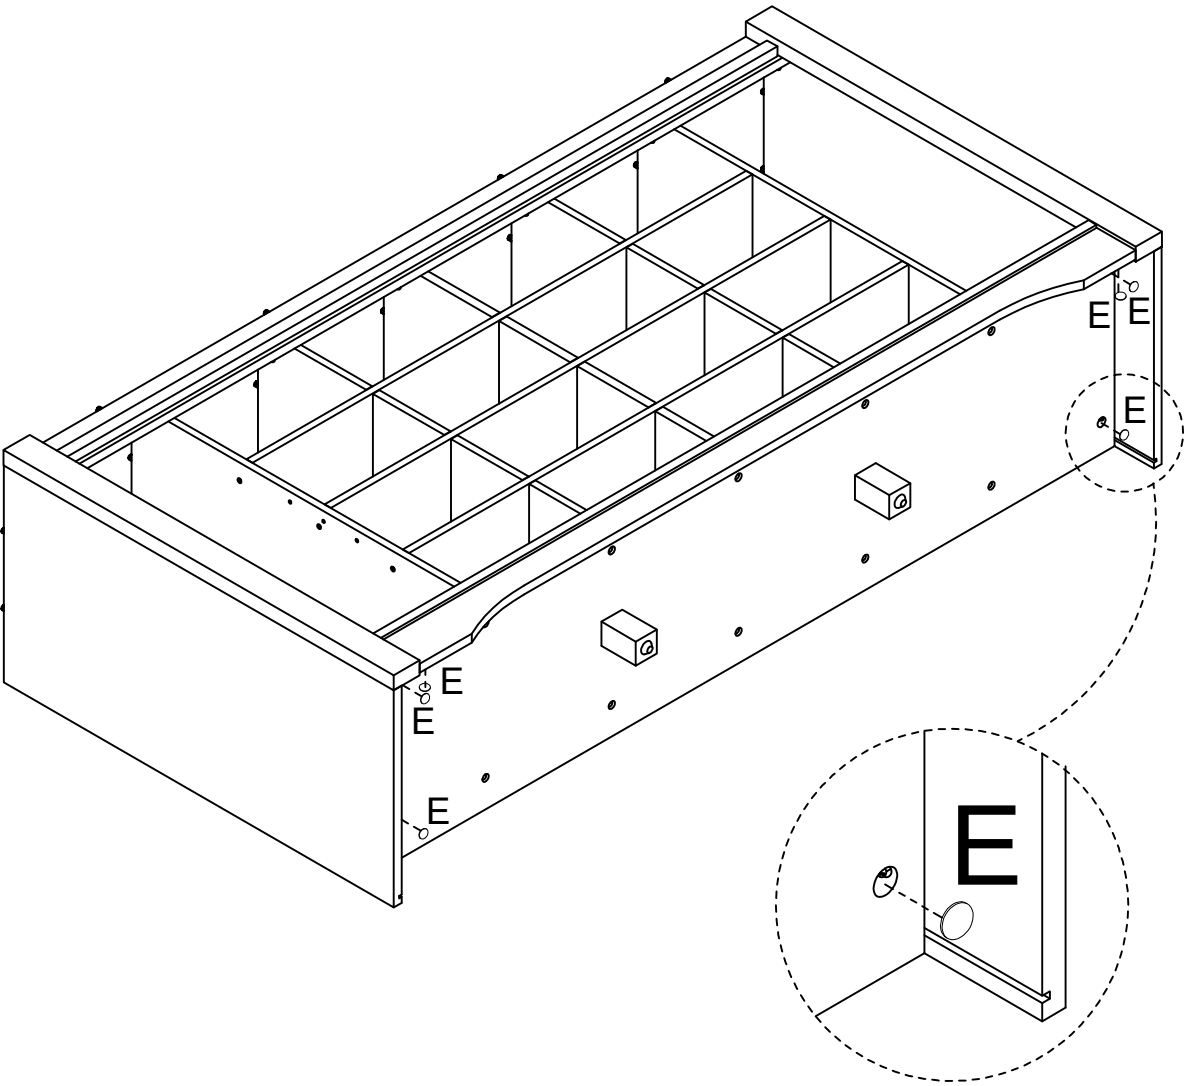


# Step 29






E
O
X6

# Step30


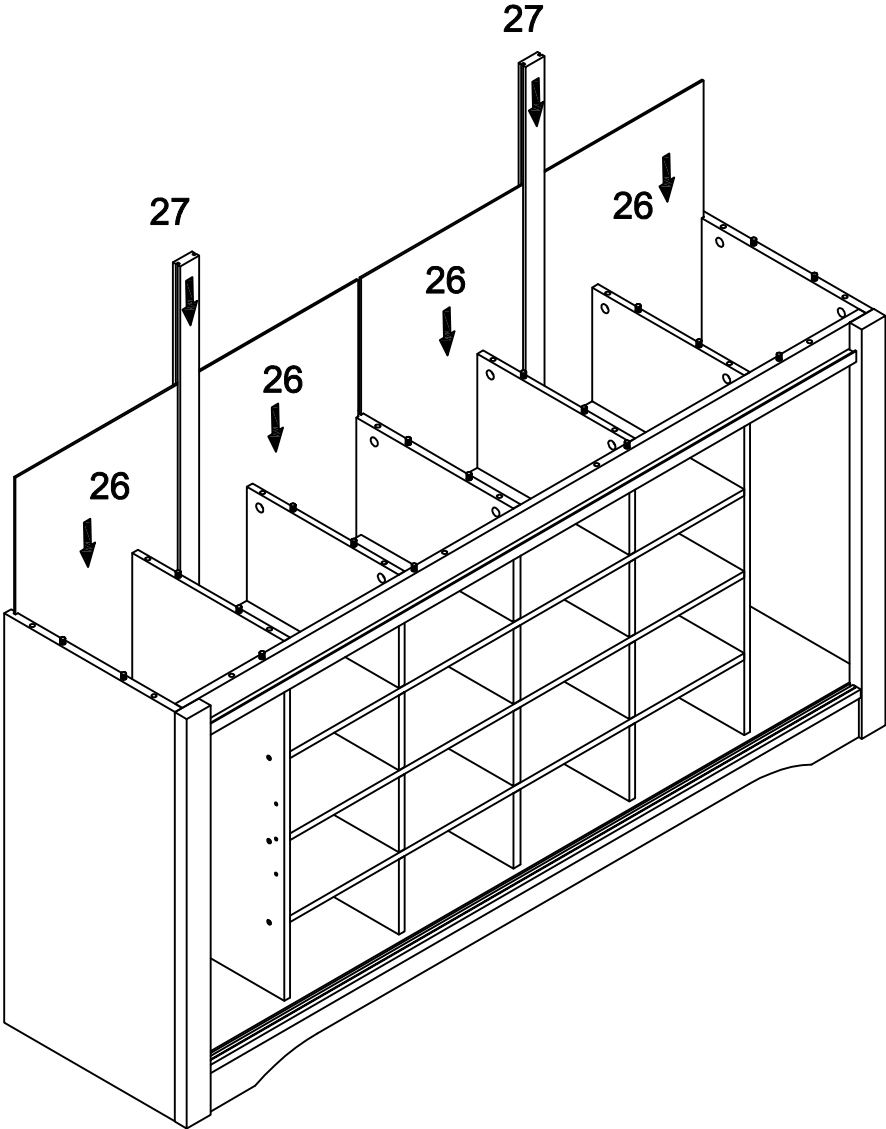



# Step 31

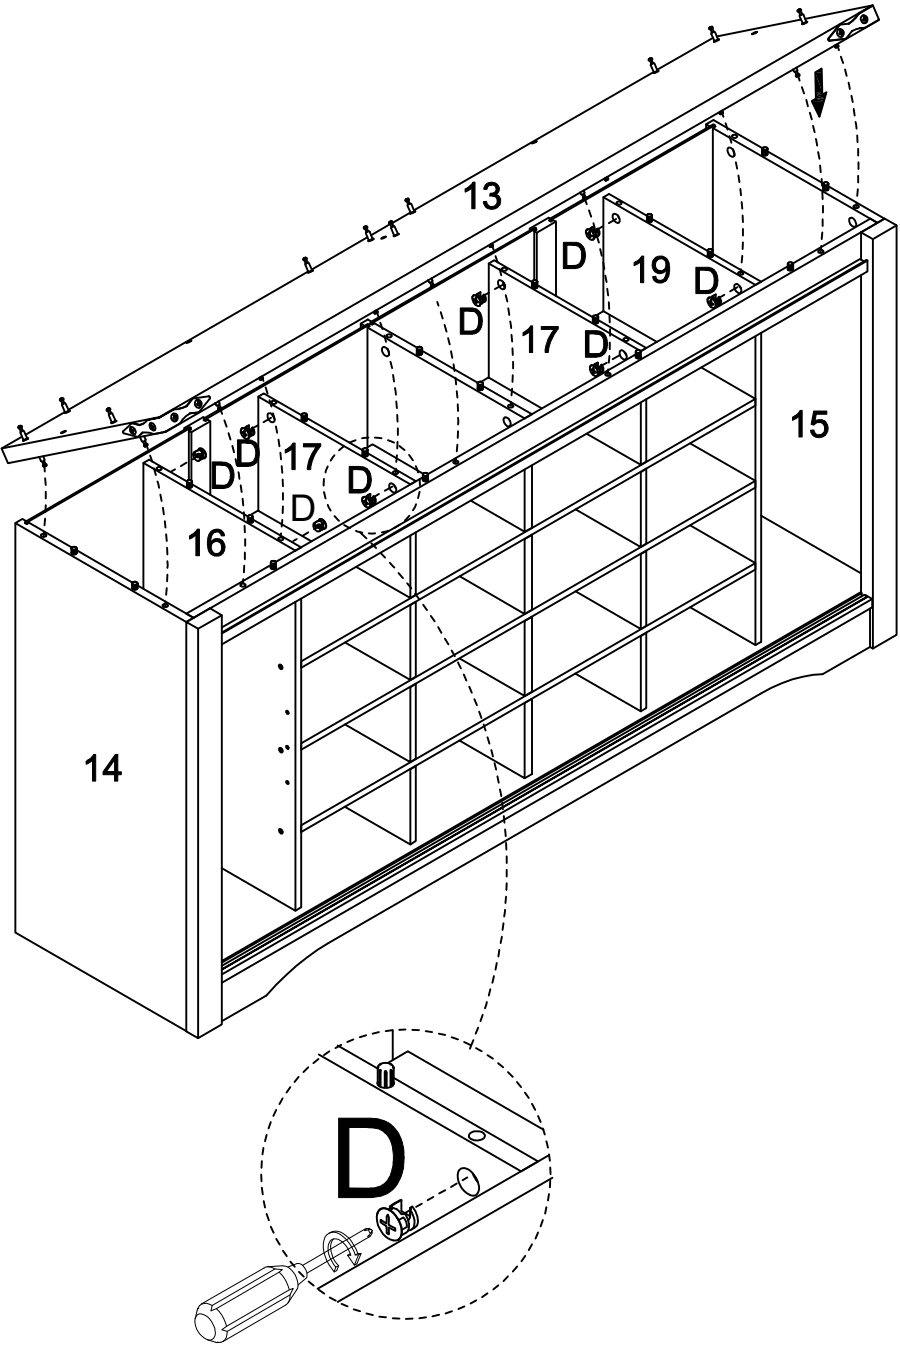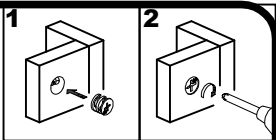


D

X8

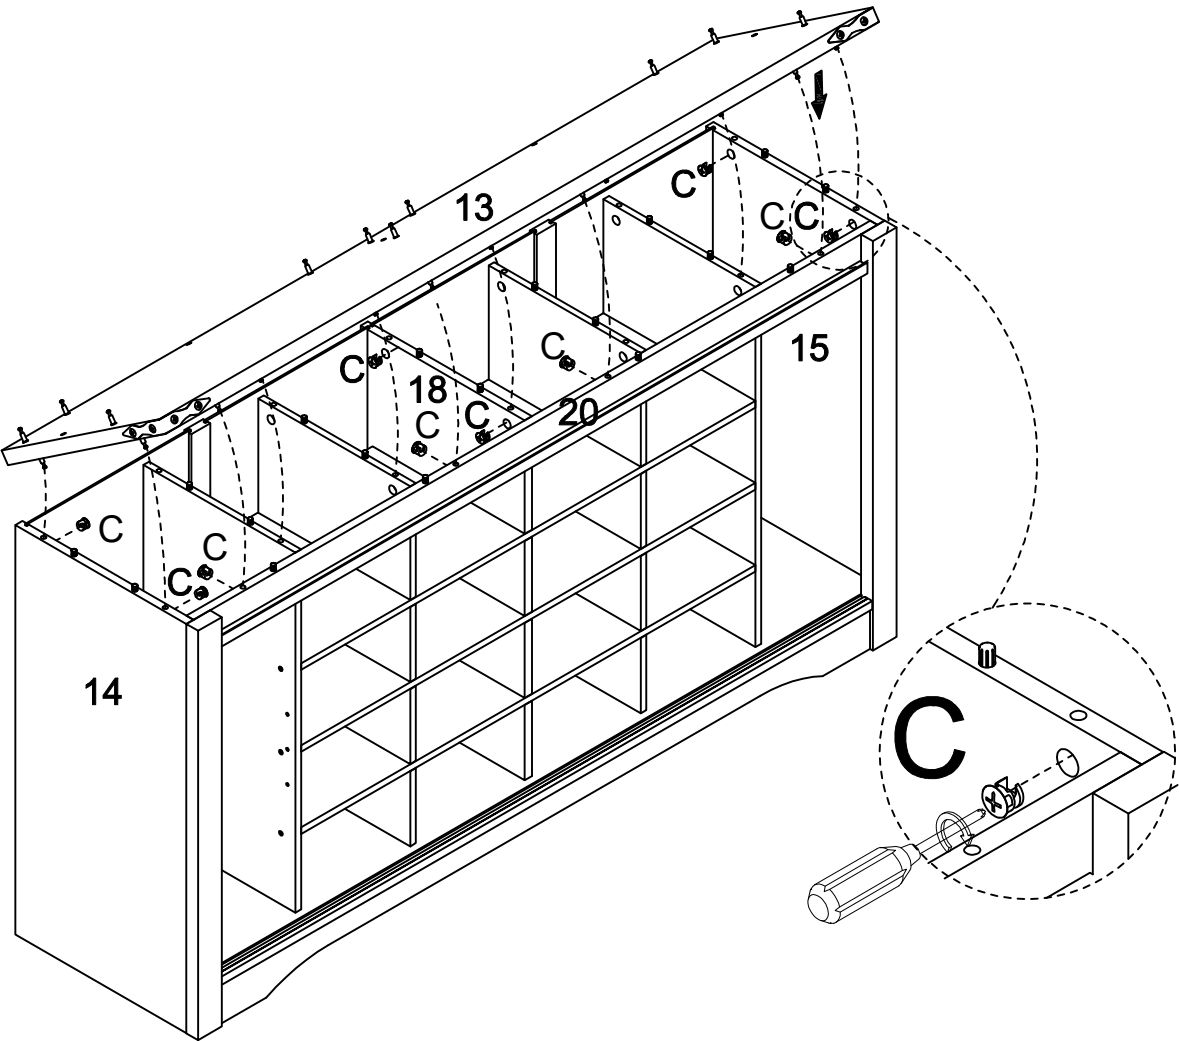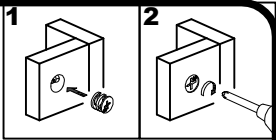
# Step 32




C

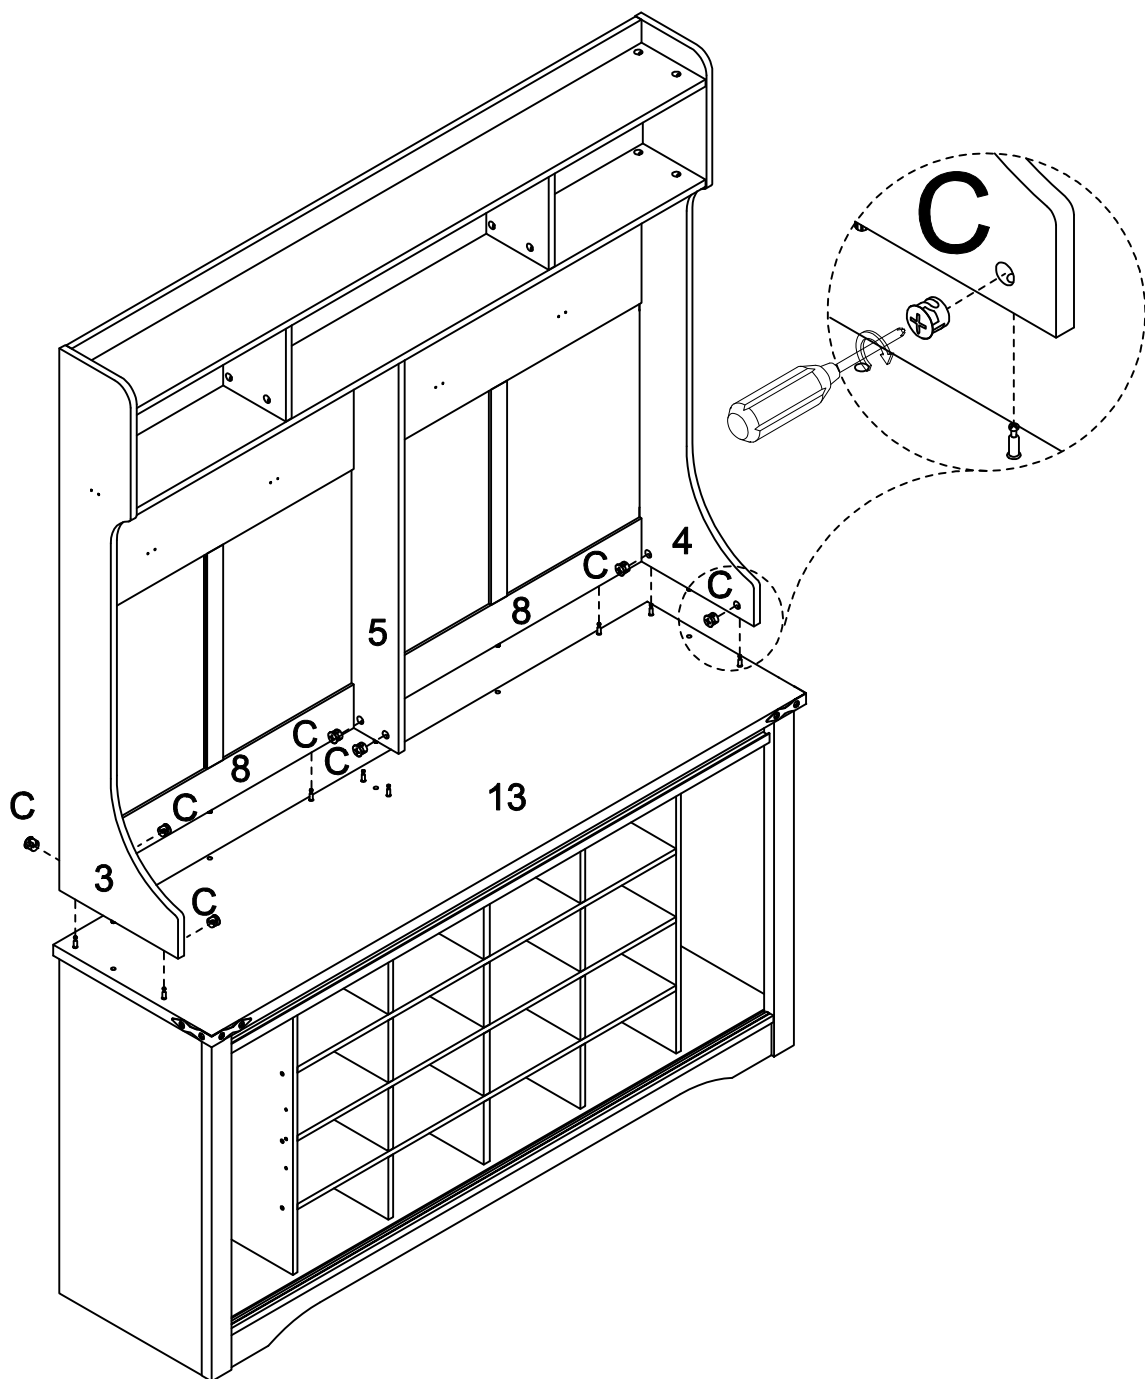X10

# Step 33




C

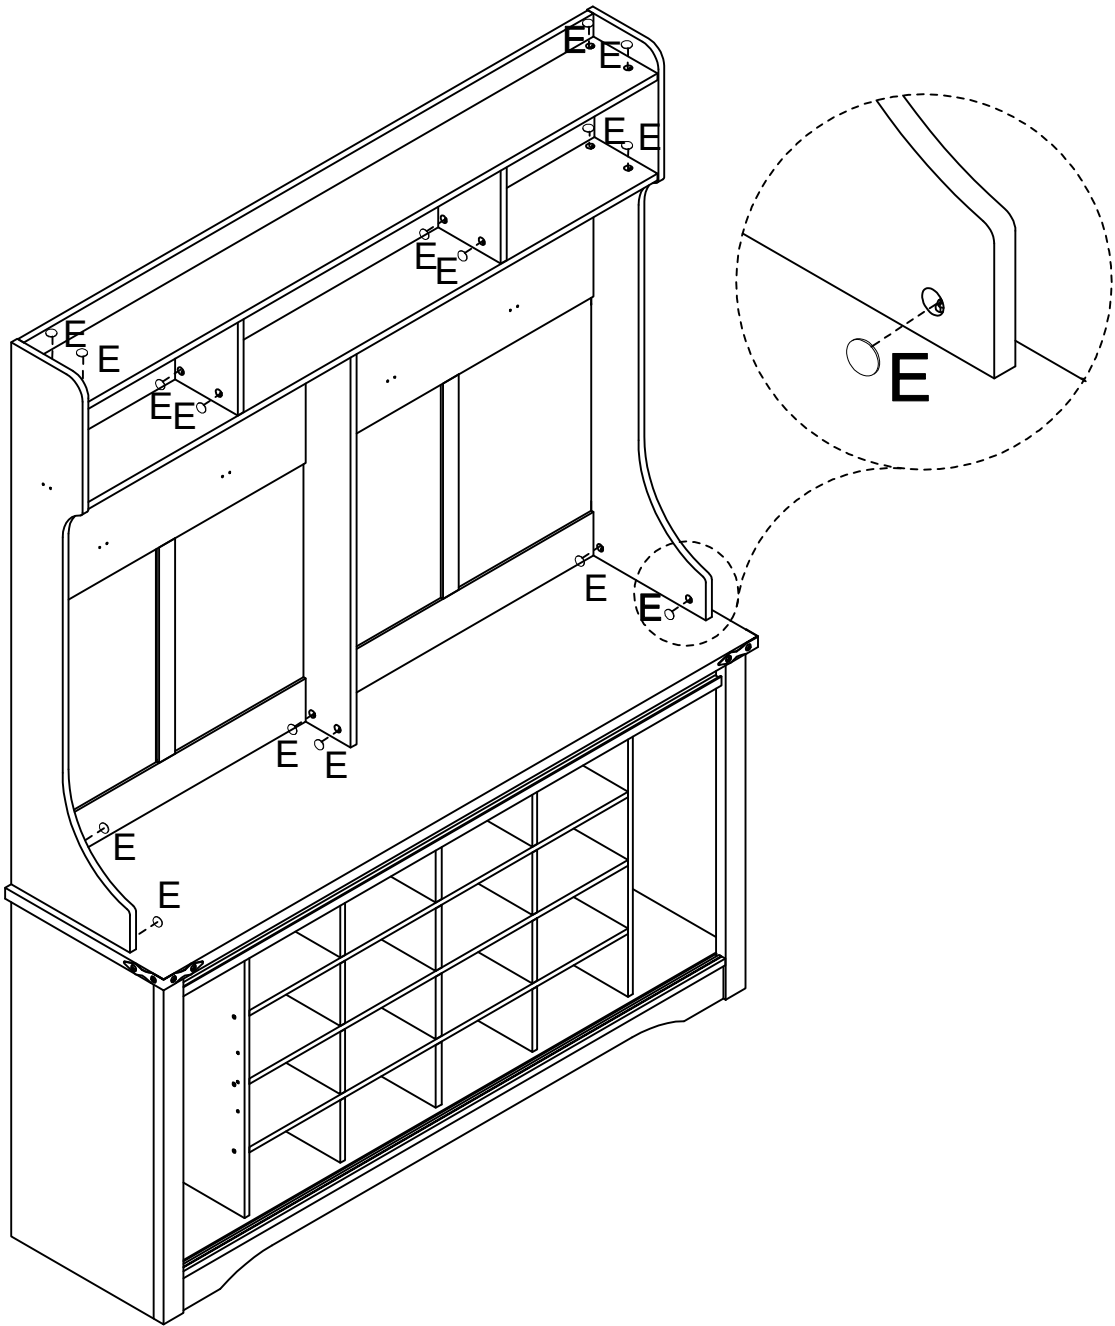X10


# Step 34




E
O
X72
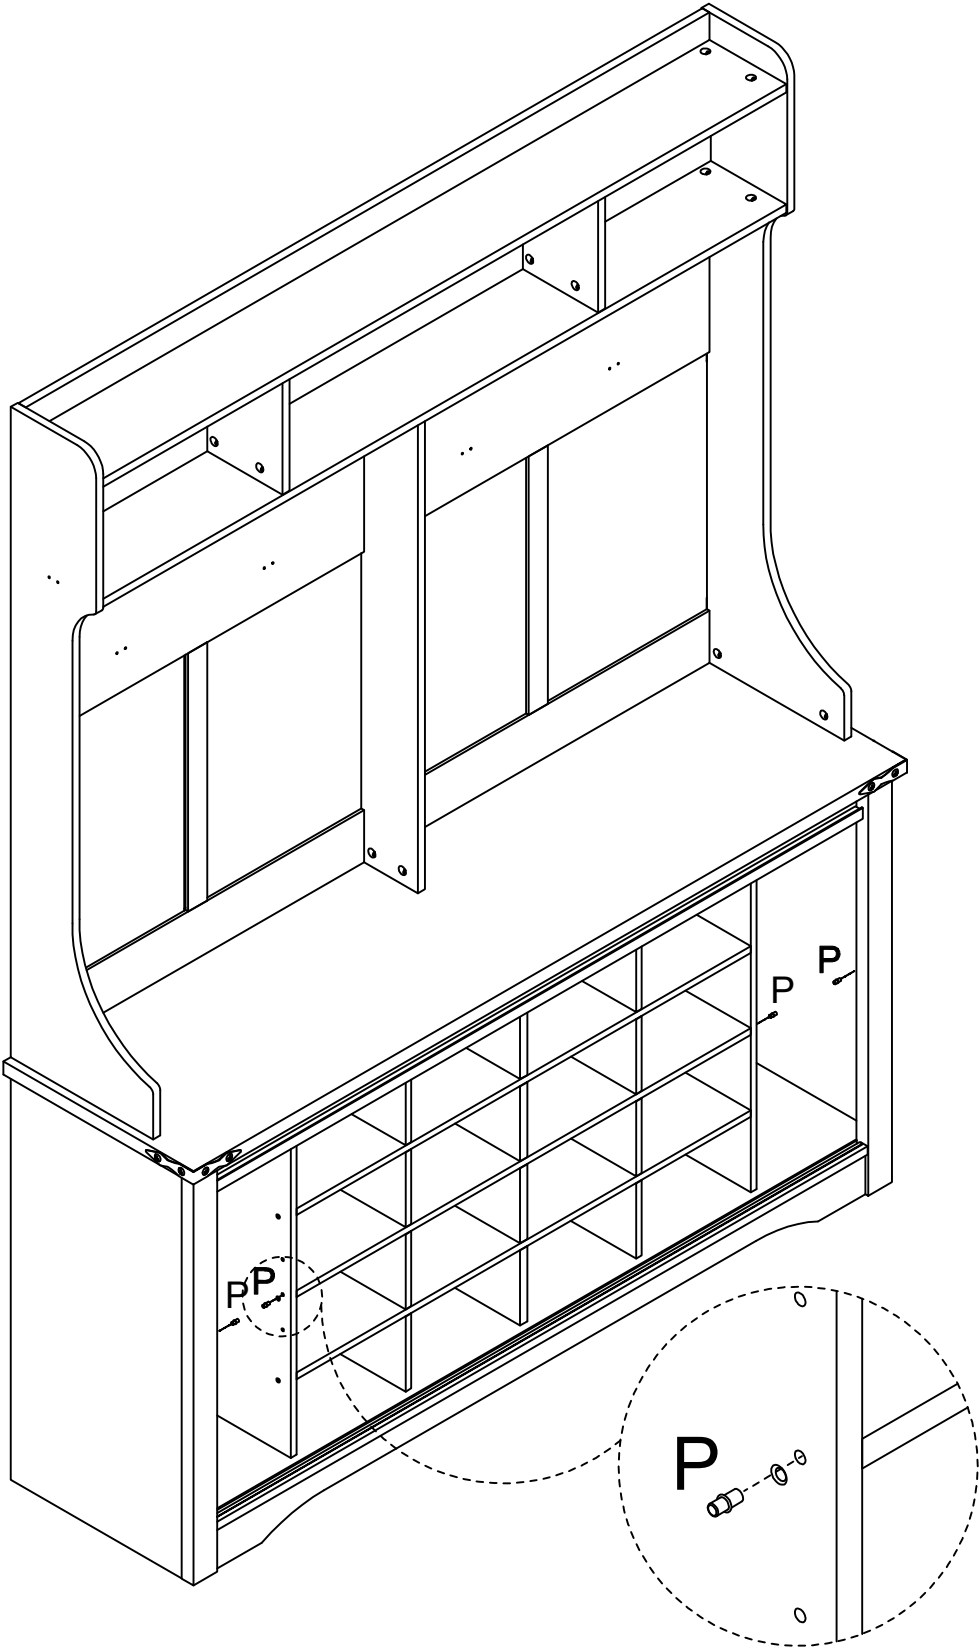
# Step 35




P

X8

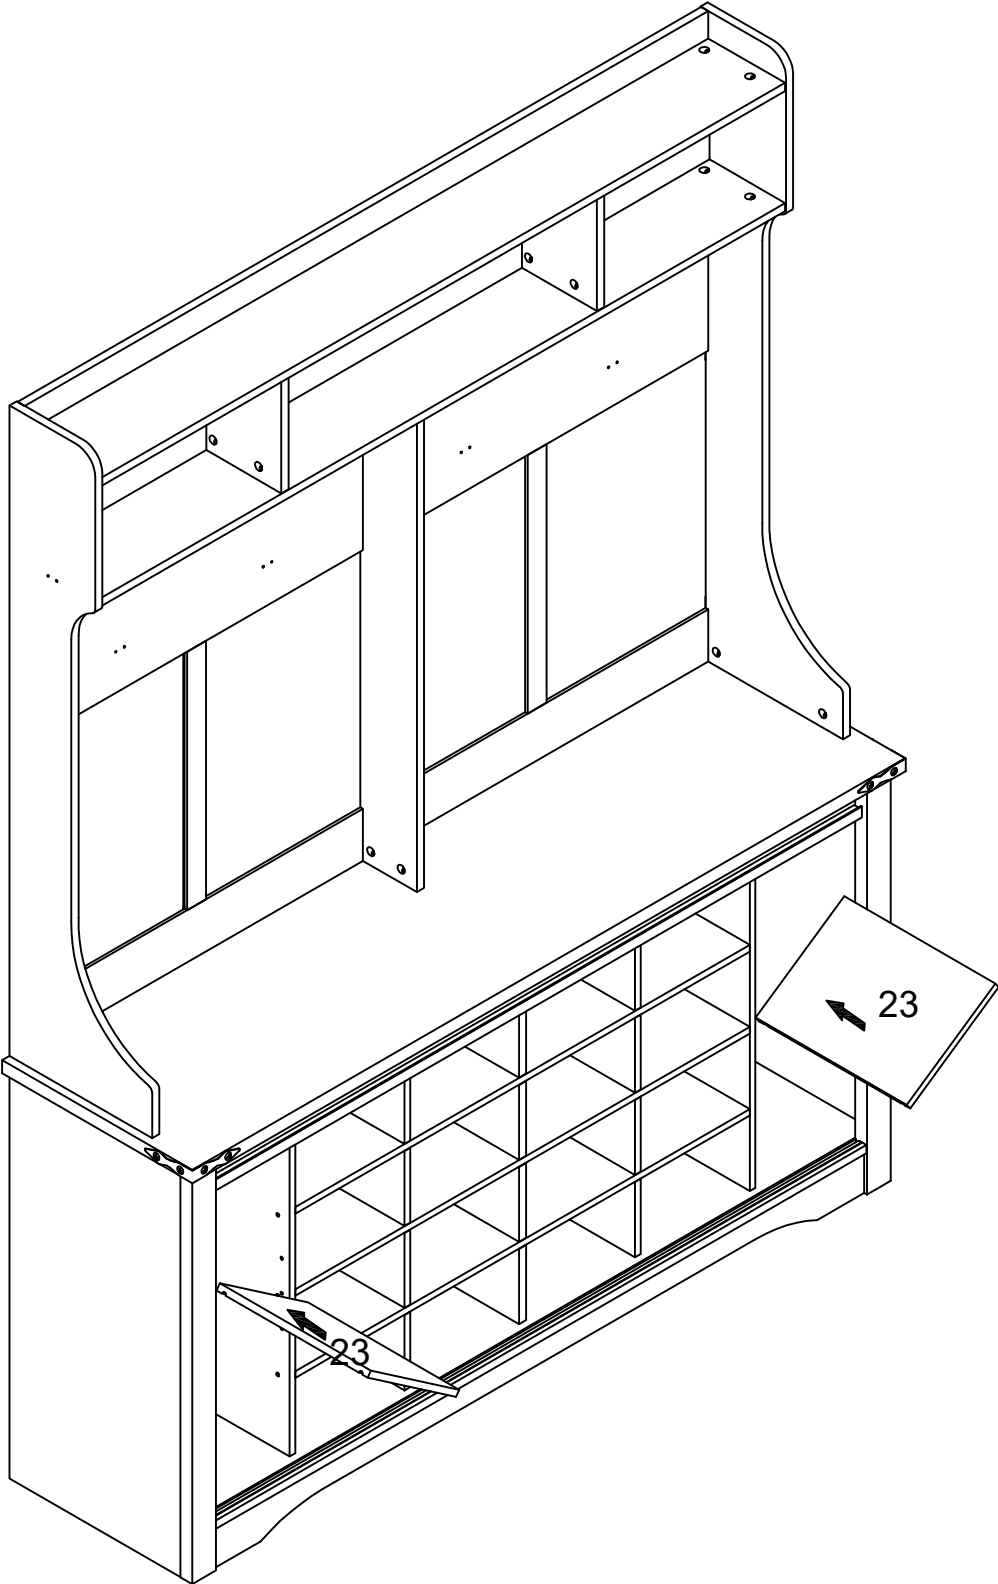

# Step 36



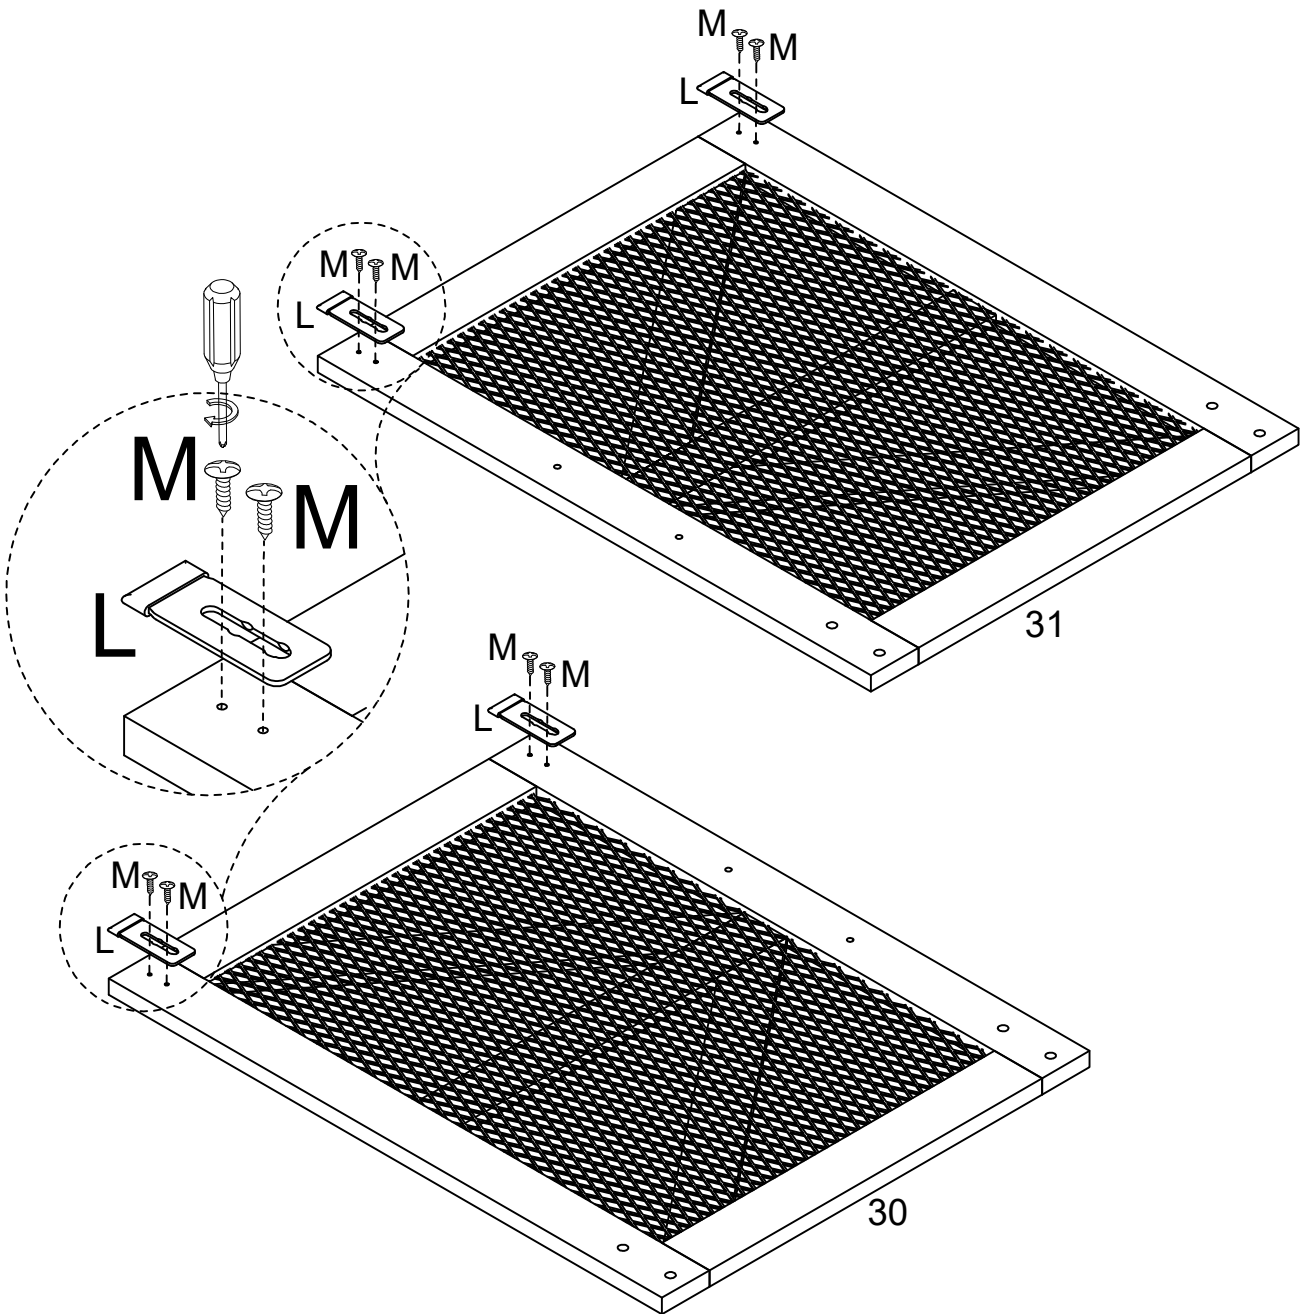


# Step37




L	M
	
X4	X8


# Step 38

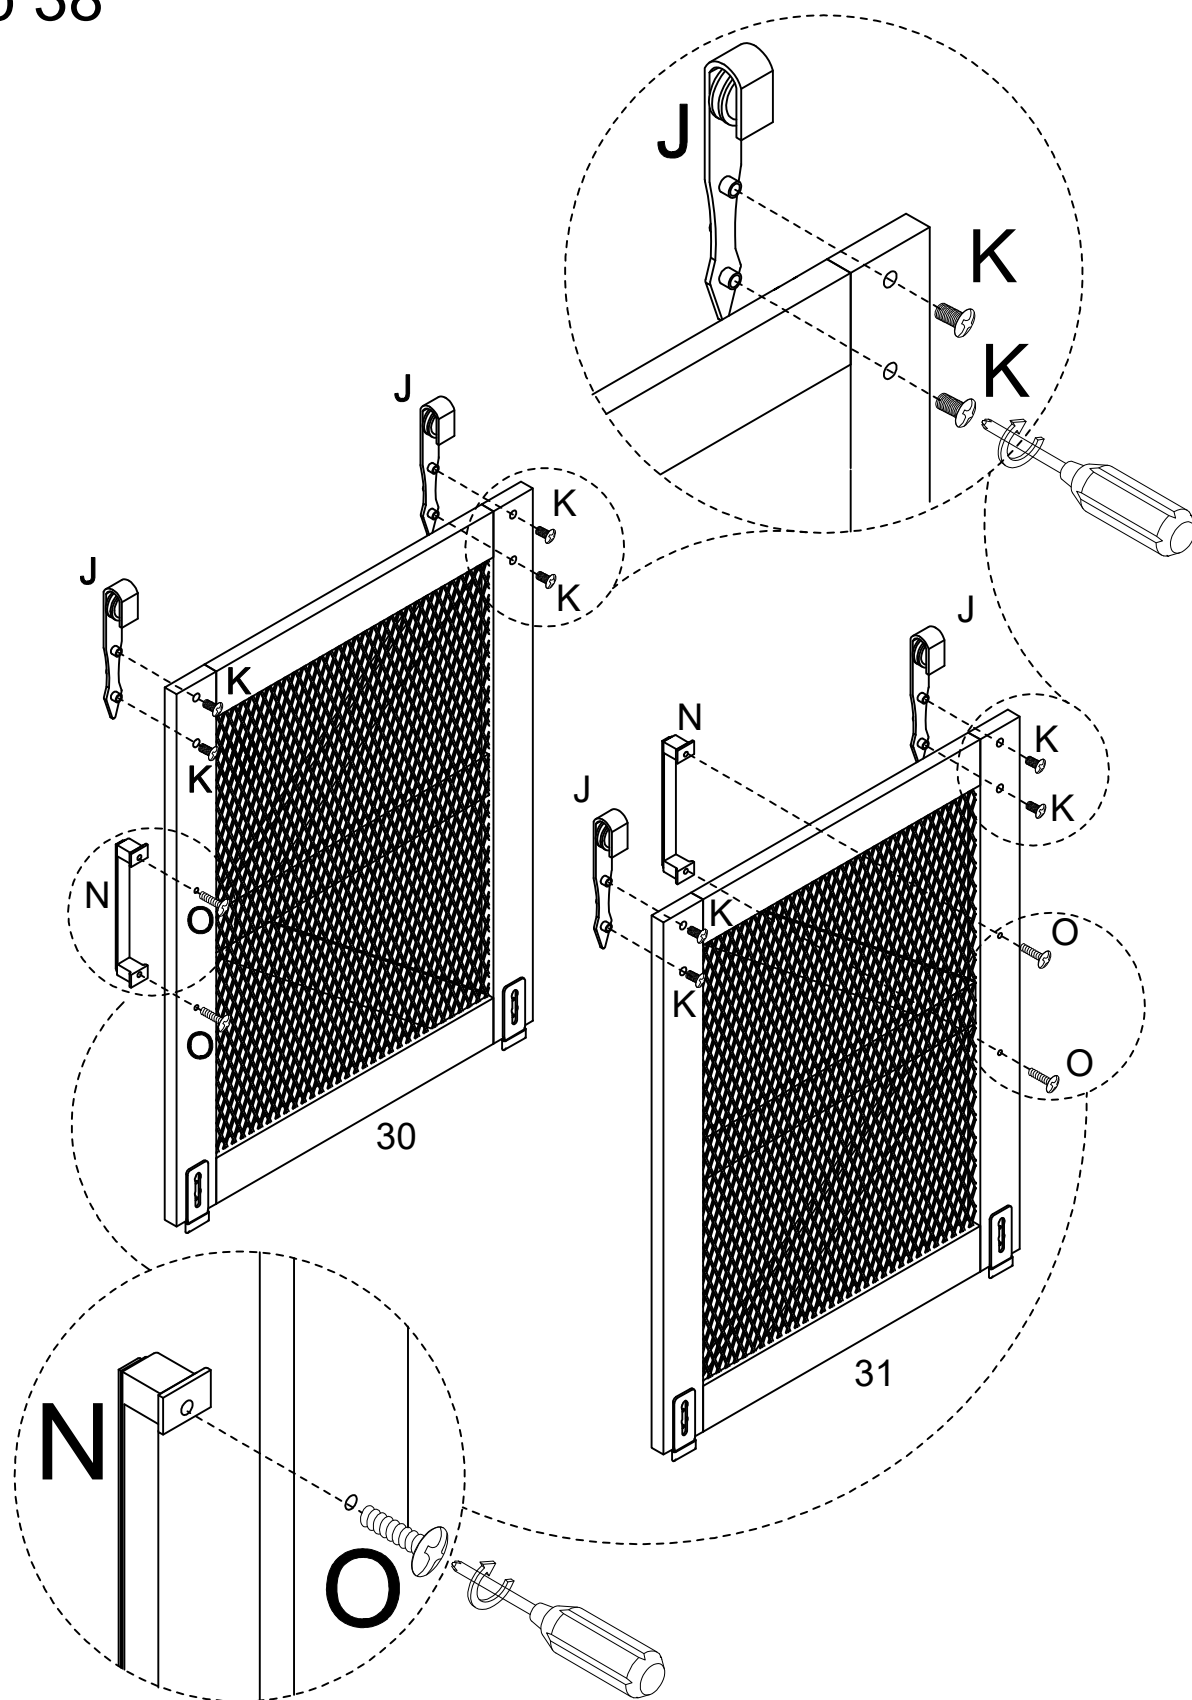


## Step 39

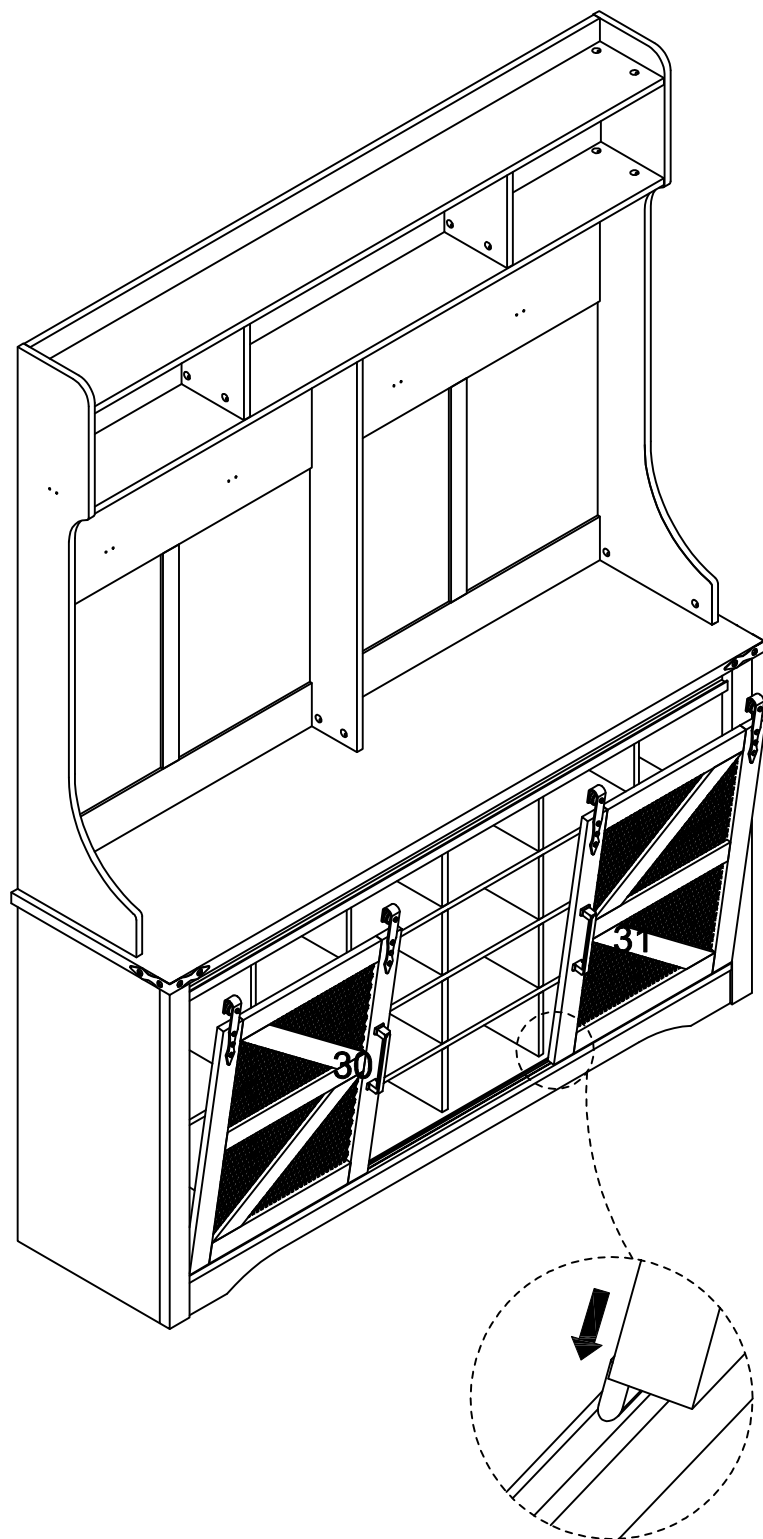

## Step 40

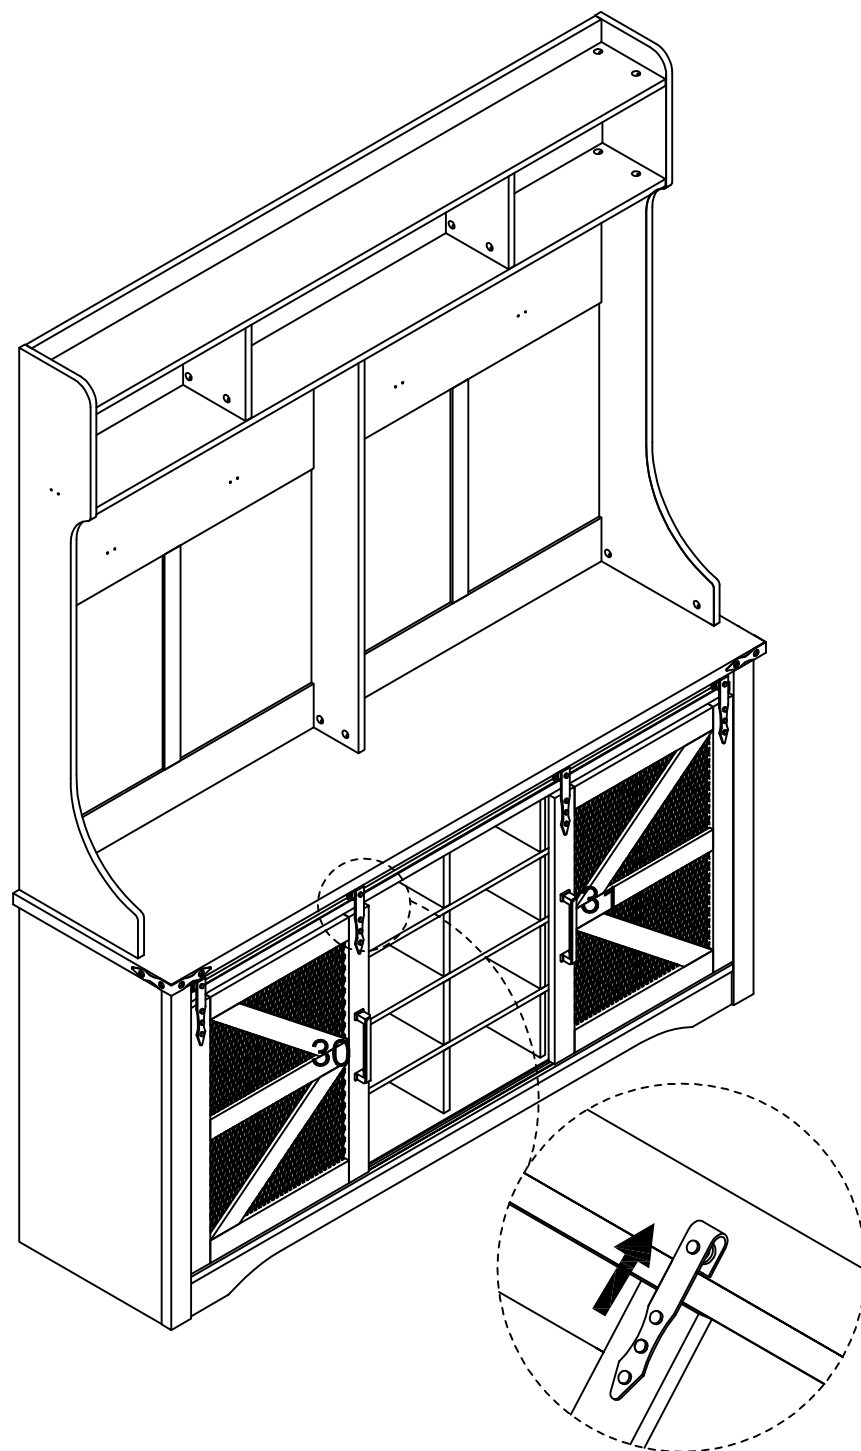




# Step 41

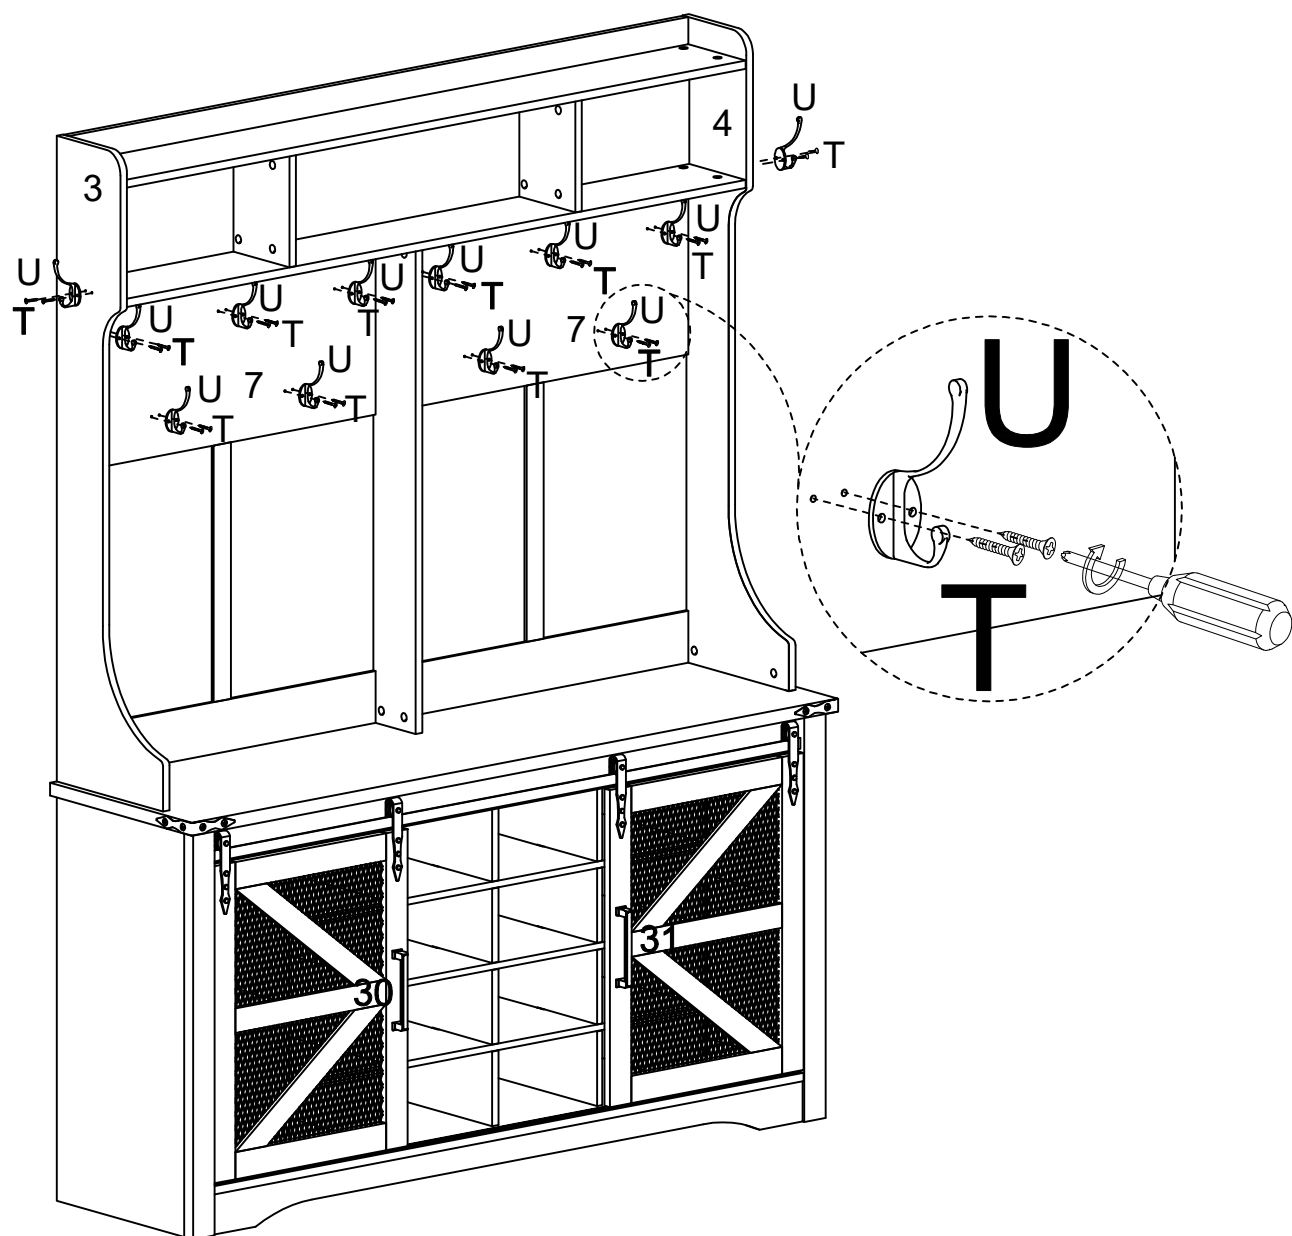

U	T
X12	X24

# Step 42

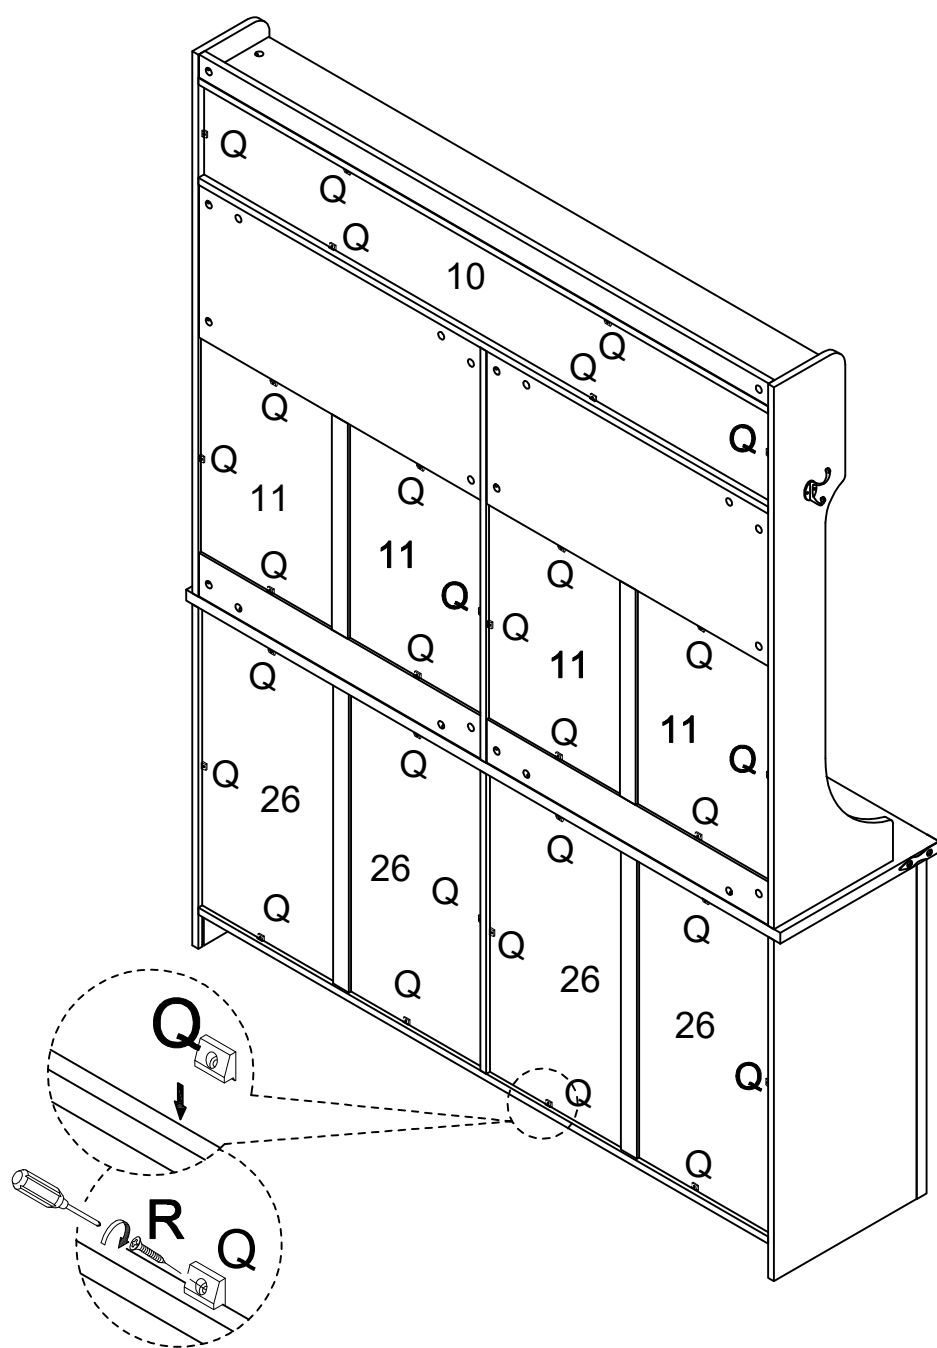

Q	R
	
X30	X30

## Step 43

