

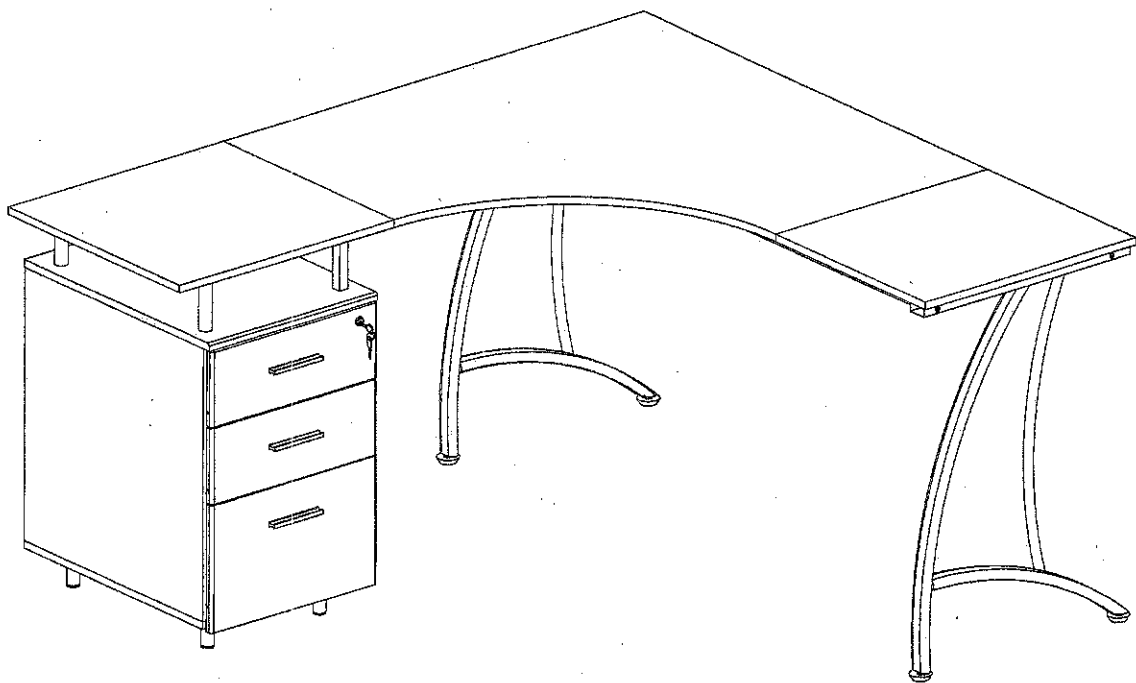


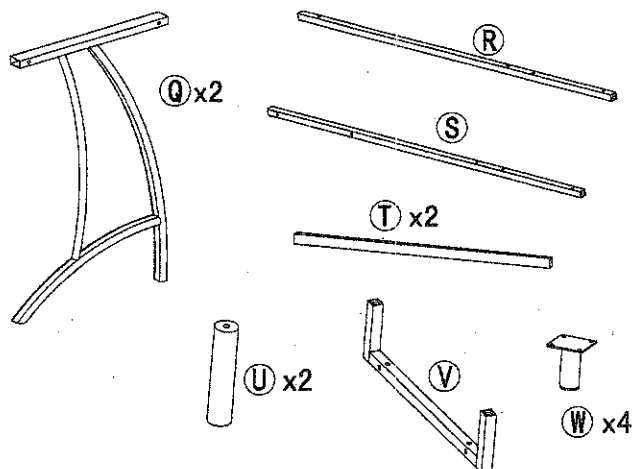
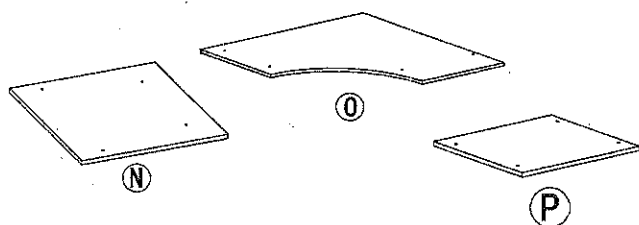
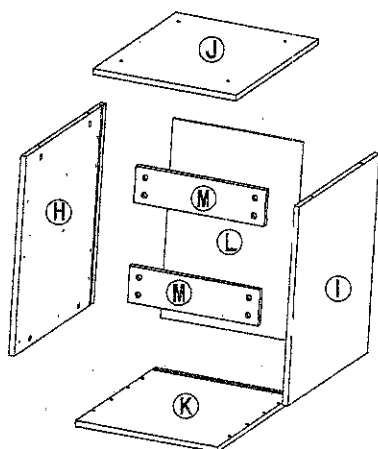
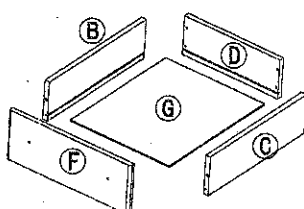


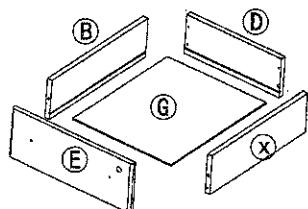




IMPORTANT: DON'T FASTEN BOLTS UNTIL ALL PARTS IN POSITION.

Part




①	 *4 M6x55	②	 *4 M6x35	③	 *15 M6x30
④	 *12 4x35	⑤	 *56 M4x14	⑥	 *28
⑦	 *4 Ø24XM8	⑧	 Left Right *3	⑨	 *3
⑩	 *8 Ø6X40	⑪	 *6 M4x18	⑫	 *2 M6x20
⑬	 *1	⑭	 *1	⑮	 *3
					

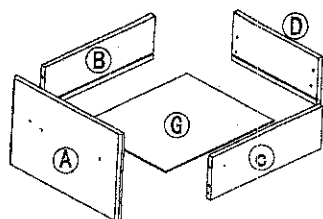





Drawer (1)

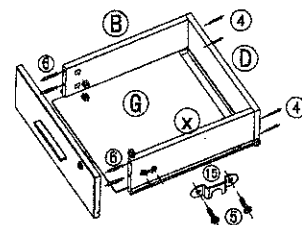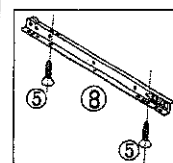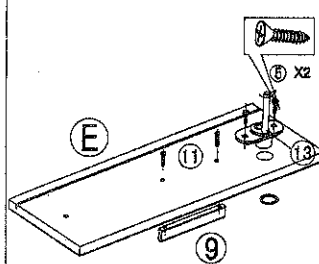


Drawer (2)

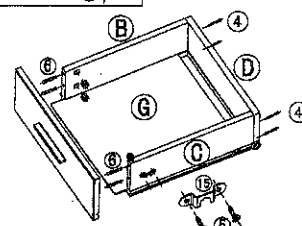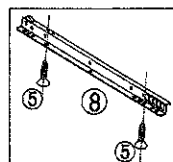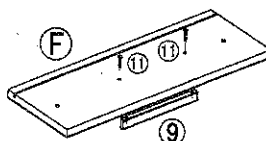


Drawer (3)

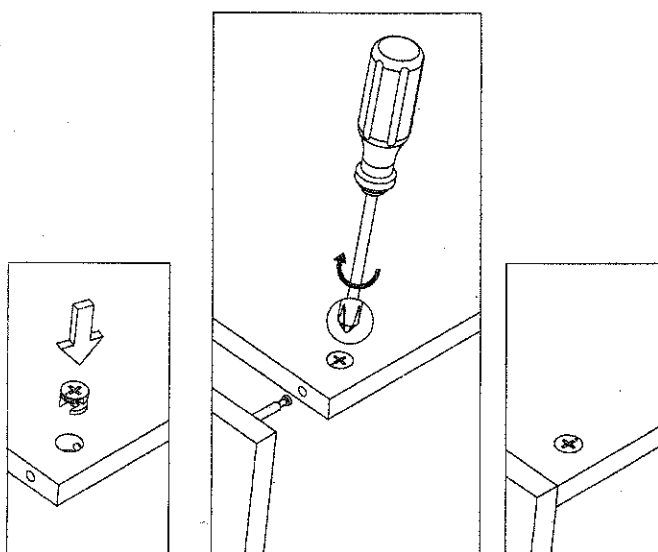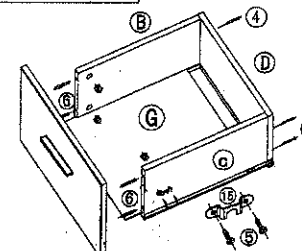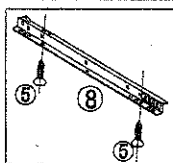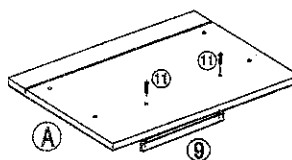


1.

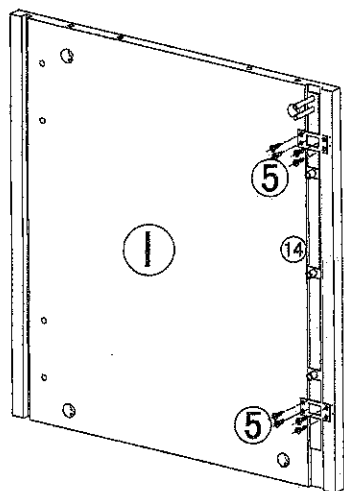


2.

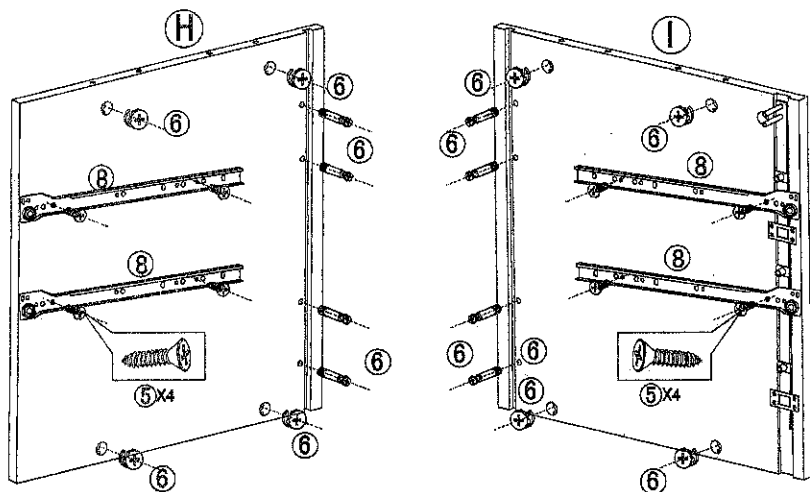


3.

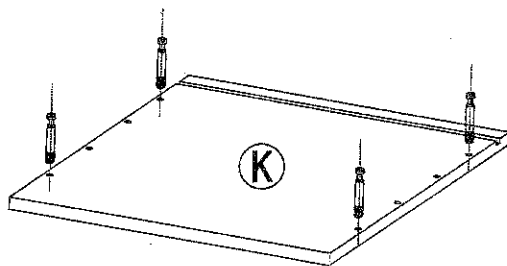


4.

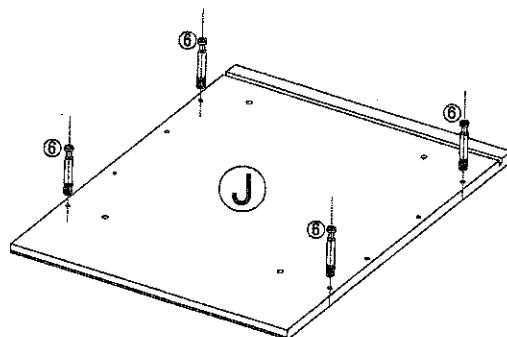


5.

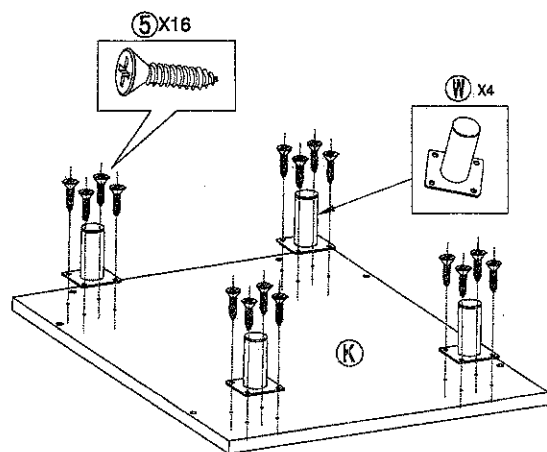


6.

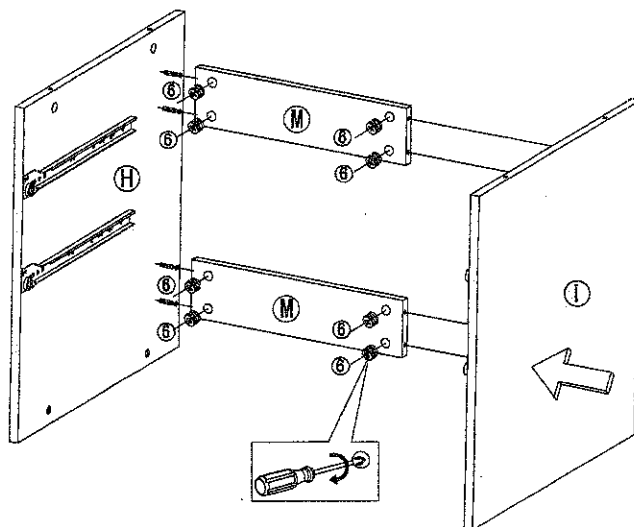


7.

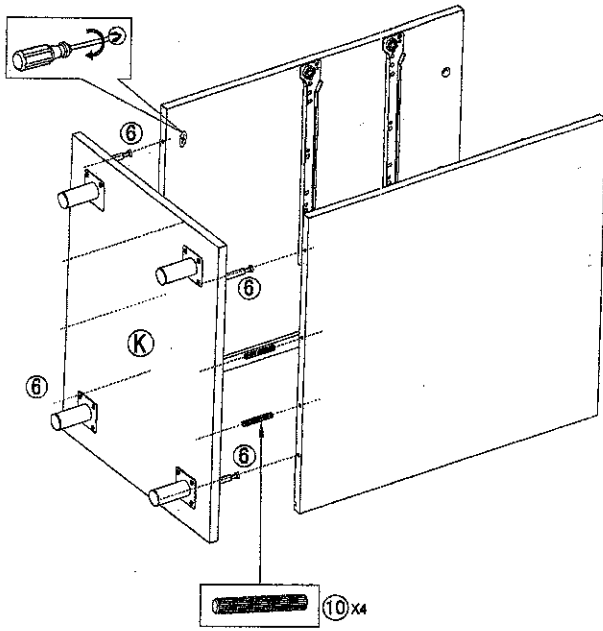


8.

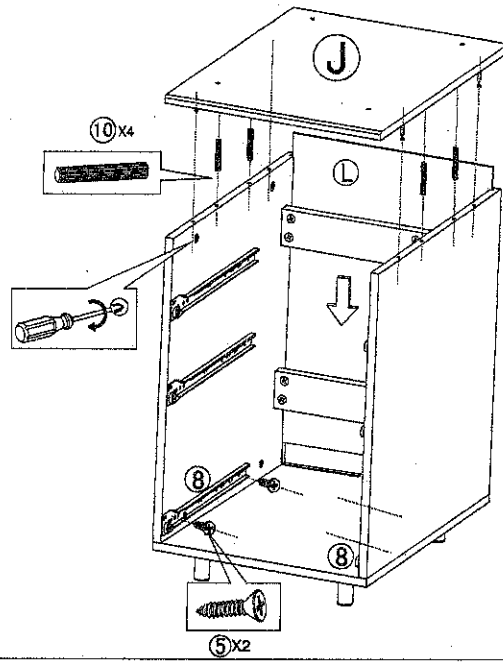


9.

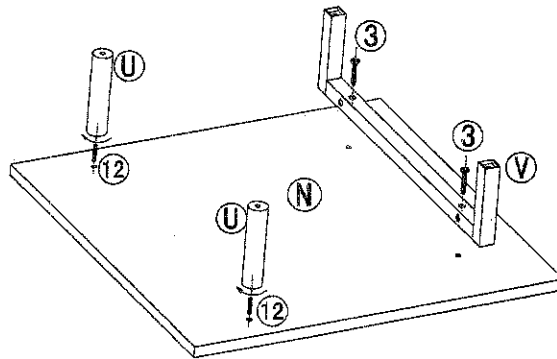


10.

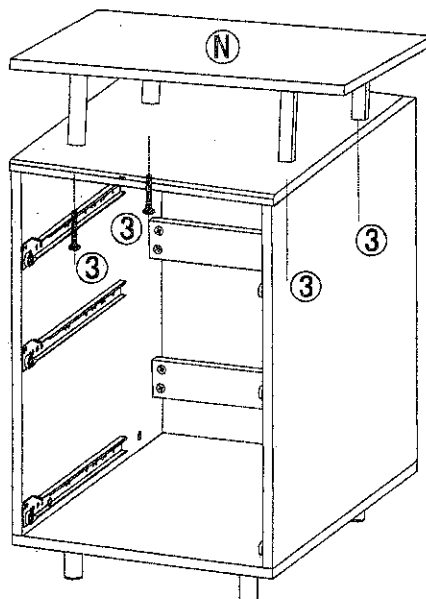


11.

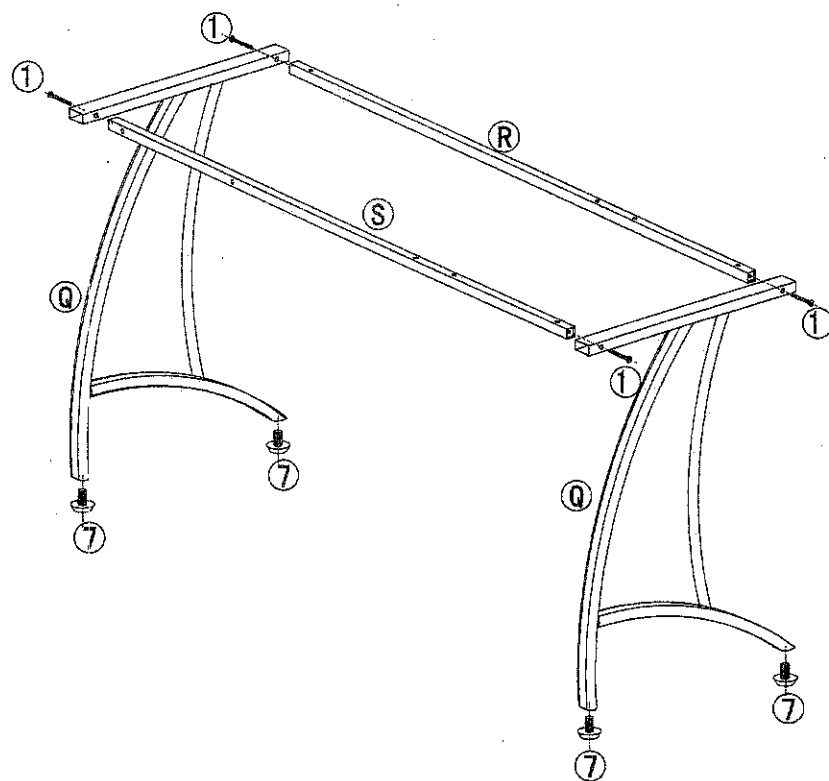

12.

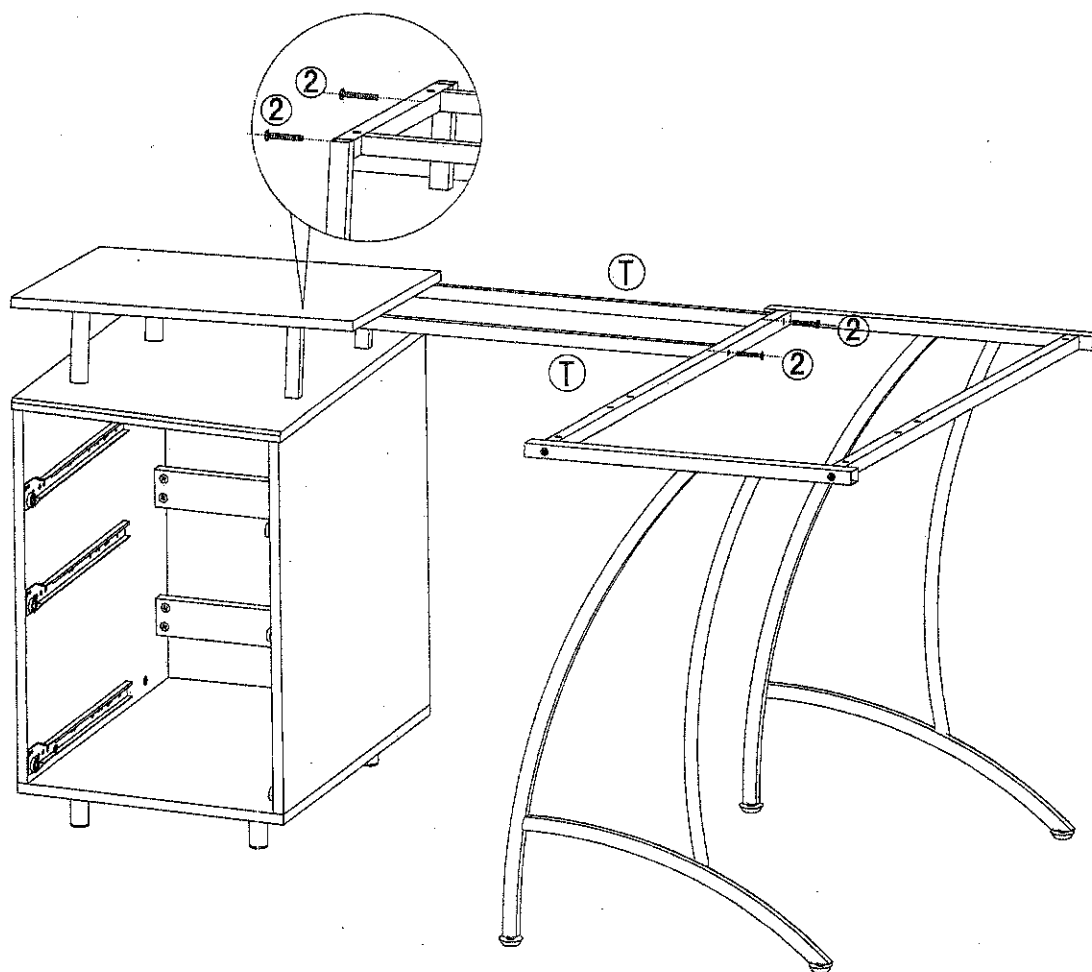

13.

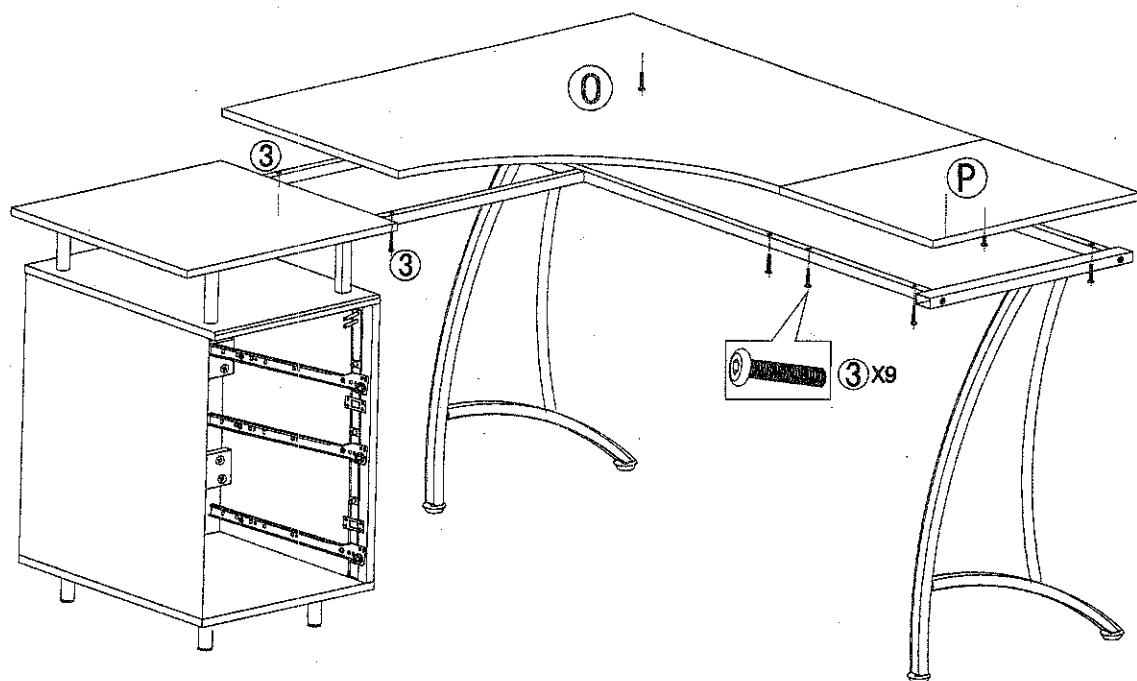

14.

