


ASSEMBLY INSTRUCTIONS

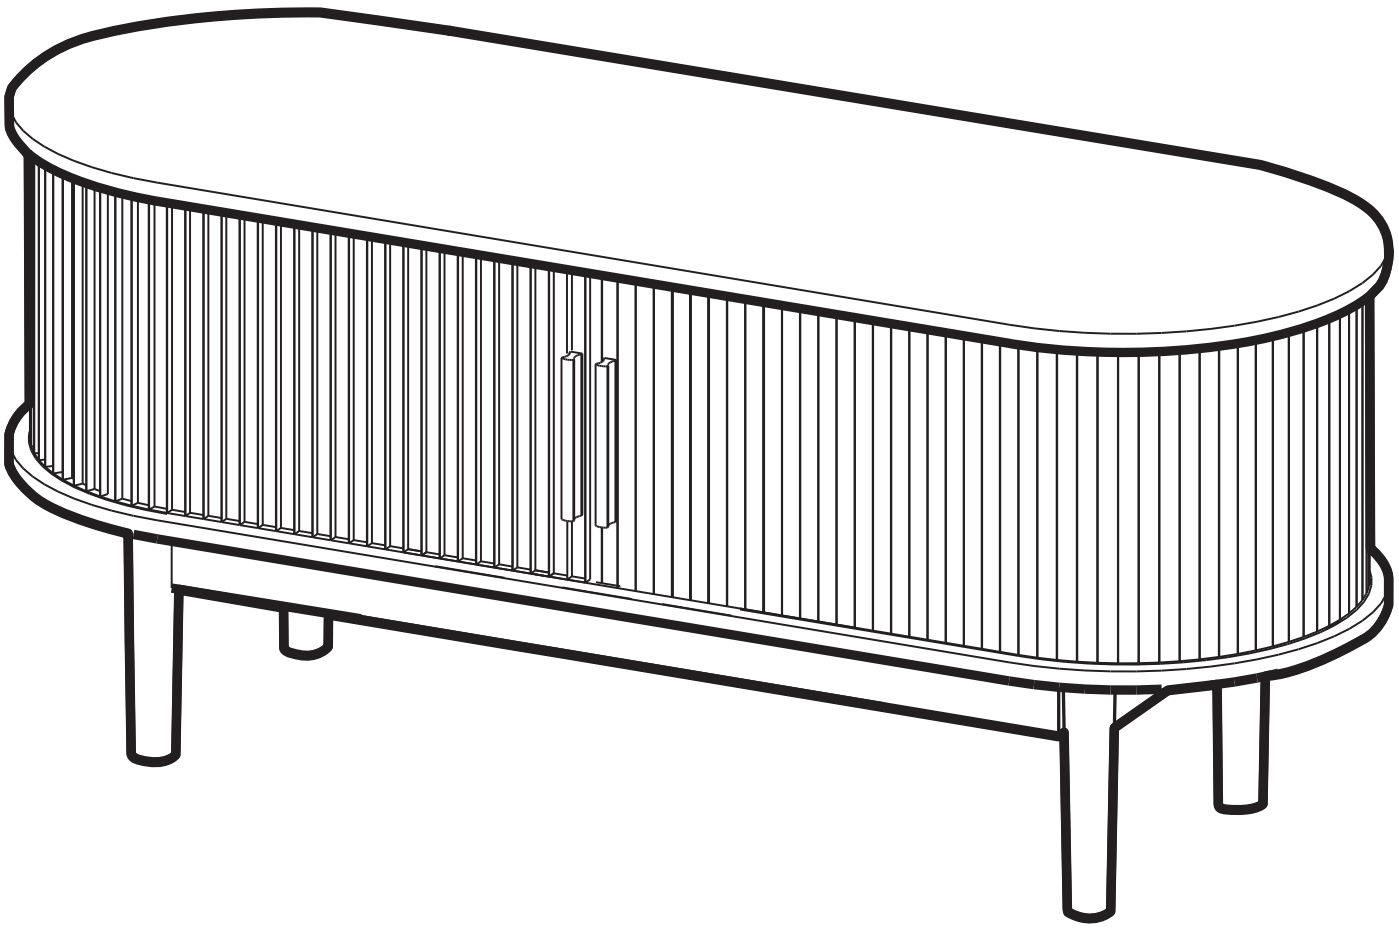

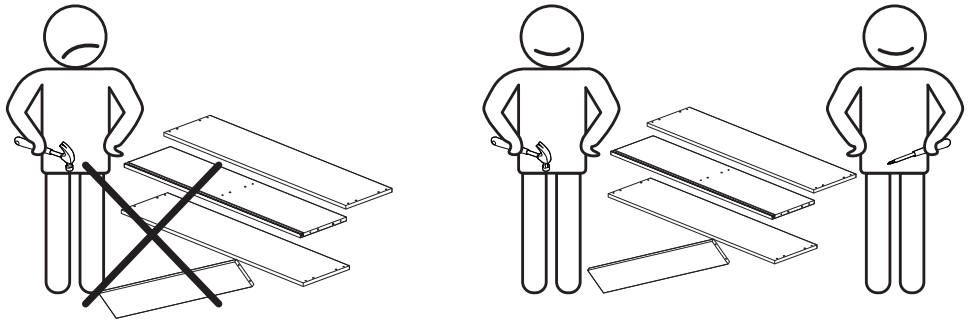


We recommend at least 2 people for the assembly.

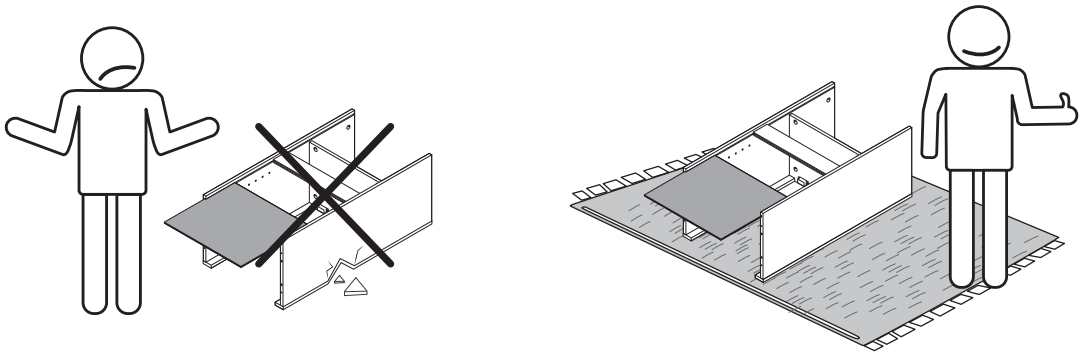


To prevent any damage during assembly, place a mat under the pieces.




PARTS DIAGRAM

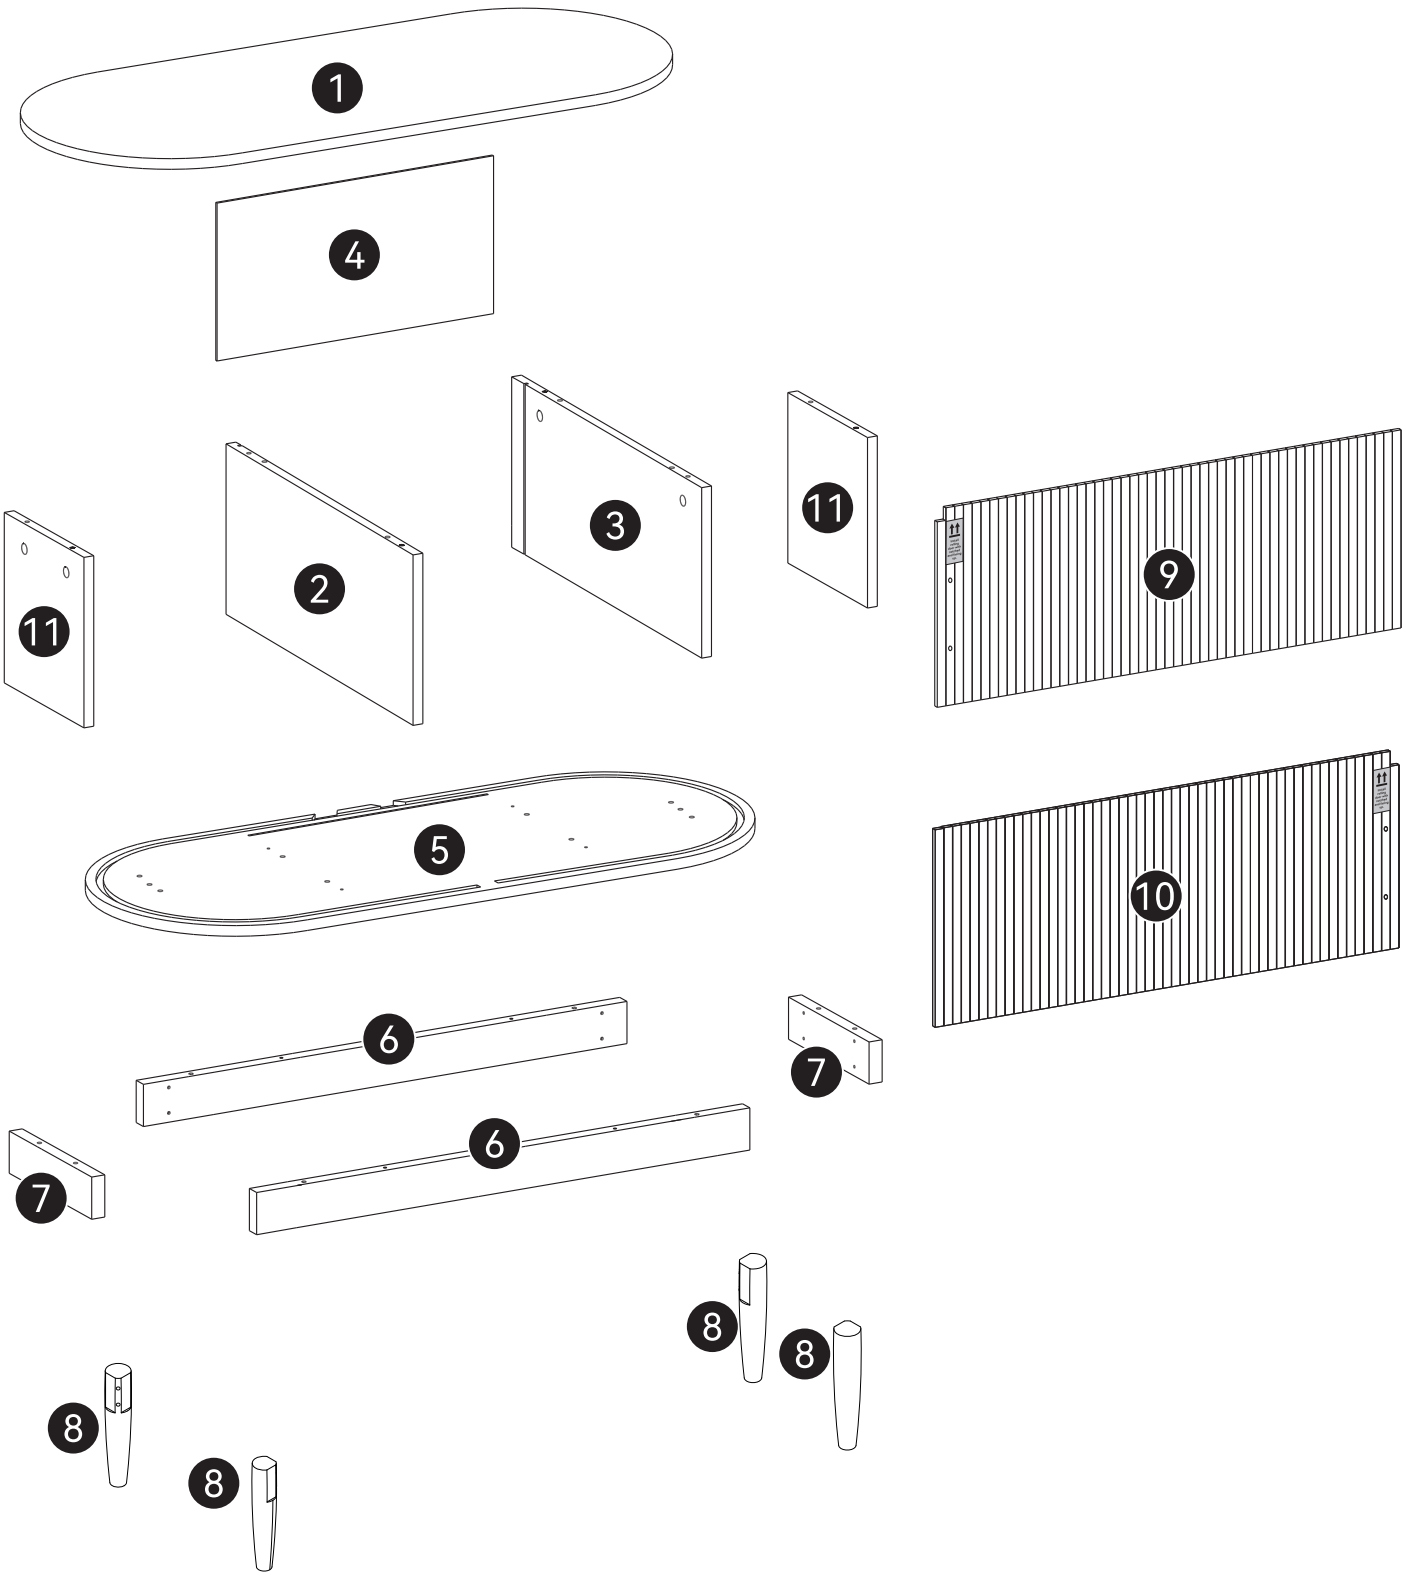


PARTS LIST

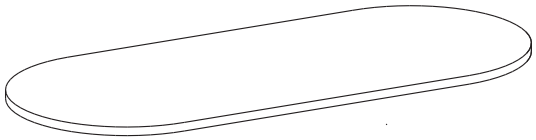


1 x 1

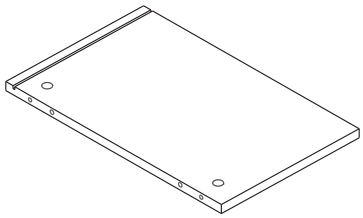


2 x 1

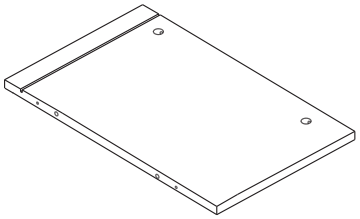


3 x 1

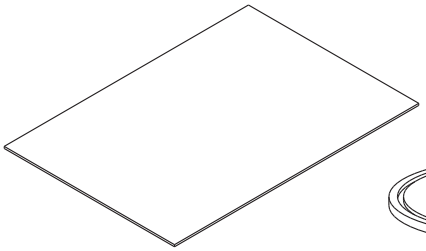


4 x 1

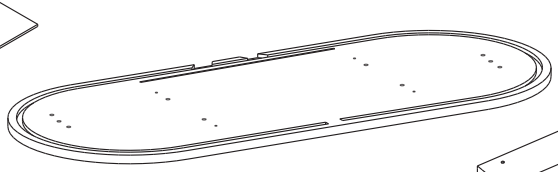


5 x 1

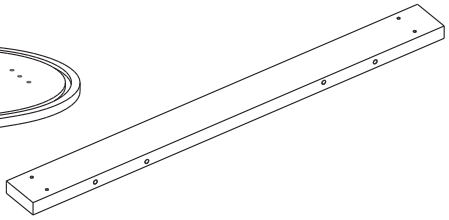


6 x 2

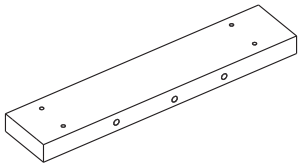


7 x 2




8 x 4

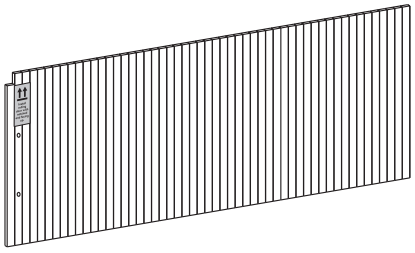

9 x 1

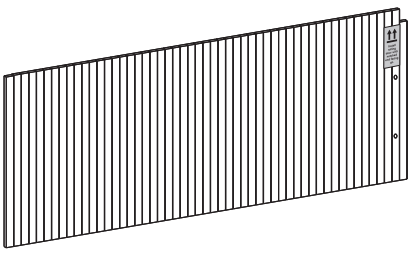


10 x 1

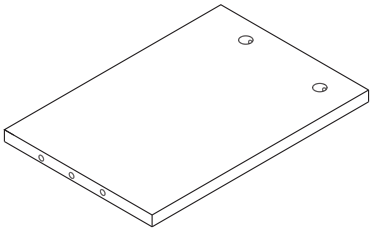

11 x 2

HARDWARES

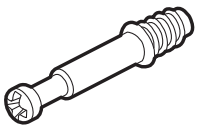


M6x35mm

A x 8




M15x10mm

B x 8

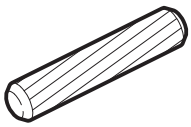

Ø6x30mm

C x 16



M4x35mm

D x 8




M4x14mm

E x 4




M3x14mm

F x 4

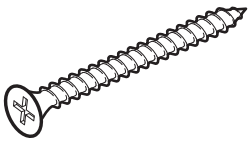

M4x50mm

G x 8



M6x35mm

H x 8




I x 8




J x 8




K x 4

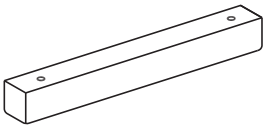

L x 2

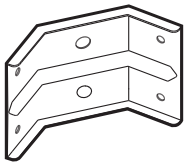

M x 4

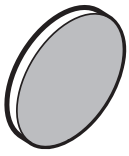

Ø25x3mm

N x 4




O x 8



M4x14mm

P x 16

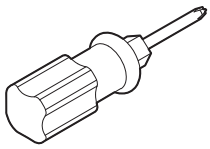

x 1




M4

x 1

SPARE PARTS

The spare parts are the additional parts provided in case of missing or damaged ones. Keep the spare parts and tools for future use.

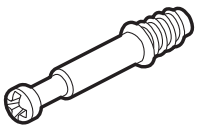


M6x35mm

A x 1




M15x10mm

B x 1

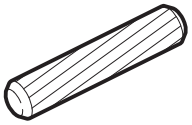


Ø6x30mm

C x 1



M4x35mm

D x 1

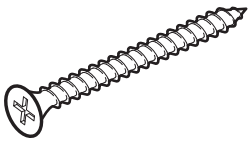

M4x50mm

G x 1




M4x14mm

P x 1


CAM LOCK FASTEN SYSTEM

⚠ Insert the cam bolt into the hole, then insert the cam lock and tighten.


1

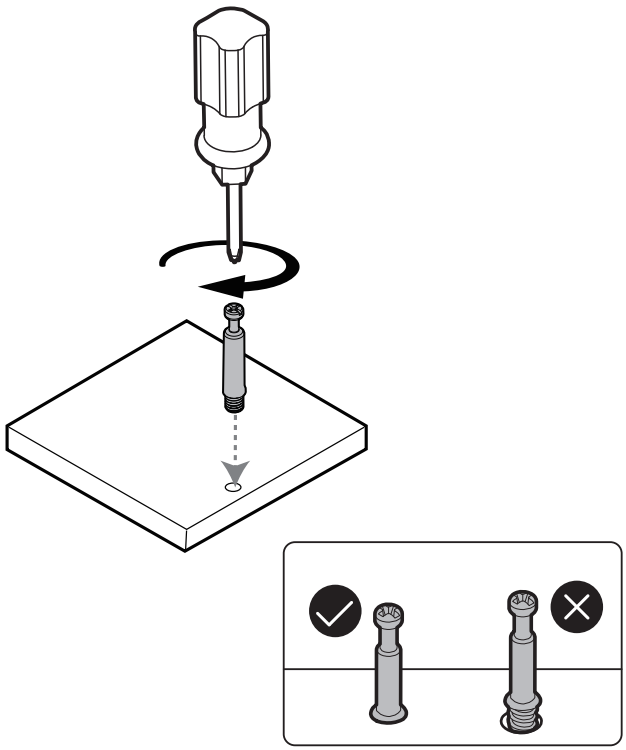

2

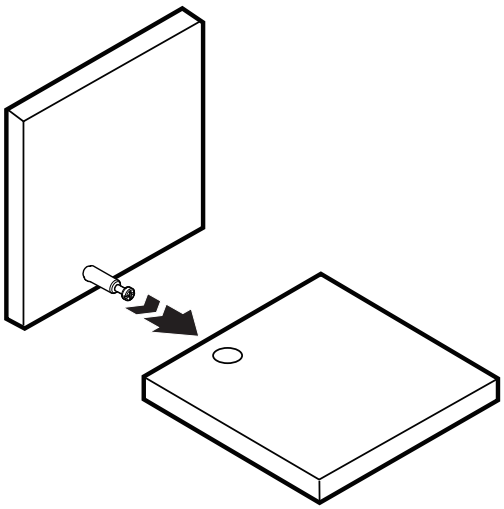


3

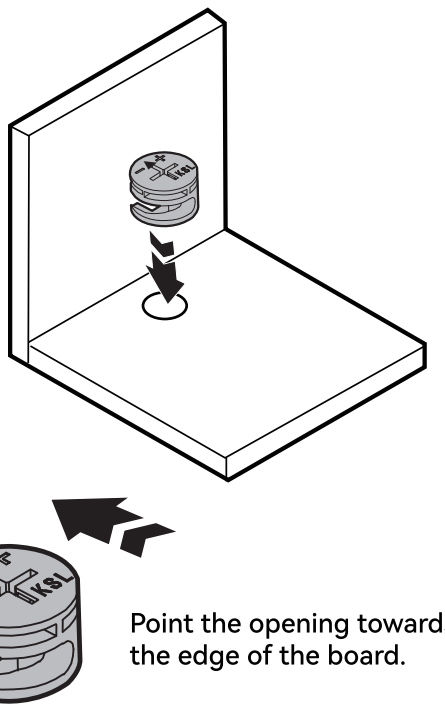


Point the opening towards the edge of the board.


4

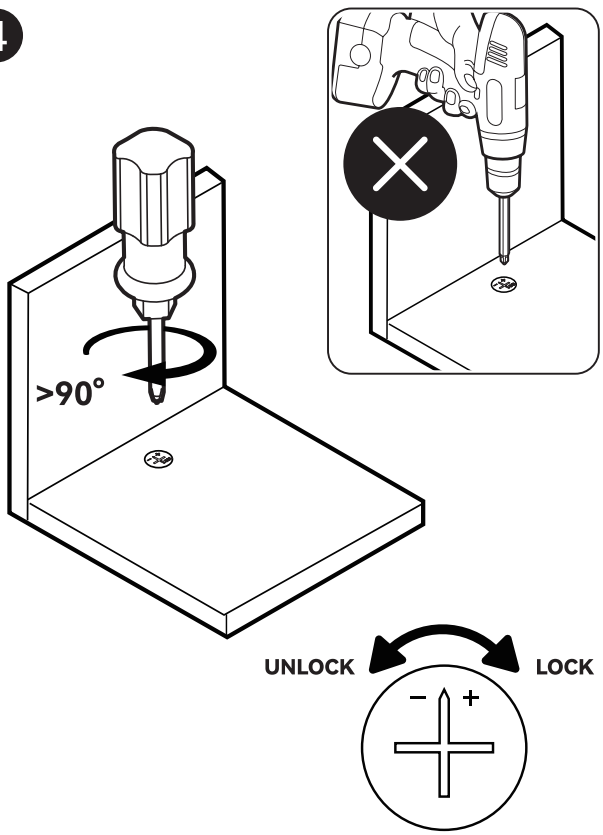


ASSEMBLY


1

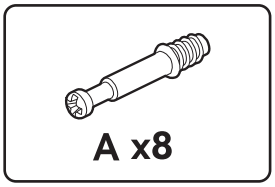


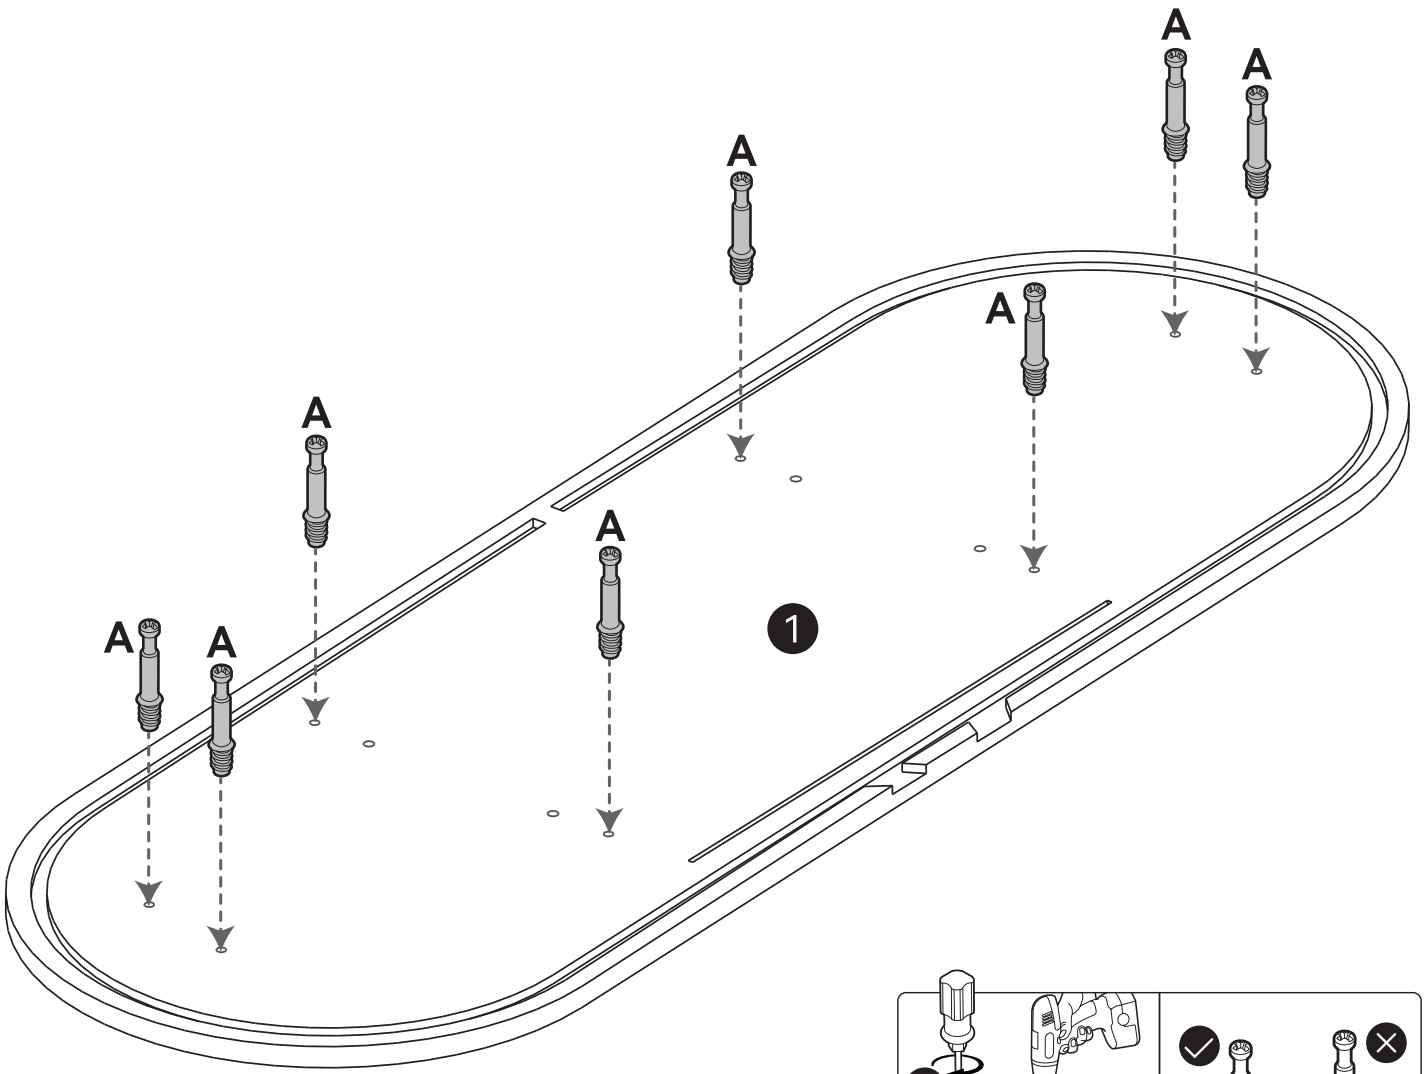


2

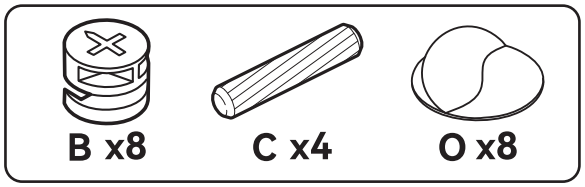


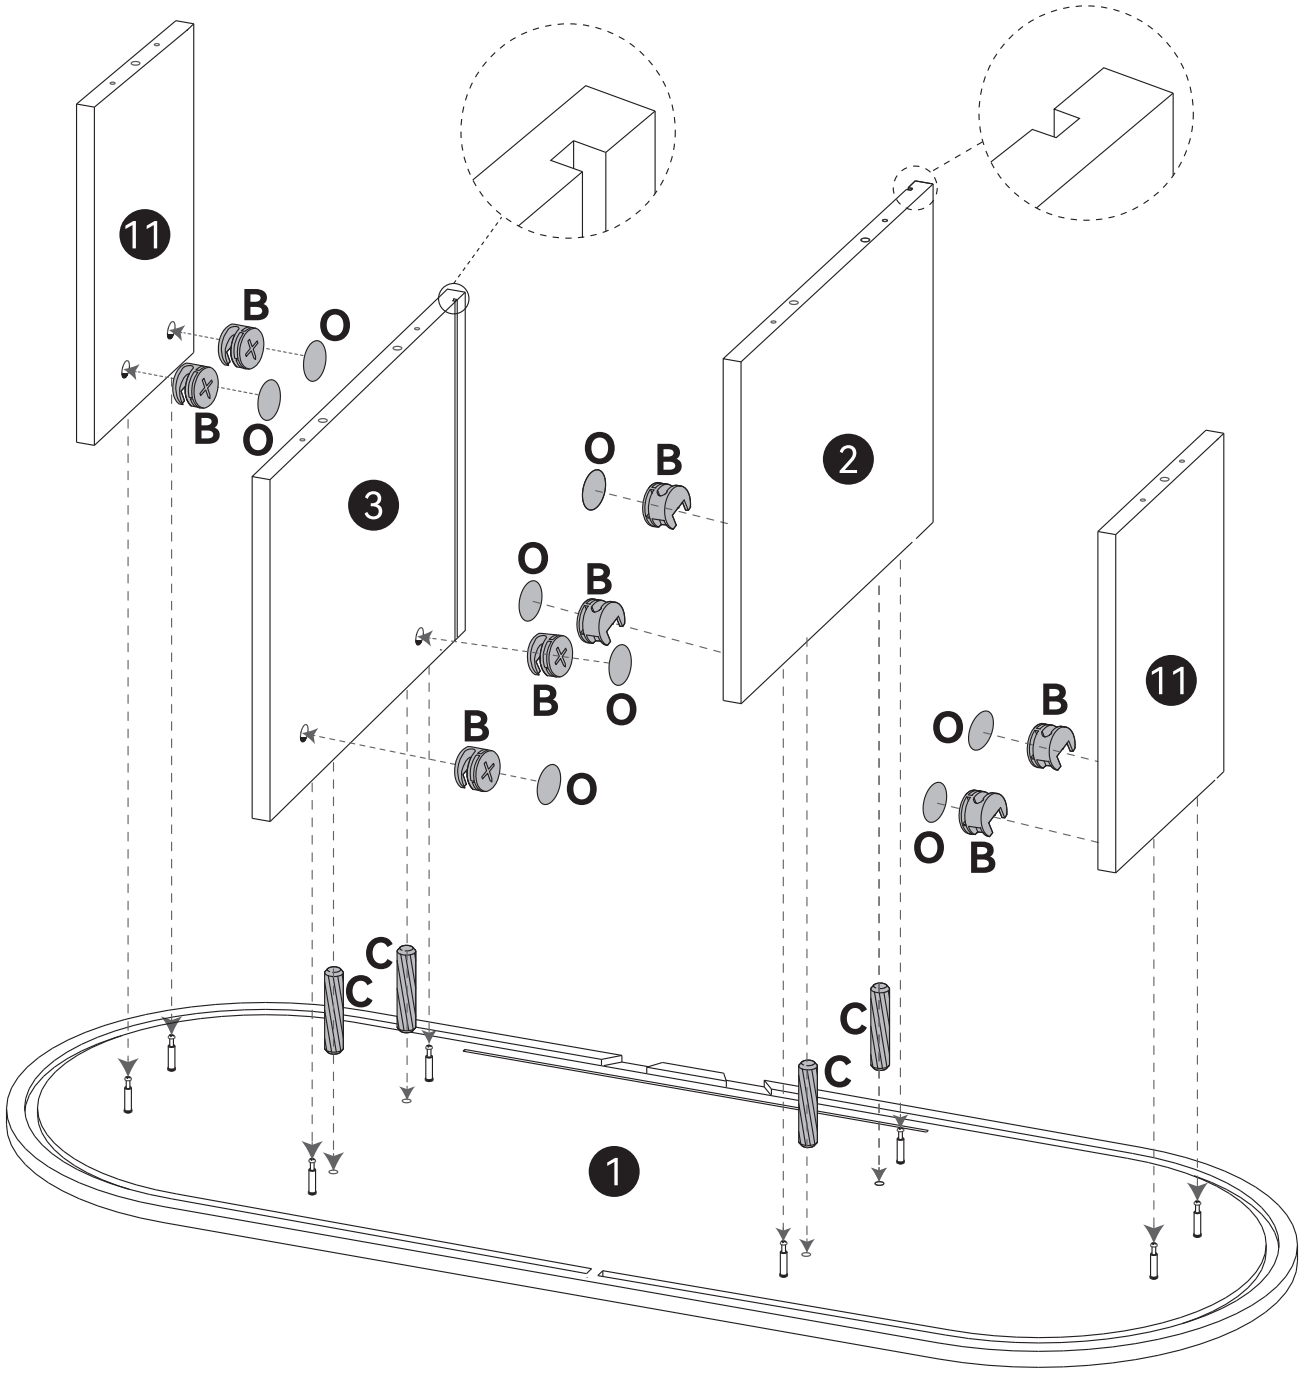

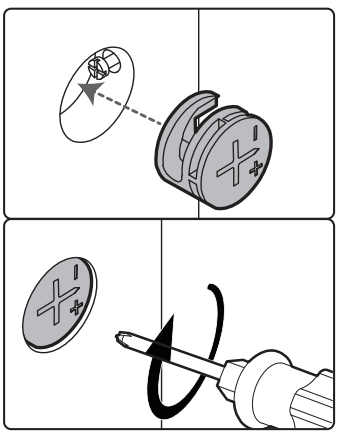


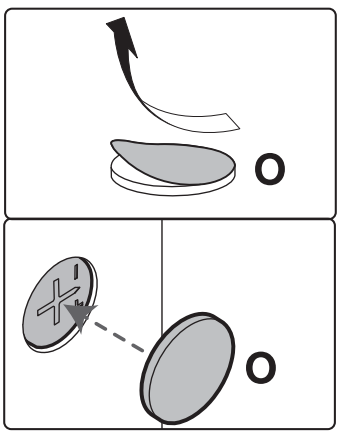



3

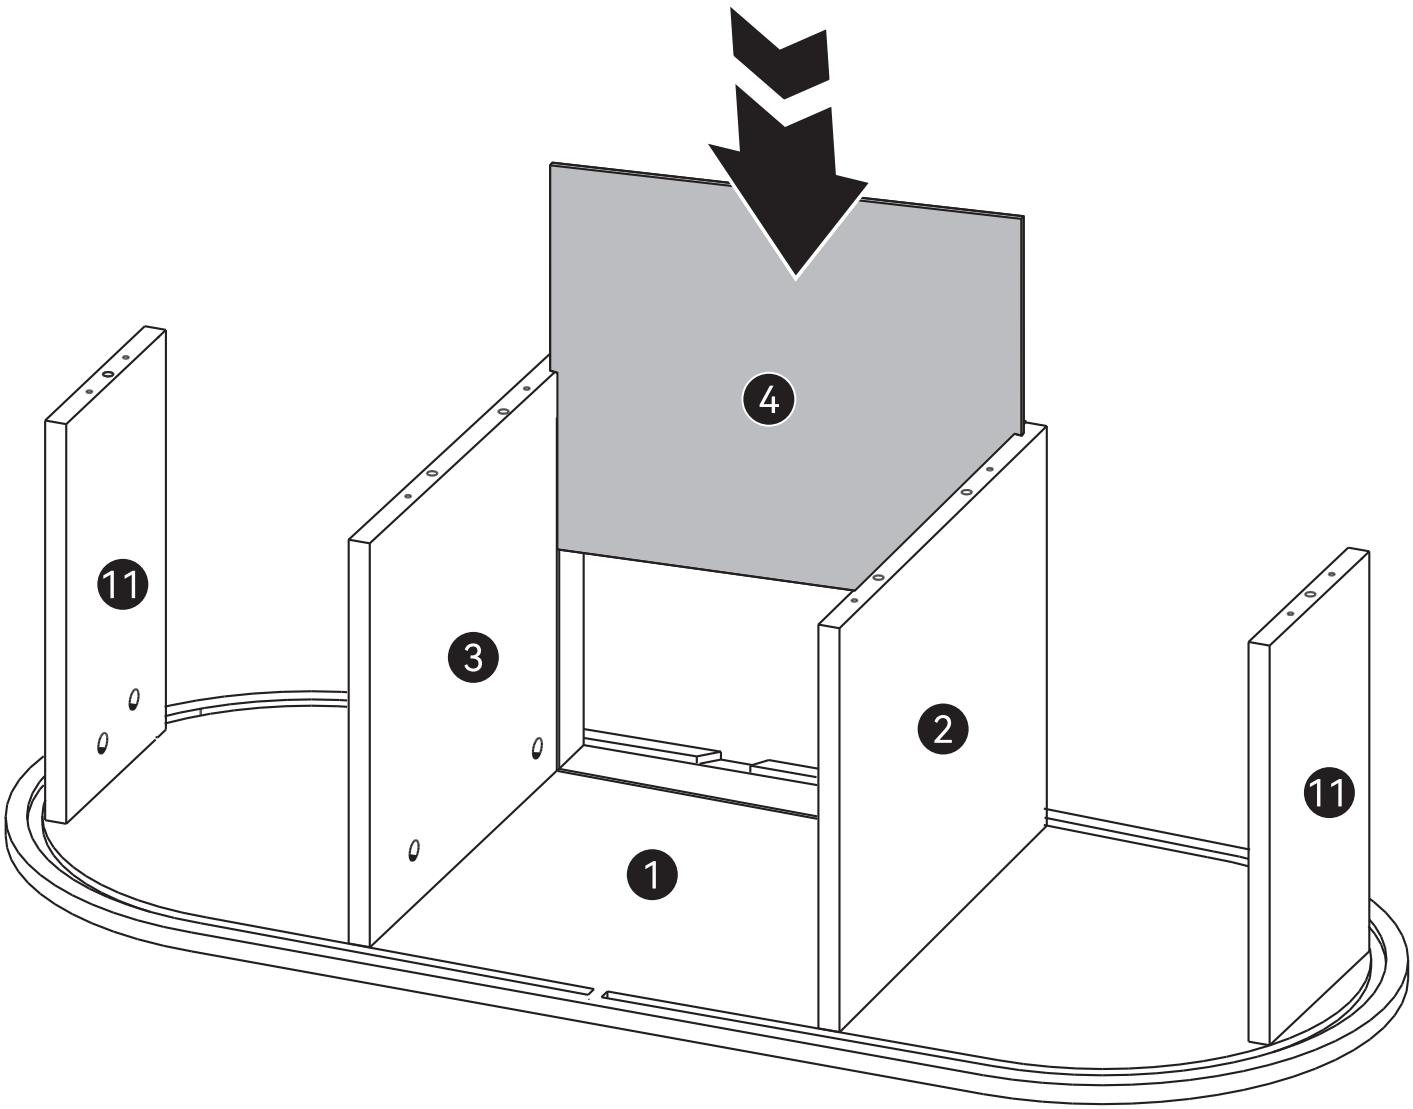


4

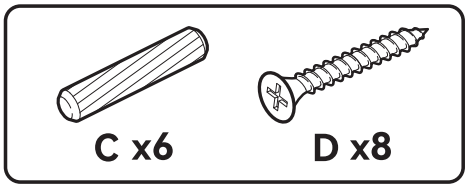


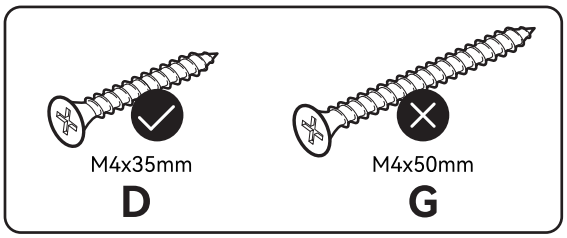

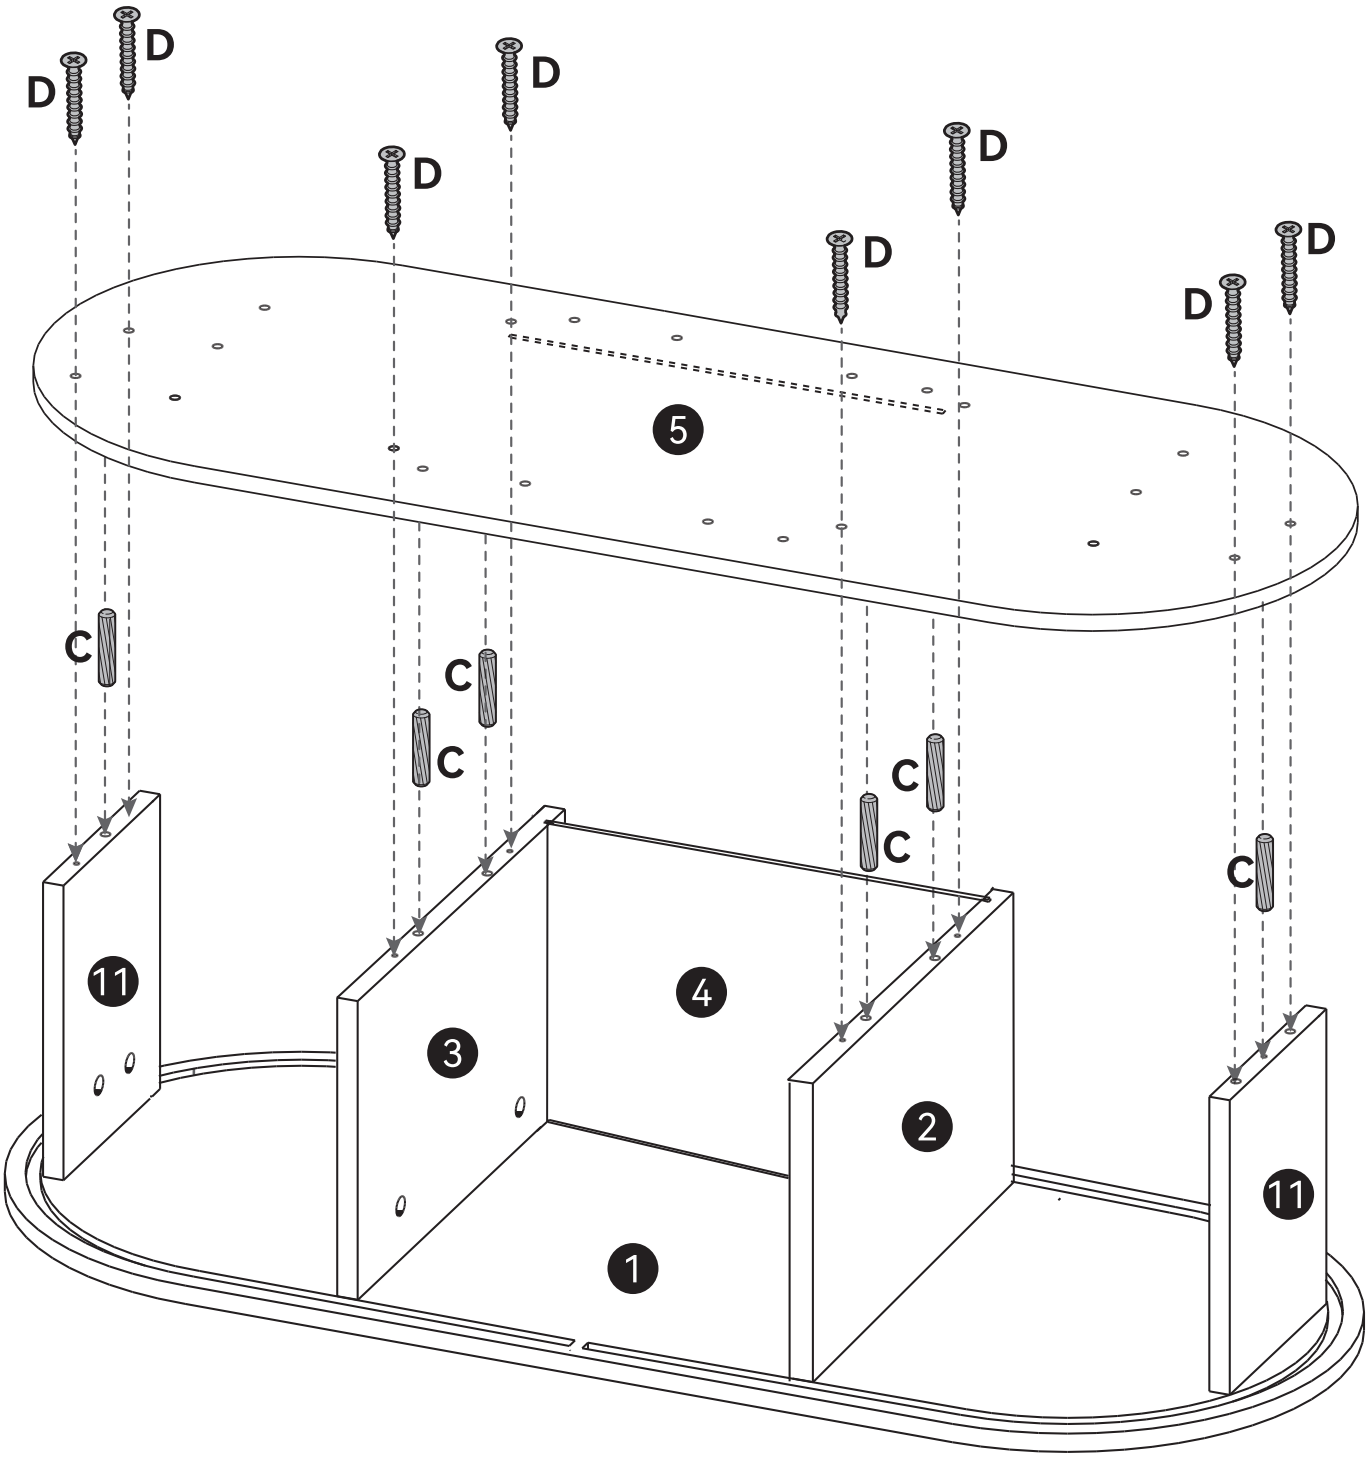



5

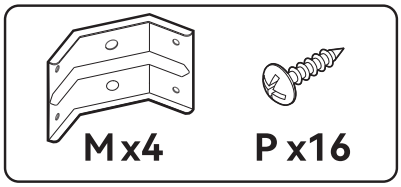


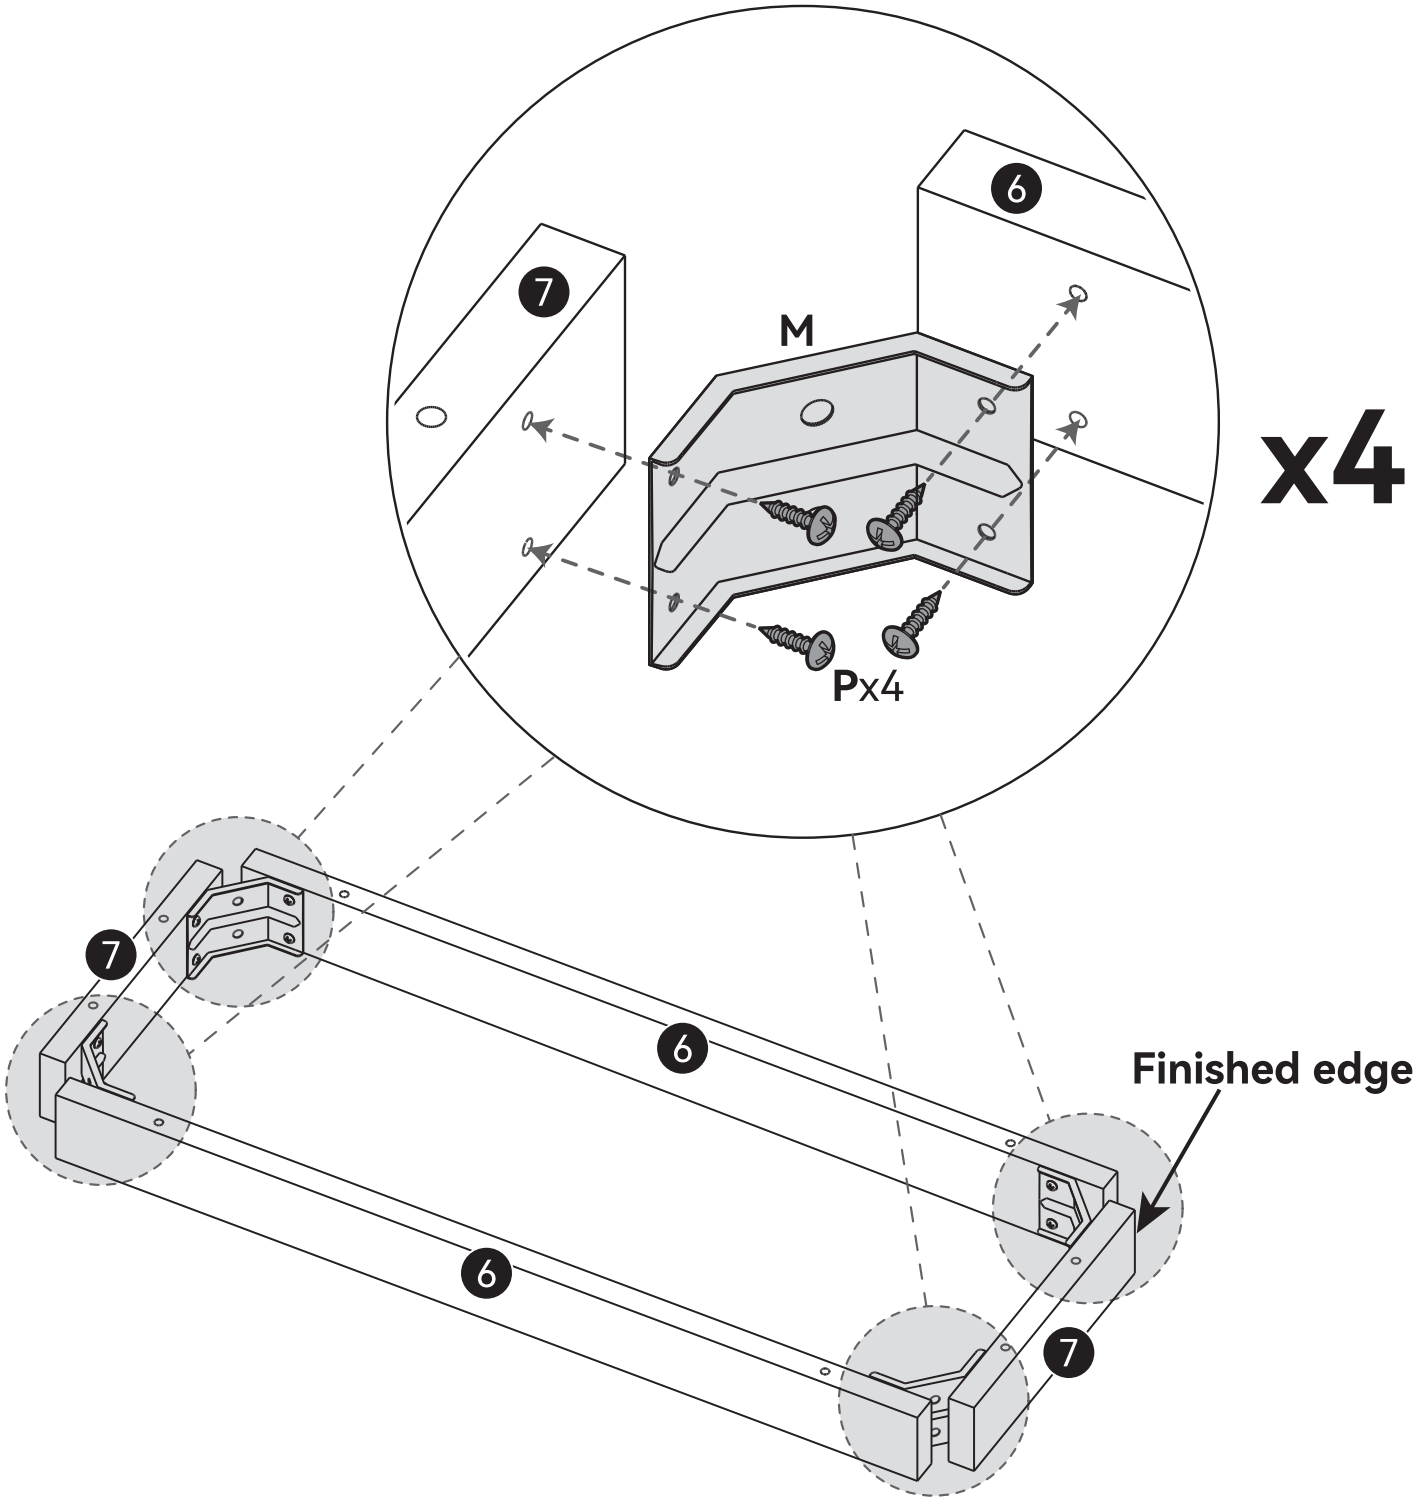


6

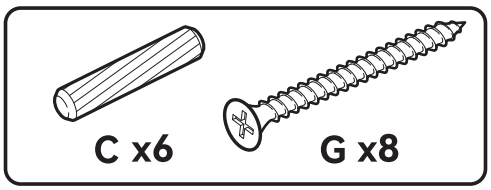


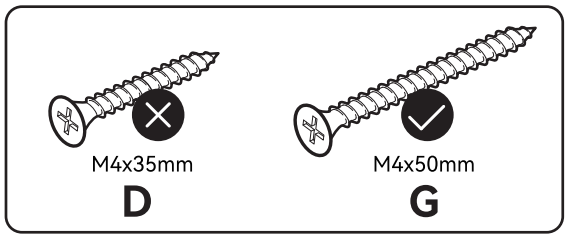


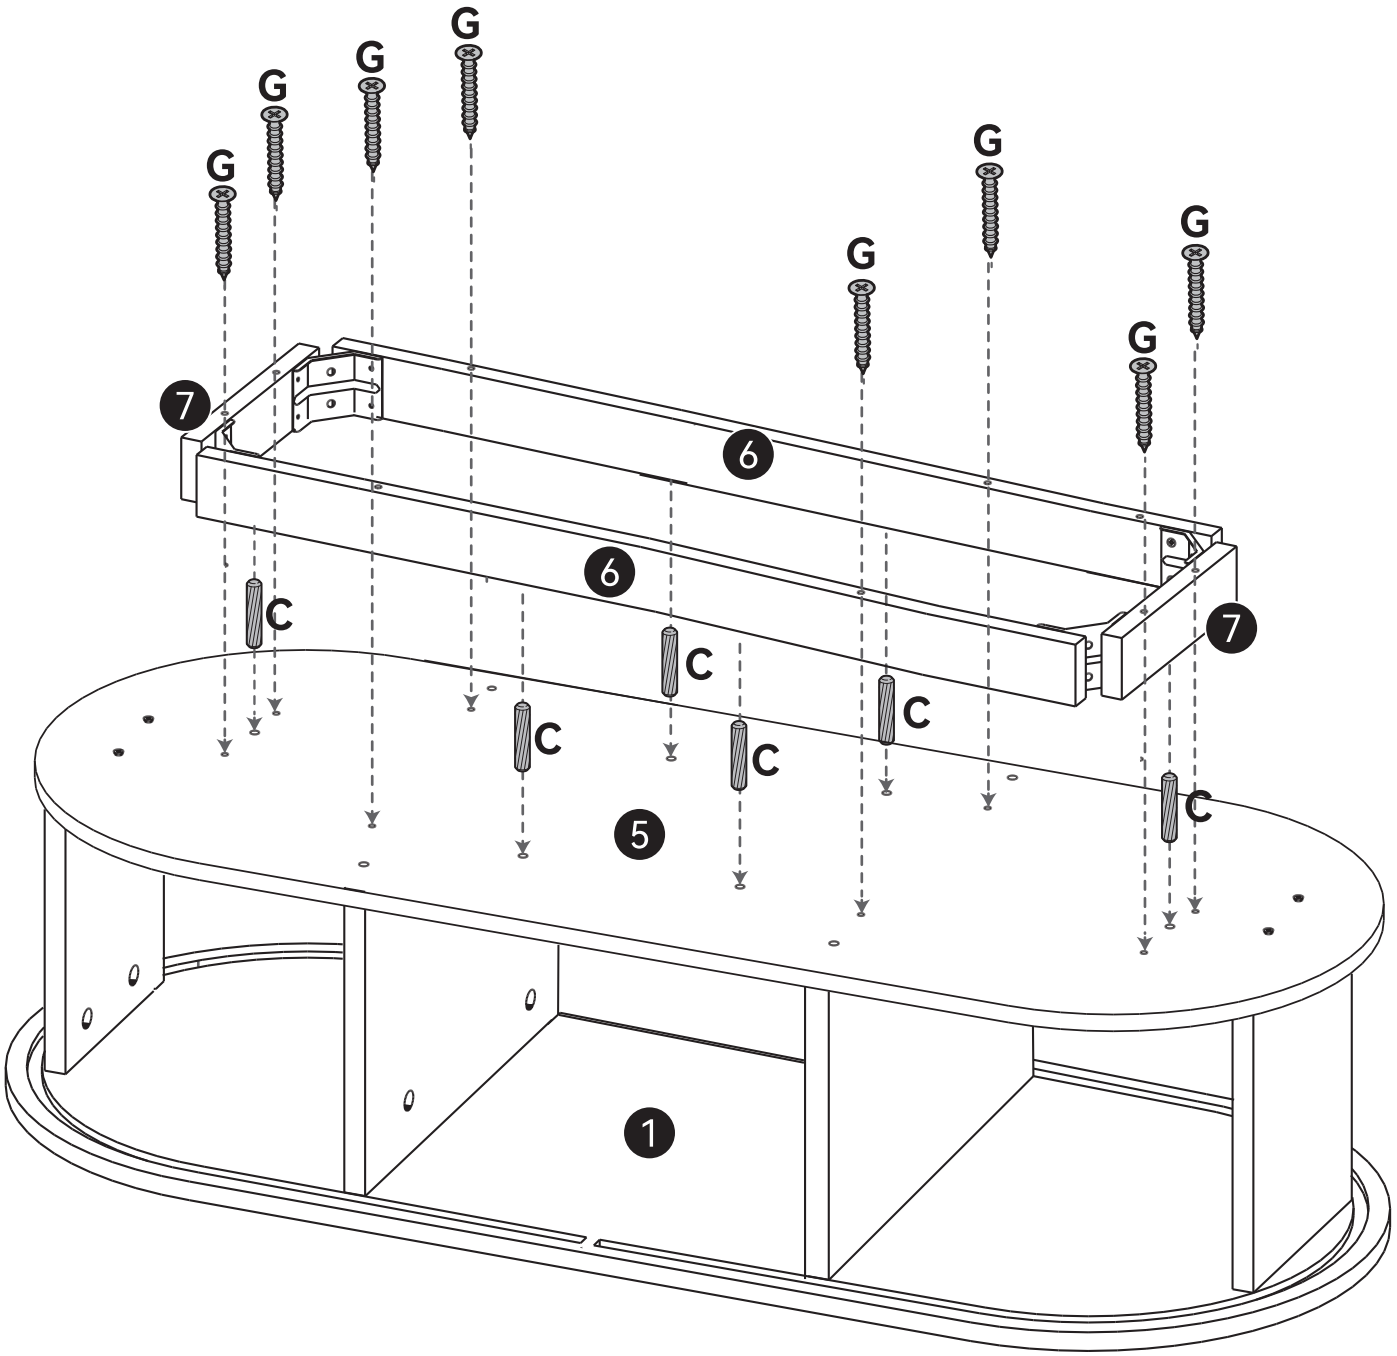


7

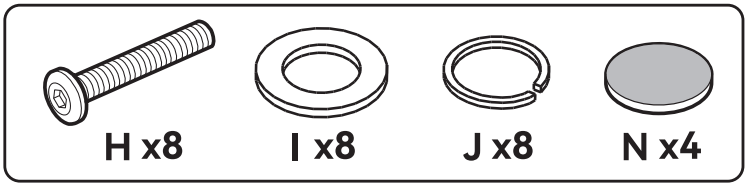

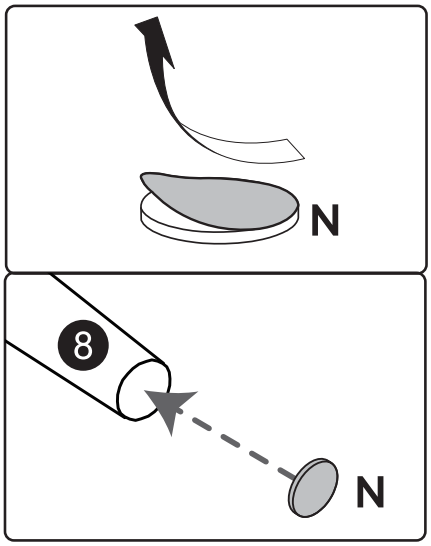


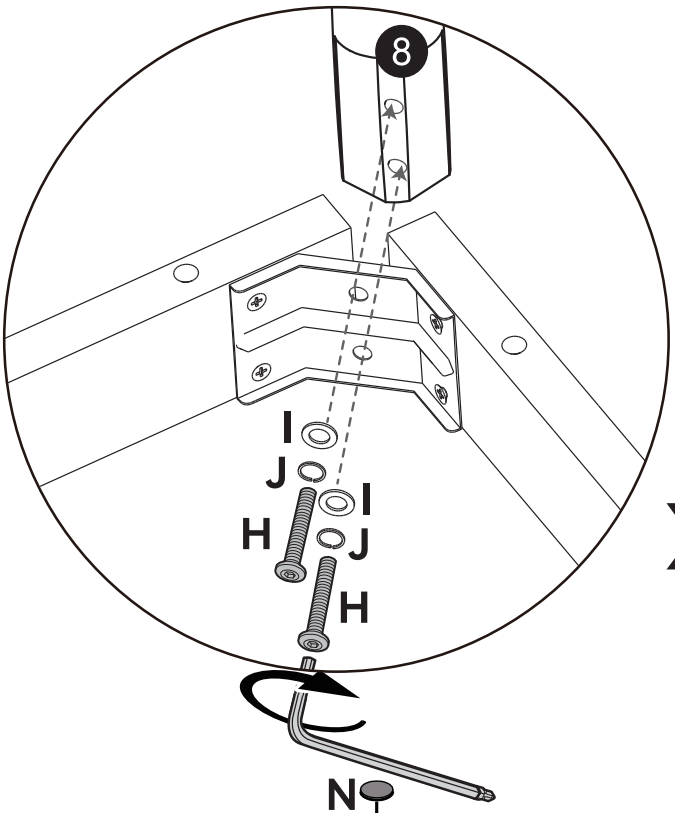


x4

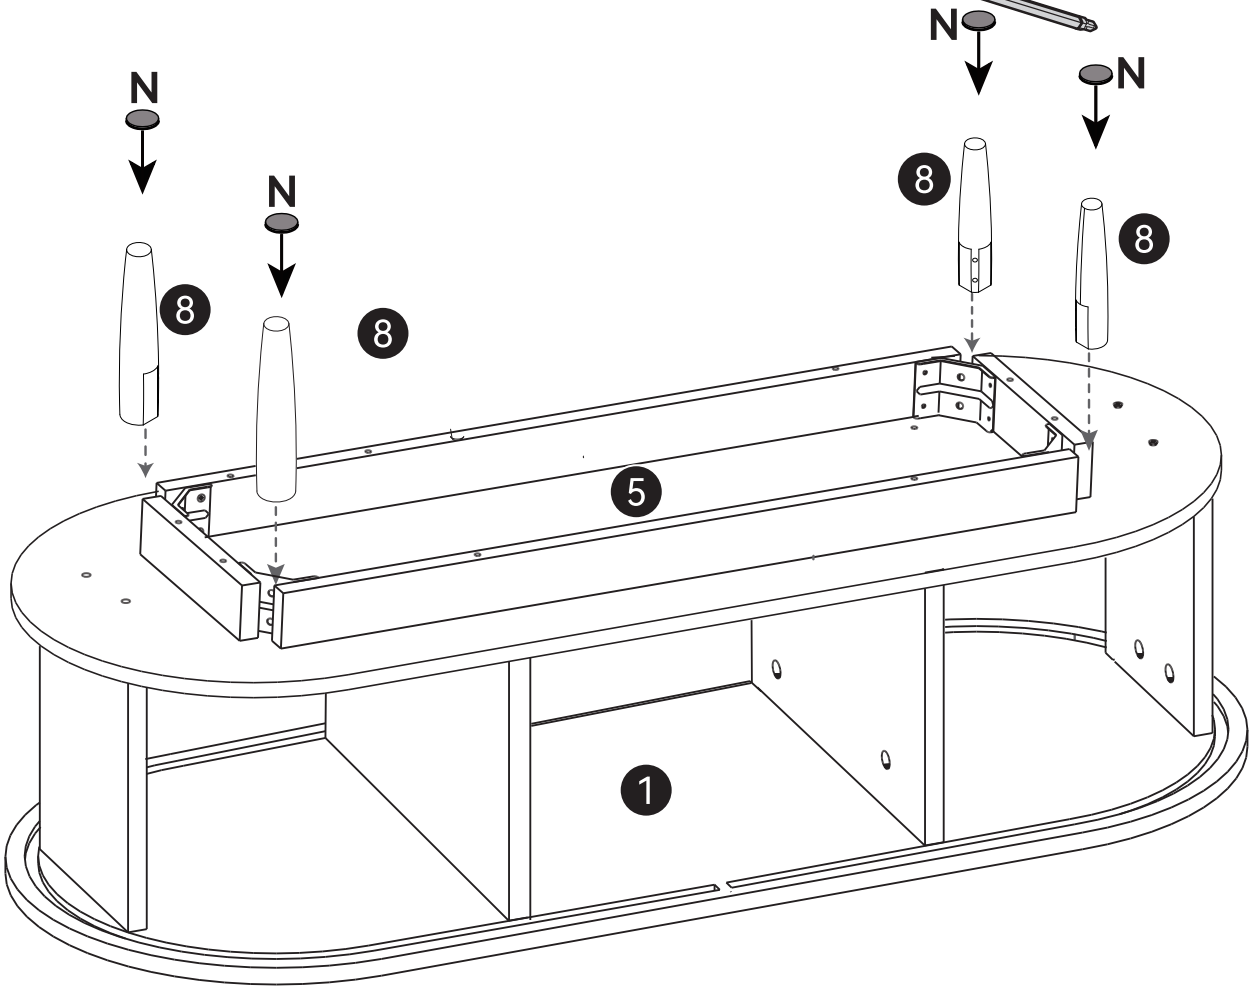

8

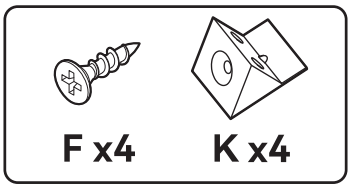


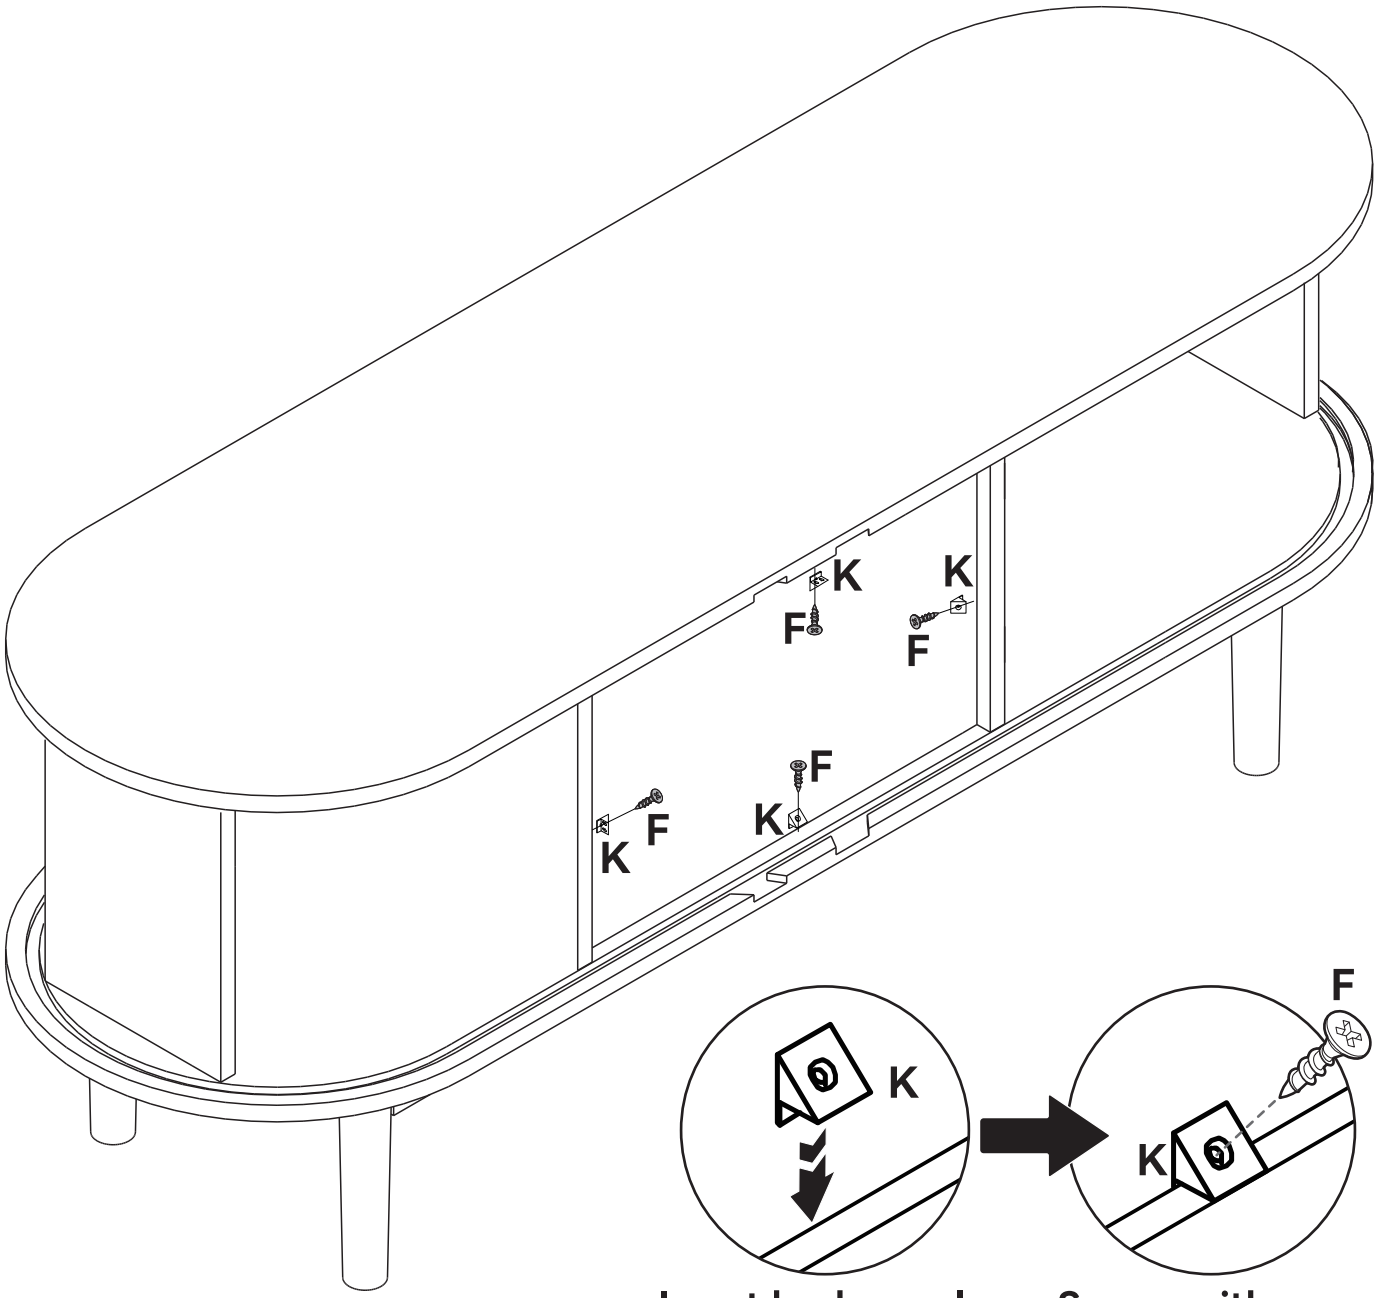



Insert back panel clip into gap.

Secure with screw.

9

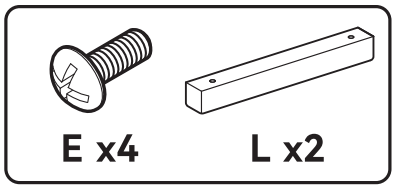


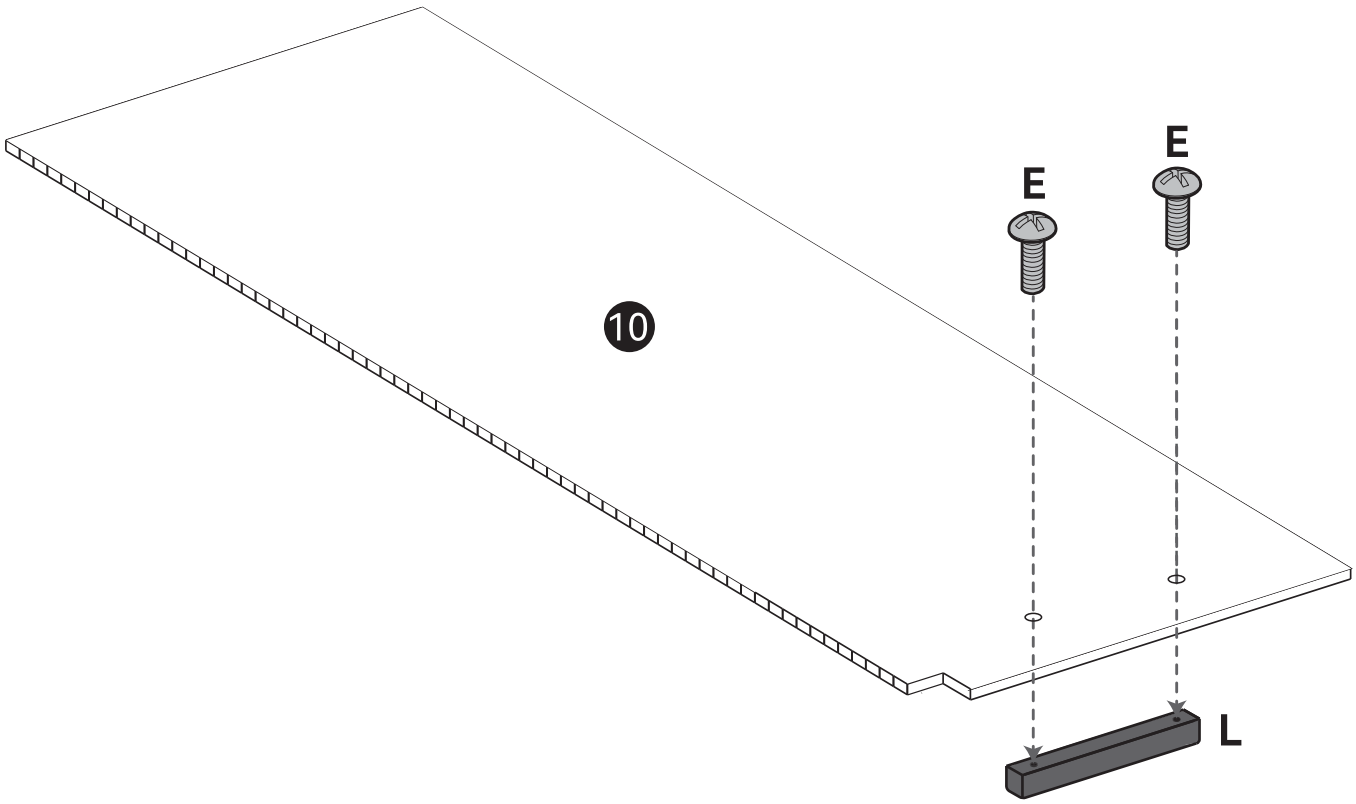

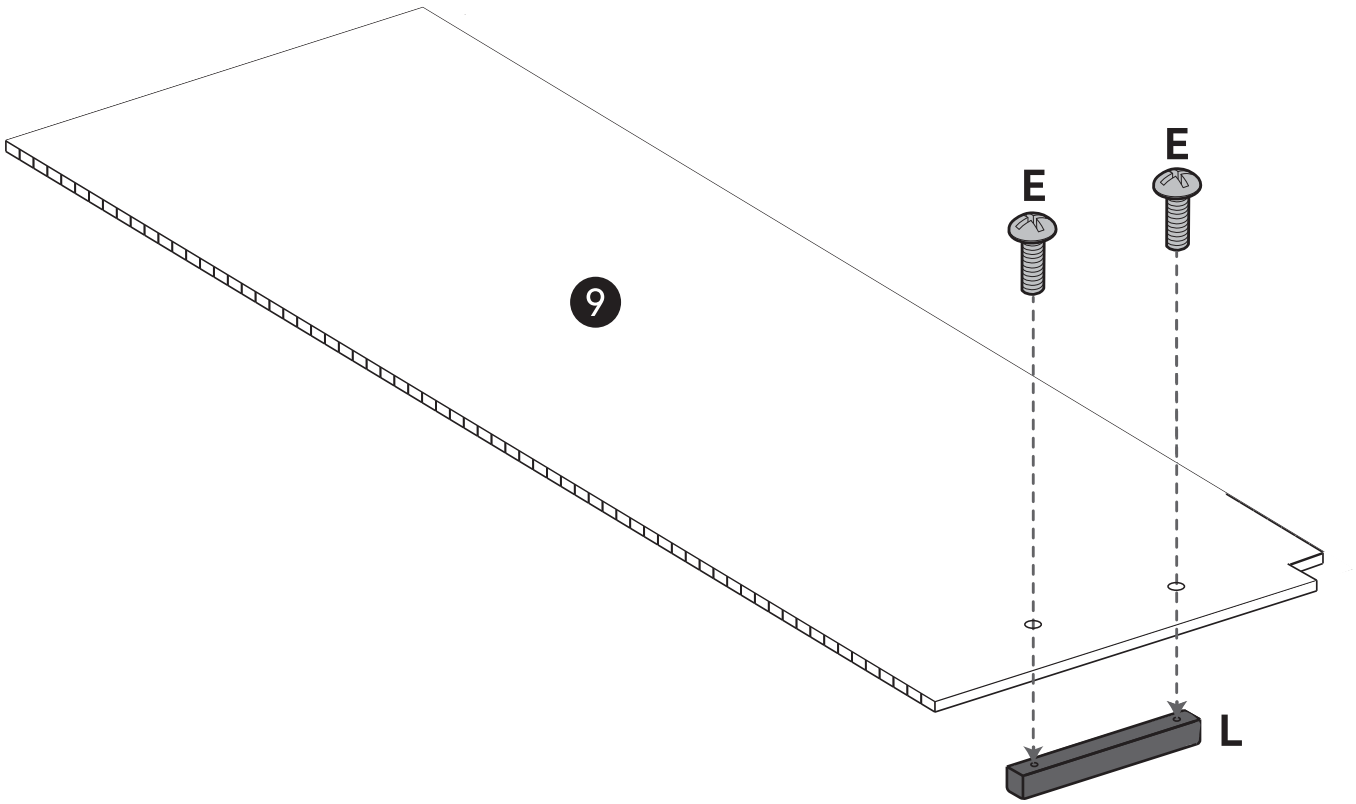

10

Install the rolling door with the notched end facing up.

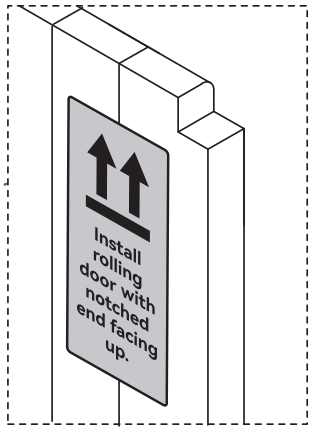

11

Install the rolling door with the notched end facing up.

