


■ LIGHTING

WALL SCONCE

ASSEMBLY INSTRUCTIONS

REMOVE ALL PARTS FROM PACKAGE, BE CAREFUL NOT TO DAMAGE ANY COMPONENTS.

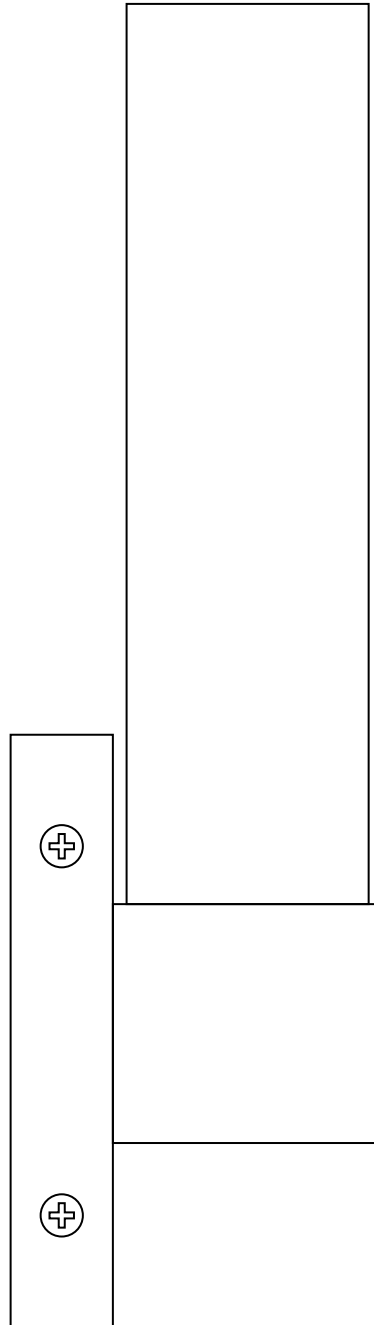


PROFESSIONAL INSTALLATION RECOMMENDED

■ LIGHTING

WALL SCONCE

REMOVE ALL PARTS FROM PACKAGE, BE CAREFUL NOT TO DAMAGE ANY COMPONENTS.

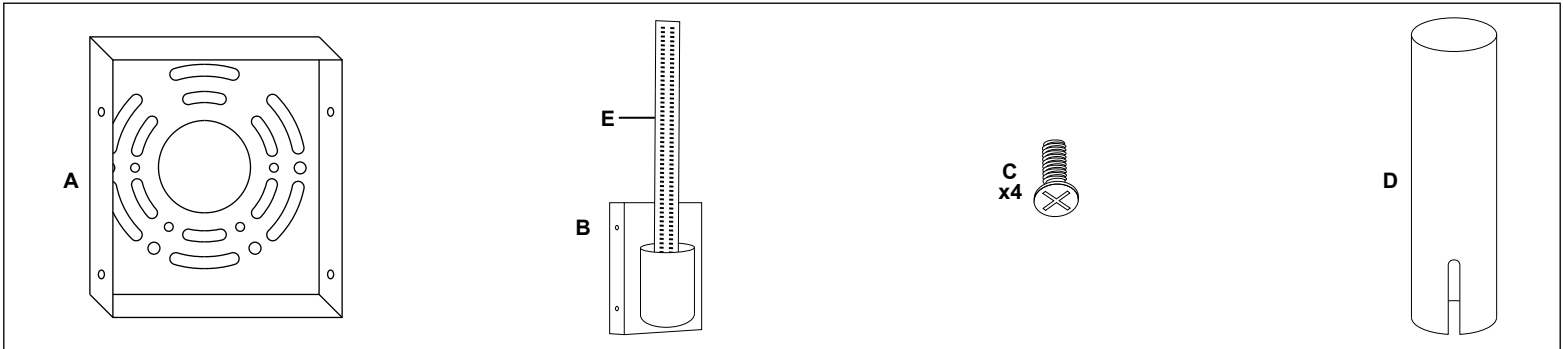


1. Measure area and determine desired hanging height.

2. Detach mounting plate [A] from backplate [B] by removing backplate screws [C].

3. Mounting plate [A] will attach to junction box.

4. Install light to wall. Linea Lighting recommends installation by a qualified electrical professional. Reattach backplate [B] to mounting plate [A] using backplate screws [C].

5. Place shade [D] over integrated LED light strip [E], notch side facing backplate [B]. Position notch so shade [D] can be gently pushed to bottom of shade bracket [F].

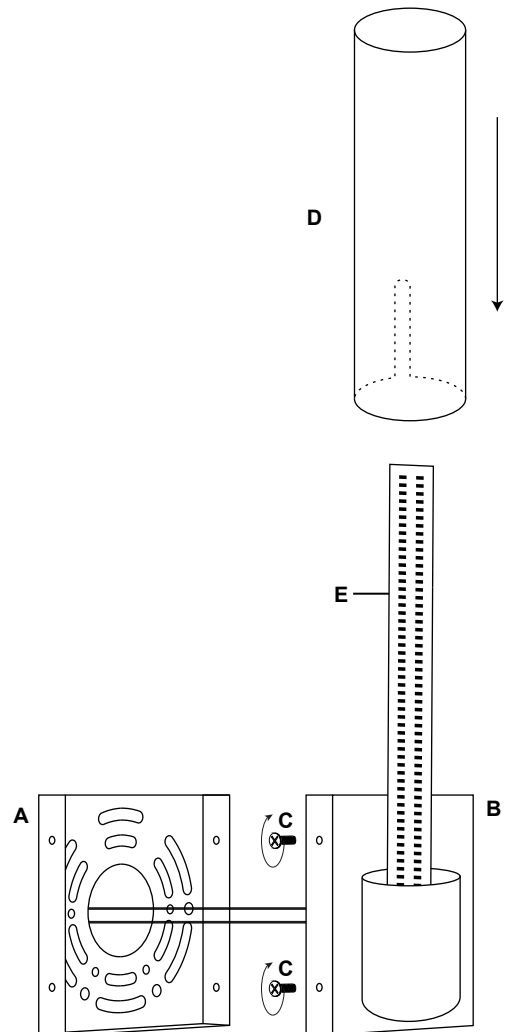

Note: Do not subject the lamp to any shock while lit as shattering of glass shade may result.