


The circle part of the picture below: you need connect them with screw M6*10.
The back side is repeating the above options; you get the complete frame of our product.

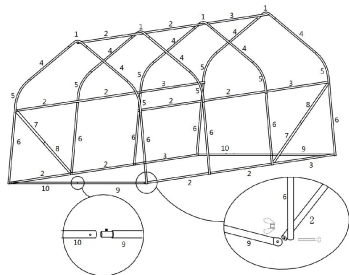


STEP 4

You need a cover part 

Put the cover over the frame, and stretching the cover. Make sure each edge on the cover's side are match the edge on the frame.

Finally you get your job done:

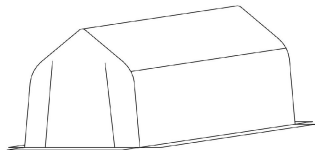

15' X7' X7' GREENHOUSE INSTRUCTION

Thank you for your purchase. Any problem please don't hesitate to contact with us, we will resolve all your problems ASAP.

Warm Tips:Please do not install it in a place where the wind is too strong.

ACCESSORIES DESCRIPTION

1		4PCS
2		10PCS
3		5PCS
4		8PCS
5		8PCS
6		8PCS
7		2PCS
8		2PCS
9		2PCS

10		2PCS
Cover		1PCS
M6*55		20PCS
M6*30		16PCS
H		36PCS

INSTRUCTION STEPS


STEP 1

You need 4 PCS "1" PART:  8 PCS "4" PART: 
3 PCS "2" PART:  8 PCS "5" PART: 
1 PCS "3" PART:  4 PCS "M6*55" PART: 
16PCS "M6*30" PART: 

Connect "1" and "2" by inserting the screw M6*55 into every junction as the following picture shows.




Connect the ends of "1" with "4" and "5", you need tie the elastic fasteners: "1+4+5", you get this.

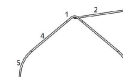

Connect these parts in order 2+2+3



You need to repeat the above option until the four parts are completed to finish the frame as the following picture.

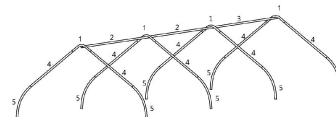

STEP 2


You need 4 PCS "2" PART:  2 PCS "3" PART: 
8 PCS "6" PART:  1 PCS "7" PART: 
1 PCS "8" PART:  8 PCS "M6*55" PART: 

Connect these parts in order 2+2+3



You need tie the elastic fasteners to connect the 5 end and 6 top in the joints in the middle, fasten the 5+2+2 by inserting M6*55.

The back side is as the above option until you finish the frame like this.

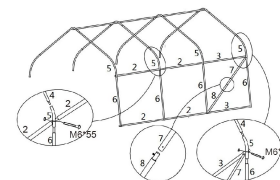

STEP 3

You need 4 PCS "2" PART:  2 PCS "3" PART: 
8 PCS "6" PART:  1 PCS "7" PART: 
1 PCS "8" PART:  8 PCS "M6*55" PART: 
2 PCS "9" PART:  2 PCS "10" PART: 