
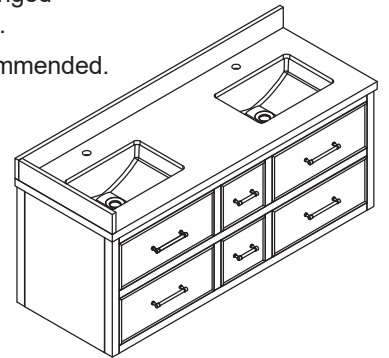



# WYNDHAM COLLECTION

- Prior to installation please check received items against the "Packing List".
- Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.
- Install on a level surface

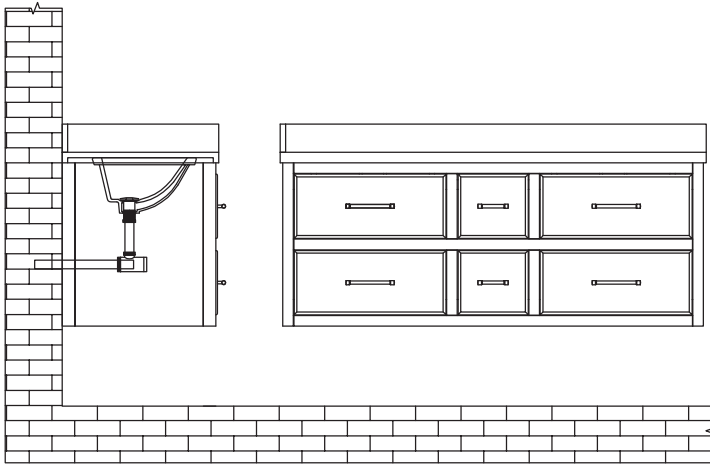


## PACKING LIST


(Not all components may be included, depending upon your purchase)

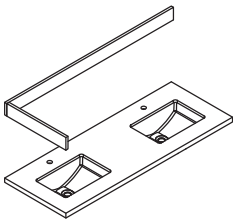

Counter & Sink /1

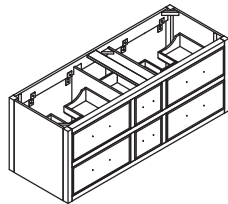


Main Cabinet/1

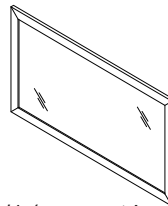


Mirror /1 (may not be included)




Screws for mirror / 2

| ITEM | LevelingBracket                                                                     | Screws<br>#5*60                                                                     | Screws<br>#4*16                                                                     | Anchors                                                                             |
|------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| QTY  | 4                                                                                   | 8                                                                                   | 4                                                                                   | 8                                                                                   |
|      |  |  |  |  |

## REQUIRED TOOLS NOT IN BOX

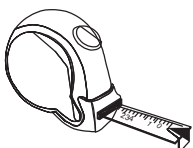

Tape measure

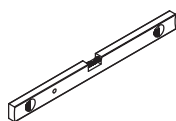


Spirit Level




Pencil



Electric Drill



Silicone sealant

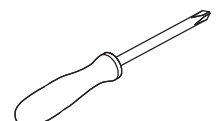


Phillips Screwdriver


WC-5555-60DBL  
Installation Guide

# WYNDHAM COLLECTION


## 1. Install leveling bracket

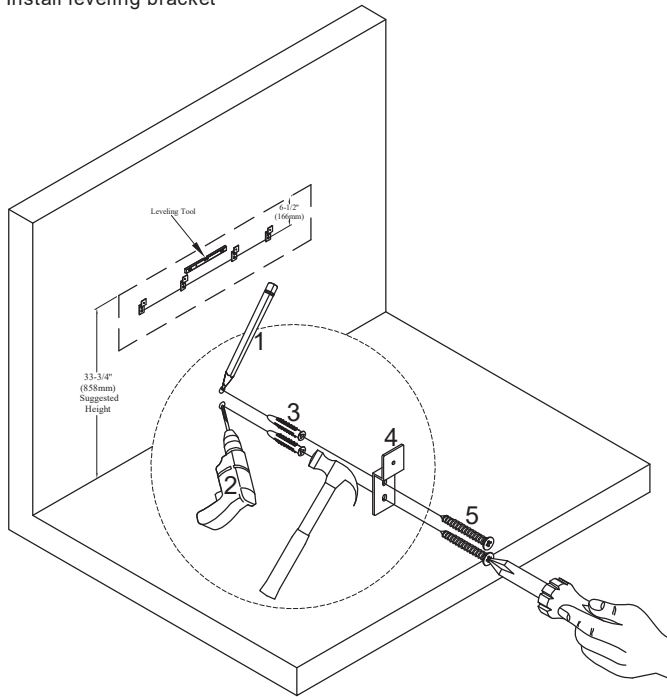


2. Leveling brackets are only to level the vanity.  
They are not designed for permanent support.  
Cabinet needs to be secured to wood backing material.

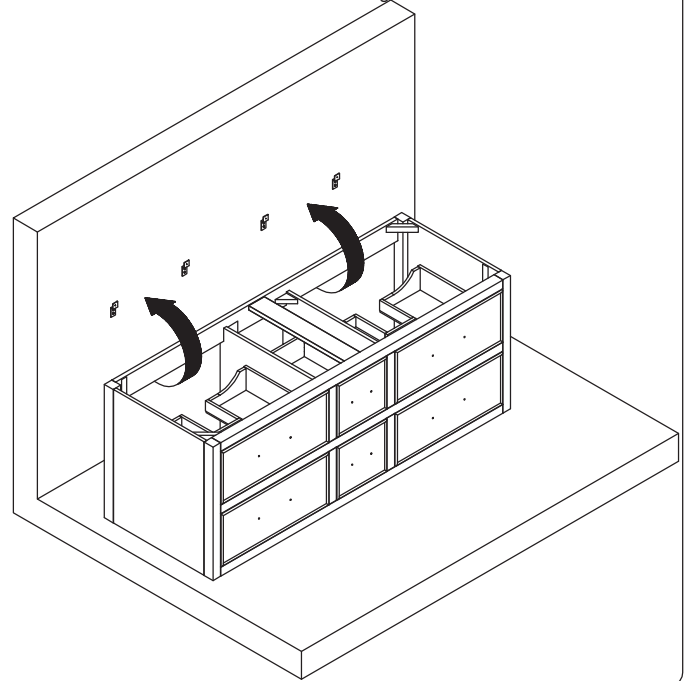

## 3. Secure vanity to wood reinforcement backing

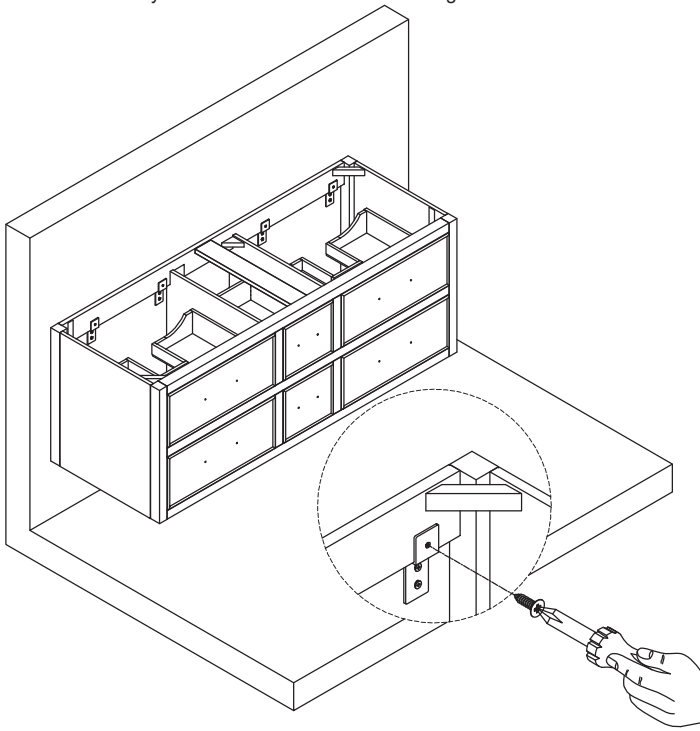


4. Install the counter. Seal around the top of the cabinet with clear silicone sealant. Do not over apply. Allow to dry 24 hours for proper curing.

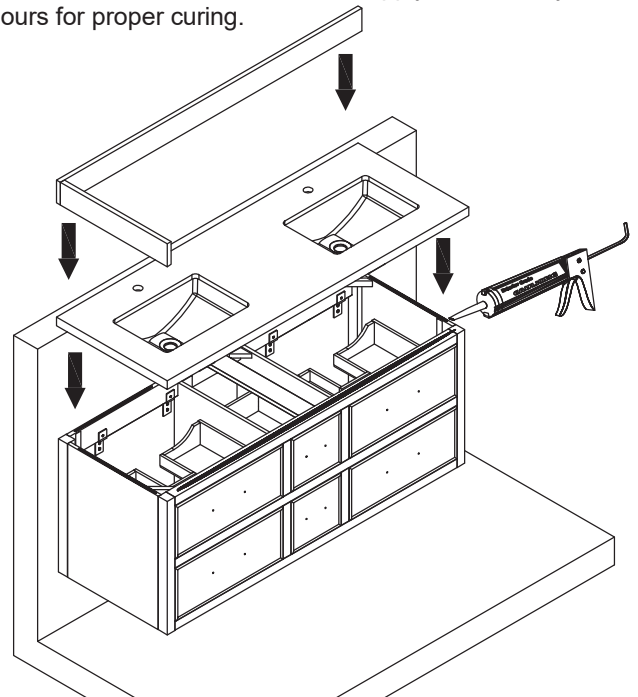

WC-5555-60DBL  
Installation Guide

# WYNDHAM COLLECTION

5. The handles are safely stored for transport in a box inside of the cabinet. Look inside the vanity for the box with your handles.

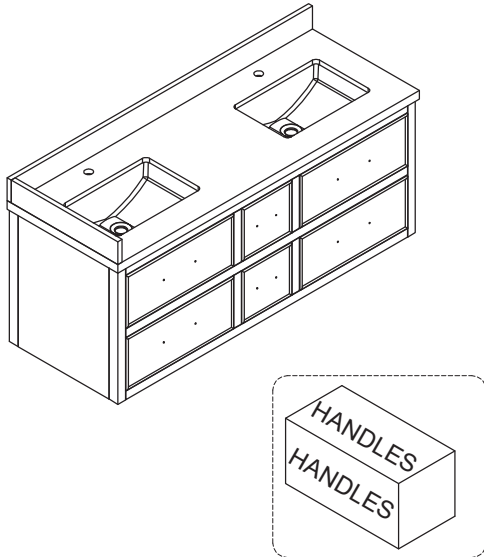

6. Unpack the handles and install them on the vanity. Do not over tighten when attaching.

