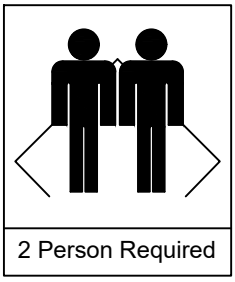
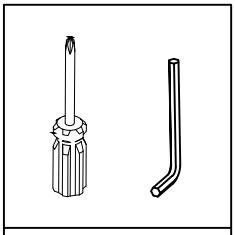
Arched Bookcase with 3 Drawers

Assembly Instruction

CS-3CGMBC_V1.0



2 Person Required



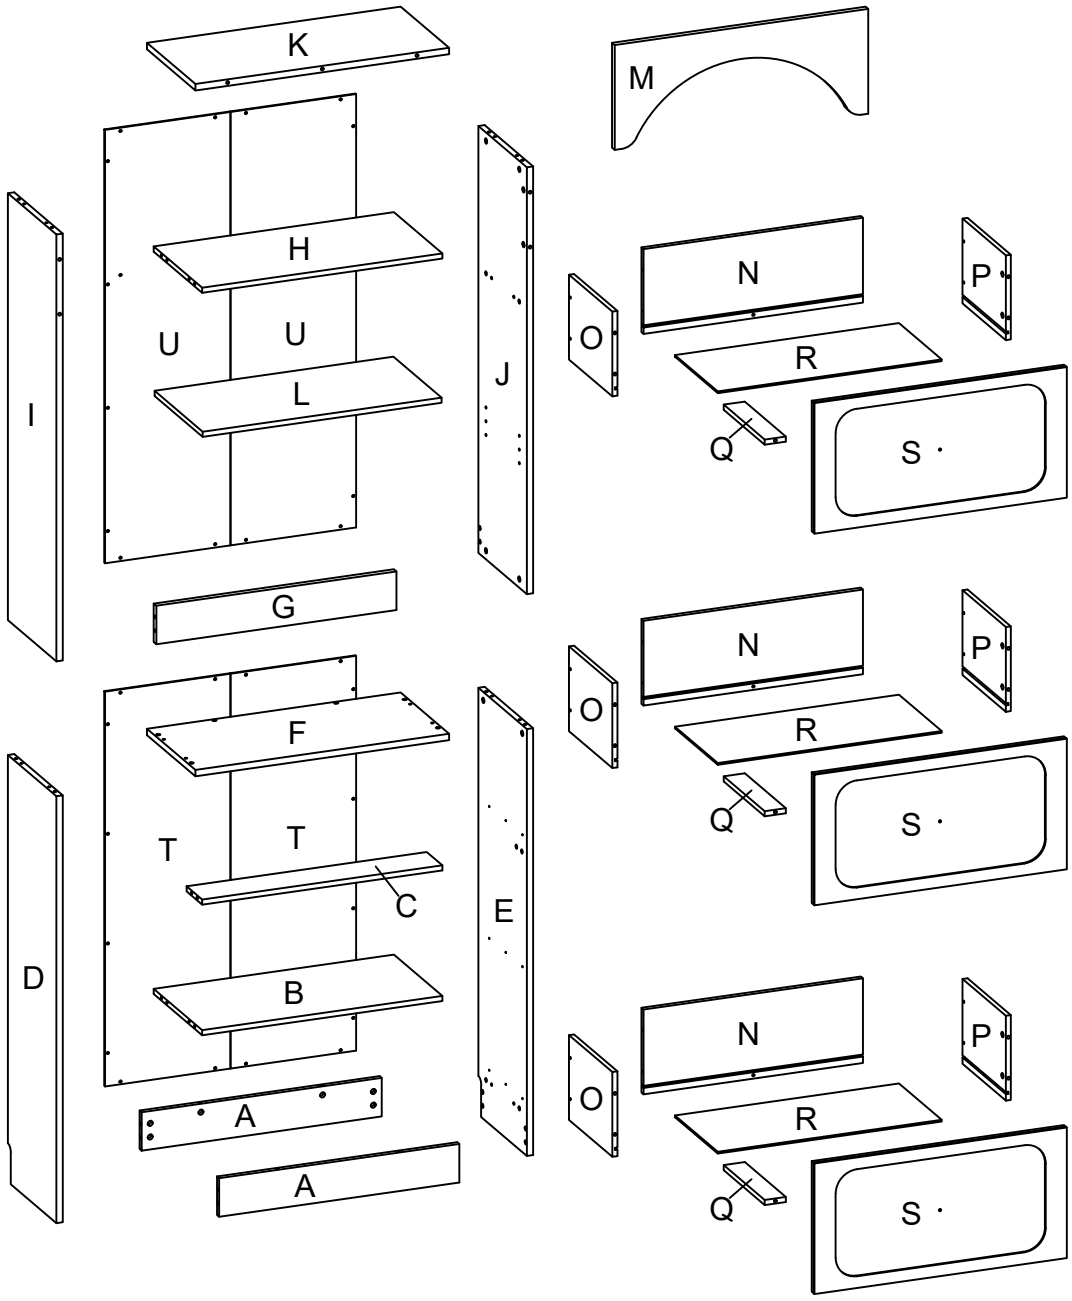
Tools Included



Customer Support






















NEED HELP? For replacement requests or product inquiries, please contact our Customer Service Team by emailing us at **cozylifecs@hotmail.com.** Thank you for selecting us!

PART LIST












USEFUL HINTS BEFORE YOU START:

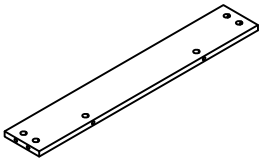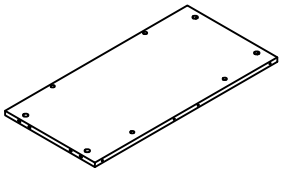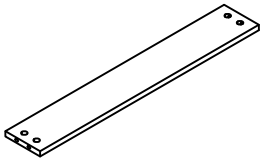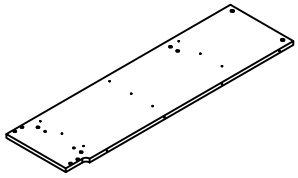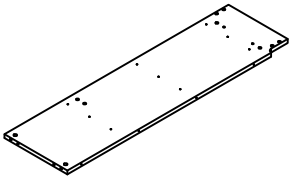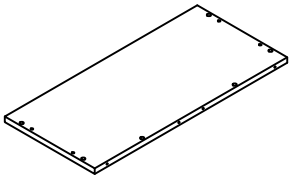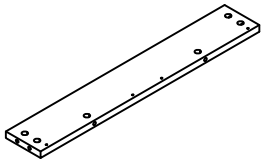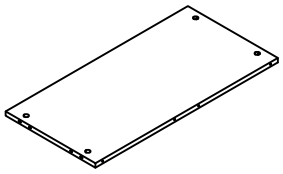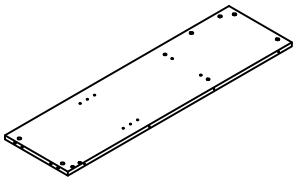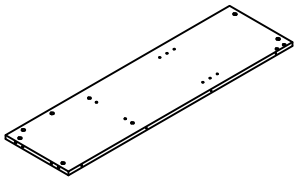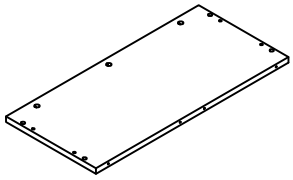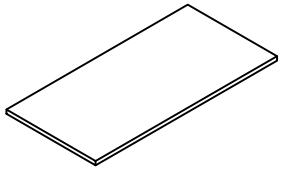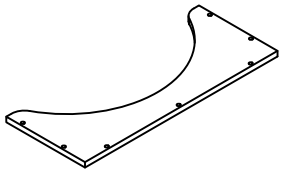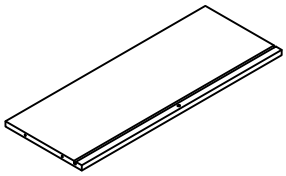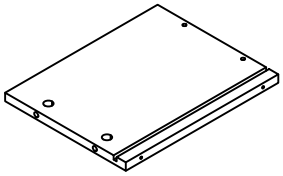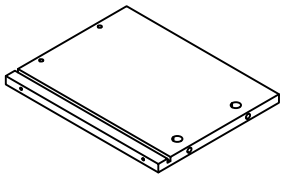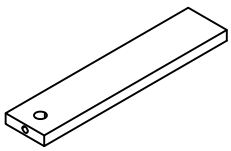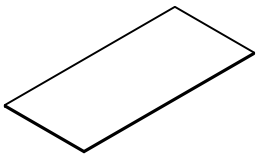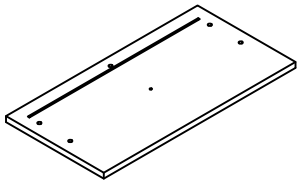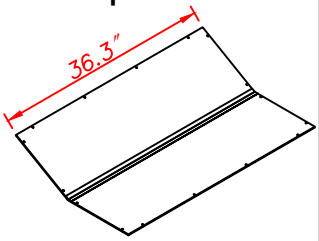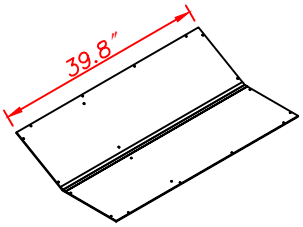1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using uncompatible hardware might cause damage to product.

PART LIST			
A x 2pcs 	B x 1pcs 	C x 1pcs 	D x 1pcs 
E x 1pcs 	F x 1pcs 	G x 1pcs 	H x 1pcs 
I x 1pcs 	J x 1pcs 	K x 1pcs 	L x 1pcs 
M x 1pcs 	N x 3pcs 	O x 3pcs 	P x 3pcs 
Q x 3pcs 	R x 3pcs 	S x 3pcs 	T x 1pcs 
U x 1pcs 			

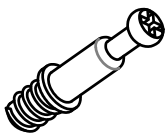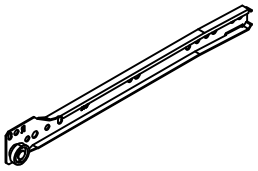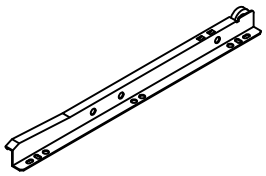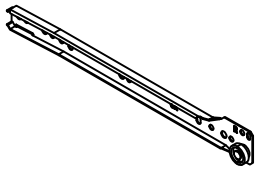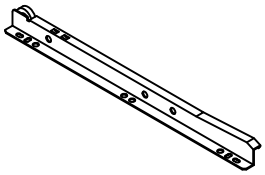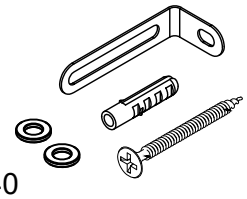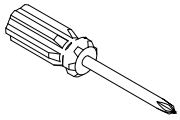
HARDWARE LIST

①  M6x28 64 pcs	②  Φ12 64 pcs	③  Φ6x30 20 pcs
④  M6x20 4 pcs	⑤  M4x30 15 pcs	⑥  M4x12 38 pcs
⑦  3 pcs	⑧  M4x18 3 pcs	⑨  M3x12 36 pcs
⑩  250L 3 pcs	⑪  250L 3 pcs	⑫  250L 3 pcs
⑬  250L 3 pcs	⑭  8 pcs	⑮  M4x40 2 pcs
⑯  1 pcs		

How to install Camlocks


Connect the male camlock as directed in the assembly instructions with a screwdriver.

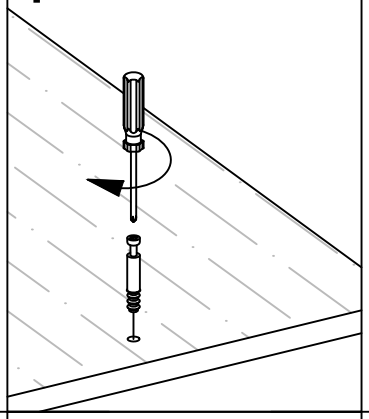1 DO NOT OVER TIGHTEN



Put the male camlock into the entry hole.

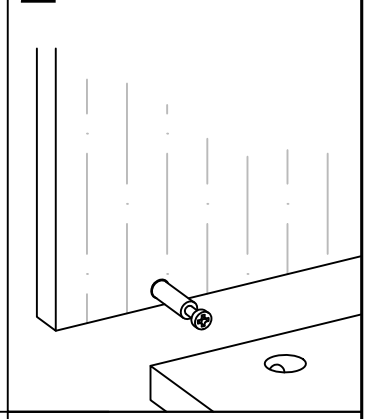
2



Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

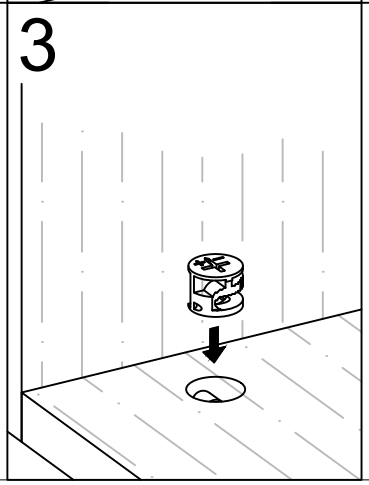3




Screw the female camlock clockwise with a screwdriver.


You will feel a click when the camlock is locked in place.

The camlock is now completed.

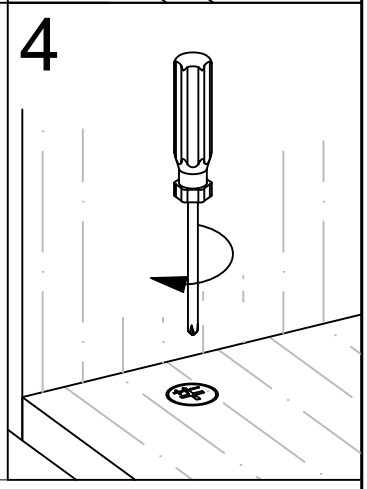
4



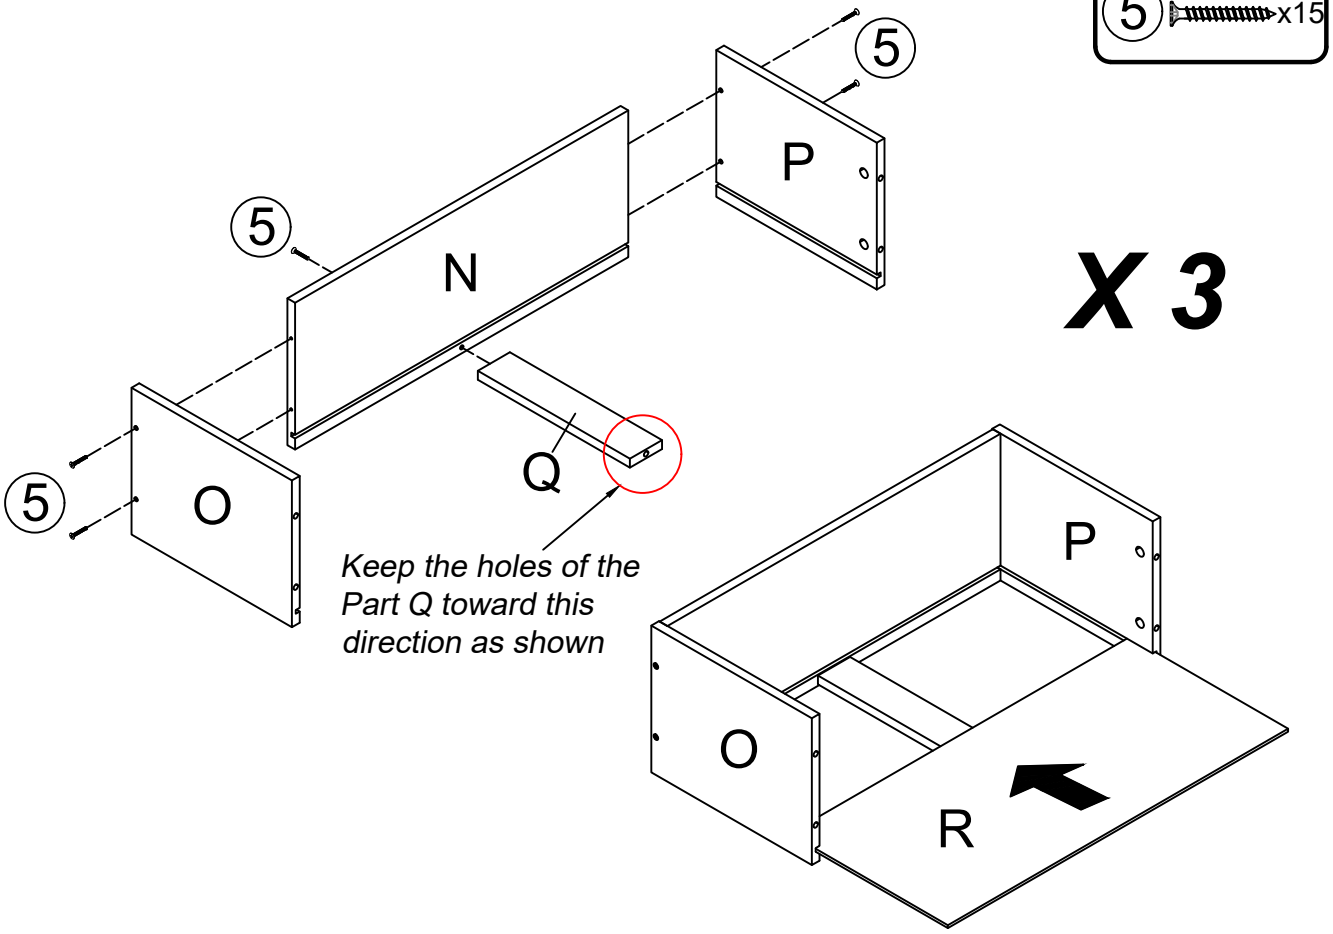
STEP 1



5 x15
5
P
5
N
X 3
5
O
Q
Keep the holes of the Part Q toward this direction as shown
P
O
R

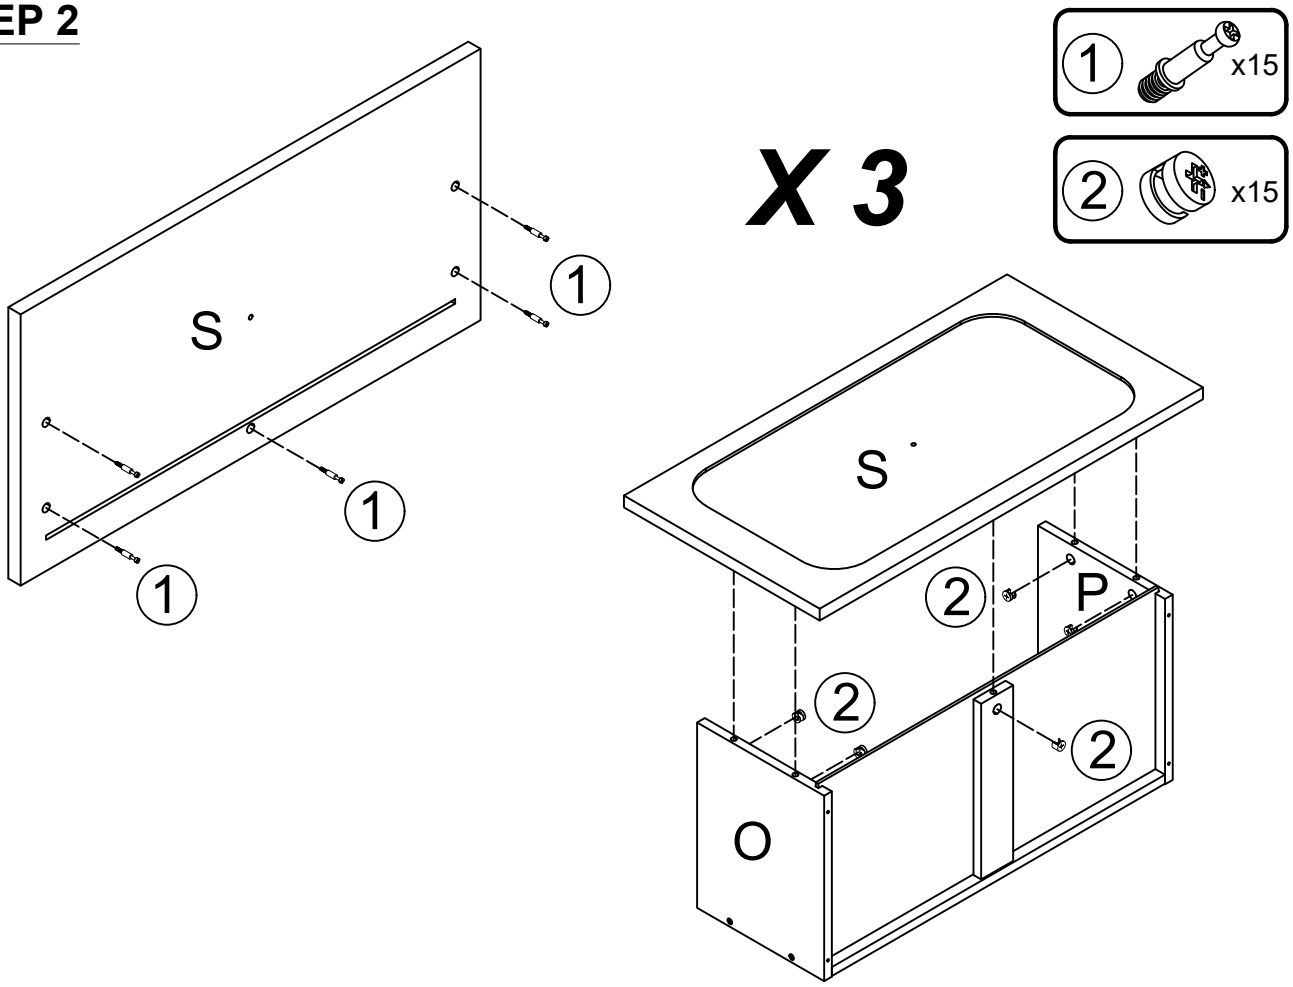
STEP 2


1 x15
2 x15
X 3
S
1
1
1
S
2
P
2
2
O

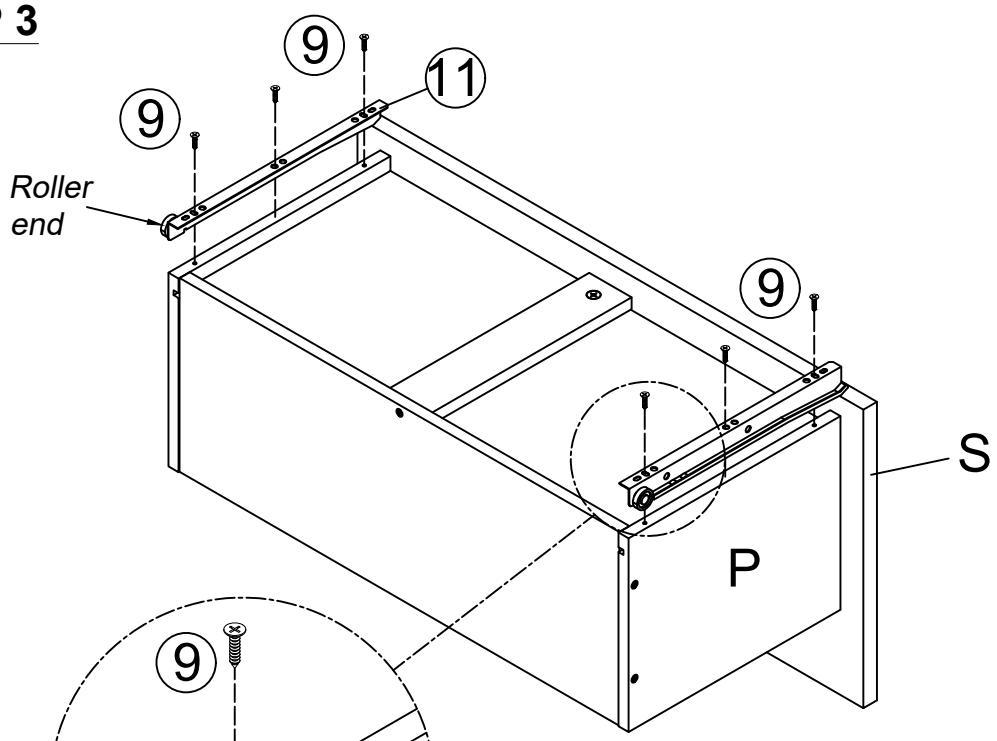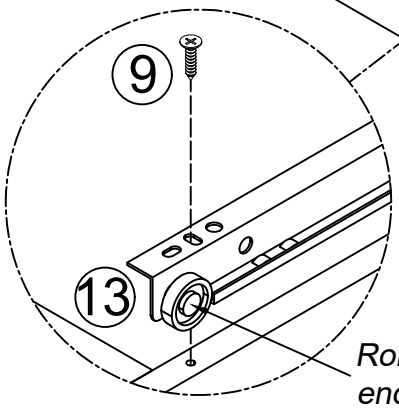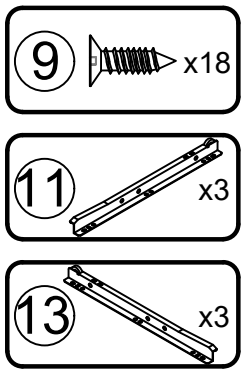
STEP 3









X 3

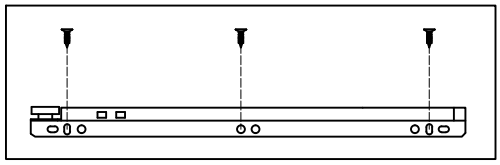

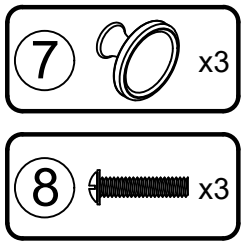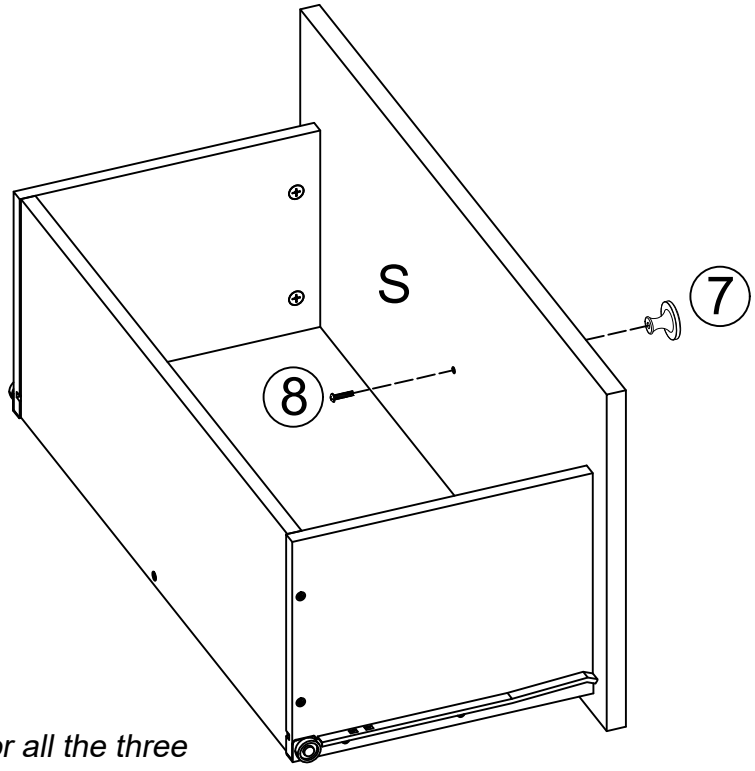STEP 4







X 3

NOTICE:
The installation for all the three drawers is base on the 1-4 steps above.

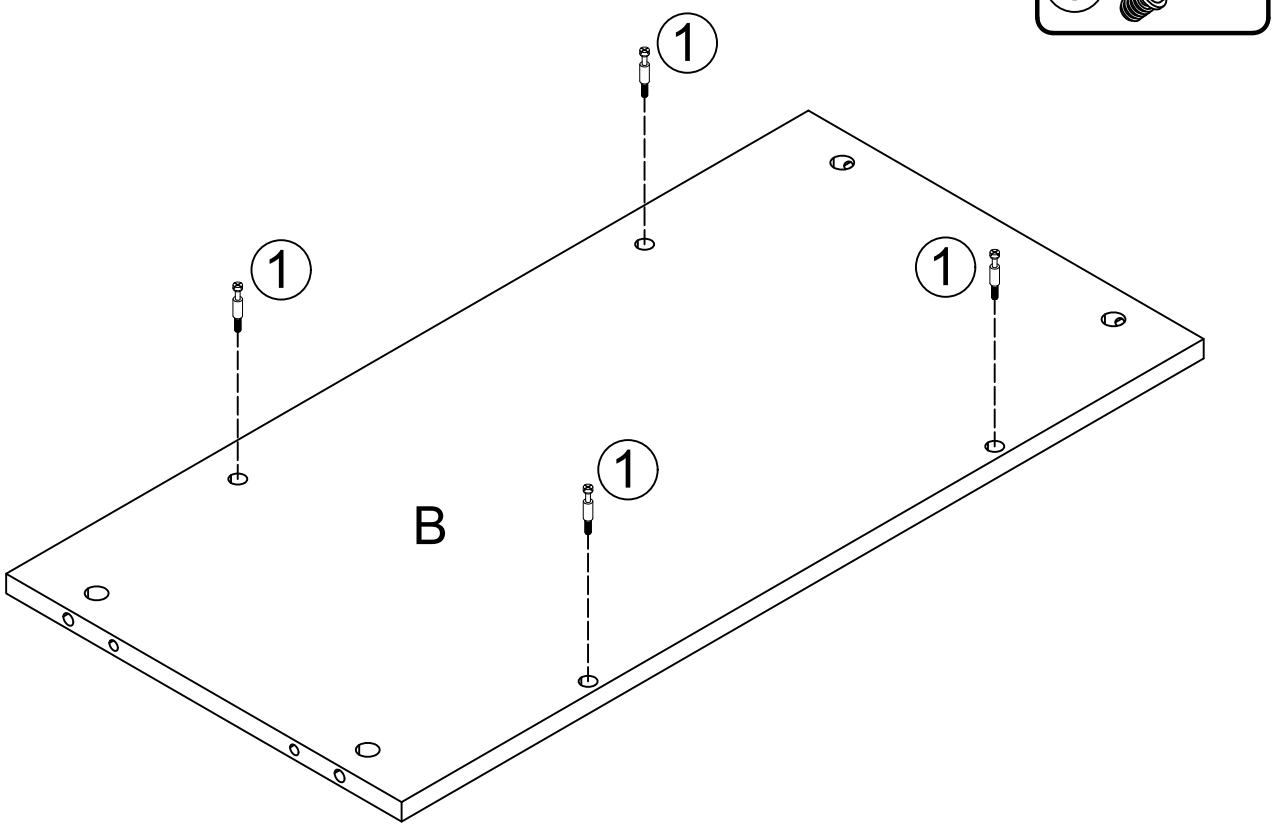
STEP 5


1
x4
1
1
1
1
B

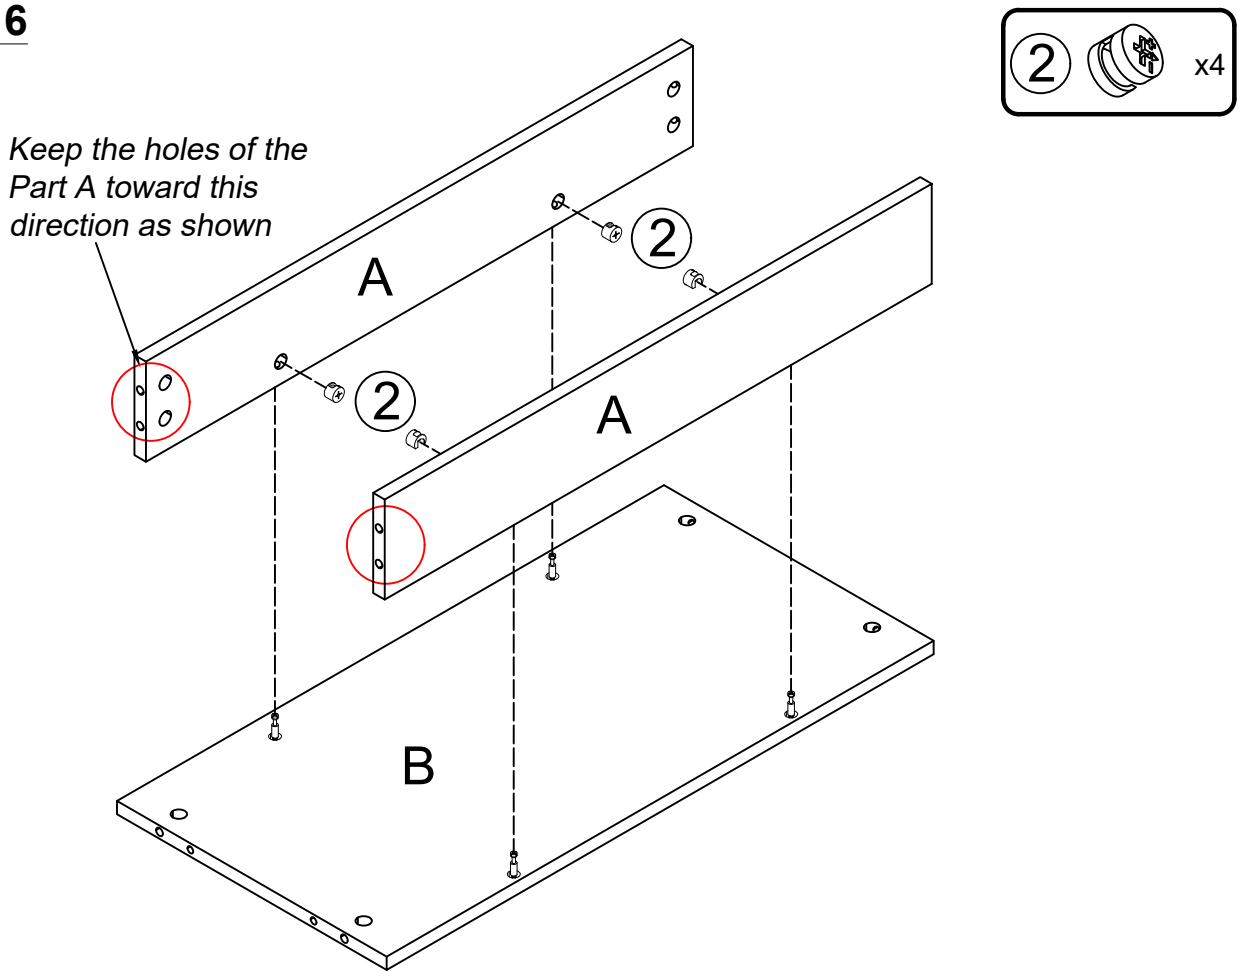
STEP 6


2
x4
Keep the holes of the Part A toward this direction as shown
A
2
2
A
B

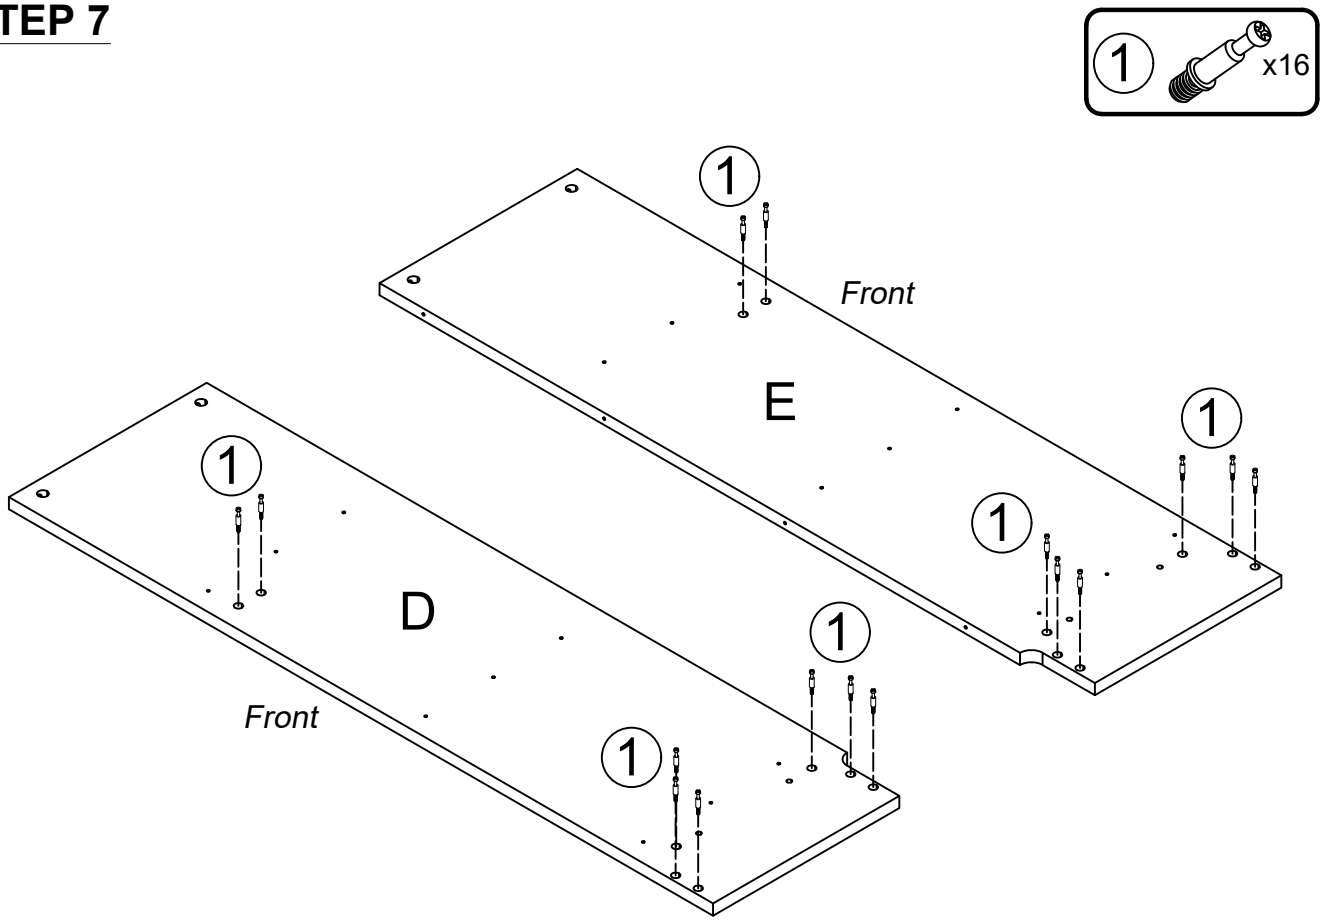
STEP 7


1
x16
1
Front
E
1
1
1
D
Front
1
1

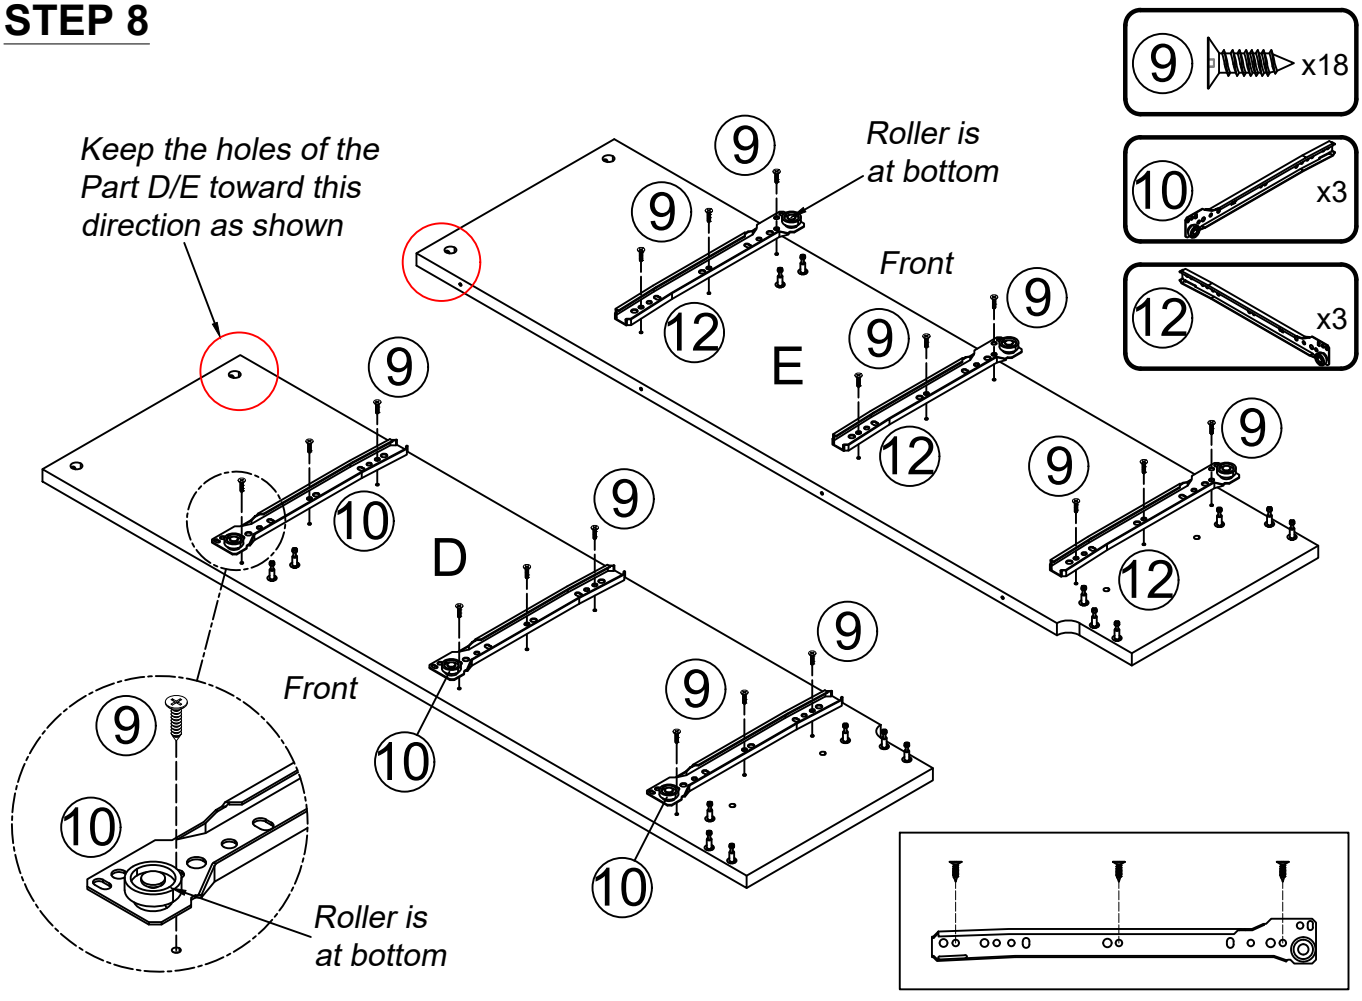
STEP 8


9
x18
10
x3
12
x3
Keep the holes of the Part D/E toward this direction as shown
9
Roller is at bottom
9
Front
12
E
9
9
12
9
9
12
9
10
D
9
Front
9
9
10
9
9
10
10
Roller is at bottom

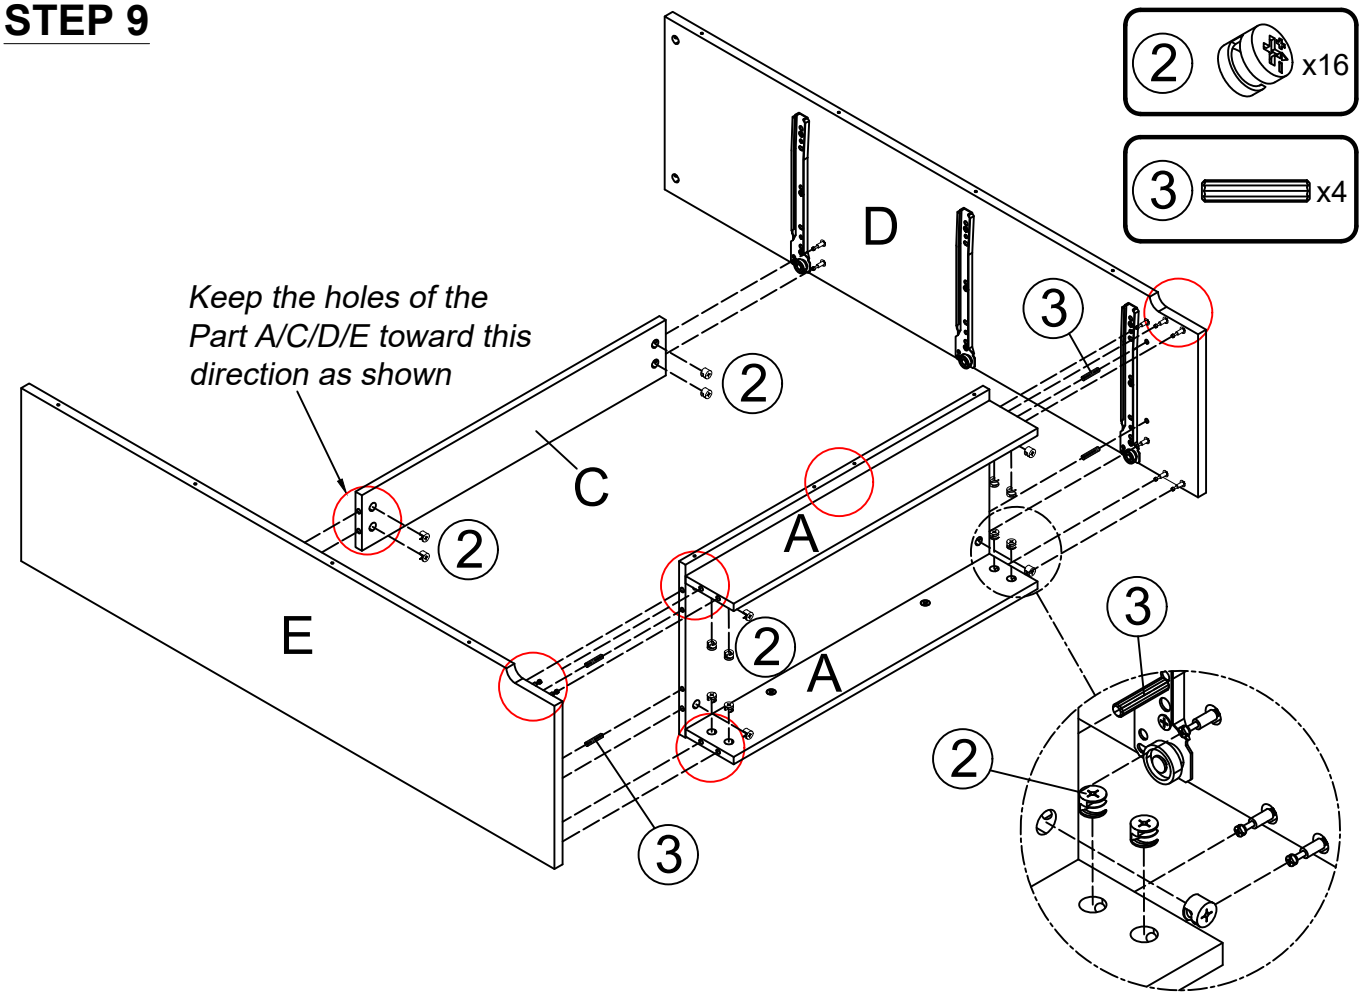STEP 9




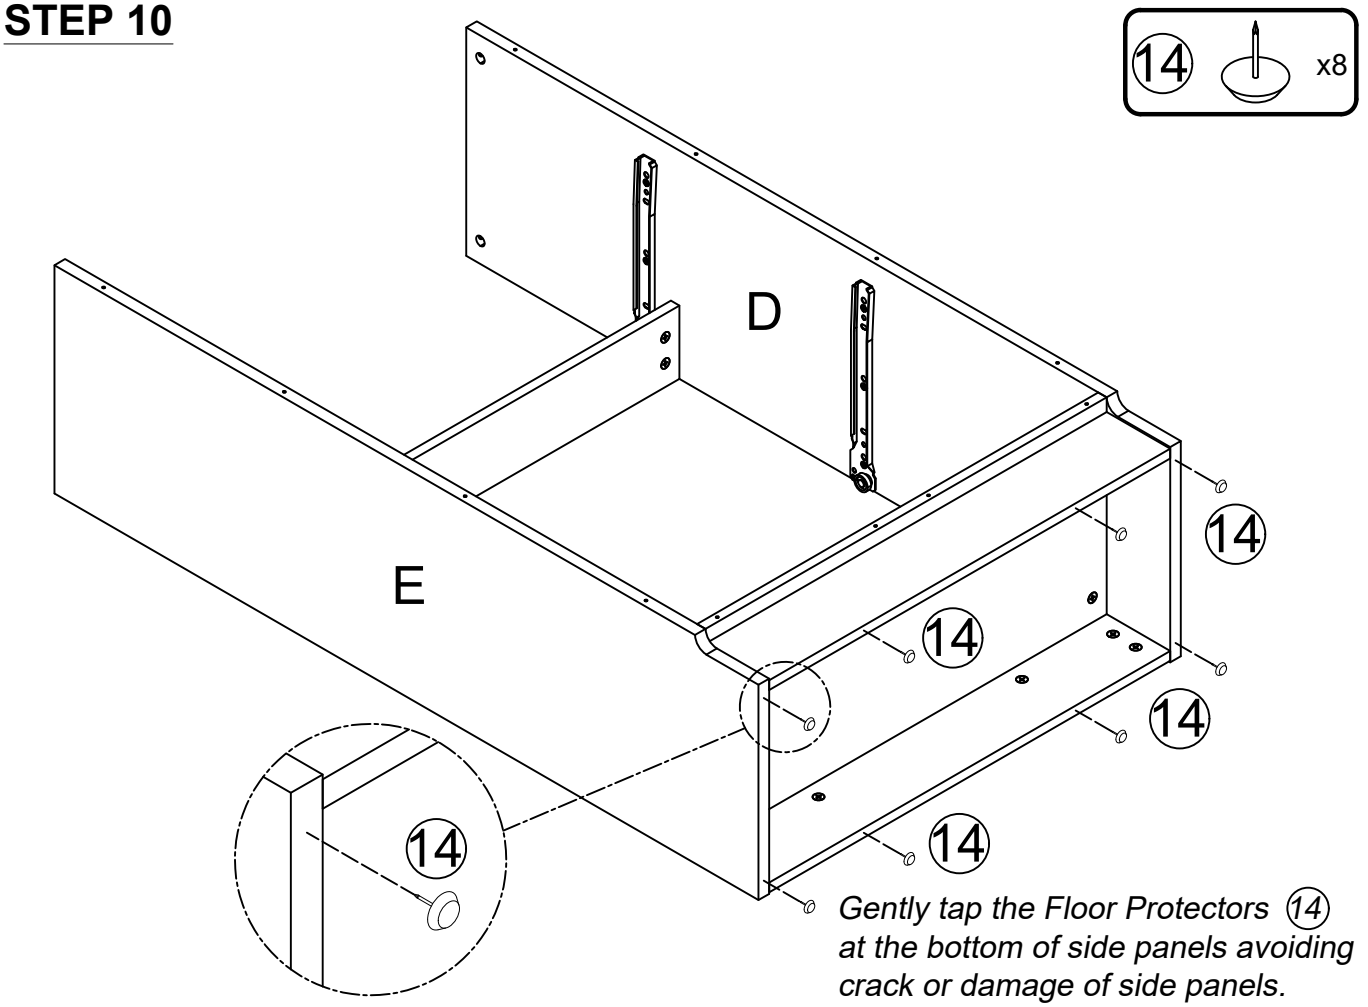STEP 10




Gently tap the Floor Protectors (14) at the bottom of side panels avoiding crack or damage of side panels.

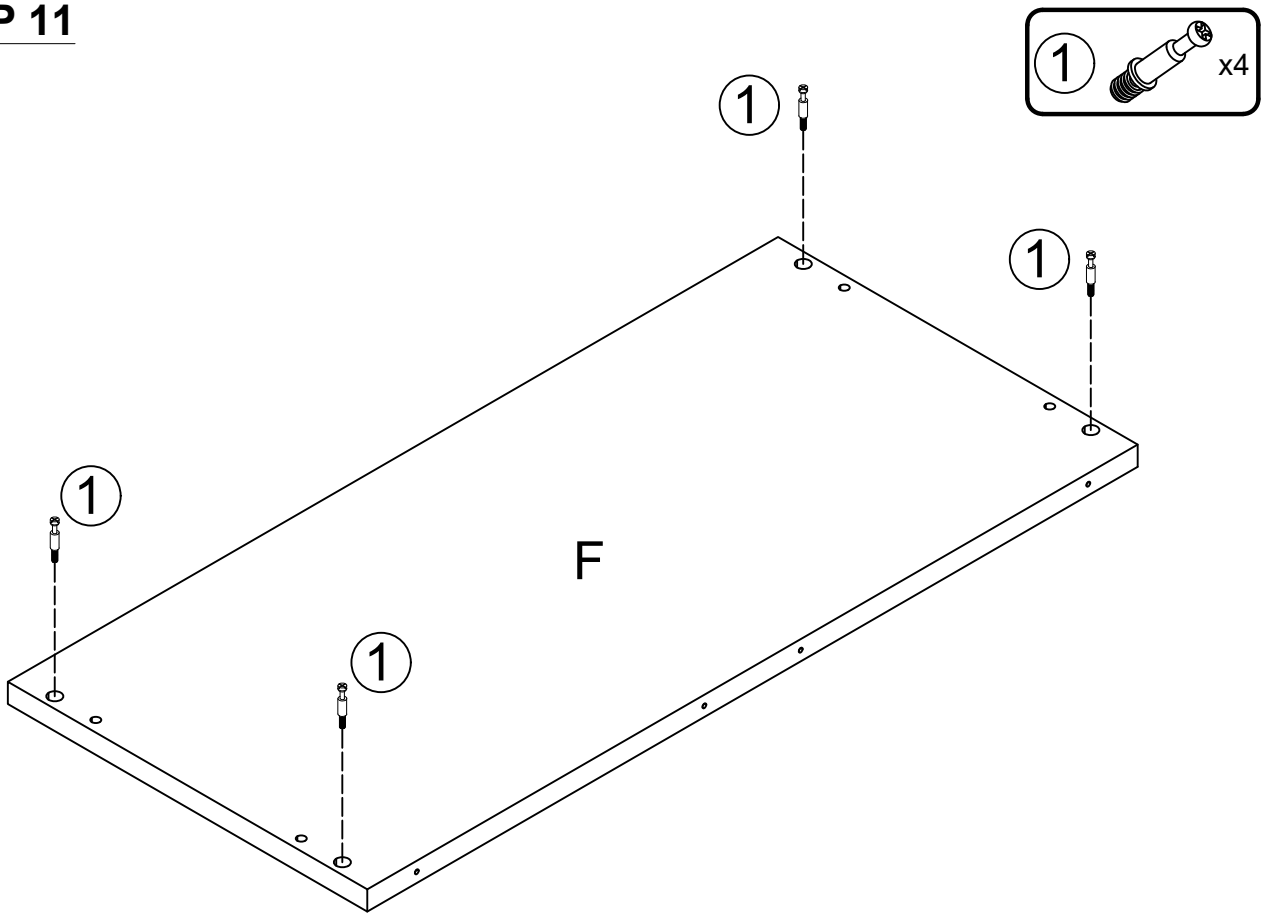STEP 11





STEP 12

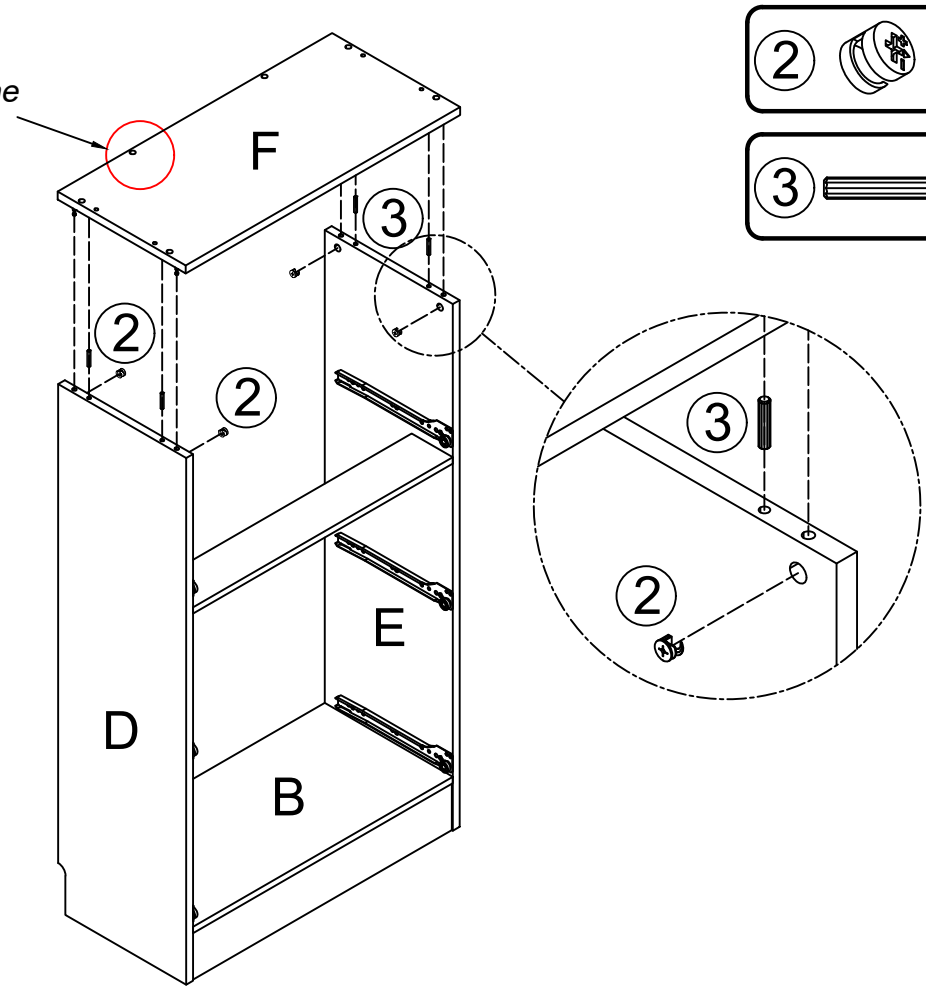Keep the holes of the Part F toward this direction as shown




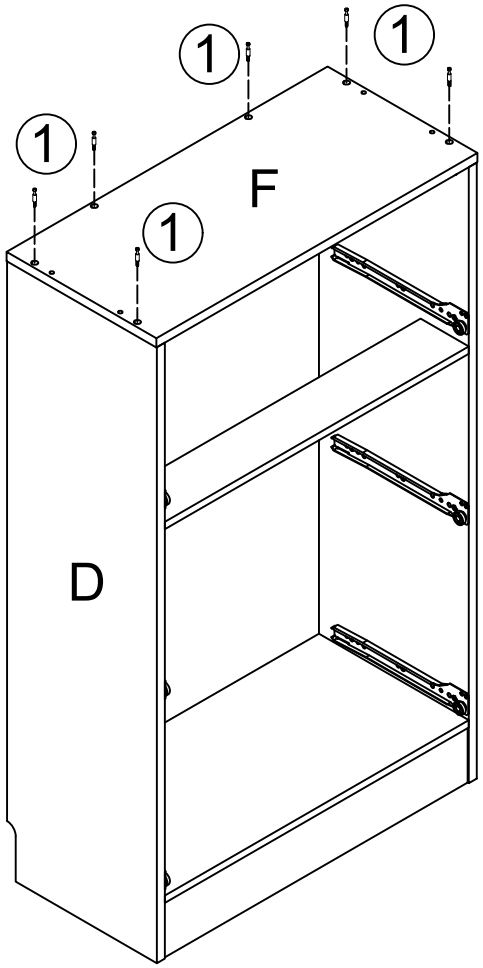
STEP 13






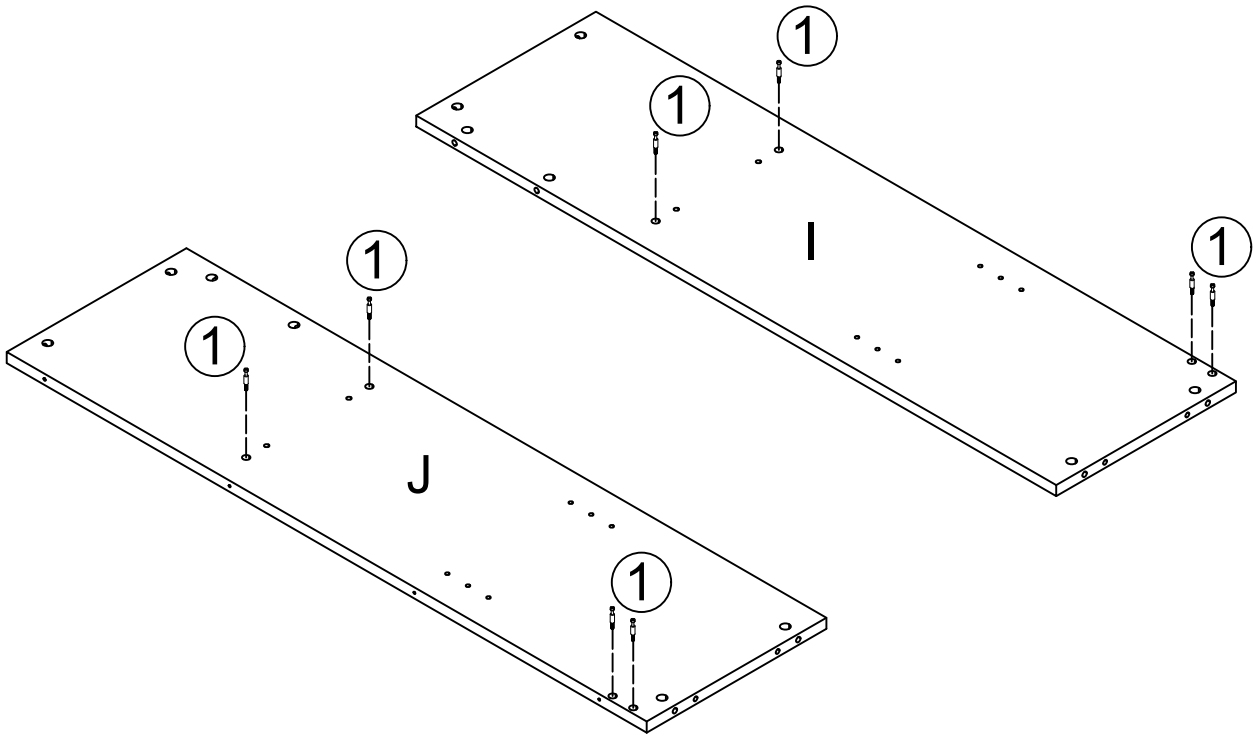STEP 14






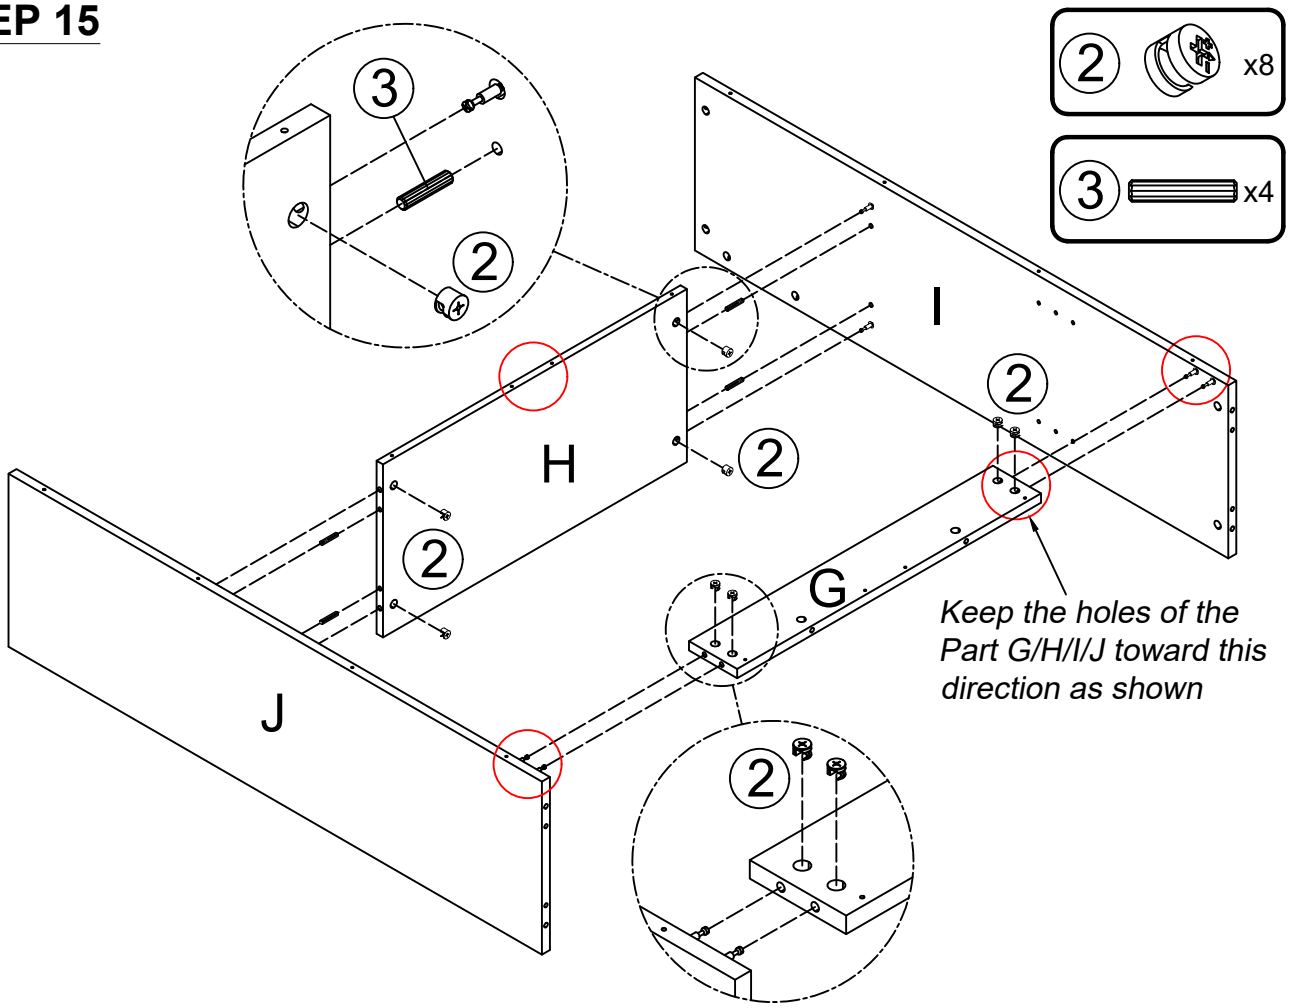
STEP 15



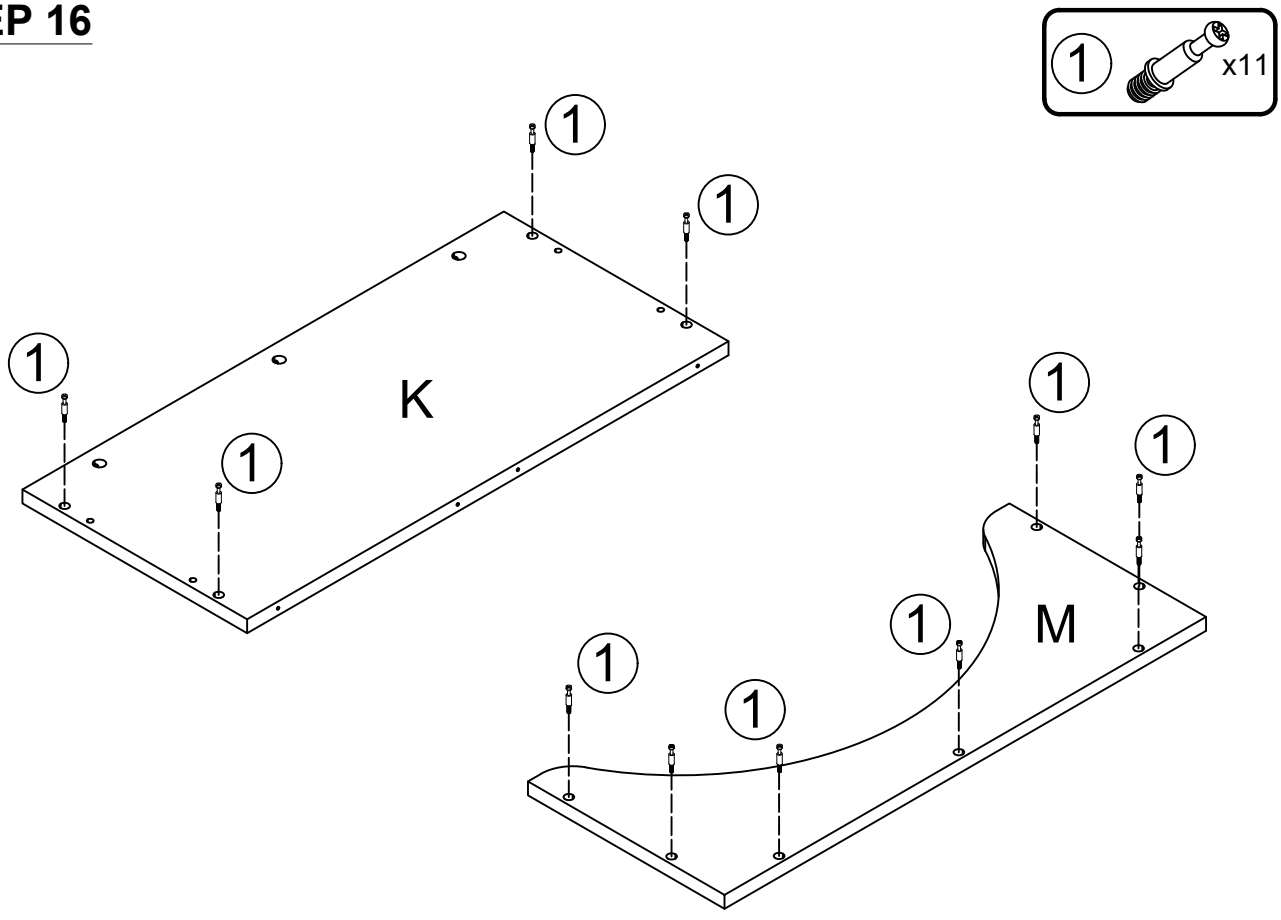
STEP 16



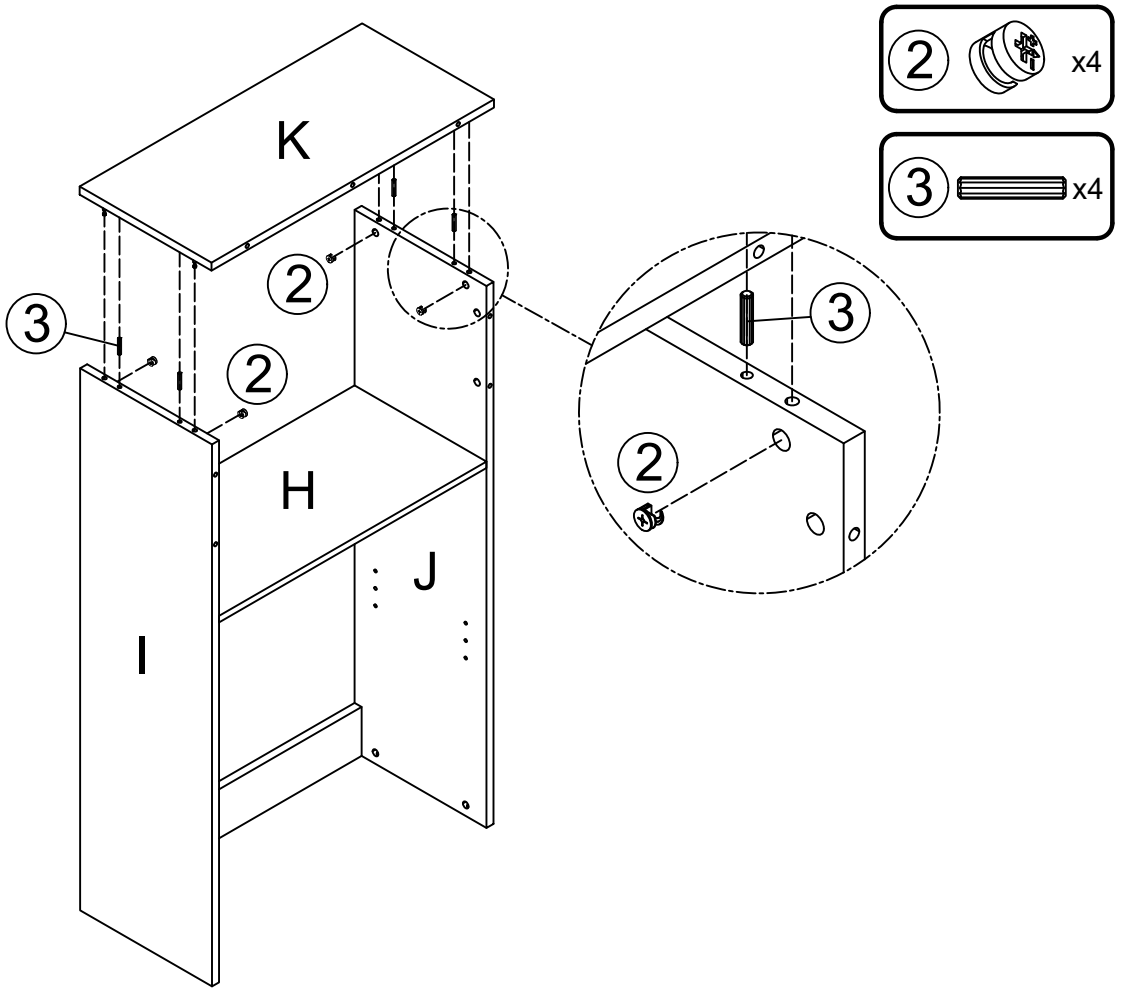
STEP 17




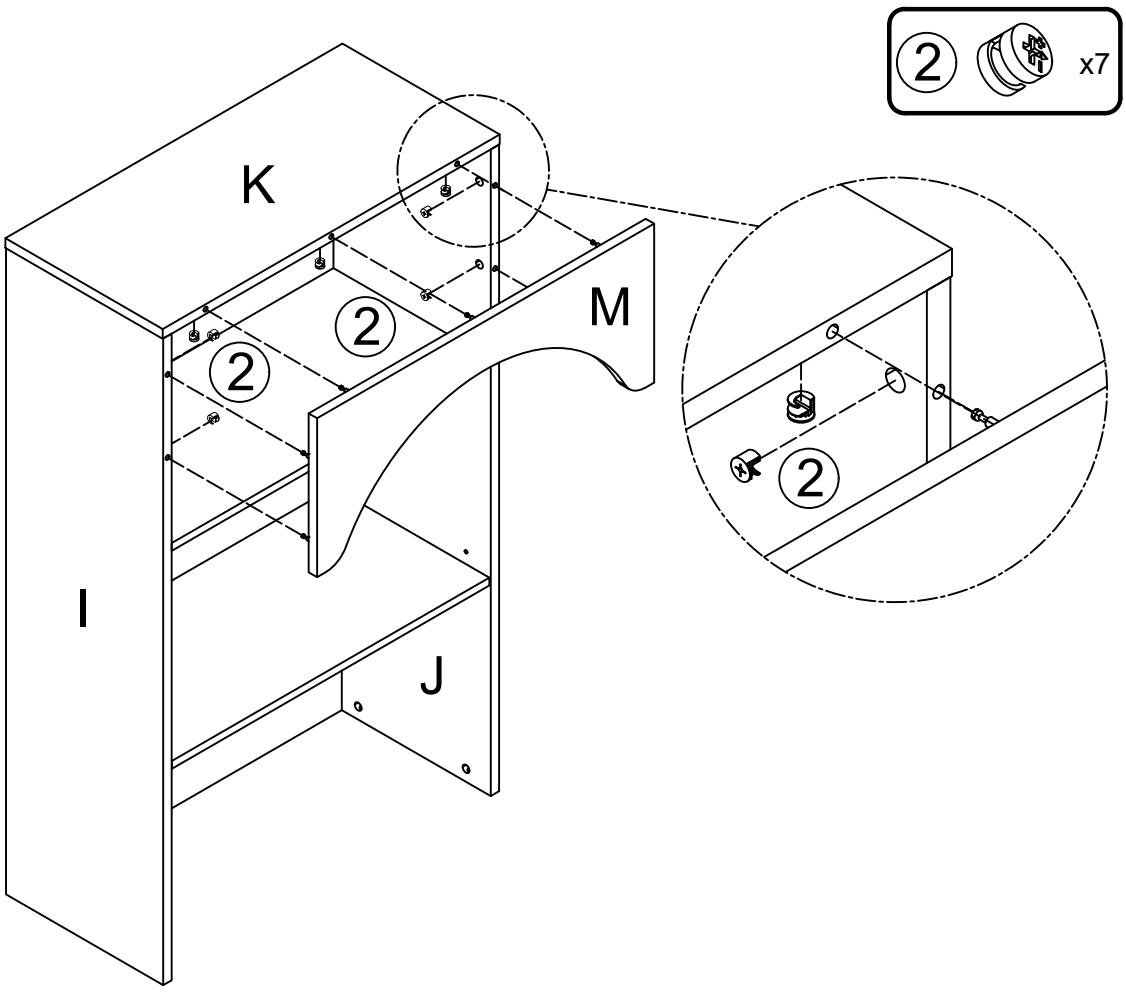STEP 18




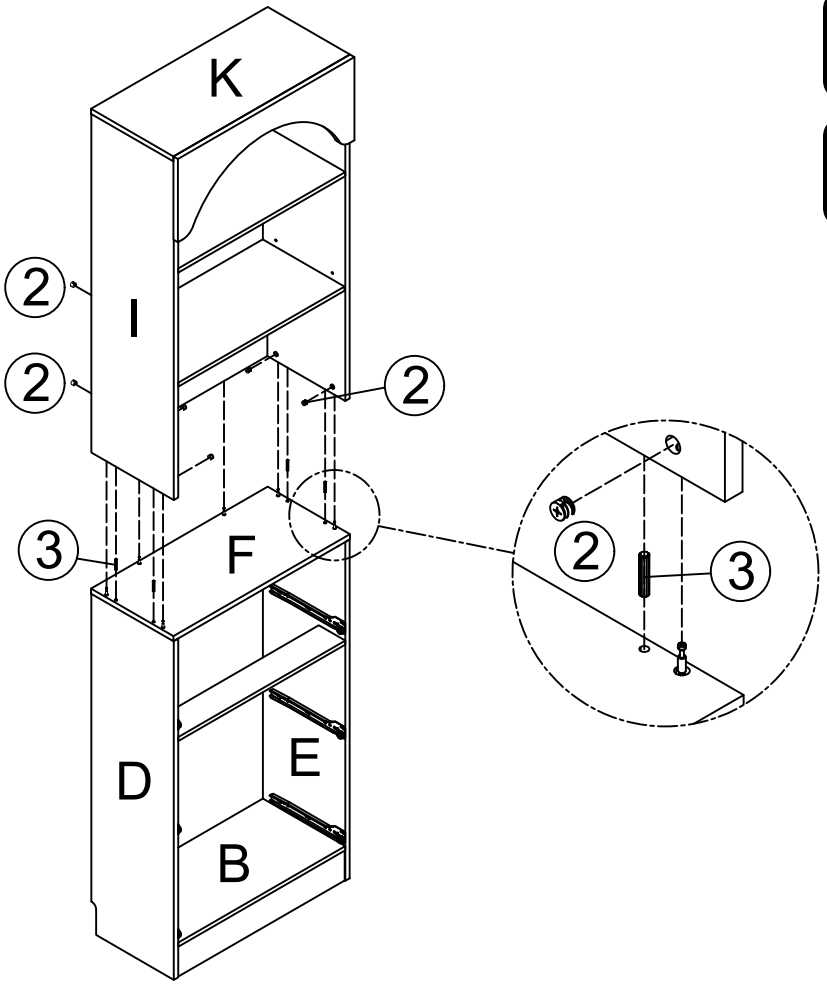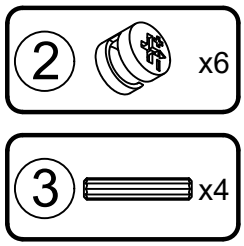
STEP 19





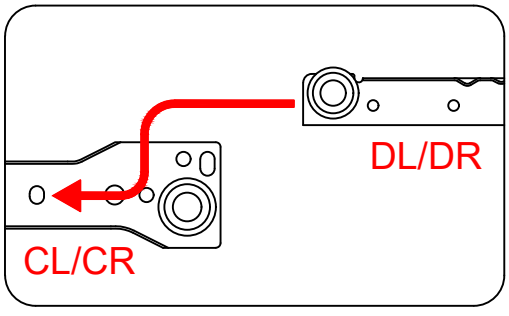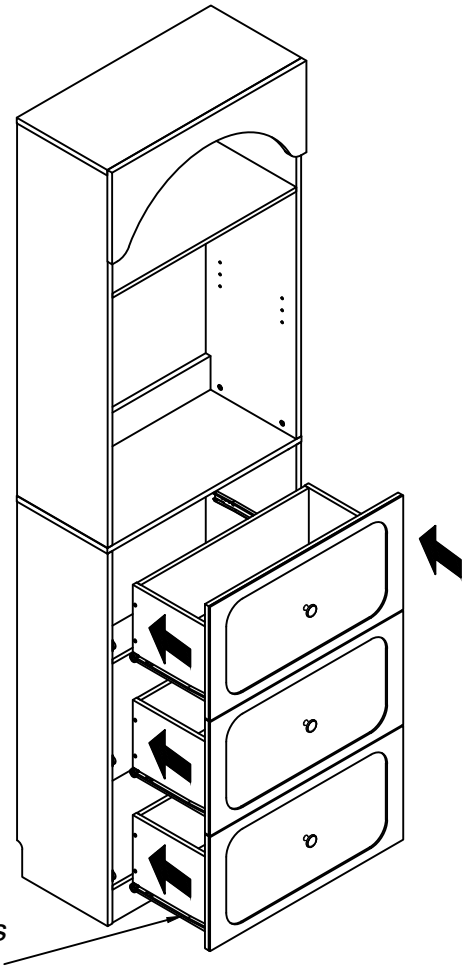
STEP 20






Please put the wheels align with the slots as the instruction shows, then slide into them

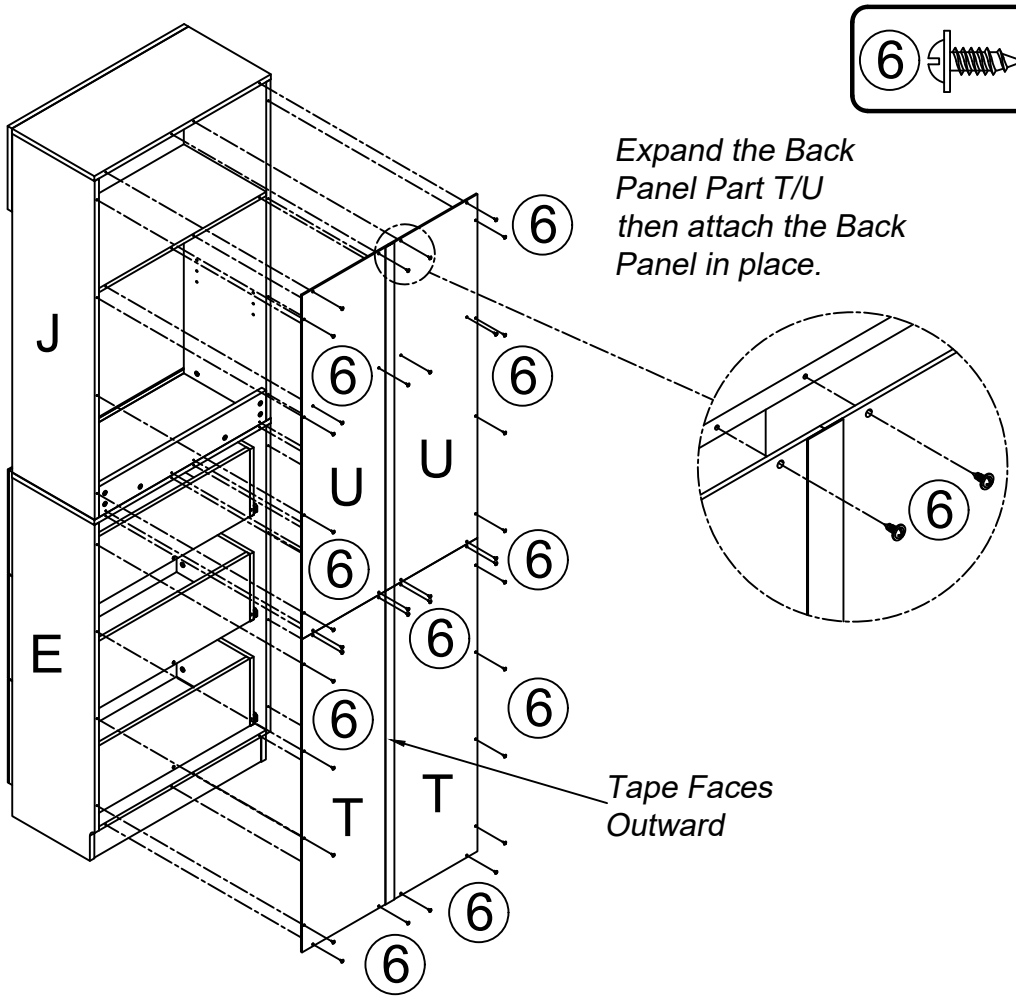
STEP 21



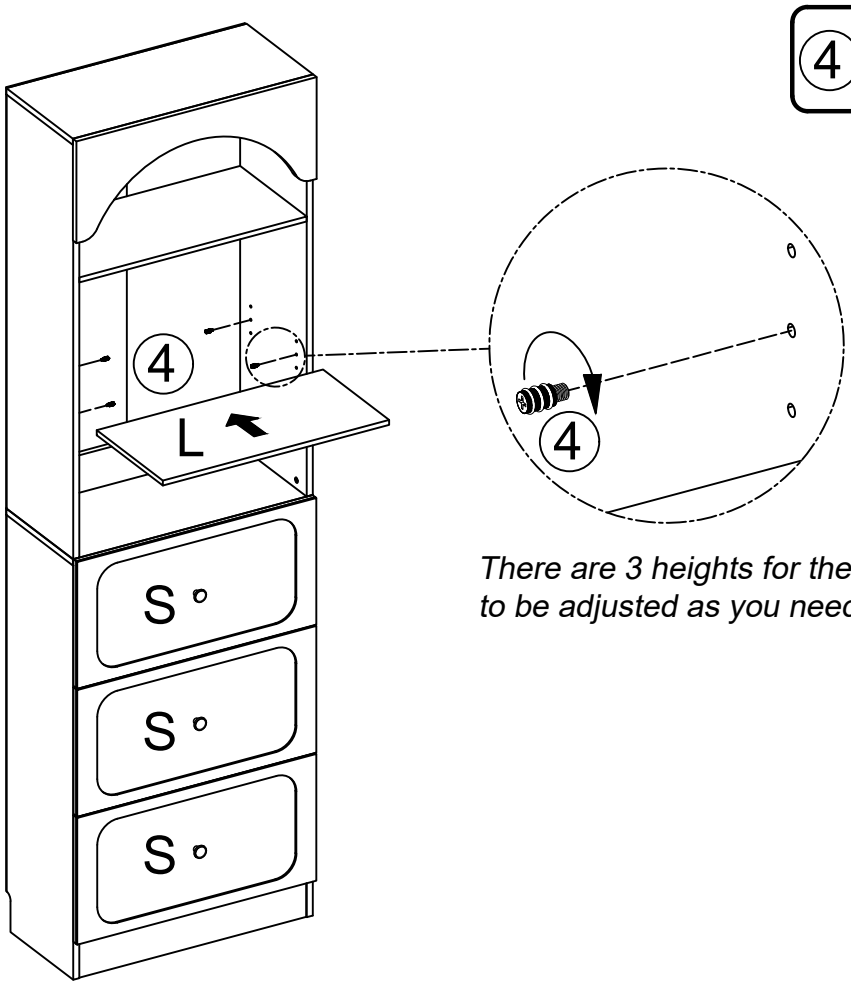STEP 22



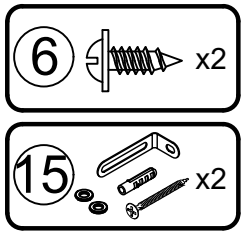STEP 23



TIPPING RESTRAINT HARDWARE

Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

