


# ASSEMBLY INSTRUCTIONS

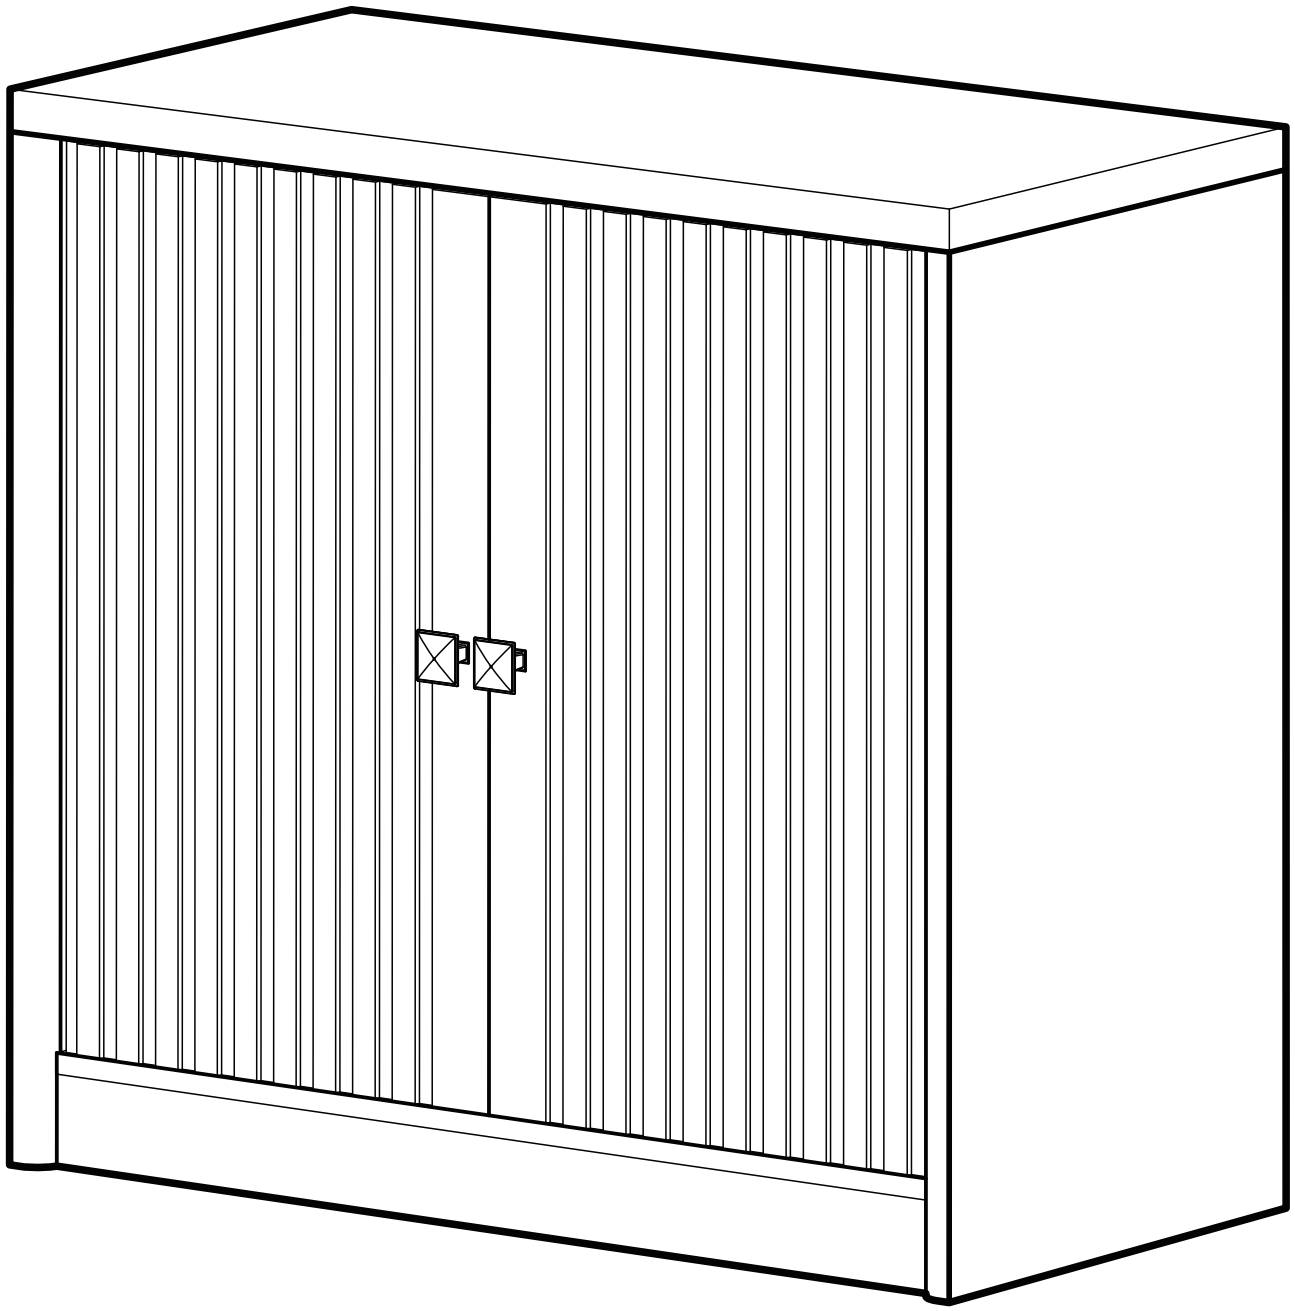

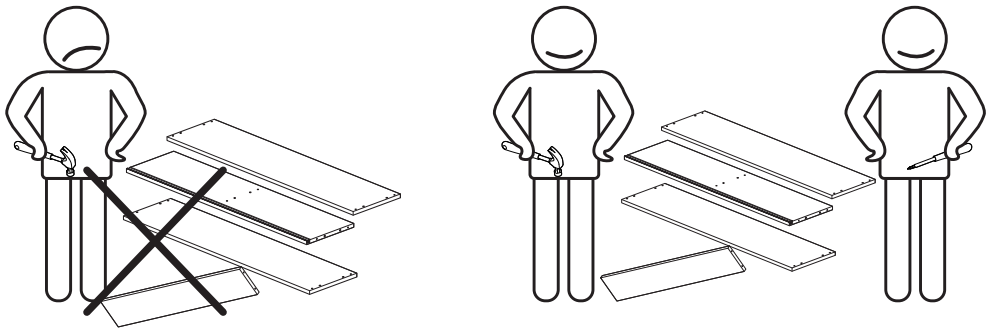

**We recommend at least 2 people for the assembly.**

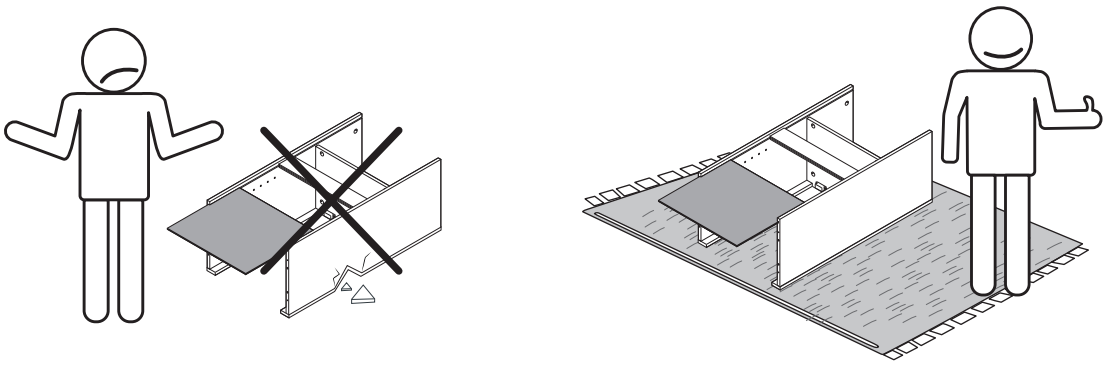


**To prevent any damage during assembly, place a mat under the pieces.**




| | |
|---|---|
| Warning | Flammable, please keep away from open flames! |
| Warnung | Entflammbar, bitte von offenen Flammen fernhalten! |
| Attention | inflammable, veuillez tenir à l'écart des flammes nues ! |
| Attenzione | infiammabile, tenere lontano da fiamme libere! |
| Advertencia | Inflamable, mantener alejado de fuego! |
| Waarschuwing | Ontvlambaar, uit de buurt van open vuur houden! |
| Ostrzeżenie | Produkt Łatwopalny, trzymać z dala od otwartego ognia! |


# PARTS DIAGRAM

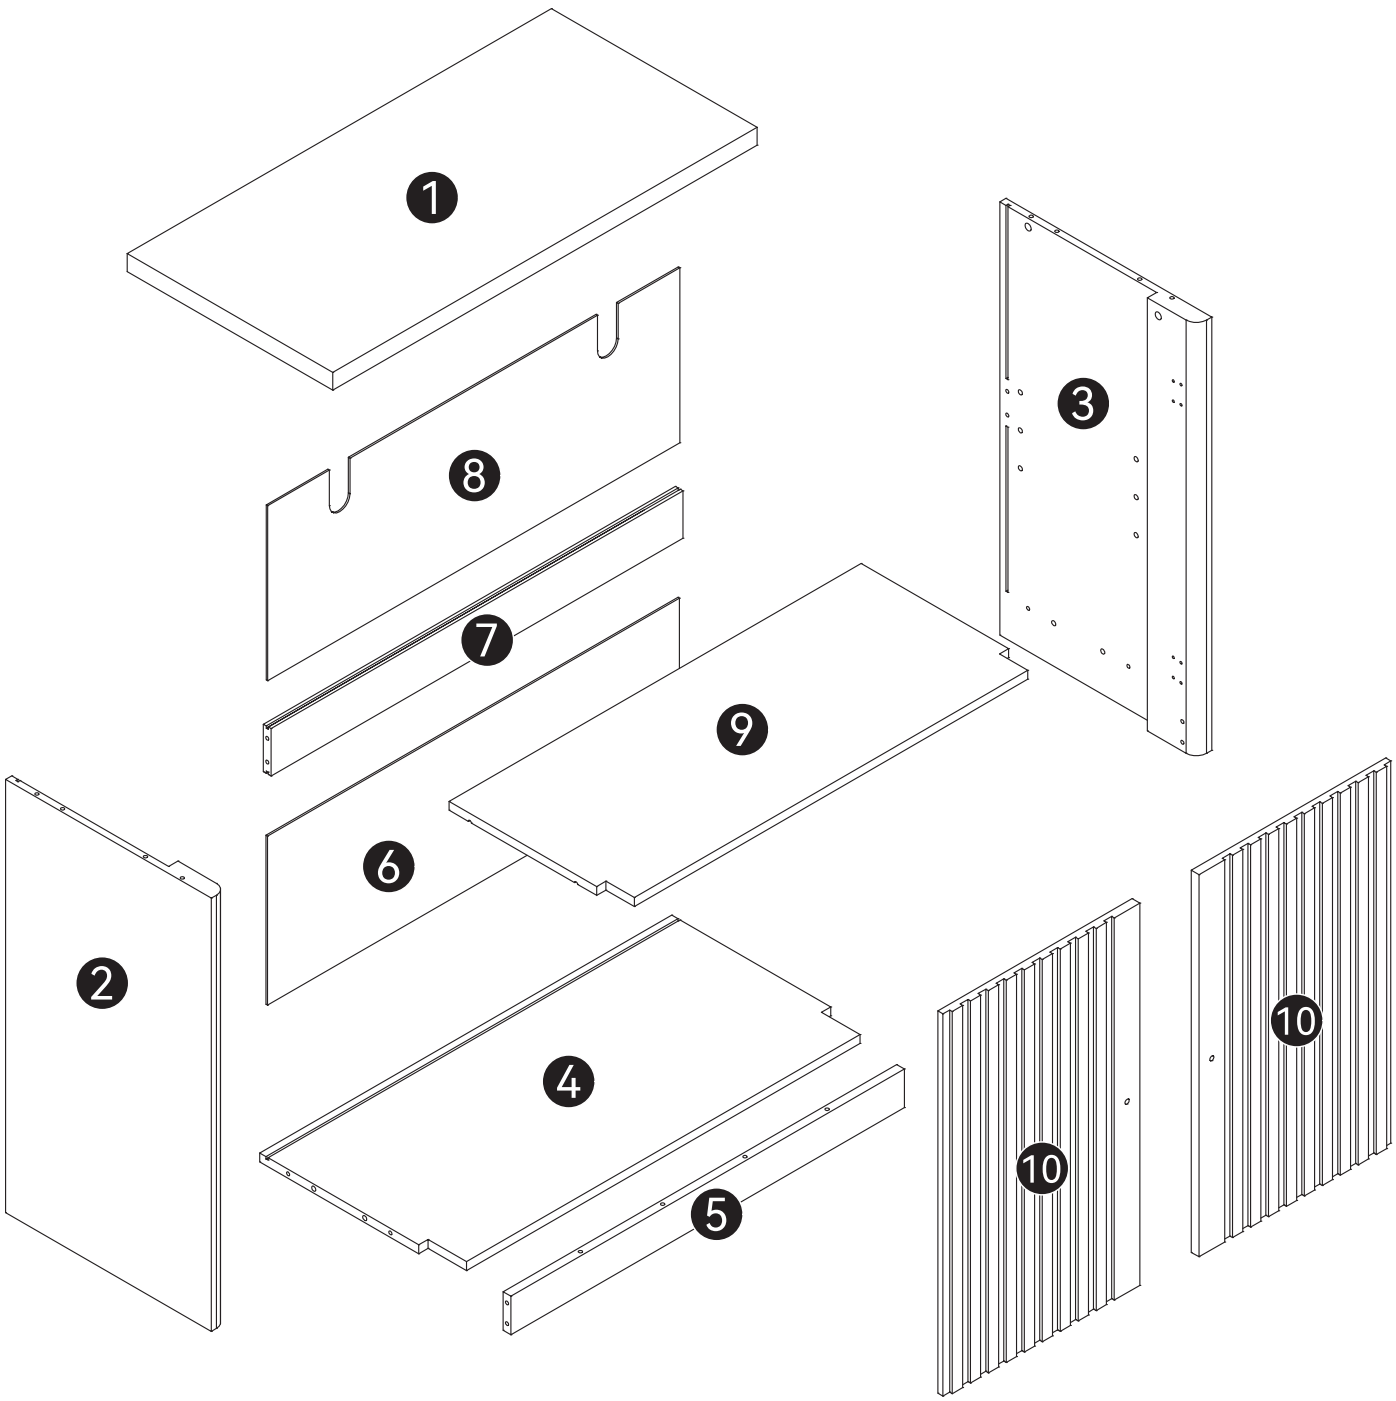


# PARTS LIST

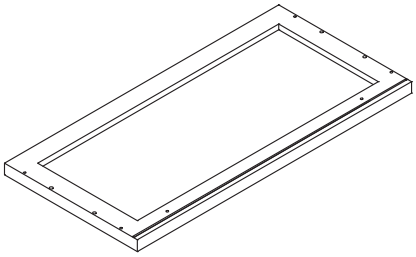


❶ x 1

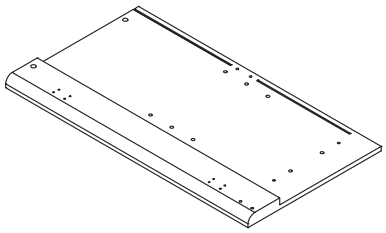


❷ x 1

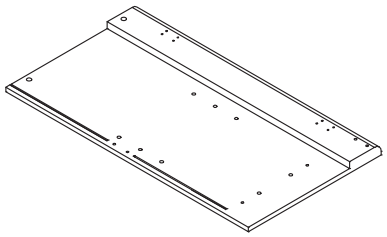


❸ x 1

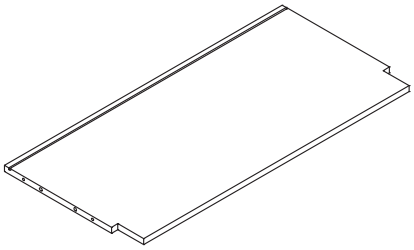


❹ x 1

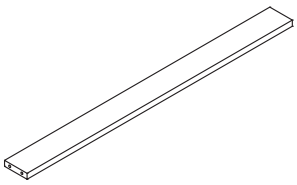


❺ x 1

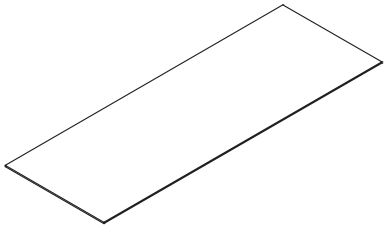


❻ x 1

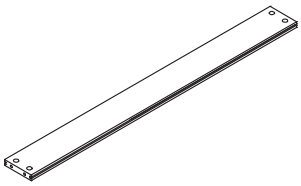


❼ x 1

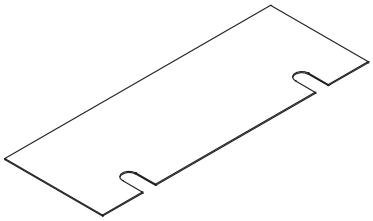

❽ x 1

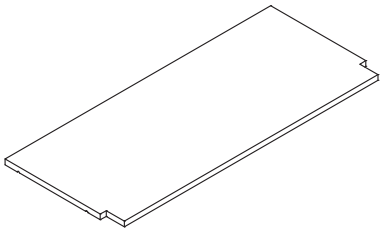


❾ x 1

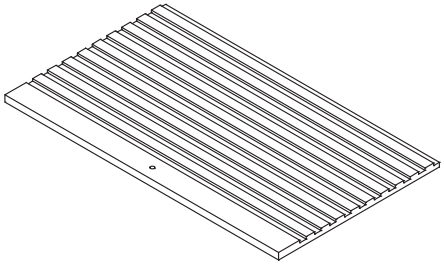

❿ x 2

# HARDWARES

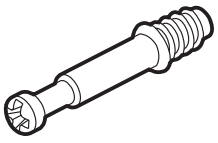


**A** x 18



Ø15x12mm

**B** x 18

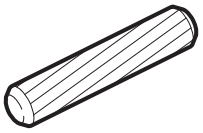


M6x30mm

**C** x 10




M4x12mm


**D** x 24

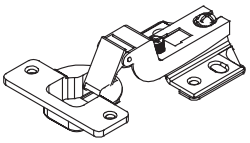


**E** x 4



**F** x 4




**G** x 2

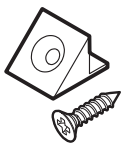

M3x16mm


**H** x 8

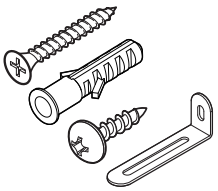

**I** x 2




**J** x 4

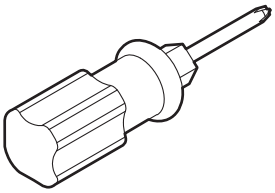

**K** x 1

# SPARE PARTS

The spare parts are the additional parts provided in case of missing or damaged ones. Keep the spare parts and tools for future use.

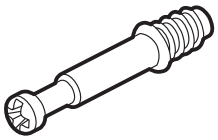


**A** x 2



Ø15x12mm

**B** x 2

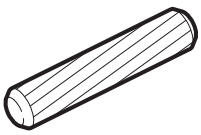


M6x30mm

**C** x 1




M4x12mm

**D** x 3



**F** x 1

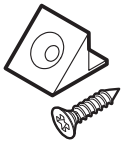


M3x16mm

**H** x 1


# CAM LOCK FASTEN SYSTEM

⚠ Insert the cam bolt into the hole, then insert the cam lock and tighten.


1

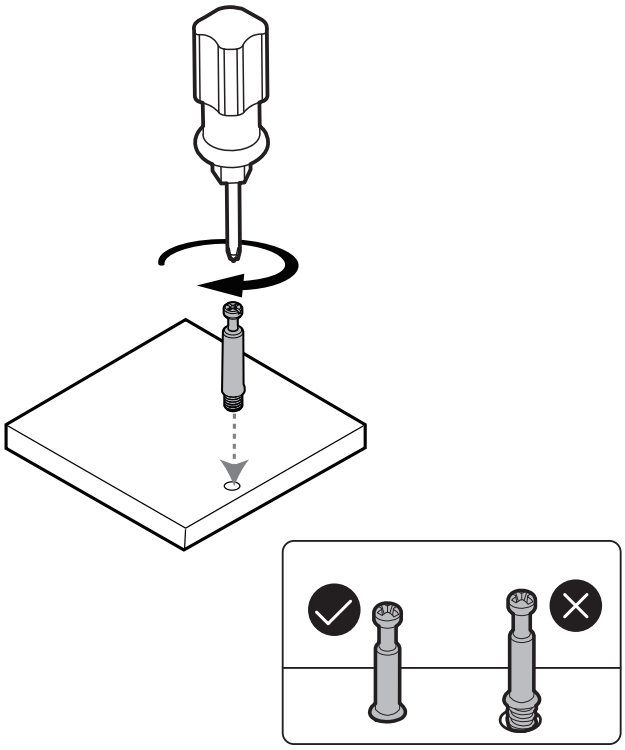

2

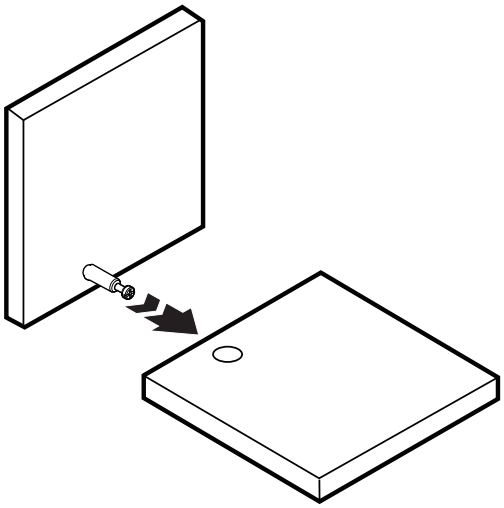


3

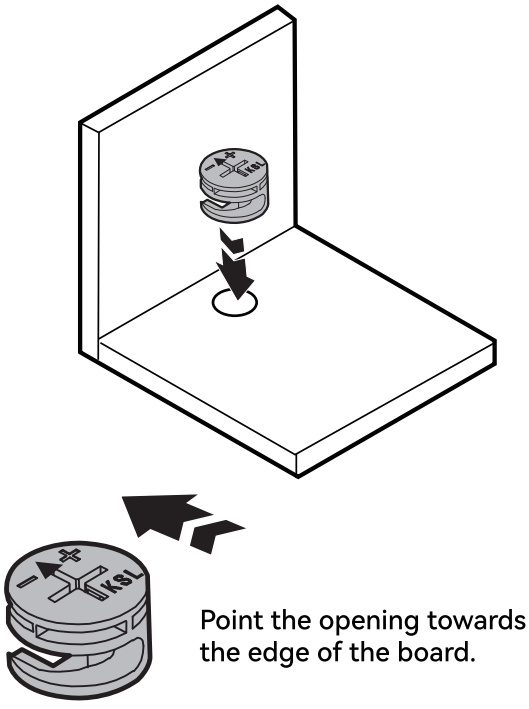



Point the opening towards the edge of the board.


4

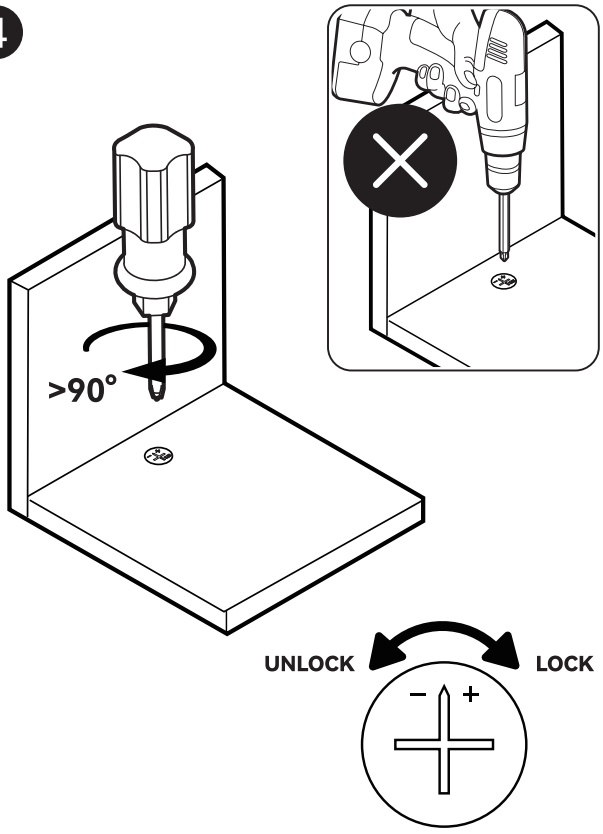



# ASSEMBLY


1

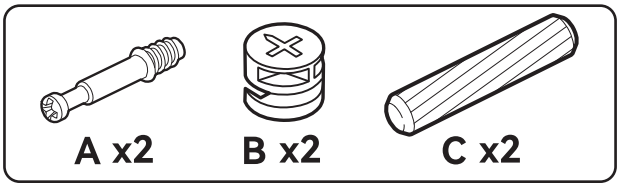

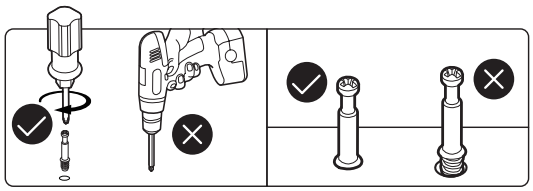


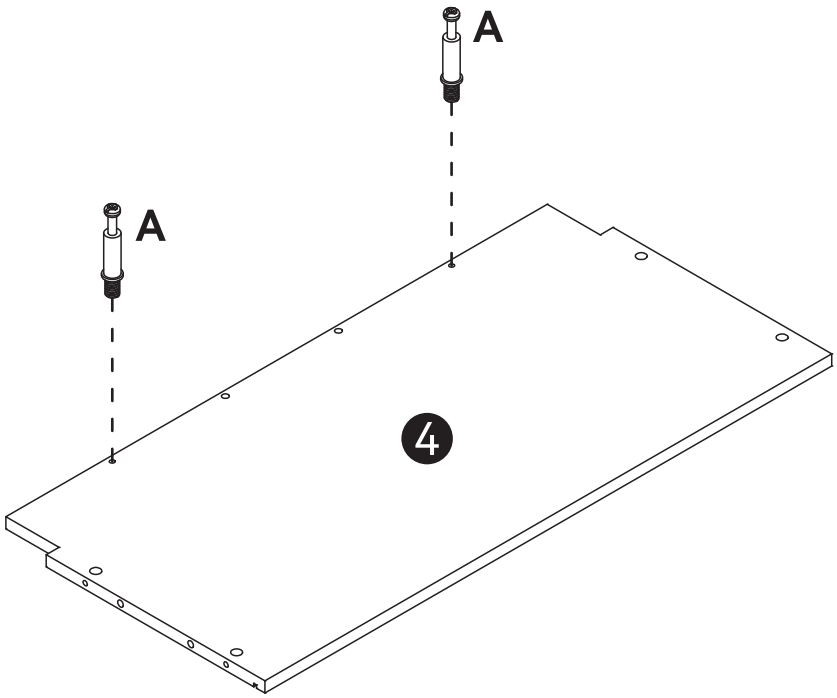
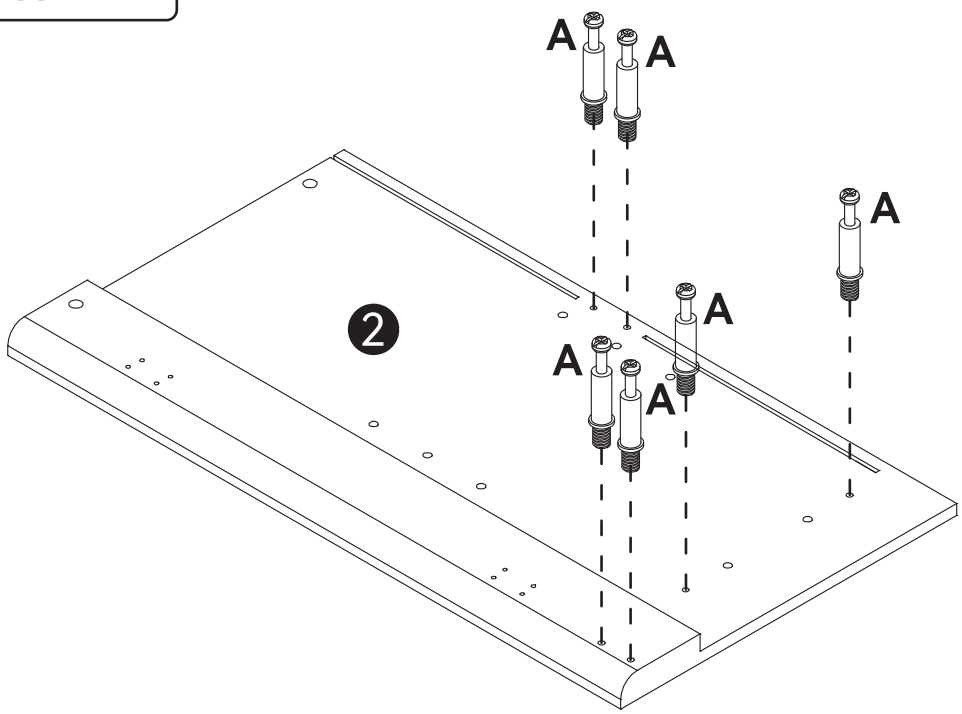


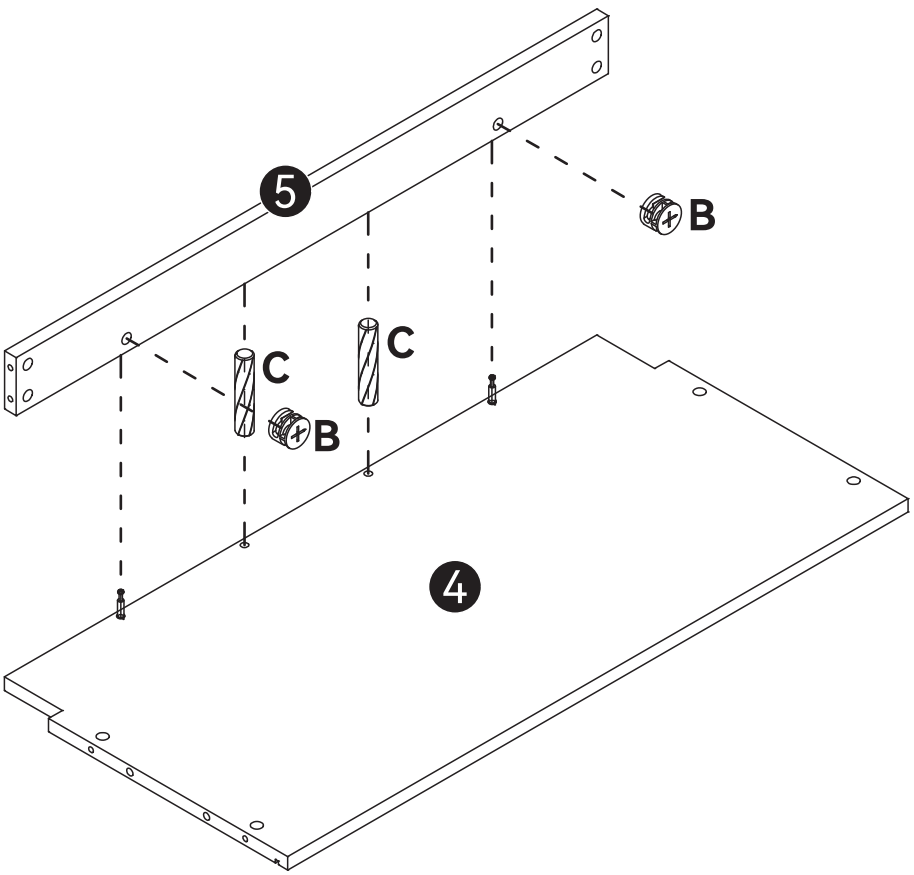


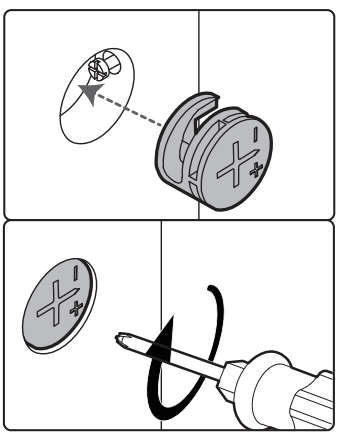
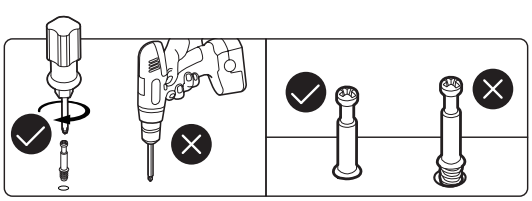



# 2

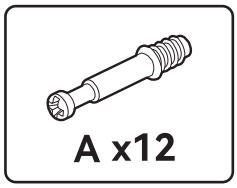


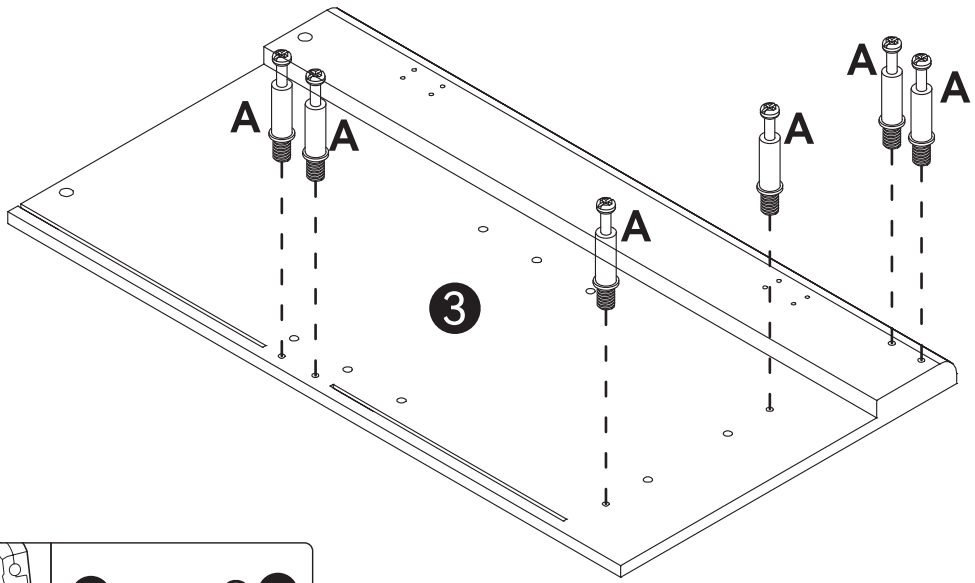



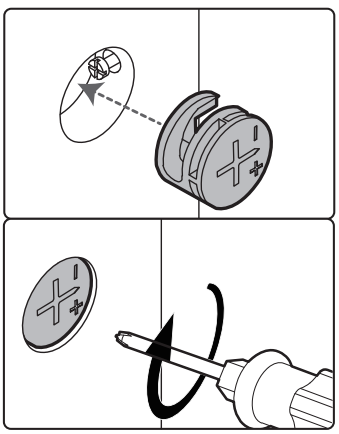



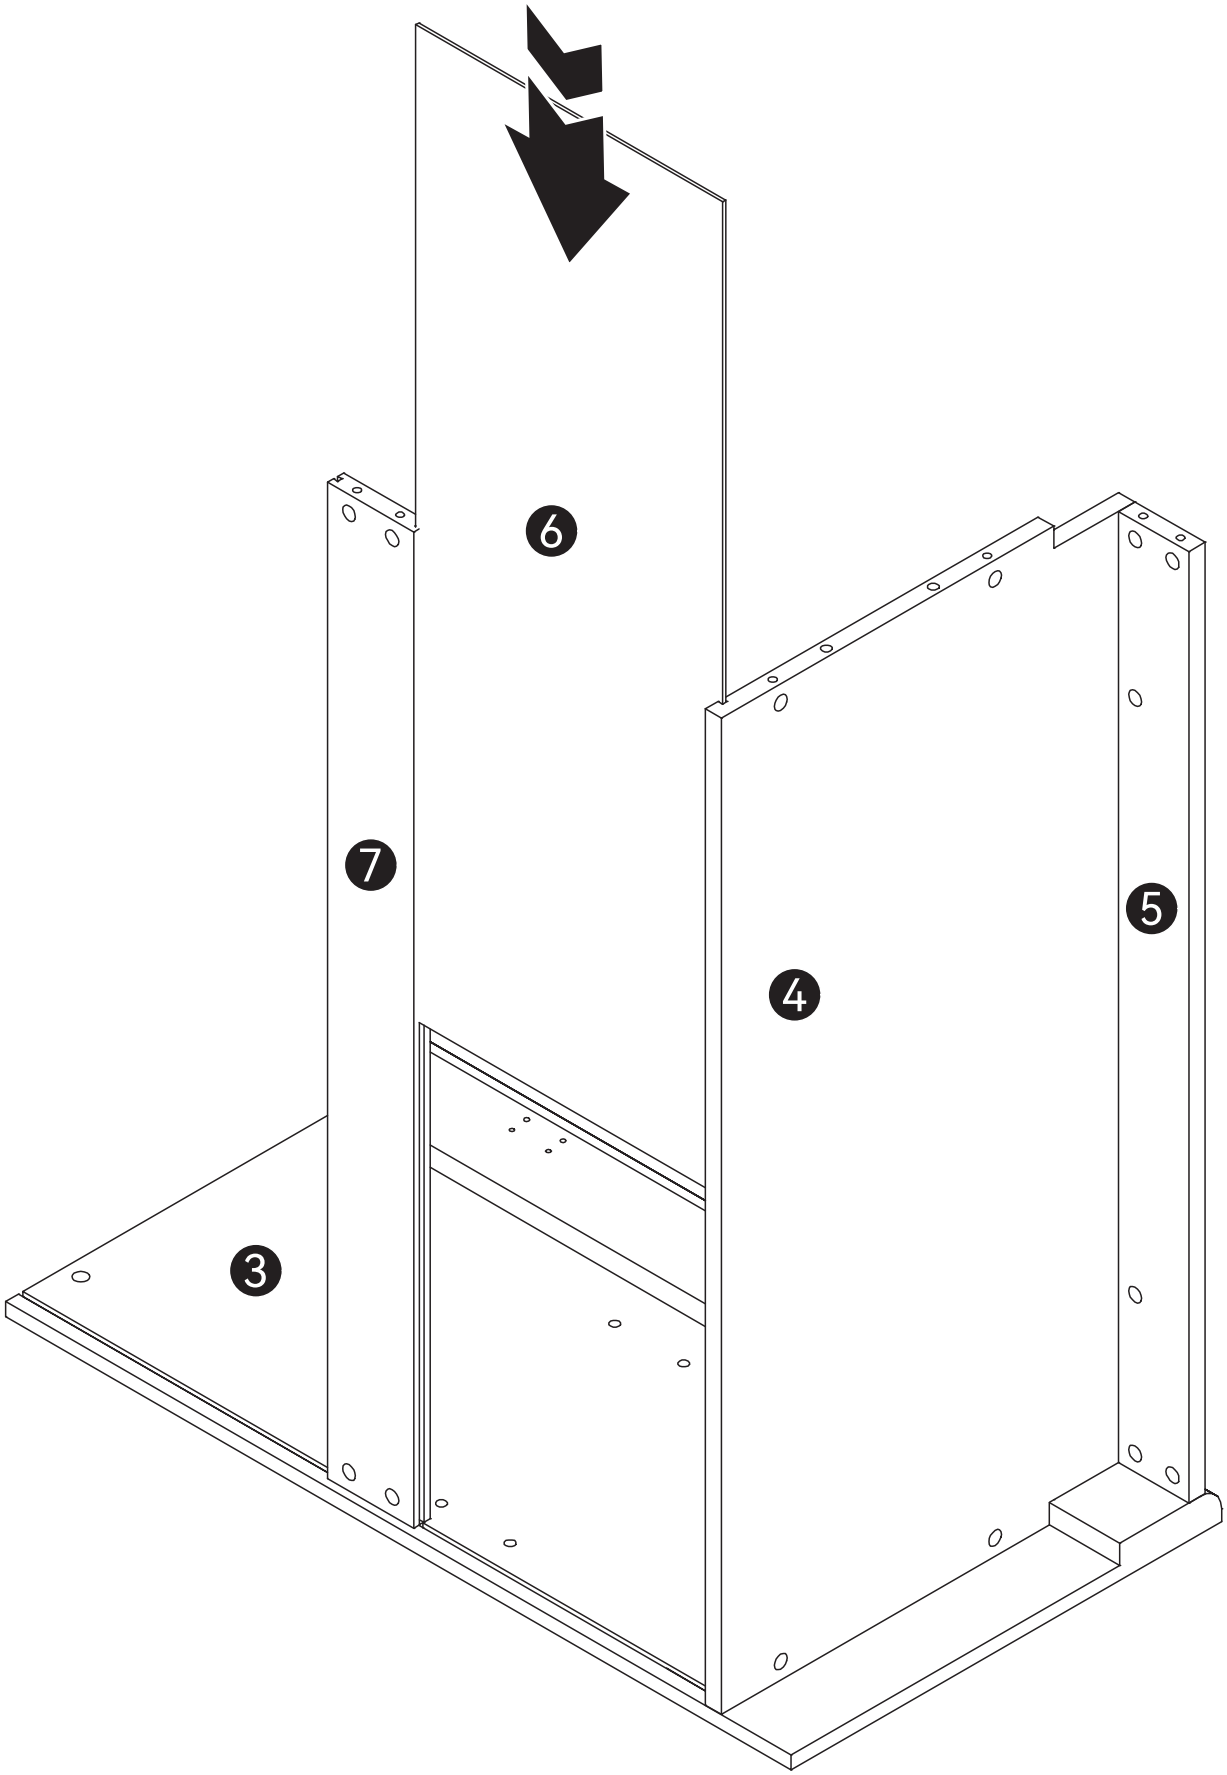
# 3



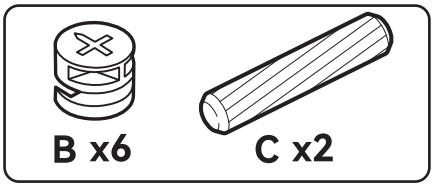


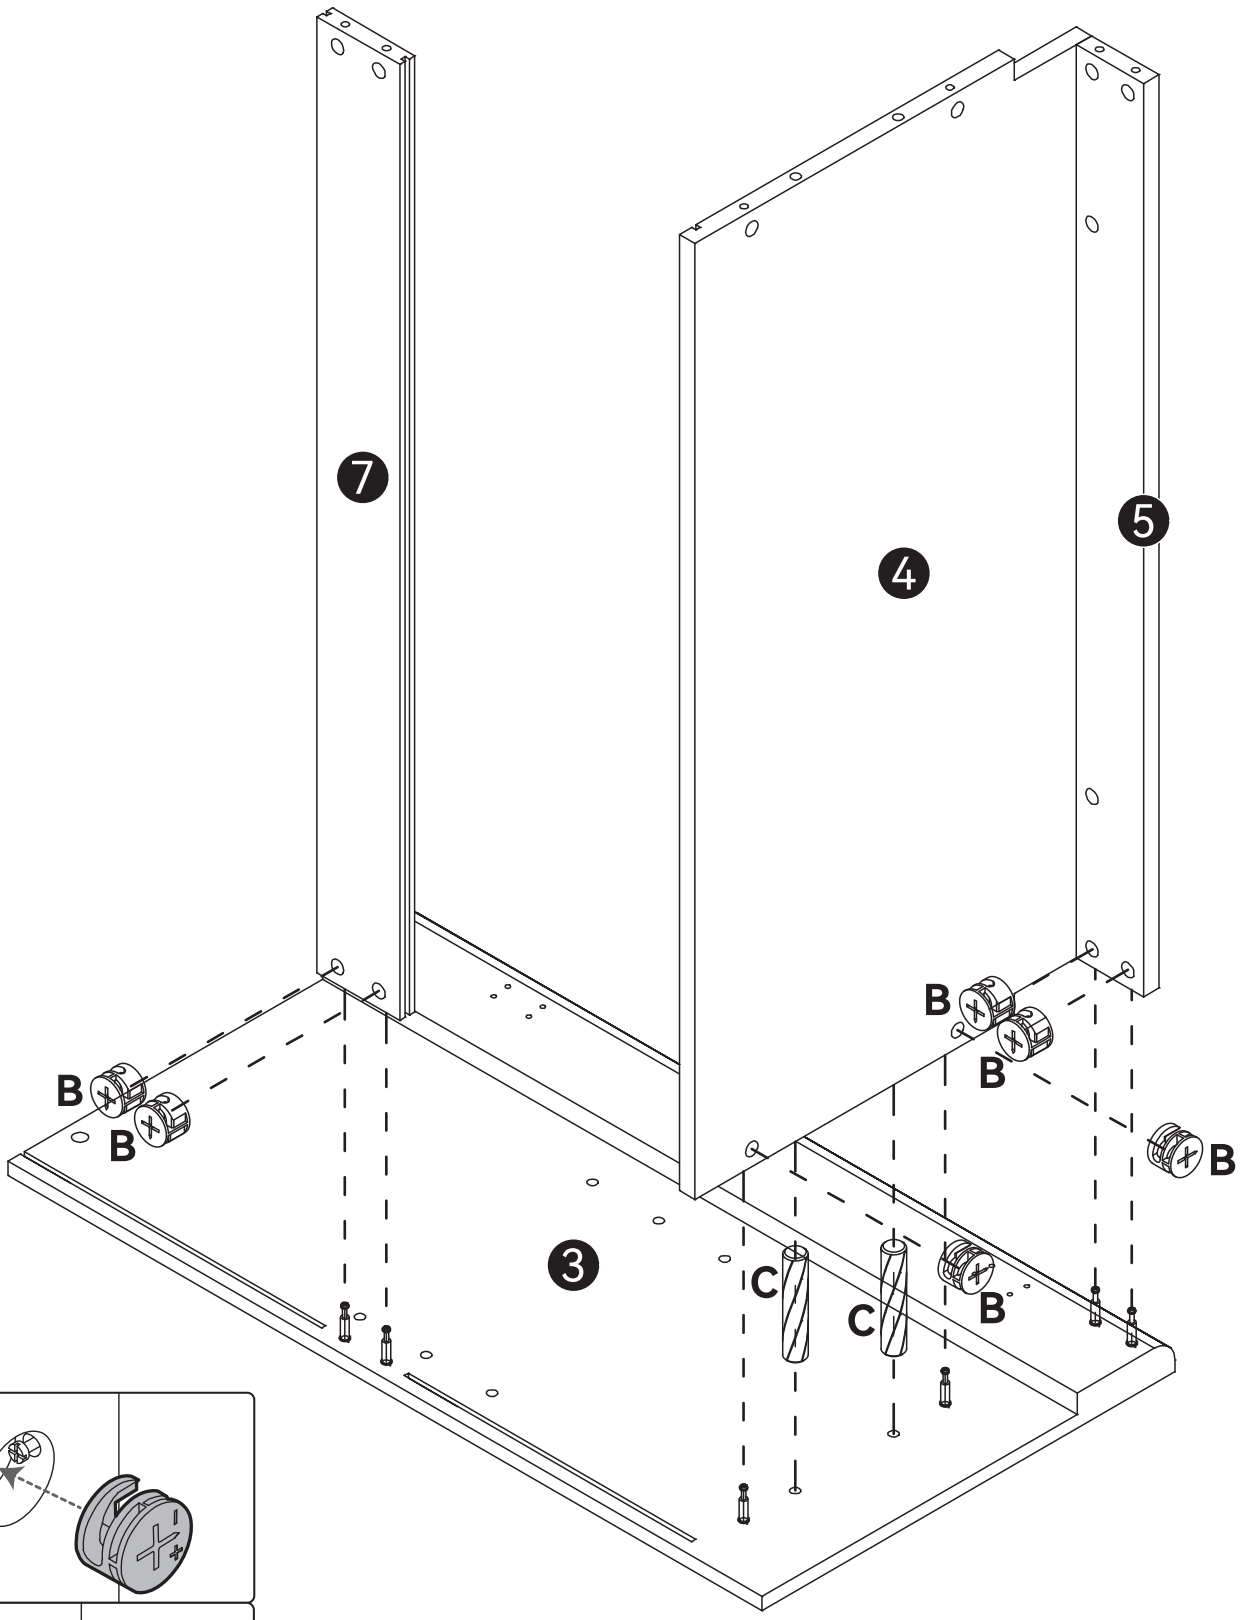
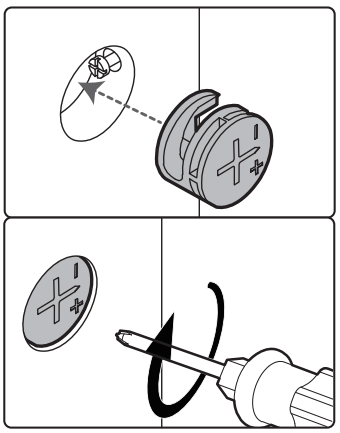



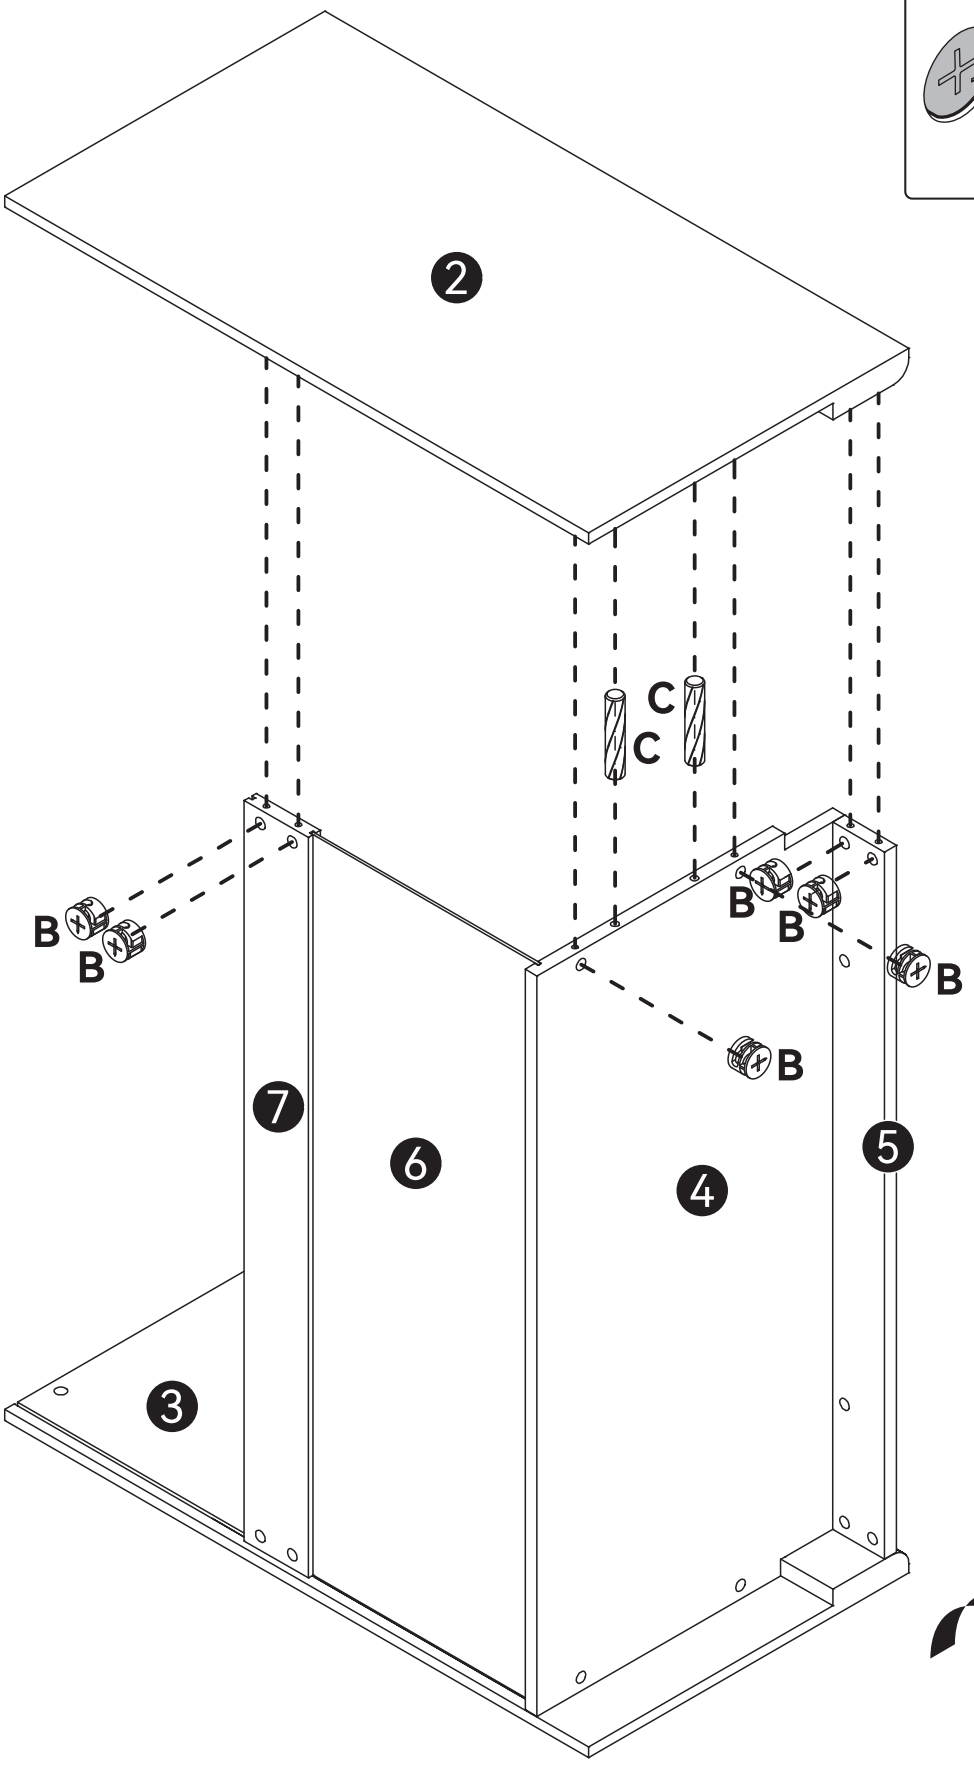
# 4




# 6

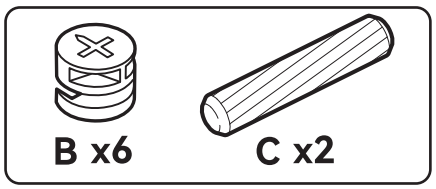





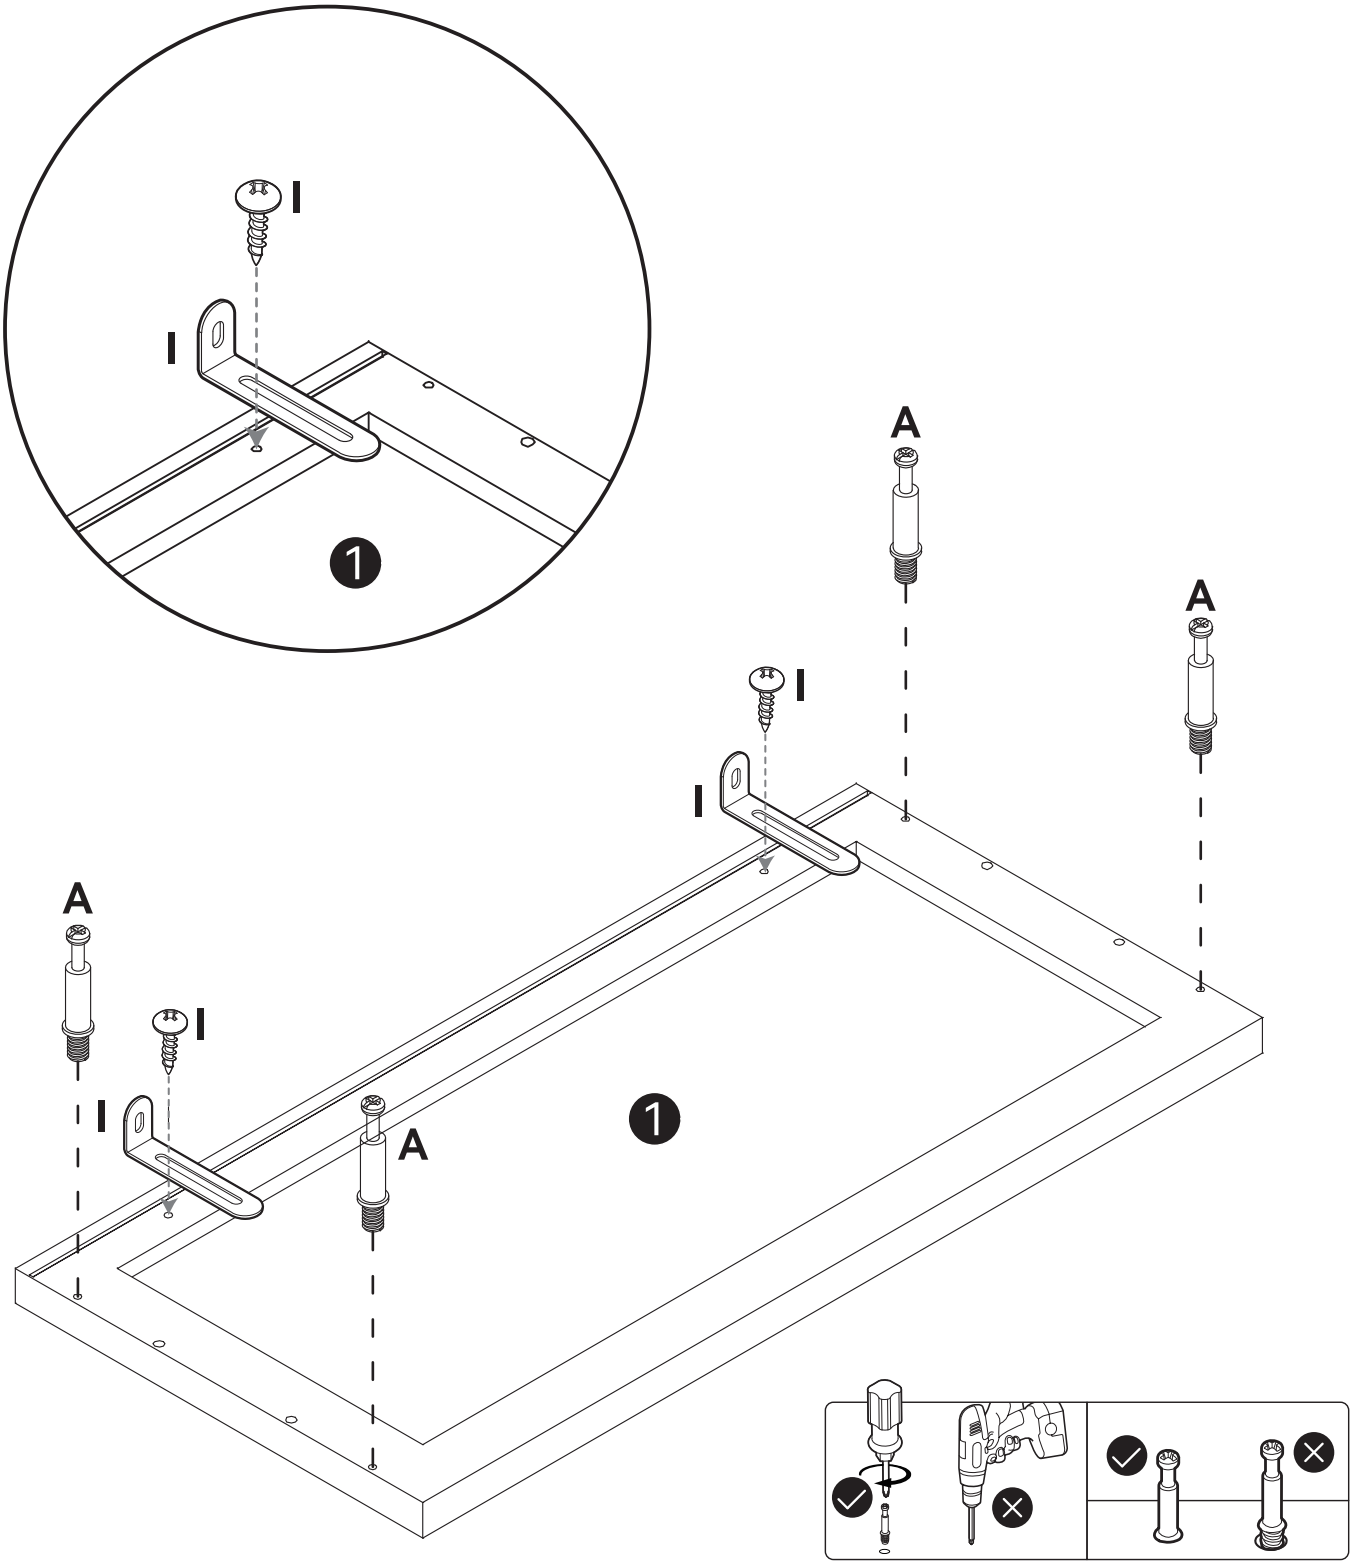


# 7

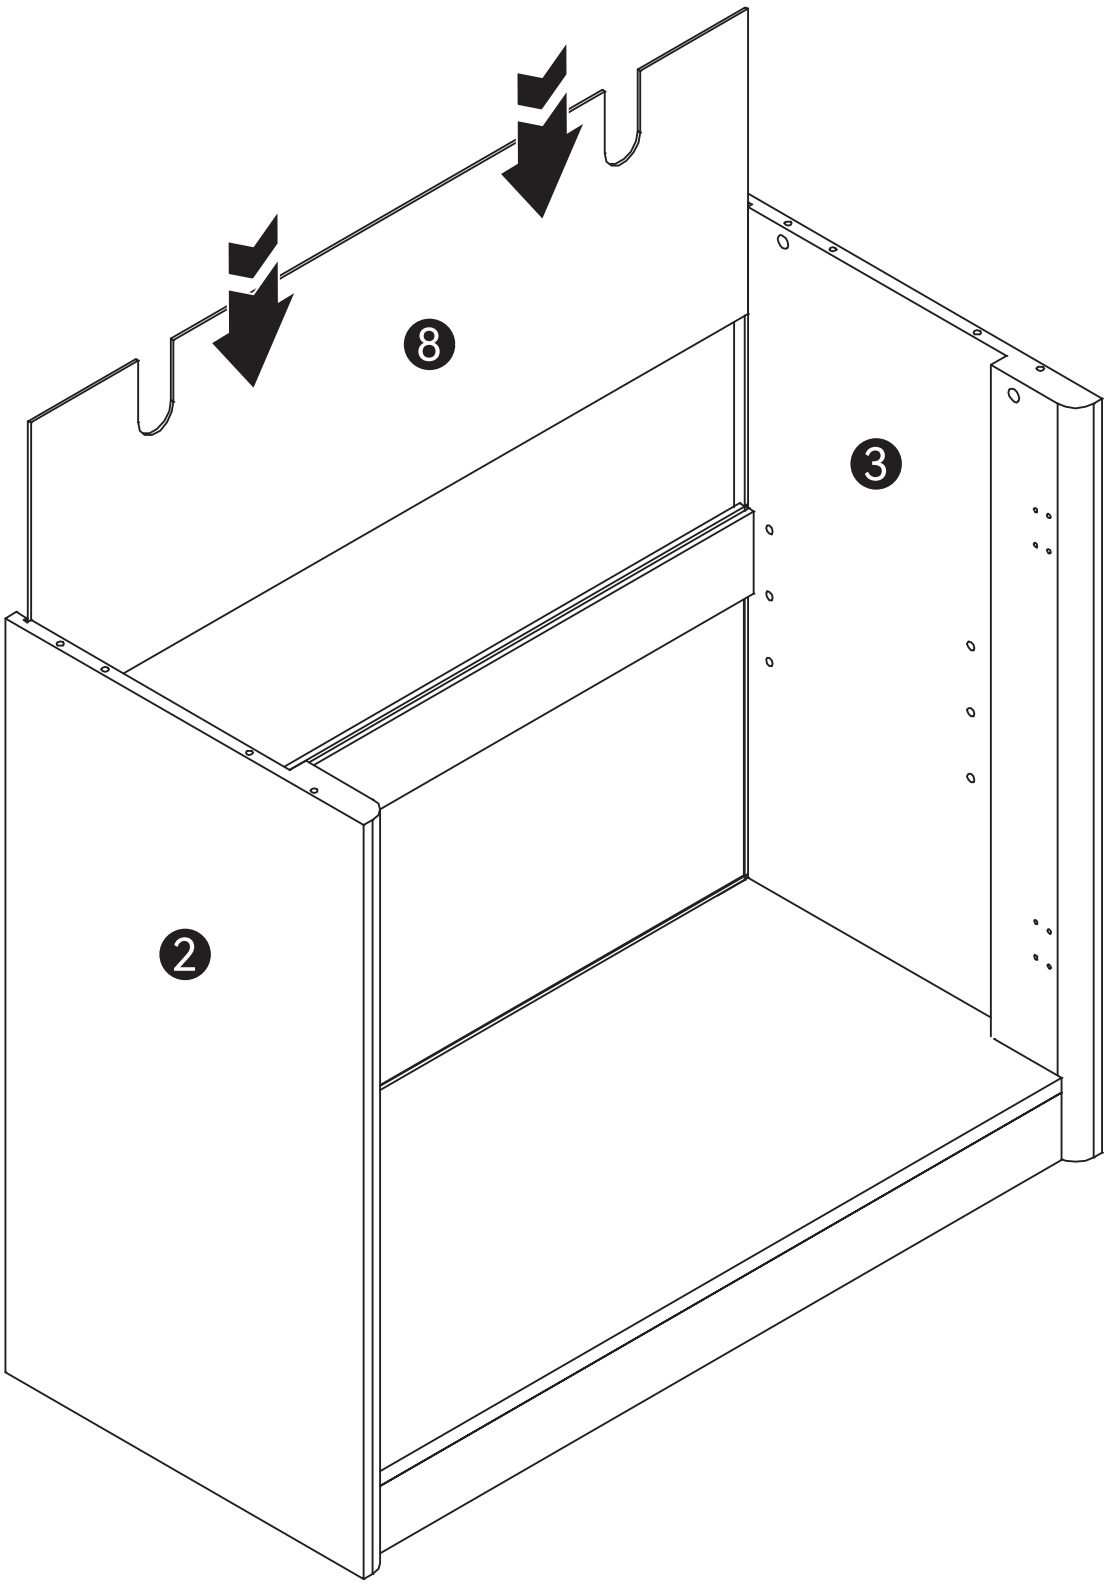



# 8

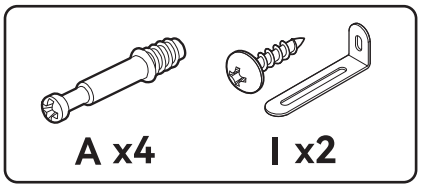



# 9




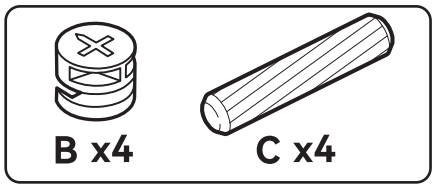


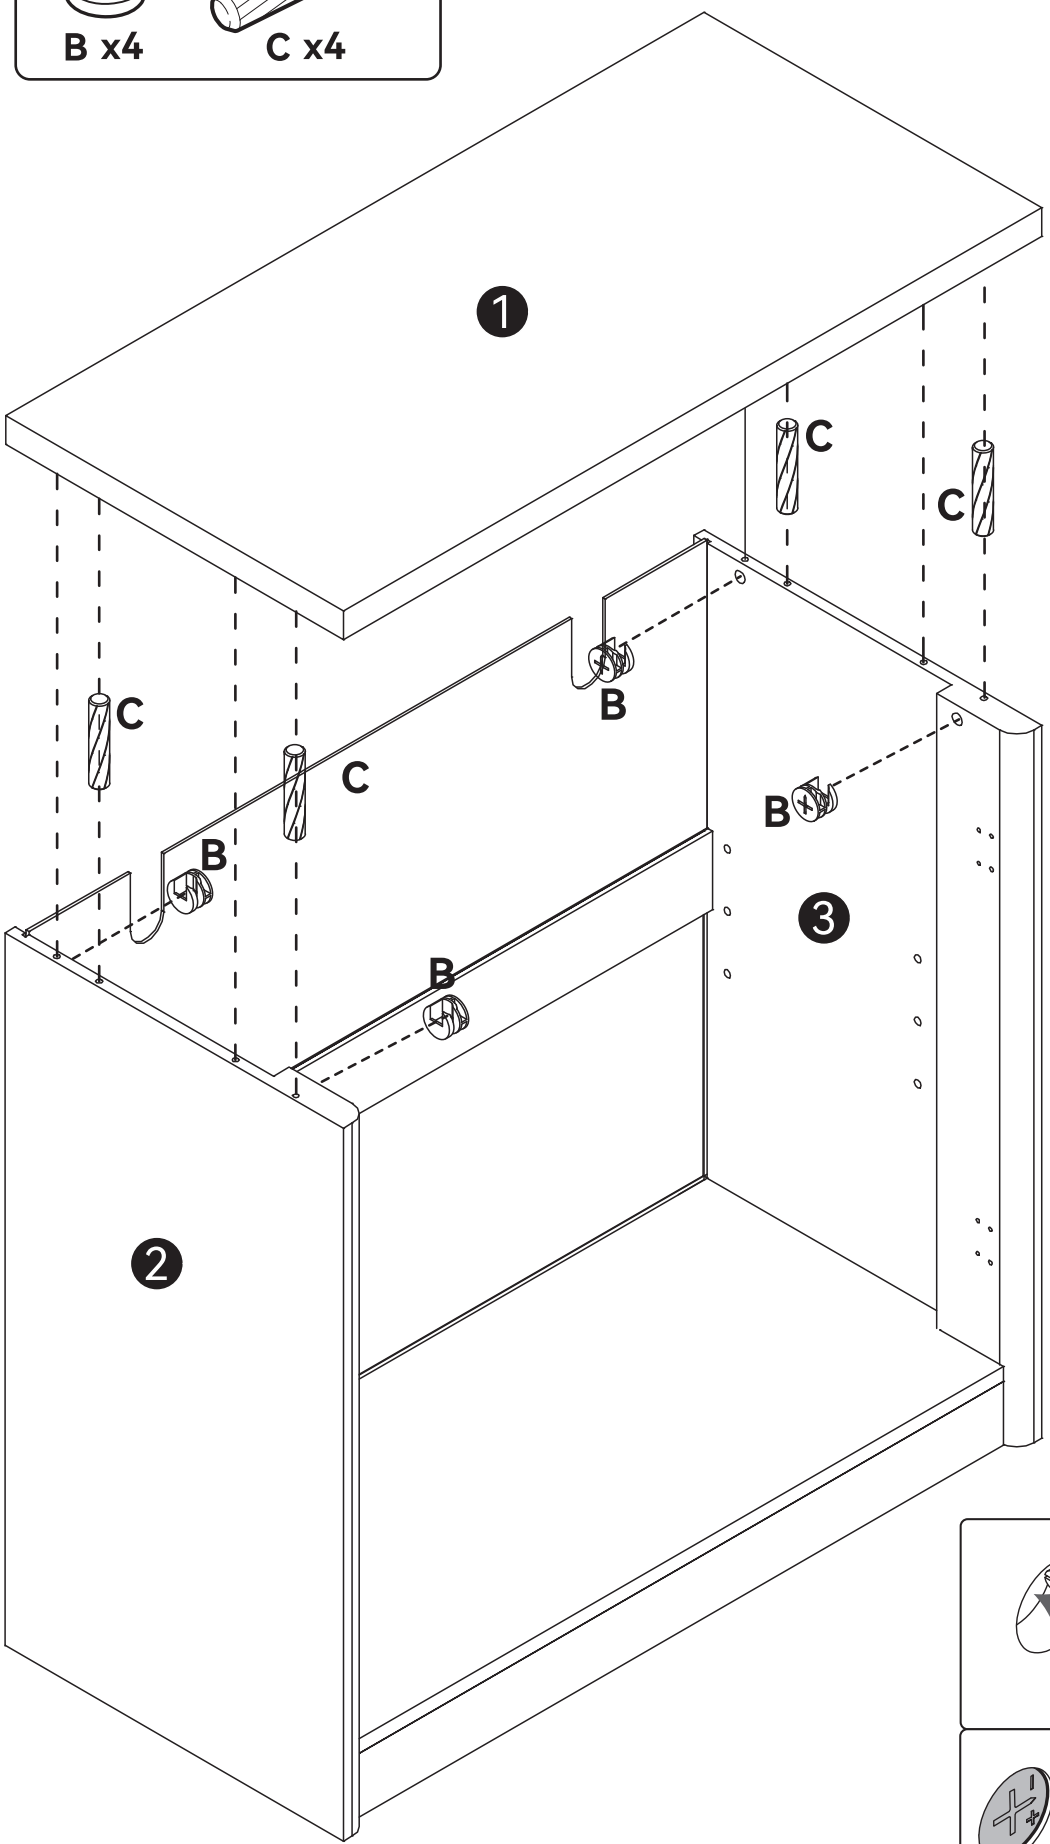
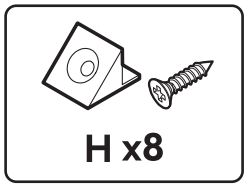
# 10

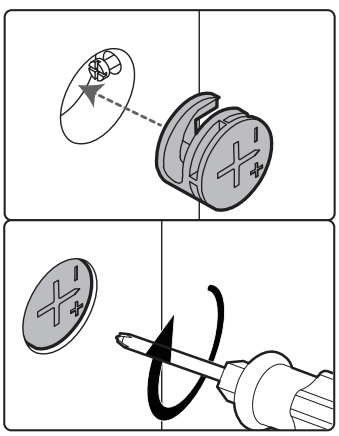


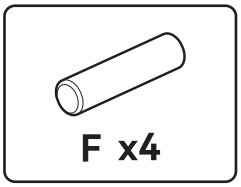


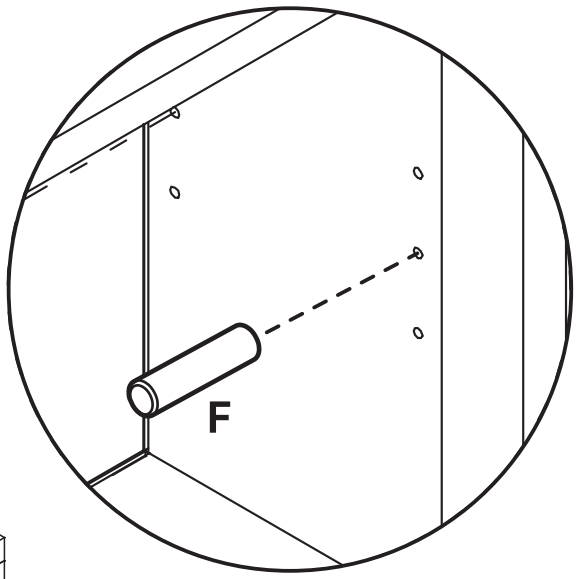
# 11

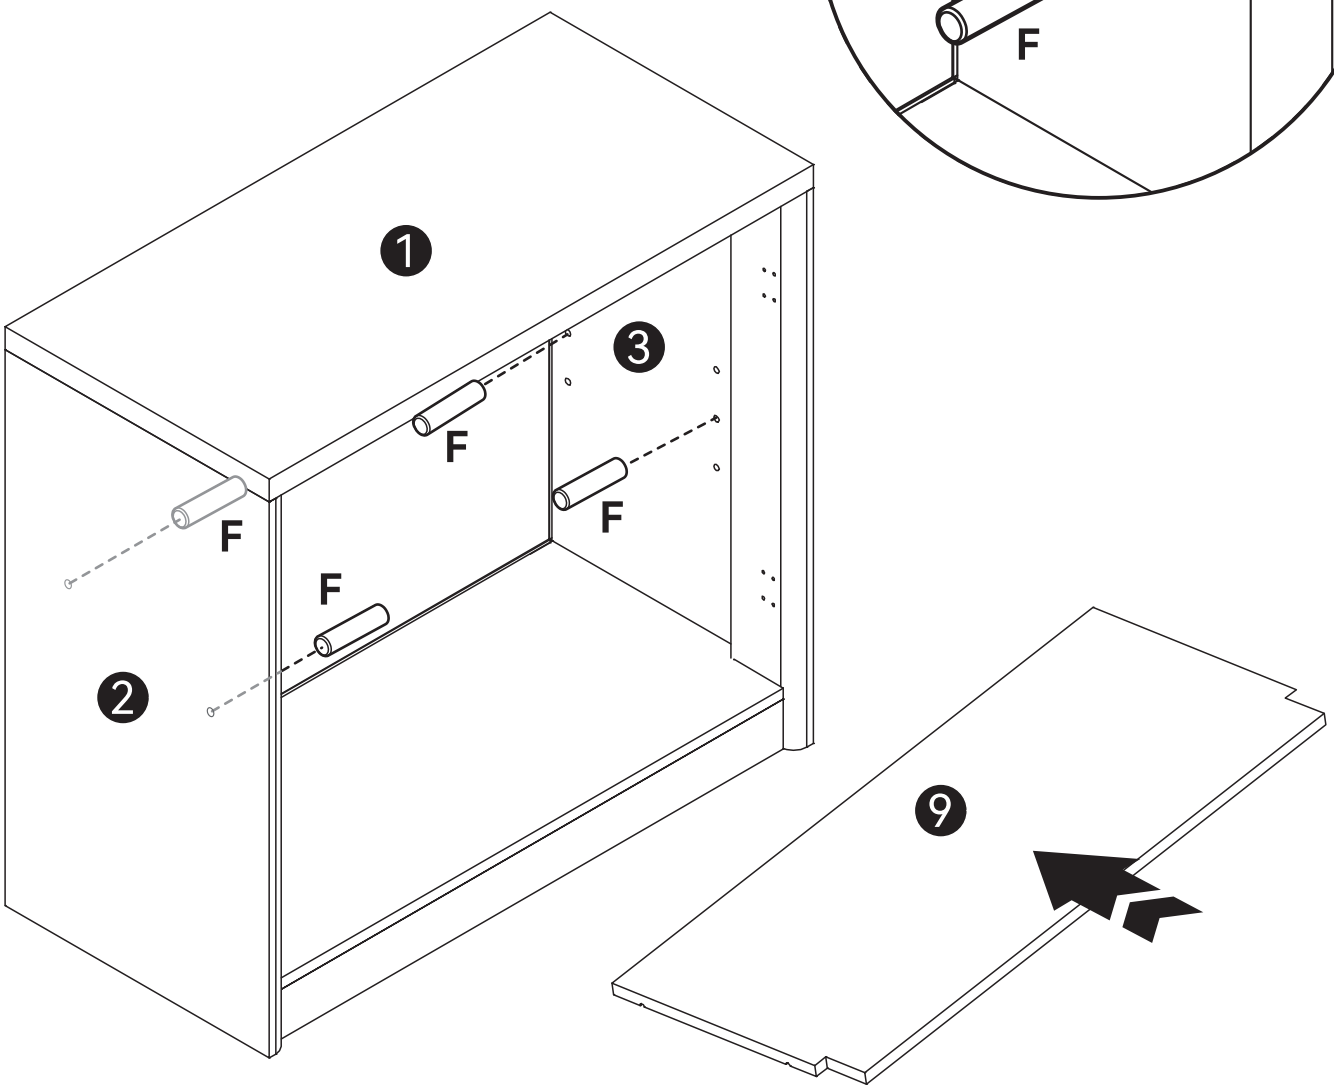

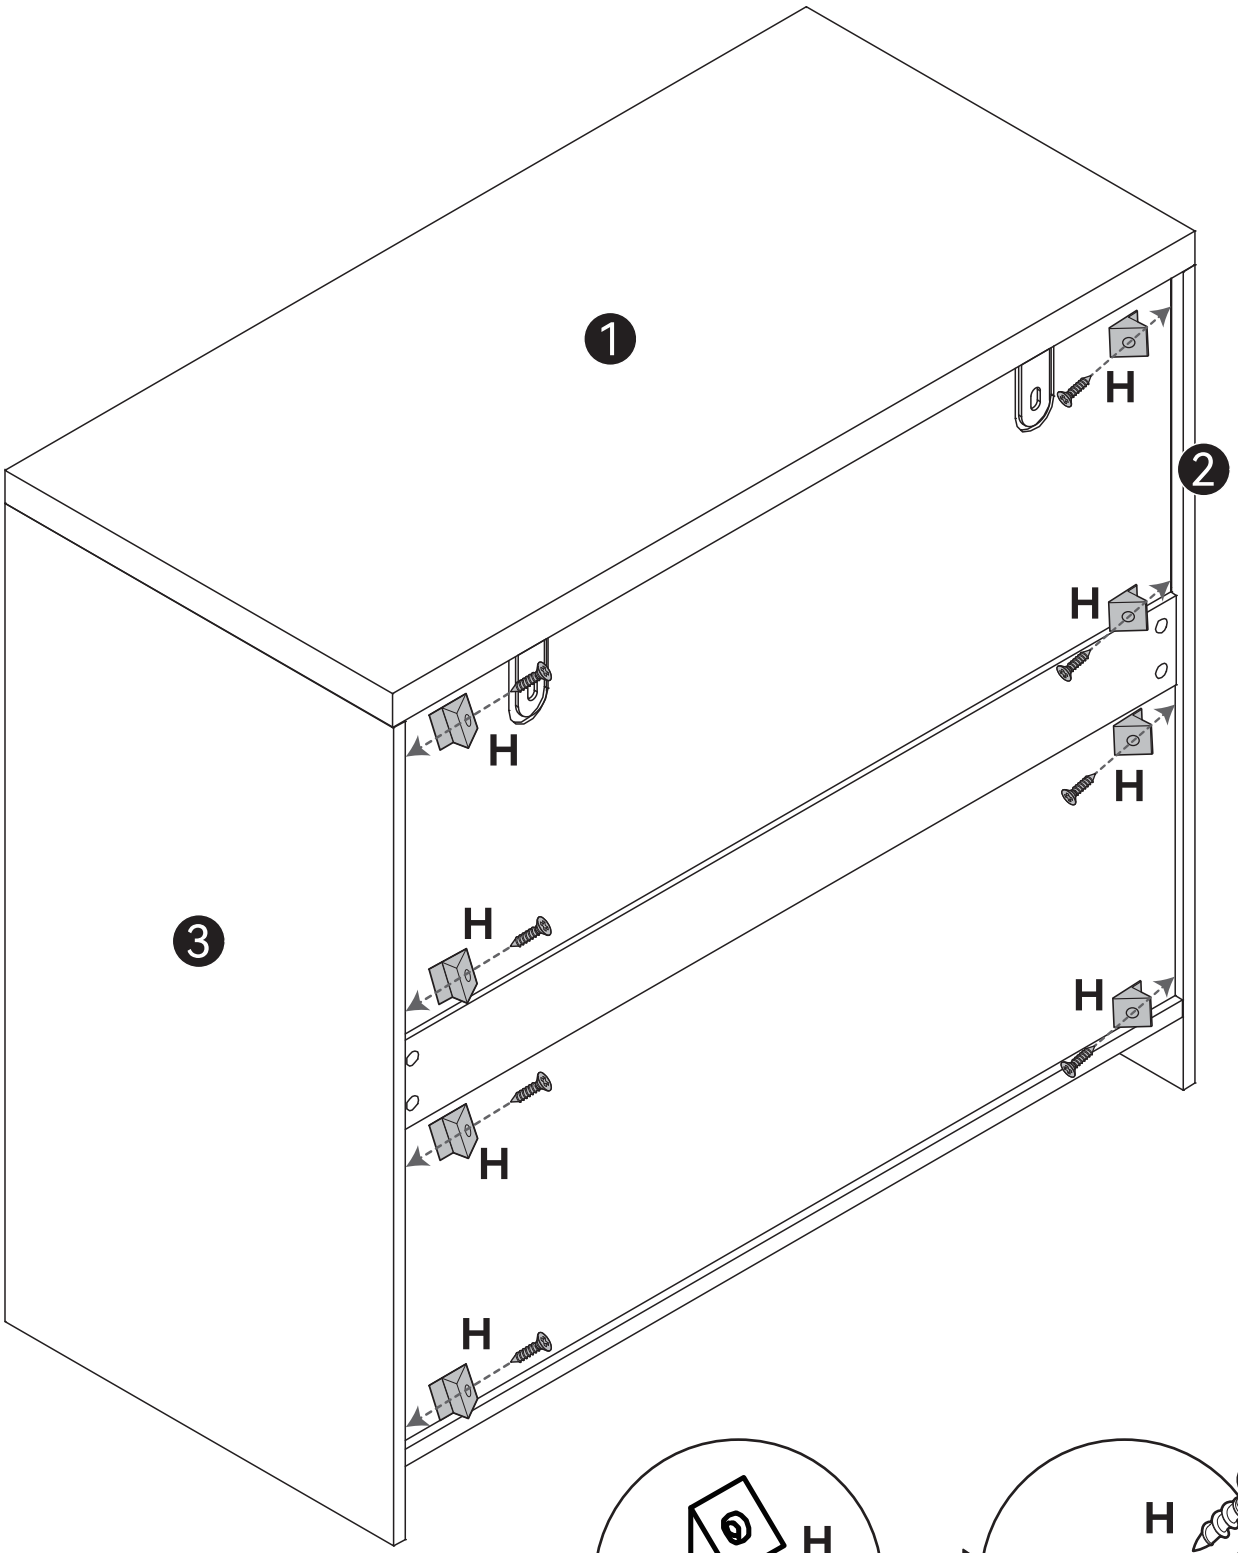



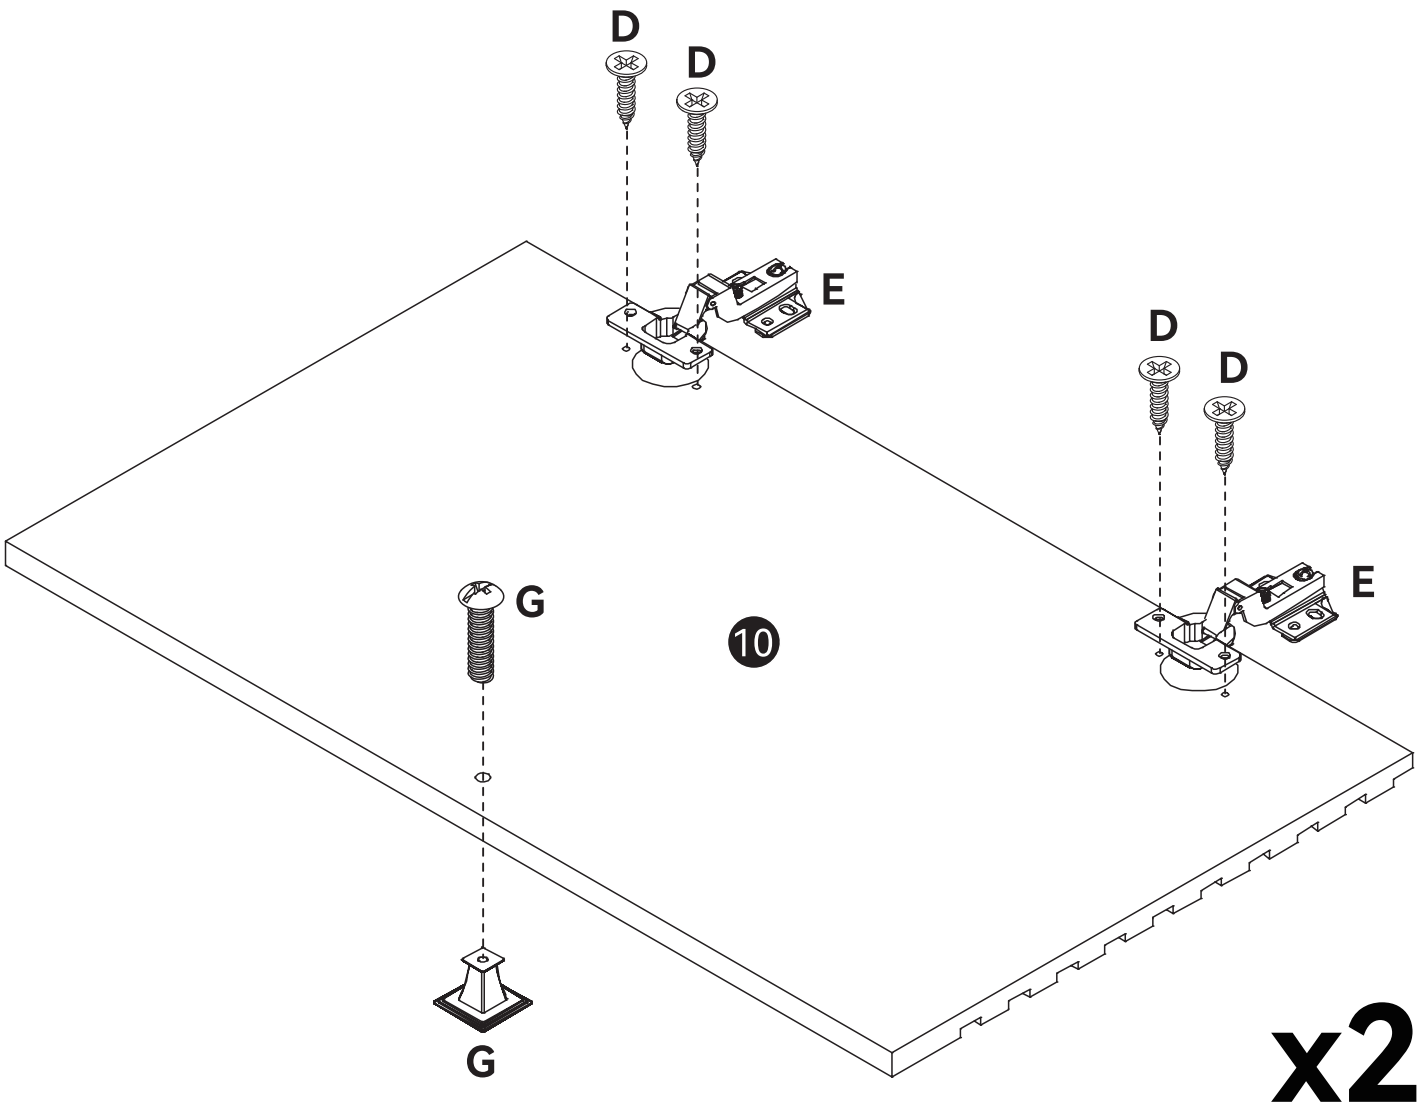


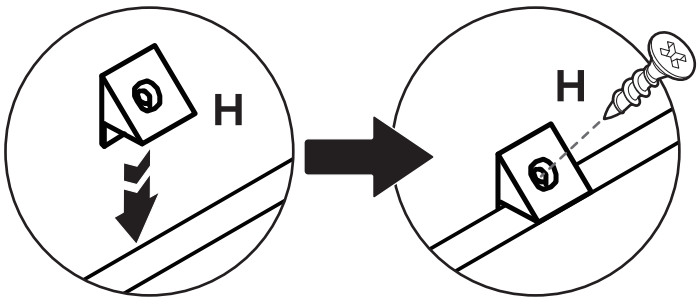

Insert back panel clip into gap.

Secure with screw.
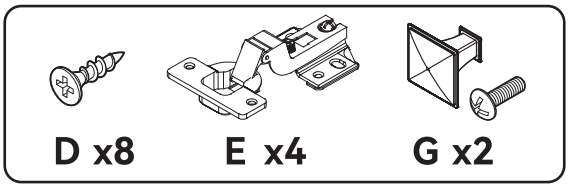
# 12








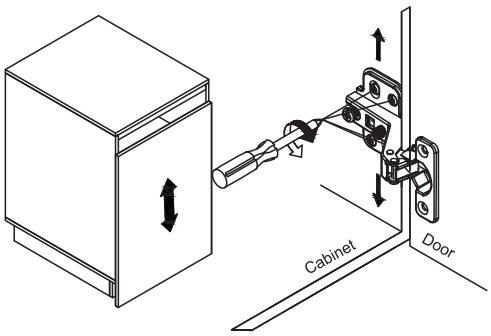

x2

# 13

D x16

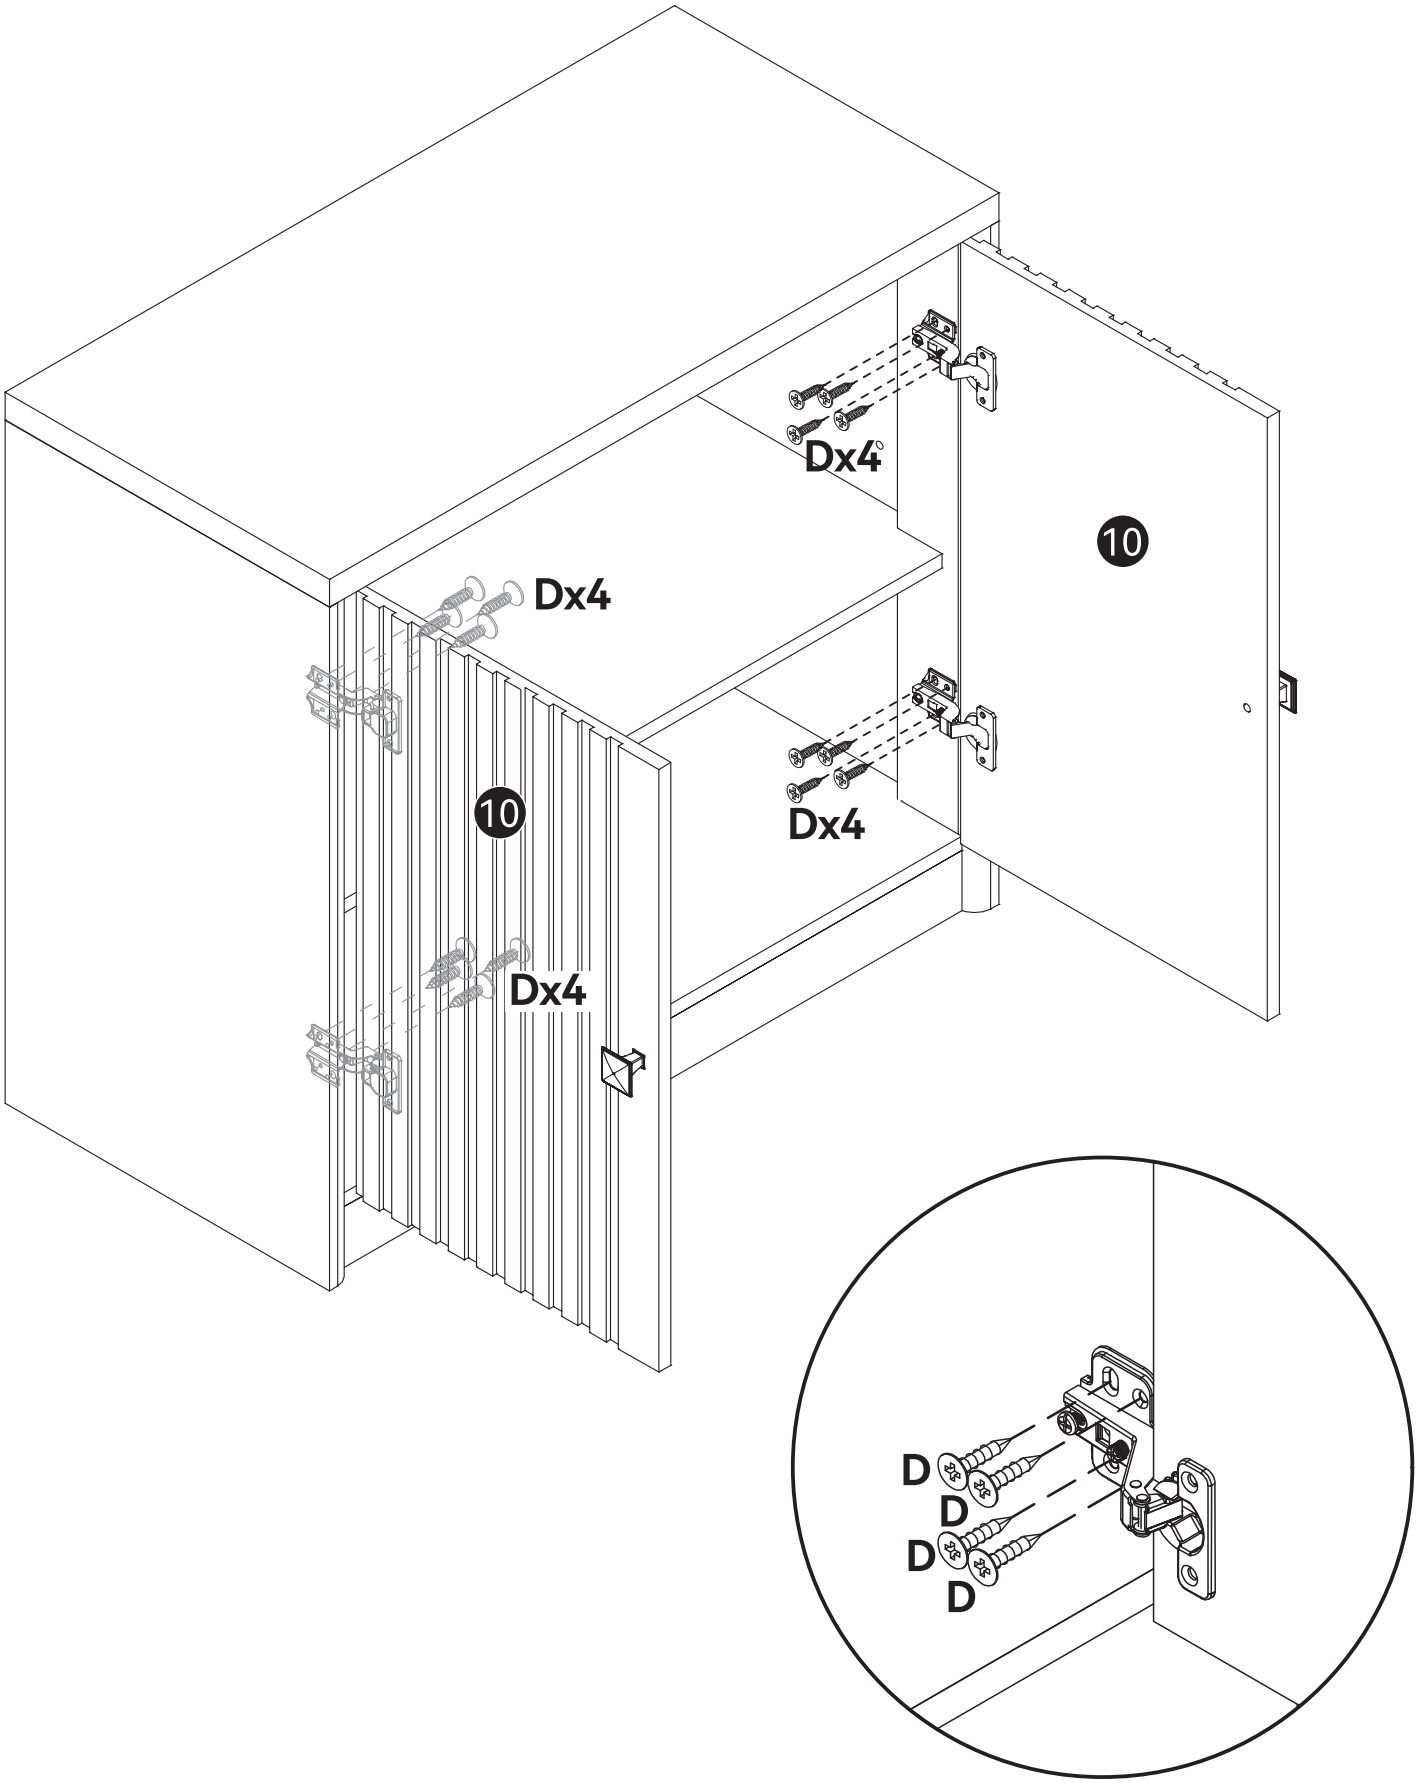


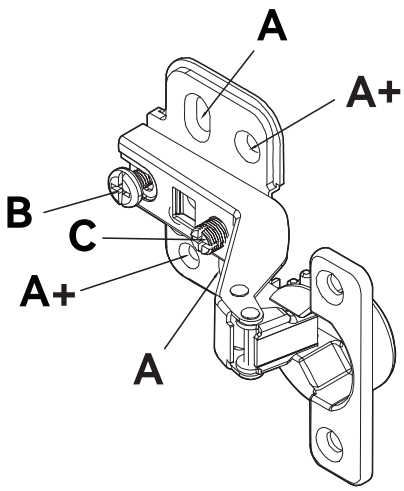



**Up and Down Adjustment**

1. Remove the 2 screws "A+" on the hinge.
2. Loosen the 2 screws "A" on the hinge. Adjust up or down.
3. Tighten the screws "A" and reinstall "A+".

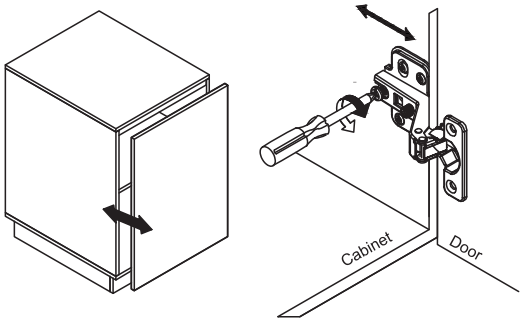


**In and Out Adjustment**


1. Loosen the screw "B" and adjust the depth of the door.
2. If the depth of the door cannot be adjusted, simply loosen the screw "C" slightly to adjust the door forward and backward.
3. Tighten the screw "B" to secure in place.

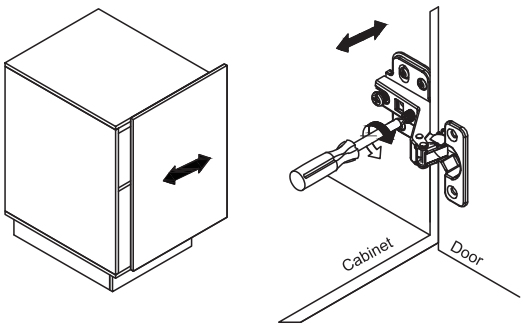



**Side-to-Side Adjustment**


1. Loosen the screw "C" to align the door horizontally.
2. Tighten the screw "C" to secure in place.

# 14



I x2

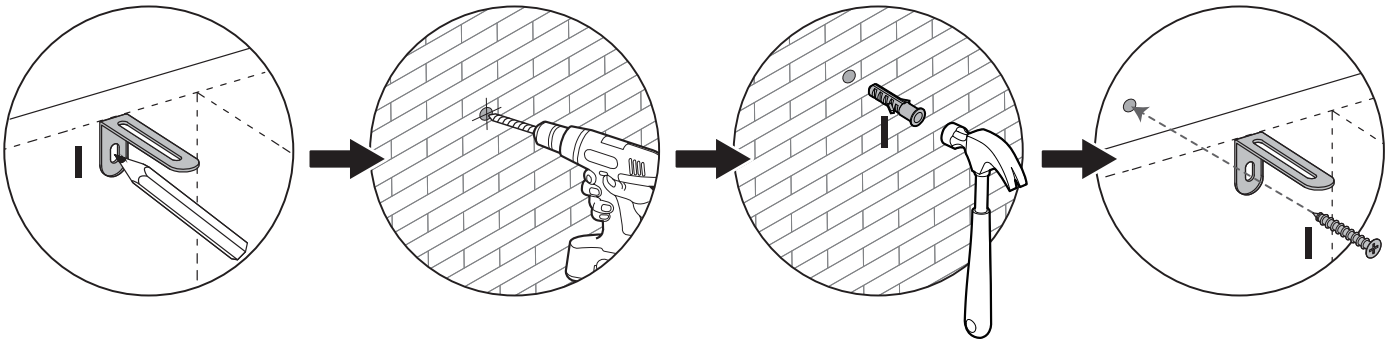

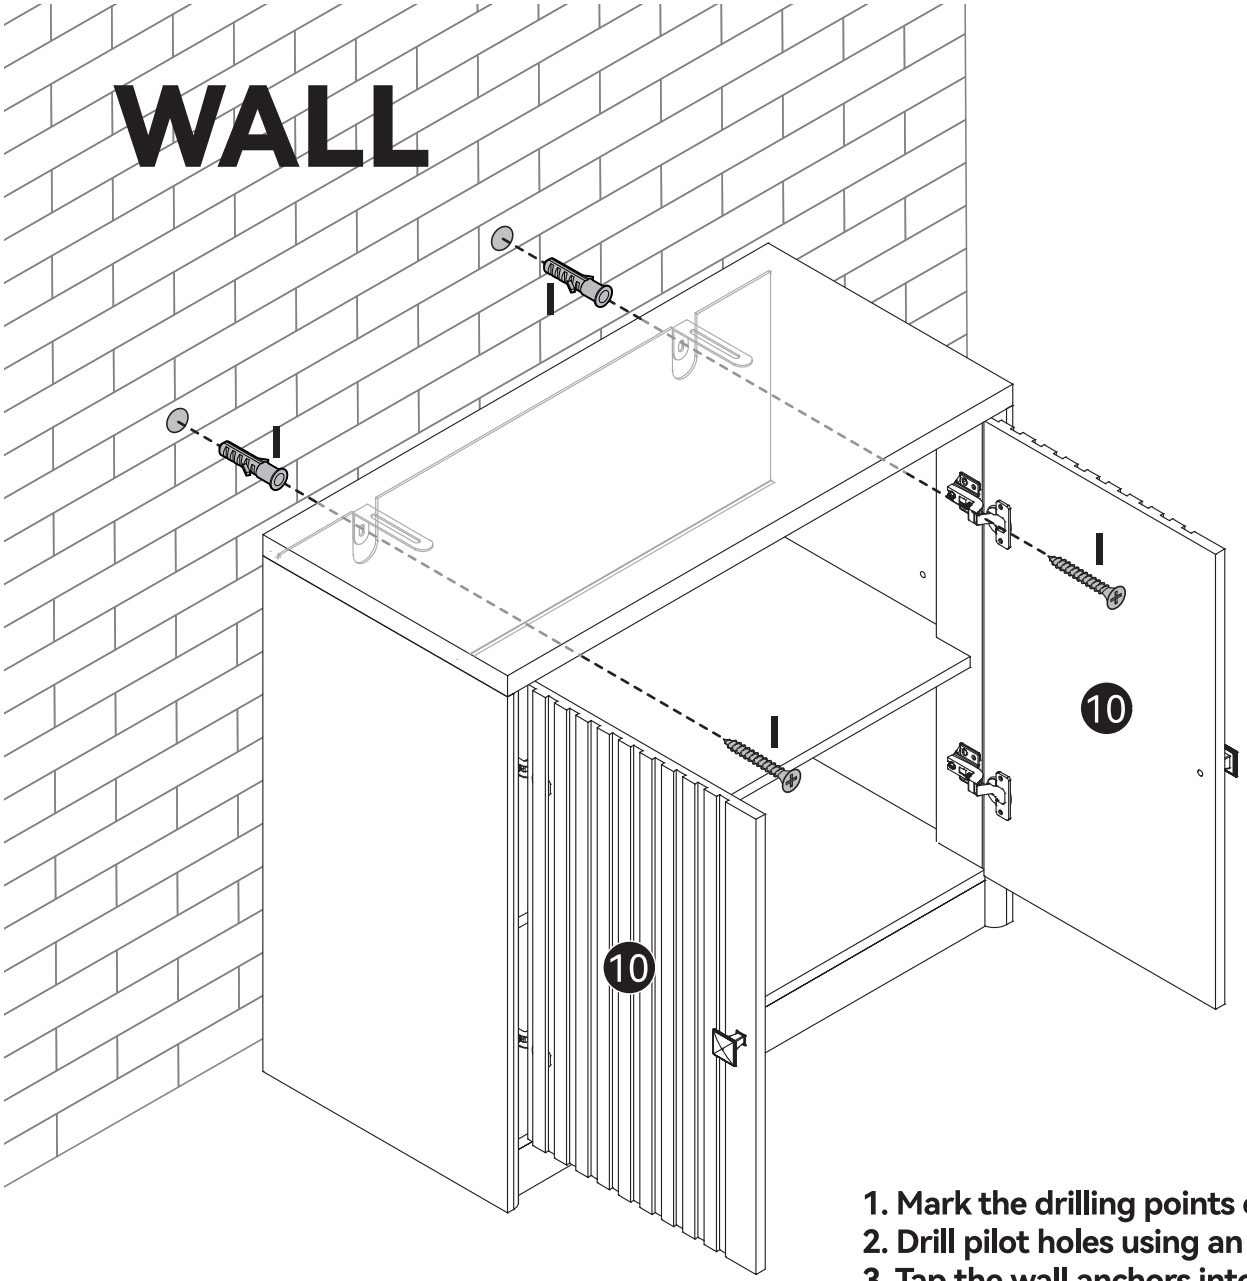


1. Mark the drilling points on the wall.
2. Drill pilot holes using an electric drill.
3. Tap the wall anchors into the holes.
4. Secure the restraint to the wall with screws I.

# 15

