


# Assembly instruction

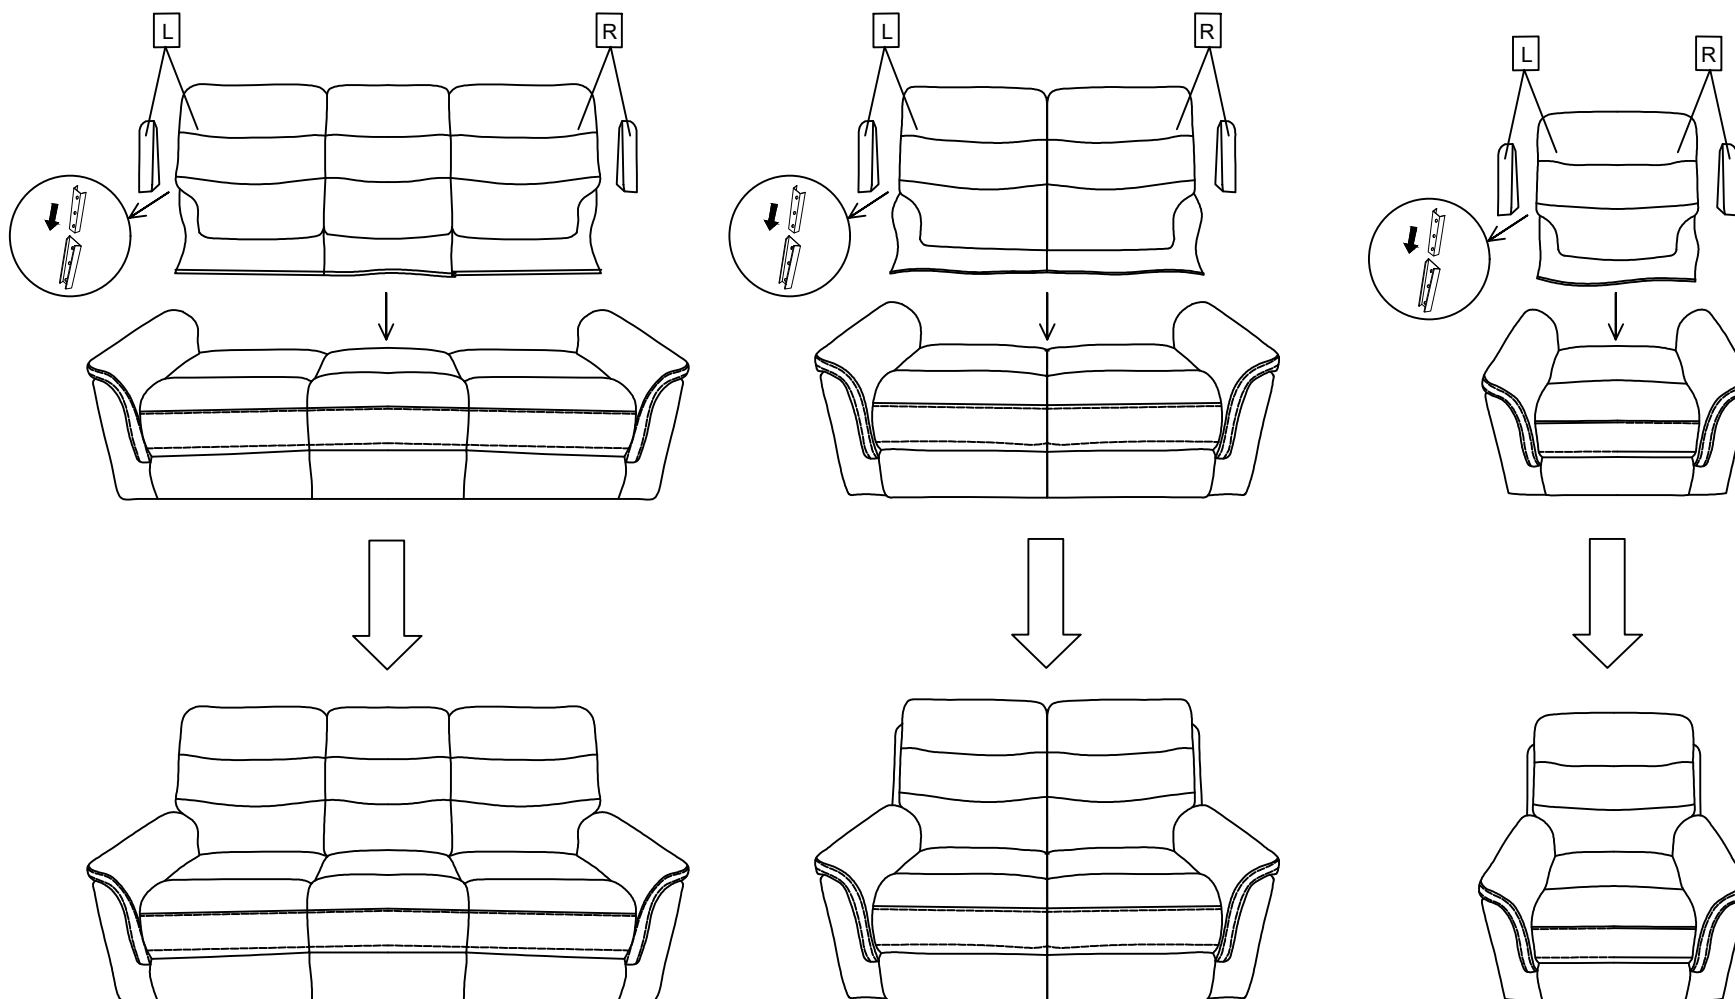

**STEP 1.** Hold up the Backrests, while standing behind, insert the small metal arms on the under-insides of the Backrest into the prefabricated slide lock gadget on the Seat Base, push the Backrest downwards until the Backrest is fully slotted and locked into position.