


ASSEMBLY INSTRUCTION

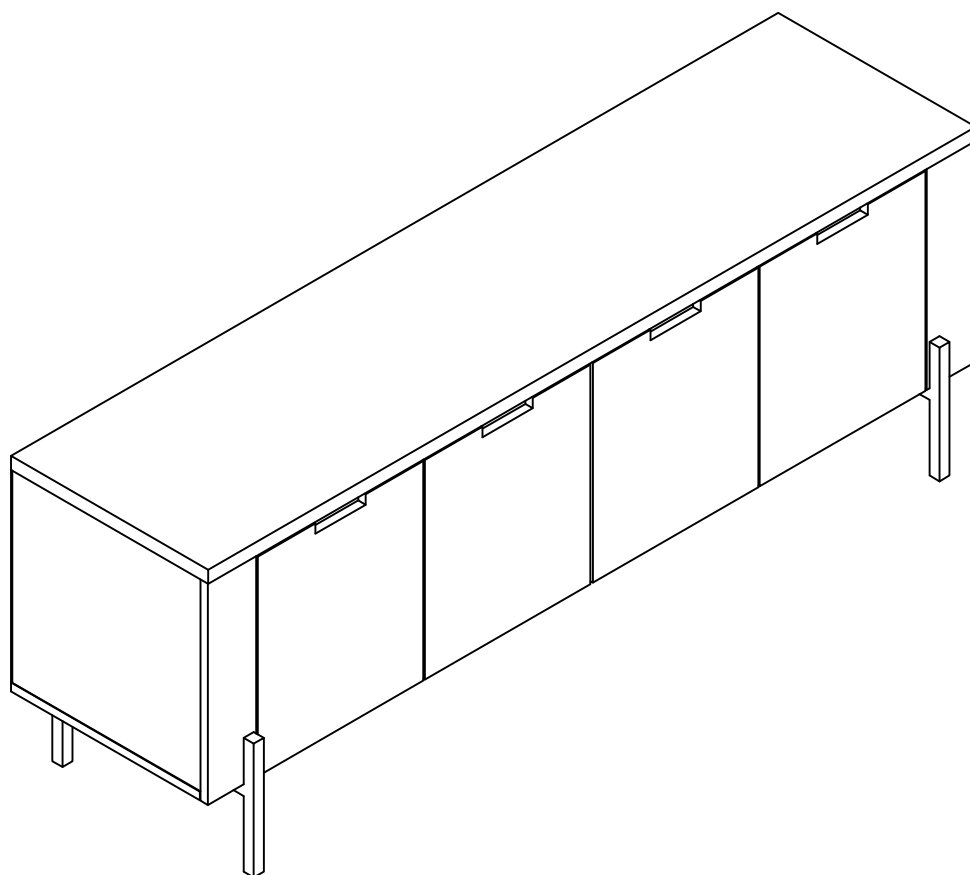


VERSION:20170818

ASSEMBLY INSTRUCTION

PLEASE READ BEFORE ASSEMBLING!


Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

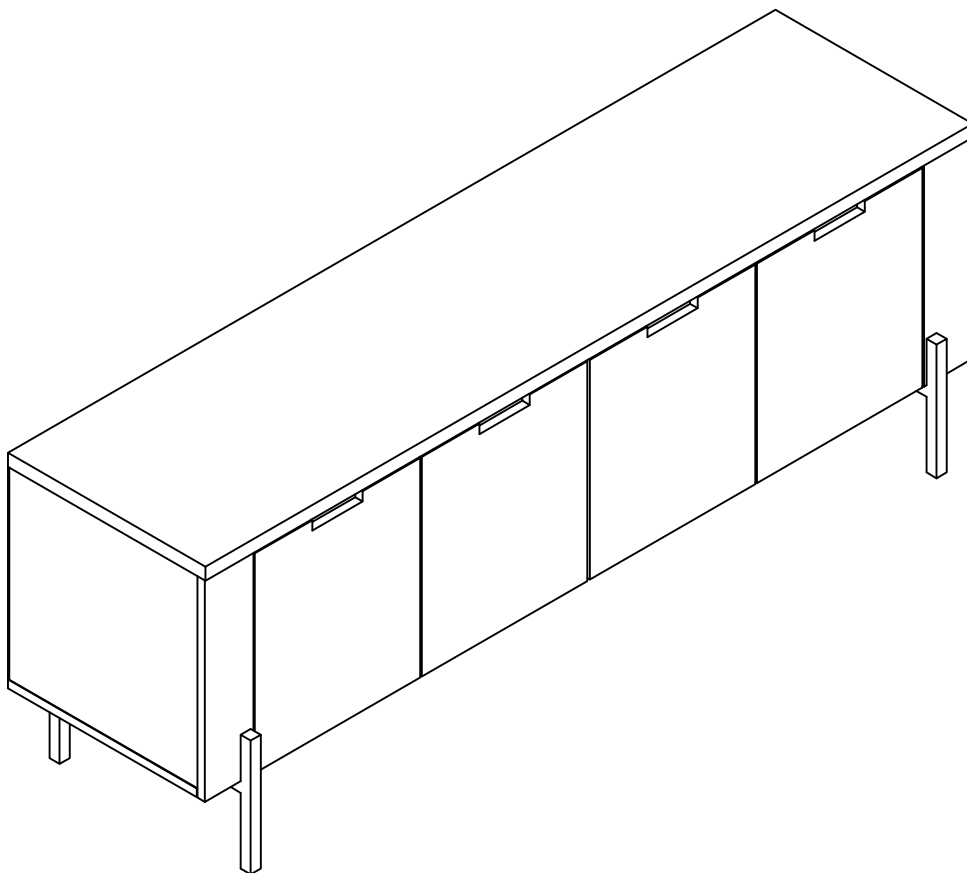





VERSION:20170818

PARTS IDENTIFICATION

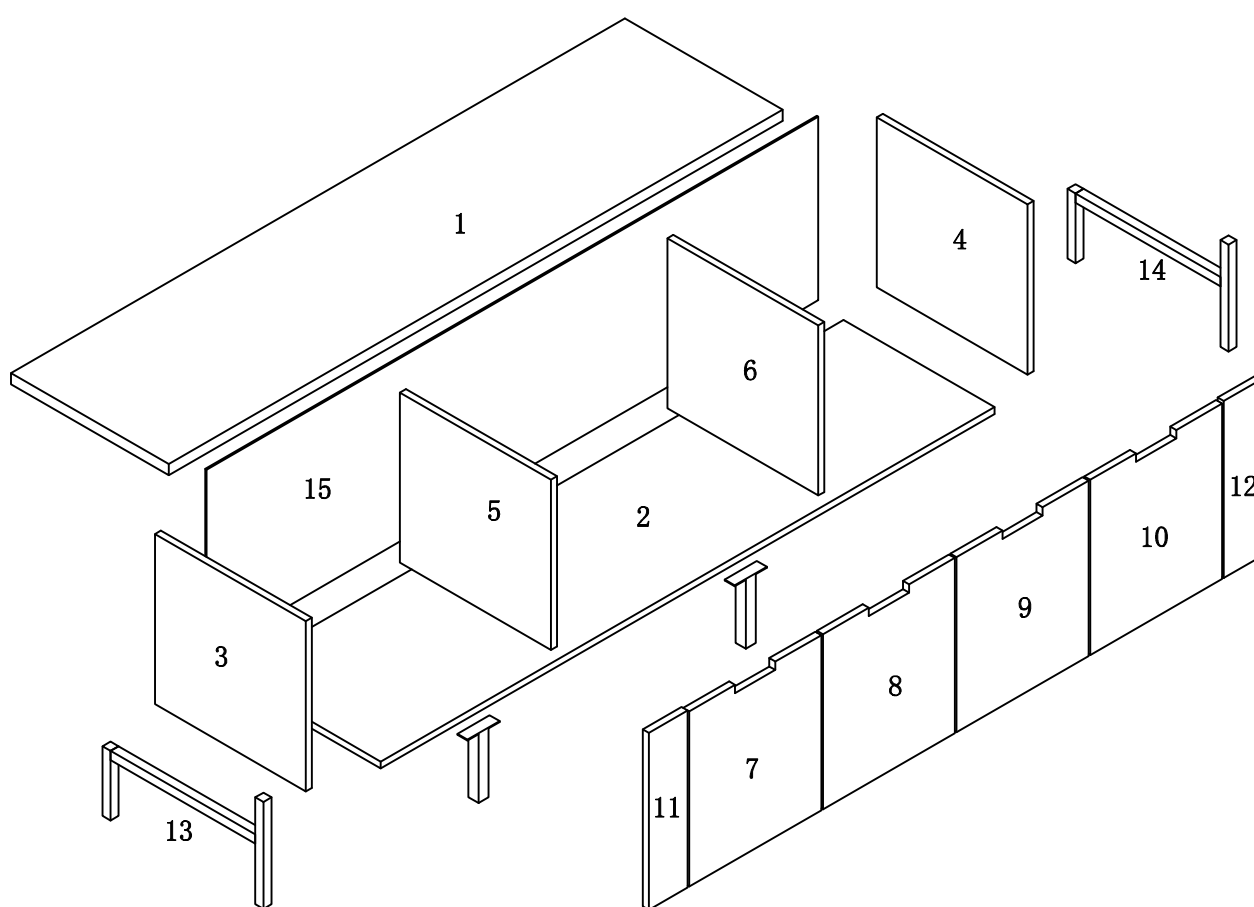


(1)	1pc	(8)	1pc	(15)	1pc
(2)	1pc	(9)	1pc		
(3)	1pc	(10)	1pc		
(4)	1pc	(11)	1pc		
(5)	1pc	(12)	1pc		
(6)	1pc	(13)	1pc		
(7)	1pc	(14)	1pc		

HARDWARE IDENTIFICATION

A		L29	14PCS
B		$\Phi 15$	14PCS
C		$\Phi 8 \times 25$	10PCS
D		$\Phi 4 \times 16$	48PCS
E		$\Phi 6 \times 30$	6PCS
F			8PCS
G		$\Phi 4 \times 40$	8PCS
H			22PCS
I		$\Phi 20$ WH3	8PCS
J		$\varnothing 6 \times 12$	4PCS
K		H150	2PCS
L		$197 \times 5 \times 1$	1PC
M		$\varnothing 4 \times 25$	1PC
N		$\varnothing 5 \times 40$	1PC
O		$\varnothing 8 \times 40$	1PC
P		$12 \times 12 \times 1$	2PCS
Q		M4	1PC

HARDWARE IDENTIFICATION

HOW TO




Cam Bolt




Cam Lock

	1	2	3	4
	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.

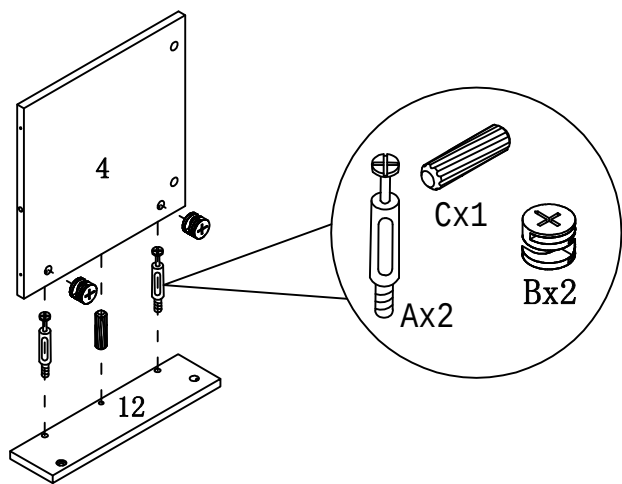


STEP1

STEP2

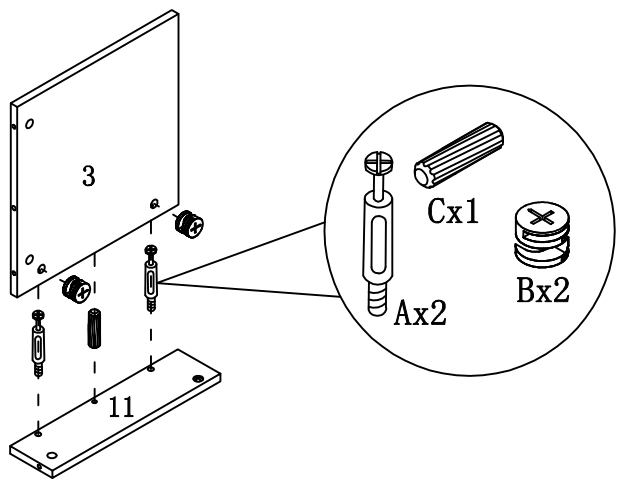


HARDWARE IDENTIFICATION

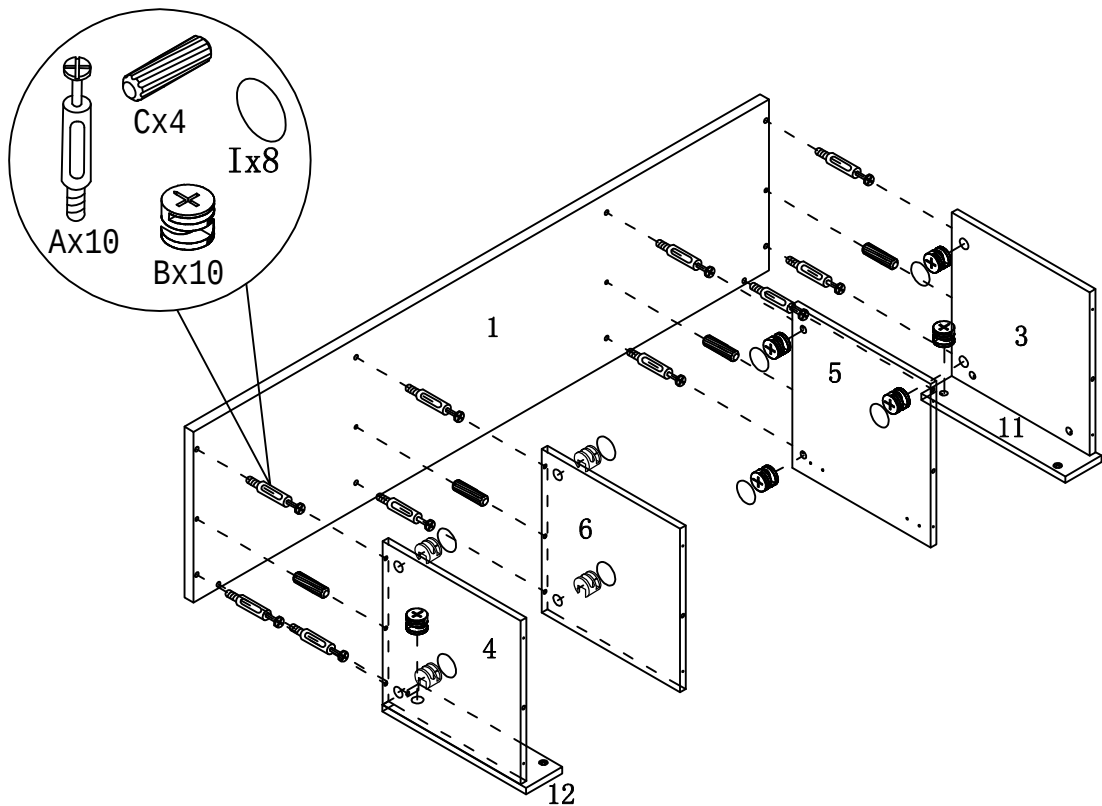


STEP3


STEP4

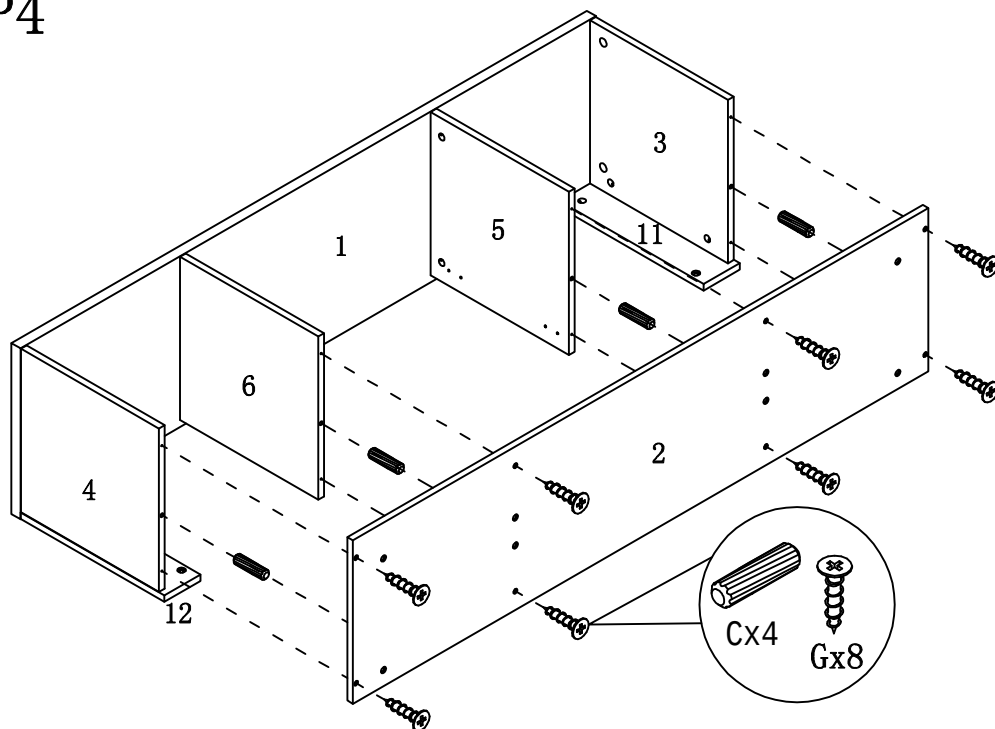


HARDWARE IDENTIFICATION

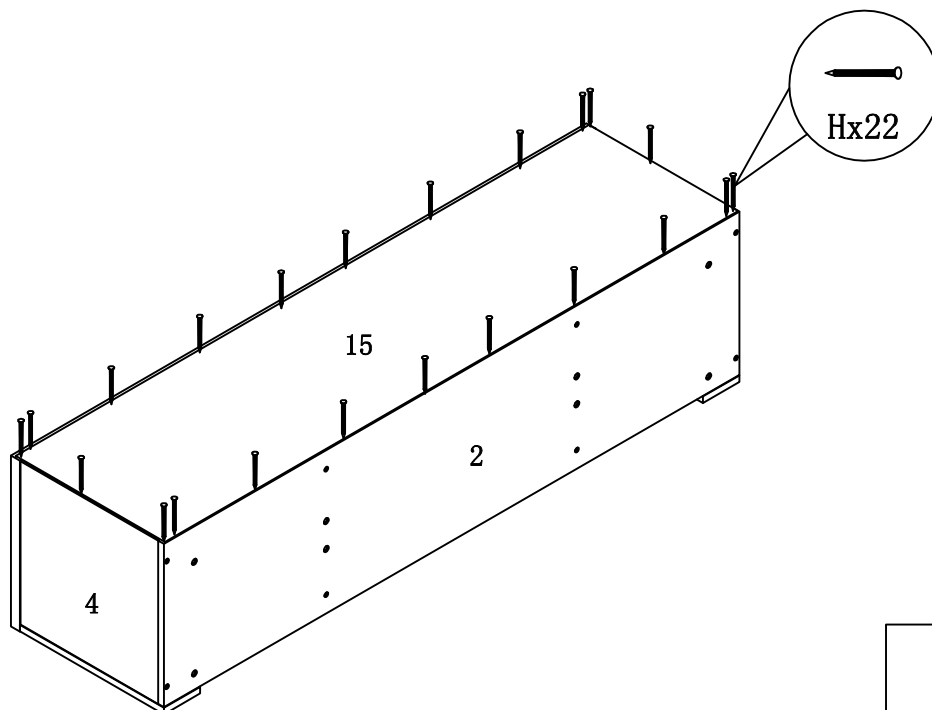


STEP5

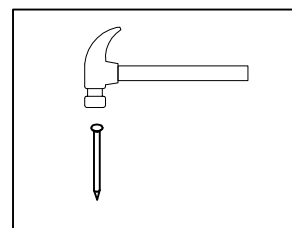

STEP6


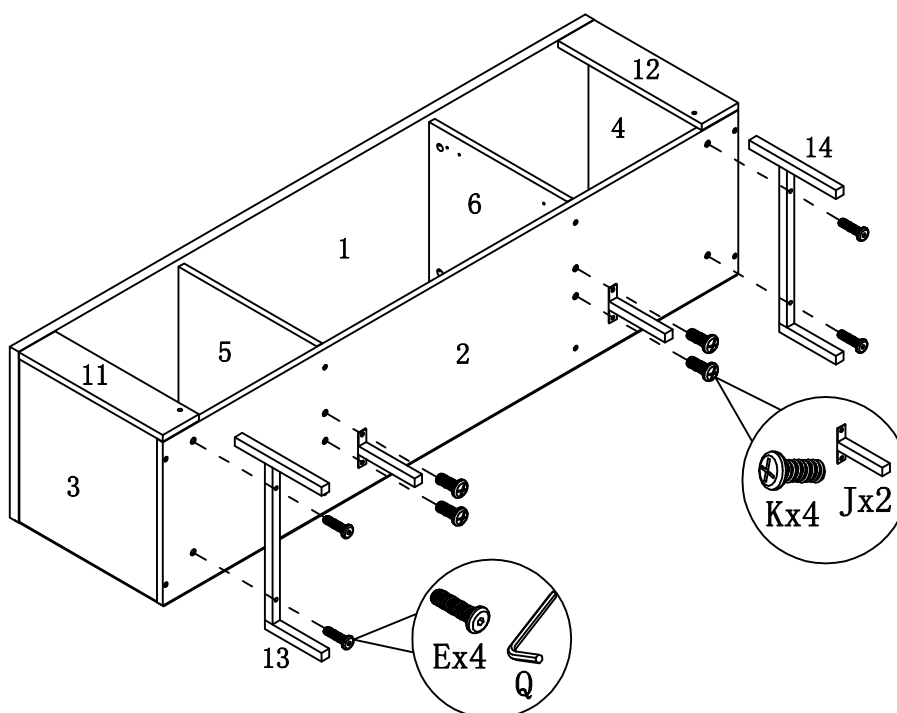


HARDWARE IDENTIFICATION

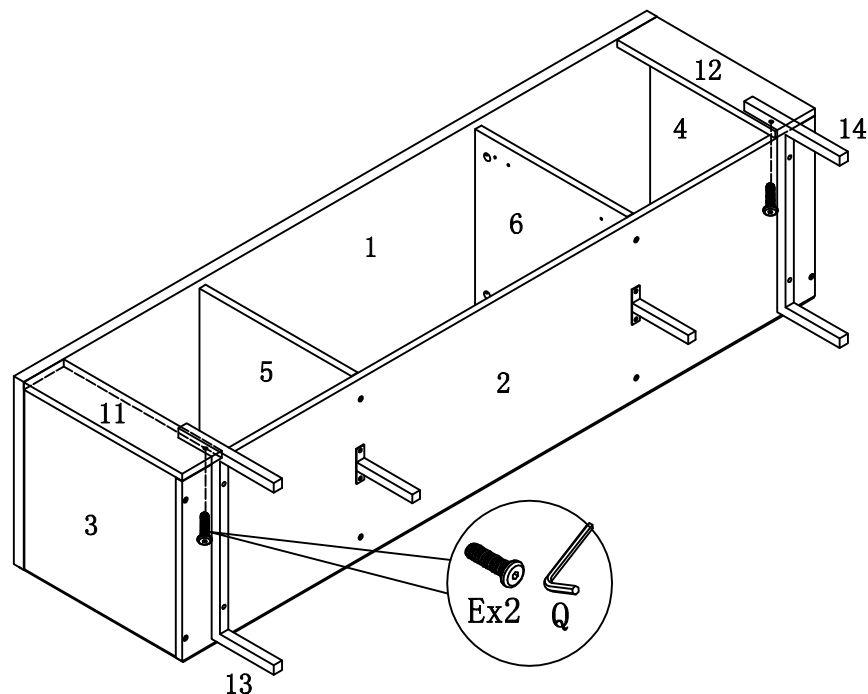


STEP7

STEP8

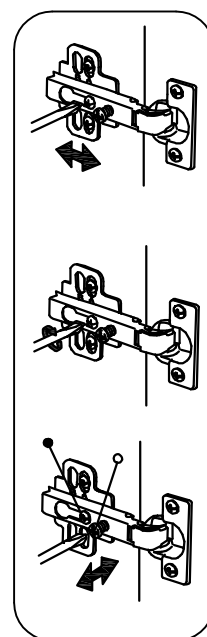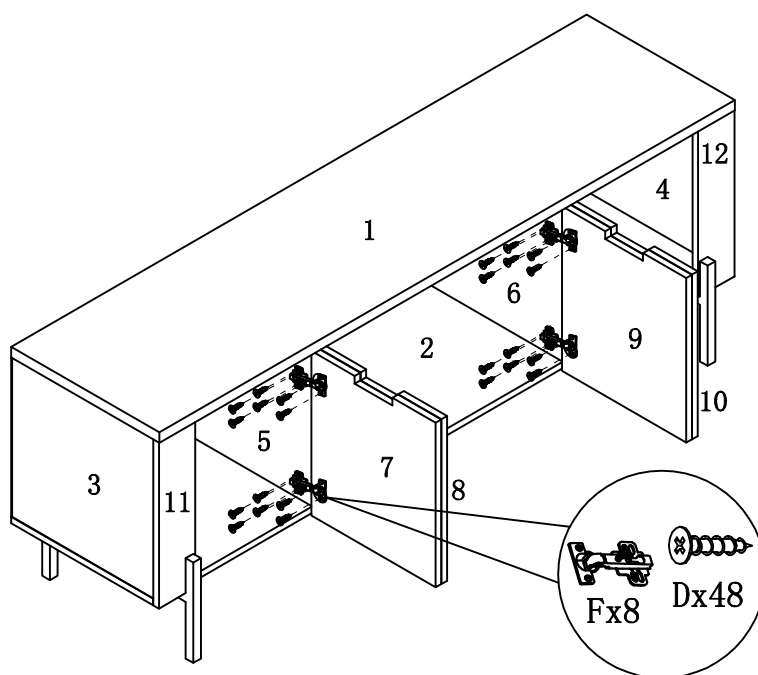


ANTI-TIPPING STRAP INSTRUCTION


HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC




STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDED) :

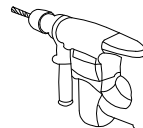


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

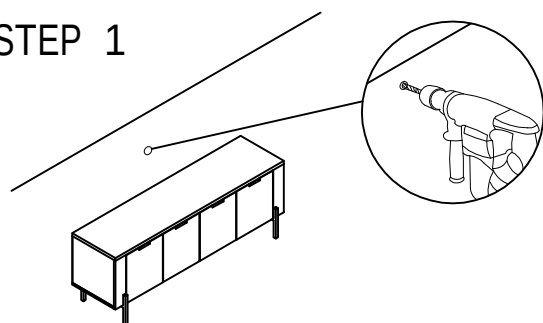


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

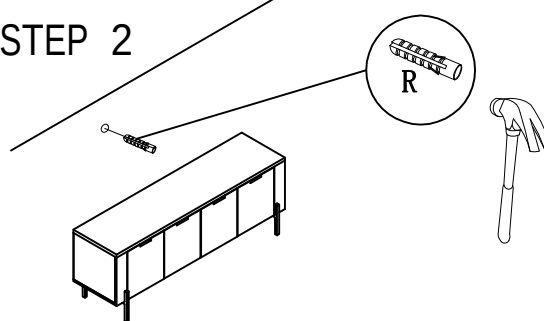


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

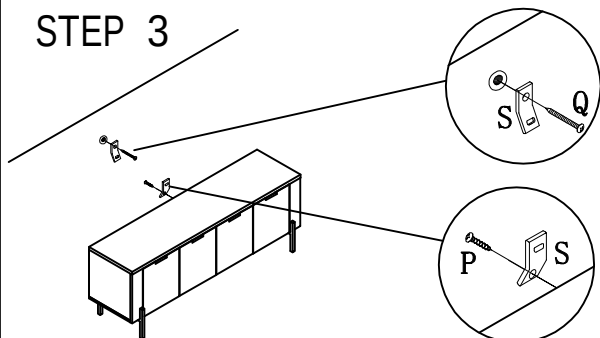

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

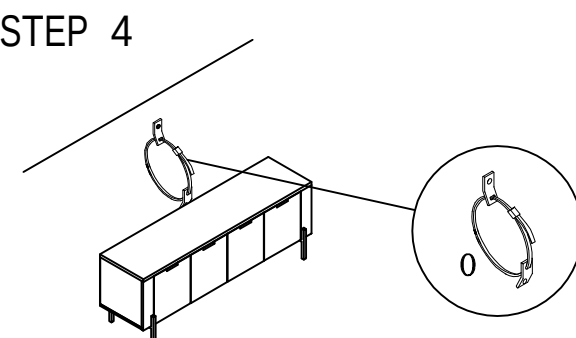

1. Insert strap thru bracket attached to wall. then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.