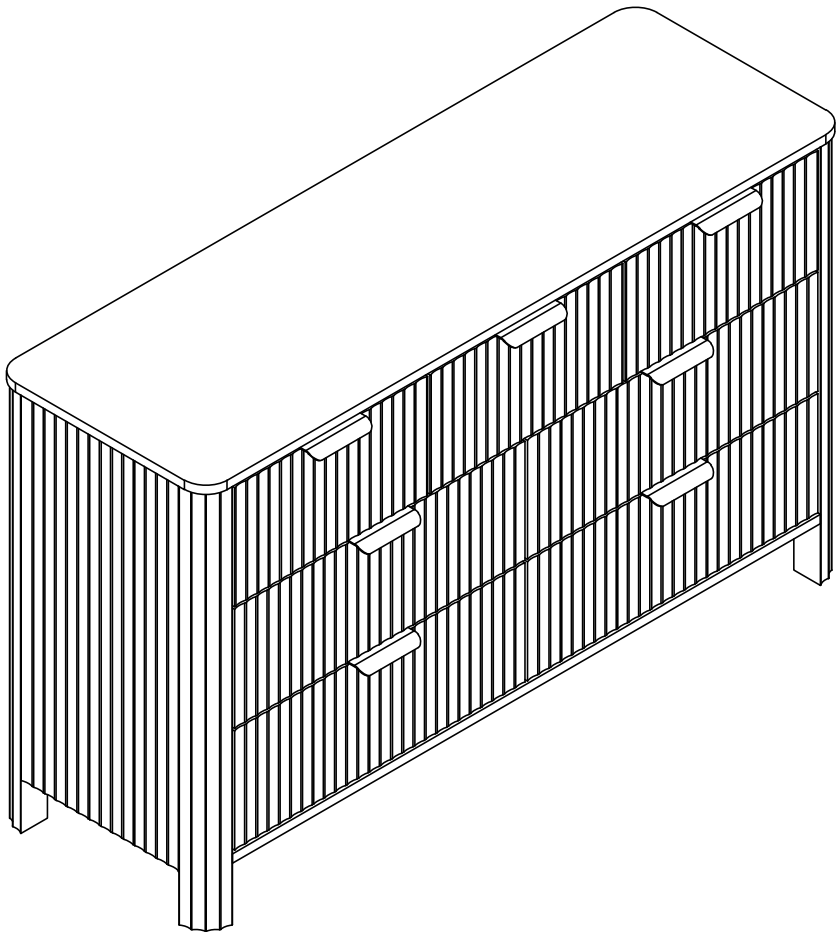
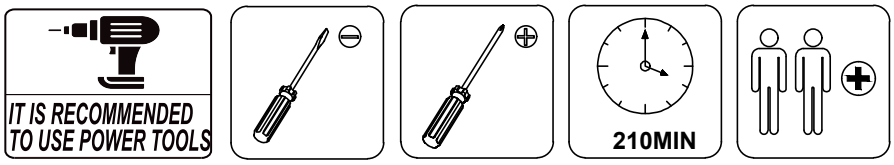
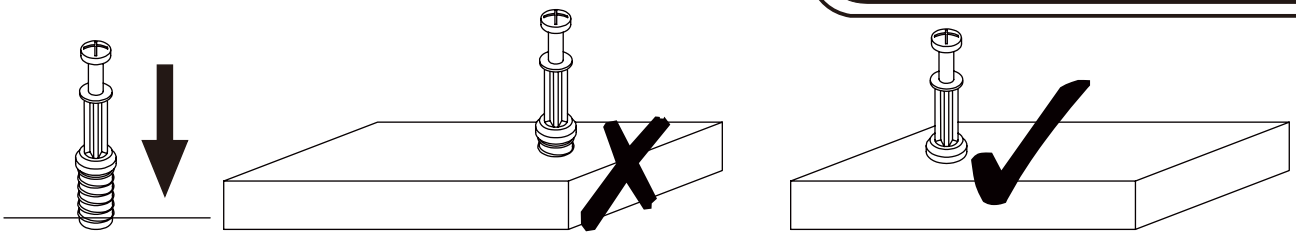
HLG253

Version:1.0

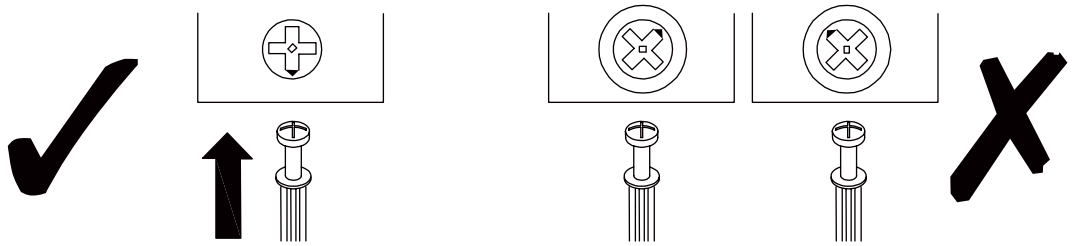




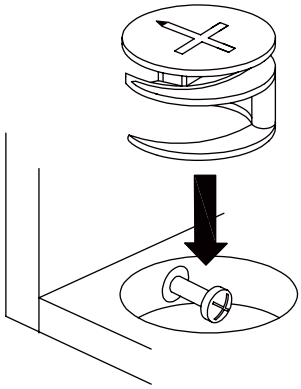
***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**



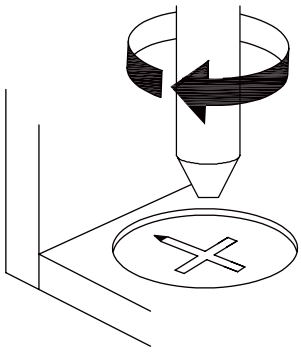
EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.



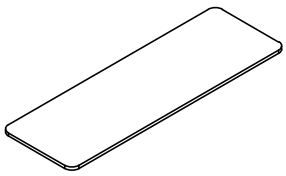
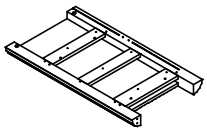
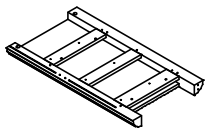
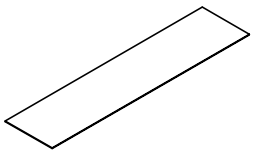
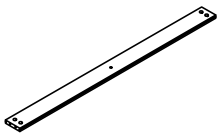
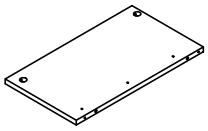
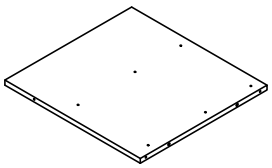
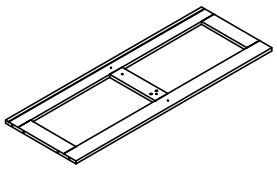
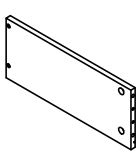
EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

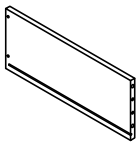
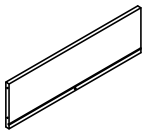
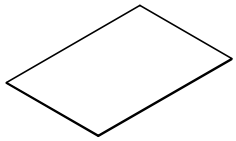

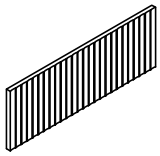
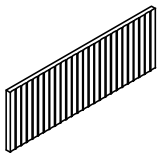
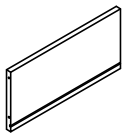






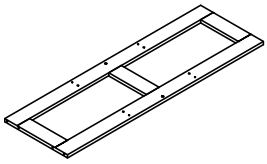
EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

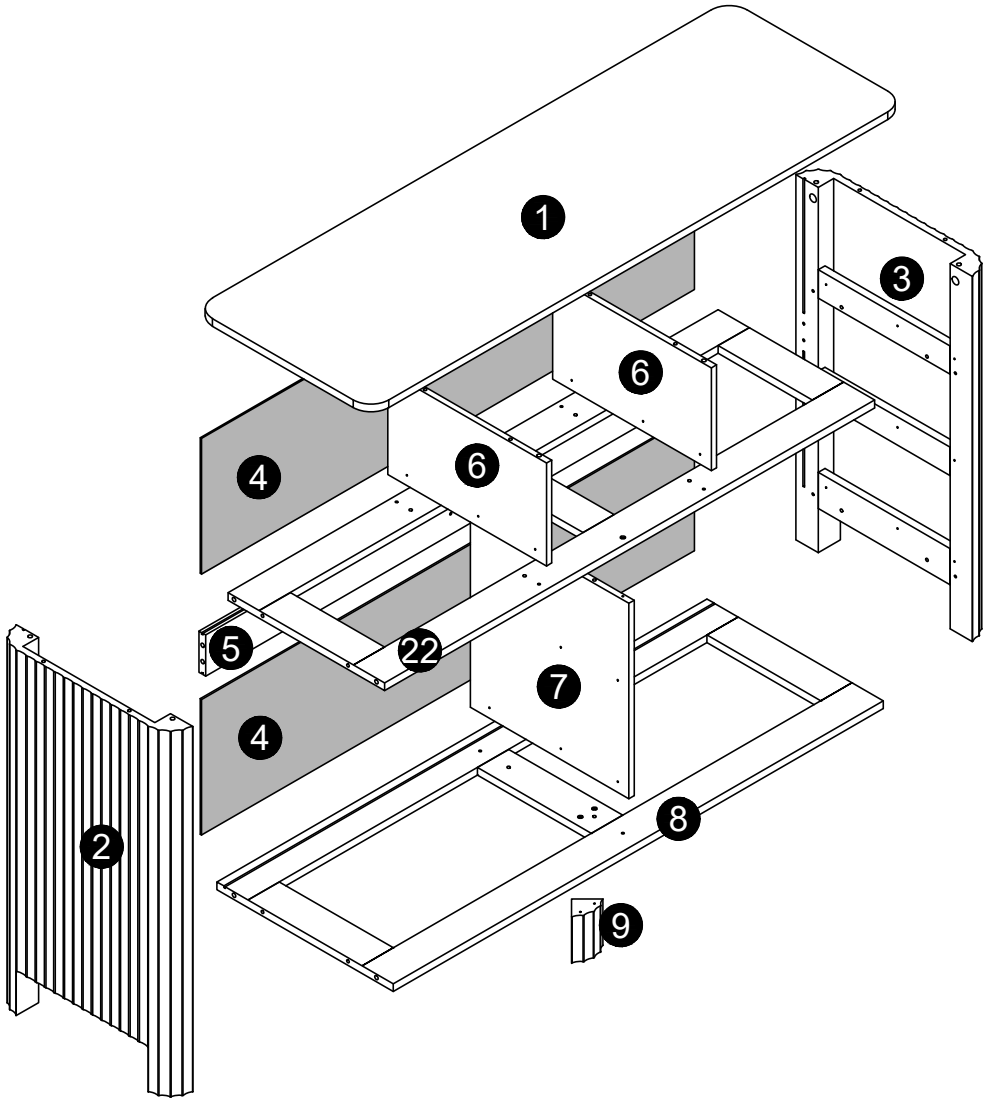


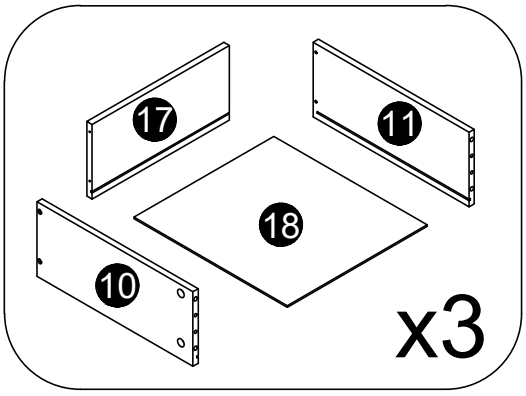
EN_ Turn cam lock clockwise to tighten.

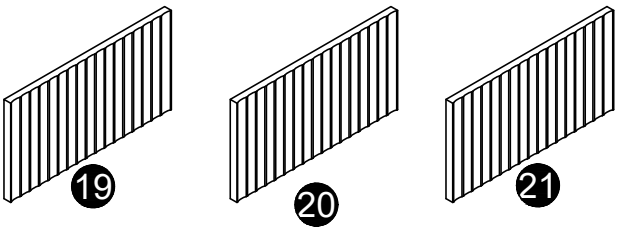
NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x2	
5		x1	
6		x2	
7		x1	
8		x1	
9		x1	
10		x7	

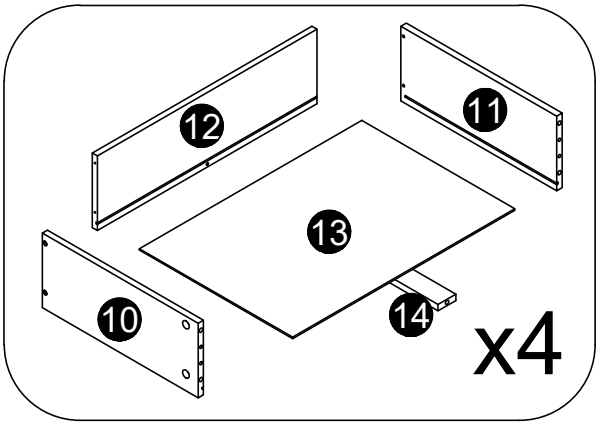
NO.	PARTS	QTY	SPARE
11		x7	
12		x4	
13		x4	
14		x4	
15		x2	
16		x2	
17		x3	
18		x3	
19		x1	
20		x1	

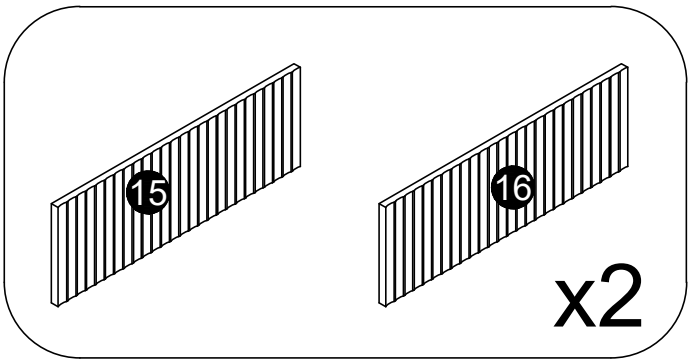
NO.	PARTS	QTY	SPARE
21		x1	
22		x1	
	 Hardware Kit	x1	


1
3
6
6
4
5
22
7
4
2
8
9


17
11
18
10
x3


19
20
21


12
11
13
10
14
x4


15
16
x2

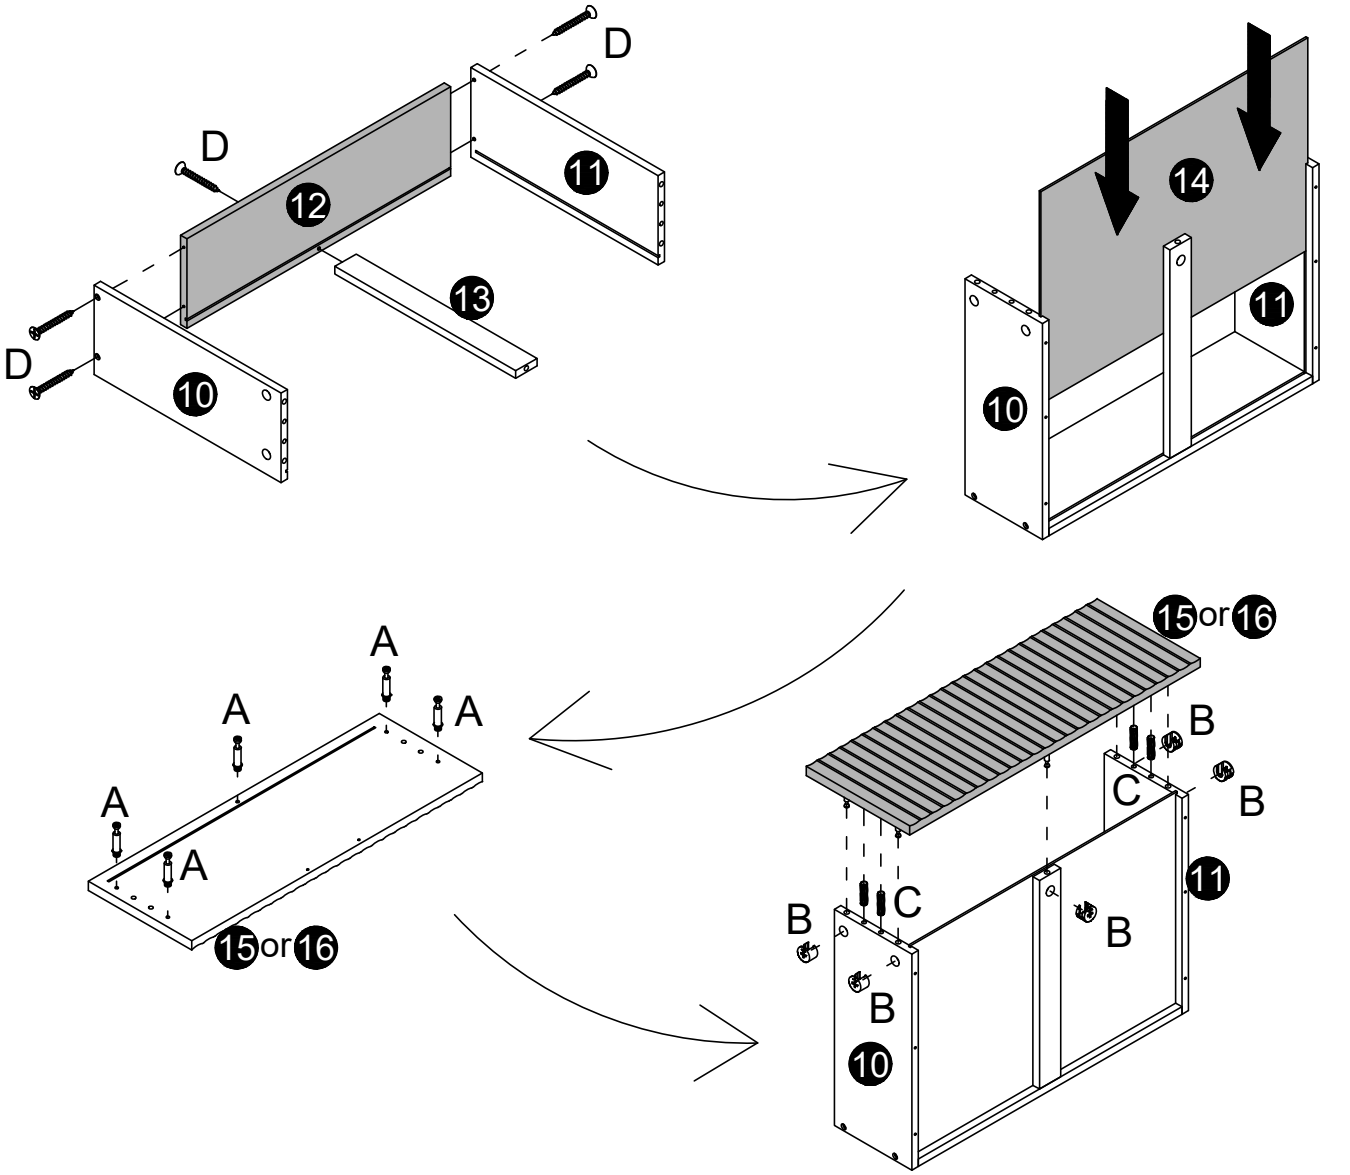
HARDWARE

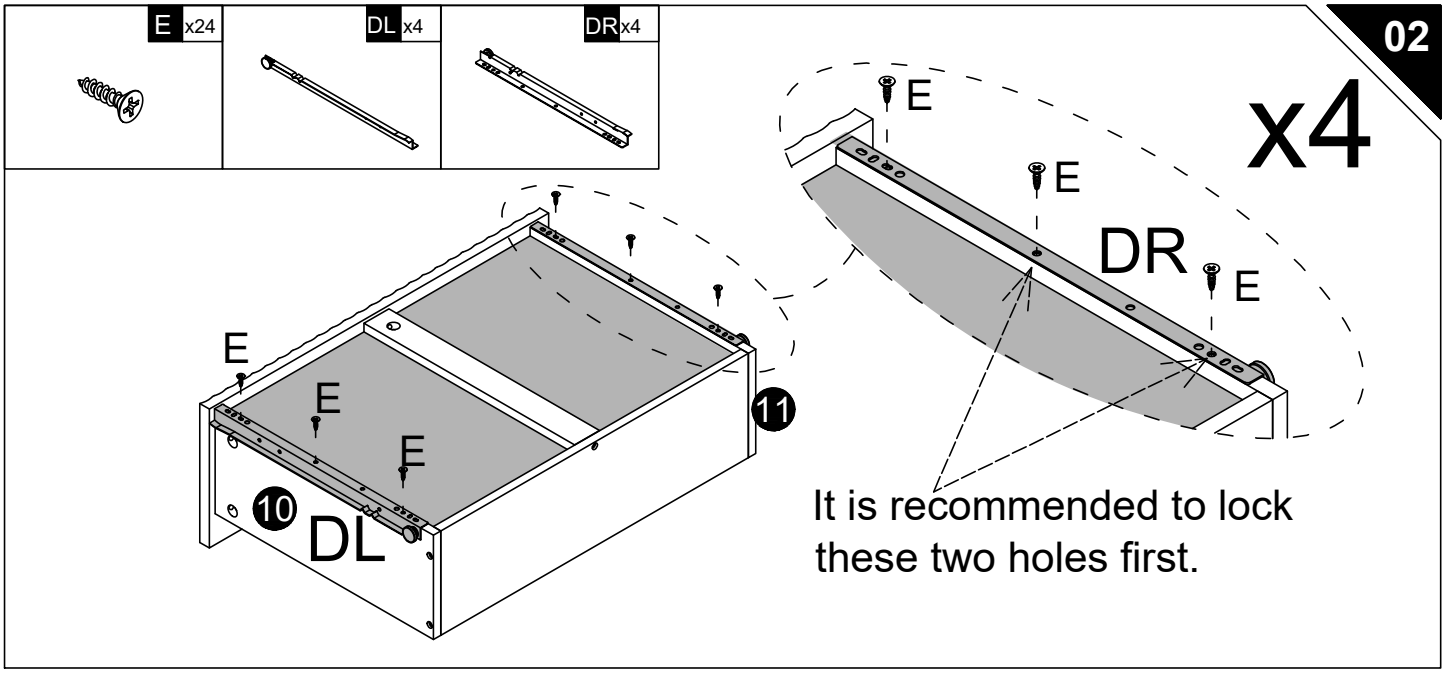
A x52 Ø6x35mm +3(spare)	B x52 Ø15x10mm +3(spare)	C x52 Ø6x30mm +5(spare)	D x43 Ø4x35mm +4(spare)	E x84 Ø3.5x12mm +8(spare)	F x7 F-1 F-2
G x2 Ø4x35mm	H x2	I x1	J x10 Ø3x16mm +1(spare) J-1 J-2	K x2 Ø4x14mm K-1 K-2	L x2
M x4	N x2 Ø6x30mm	CL x7 L330mm	CR x7 L330mm	DL x7 L330mm	DR x7 L330mm

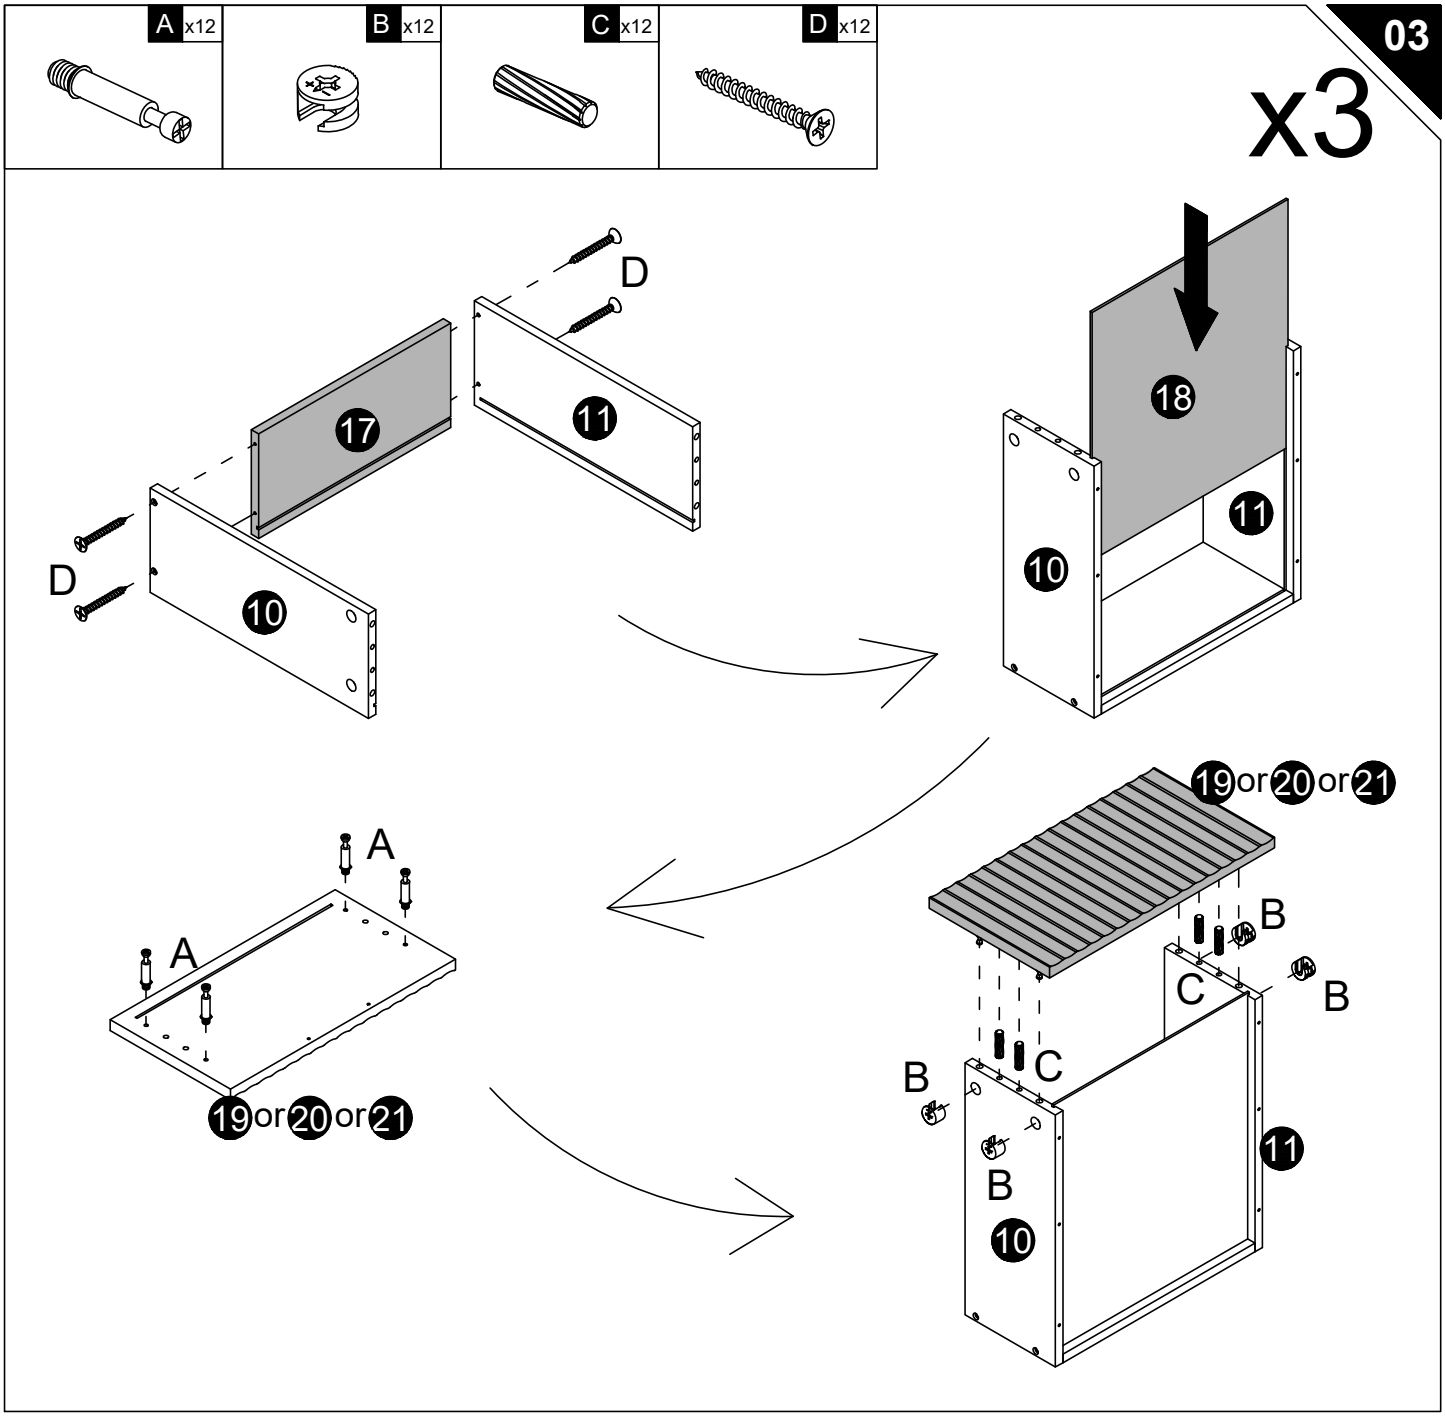
A x20	B x20	C x16	D x20

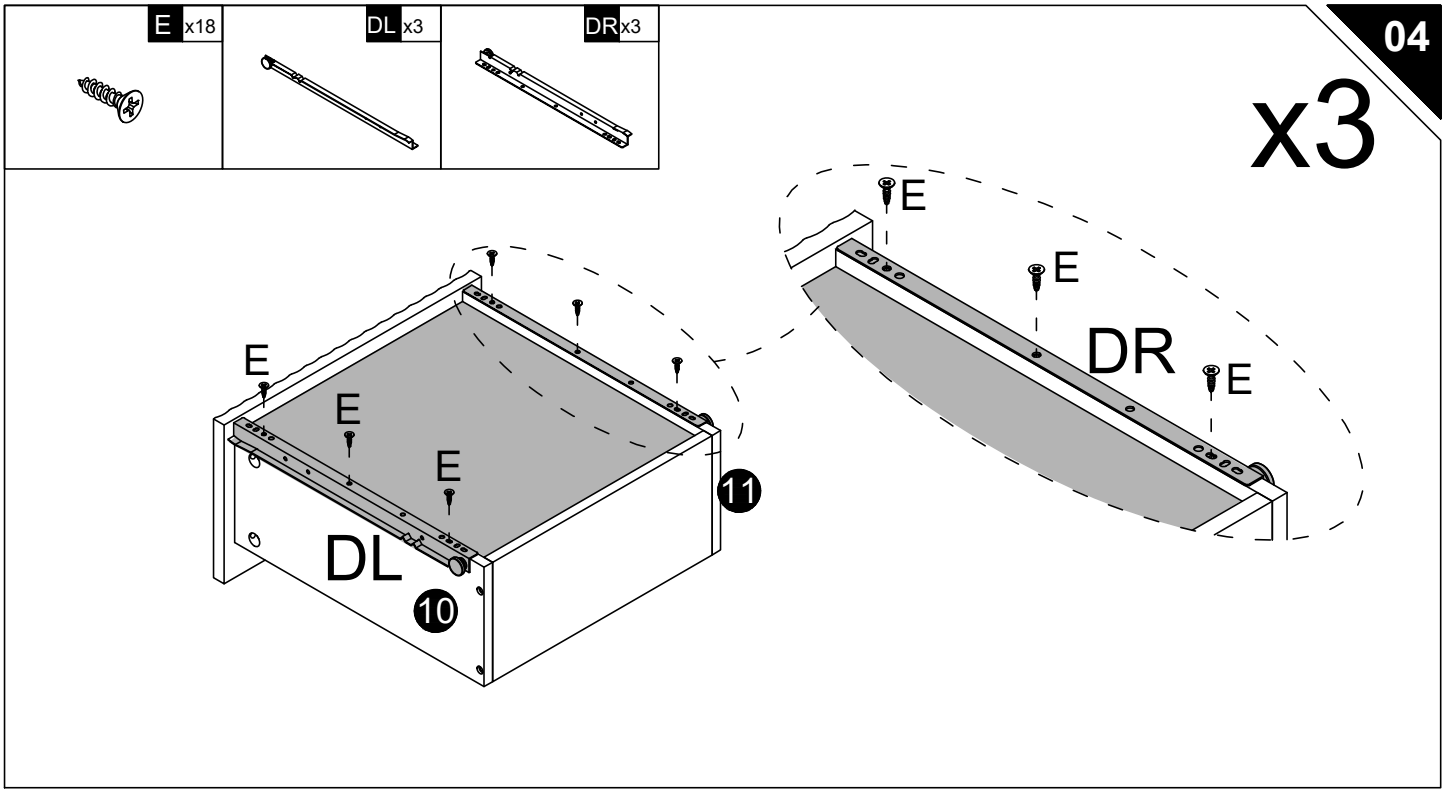
01

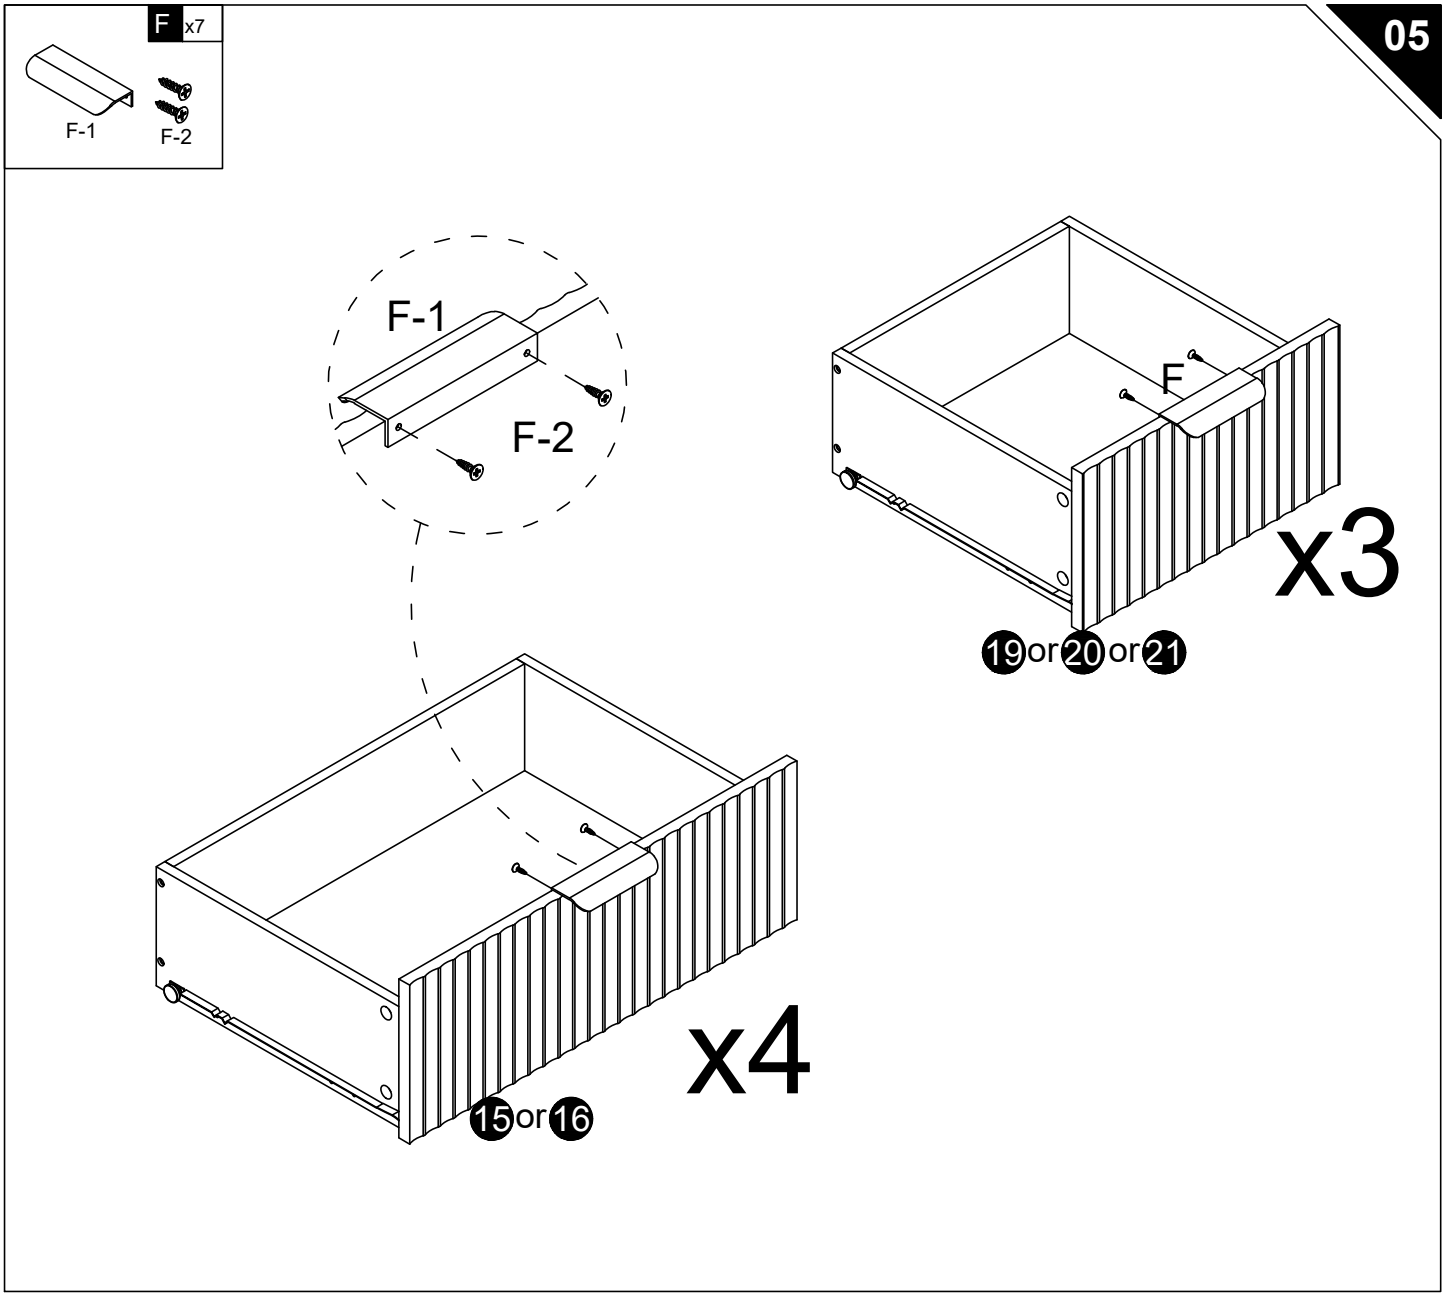
x4

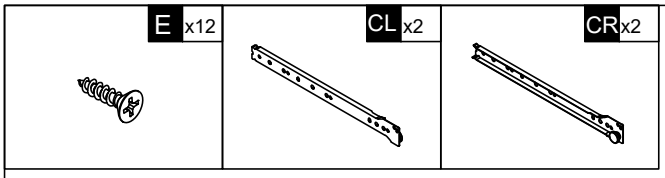



02
E x24
DL x4
DR x4
x4
E
E
DR
E
E
E
E
11
10
DL
It is recommended to lock
these two holes first.


03
A x12
B x12
C x12
D x12
x3
D
17
11
D
10
18
11
10
19 or 20 or 21
A
A
19 or 20 or 21
B
C
B
B
C
B
B
11
10

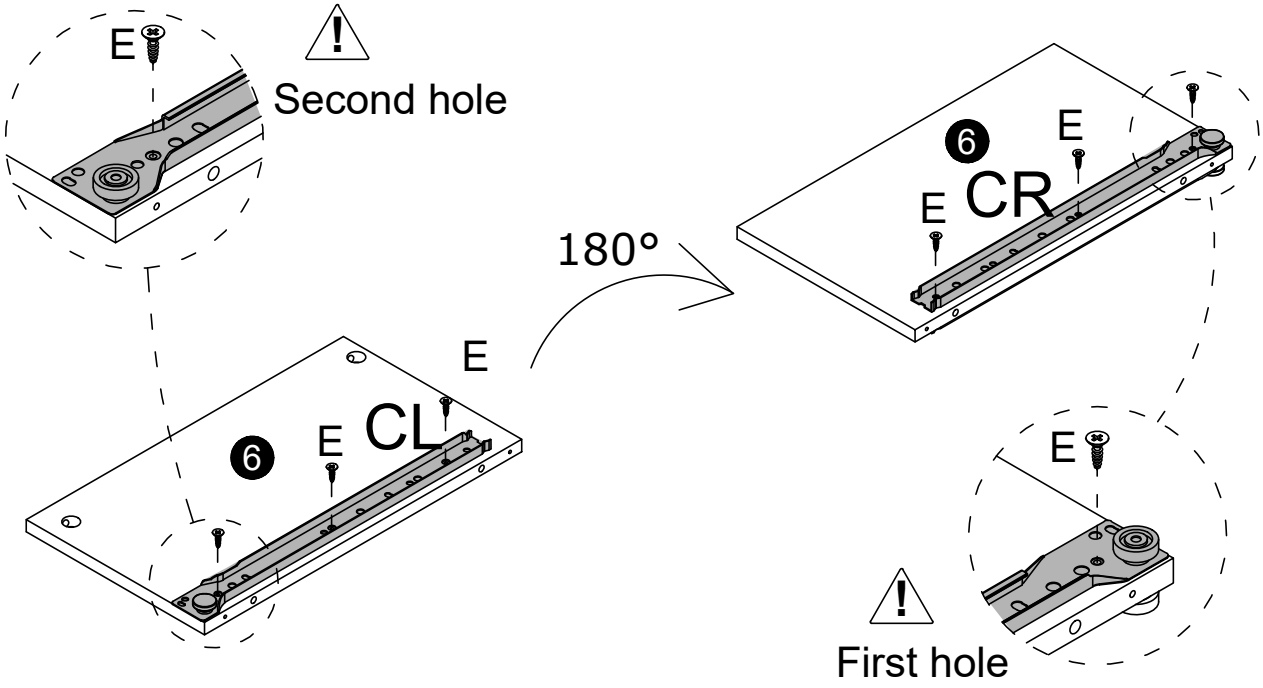

E x18
DL x3
DR x3
04
x3
E
E
DR
E
E
E
E
DL
11
10

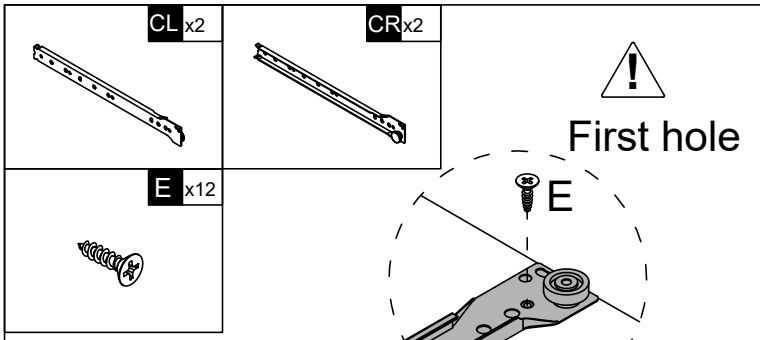

F x7
F-1
F-2
05
F-1
F-2
F
x3
19 or 20 or 21
x4
15 or 16


E x12
CL x2
CR x2

06

x2


E
Second hole
180°
6
E
CR
E
CL
E
First hole


CL x2
CR x2
E x12


07

First hole
E
E
CL
E
E
E
7
CL
E
180°
E
E
CR
E
7
E
E
CR
E
E
Second hole

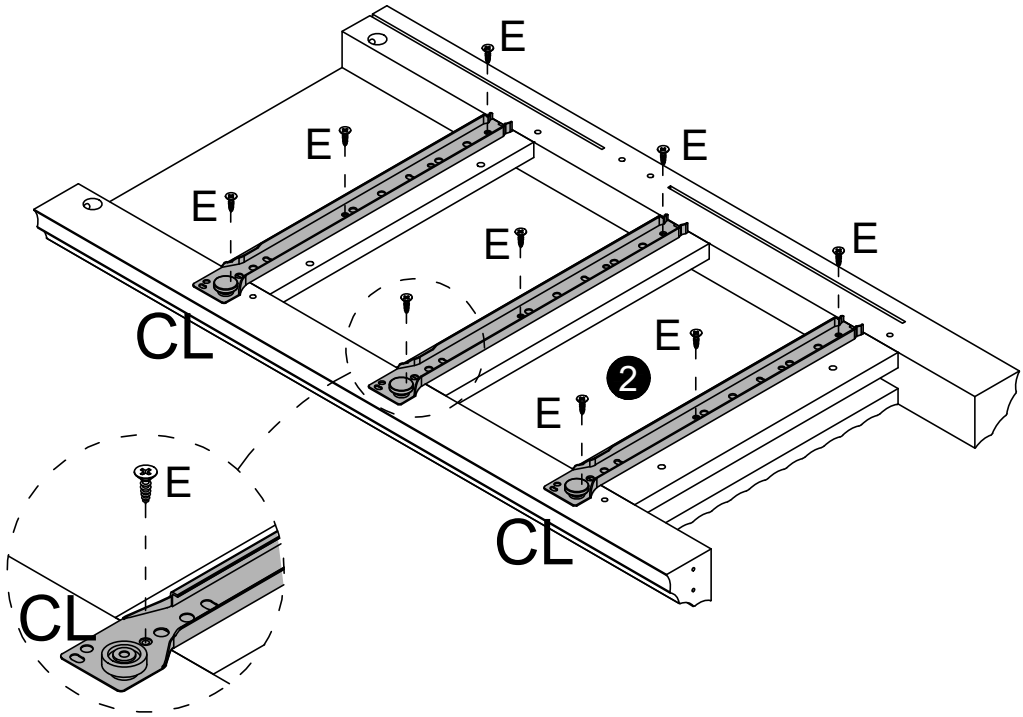
E x9




CL x3



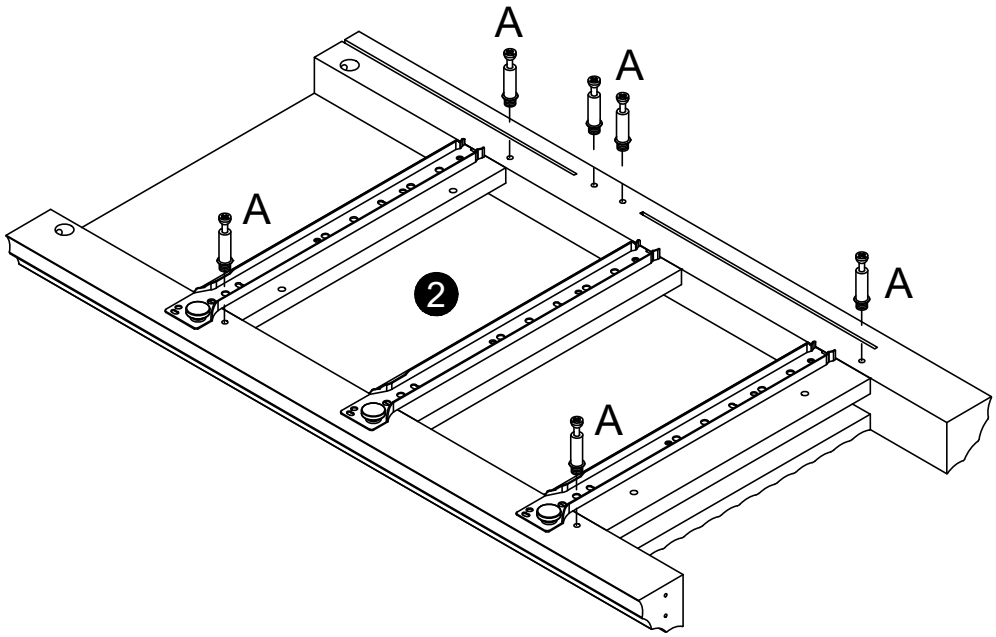
08



A x6



09




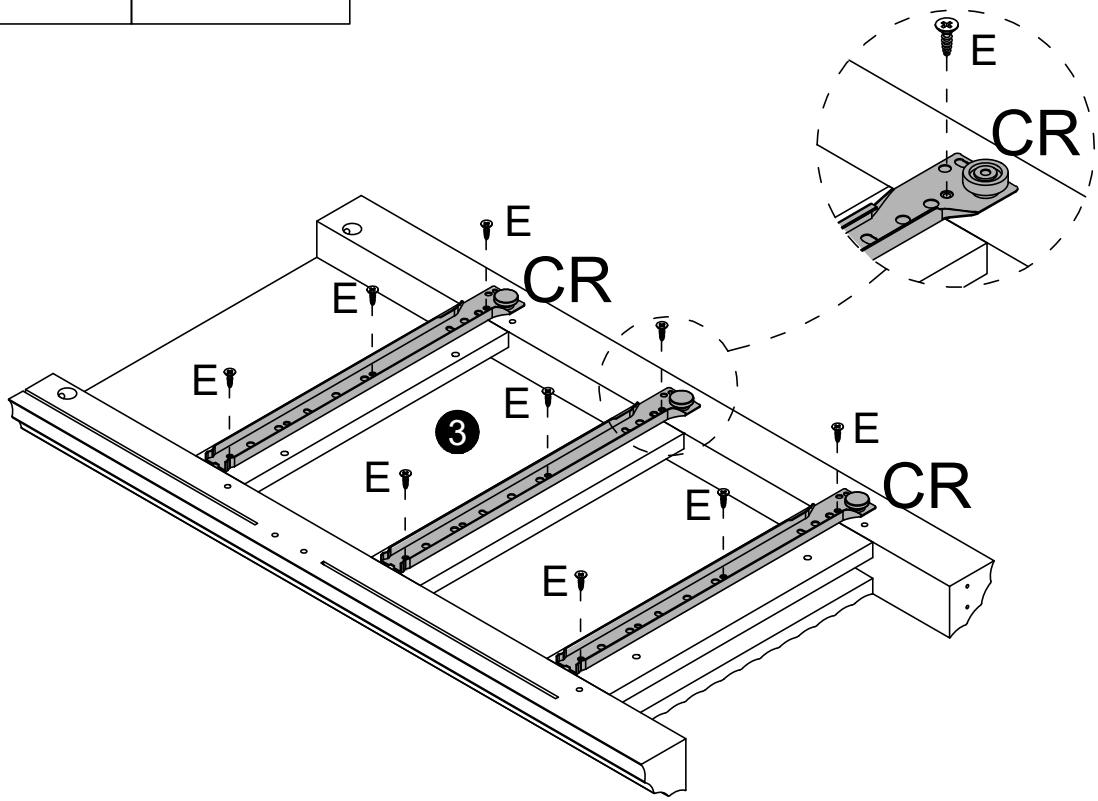
10

E x9




CR x3

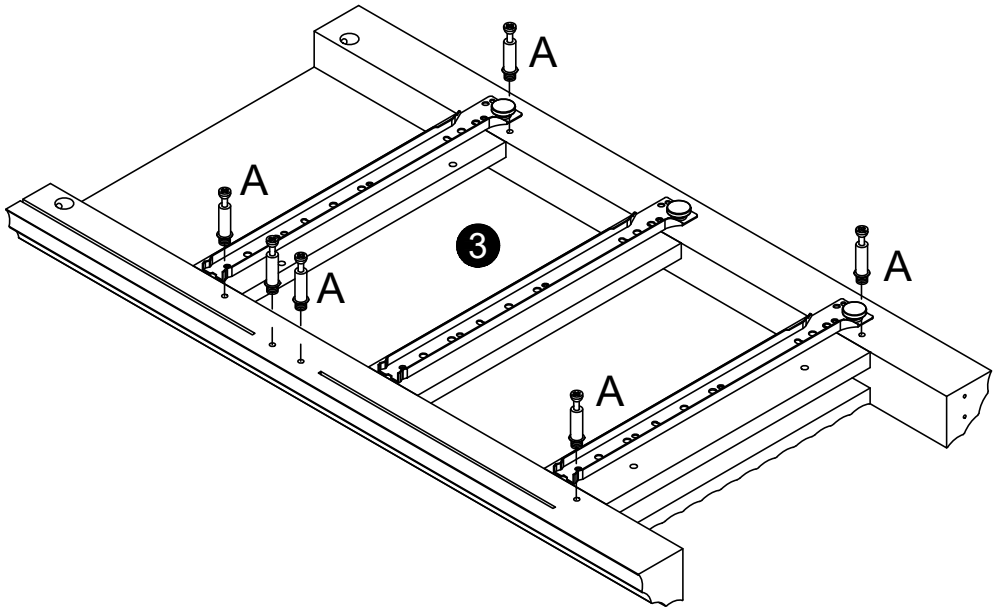


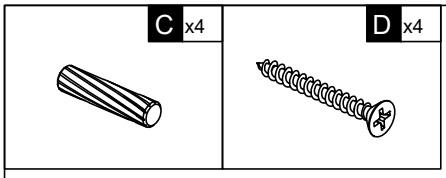


11

A x6

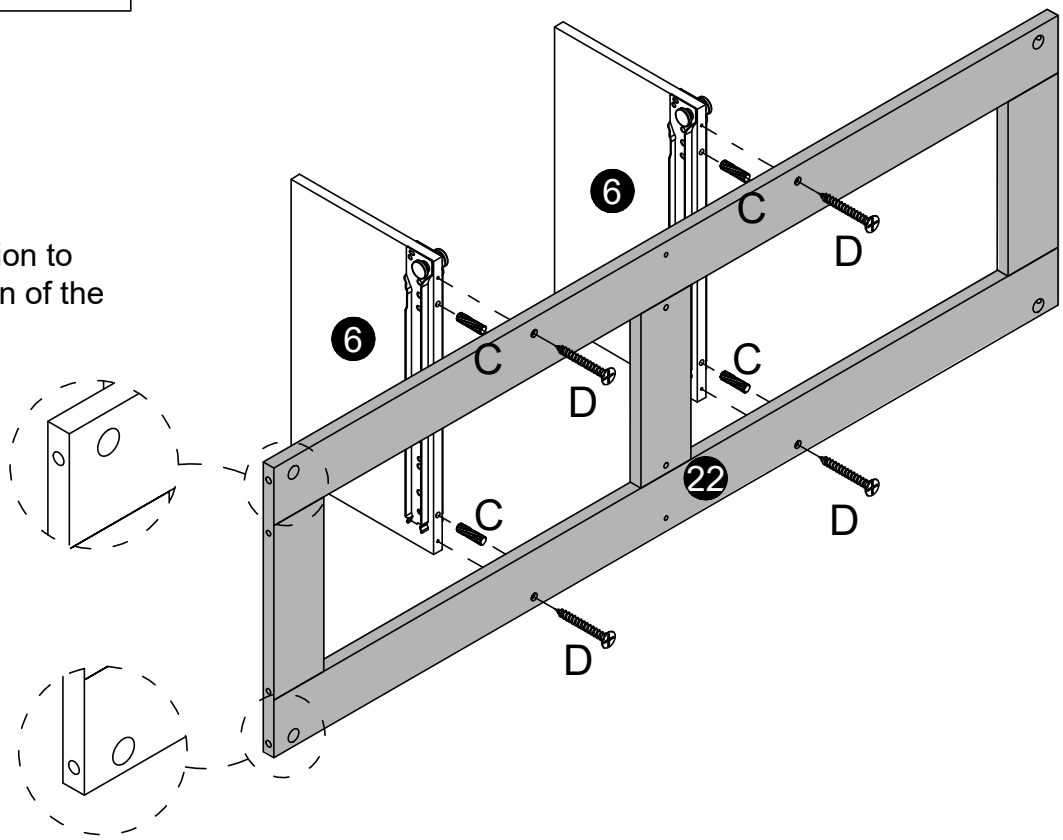


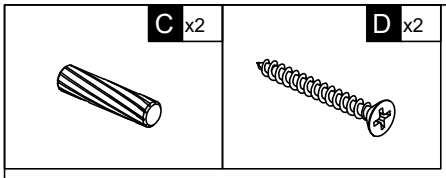




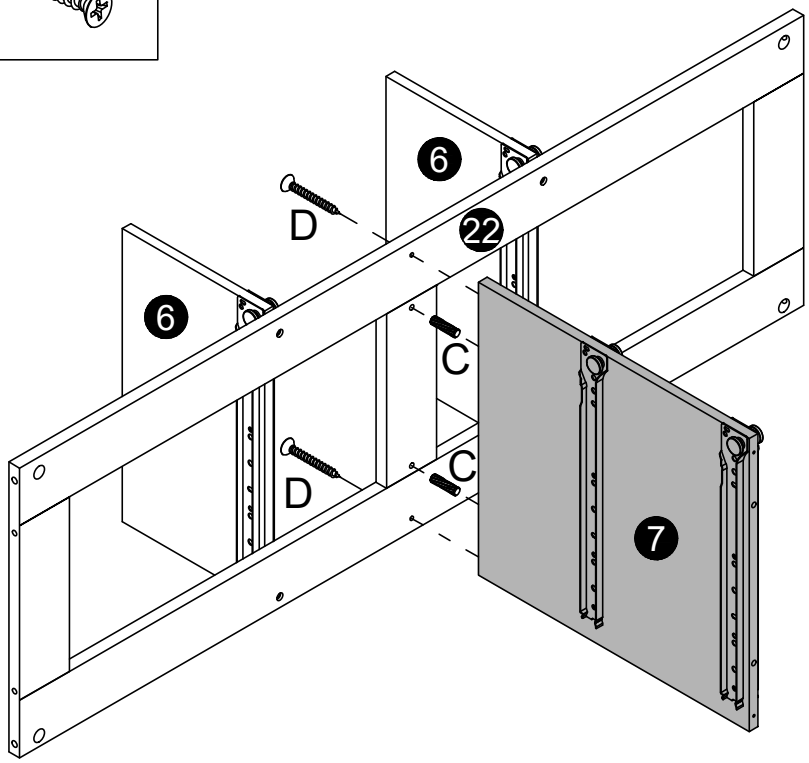
12

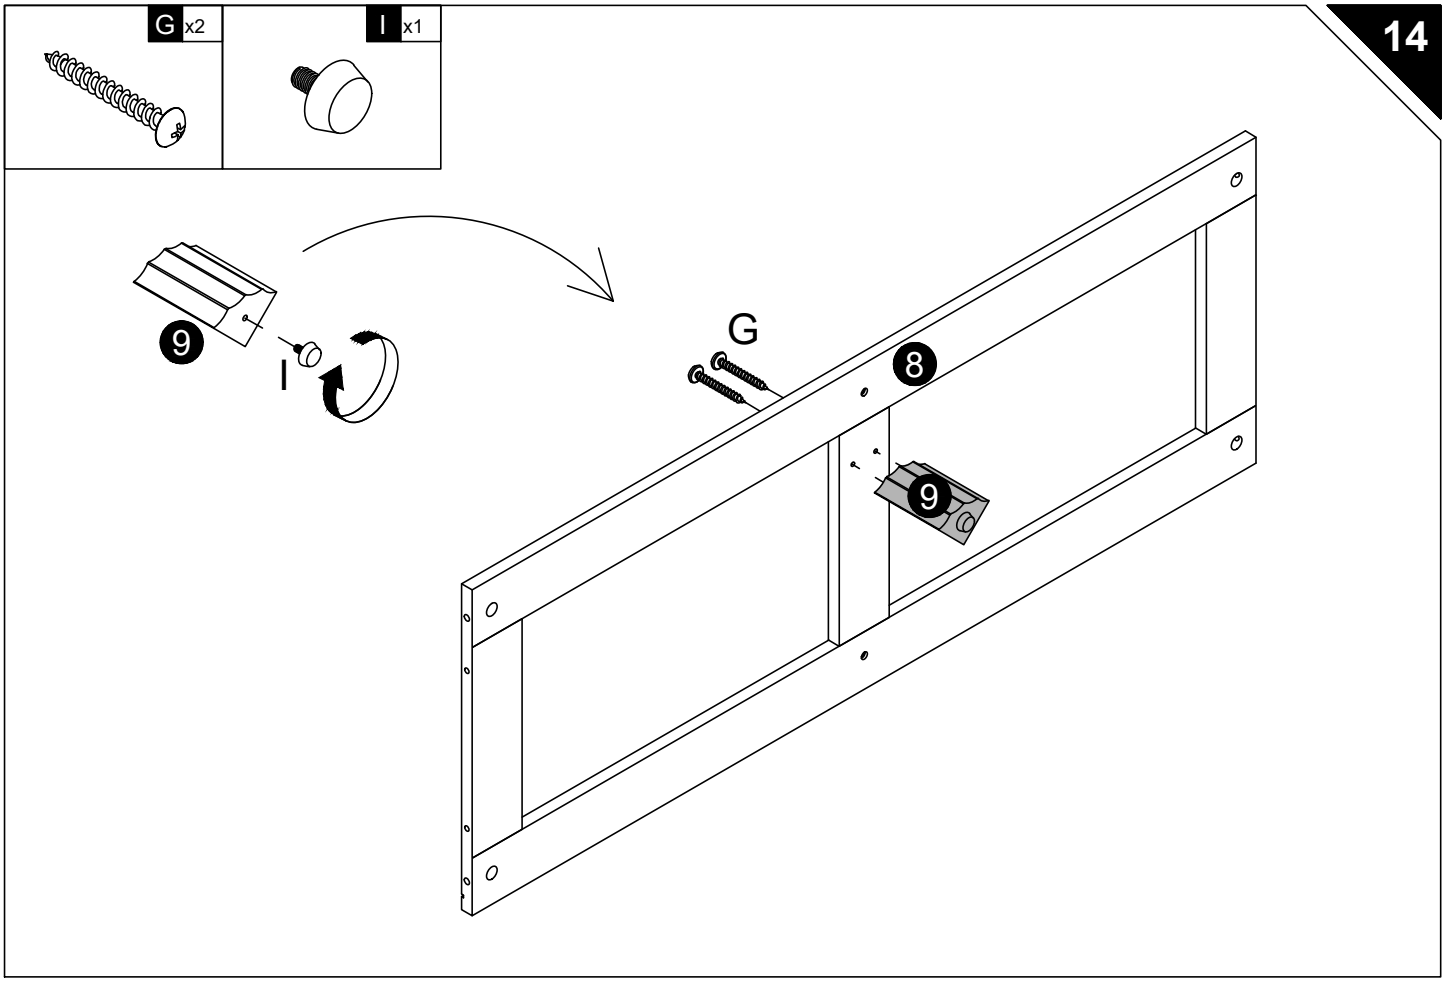
Pay attention to the position of the holes.

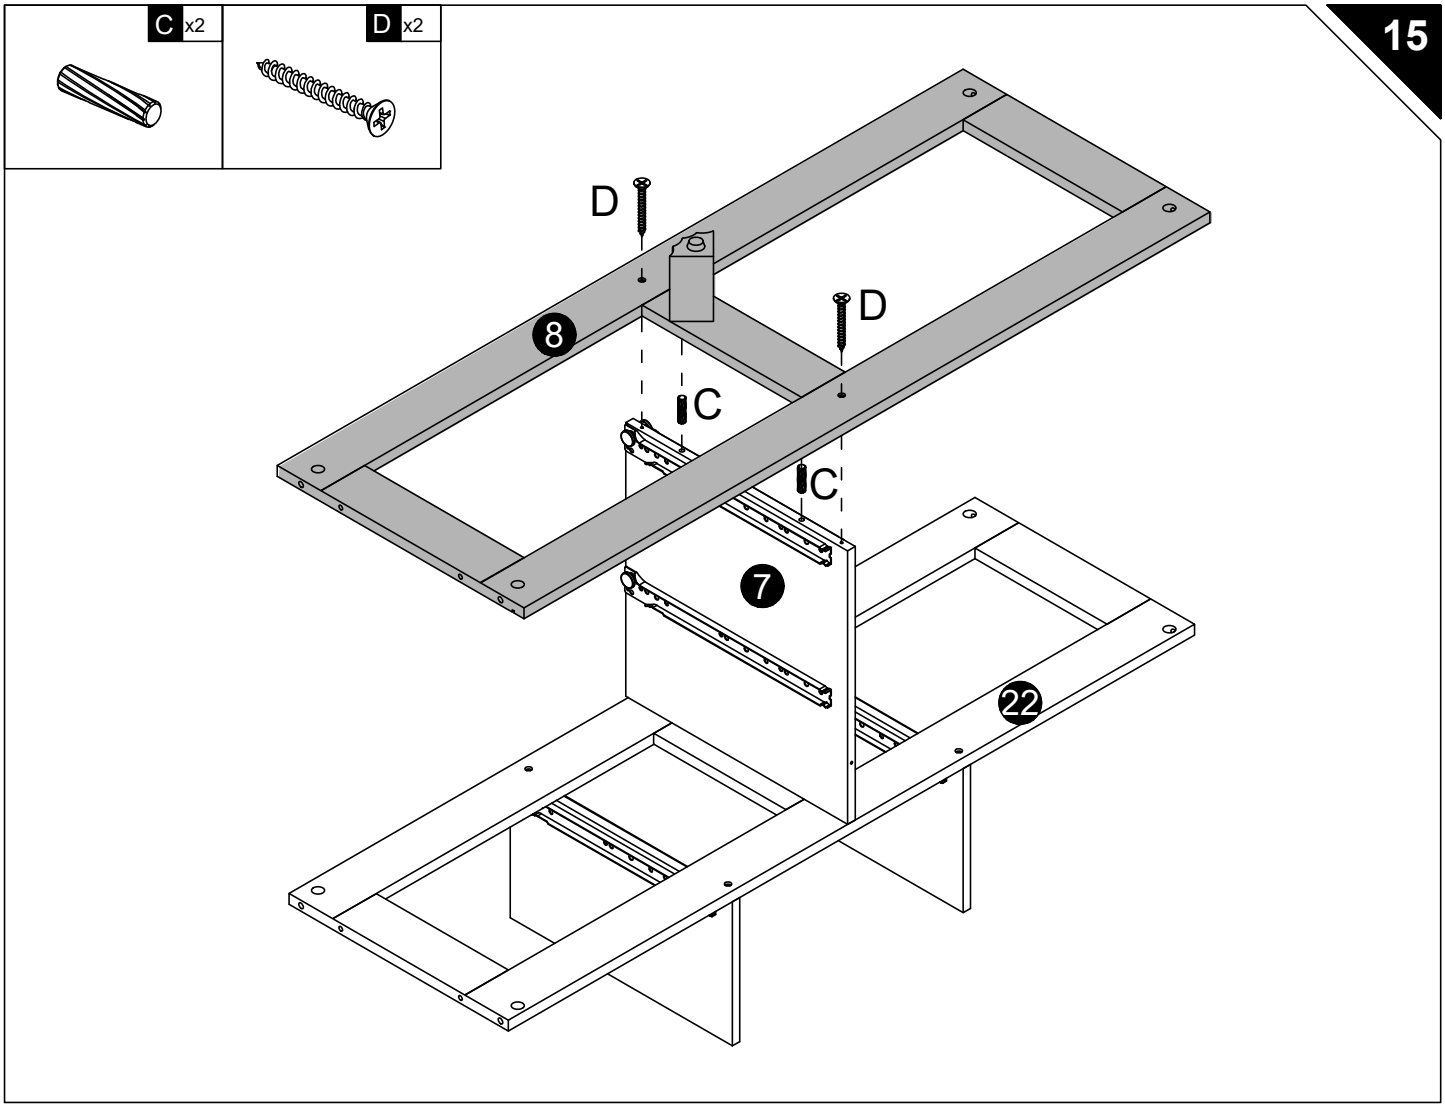


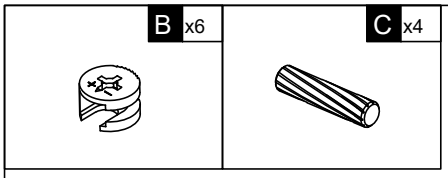


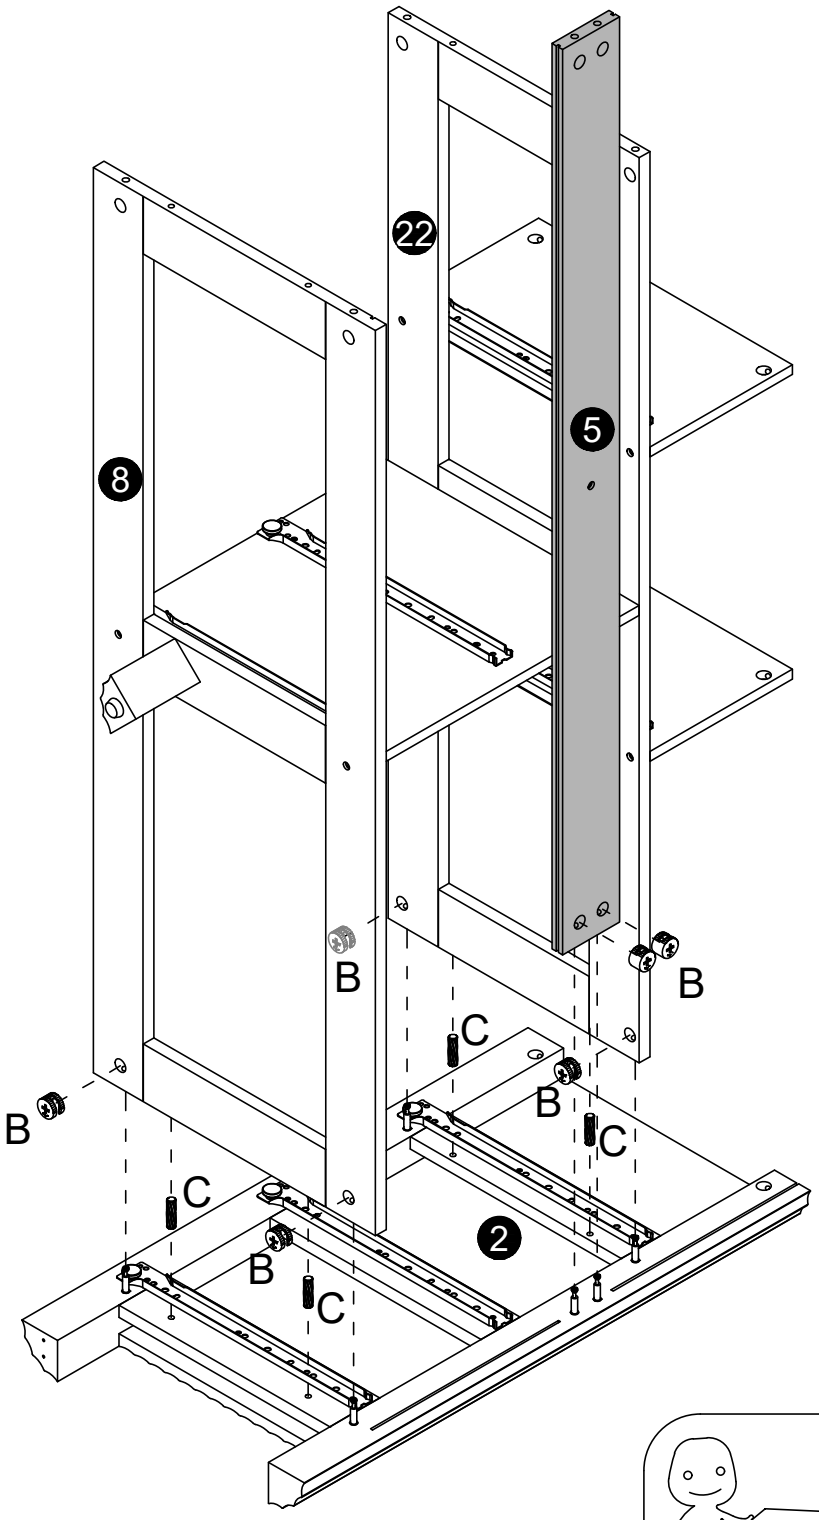
13

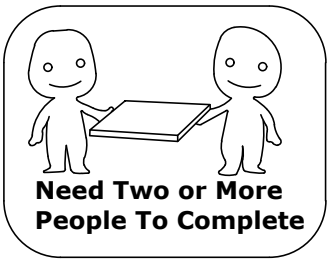


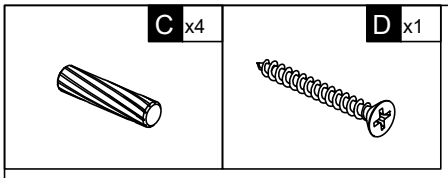

14
G x2
I x1
9
I
G
8
9

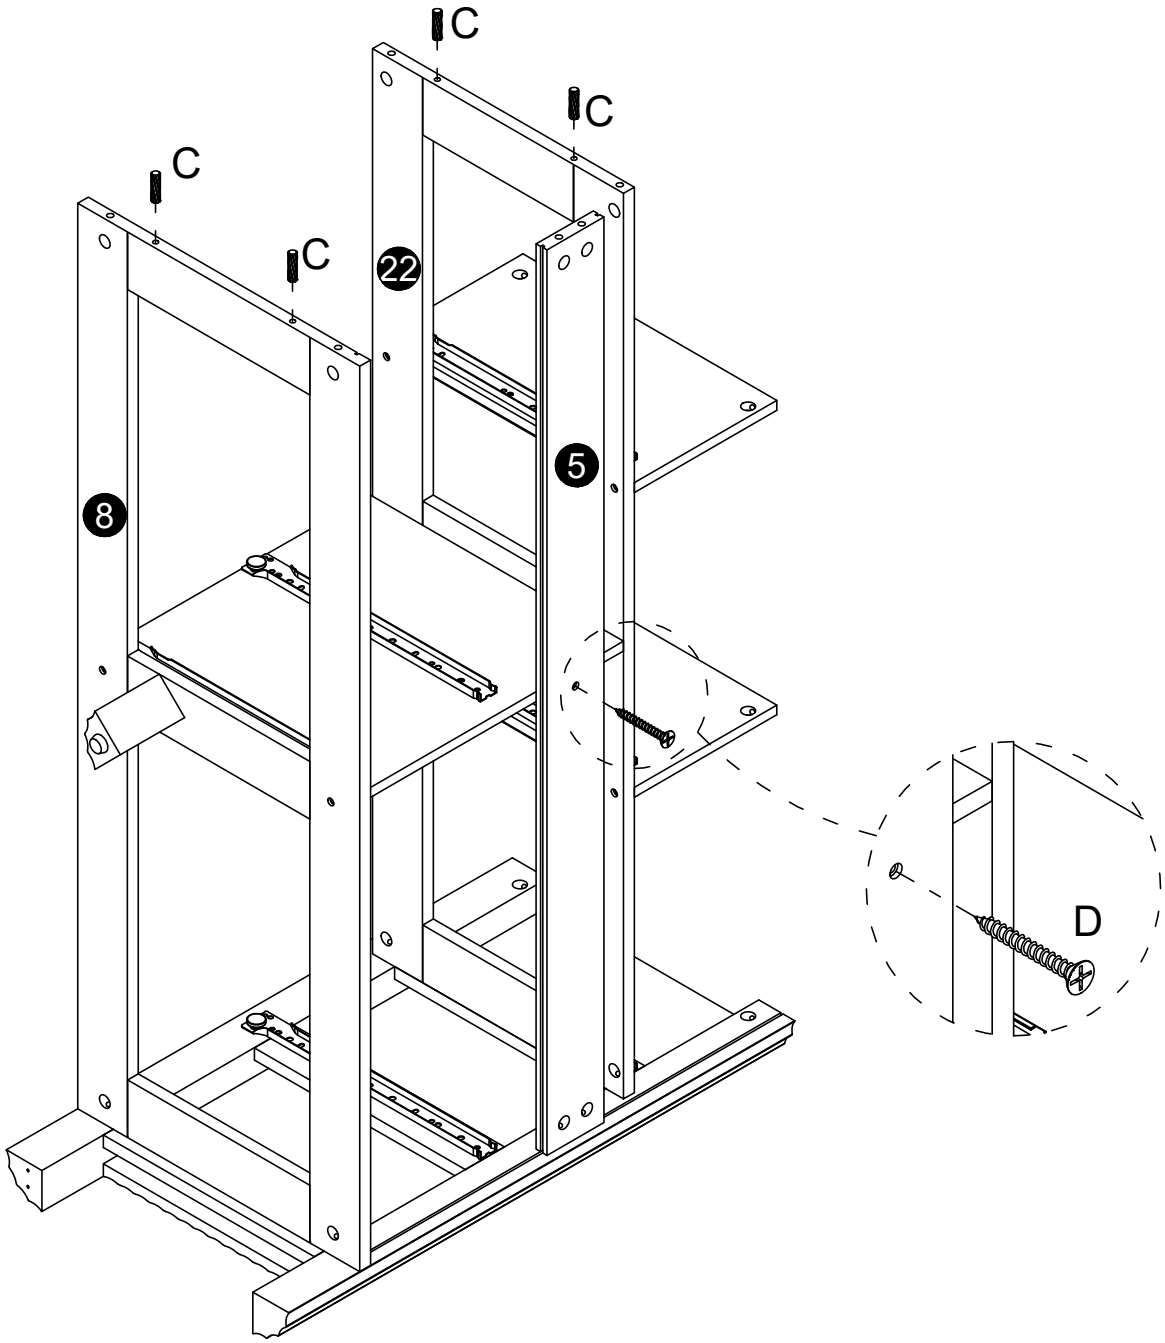

15
C x2
D x2
D
D
8
C
C
7
22


B x6
C x4

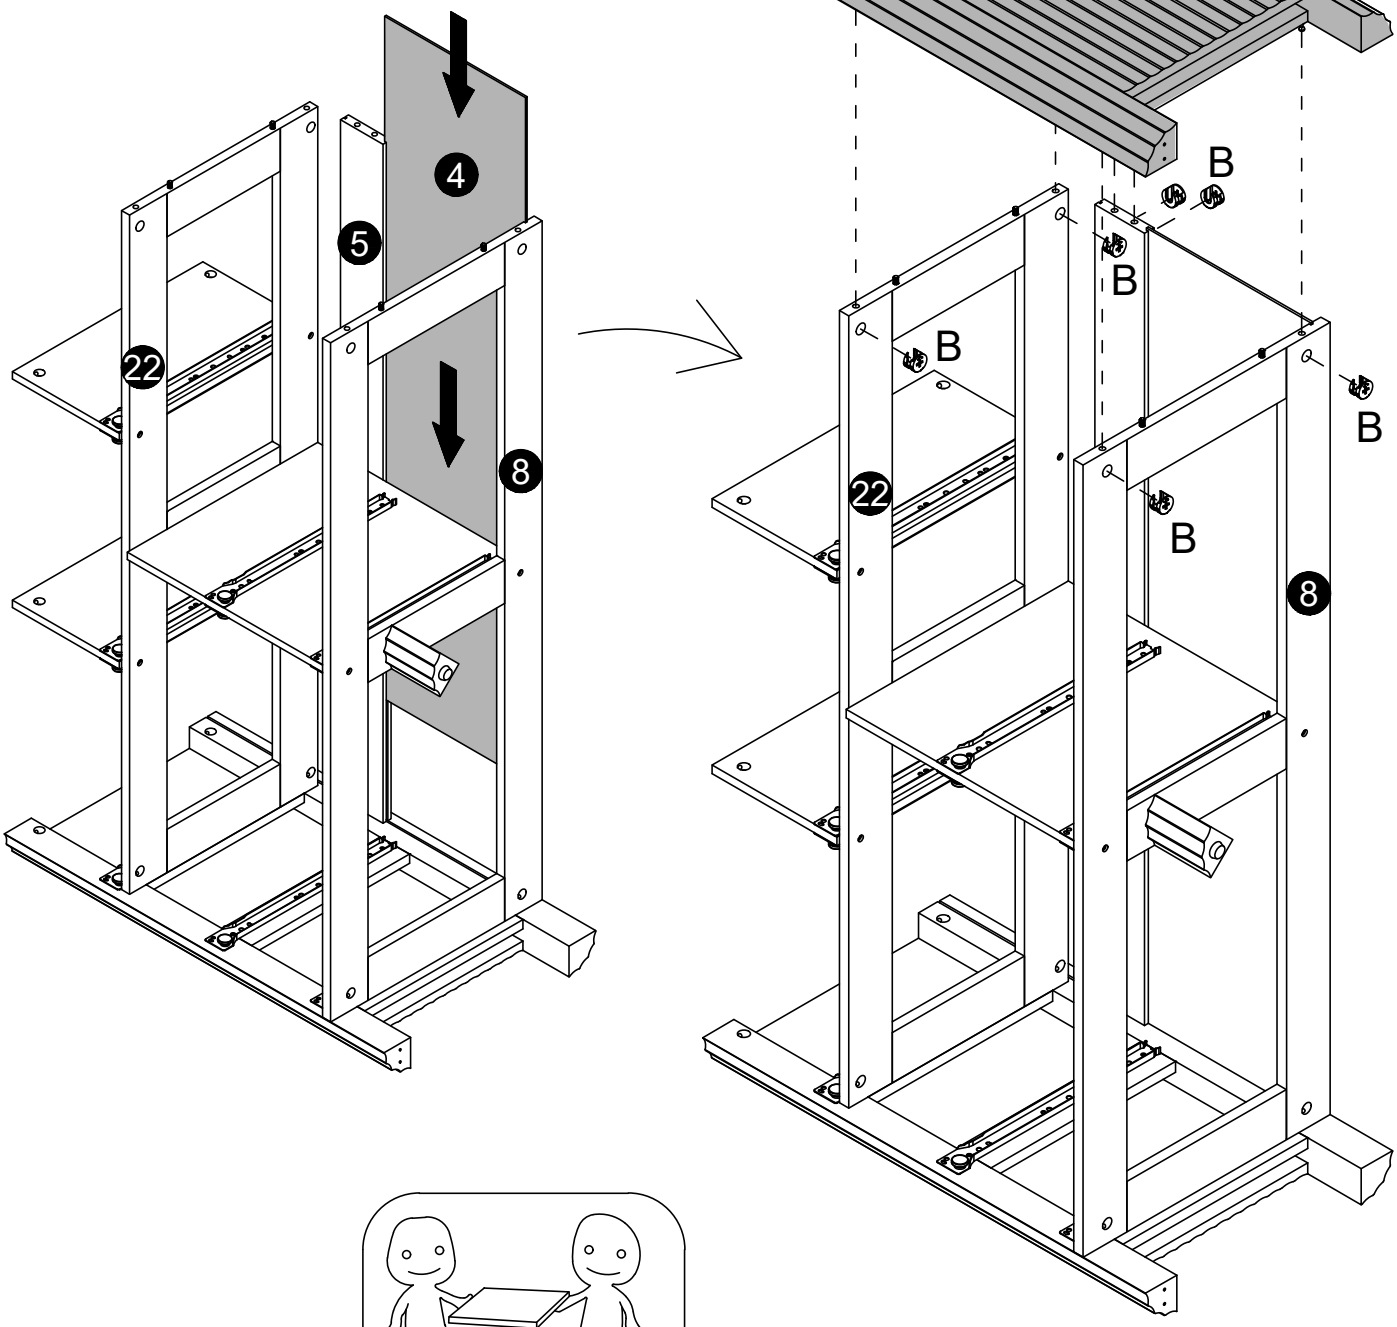

22
5
8
B
B
C
B
C
B
C
C
2

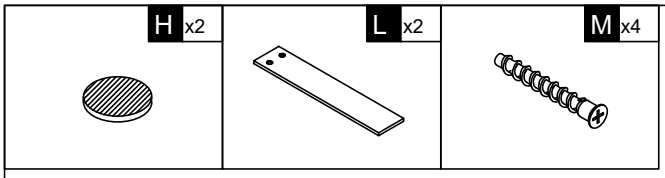

Need Two or More
People To Complete

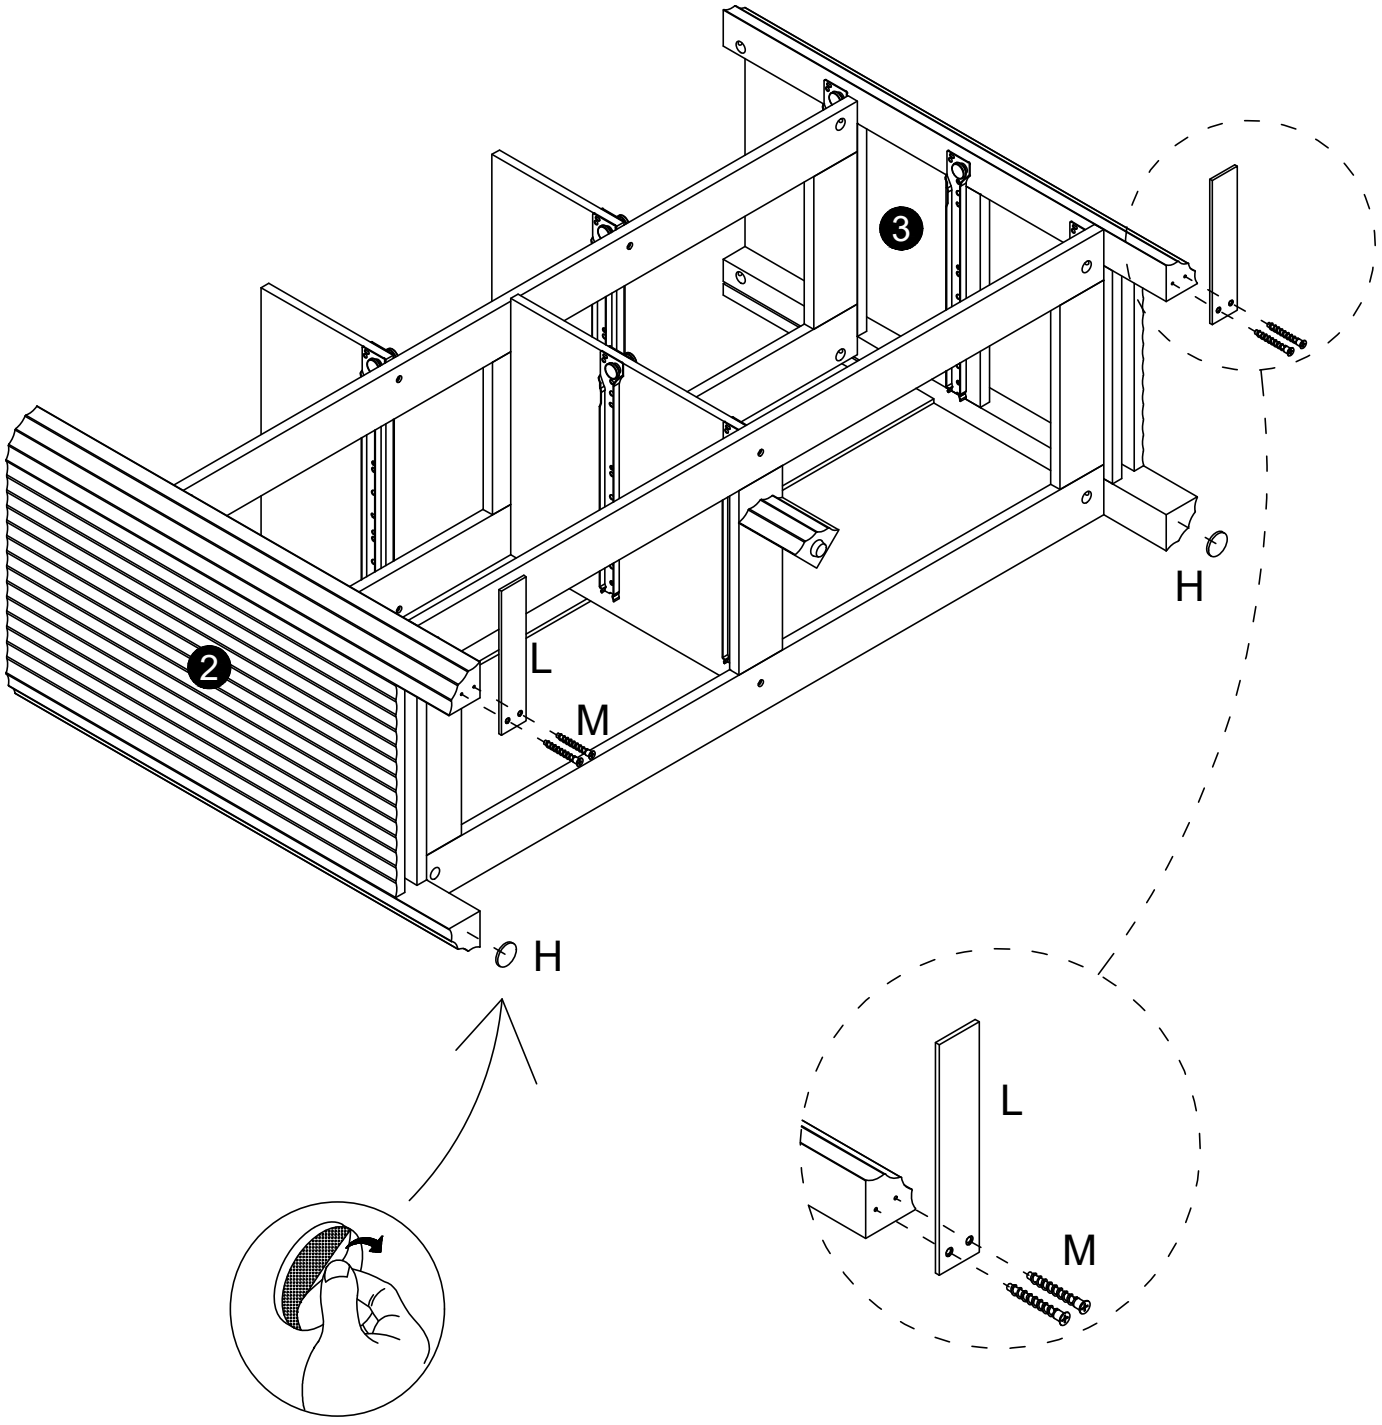

C x4
D x1


C
C
C
C
22
5
8
D

B x6



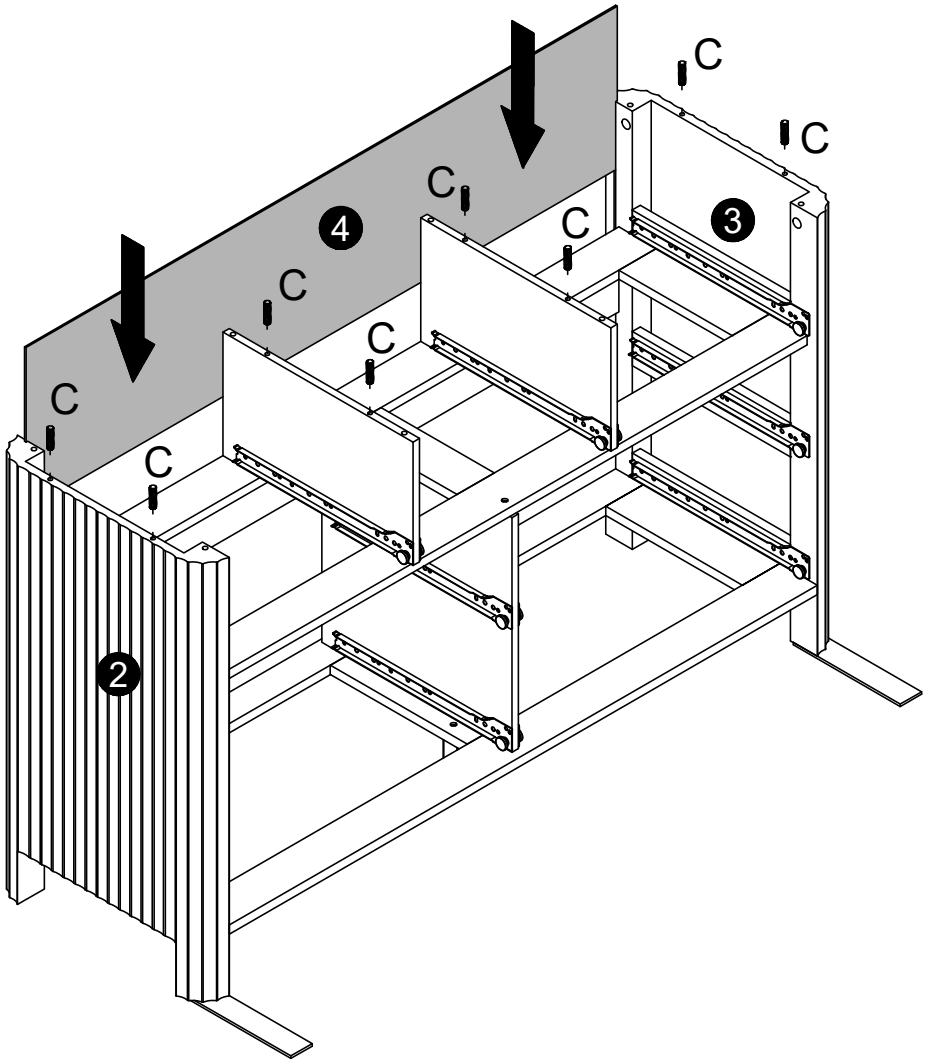

H x2
L x2
M x4


3
2
L
M
H
H
L
M


C x8



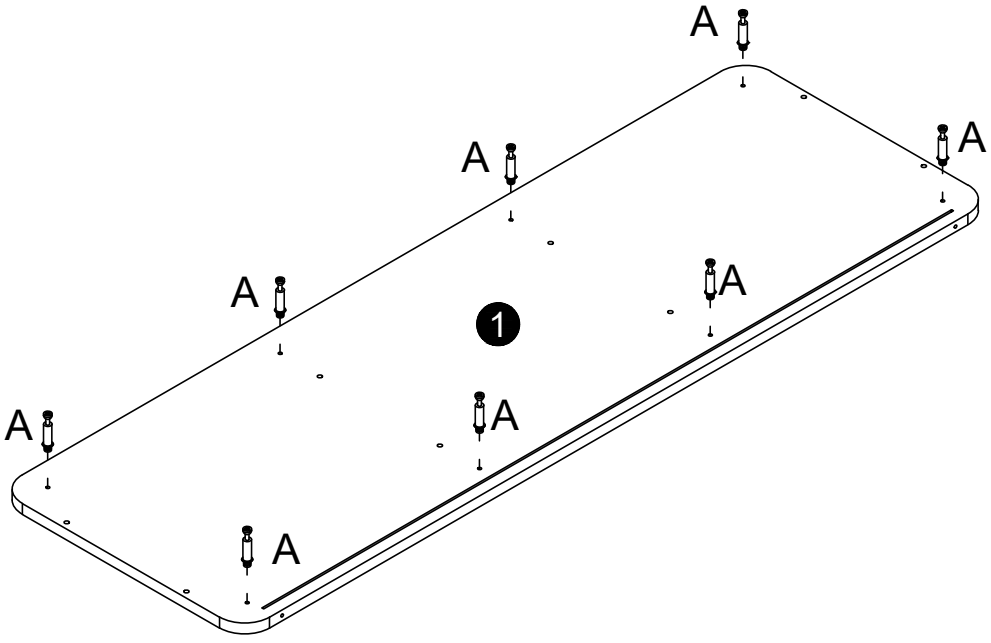
20



A x8



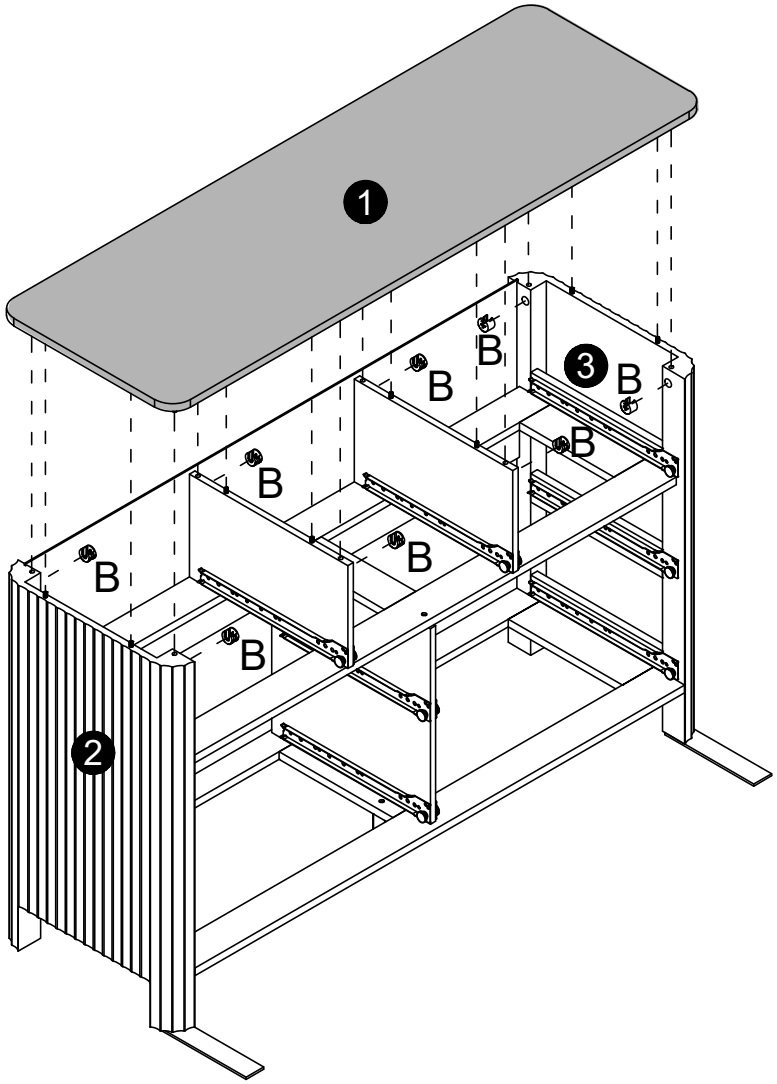
21



22


B x8

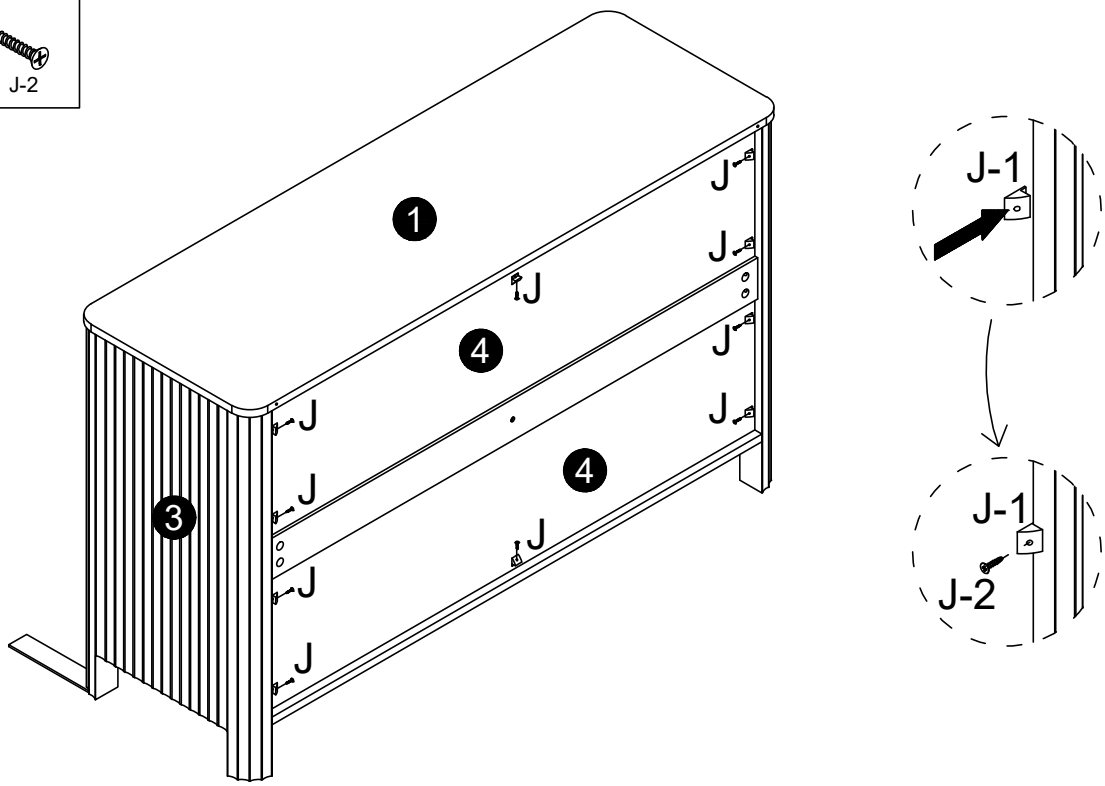




23

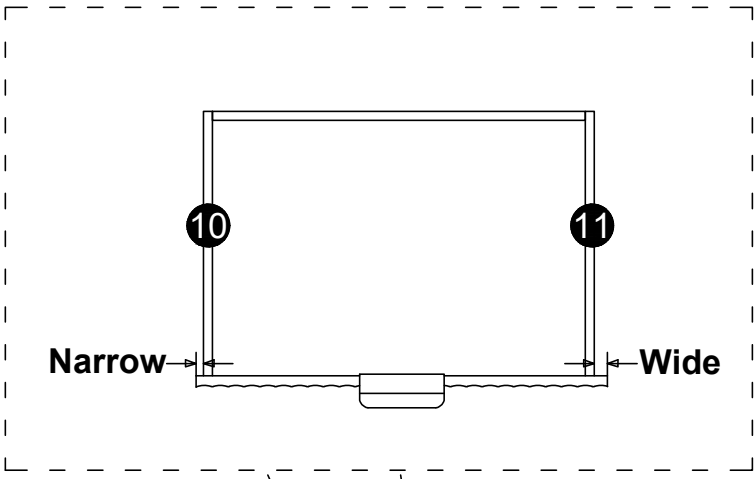
J x10

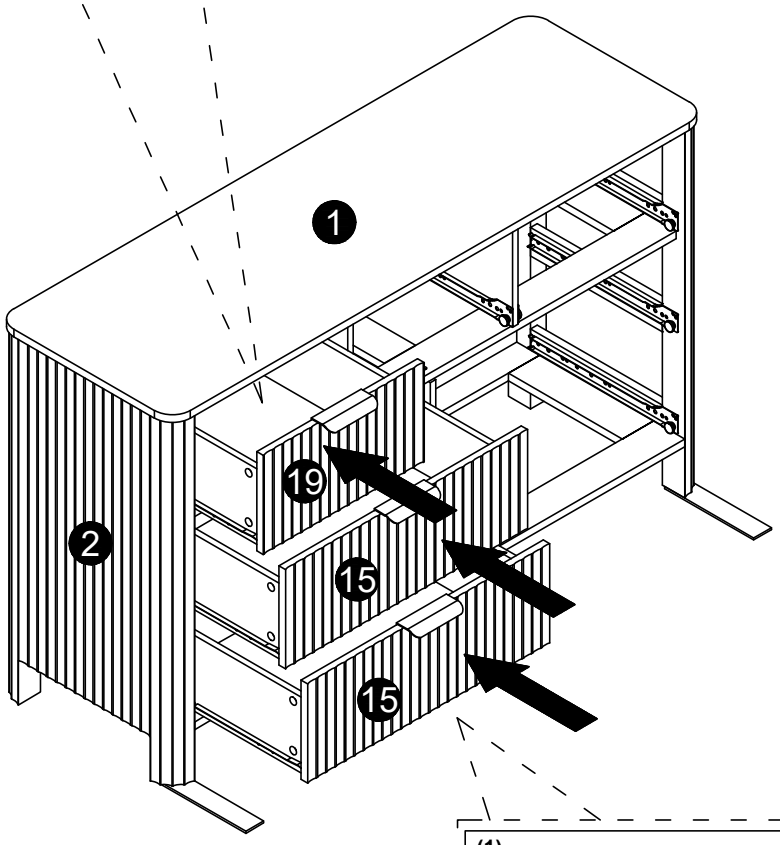


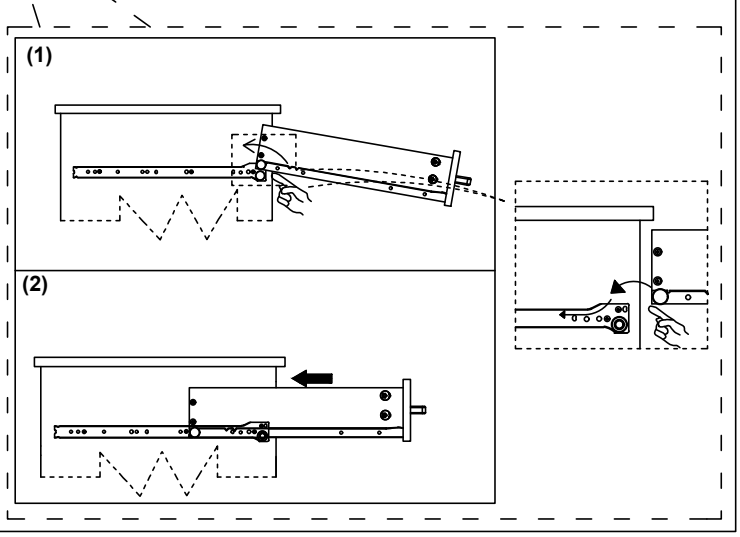


Attention:

There are three types of drawers, namely drawer 15 , 19 on the left, drawer 16 , 21 on the right and drawer 20 in the middle. The following illustration shows Drawer 15 , 19 on the left .

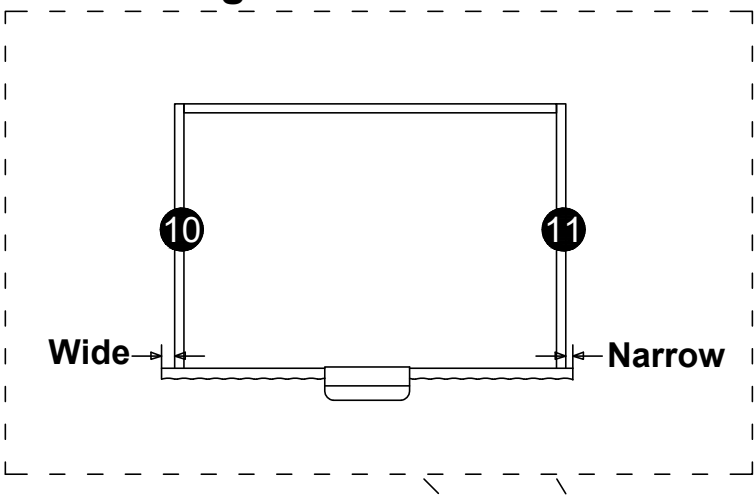


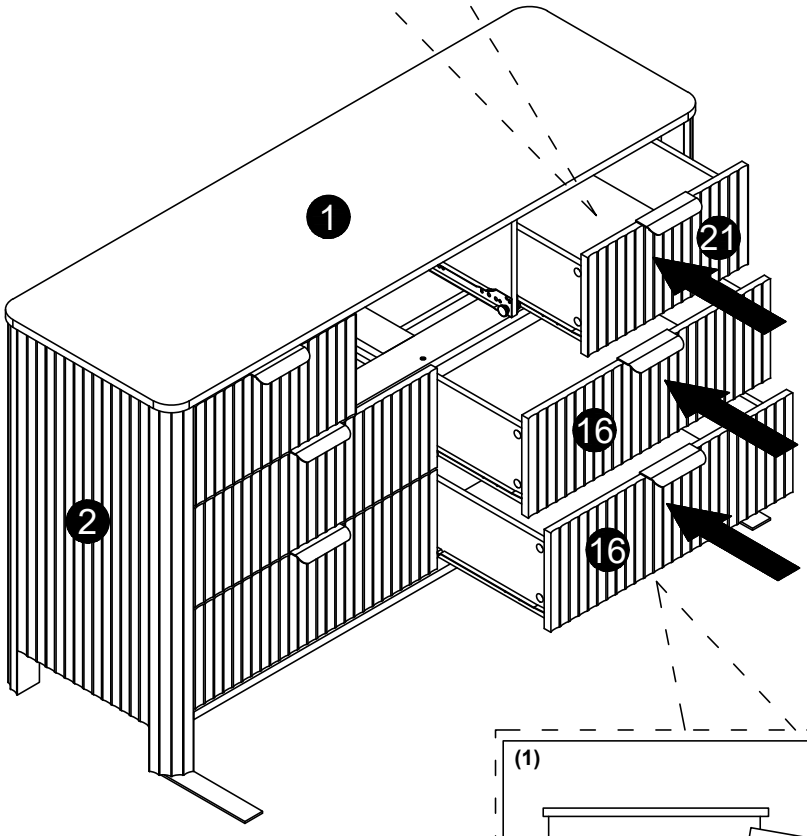


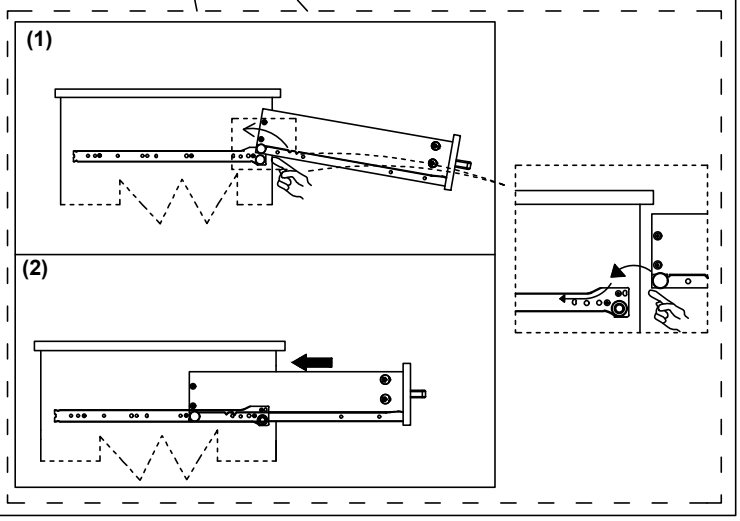


Attention:

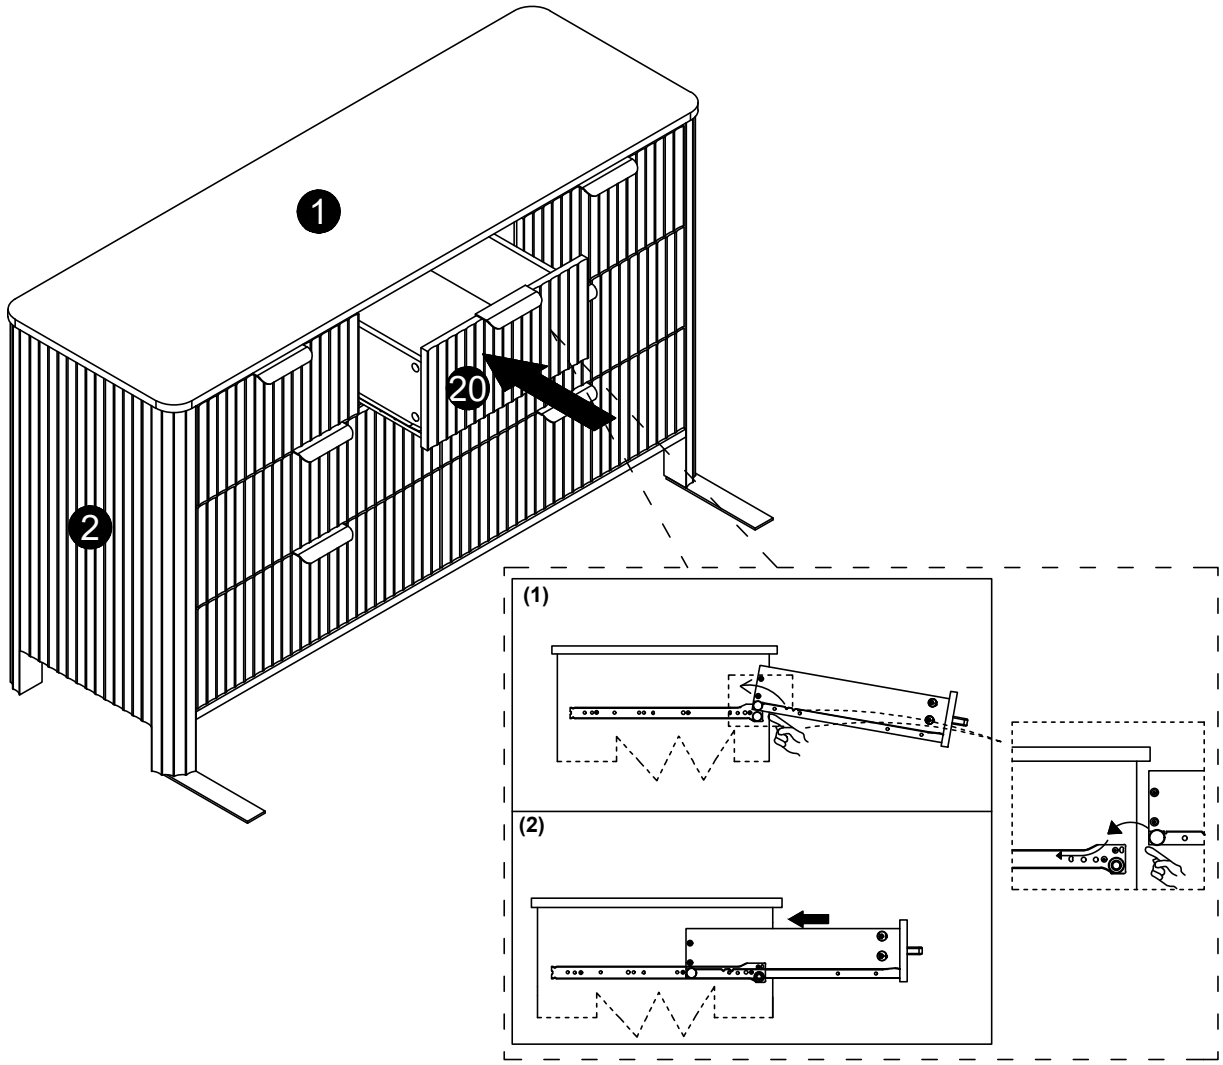
There are three types of drawers, namely drawer 15 , 19 on the left, drawer 16 , 21 on the right and drawer 20 in the middle. The following illustration shows Drawer 16 , 21 on the right .



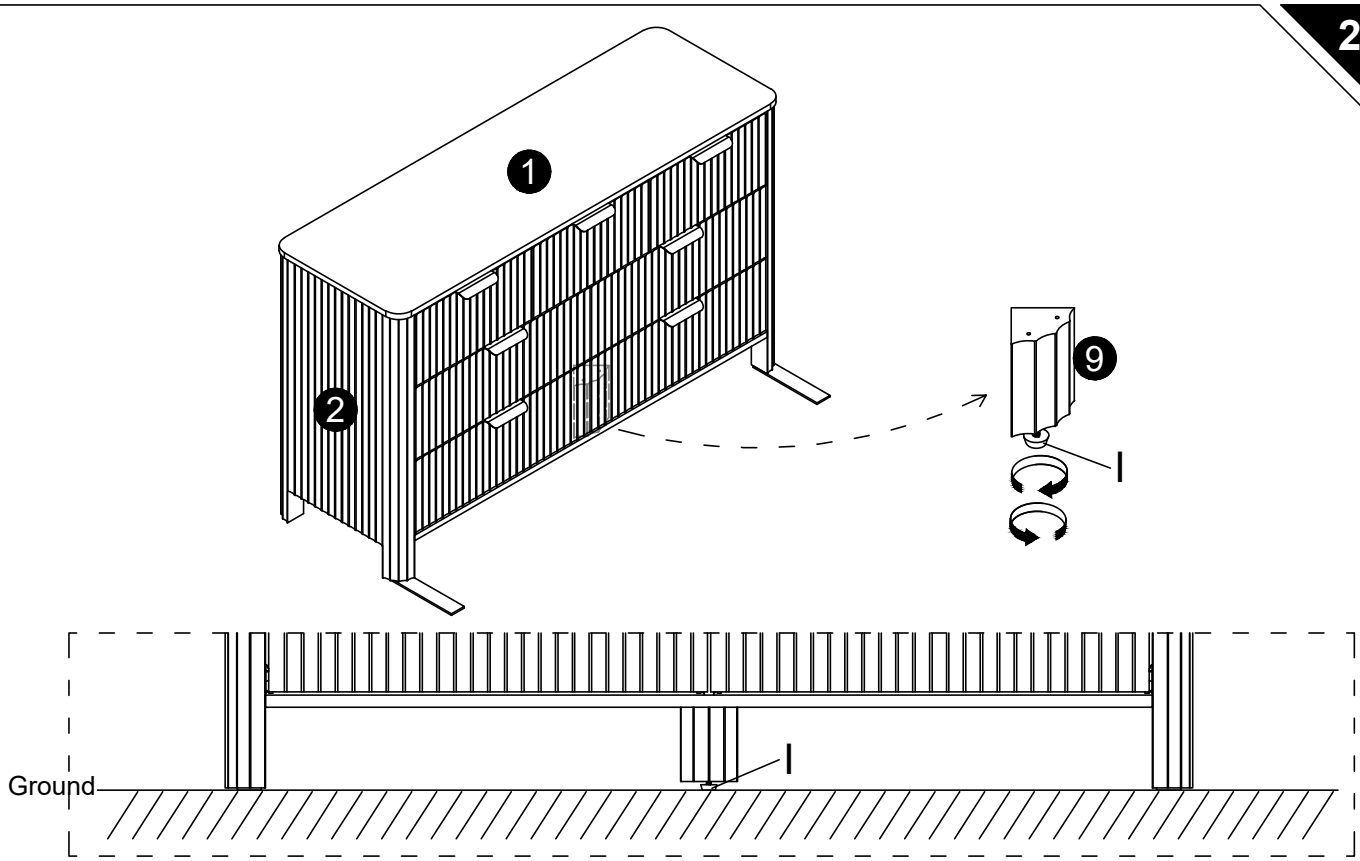




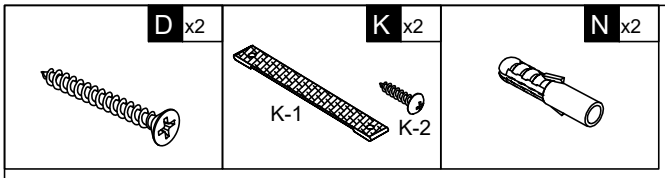
26



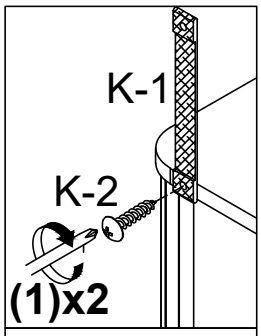
27



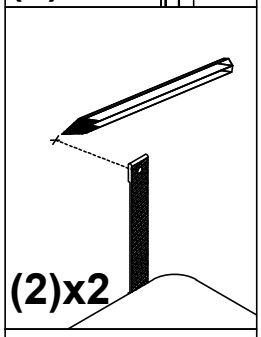
If the cabinet is unstable with the ground, please rotation control the foot fitting (I)



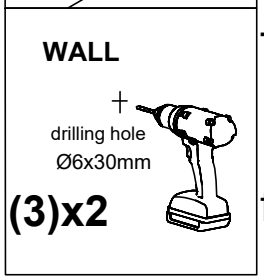
Done



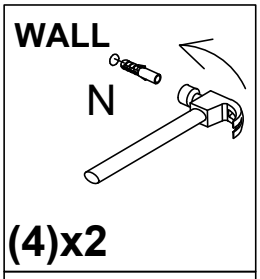
First fix the anti-rewind screw in the reserved hole of the product.



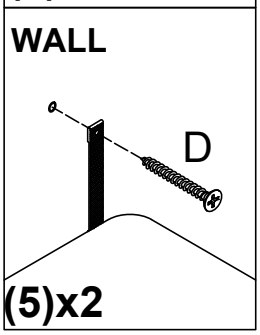
then, use a ruler to measure the approximate height of the product on the wall, and then mark it witha pen.



Then use a tape drill to make holes in the wall that are suitable for the product screws.



Then,put the expansion bolt into the hole



Finally,pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

