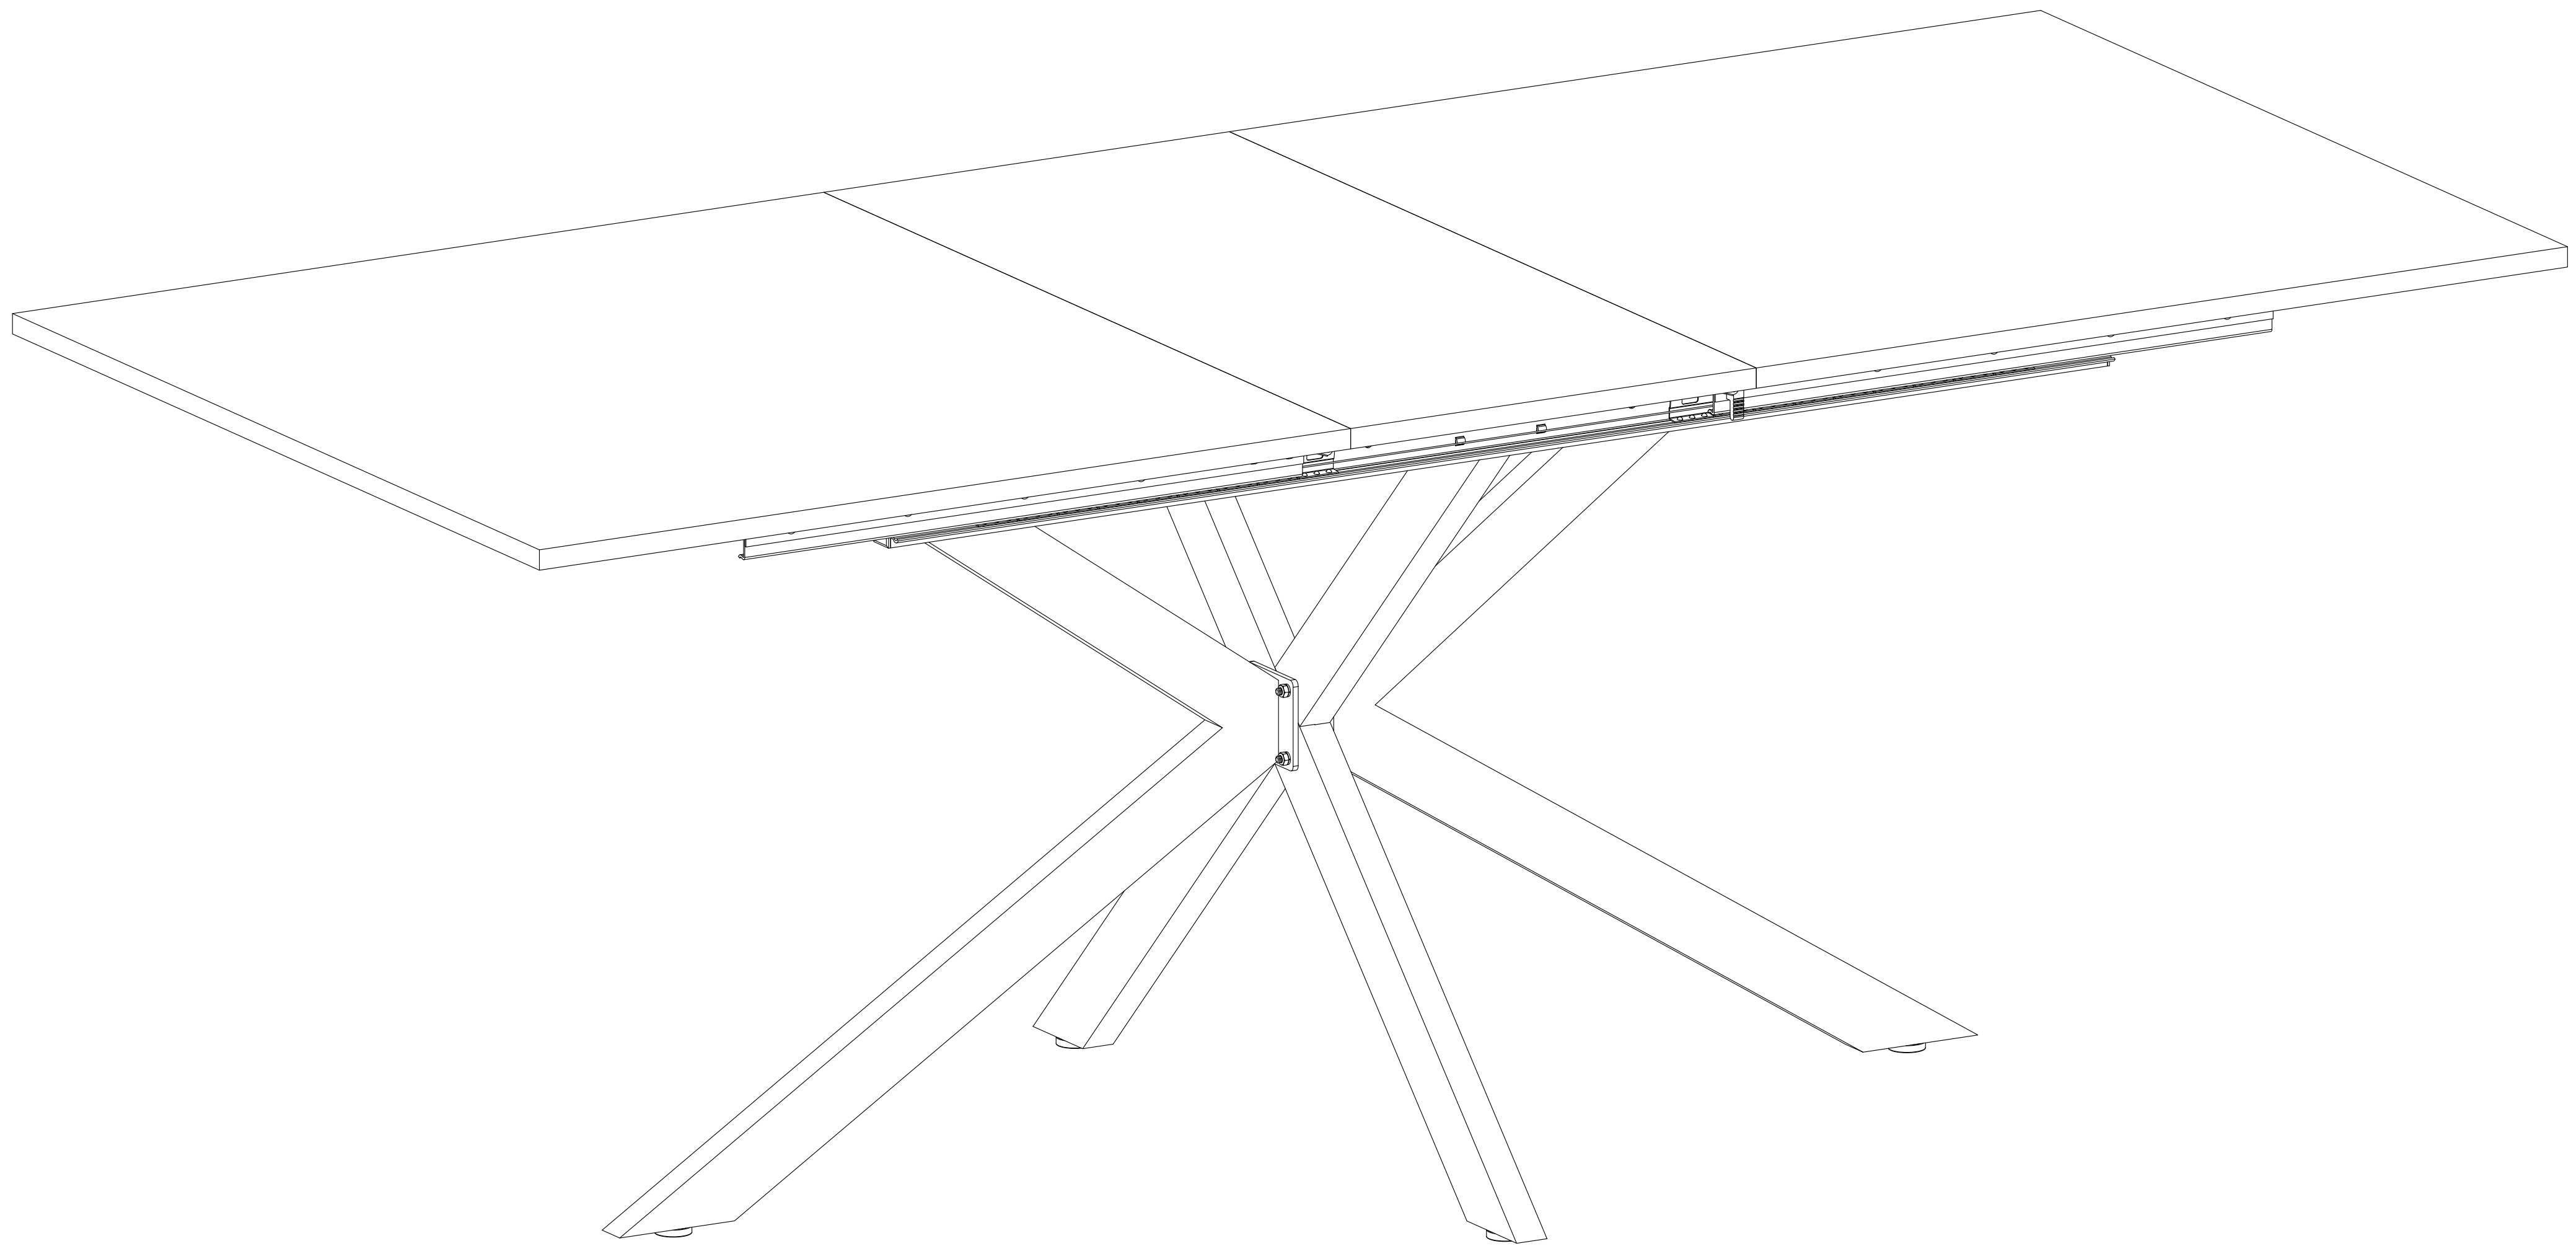


Assembly instruction

Dining Table



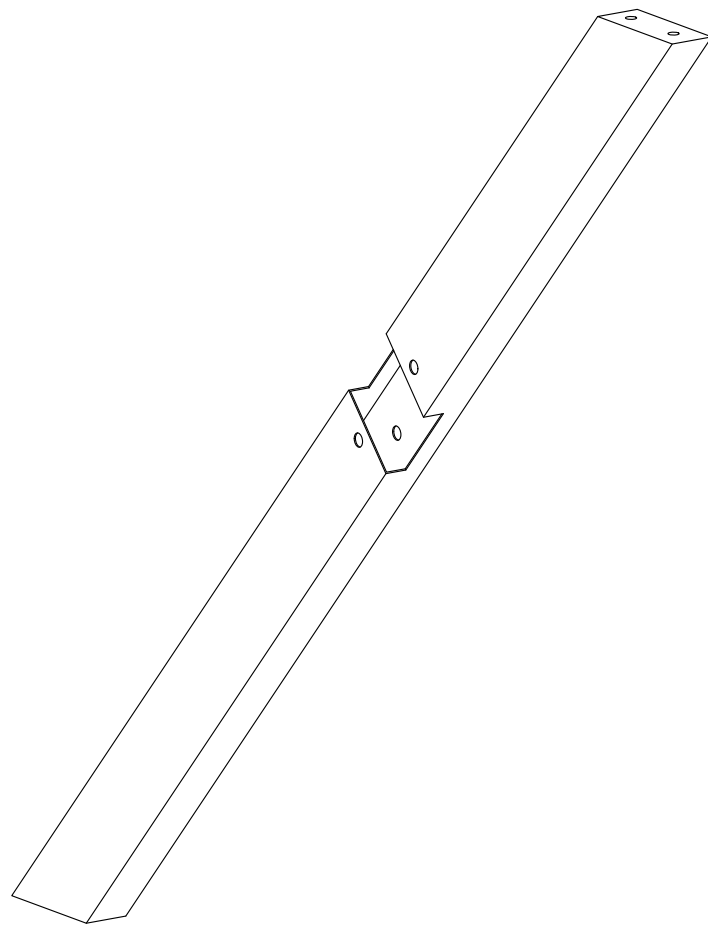
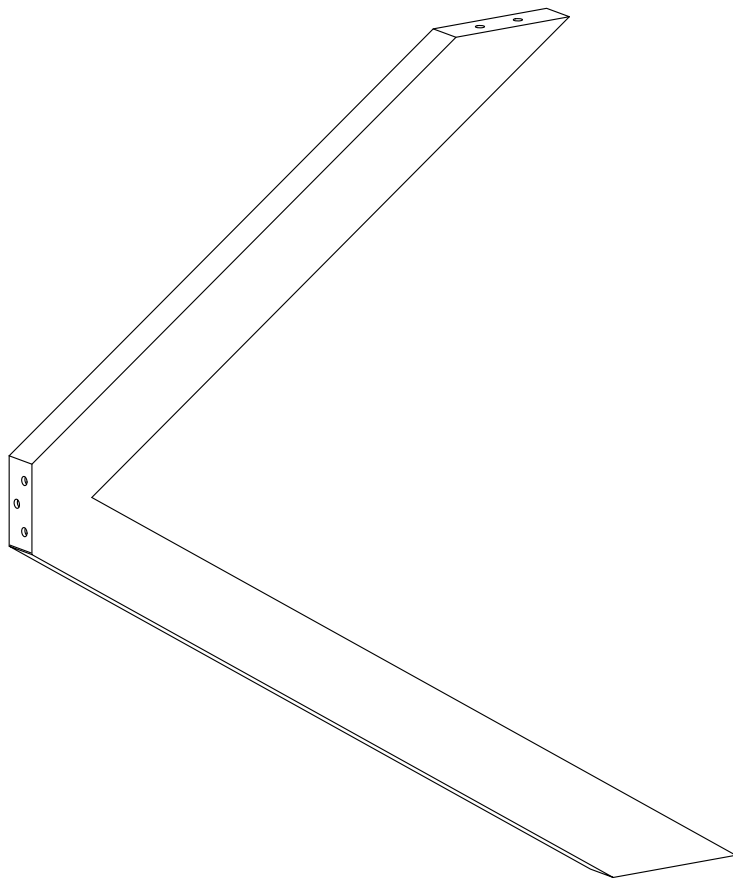

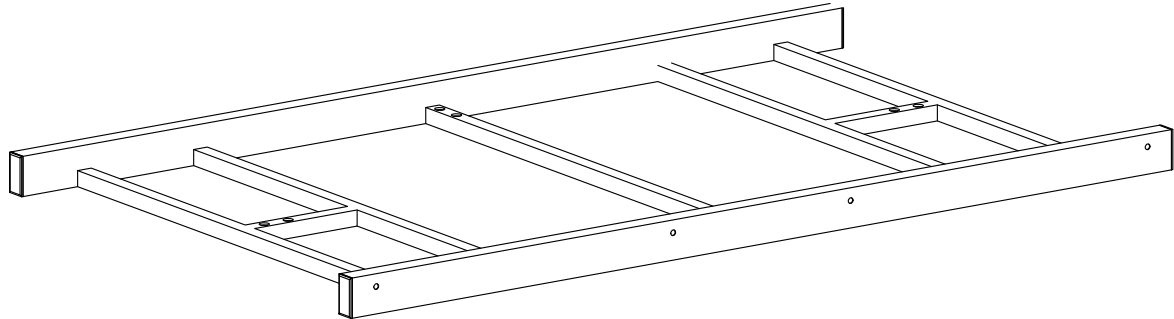
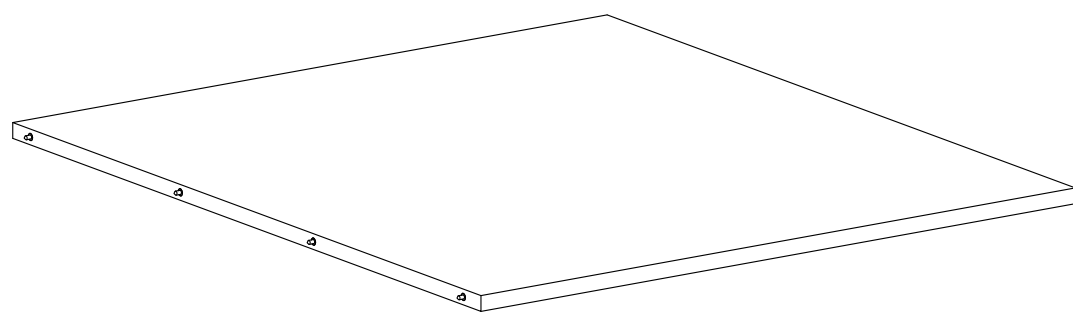
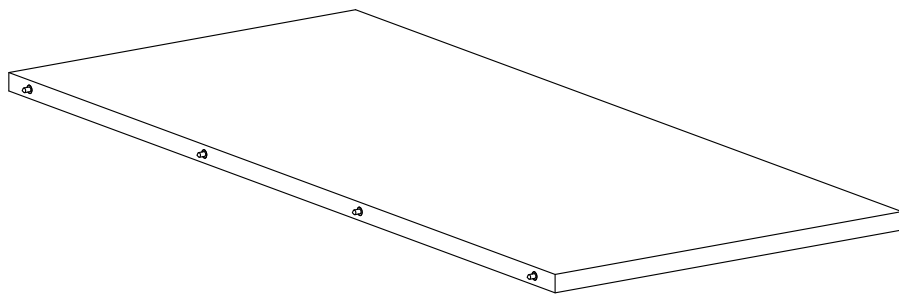
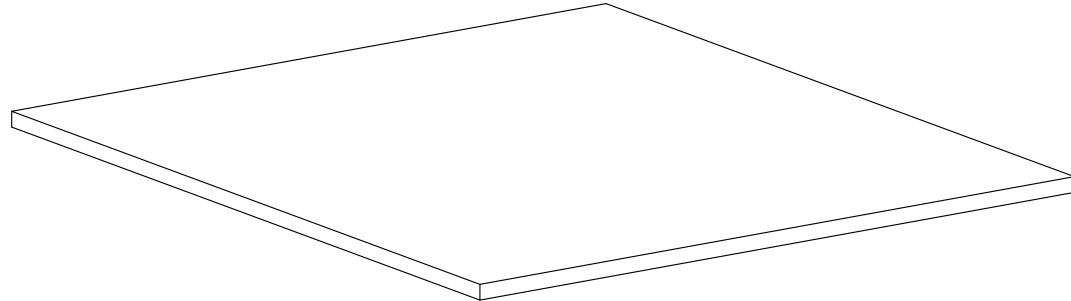
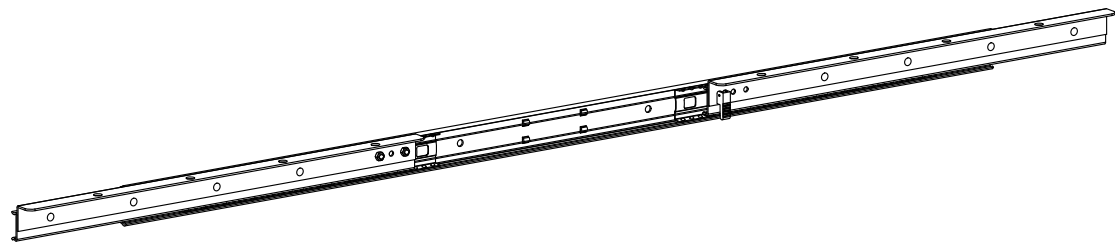
Customer Service Before Return:

If part is missing or damaged, or you need help with assembly,
Please do not hesitate to contact us.














Before Assembly

IMPORTANT NOTE:

- Make sure parts hardware are included and free or obvious Defect before disposing of any packaging
- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- DO NOT tighten all screws and bolts until completely assembled.
- Assembly will require two people.


PART LIST			
1 	2 	3 	4 
2PCS	2PCS	2PCS	1PC
5 	6 	7 	8 
1PC	1PC	1PC	2PCS

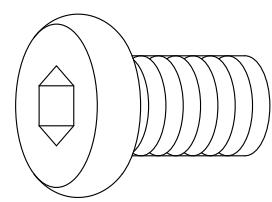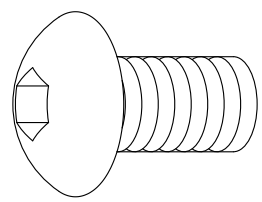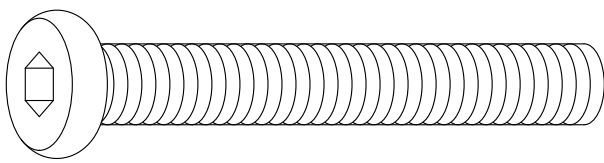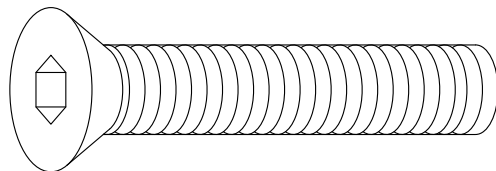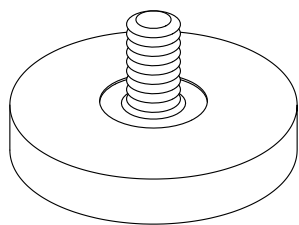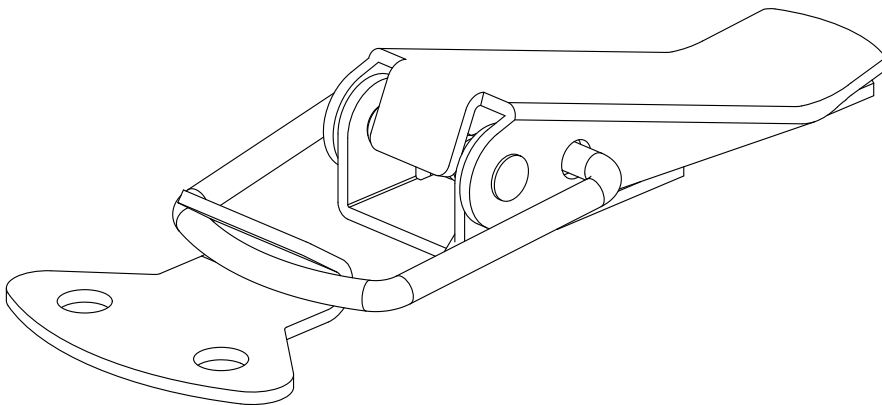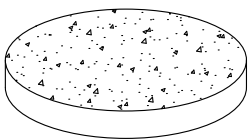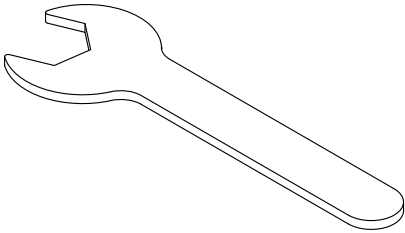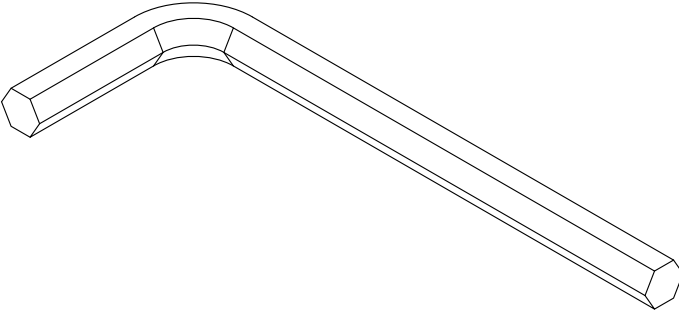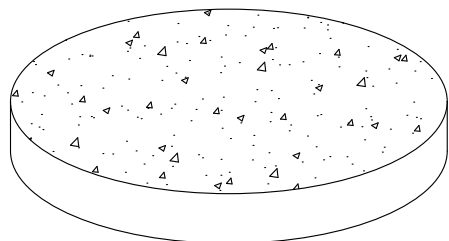HARDWARE LIST

A  M6 x 12mm 14PCS	B  M6 x 12mm 16PCS	C  M6 x 50mm 4PCS	D  M6 x 30mm 8PCS
E  Ø4 x 12mm 16PCS	F  M6 4PCS	G  M6 4PCS	H  Ø30 4PCS
J  4PCS	K  Ø15mm 9PCS	L  10mm 1PC	M  4mm 2PCS
N  Ø30mm 4PCS			

IMPORTANT NOTE:

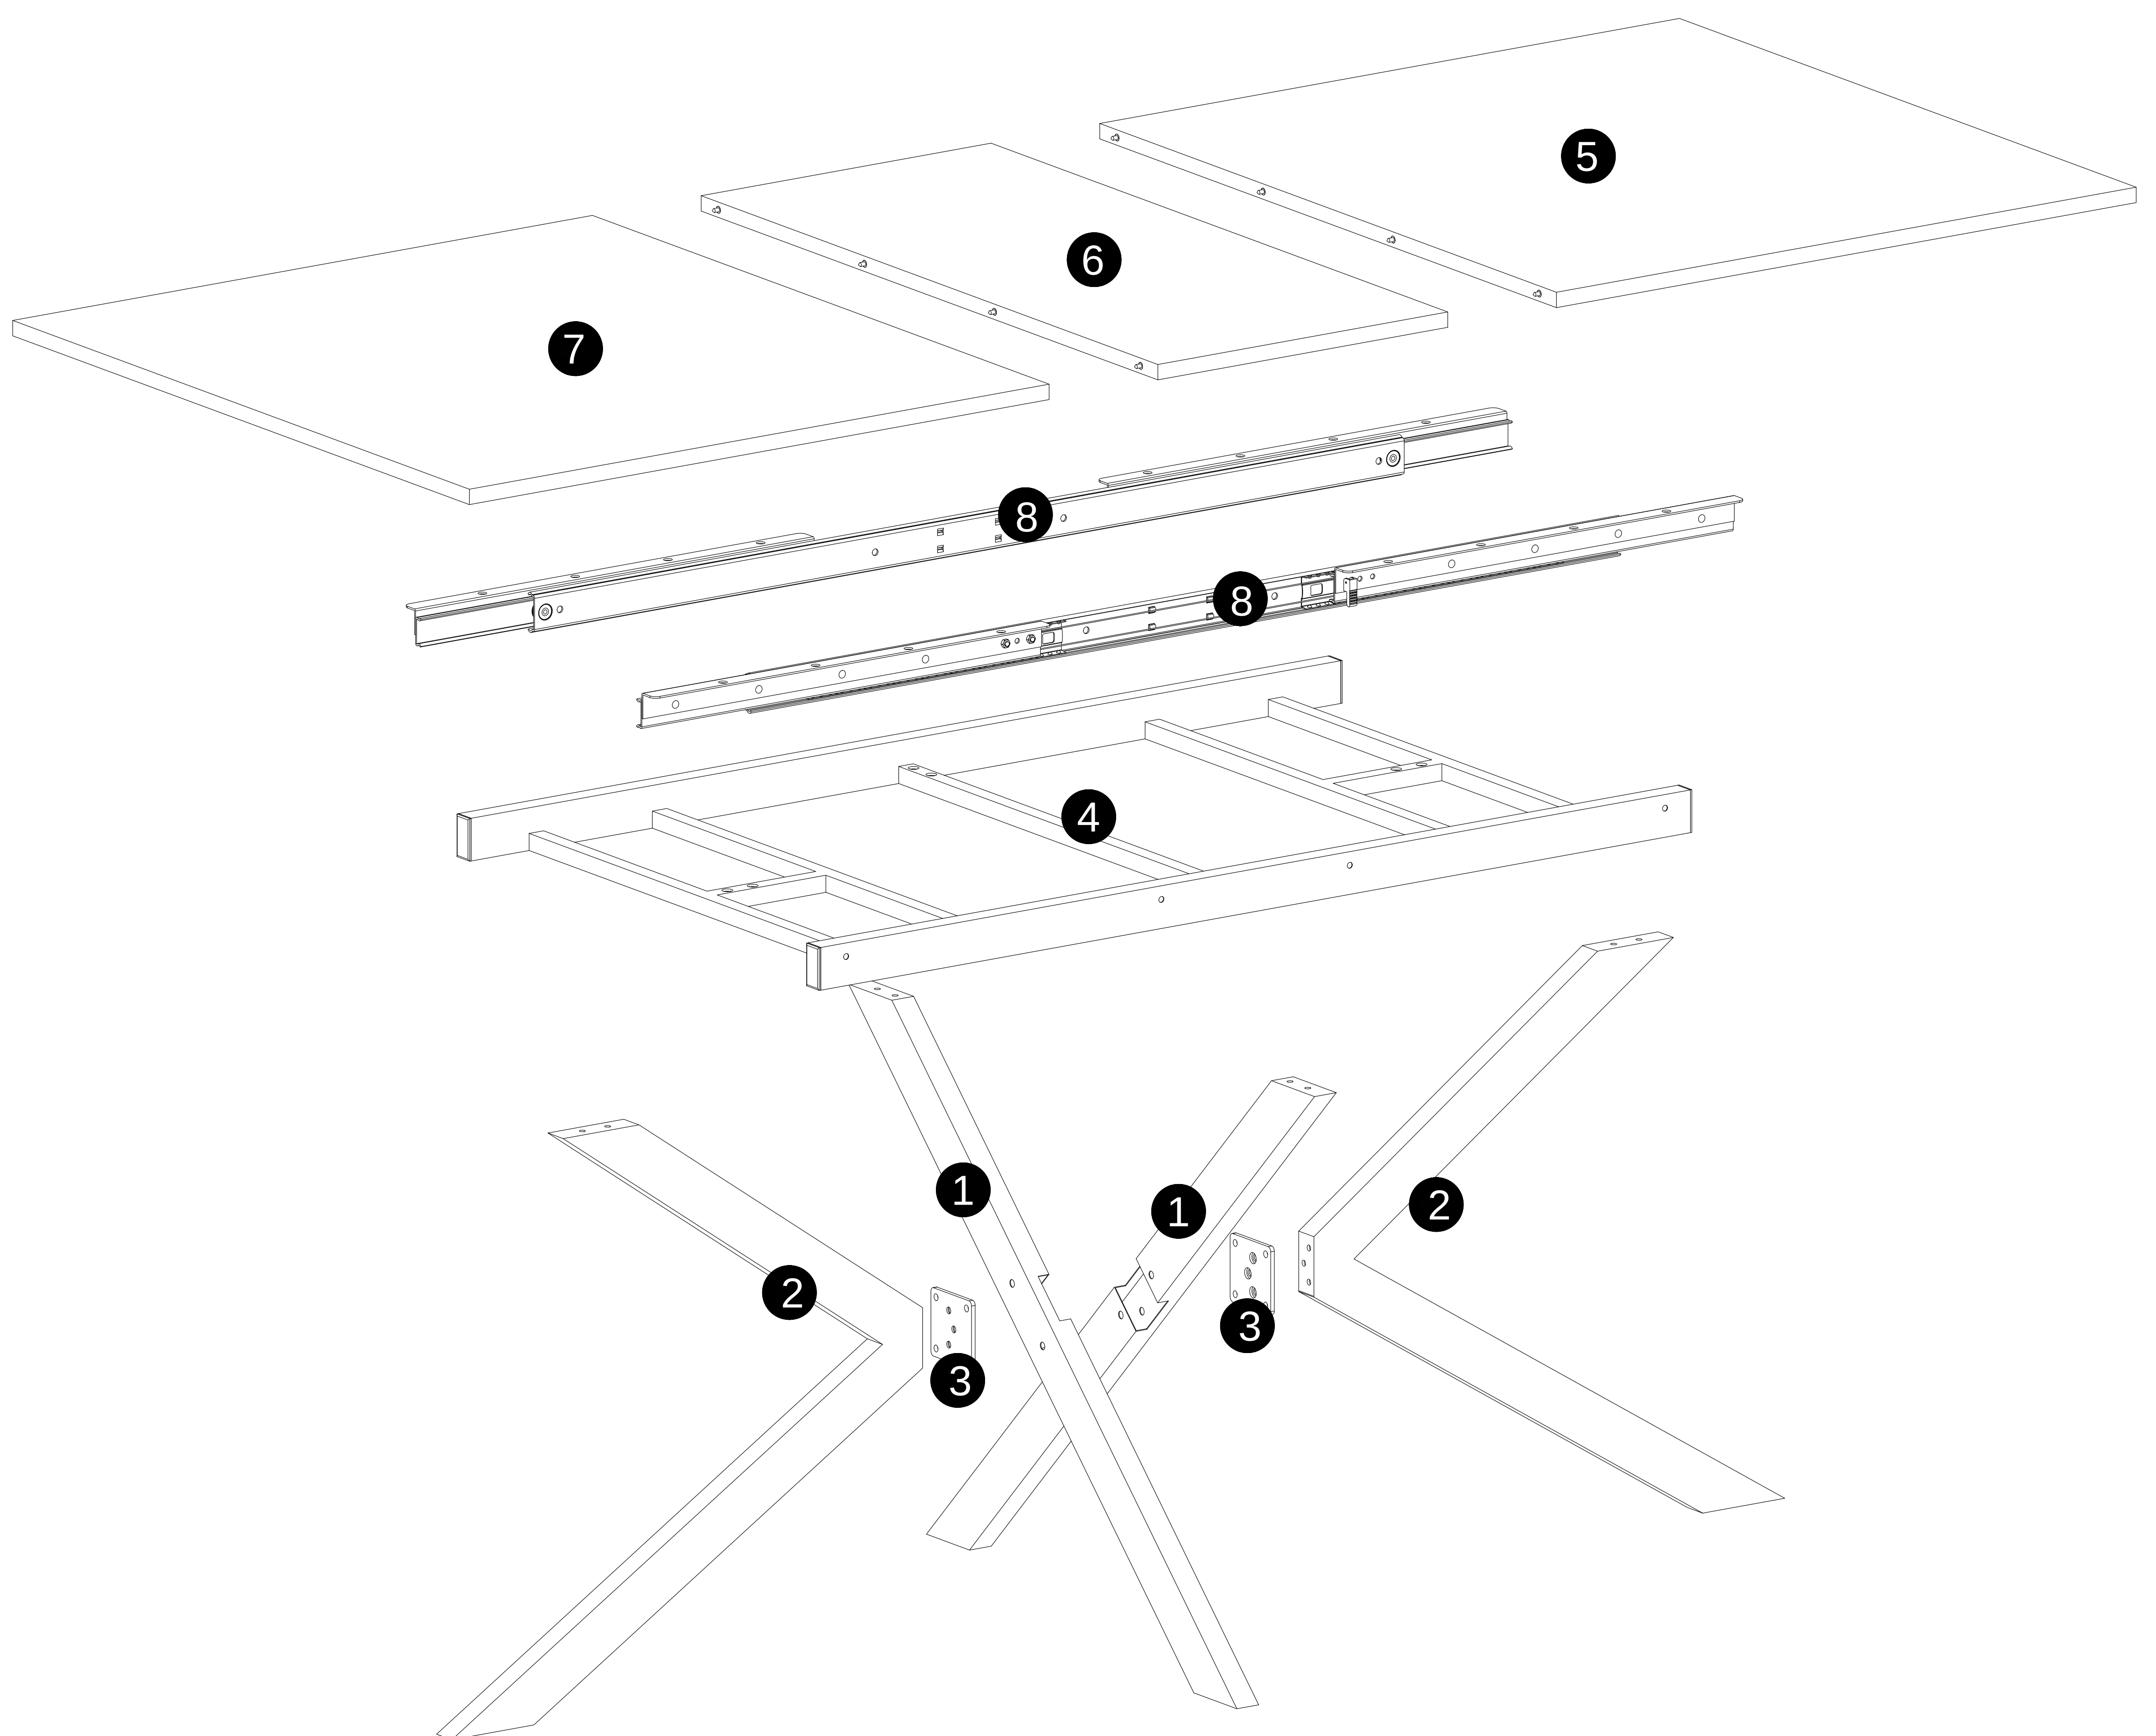
- Make sure parts hardware are included and free of obvious defect before disposing of any packaging
- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- DO NOT tighten all screws and bolts until completely assembled.
- Assembly will require two people.



NOTED:


- 1.Do not fully tighten all bolts unti al parts are in place.Failure to folow theseinstructions may cause the bolt to misalign during assembly.
- 2.To prevent injury and property damaged from unexpected tipping of furniture,we highlyrecommend installation of the anti-tip kit included with this product.

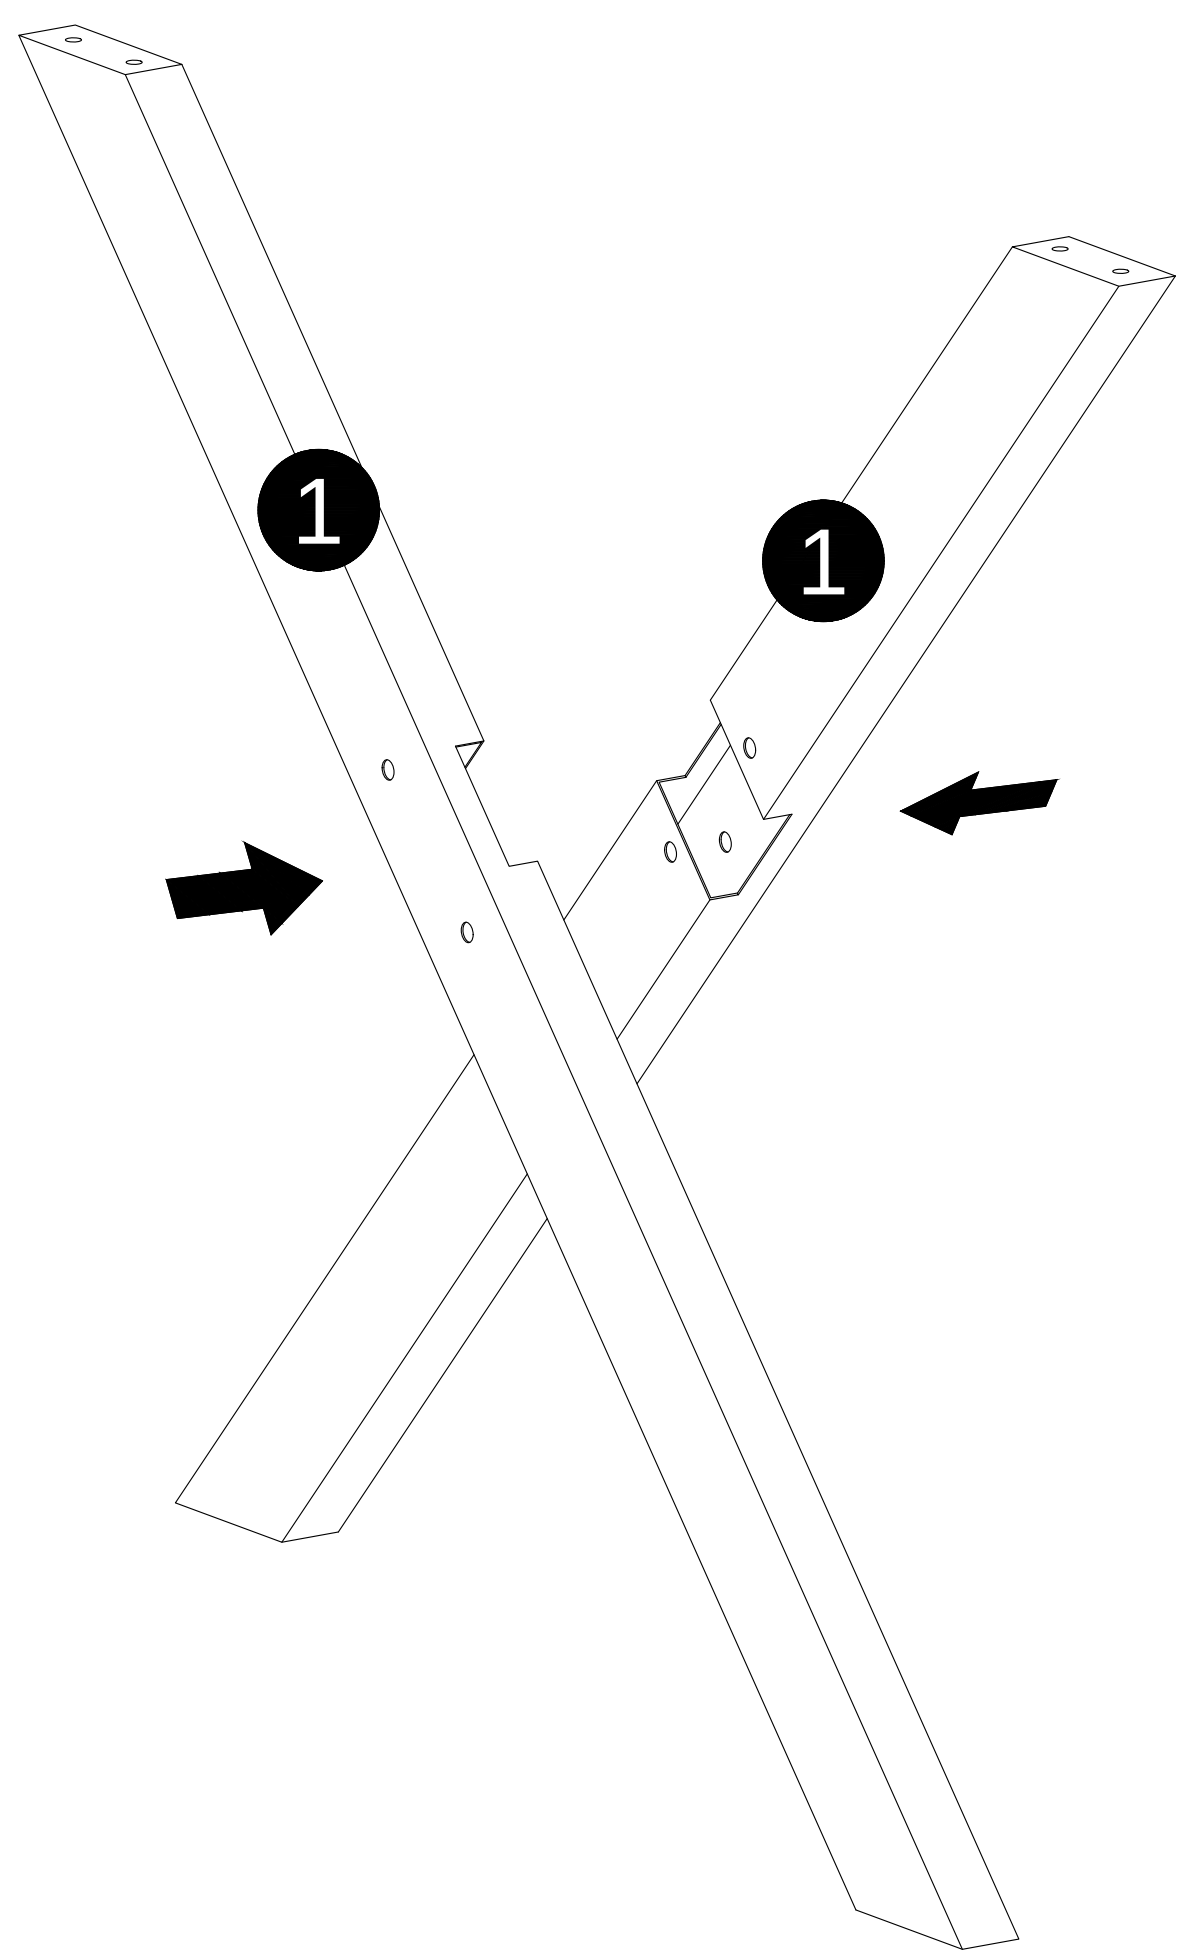Step 1




Step 2

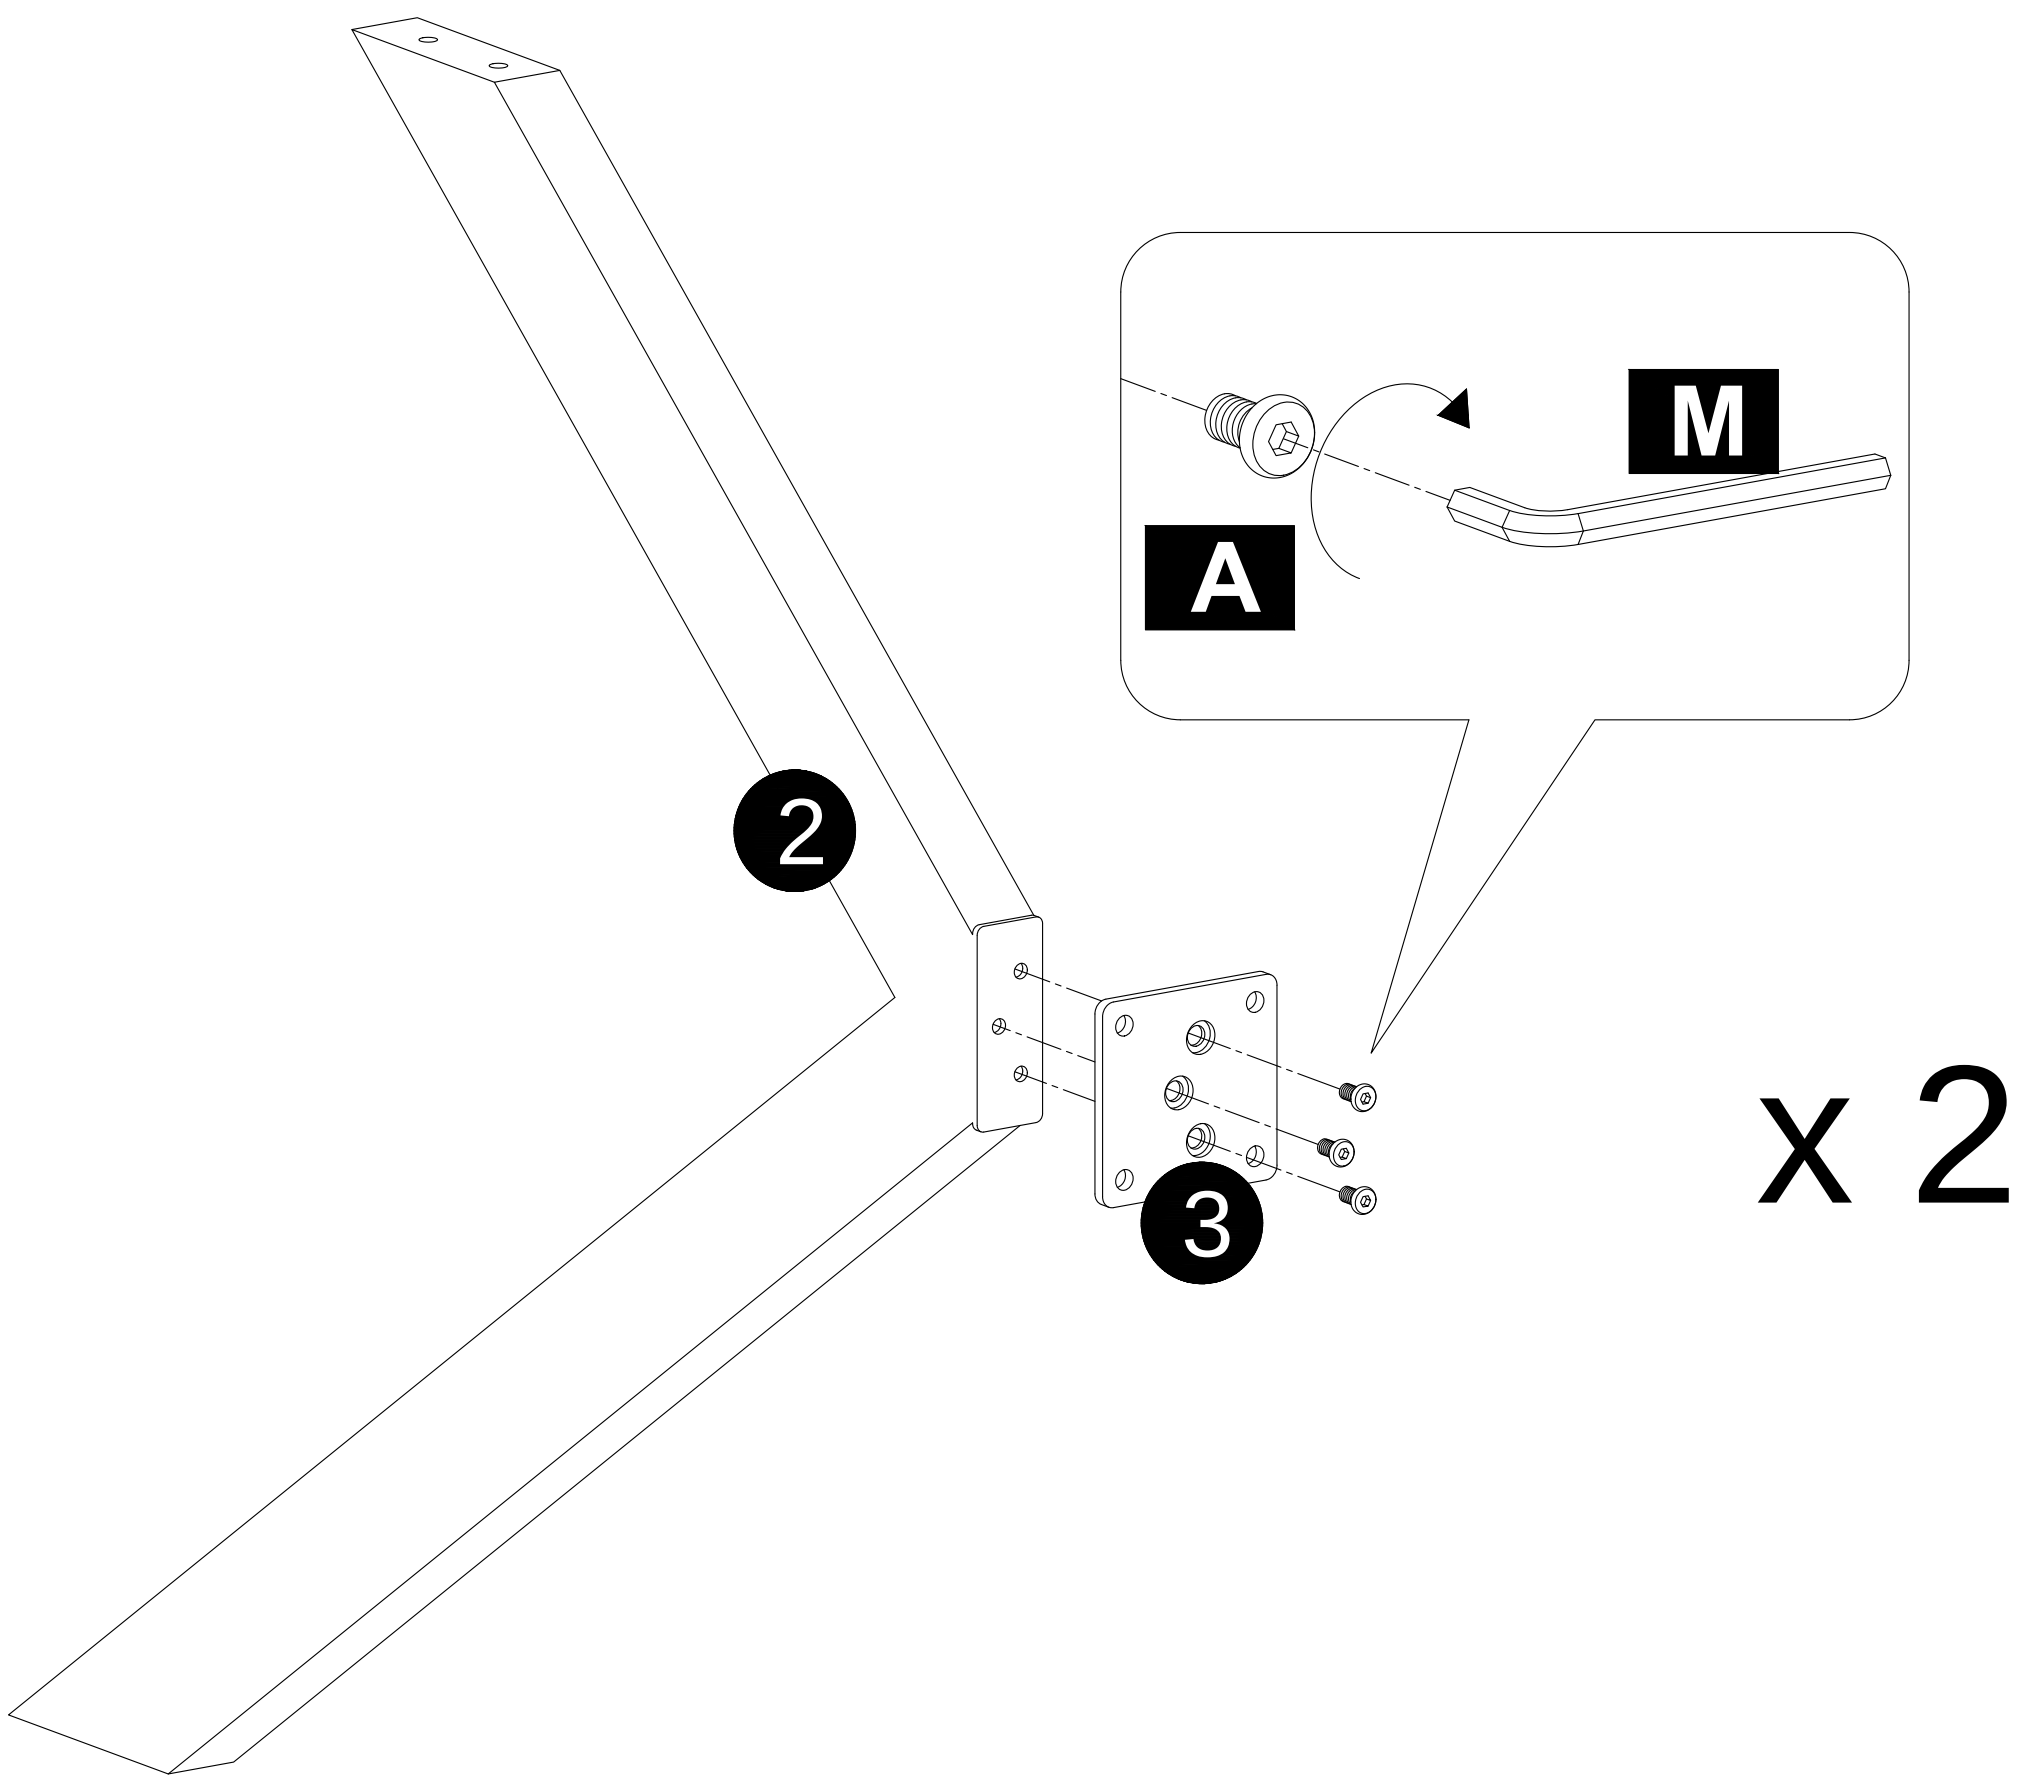YOU WILL NEED
Ax6



Step 3

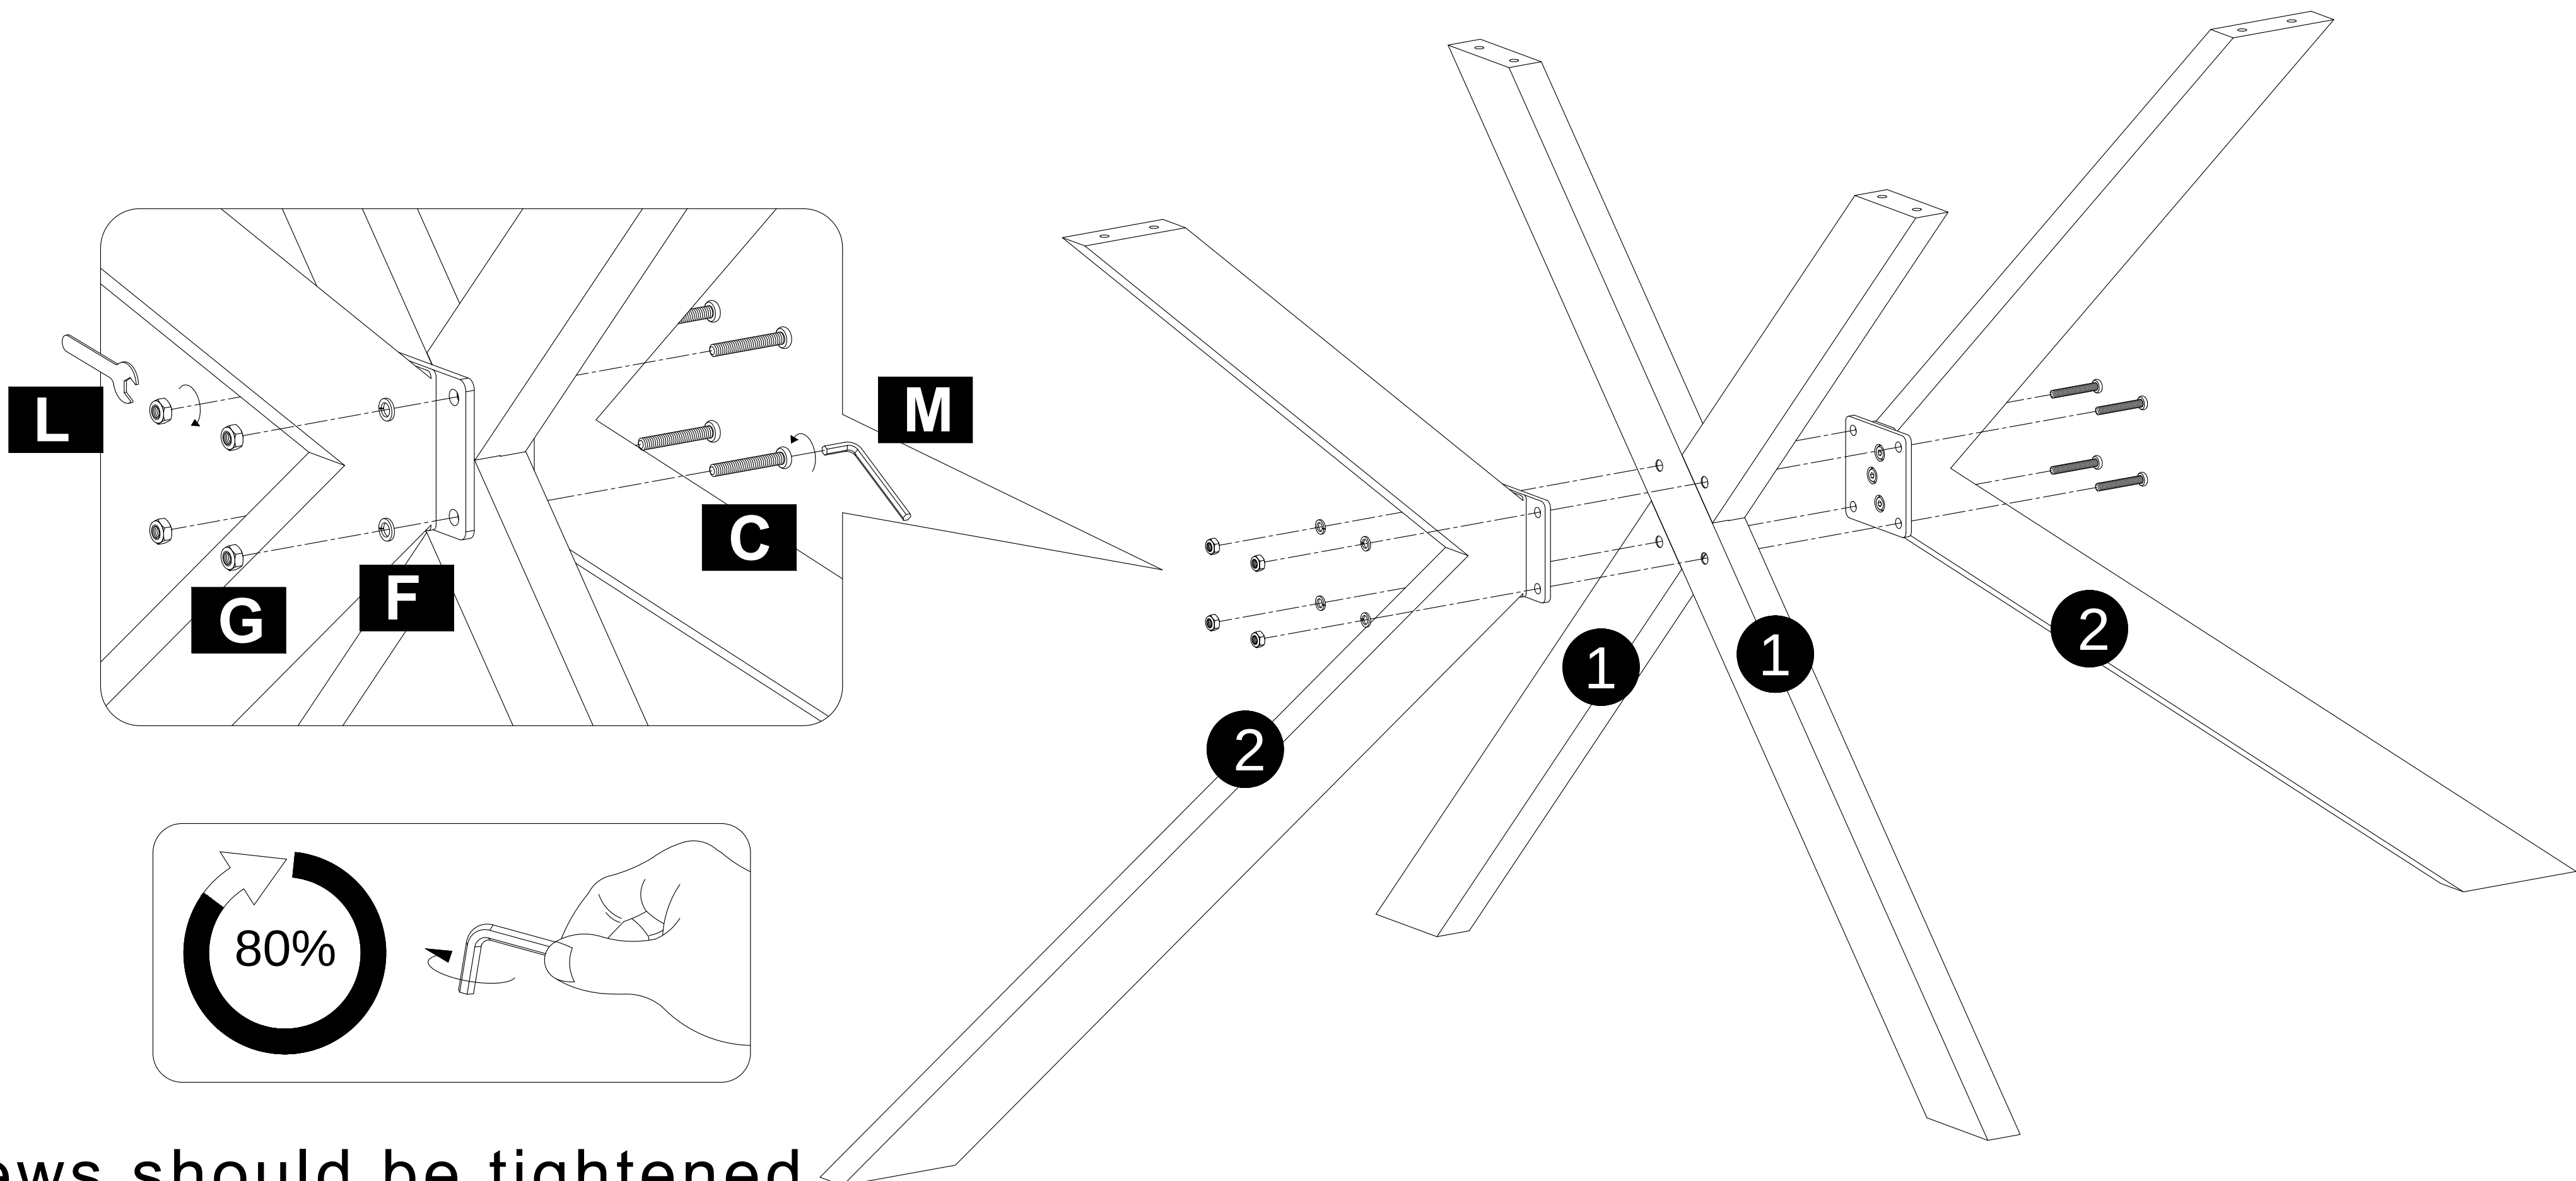
YOU WILL NEED
Cx4 / Fx4 / Gx4



The screws should be tightened to about 80%, not fully tightened.


Step 4

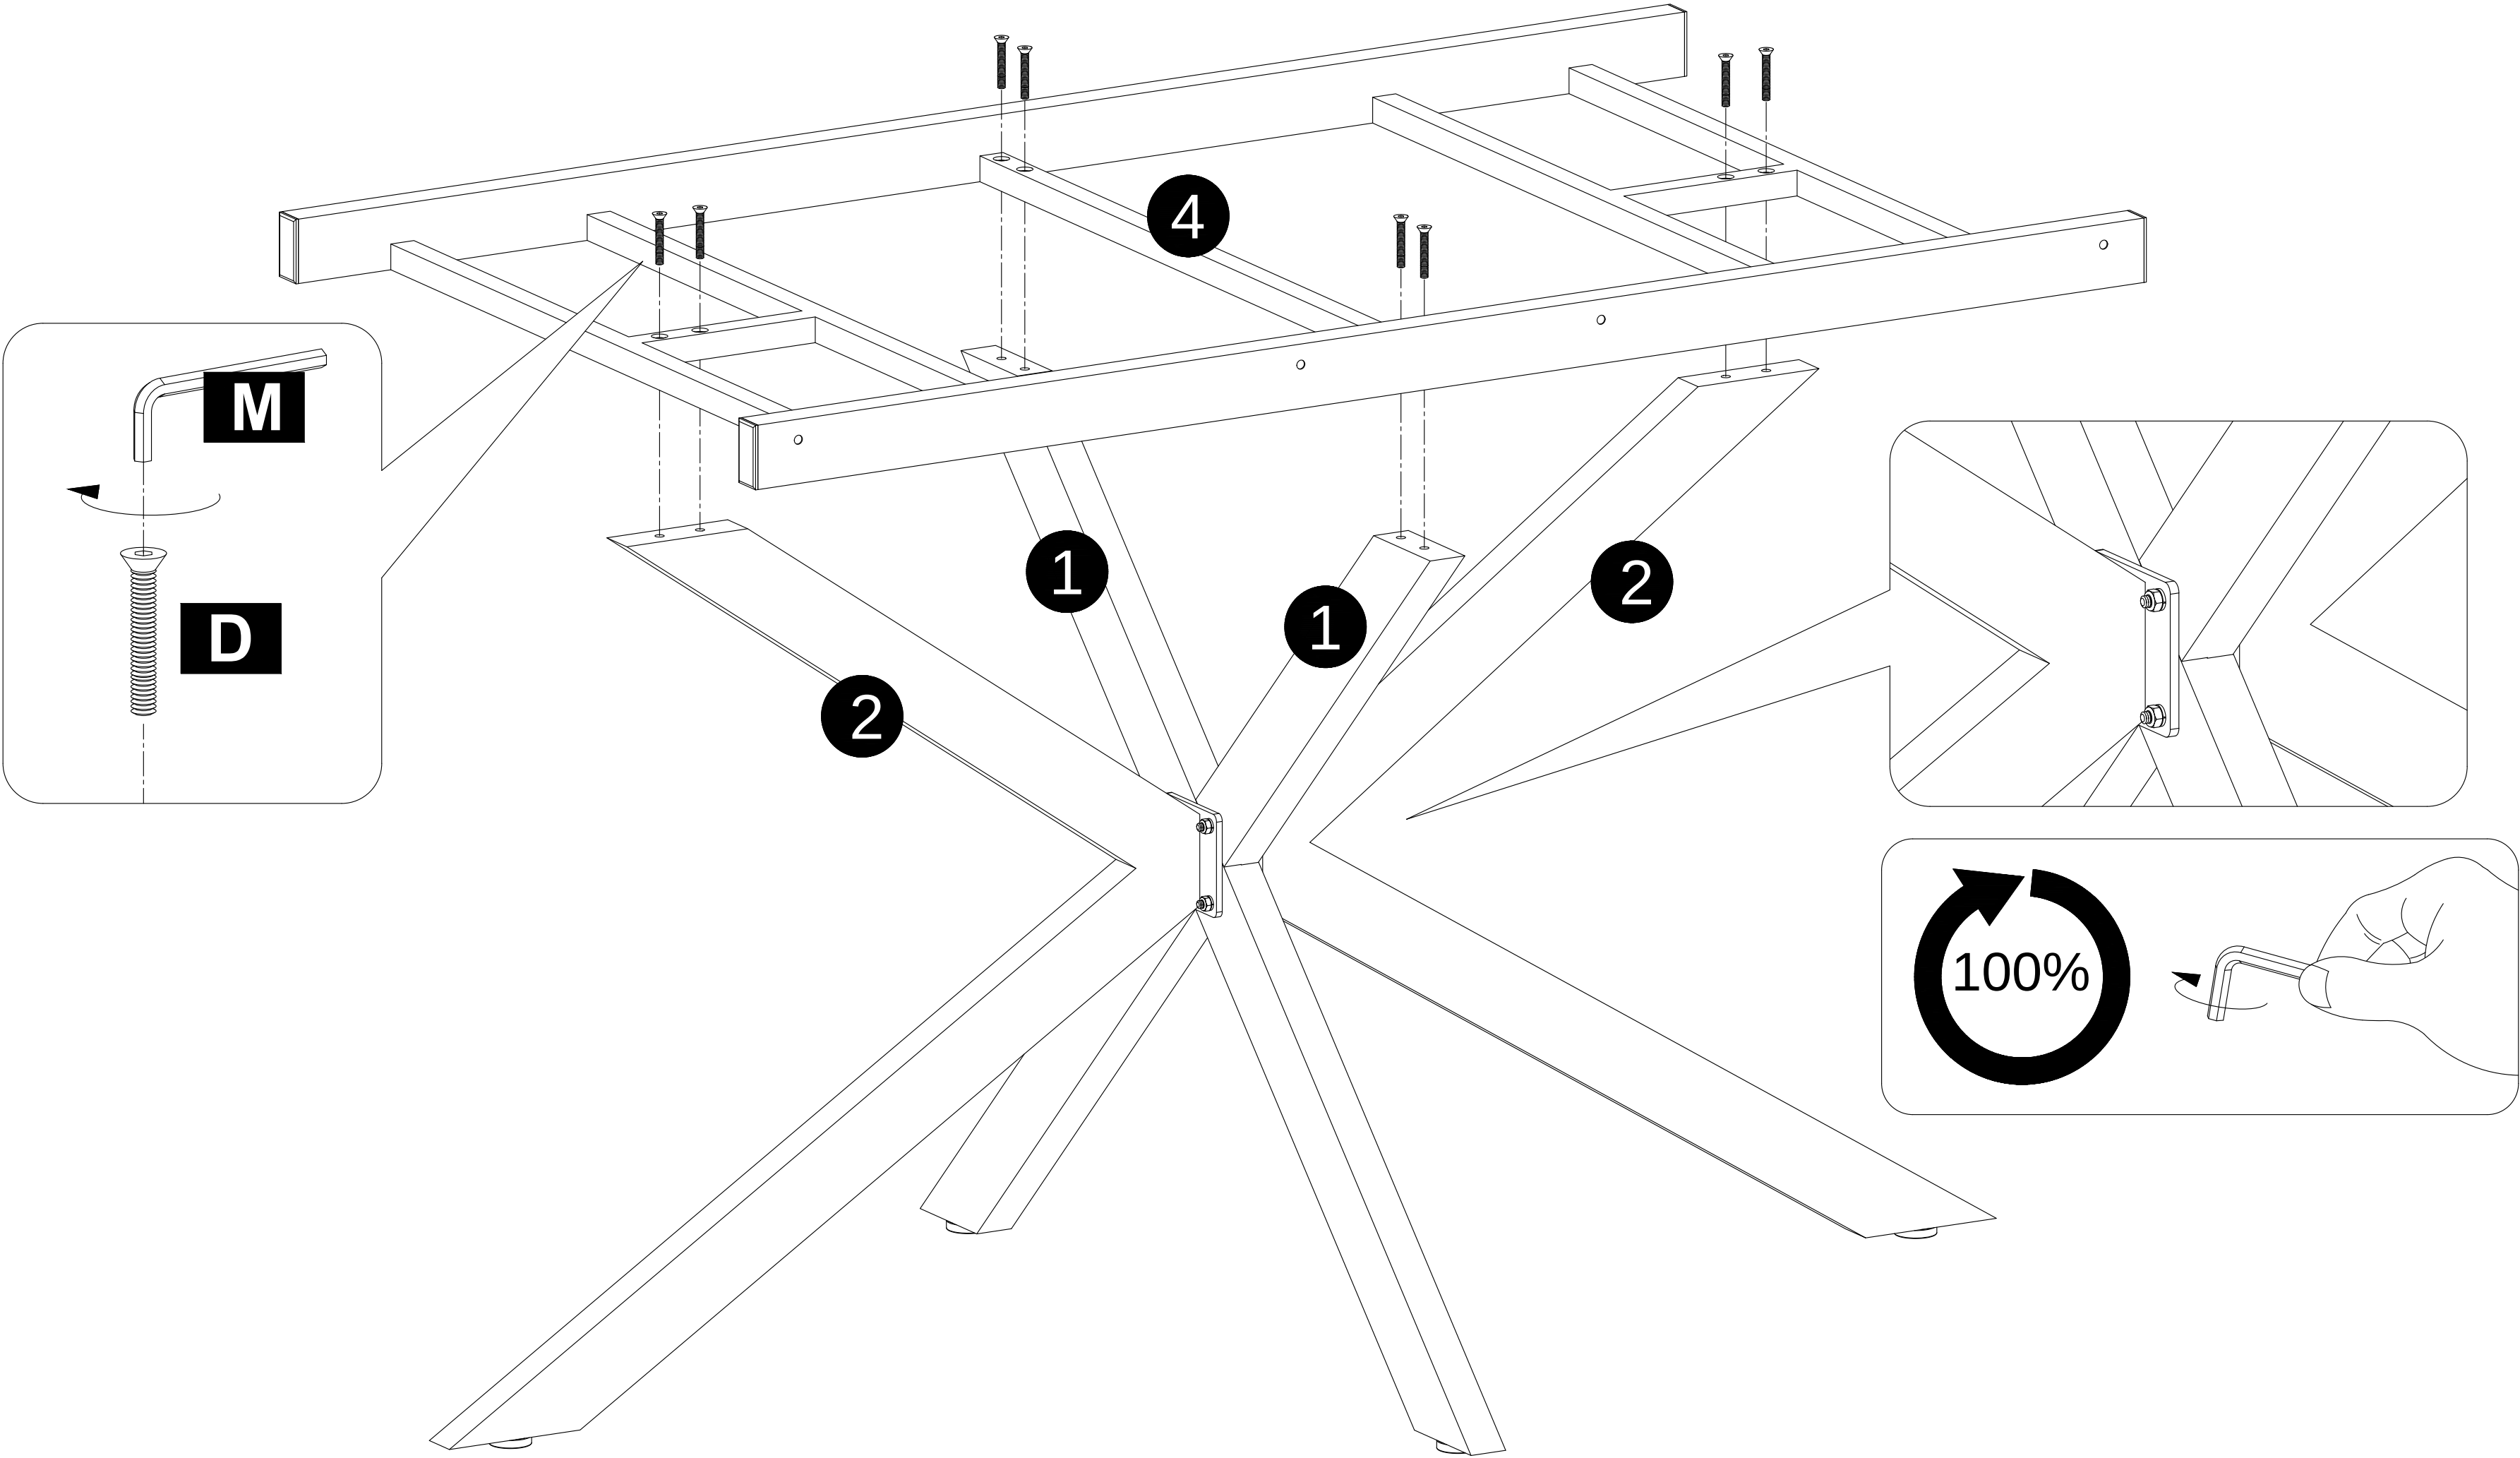YOU WILL NEED
Dx8



Step 5

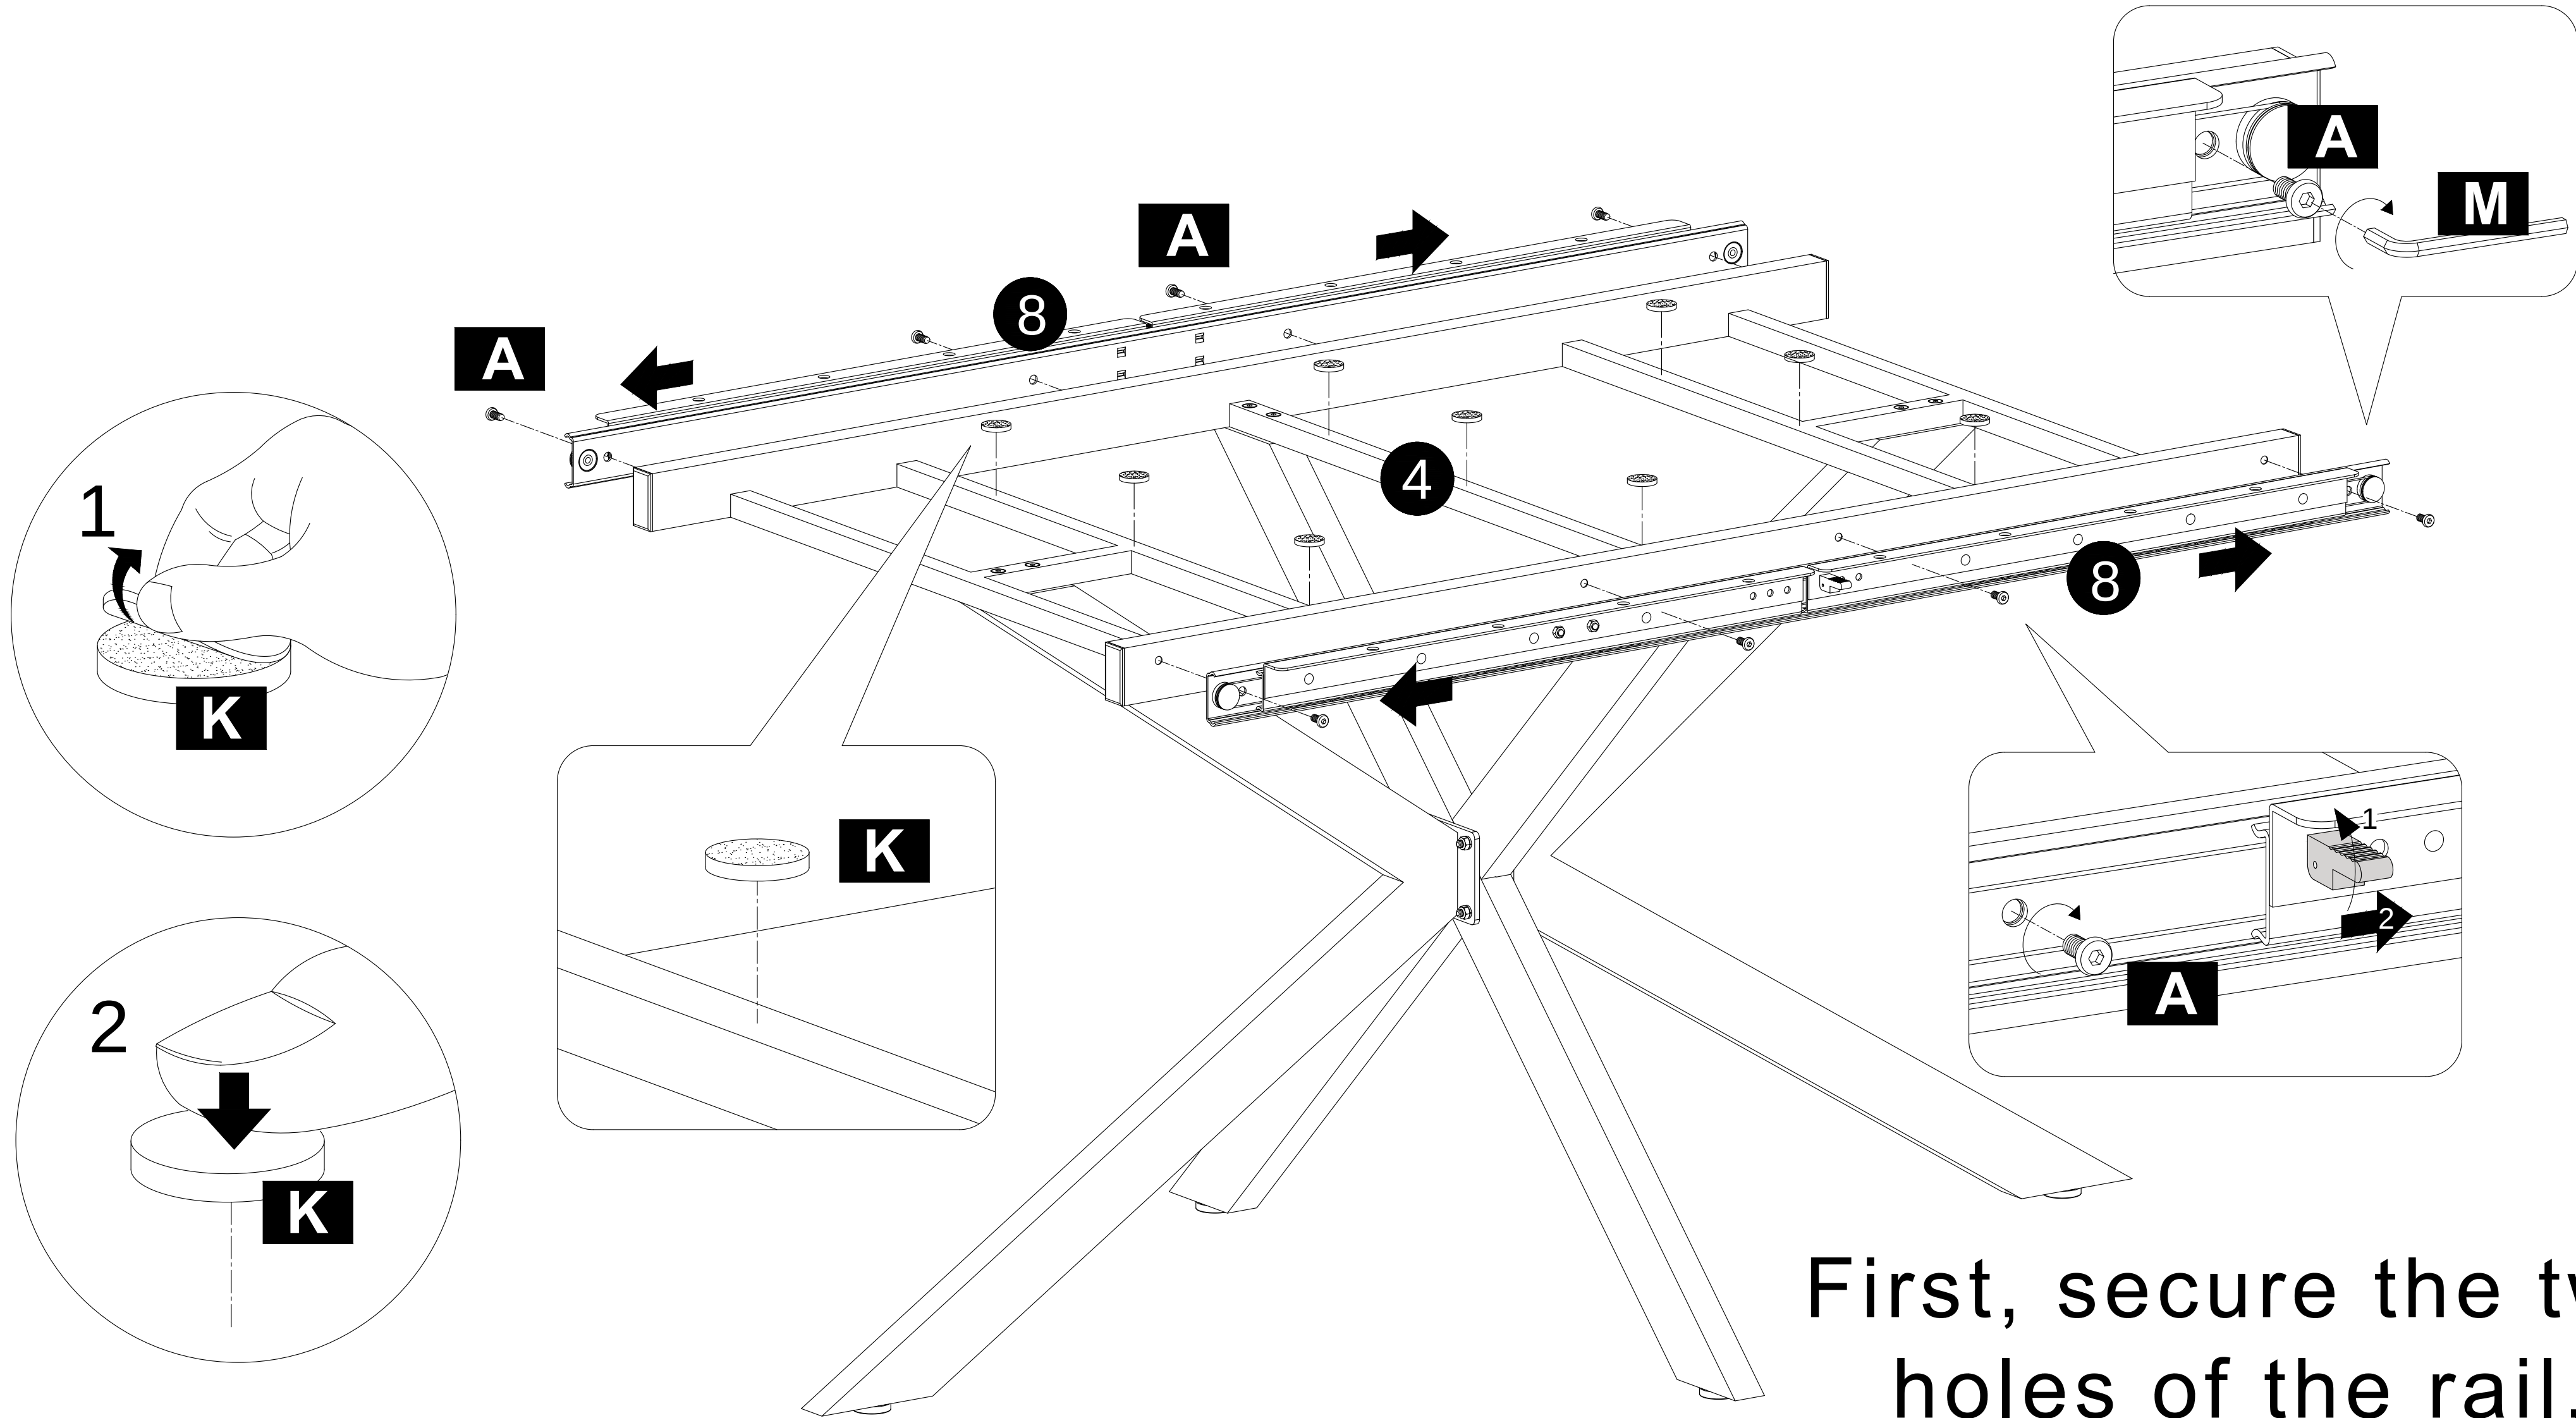
YOU WILL NEED
Ax8 / Kx9



First, secure the two side holes of the rail, then slide open the rail and lock the two middle holes.


Step 6

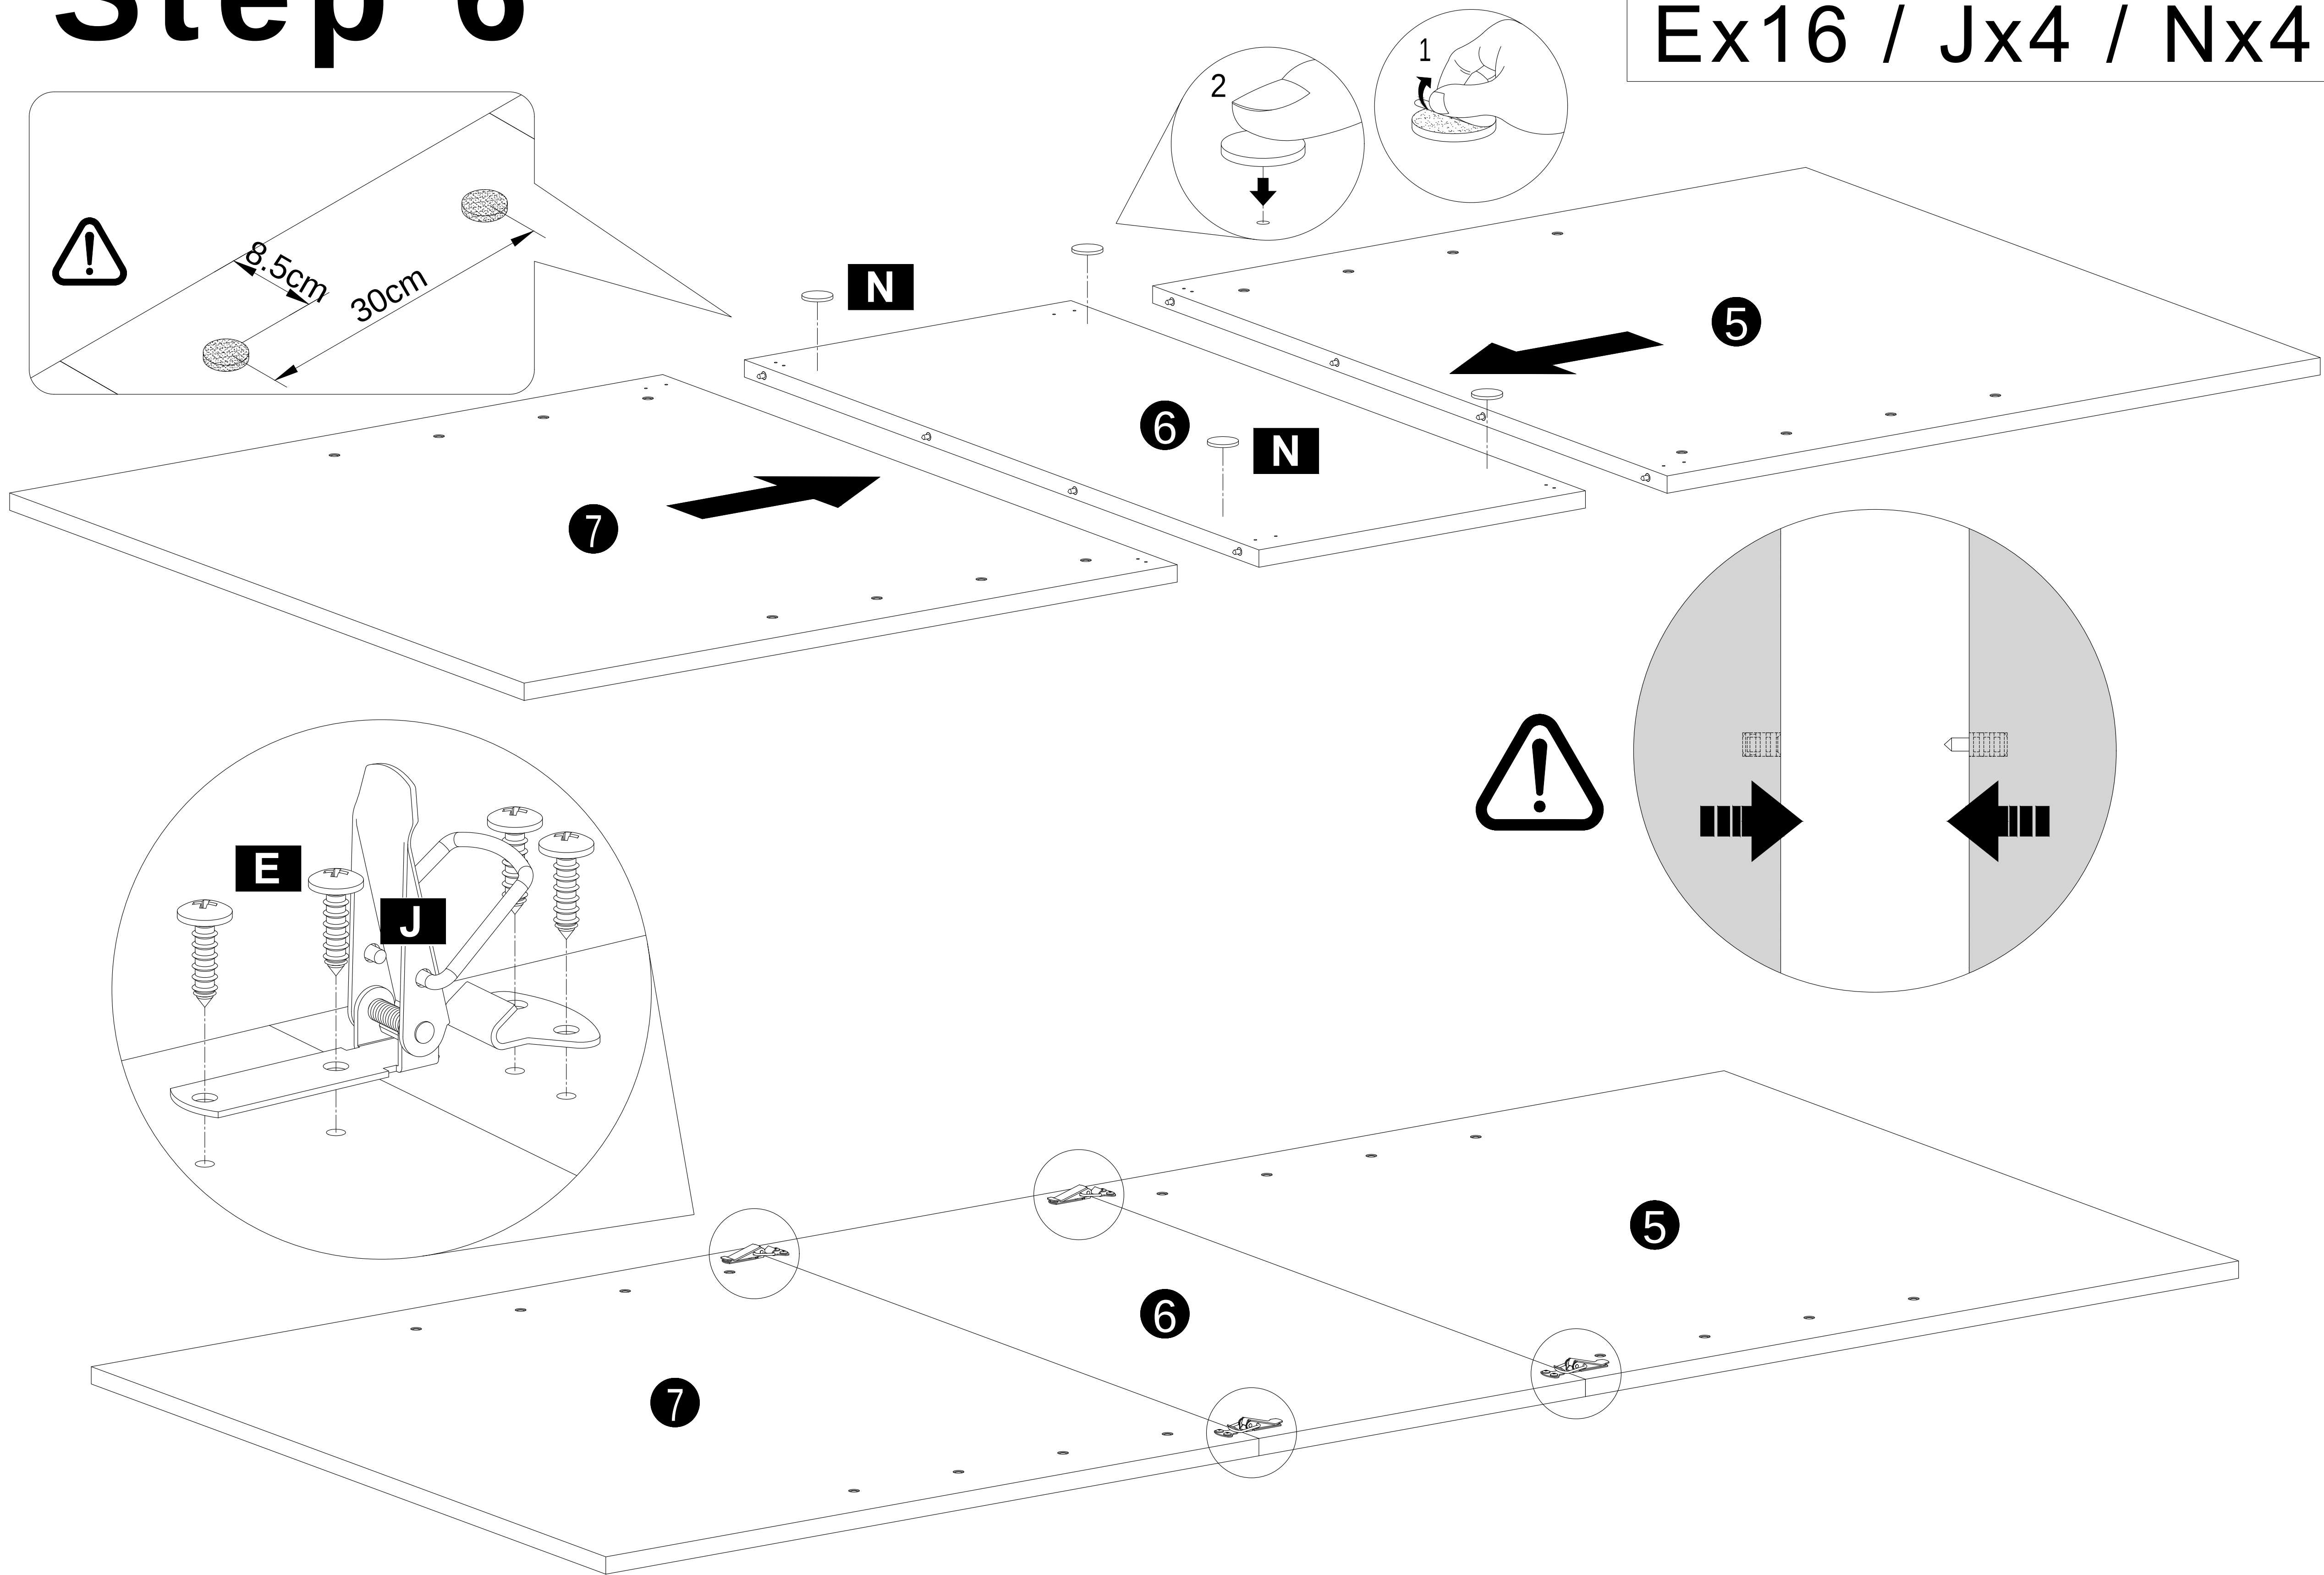YOU WILL NEED
Ex16 / Jx4 / Nx4




Step 7

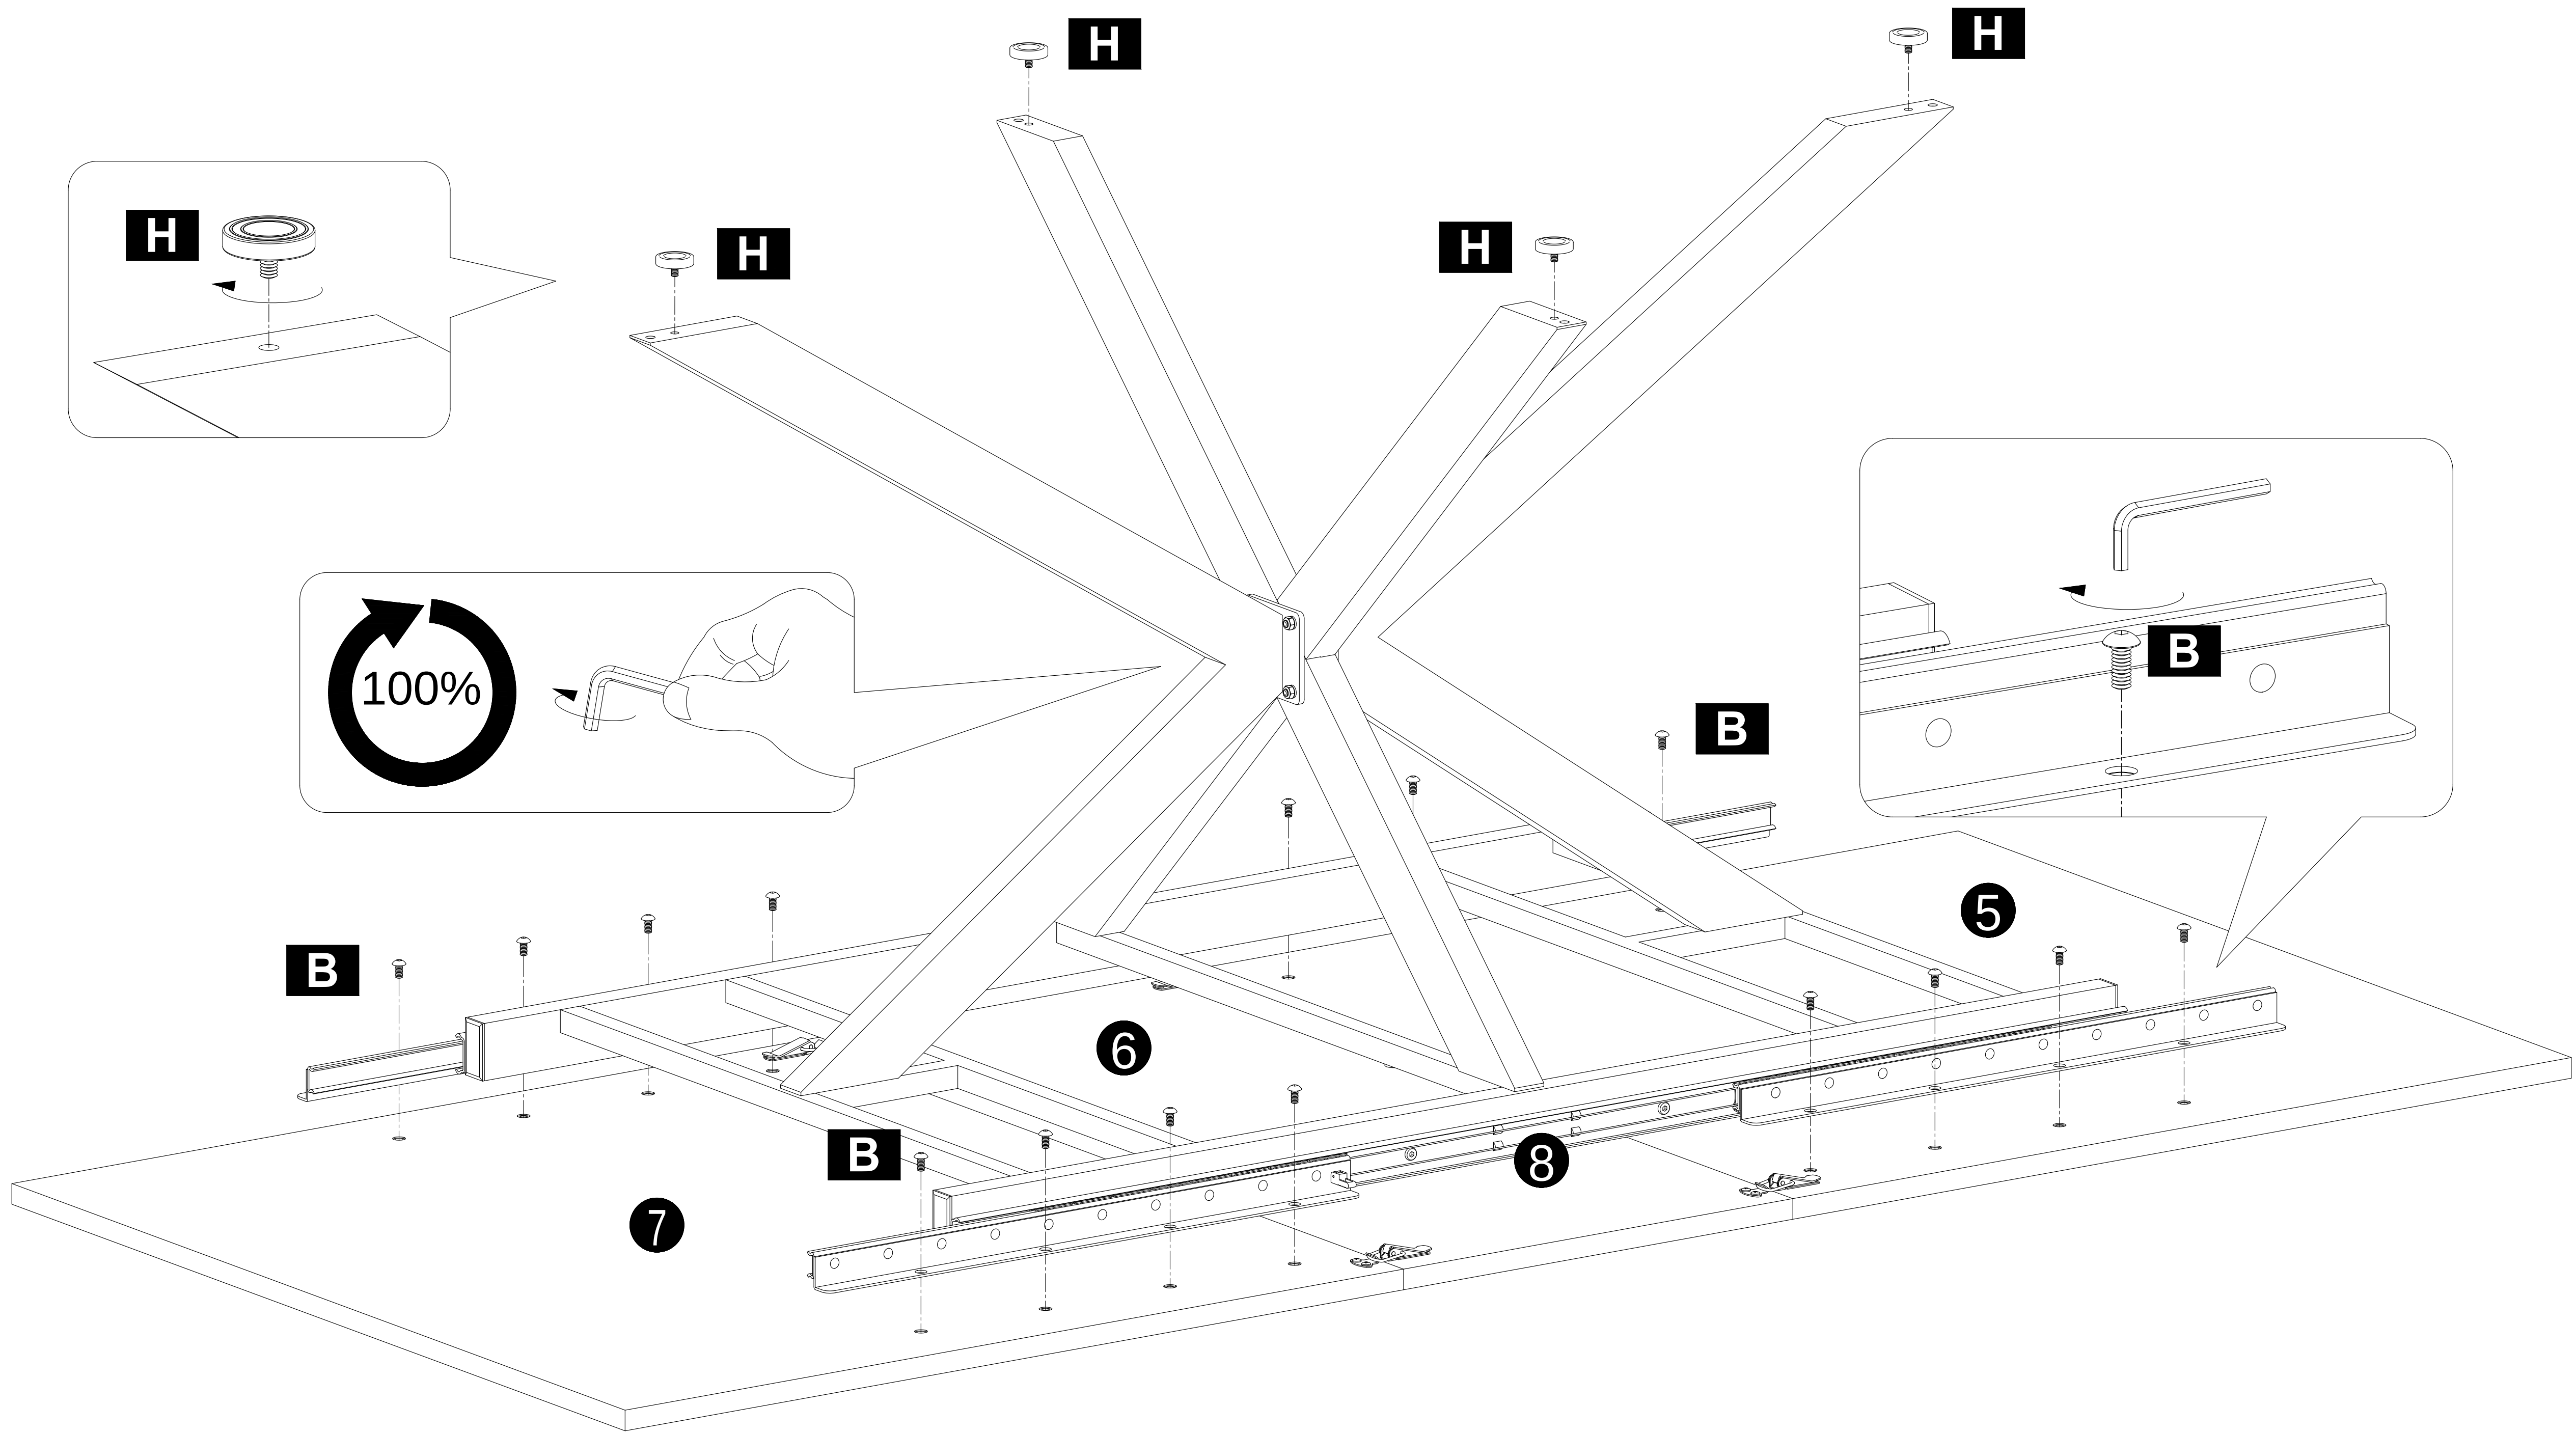YOU WILL NEED
Bx16 / Hx4



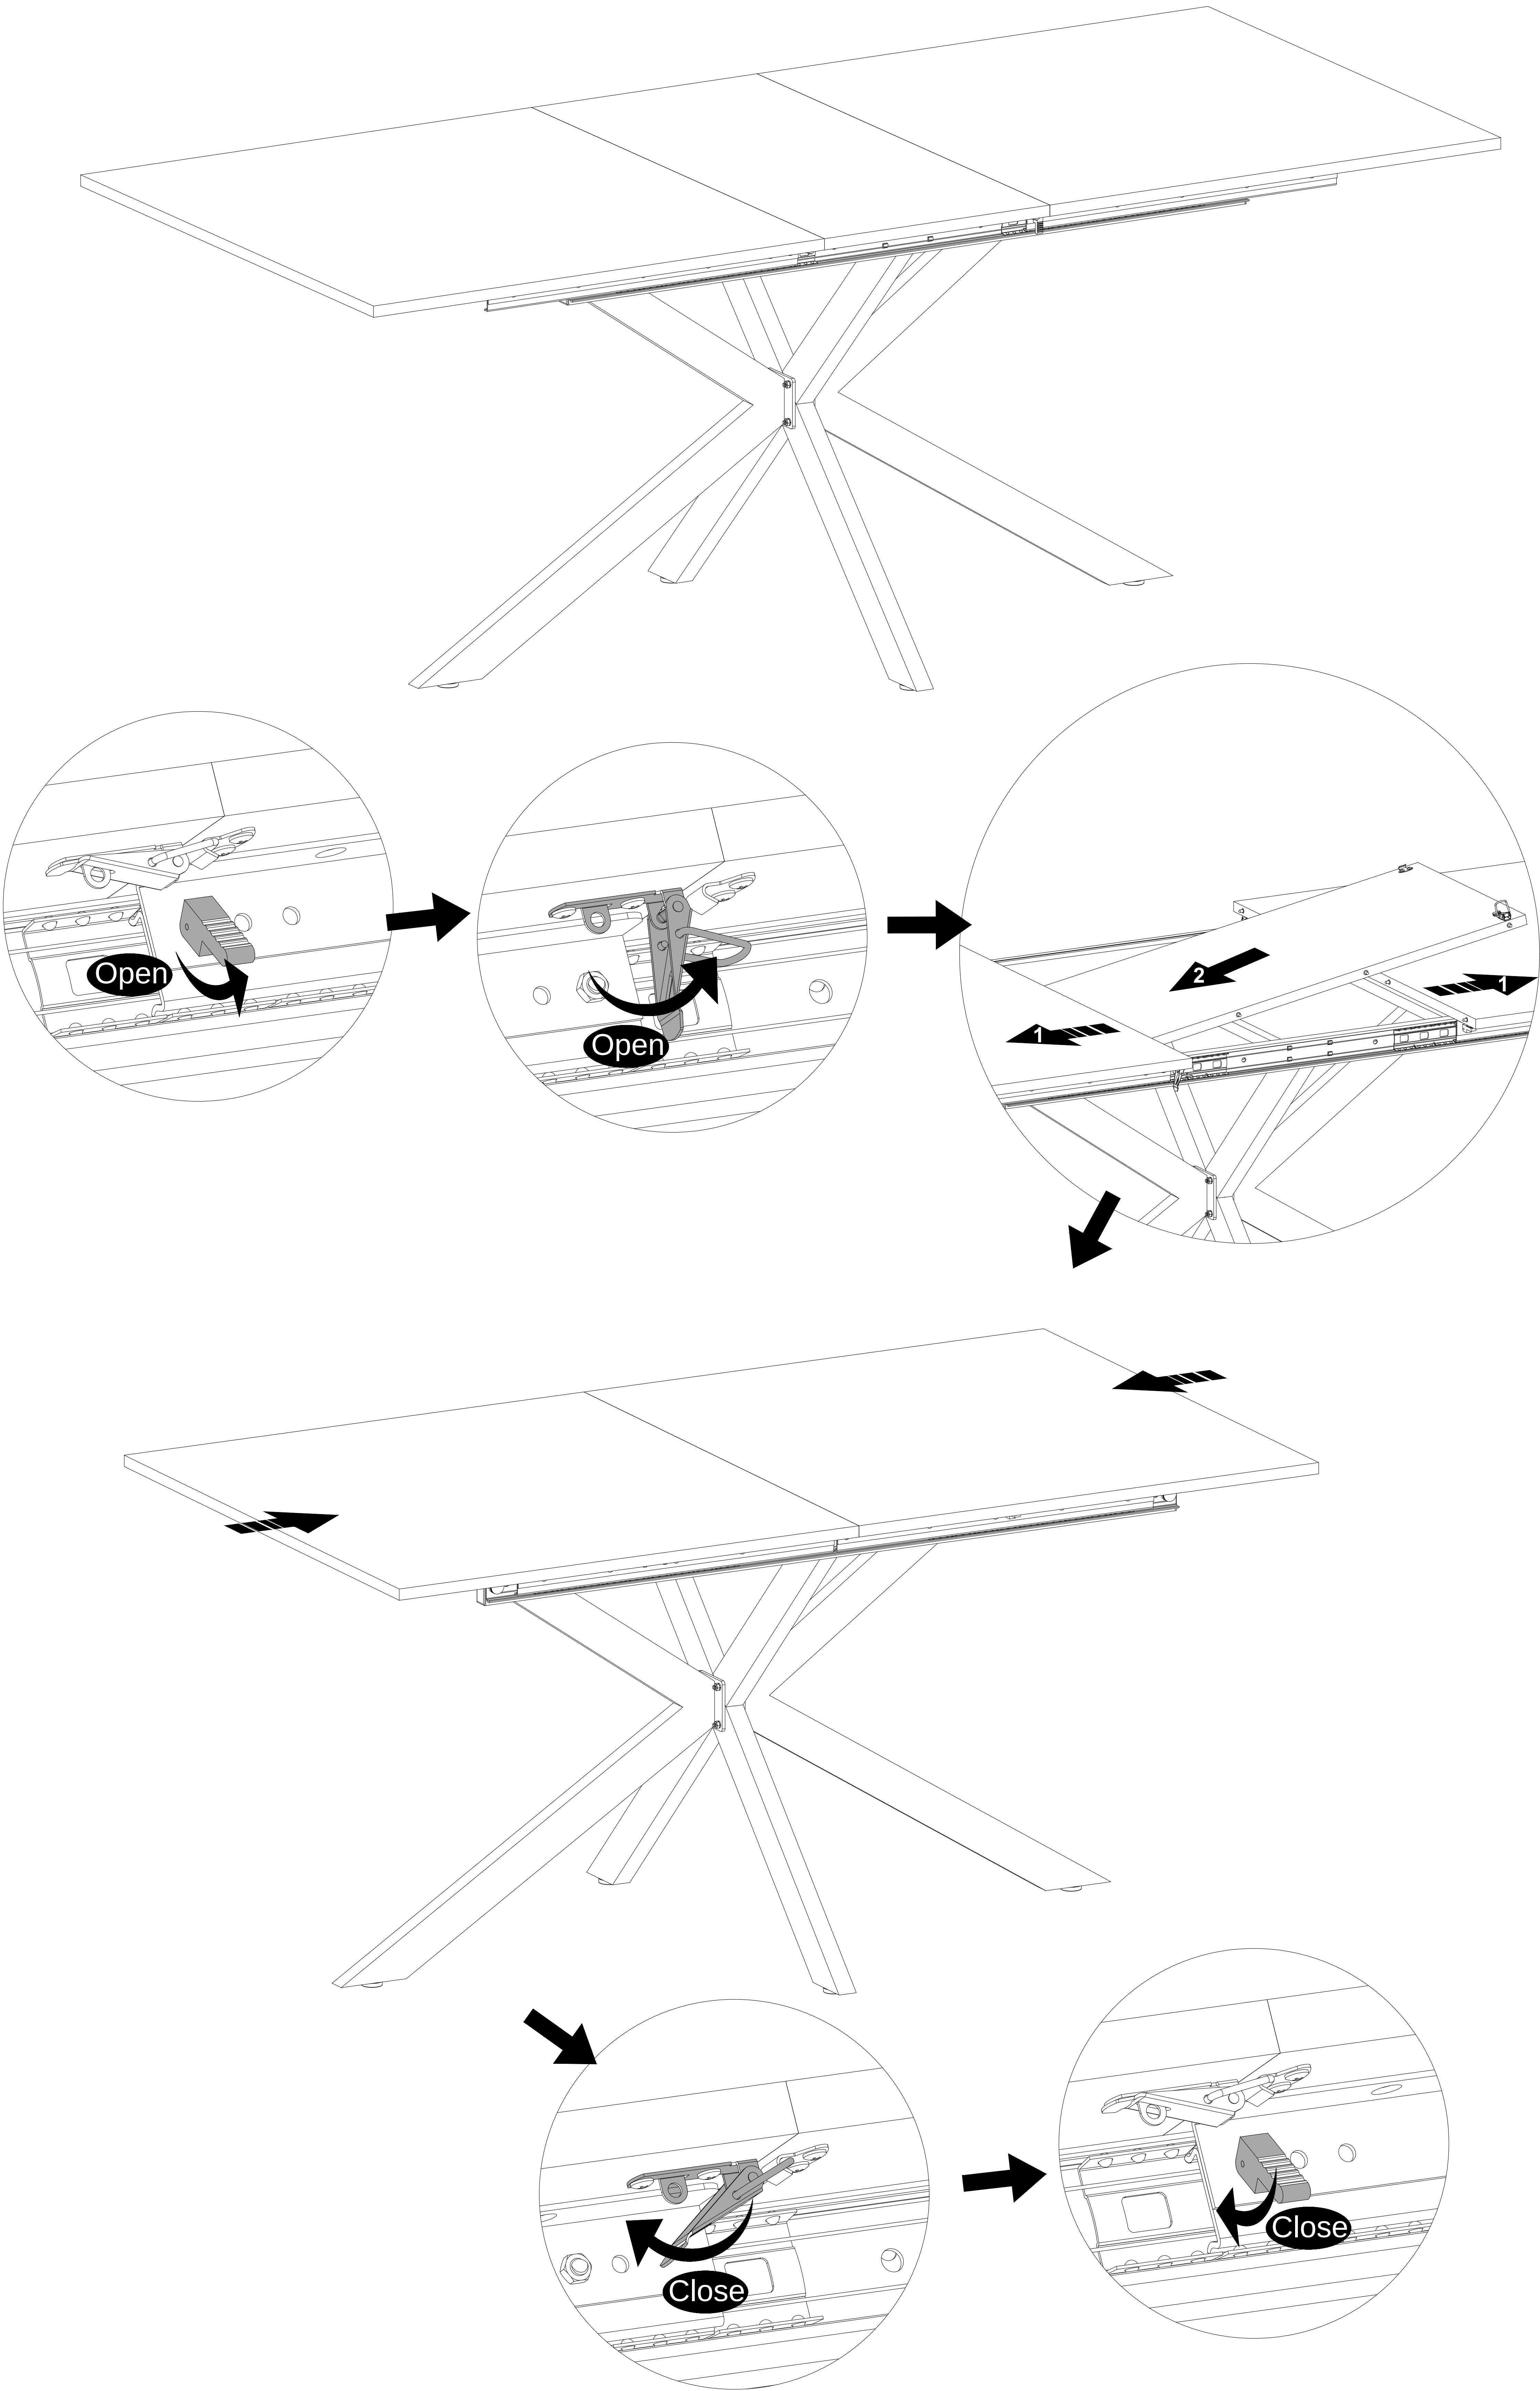Step 8



Step 9

