

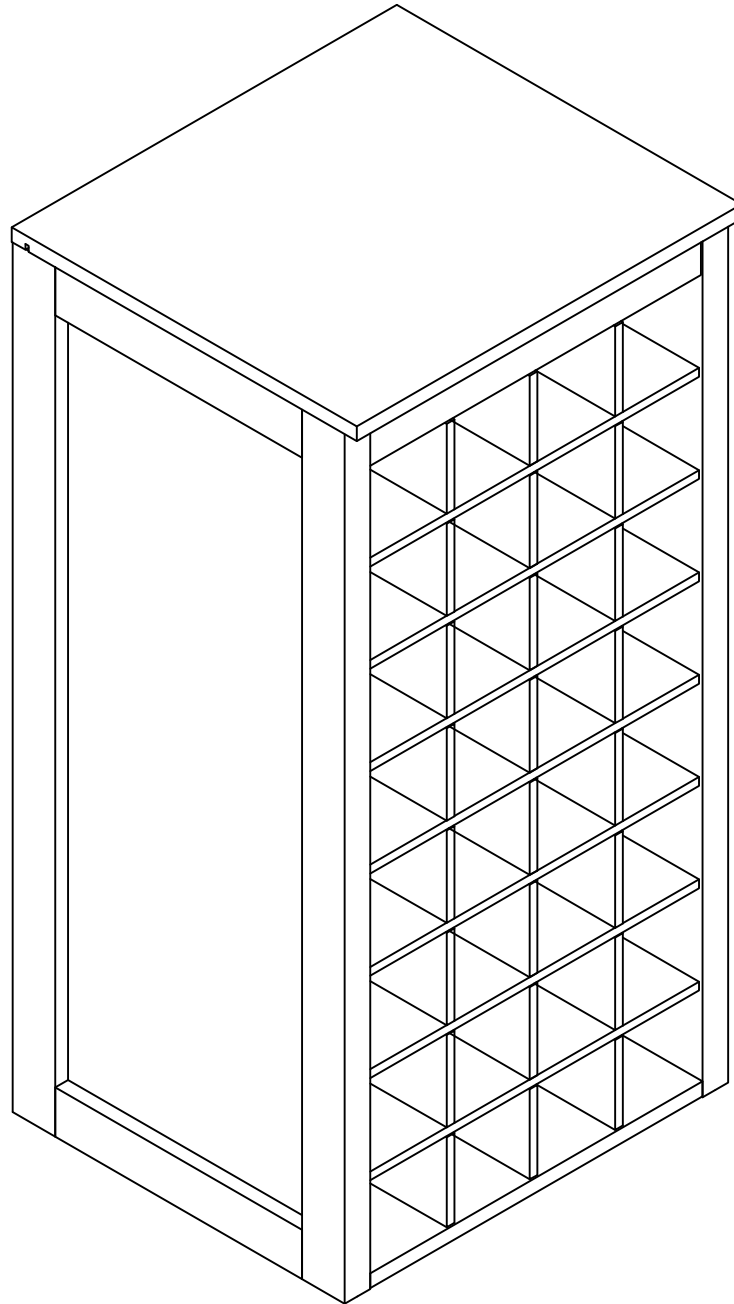
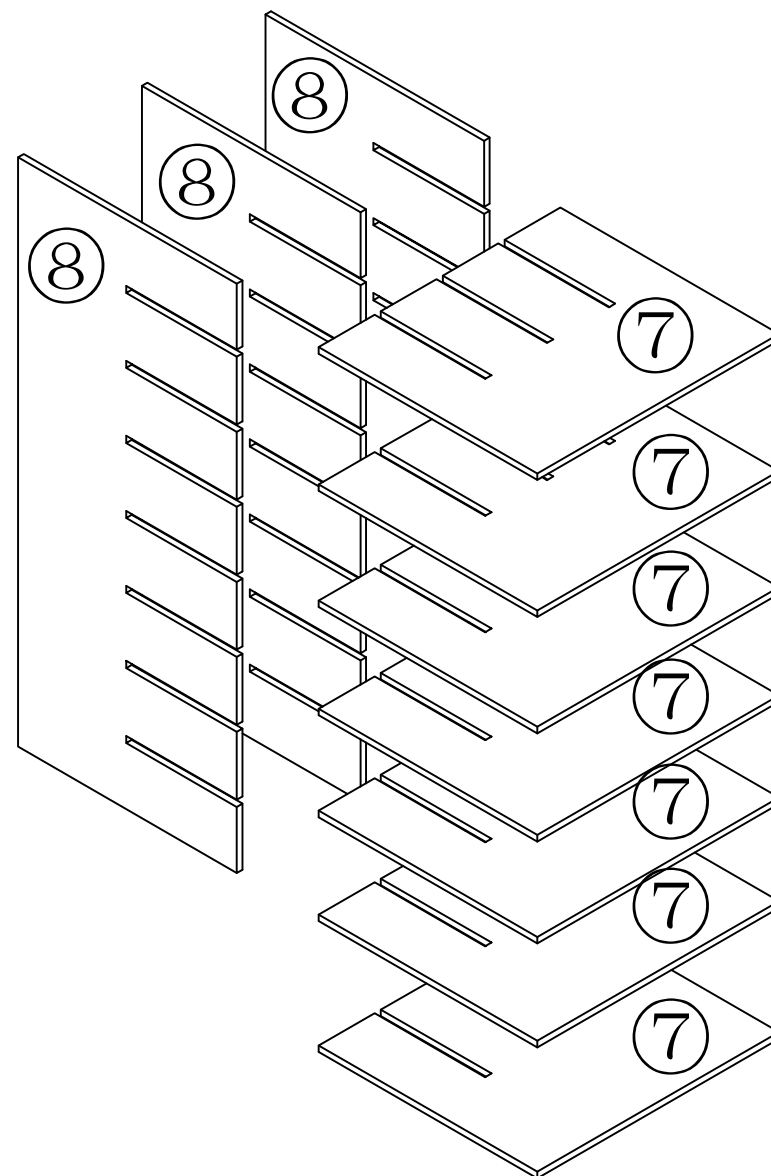
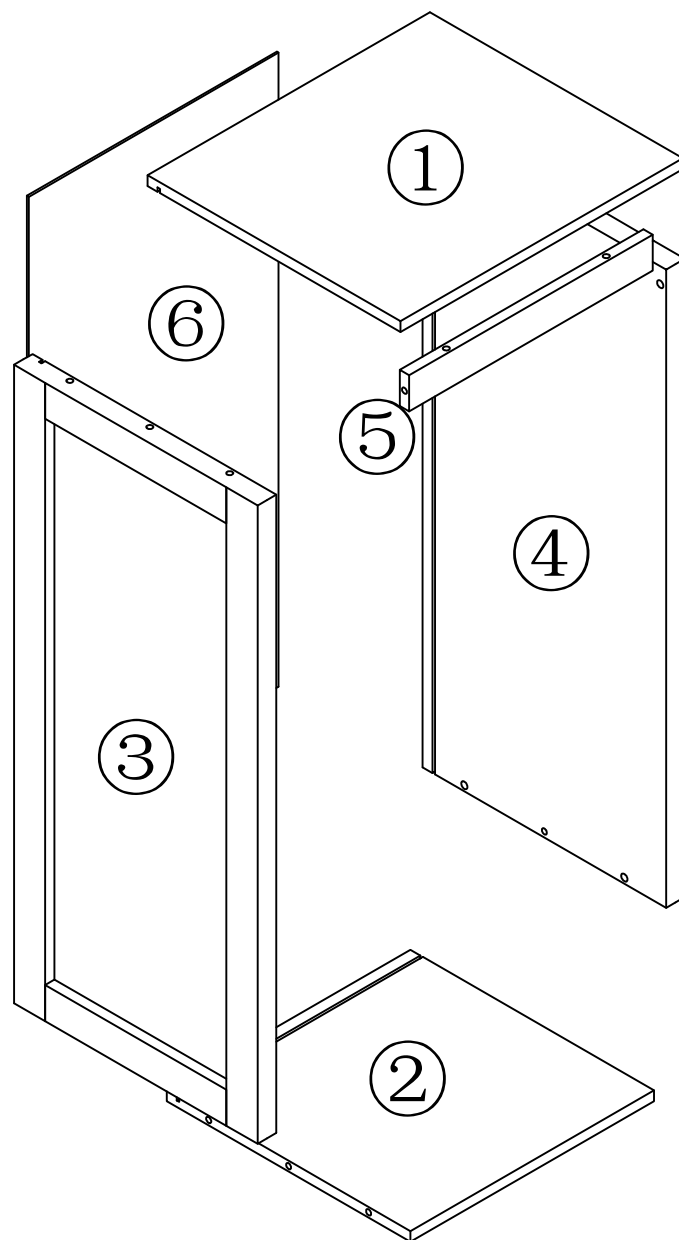



Installation & Assembly



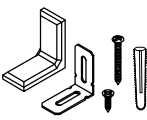


A  12PCS	B  12PCS	C 8*40  4PCS	D 3*12  4PCS	E  4PCS	F  2PCS
---	---	--	--	---	--

1

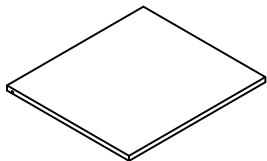


452*405 1PCS

2

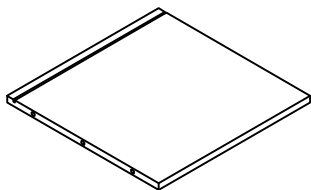


390*390 1PCS

3




885*390 1PCS

4



885*390 1PCS

5

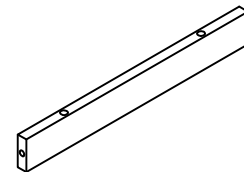


390*50 1PCS

6



879*400 1PCS

7

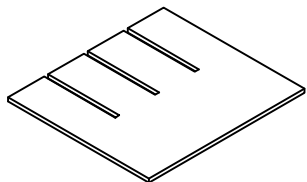

387*350 7PCS

8




817*350 3PCS




Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

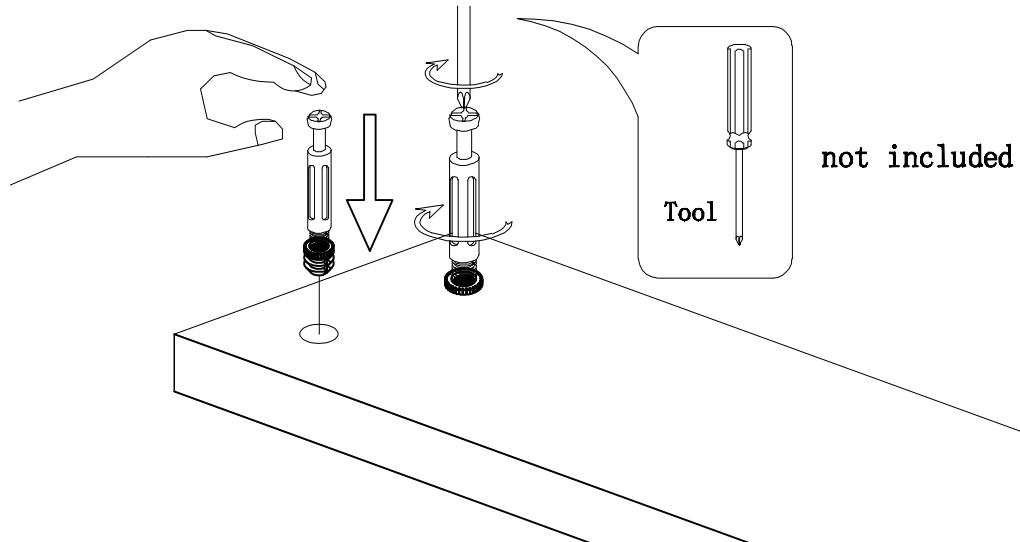


II

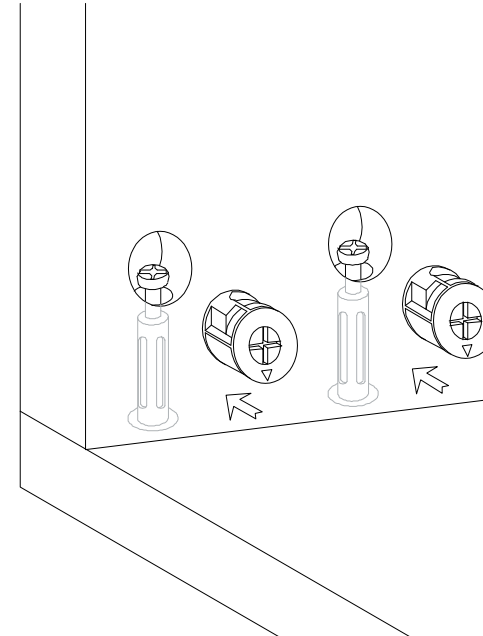

III

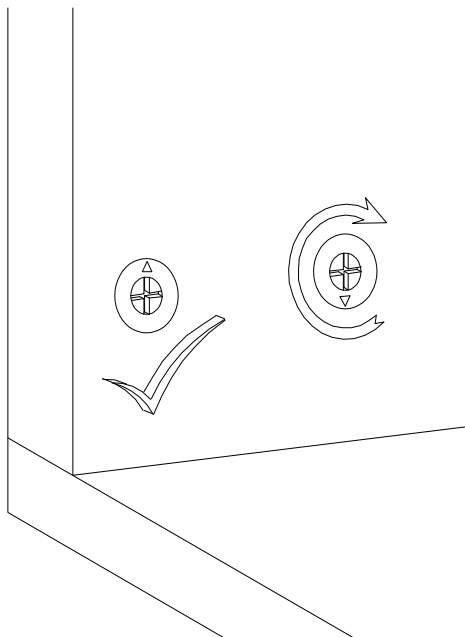


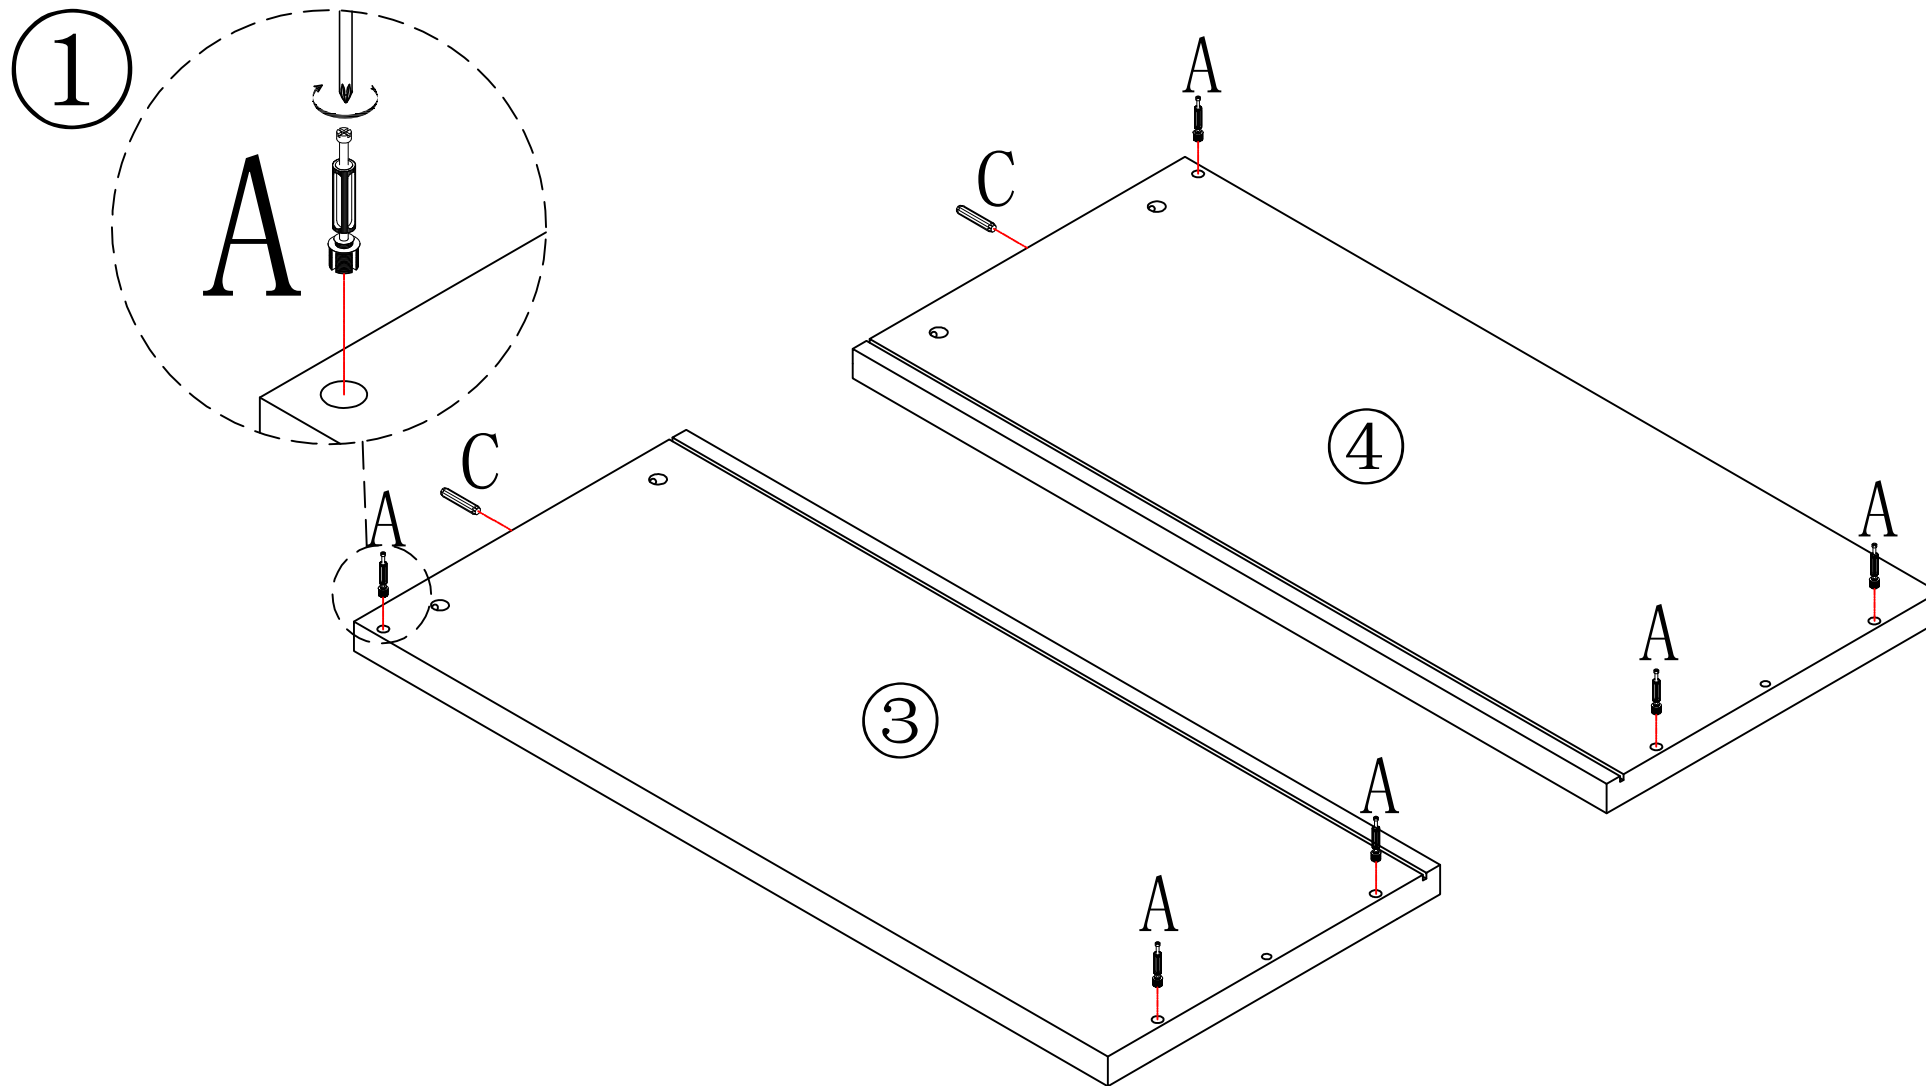

	A*6
	C*2

put A on board ③ ④
put C on board ③ ④

②

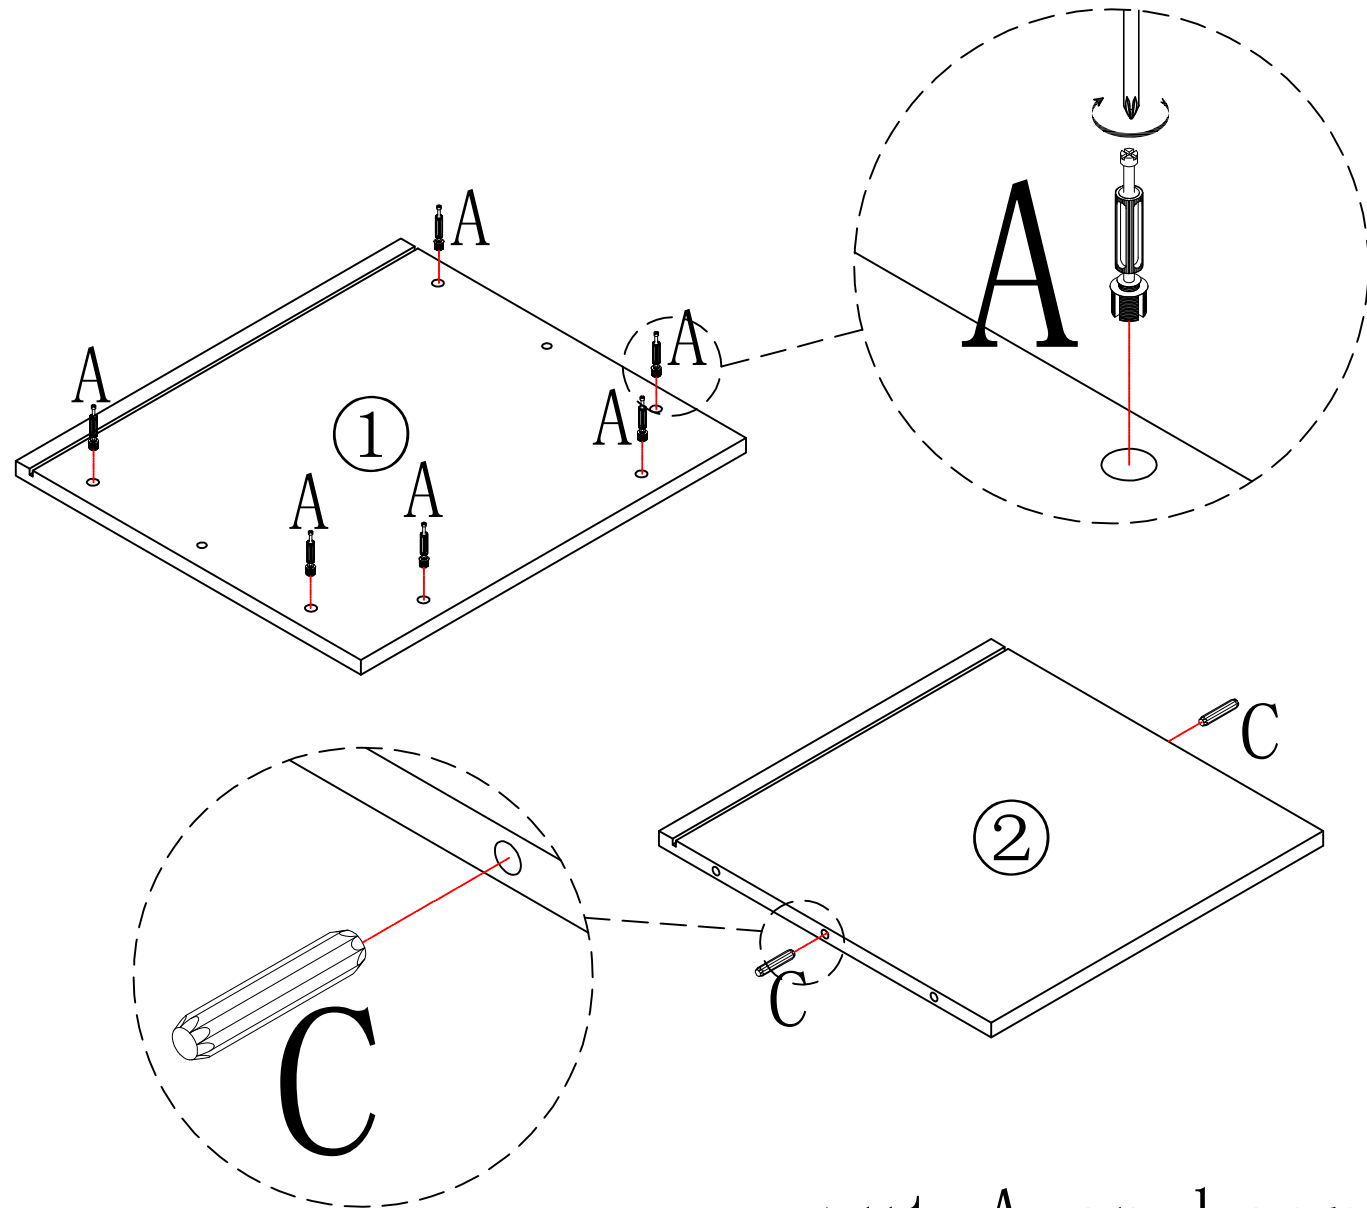

put A on board ①

put C on board ②




A*6



C*2

③

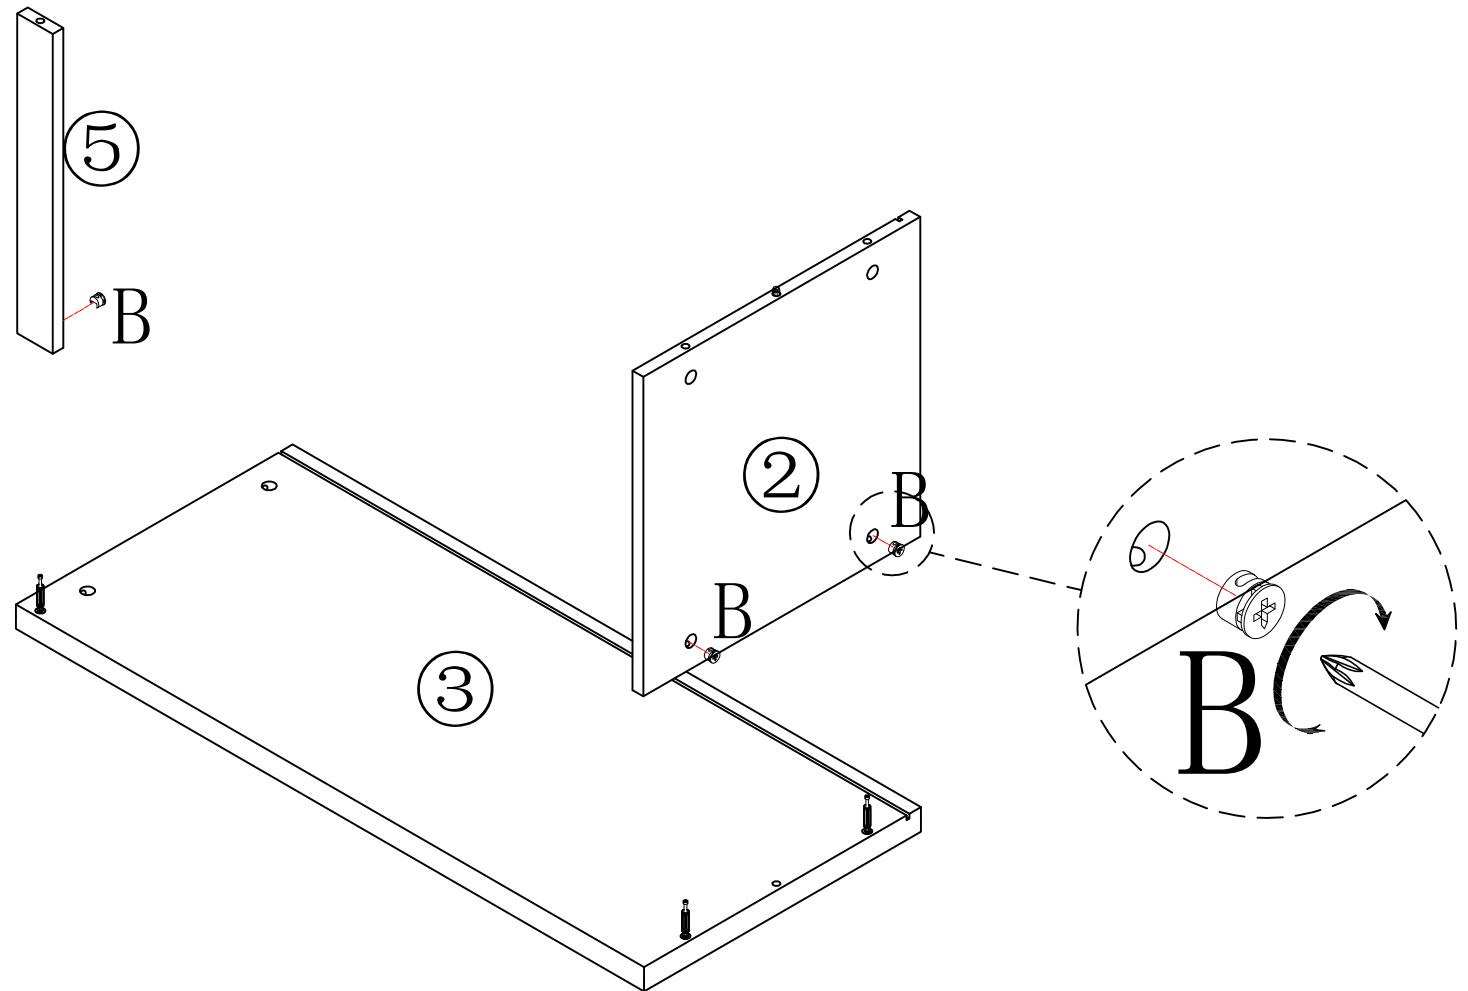


put B on board ② ⑤



B*3

4


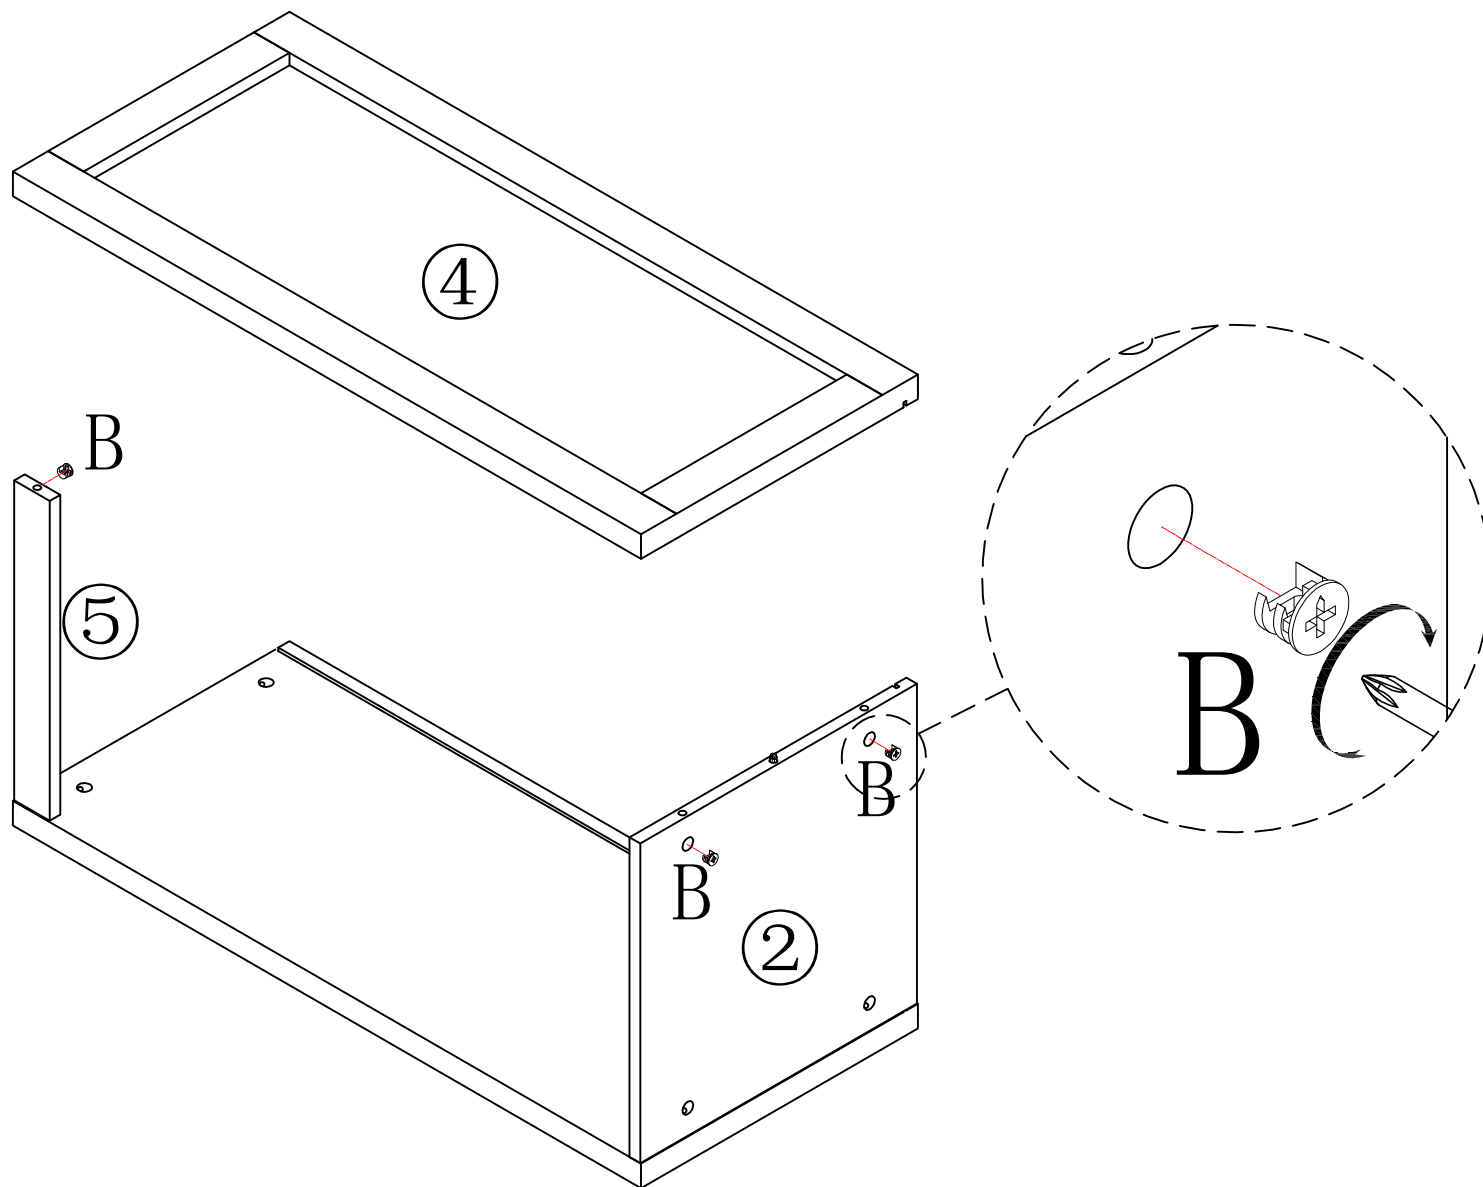


B*3

put B on board ② ⑤


⑤

put B on board ③ ④ ⑤

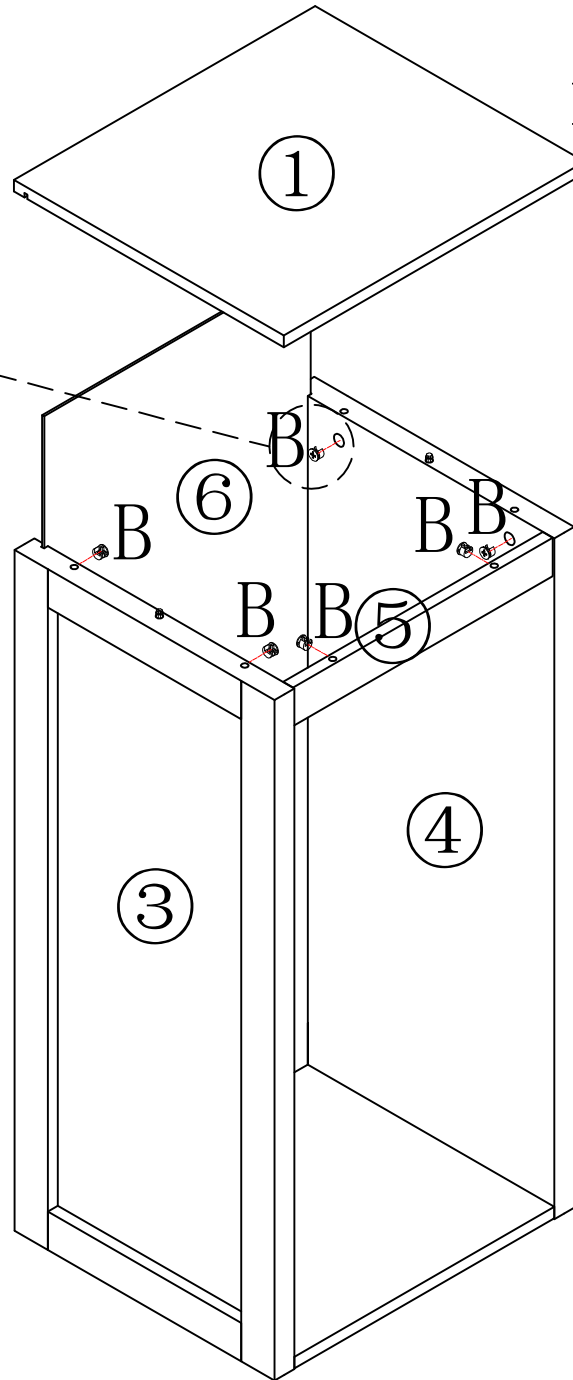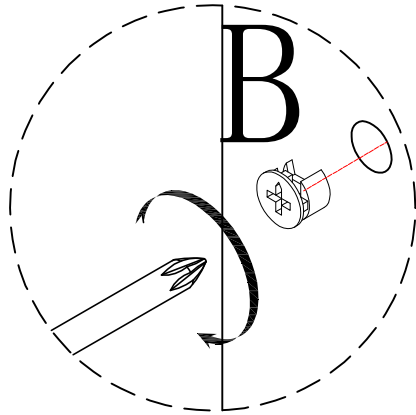


B*6


6

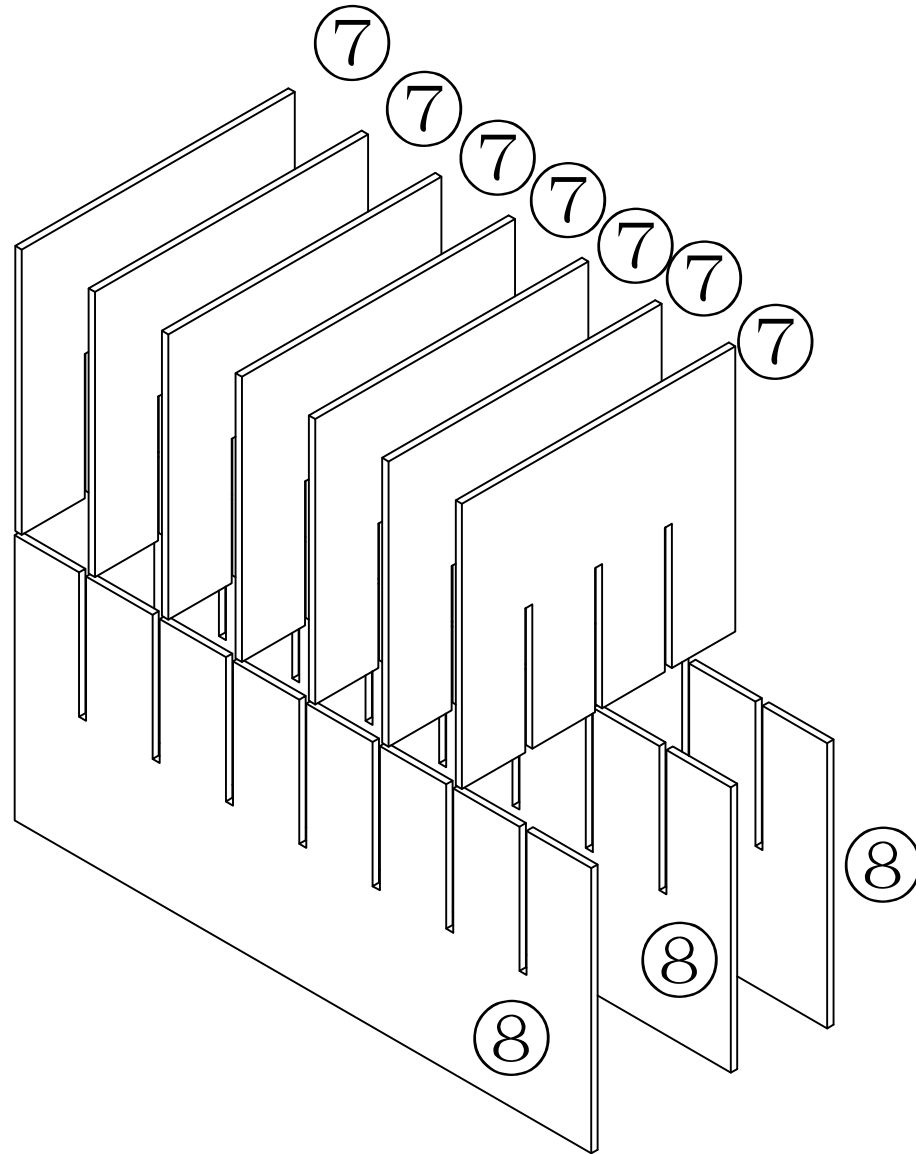

7





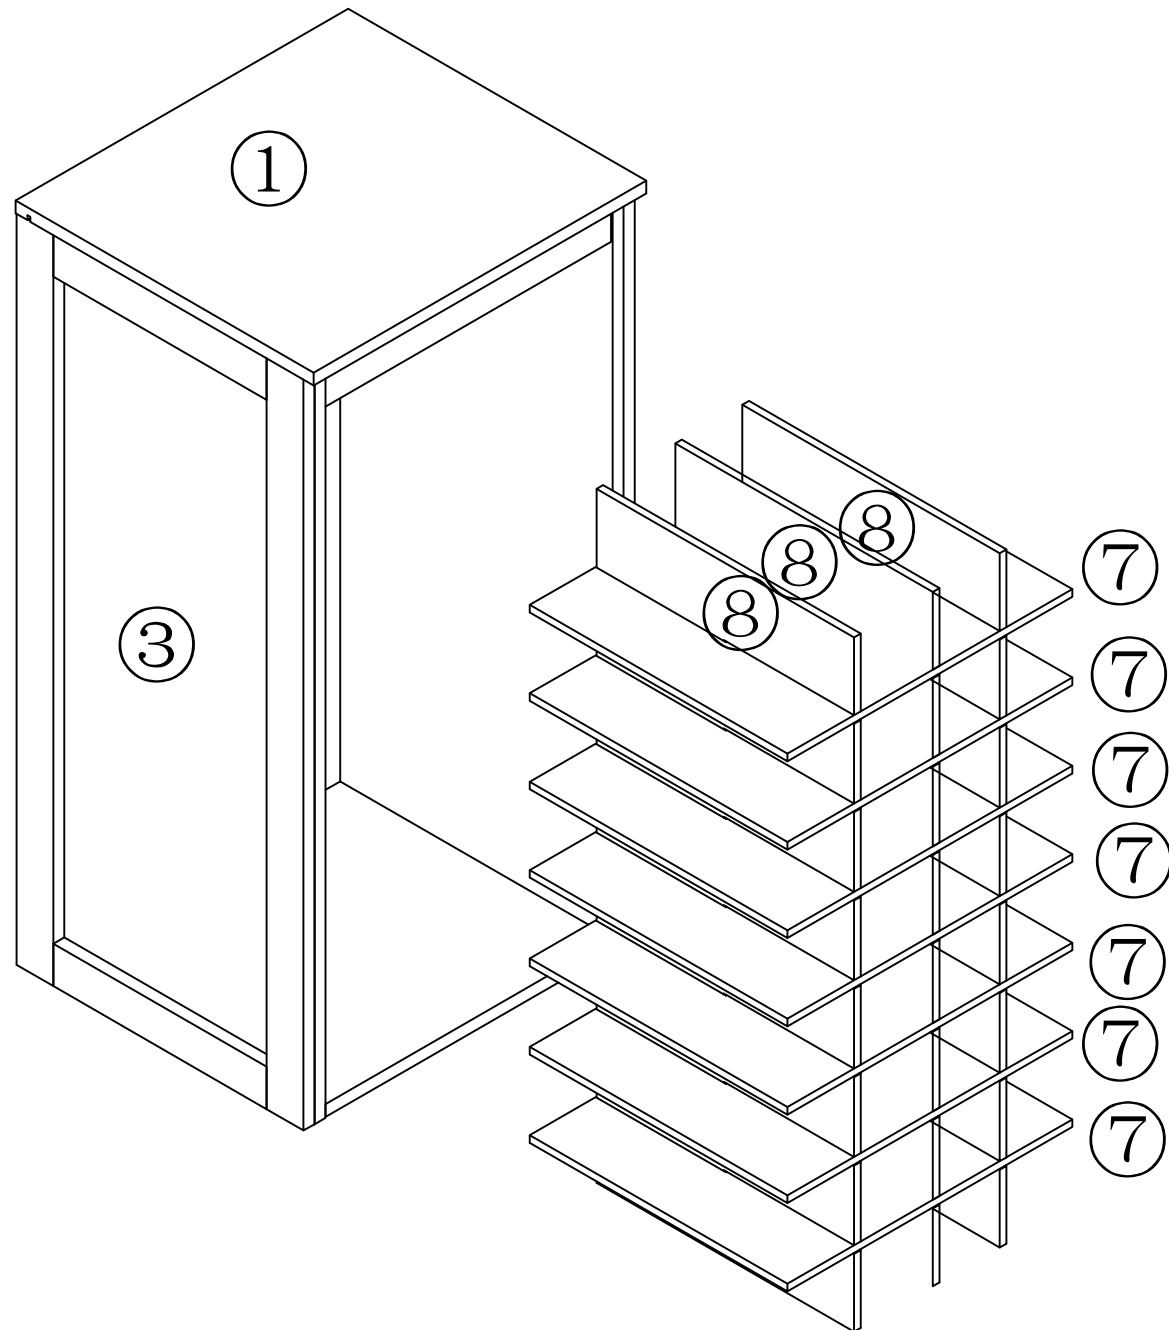


8

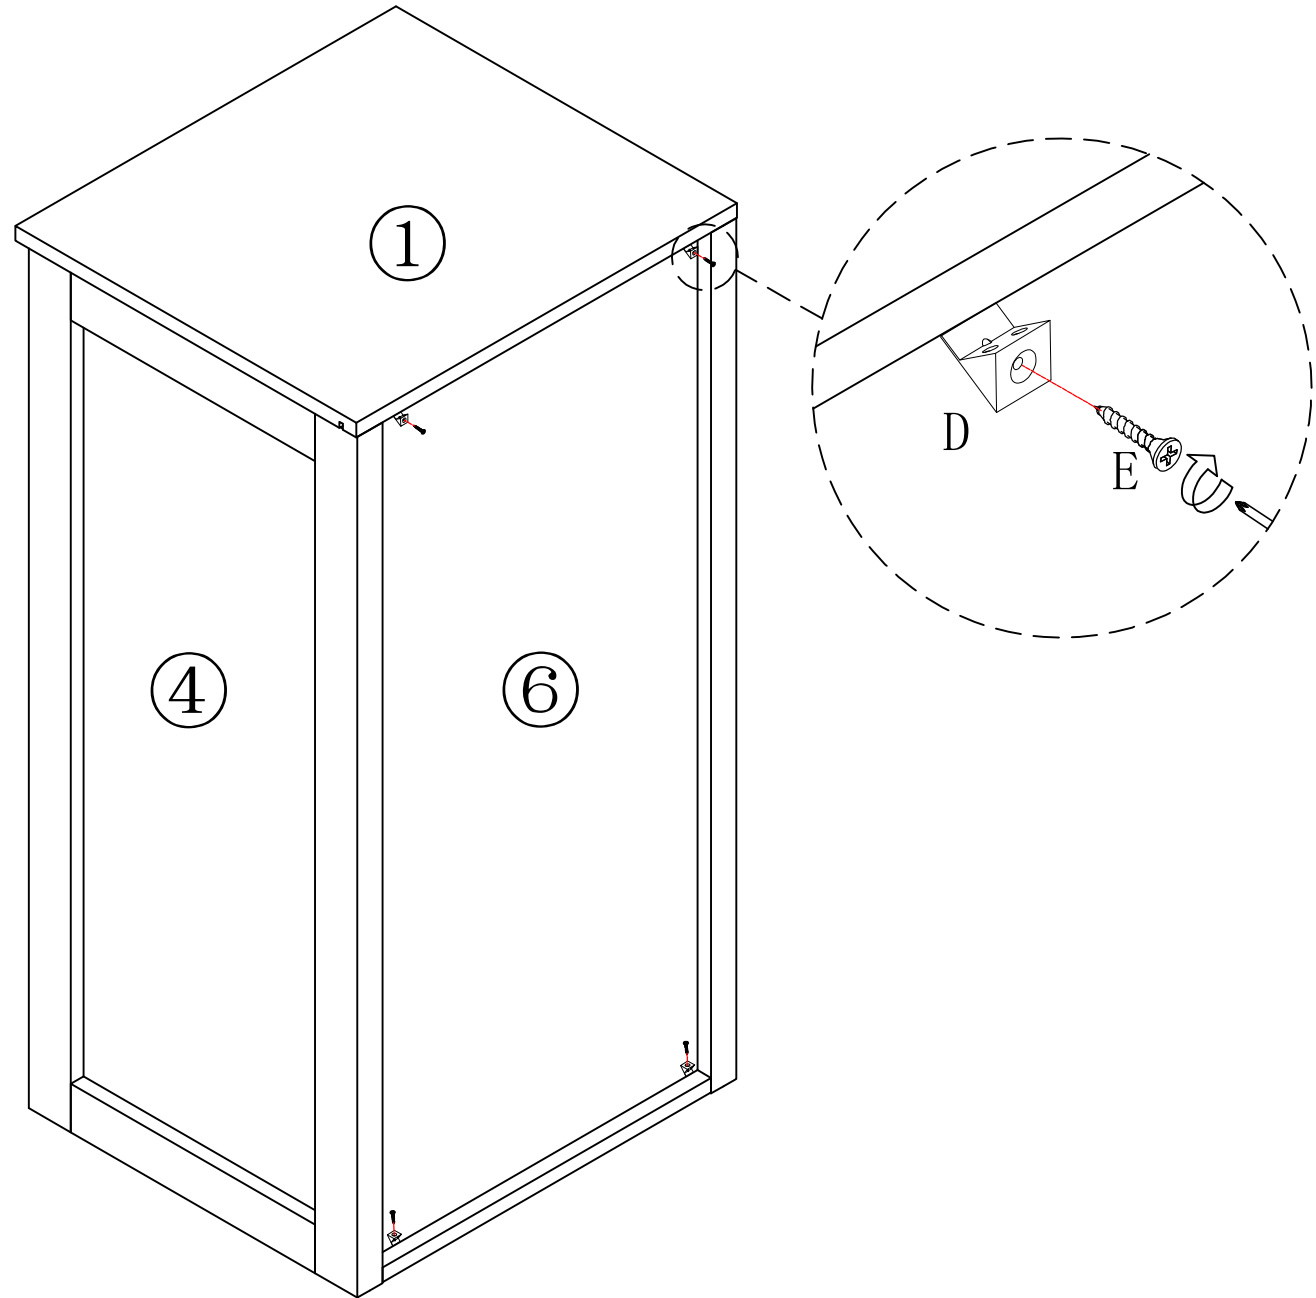


	D*4
	E*4


9

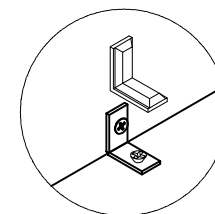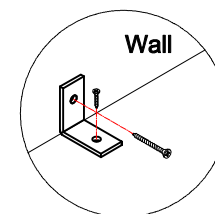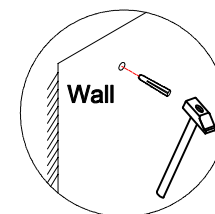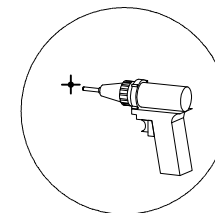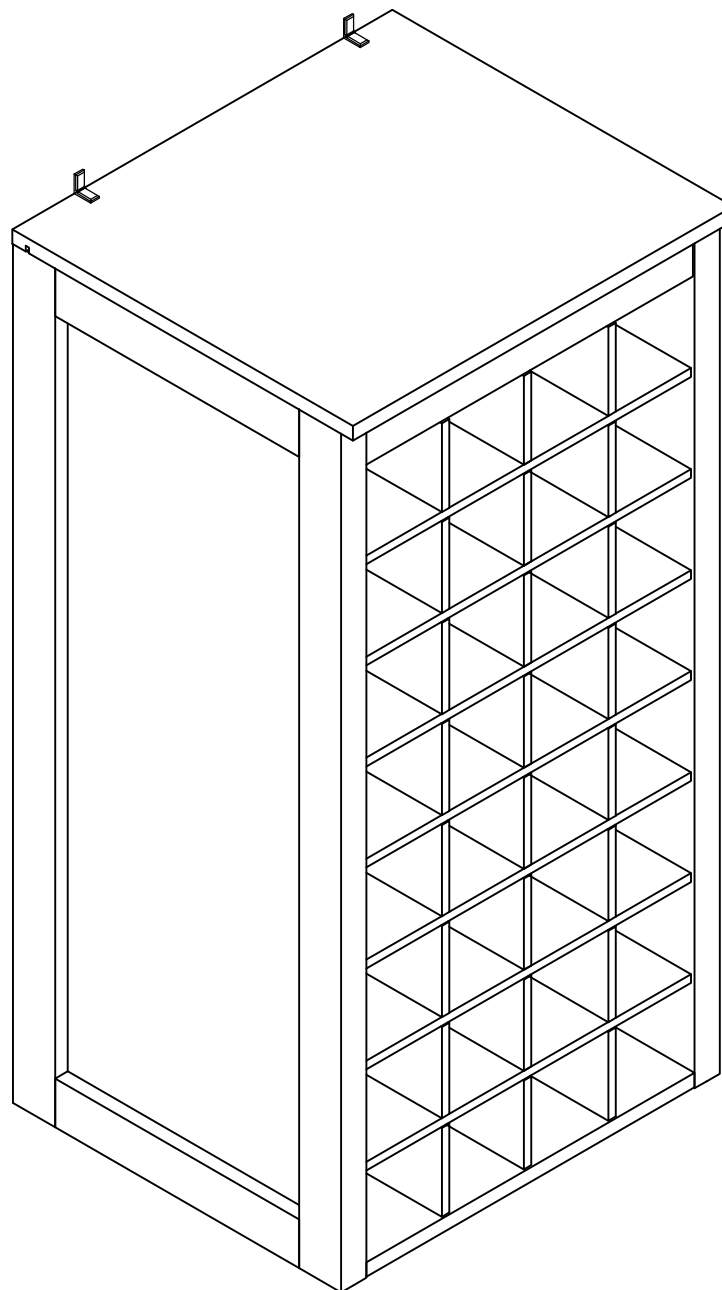

Please install tip-proof fitting.



F*2

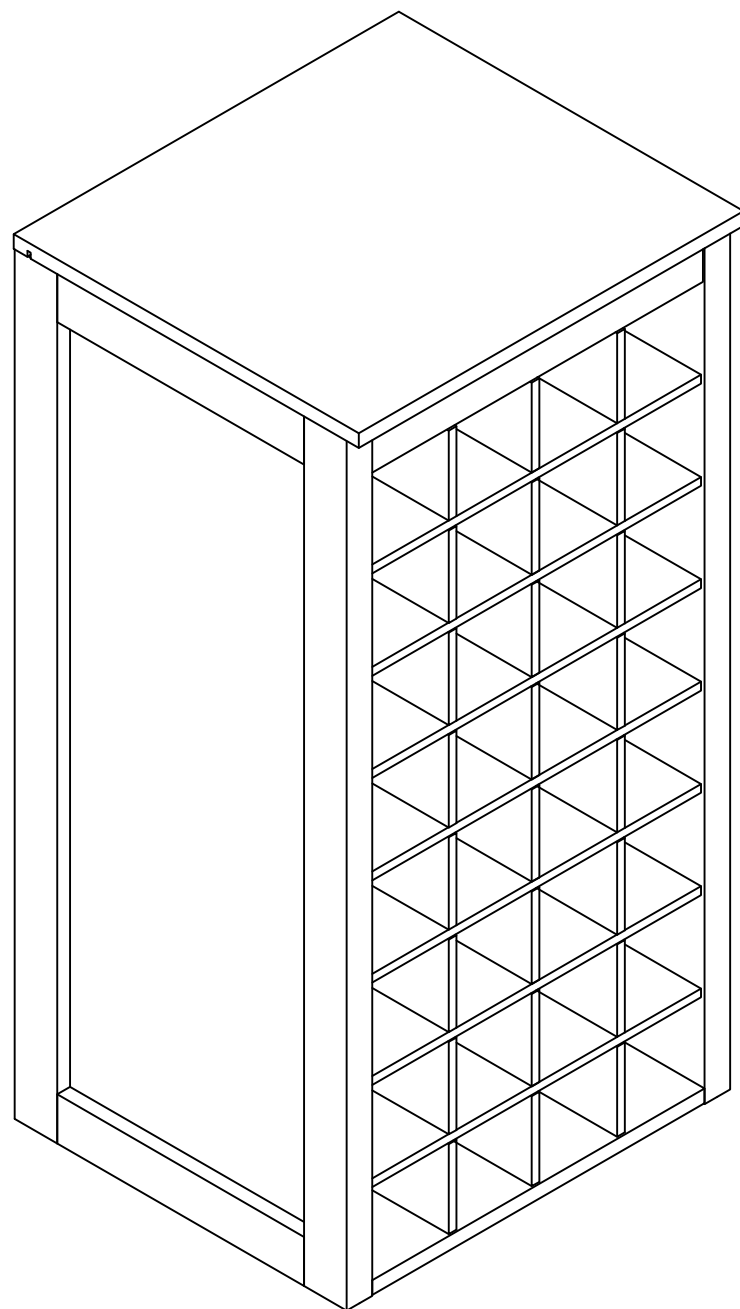

END