











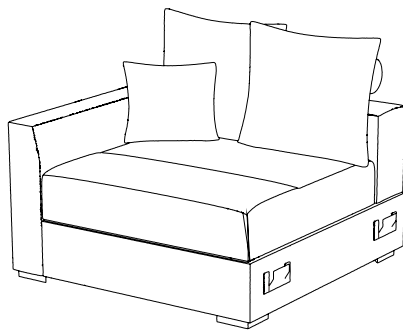


ASSEMBLY INSTRUCTION



PARTS LIST

BOX-L						BOX-ARM
						
x1	x1	x1	x1	x2	x1	x1

HARDWARE LIST

					
5/16*8cm	5/16*19cm				
1	2	3	4	5	
x4	x4	x1	x2	x4	



BEFORE ASSEMBLY

Open up Velcro of Non-Woven Fabric cover on the bottom to remove hardware, legs and parts.

1. Please open the black woven fabric with Velcro closure on the bottom of the frame then cut off the black straps before removing the parts for assembly.

2. After removing the cushion from the compress bag, please allow air to flow through the cushion for few days. You can try to fluff cushion by push in and push out on all four sides of the cushion. Hitting the top/front of the cushion with your hand to fluff them after installation.




3. Please allow at least 24 hours for the cushions to recover to its natural state after removing from the package.

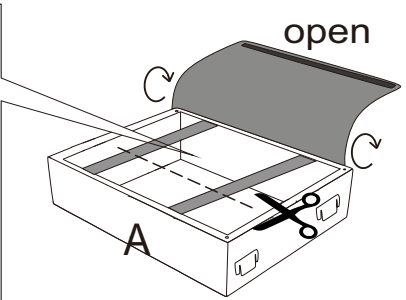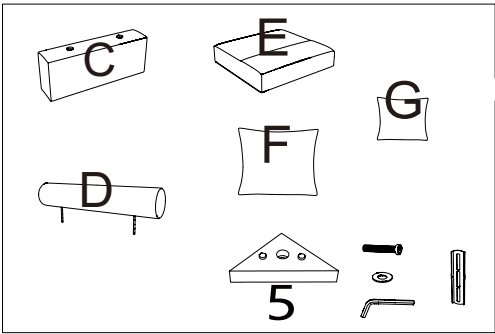

SOFA ASSEMBLY INSTRUCTION


Step1

Please take out the back rest from the back rest box.

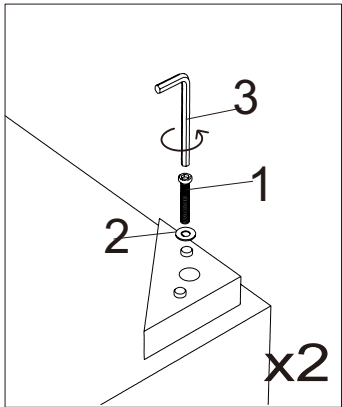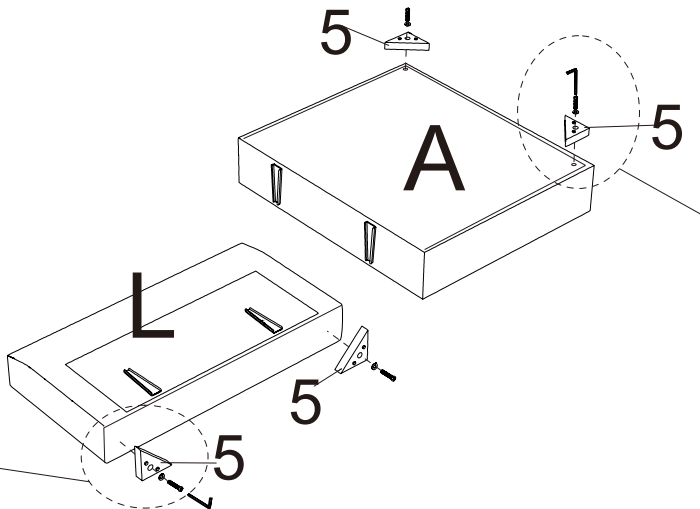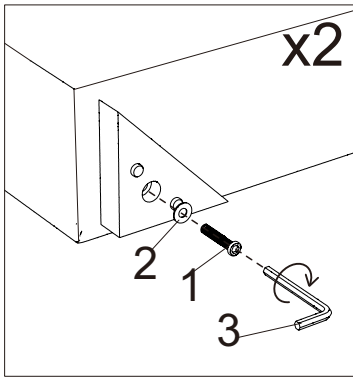


SOFA ASSEMBLY INSTRUCTION


Step2

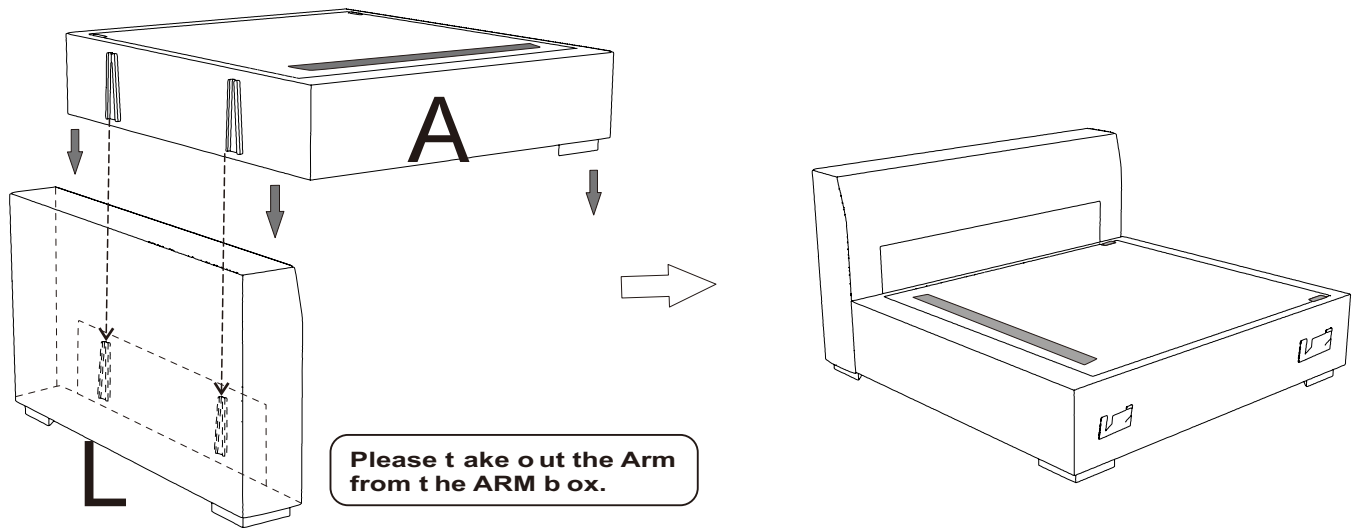

Step3

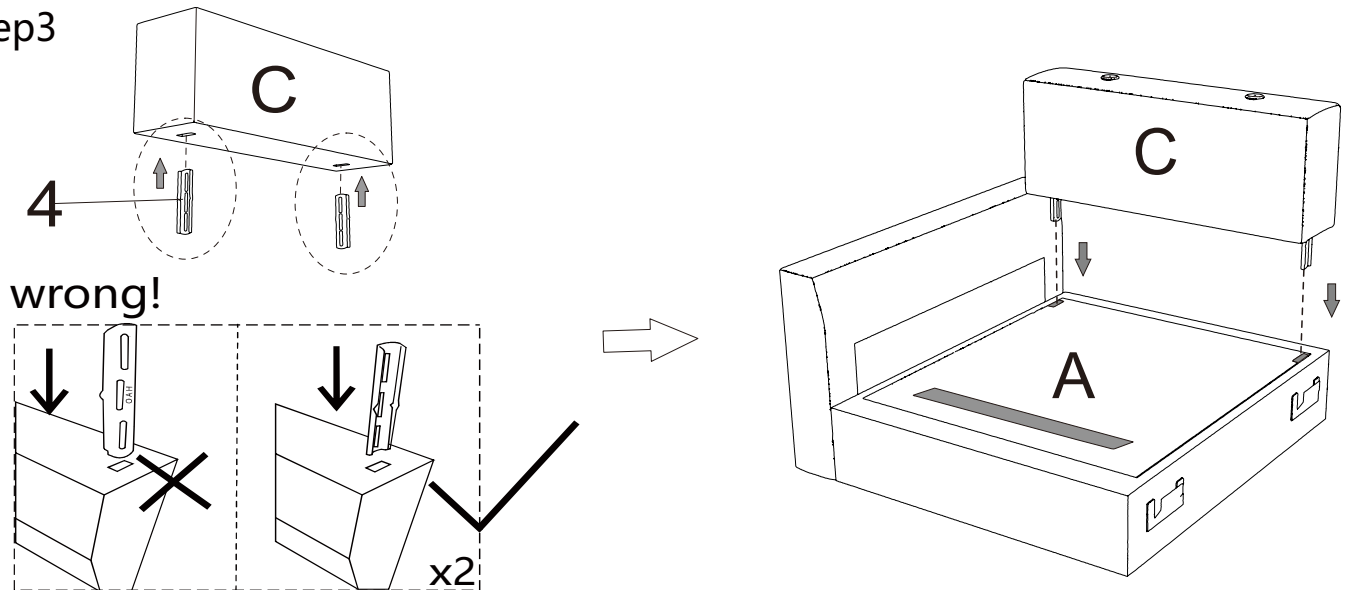


Step4

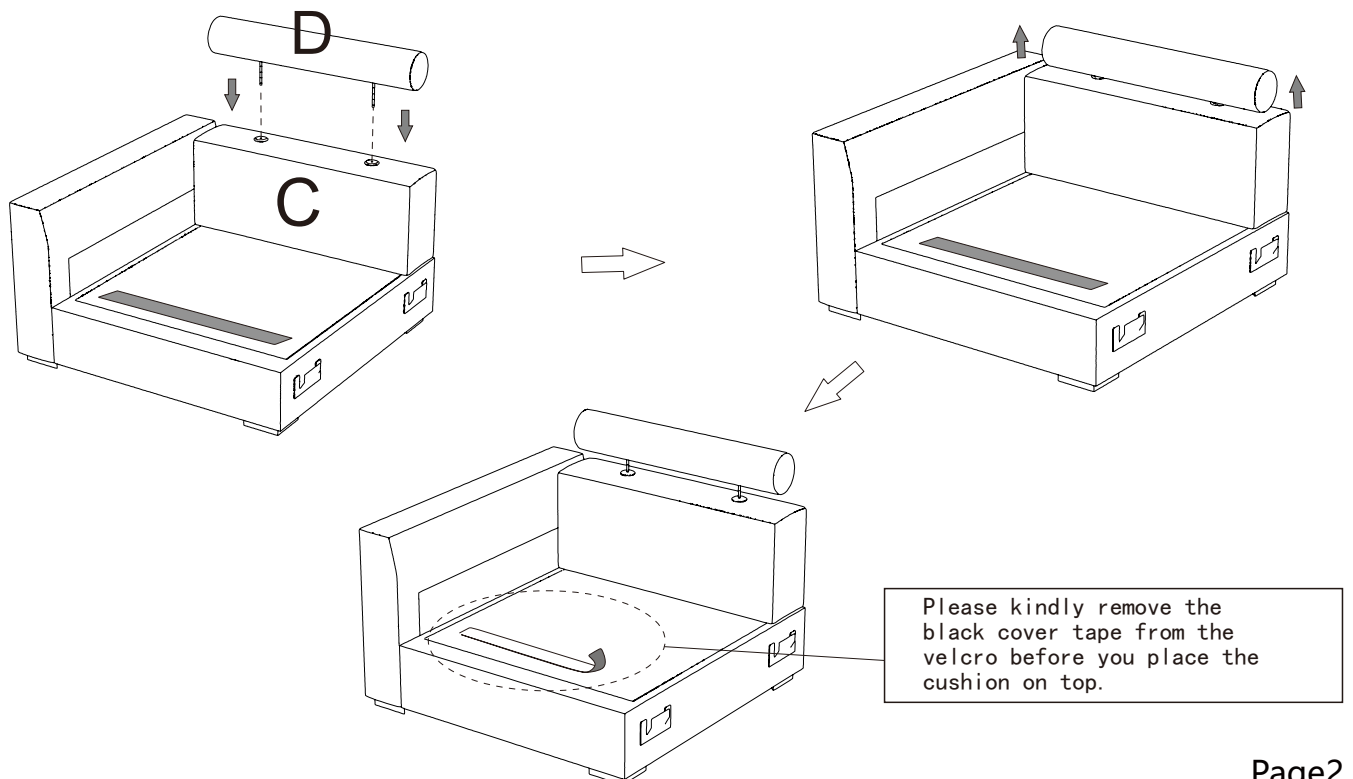

SOFA ASSEMBLY INSTRUCTION

Step5

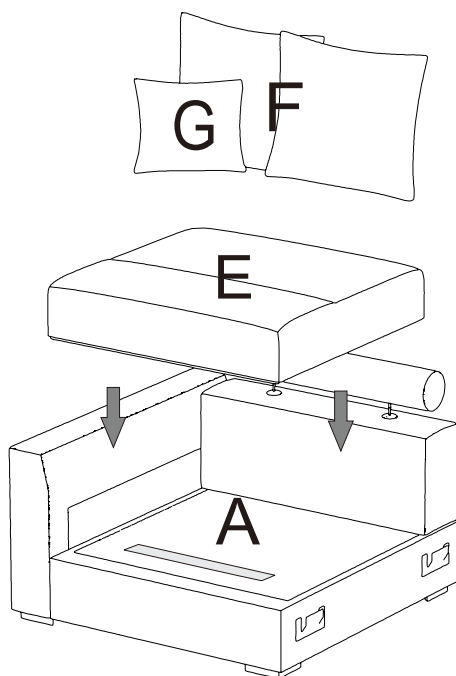

Step6

