


ASSEMBLY INSTRUCTION

DINING CHAIR

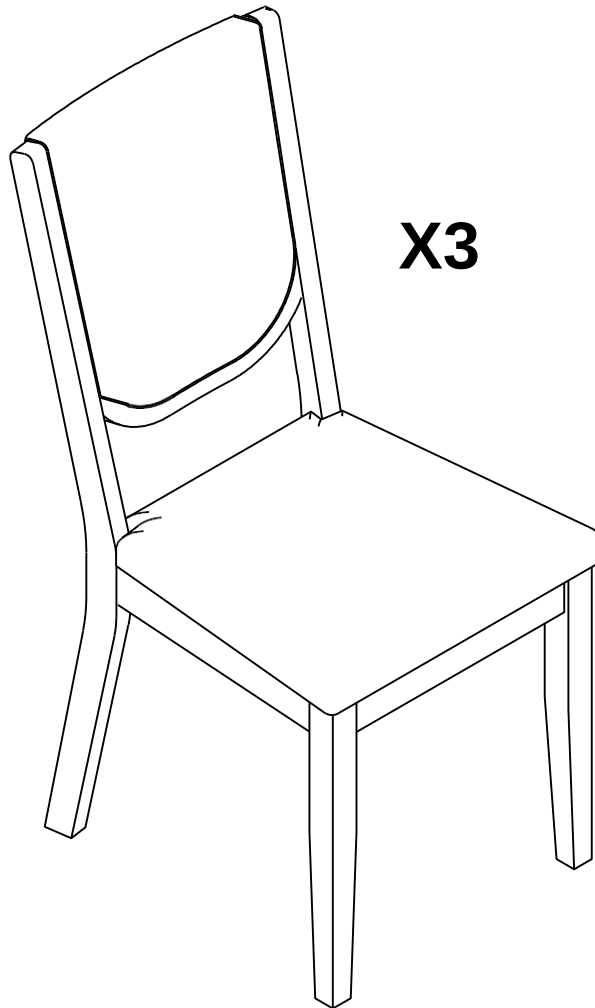


X3

N715P466171




IMPORTANT NOTE:

- 1: PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.**
- 2: BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.**
- 3: DO NOT TIGHTEN ALL BOLTS UNTIL THE CHAIR IS FULLY SET - UP.**


Detail View

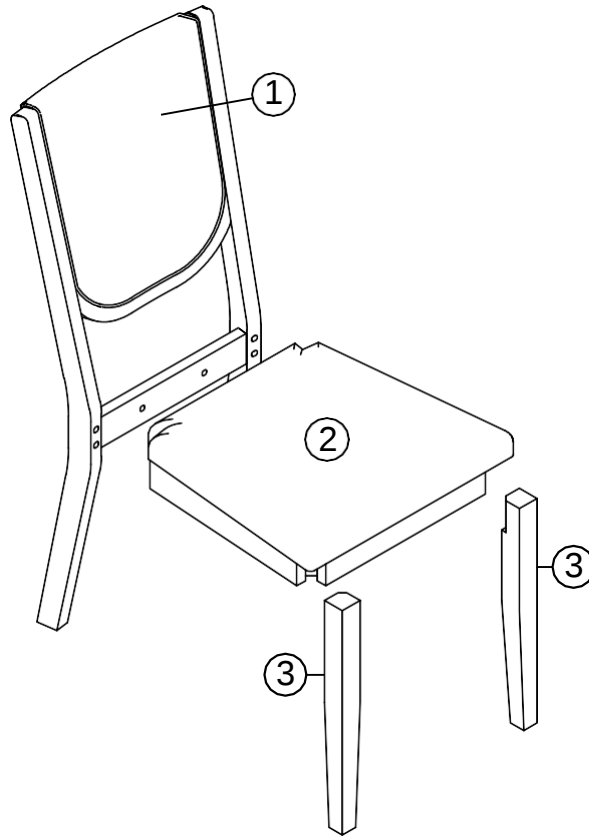


Part List

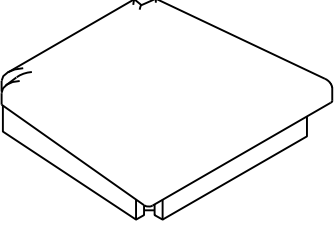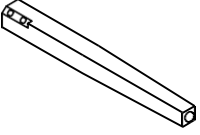① 	② 	③ 
BACK FRAME (3 pc)	SEAT FRAME (3 pc)	FRONT LEG (6 pcs)


Hardware List

Ⓐ  1/4"x70 mm	Ⓑ  1/4"x60 mm	Ⓒ  1/4"x35 mm
BOLT (12 pcs)	BOLT (12 pcs)	BOLT (6 pcs)
Ⓓ  1/4"x11 mm	Ⓔ  1/4"x19 mm	Ⓕ  4x58mm
LOCK WASHER (30 pcs)	FLAT WASHER (30 pcs)	ALLEN KEY (1 pc)


STEP 1:

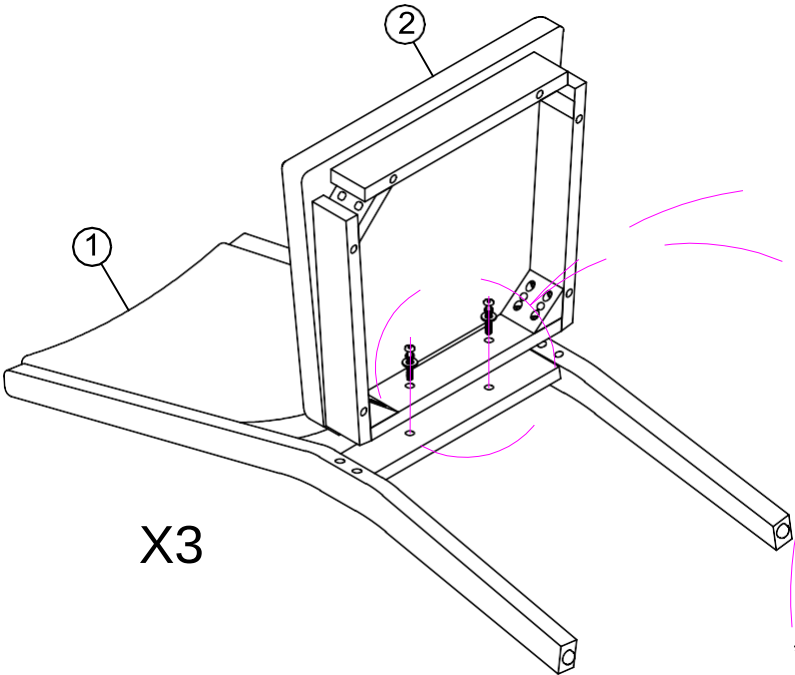


C	D	E
		
6 pcs	6 pcs	6 pcs

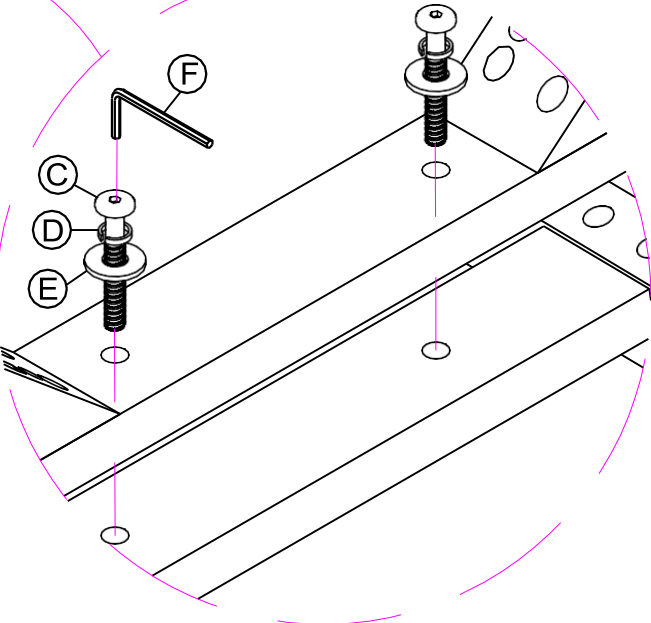


STEP 2:

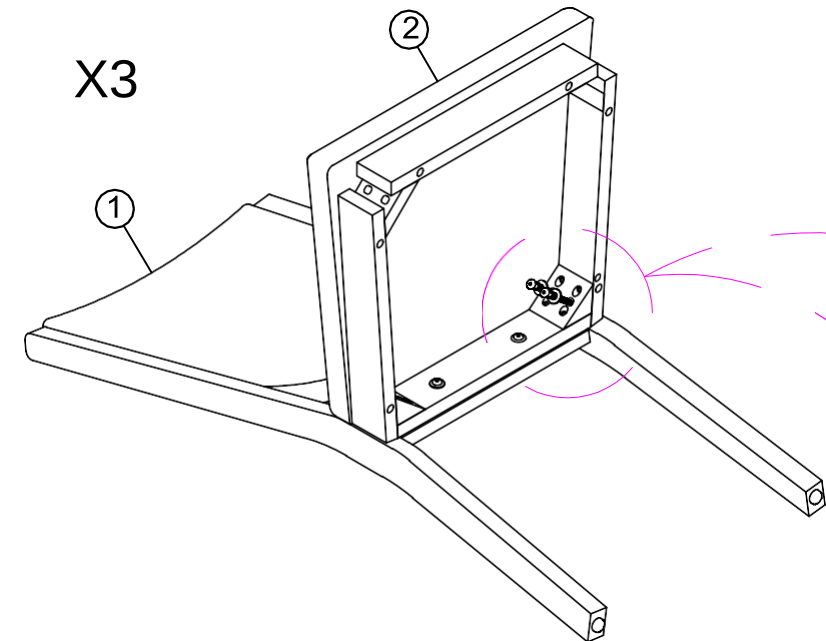

A	D	E
		
12 pcs	12 pcs	12 pcs

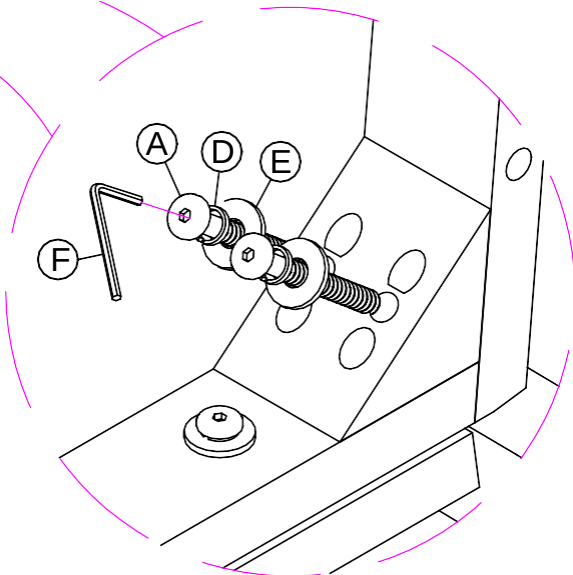

STEP 3:

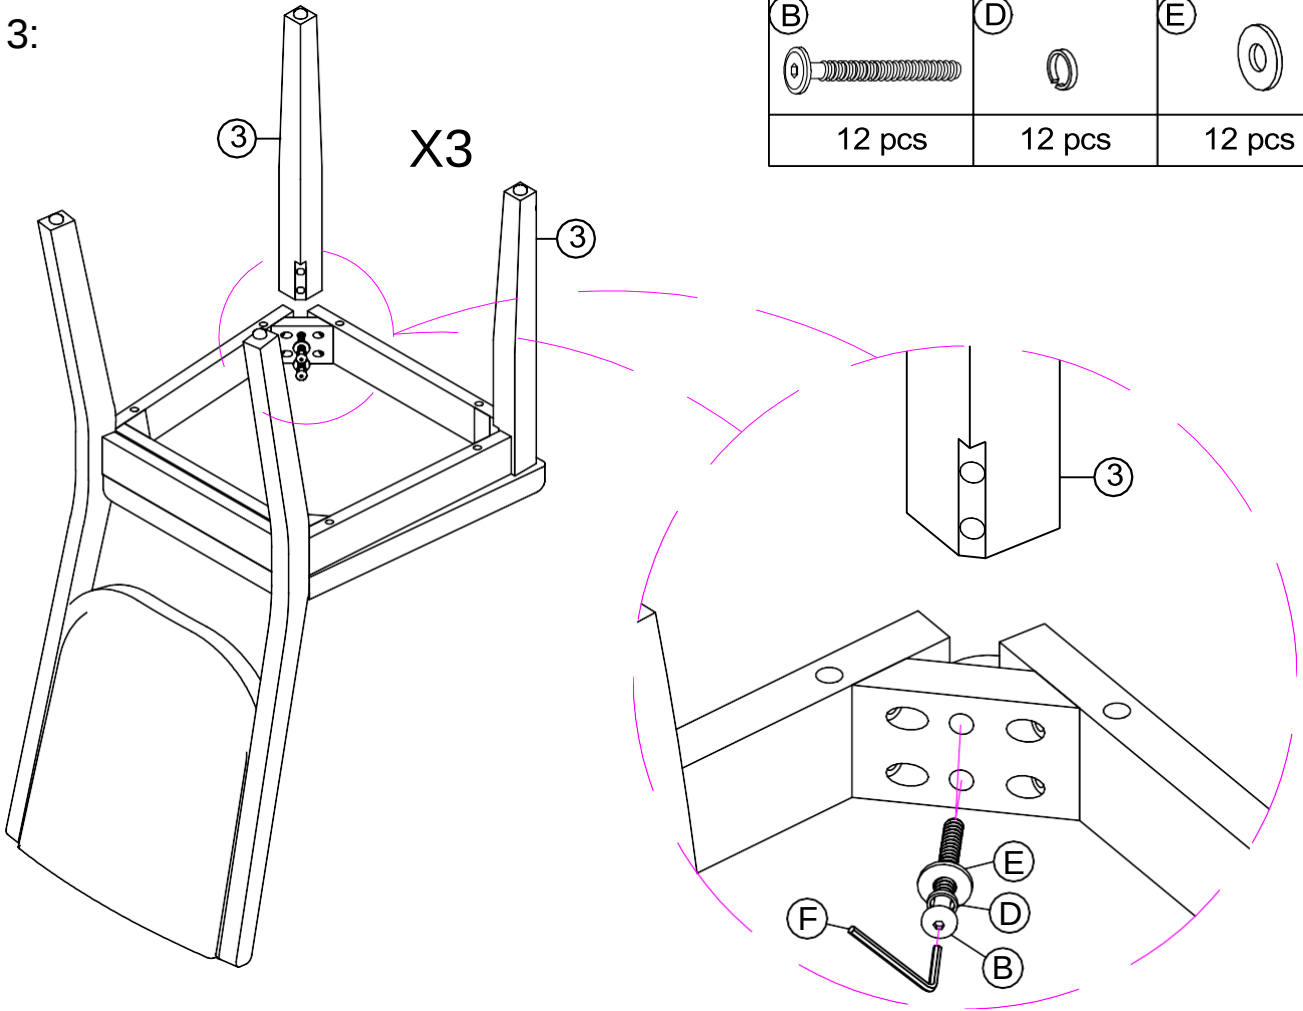

FULLY

