

Mid-Century Style TV Cabinet

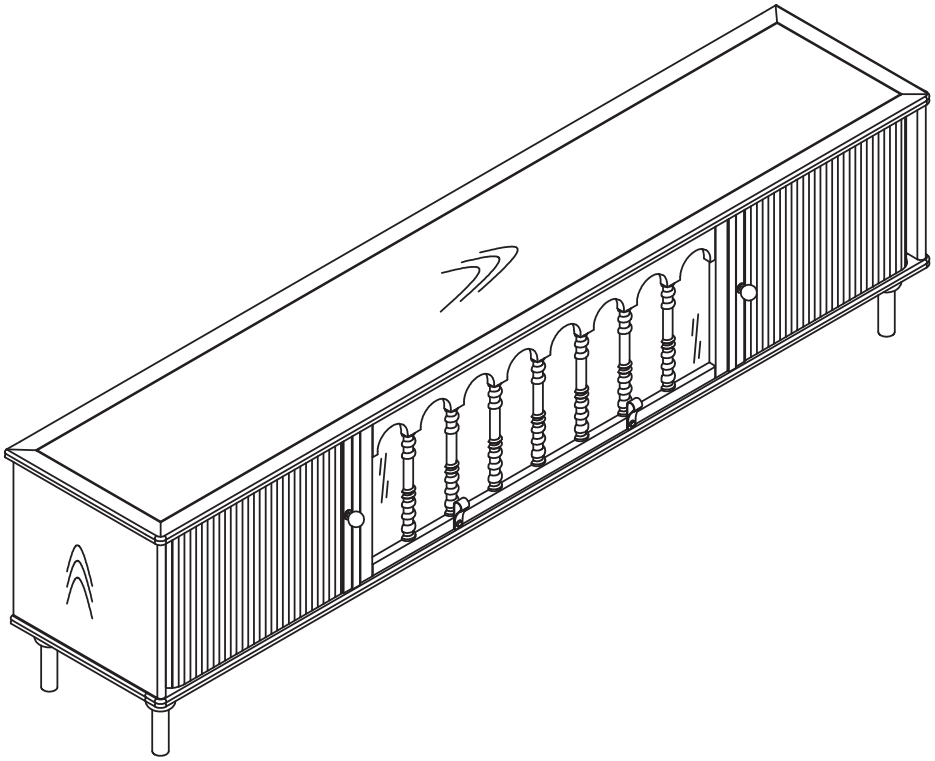


Disassembly and installation of accessories














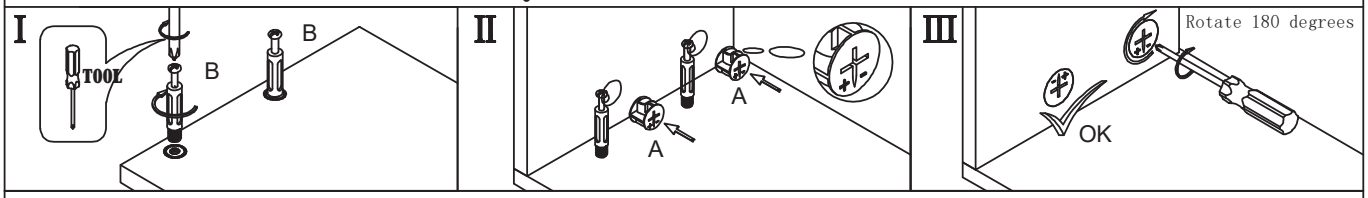


A	16 PCS	B	16 PCS	C	16 PCS	D	6 PCS	E	42 PCS	F	4 PCS	G	2 PCS
Ø15*10		Ø7*35		M8*30		M3.5*14		M4*25		M4*25		Metal Handle	


H	2 PCS	I	4 SET	J	2 PCS	K	3 PCS	L	2 PCS	M	6 PCS
Leather Handle		Shelf Support		M5		ø50		Magnet		M8*35	

Parts list

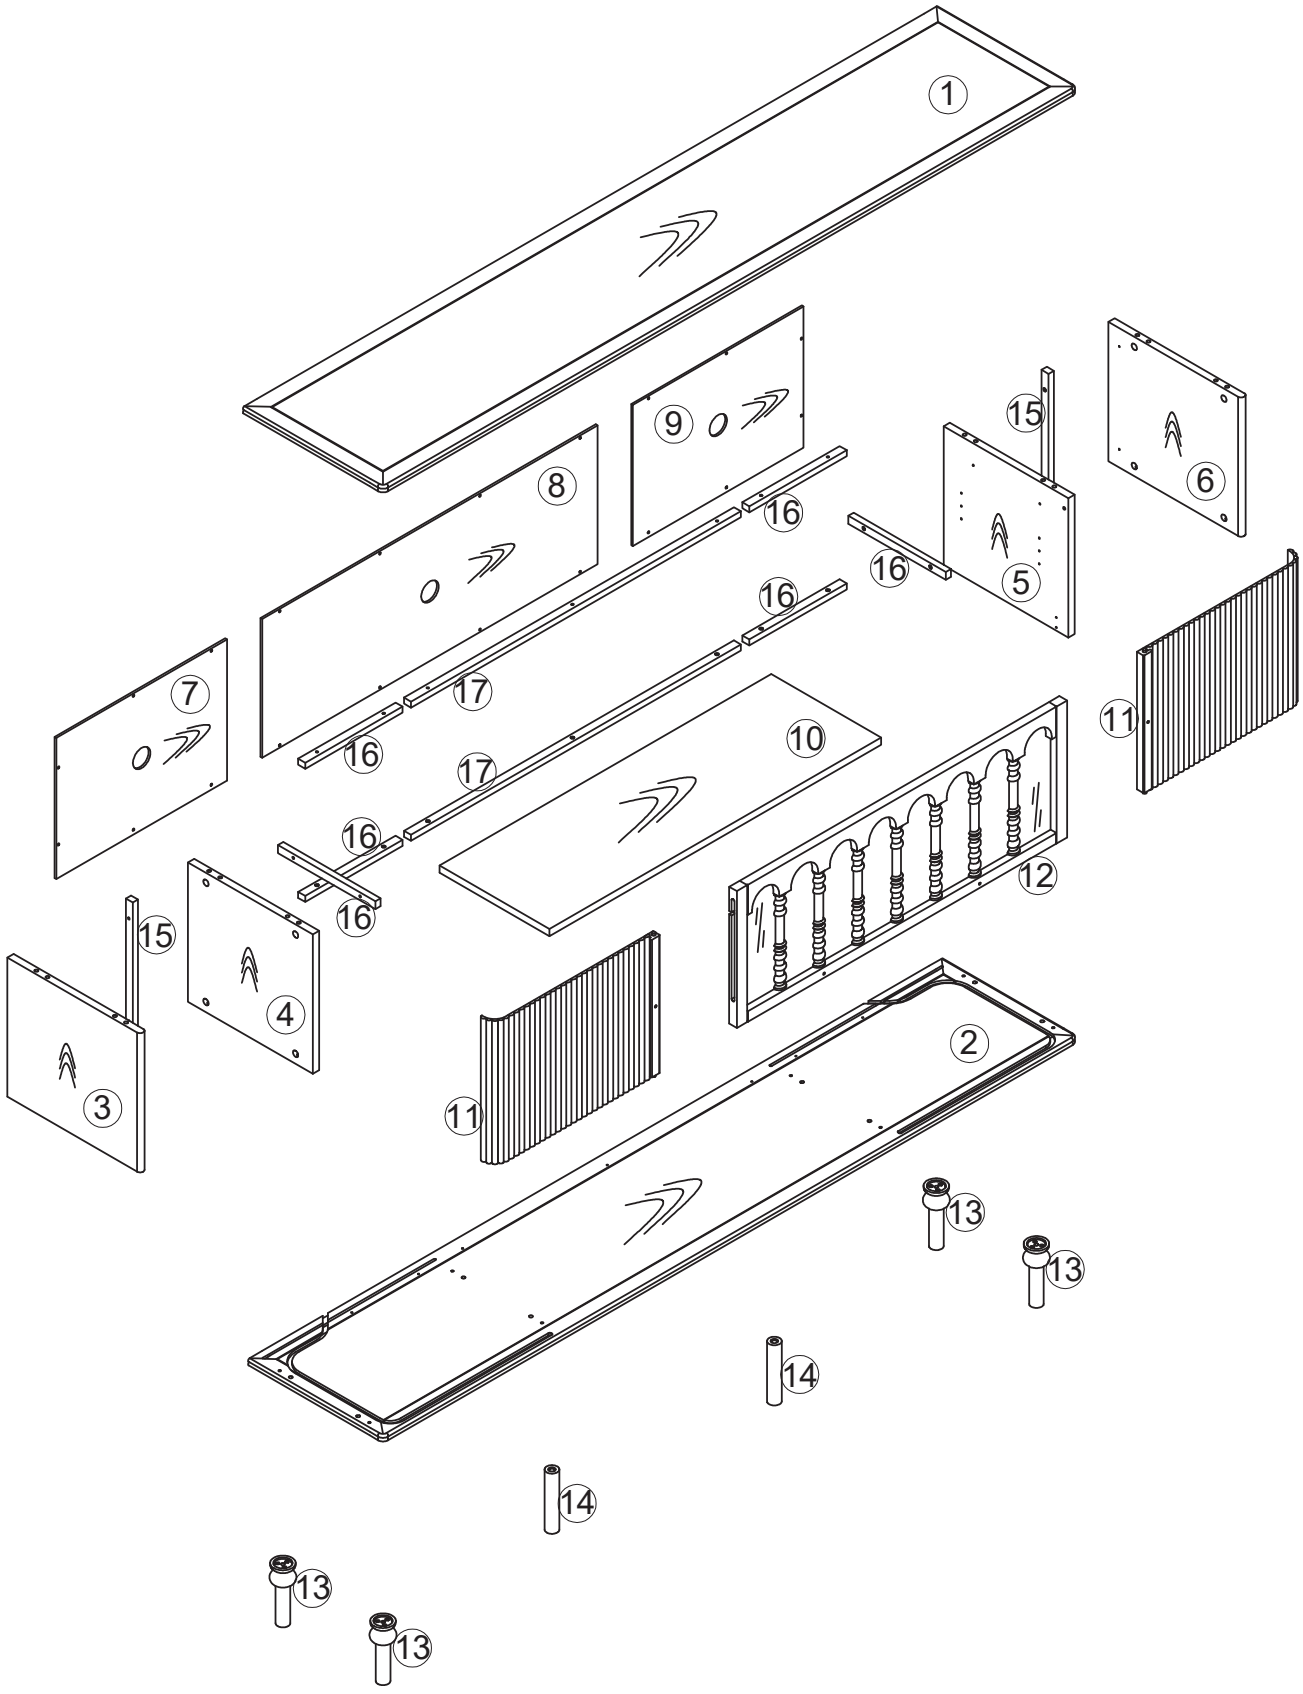


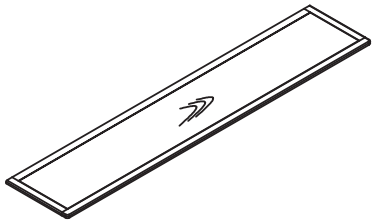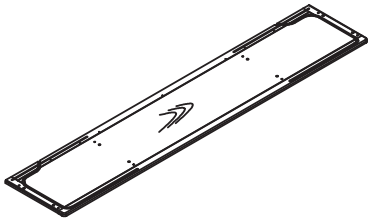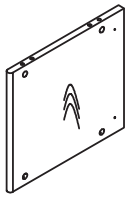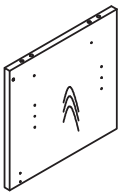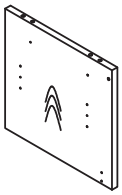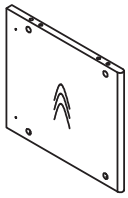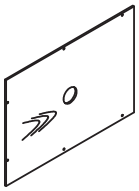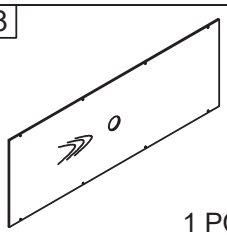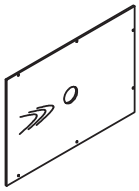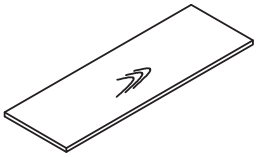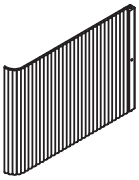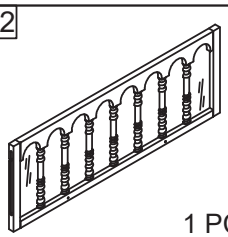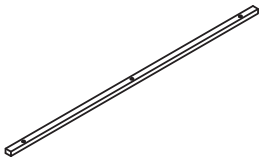
1  1 PC	2  1 PC	3  1 PC		
4  1 PC	5  1 PC	6  1 PC	7  1 PC	8  1 PC
9  1 PC	10  1 PC	11  2 PC	12  1 PC	13  4 PC
14  2 PC	15  2 PC	16  6 PC	17  2 PC	

STEP 1

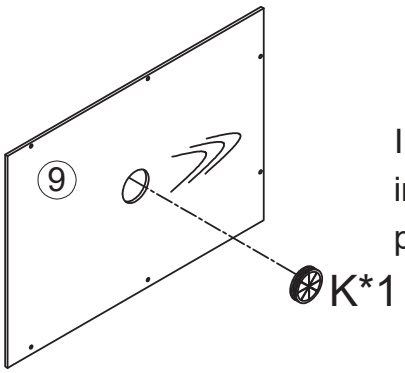


Install the K fittings securely into the designated holes on panels No.7, No.8, and No.9.

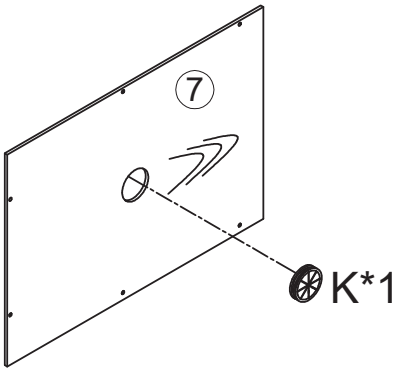

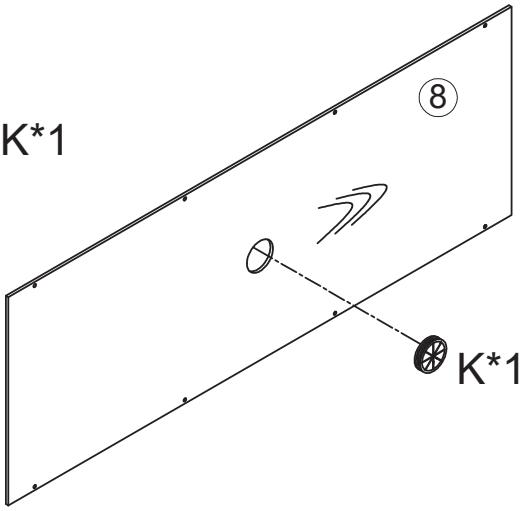


K	3 PCS
ϕ50	

STEP 2

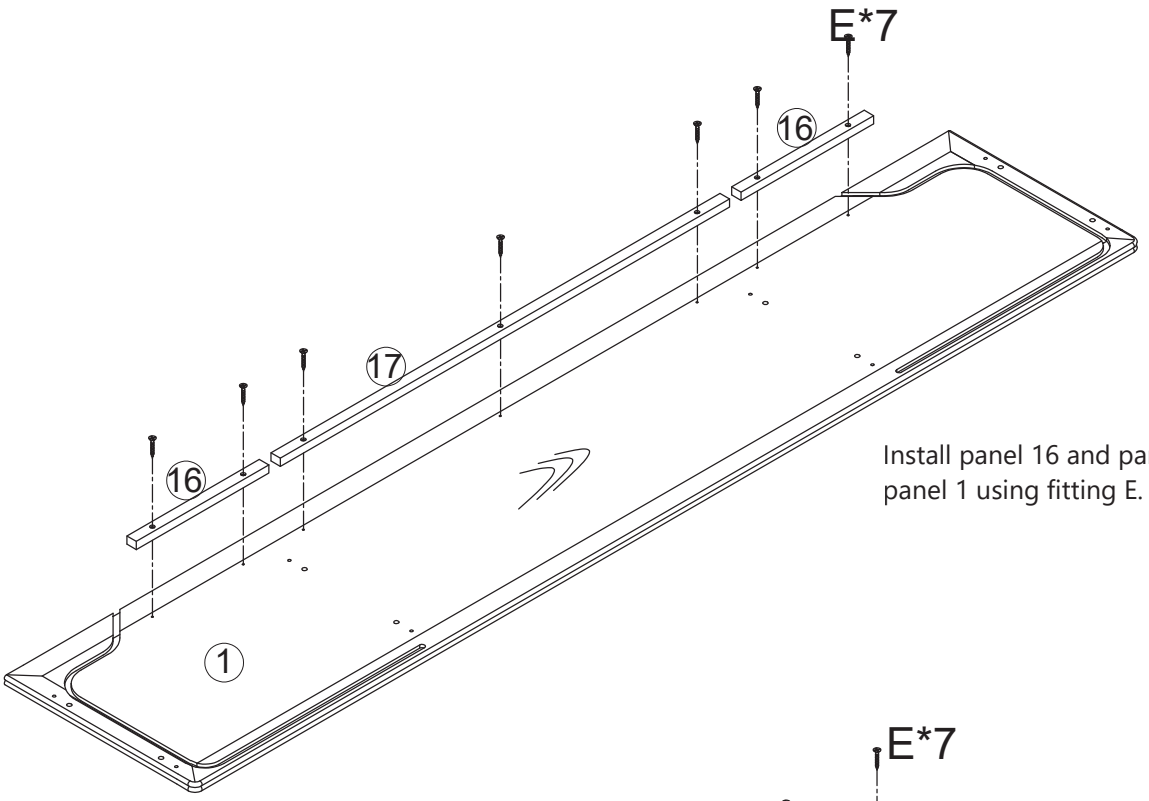


Install panel 16 and panel 17 onto panel 1 using fitting E.

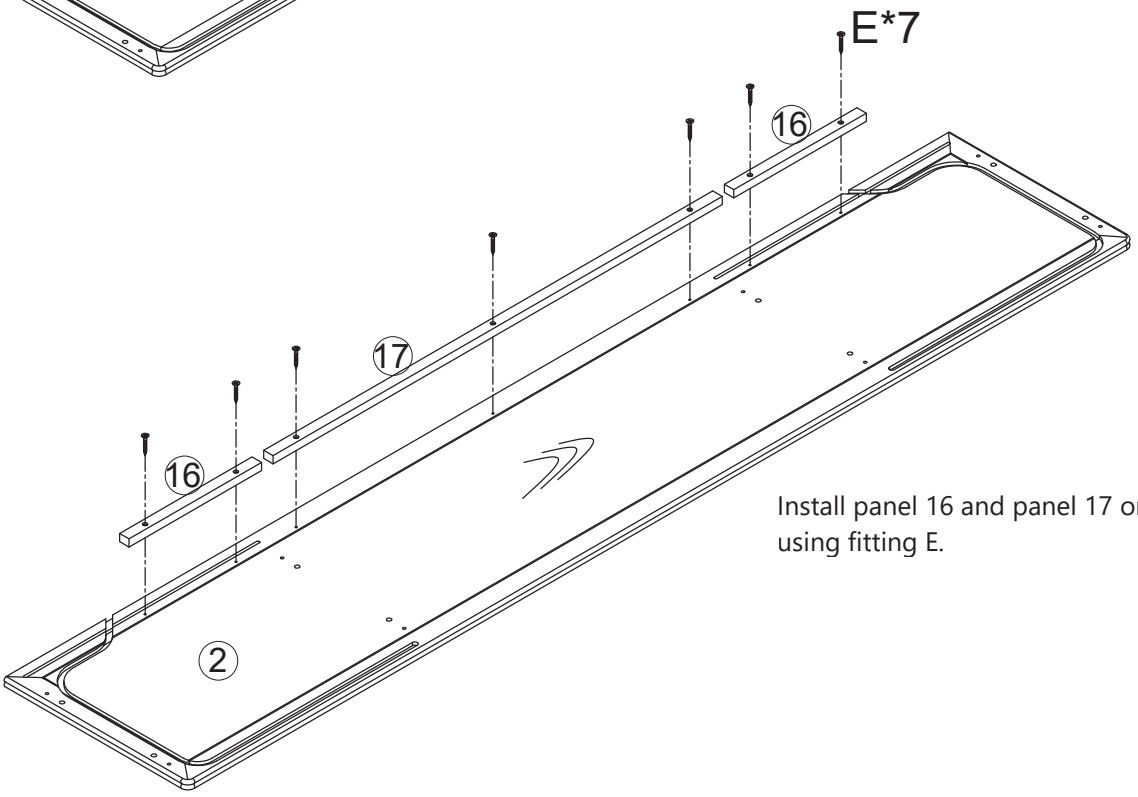



Install panel 16 and panel 17 onto panel 2 using fitting E.

E	14 PCS
	
M4*25	

STEP 3

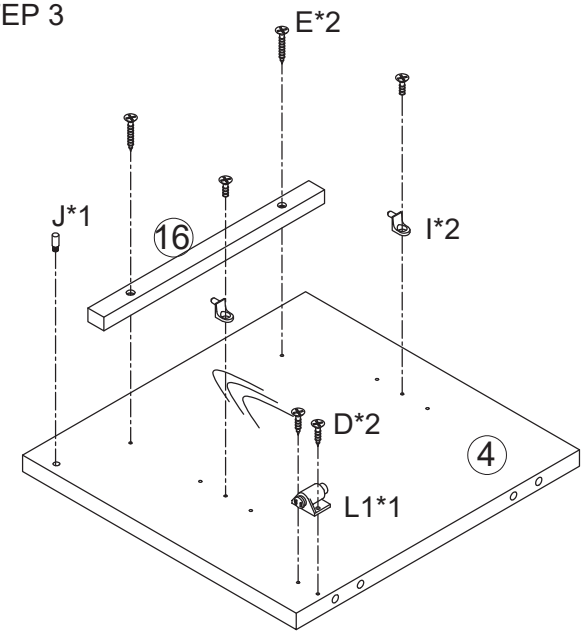

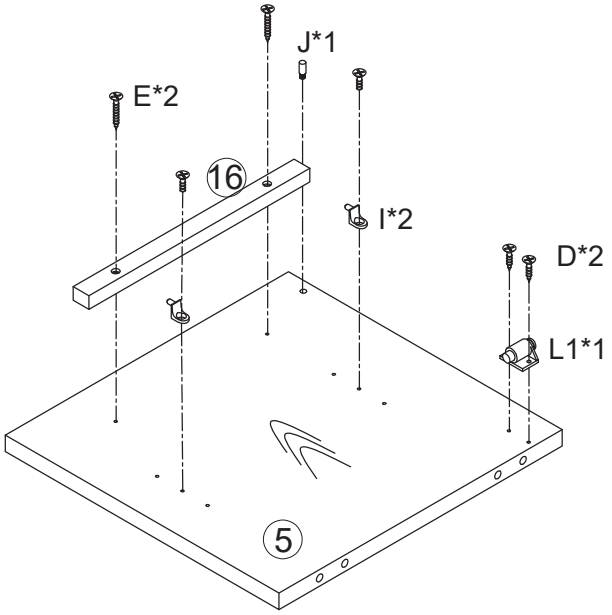

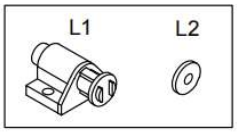


1.Install panel 16 onto panel 4 and panel 5 respectively using fitting E.
2.Install fitting J onto panel 4 and panel 5 respectively.
3.Fix fitting I onto the corresponding holes of panel 4 and panel 5 respectively.
4.Fix fitting L onto the corresponding holes of panel 4 and panel 5 respectively using fitting D.

D	4 PCS	E	4 PCS	I	4 SET	J	2 PCS	L	2 PCS
									
M3.5*14		M4*25		Support		M5		Magnet	

STEP 4


Install panel 3, panel 4, panel 5, and panel 6 onto panel 2 using fitting A, fitting B, and fitting C.

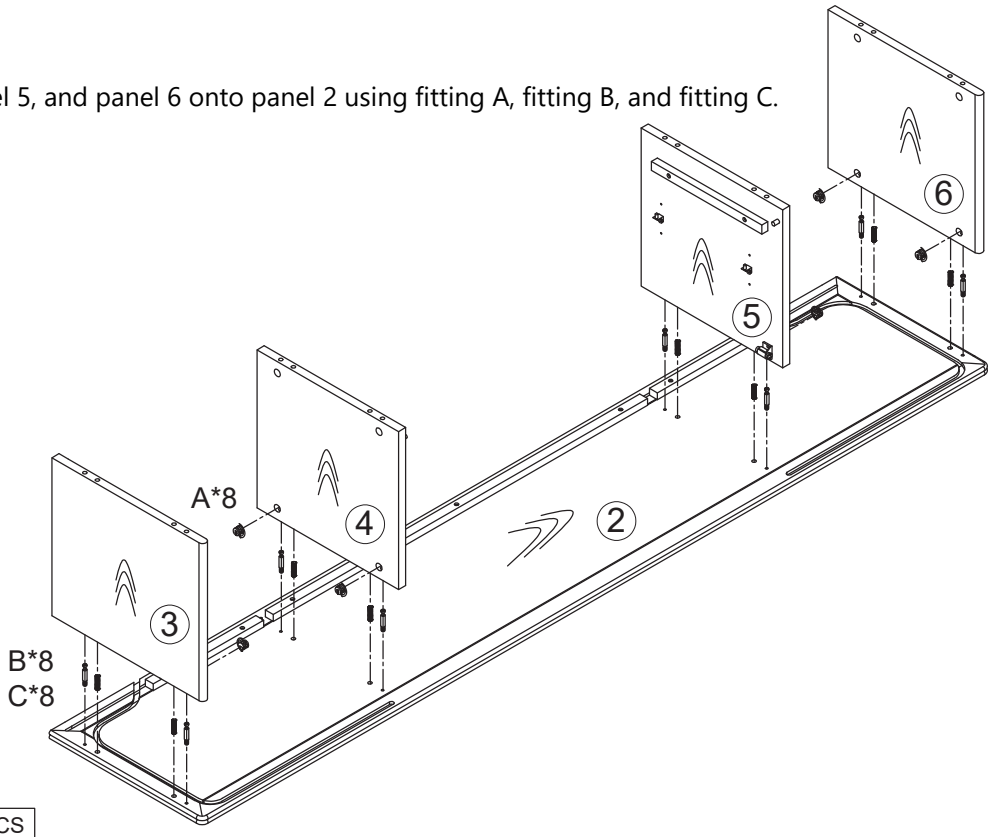

A	8 PCS	B	8 PCS	C	8 PCS
					
Ø15*10		Ø7*35		M8*30	

STEP 5

Install panel 3, panel 4, panel 5, and panel 6 (from the cabinet frame assembled in the previous step) onto panel 1 using fitting A, fitting B, and fitting C.

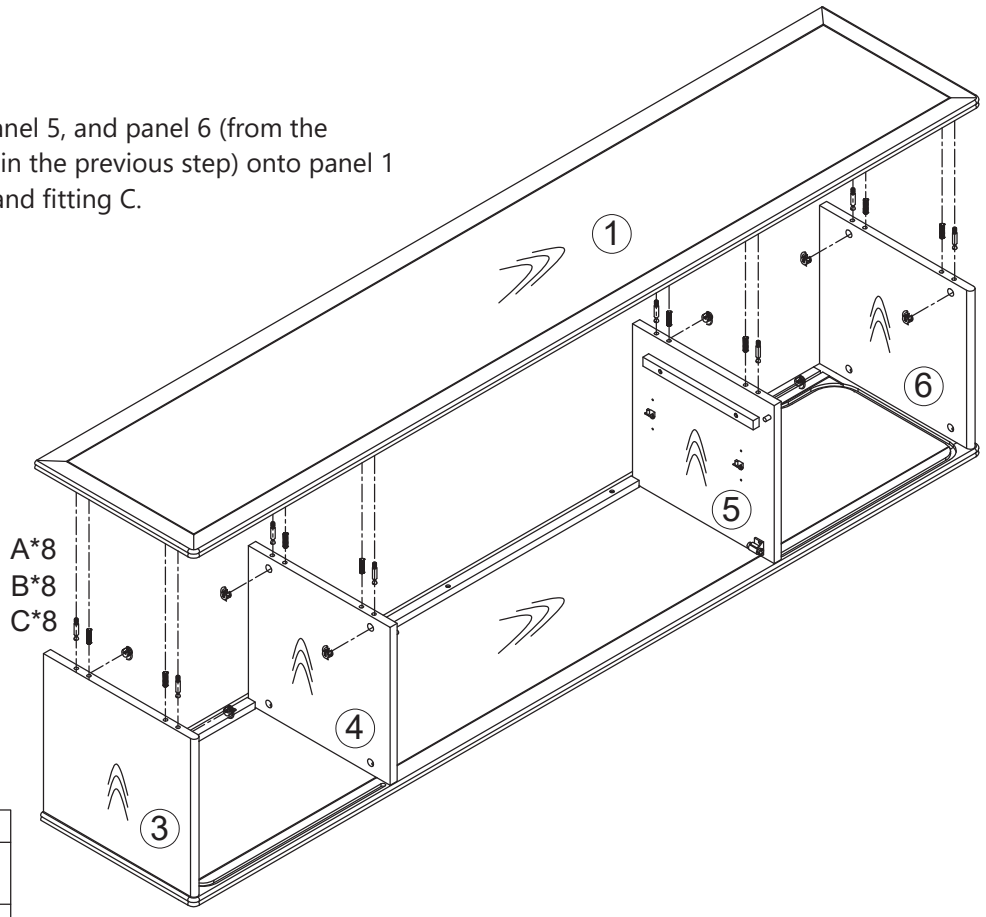


A	8 PCS
	
Ø15*10	

B	8 PCS
	
Ø7*35	


C	8 PCS
	
M8*30	

STEP 6

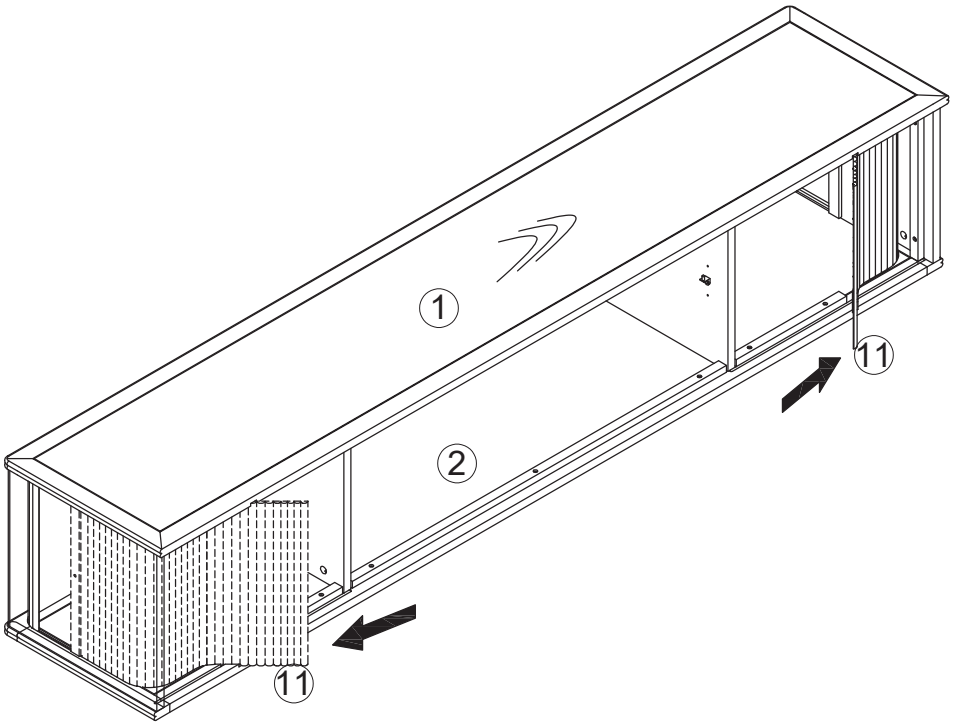

Move to the back of the cabinet, then push the No. 11 roller shutter sliding door into the corresponding track slots of panel 1 and panel 2.

STEP 7

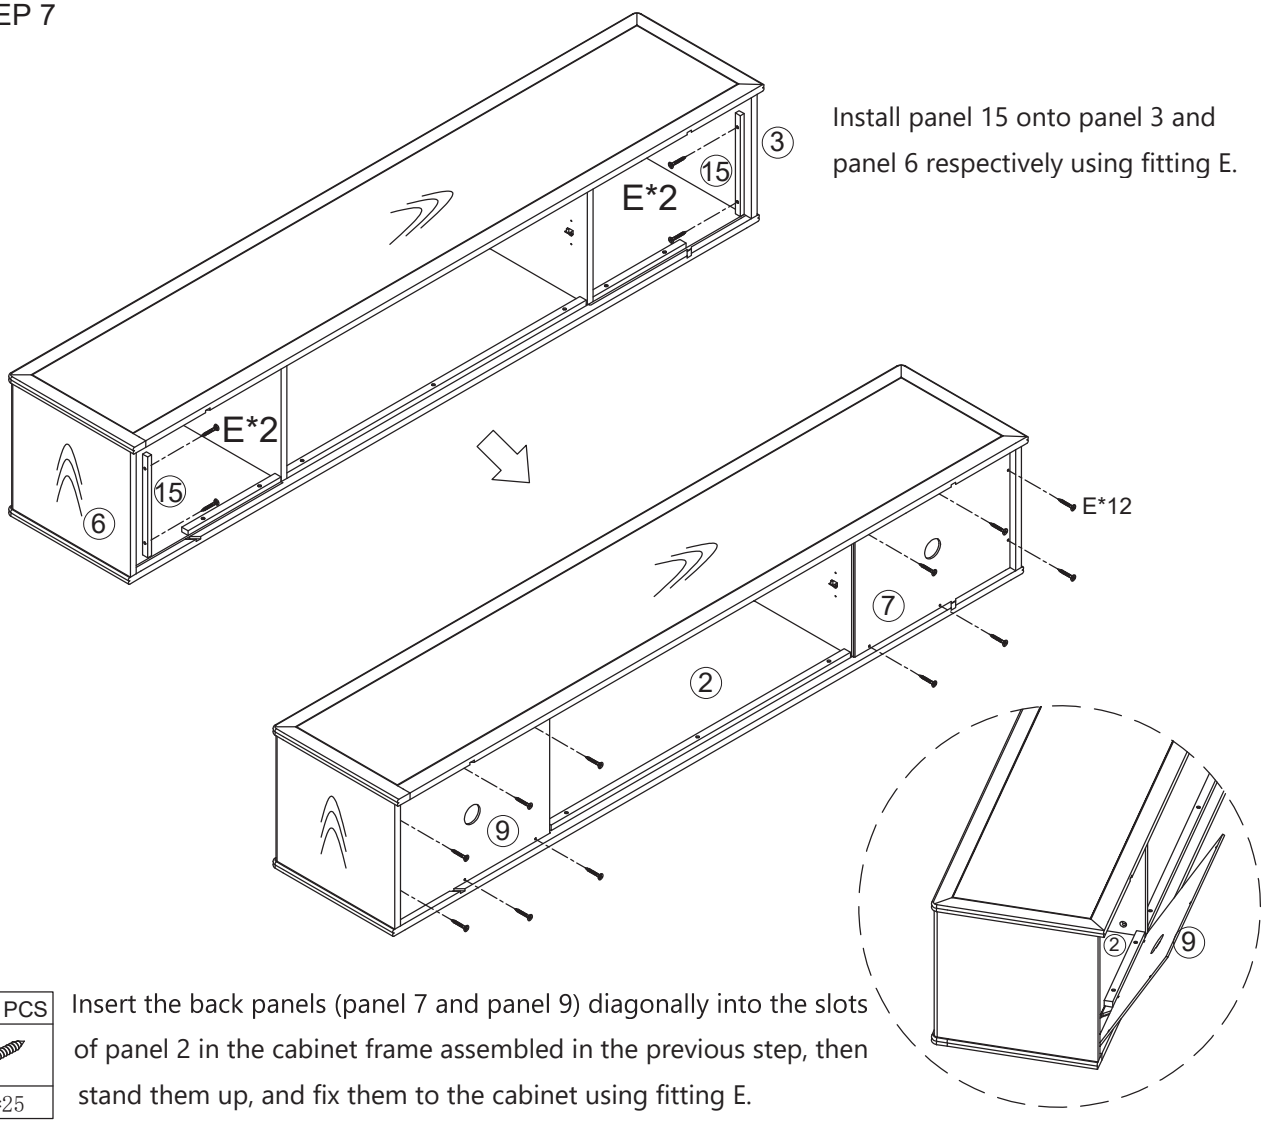


Install panel 15 onto panel 3 and panel 6 respectively using fitting E.

E	16 PCS
	
M4*25	

Insert the back panels (panel 7 and panel 9) diagonally into the slots of panel 2 in the cabinet frame assembled in the previous step, then stand them up, and fix them to the cabinet using fitting E.


STEP 8

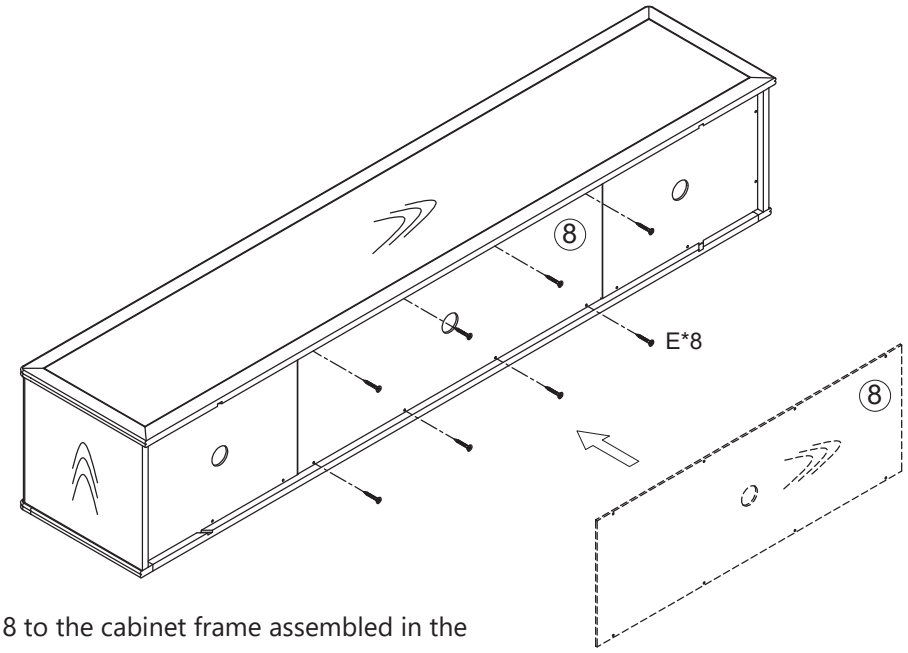

E	8 PCS
	
M4*25	

Fix panel 8 to the cabinet frame assembled in the previous step using fitting E.


STEP 9

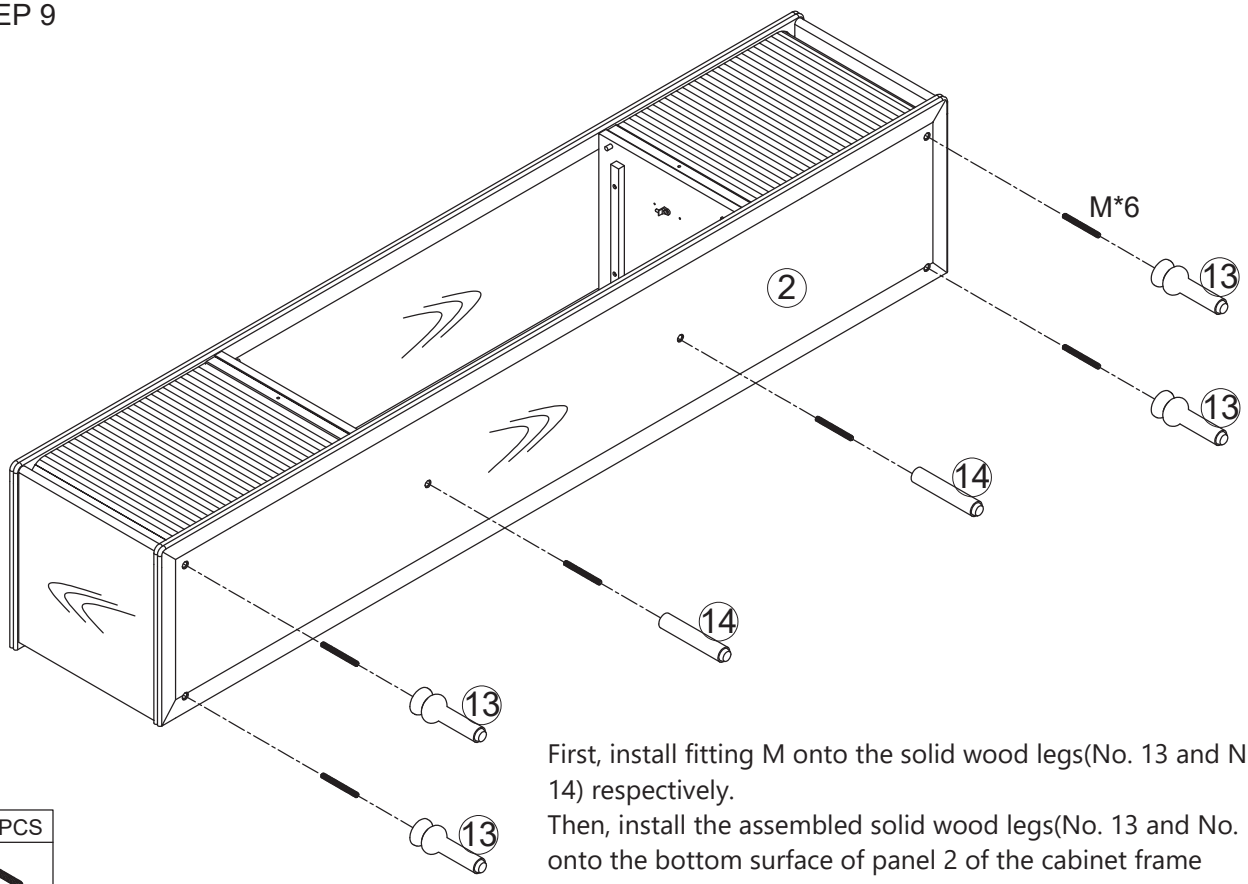

M	6 PCS
M8*35	

First, install fitting M onto the solid wood legs(No. 13 and No. 14) respectively.
Then, install the assembled solid wood legs(No. 13 and No. 14) onto the bottom surface of panel 2 of the cabinet frame assembled in the previous step.

STEP 10

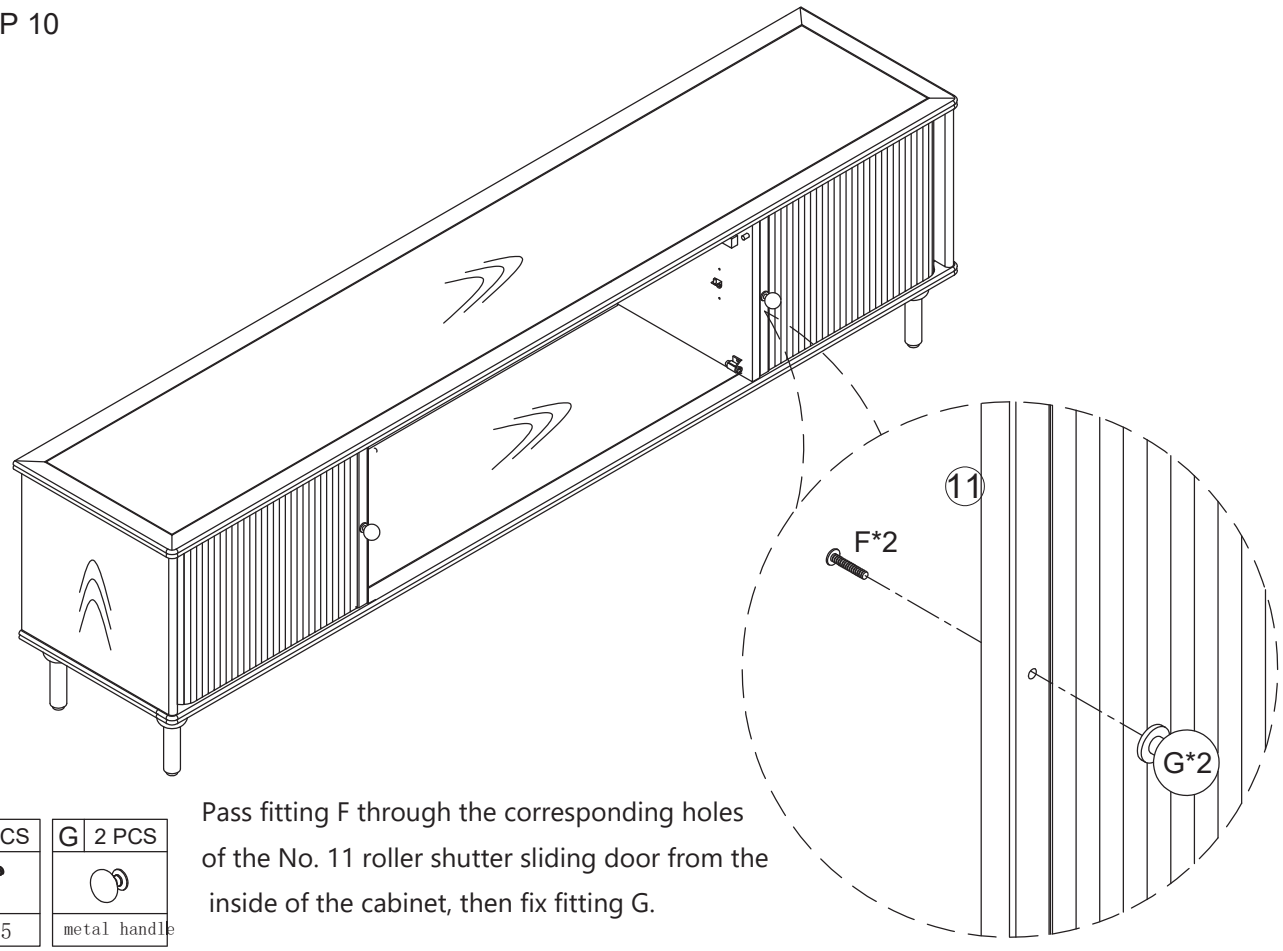


F	2 PCS
M4*25	

G	2 PCS
metal handle	

Pass fitting F through the corresponding holes of the No. 11 roller shutter sliding door from the inside of the cabinet, then fix fitting G.


STEP 11

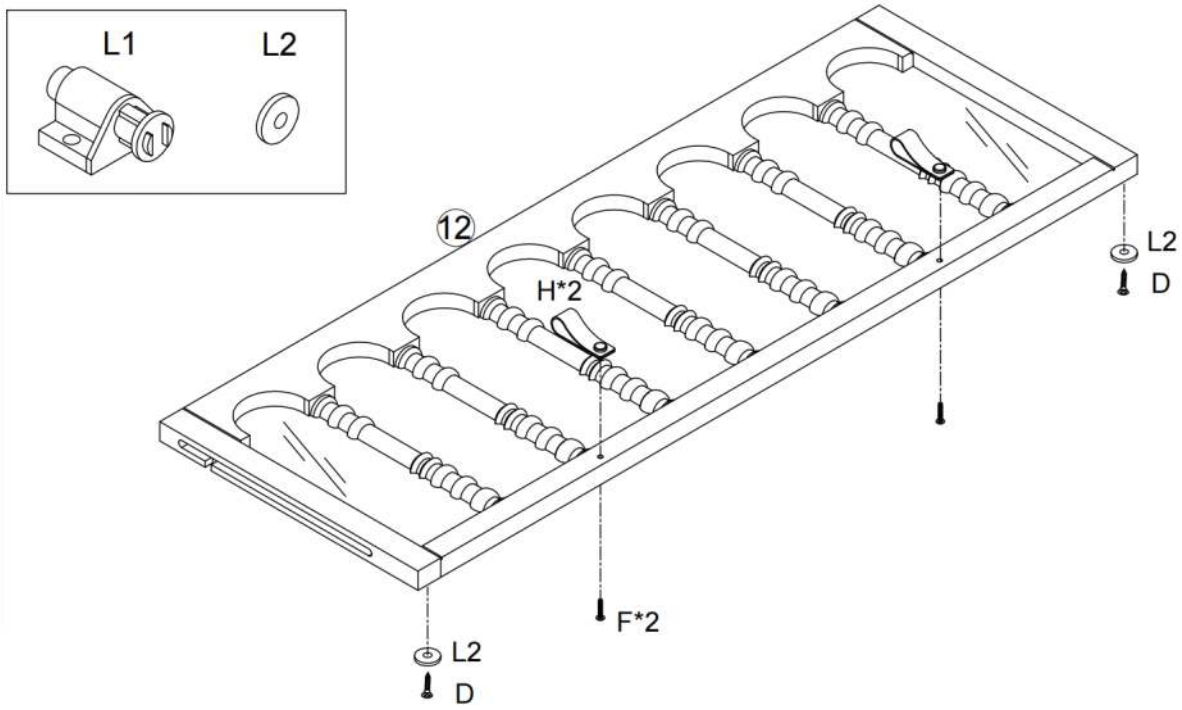

F	2 PCS	H	2 PCS	L	2 PCS	D	2 PCS
M4*25		leather hand		Magnet		M3.5*14	


As shown , pass fitting F through the corresponding holes of the No. 12 flip-up door, then fix fitting H.

STEP 12

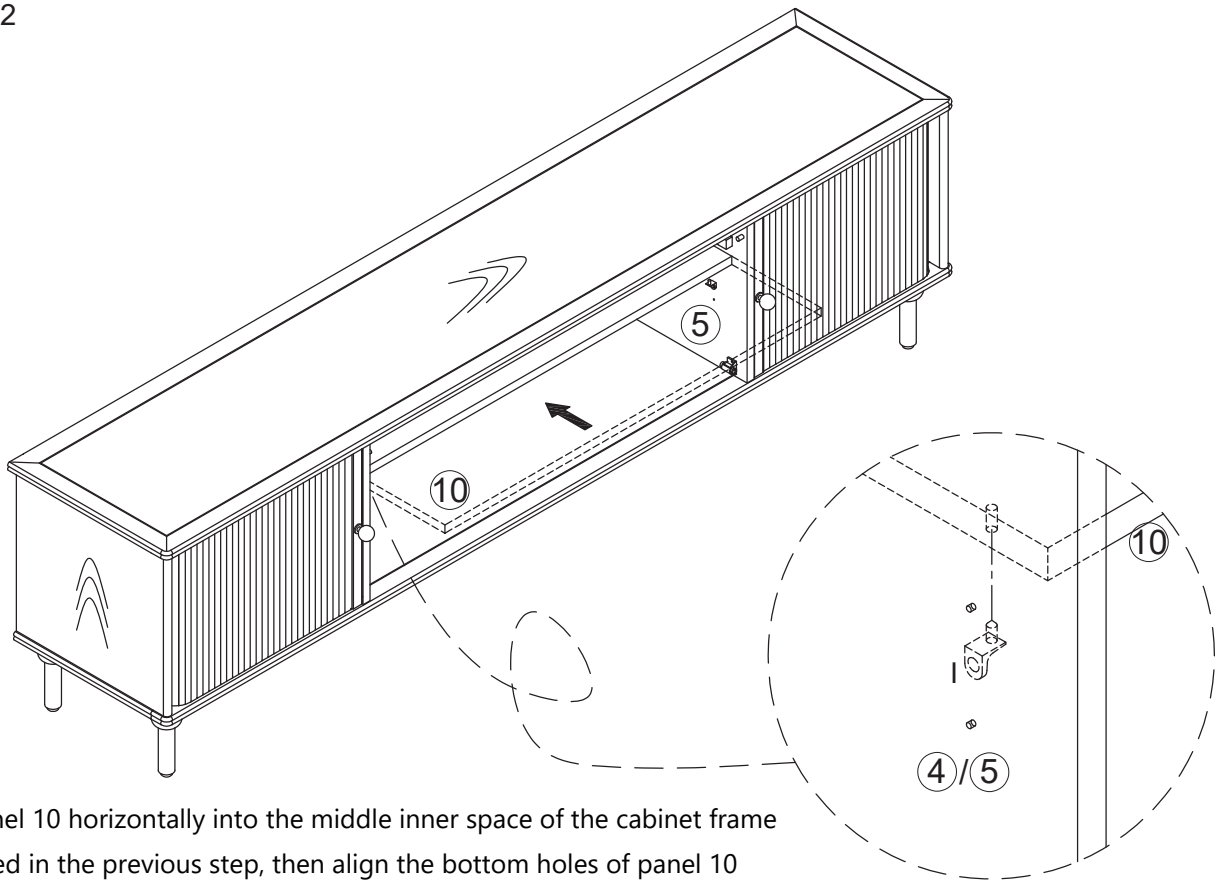


Slide panel 10 horizontally into the middle inner space of the cabinet frame assembled in the previous step, then align the bottom holes of panel 10 with fitting I on panel 4 and panel 5, and place it down.

STEP 13

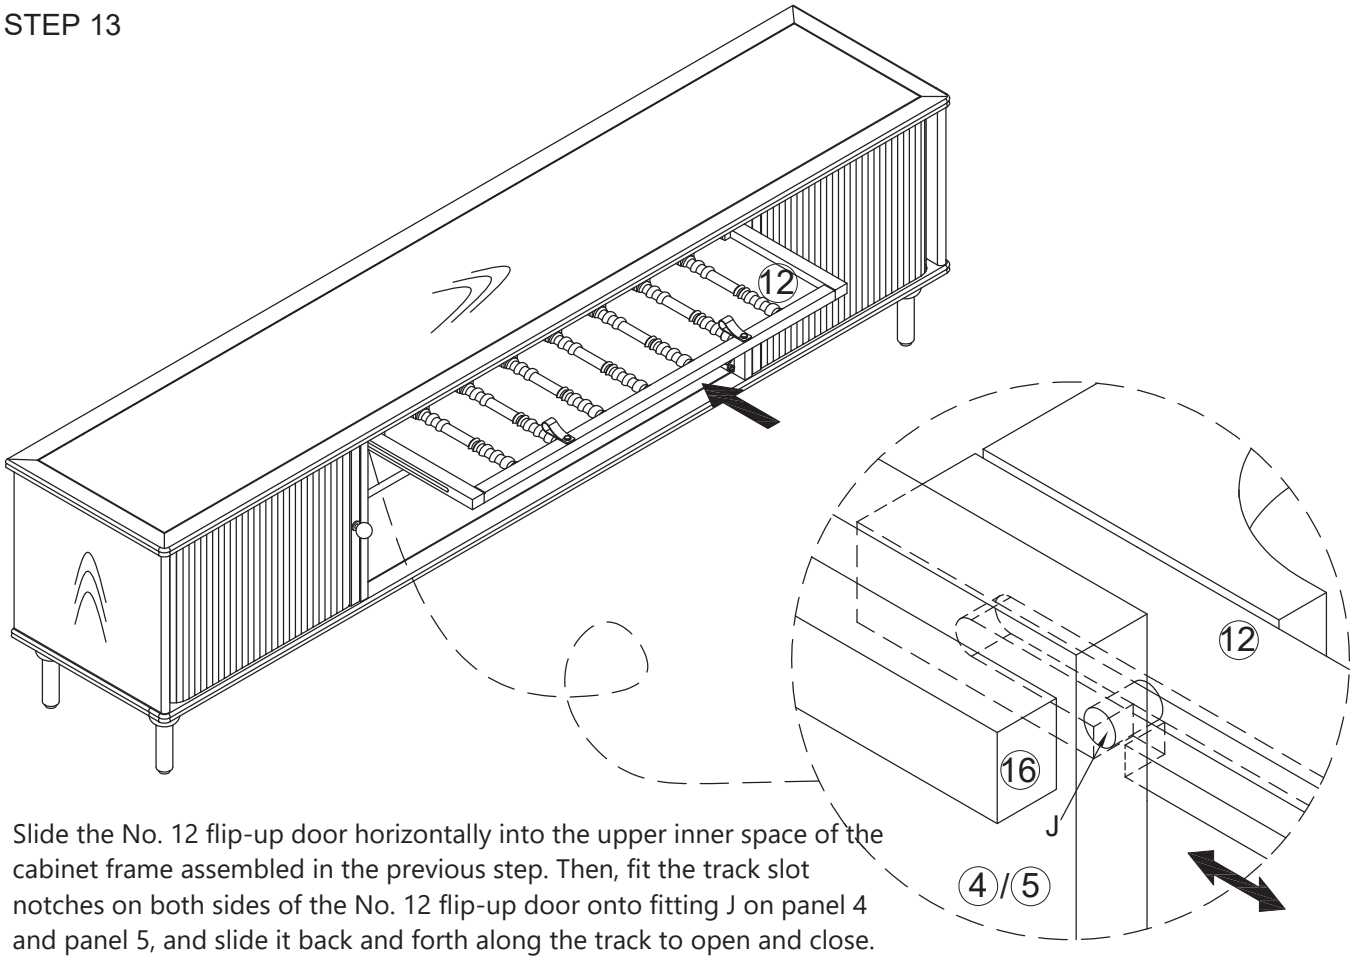

Slide the No. 12 flip-up door horizontally into the upper inner space of the cabinet frame assembled in the previous step. Then, fit the track slot notches on both sides of the No. 12 flip-up door onto fitting J on panel 4 and panel 5, and slide it back and forth along the track to open and close.

STEP 14

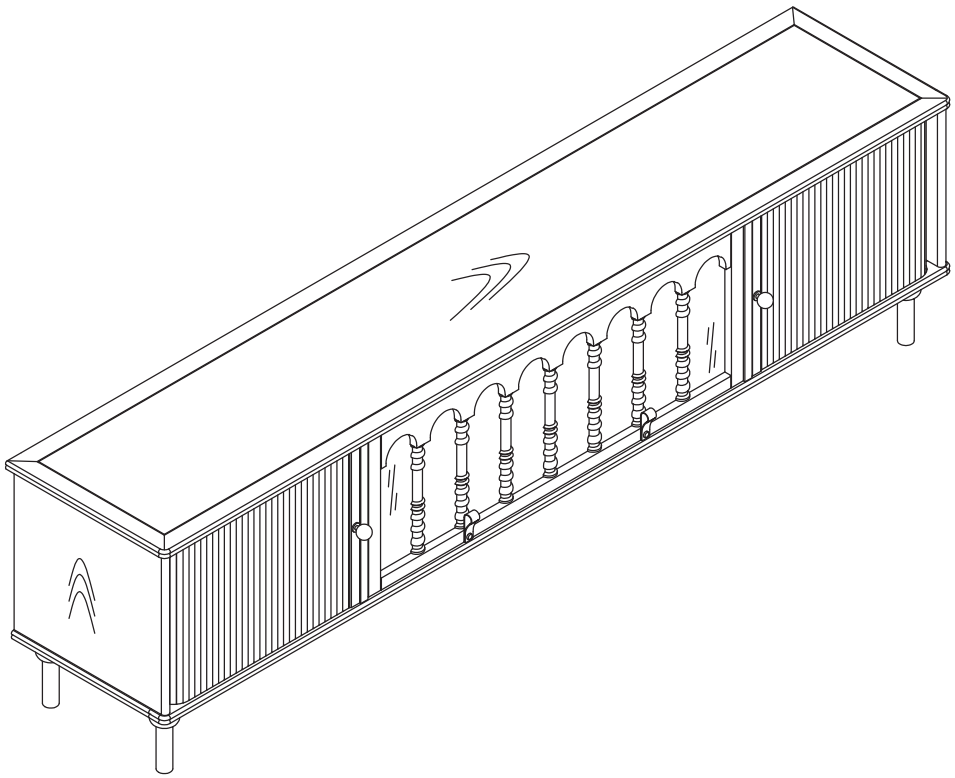

OK