
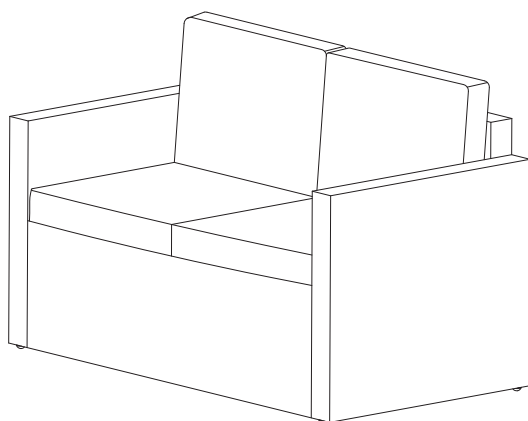
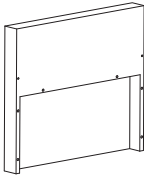
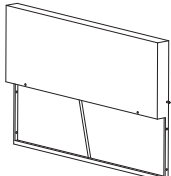






Outdoor Wicker Loveseat






PART LIST

A 	B 	C 	D 	E 
Arm Panel 2 PCS	Back Panel 1 PC	Seat Panel 1 PC	Lower Front Panel 1 PC	Cover of Seat Cushion * 2 PCS
F 	G 	H 	*Please note cushion covers will ship separately.	
Core of Seat Cushion 2 PCS	Cover of Back Cushion * 2 PCS	Core of Back Cushion 2 PCS		

HARDWARE LIST


#1 	#2 	#3 	#4 	#5 
M6*30mm Short Bolt 2 PCS	M6*40mm Medium Bolt 4 PCS	M6*50mm Long Bolt 10 PCS	M6mm Nut 14 PCS	M6mm Washer 30 PCS
#6 	#7 	#8 		
M6mm Wrench 1 PC	M6mm Allen Key 1 PC	M6mm Adjustable Leveler 4 PCS		

EXTRA HARDWARE LIST

#1 	#2 	#3 	#4 	#5 
M6*30mm Short Bolt 1 PC	M6*40mm Medium Bolt 1 PC	M6*50mm Long Bolt 3 PCS	M6mm Nut 3 PCS	M6mm Washer 3 PCS


Step 1. Lay arm panel (part A) down on a soft flat surface, such as carpet, as shown below. Attach back panel (part B) to arm panel (part A) using medium bolts (part #2), washers (part #5), nuts (part #4), wrench (part #6) and allen key (part #7).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

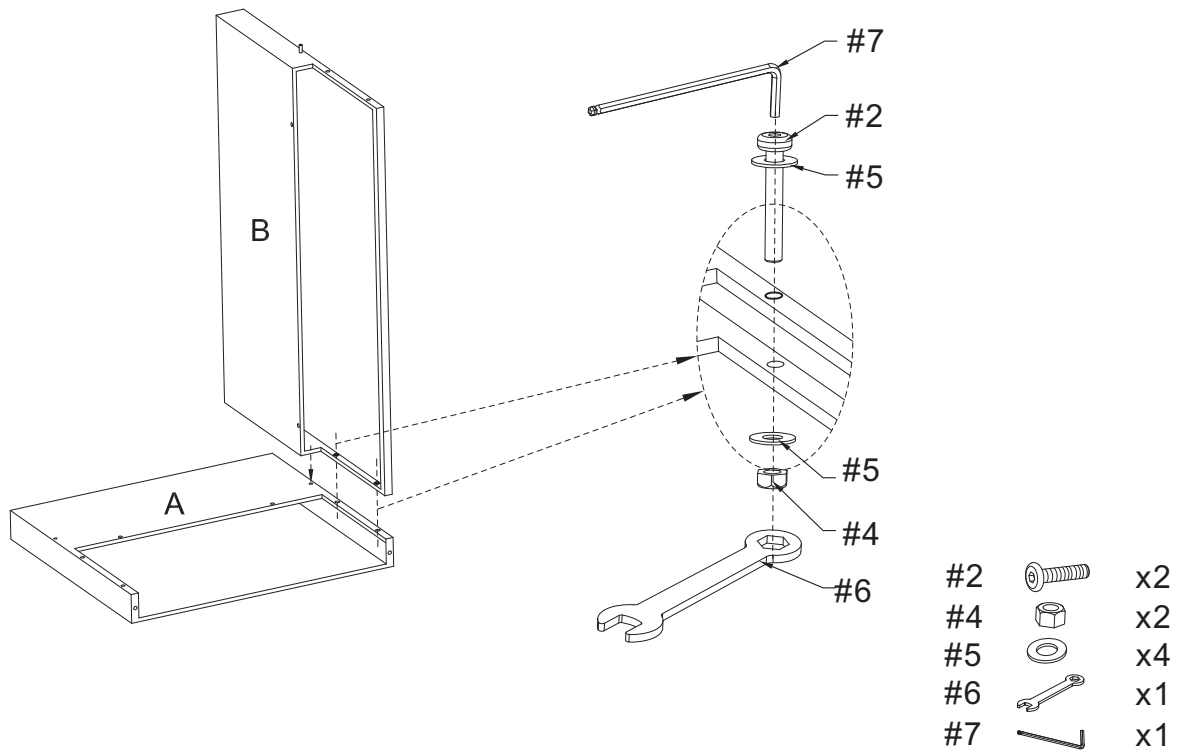


Step 2. Attach seat panel (part C) to arm panel (part A) and back panel (part B) using long bolts (part #3), washers (part #5), nuts (part #4), wrench (part #6) and allen key (part #7).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

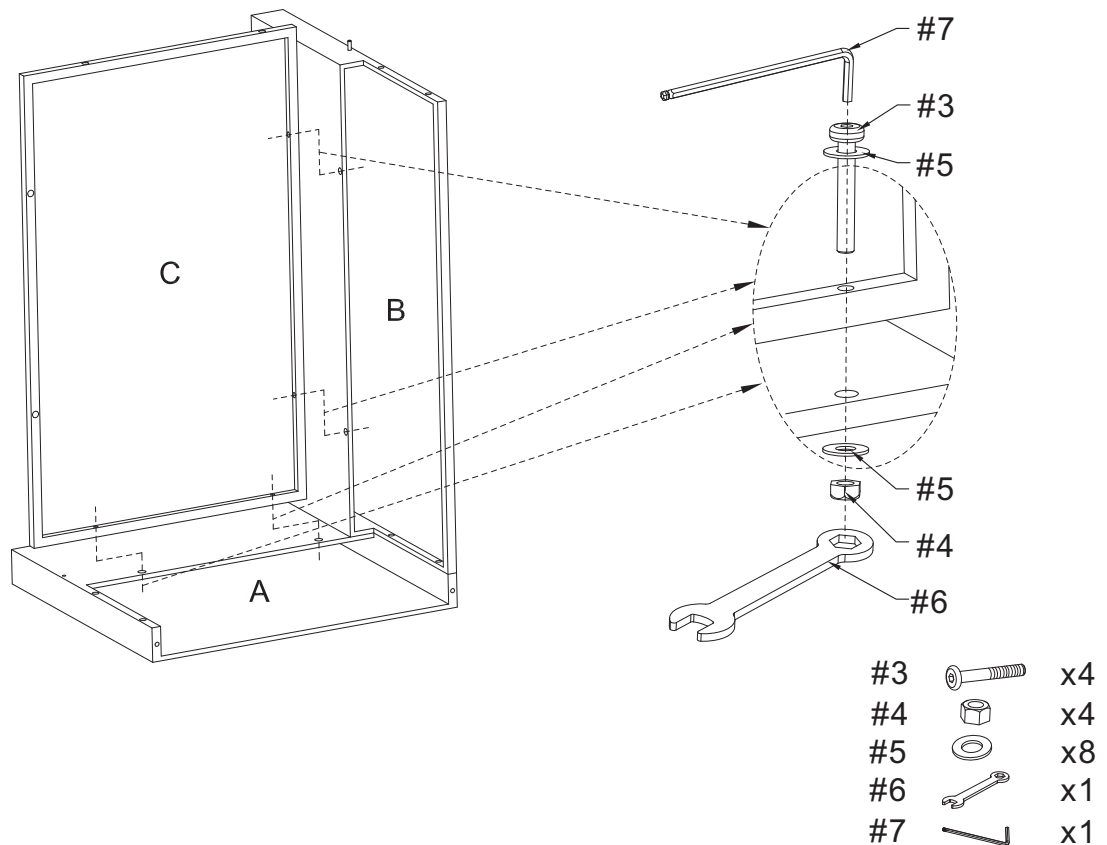


Step 3. Attach lower front panel (part D) to arm panel (part A) and seat panel (part C) using short bolts (part #1), long bolts (part #3), washers (part #5), nuts (part #4), wrench (part #6) and allen key (part #7).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

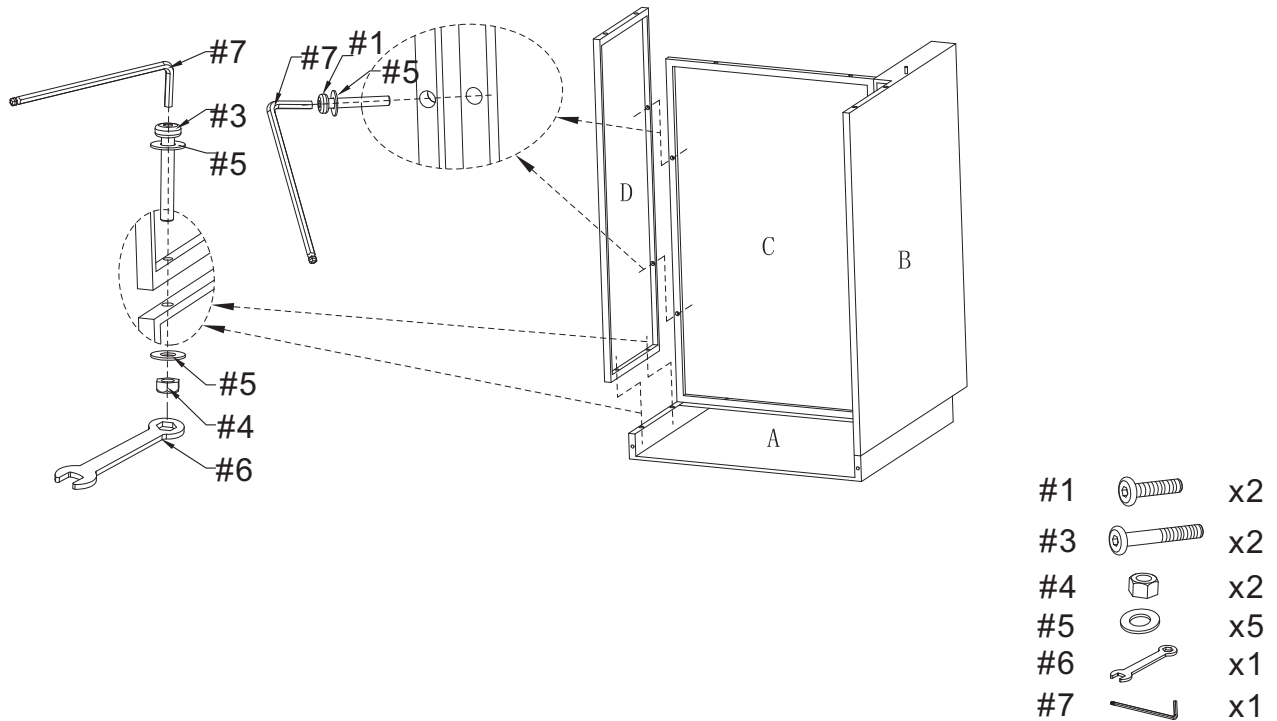


Step 4. Attach arm panel (part A) to assembled unit (parts A,B,C&D) using medium bolts (part #2), long bolts (part #3), washers (part #5), nuts (part #4), wrench (part #6) and allen key (part #7).


NOTE: Please fully tighten all bolts at this time.

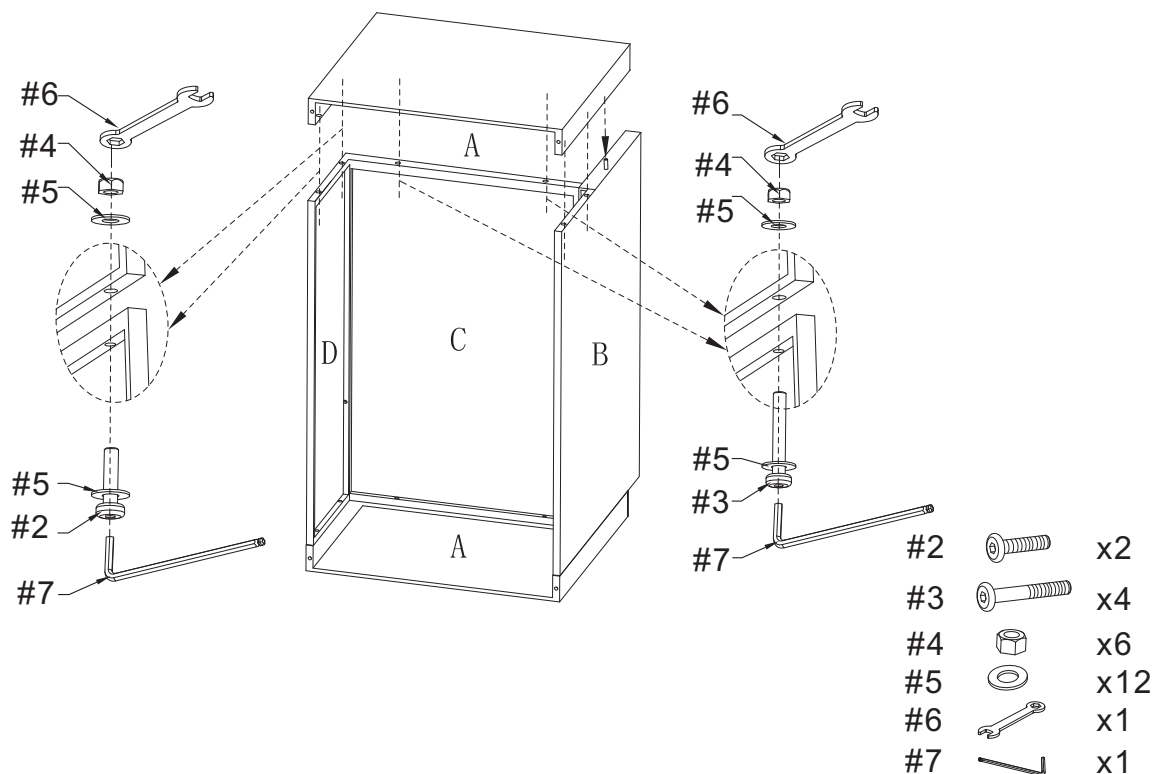

Step 5. Screw adjustable levelers (part #8) to desired position in the pre-drilled holes on the bottom of the chair where shown.

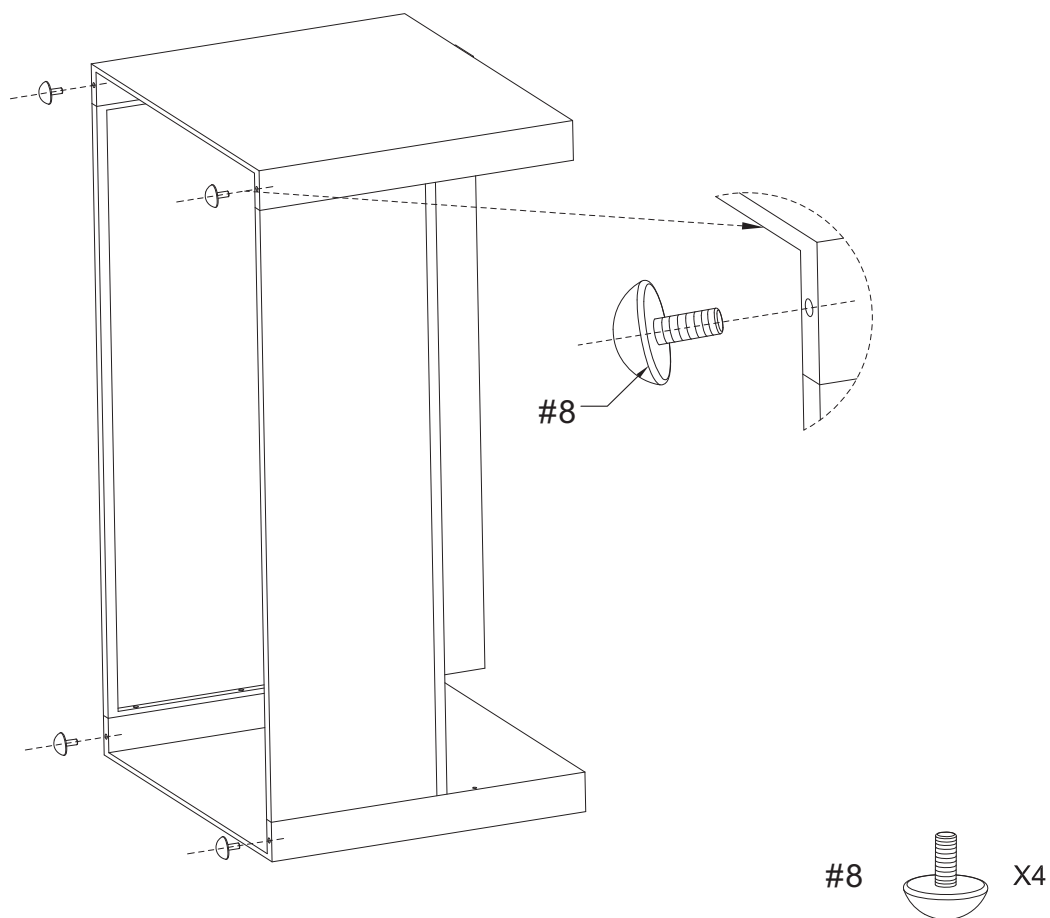

Step 6. Insert core of seat cushion (part F) into cover of seat cushion (part E).
Insert core of back cushion (part H) into cover of back cushion (part G).

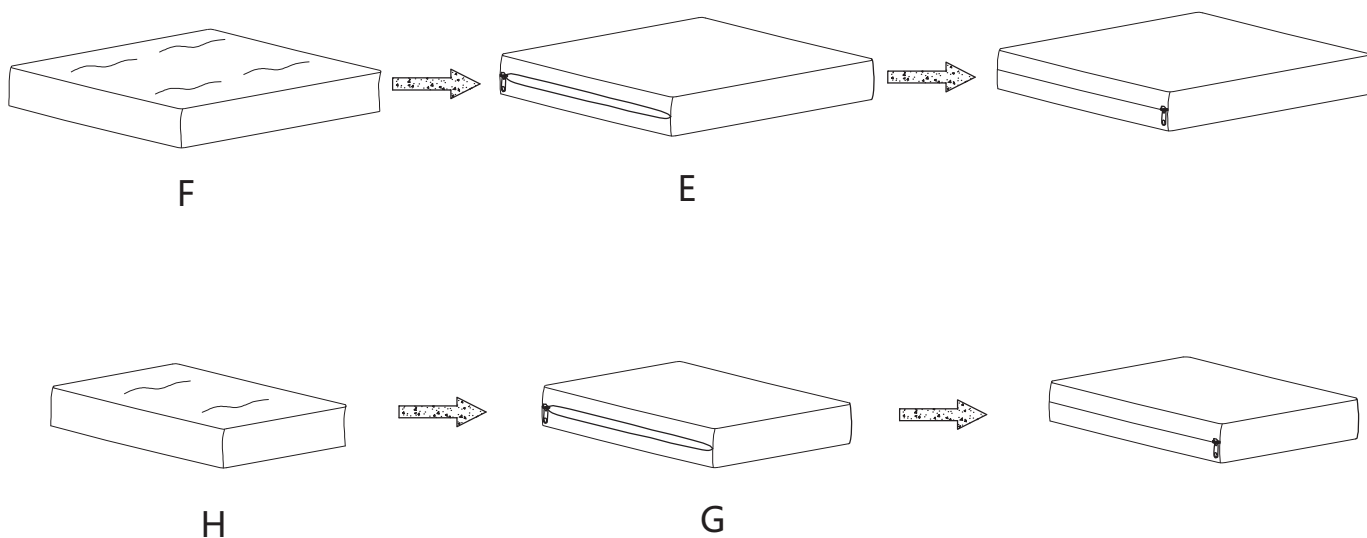

Step 7. Carefully turn the assembled chair upright and add cushions as shown below.

