
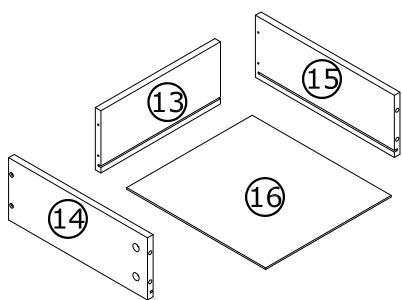
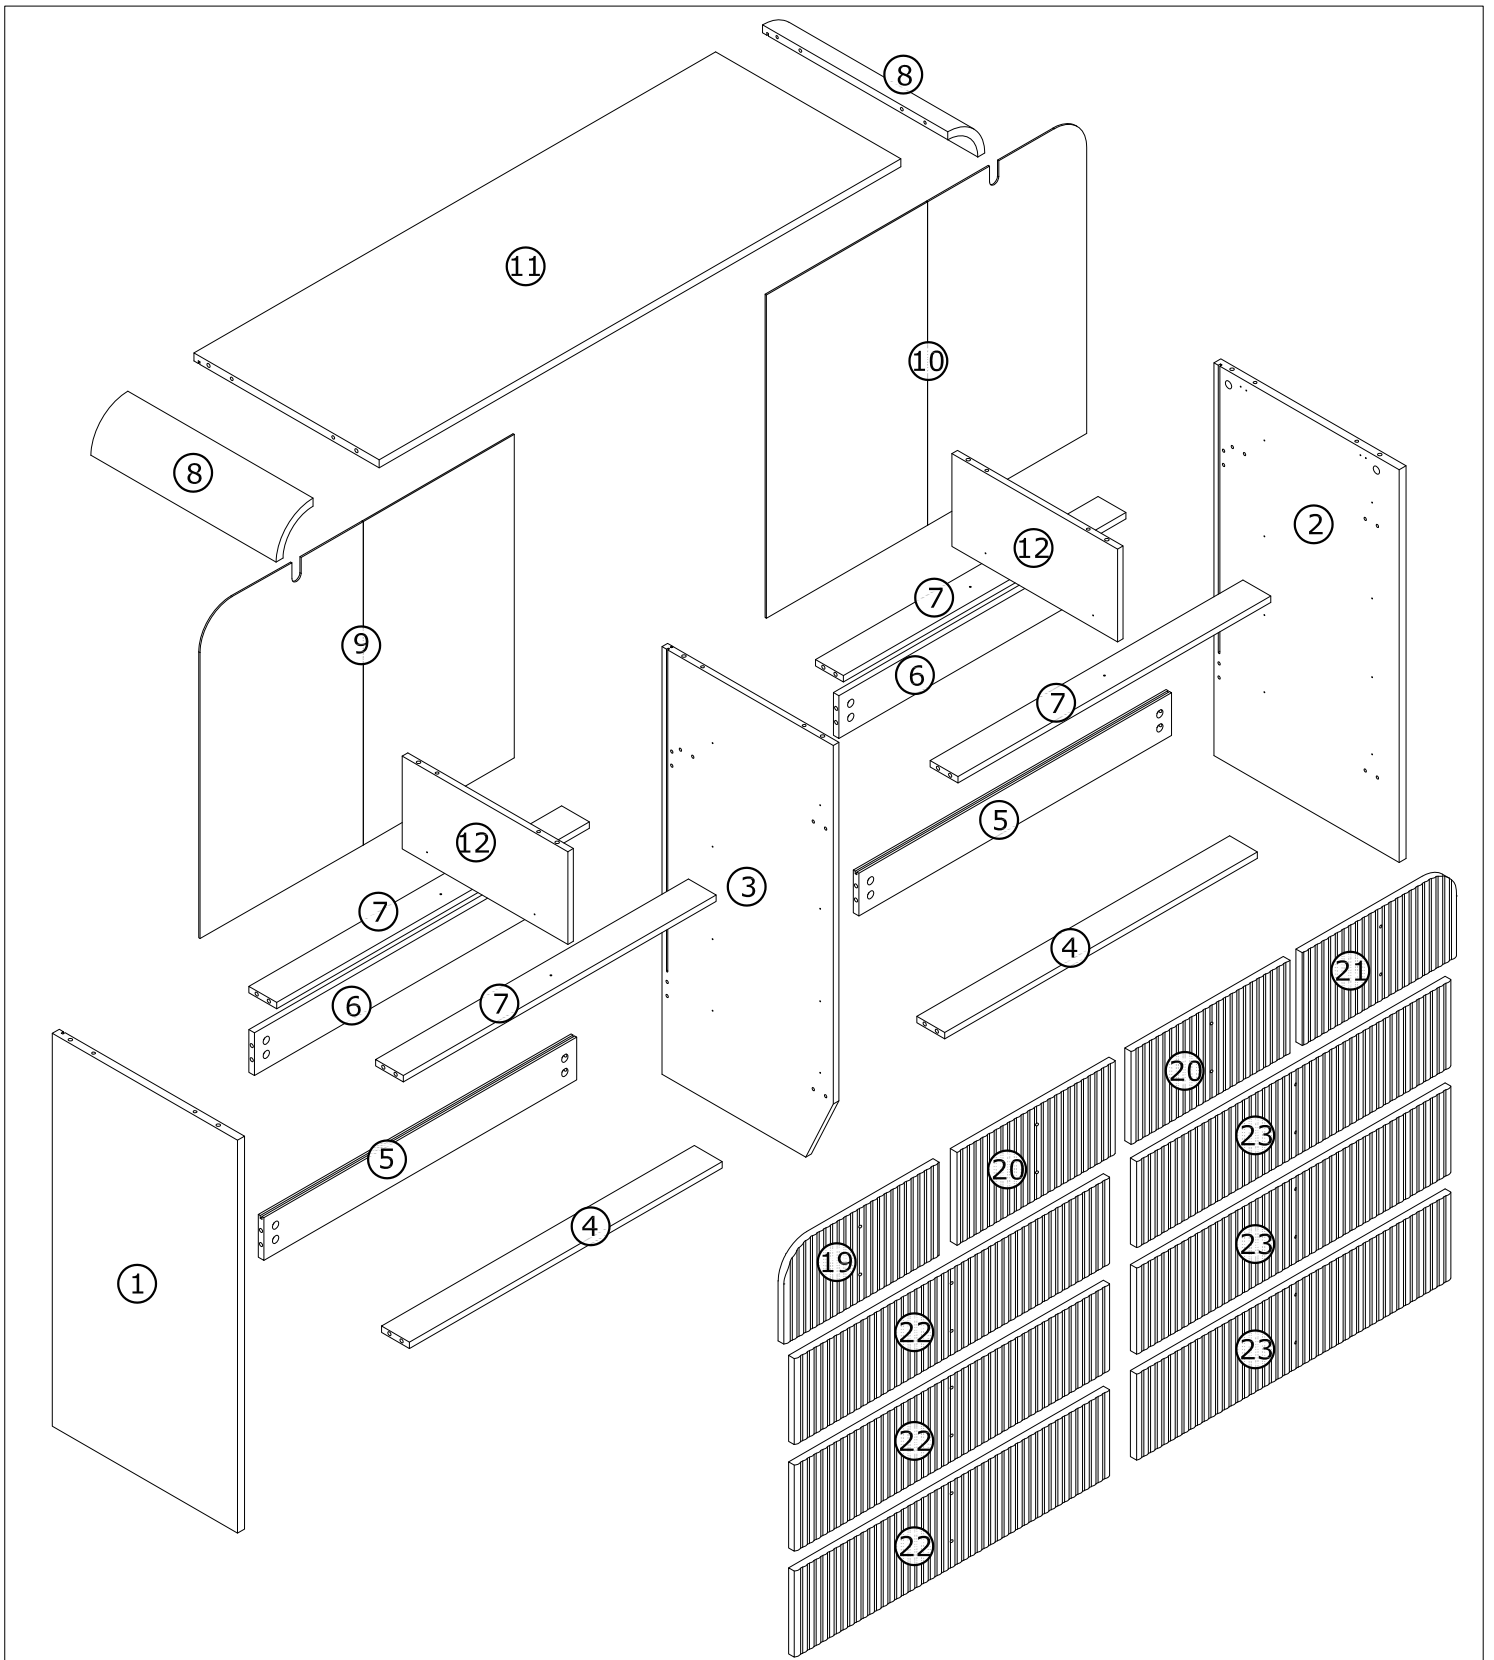


Installation instruction























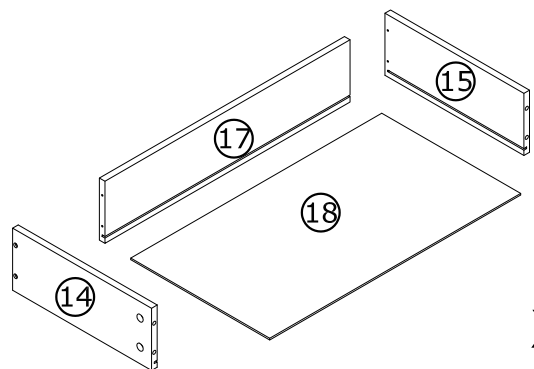


x4
















x6

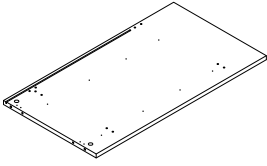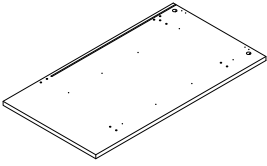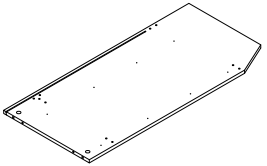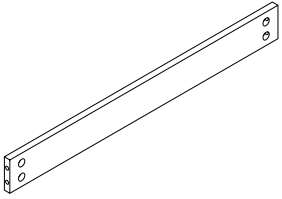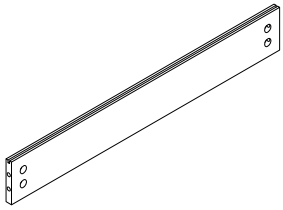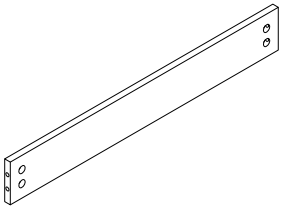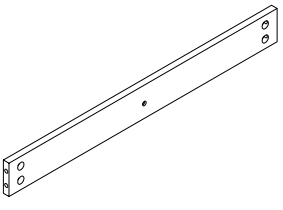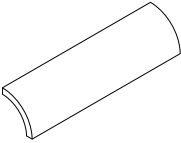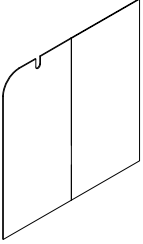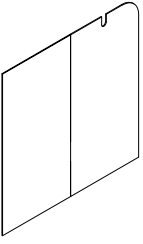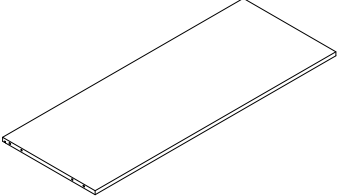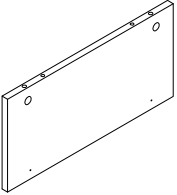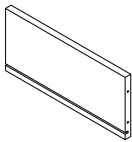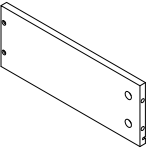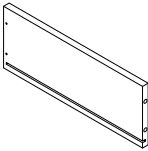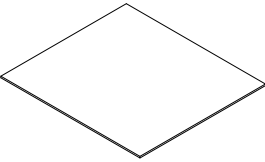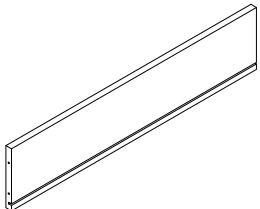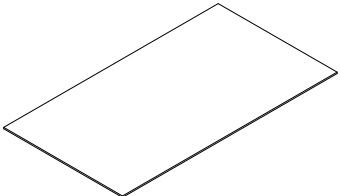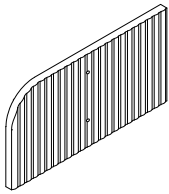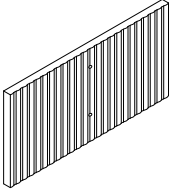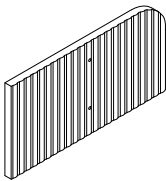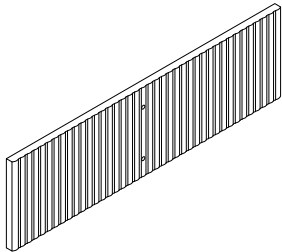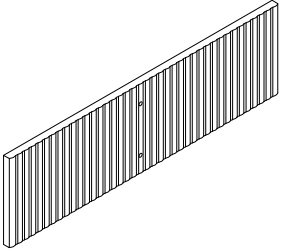Parts and Operation Elements

			
① 1pc	② 1pc	③ 1pc	④ 2pcs
			
⑤ 2pcs	⑥ 2pcs	⑦ 4pcs	⑧ 2pcs
			
⑨ 1pc	⑩ 1pc	⑪ 1pc	⑫ 2pcs
			
⑬ 4pcs	⑭ 10pcs	⑮ 10pcs	⑯ 4pcs
			
⑰ 6pcs	⑱ 6pcs	⑲ 1pc	⑳ 2pcs
			
㉑ 1pc	㉒ 3pcs	㉓ 3pcs	




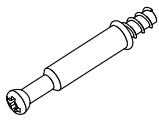
Hardware

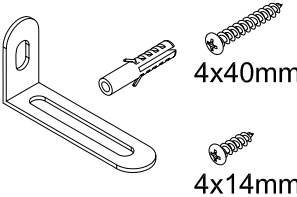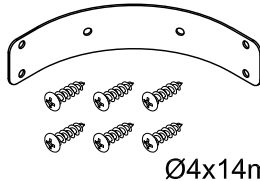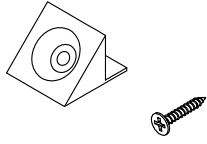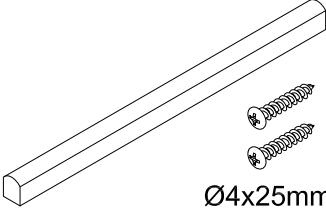 <p>Cam bolt</p>		 <p>Cam lock</p>		 <p>6 x 30mm Wood dowel</p>		 <p>Ø4 x 30mm</p>	
A	94+2pcs	B	94+2pcs	C	14+1pcs	D	44+1pcs
 <p>Ø3x12mm</p>		 <p>4x40mm 4x14mm</p>		 <p>Ø4x14mm</p>		 <p>Ø3x16mm Screw</p>	
E	80+2pcs	F	2pcs	G	4sets	H	8sets
 <p>Ø4x25mm</p>		 <p>300mm</p>		 <p>300mm</p>		 <p>300mm</p>	
I	10sets	CL	10pcs	CR	10pcs	DL	10pcs
 <p>300mm</p>							
DR	10pcs						












SPARE BAG

THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

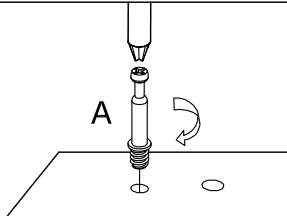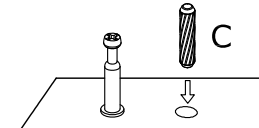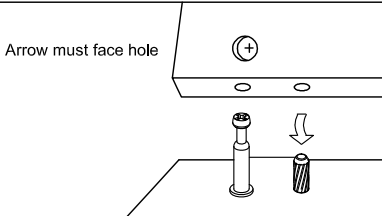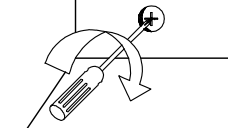
 <p>A</p>	 <p>C</p>	 <p>Arrow must face hole</p>	
Gently screw cam bolt into the threaded anchor	Insert the wood dowel halfway into hole		Screw the camlock firmly into locked position.


1

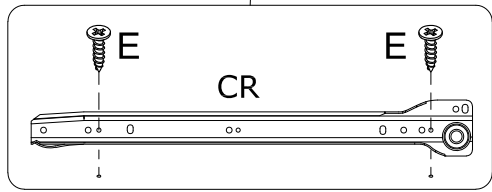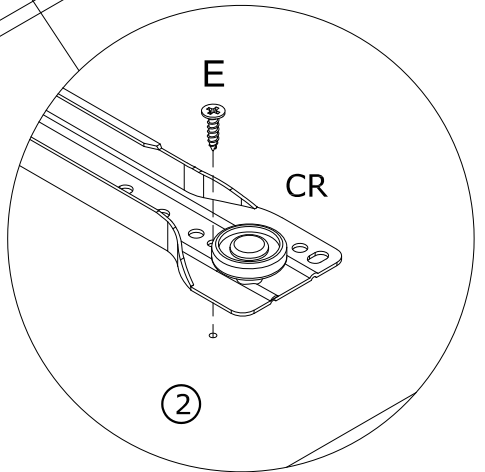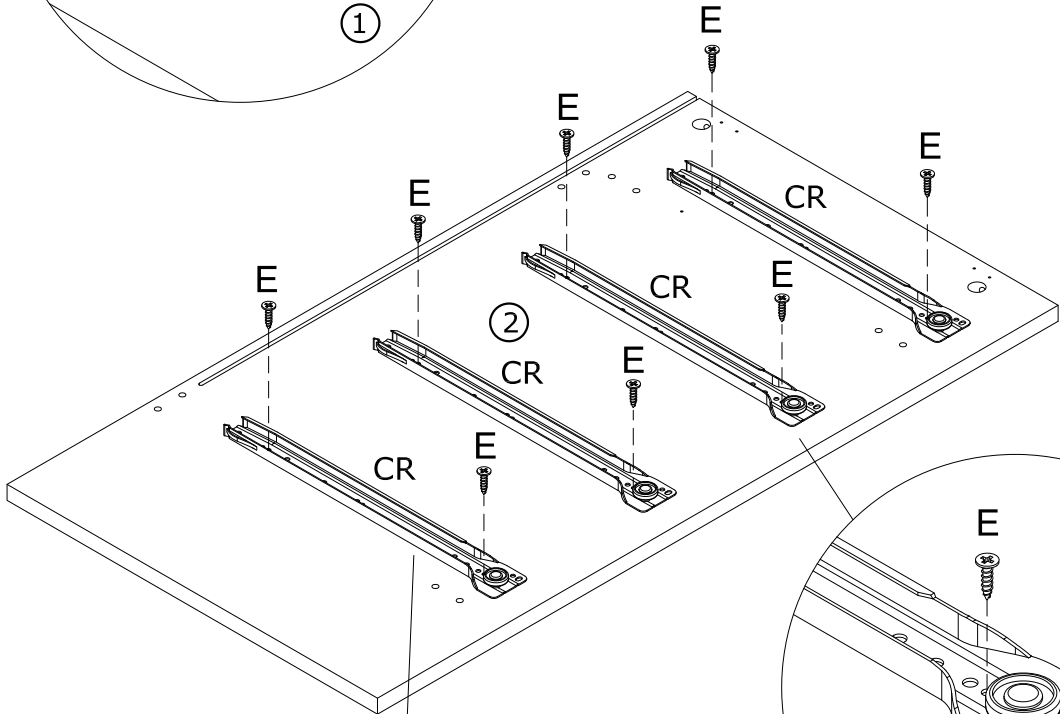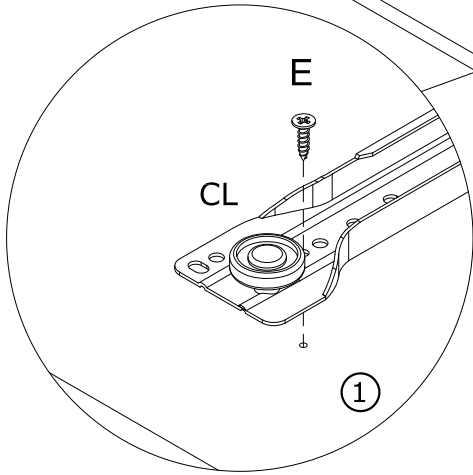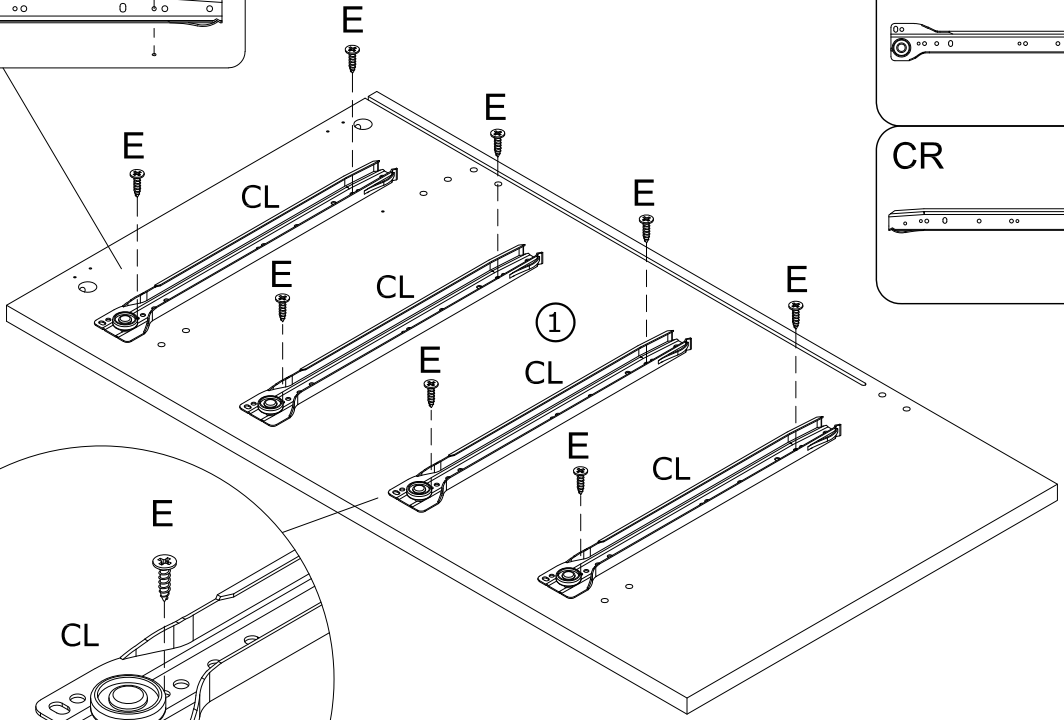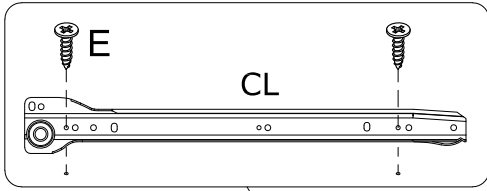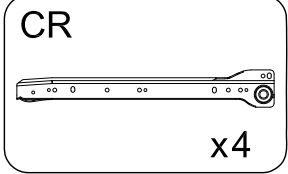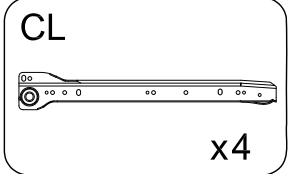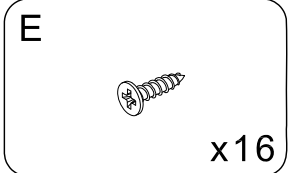







2

⚠ Only 1pc No. ③ panel.





E

x16

CL

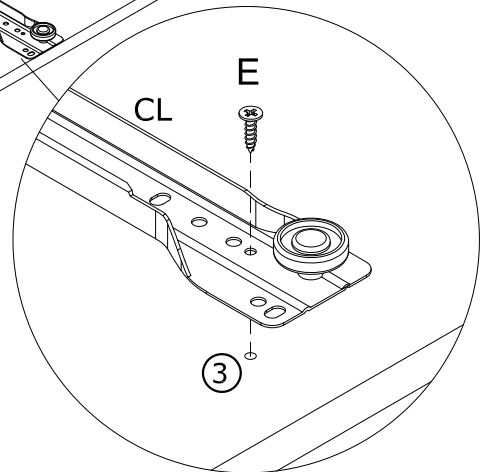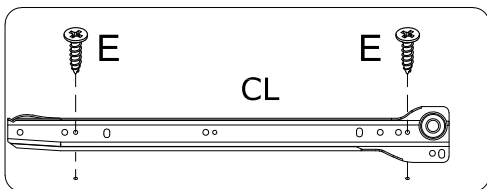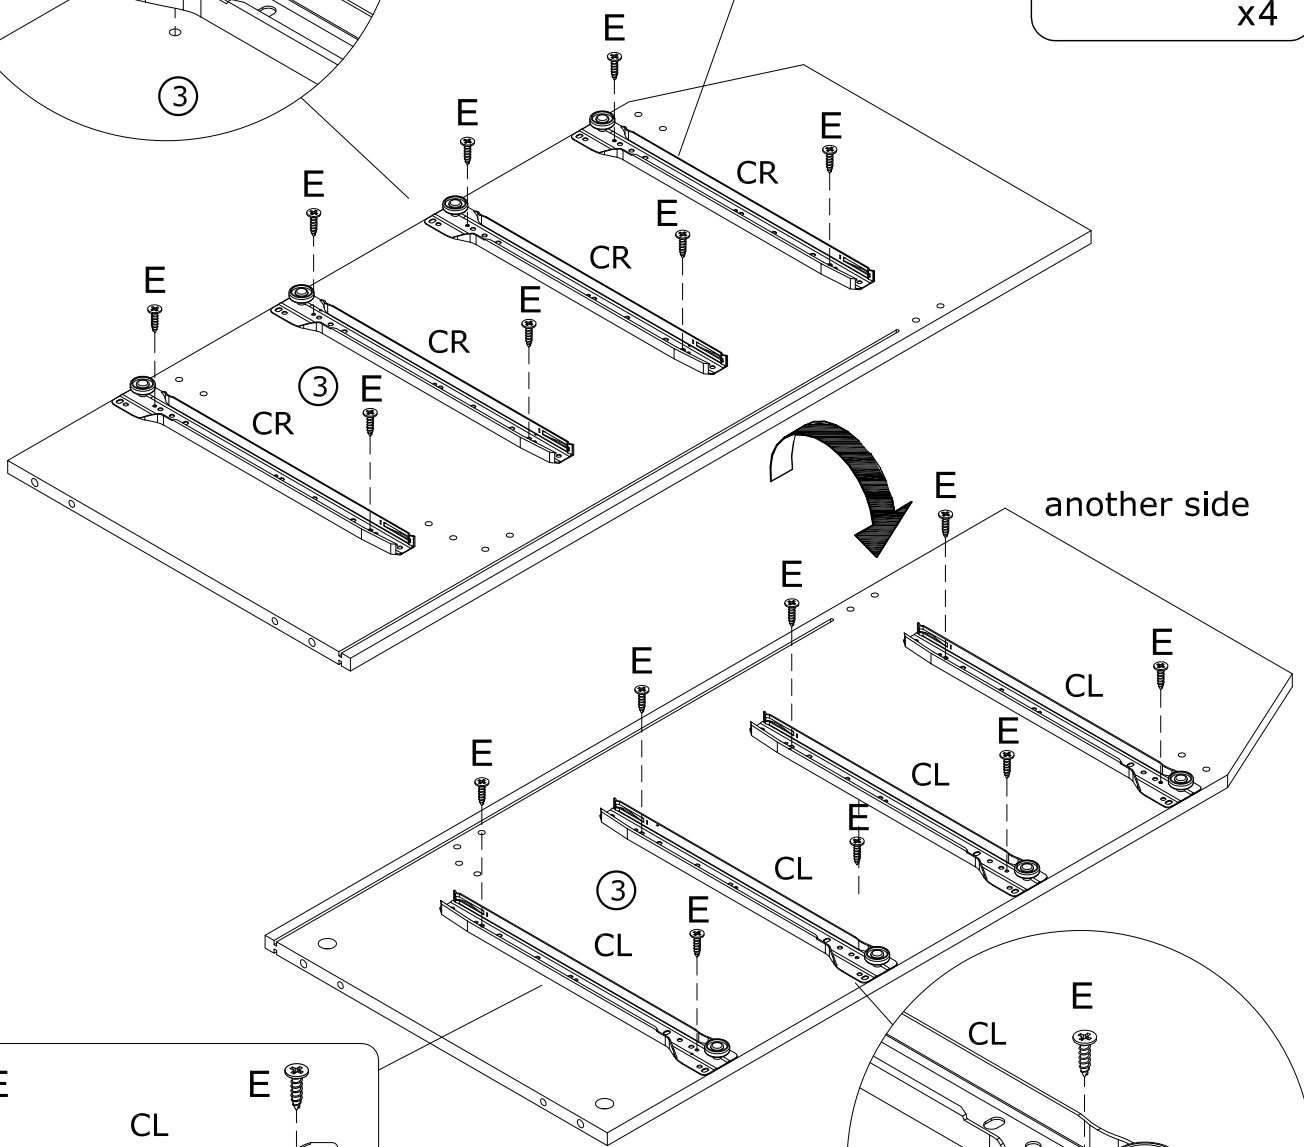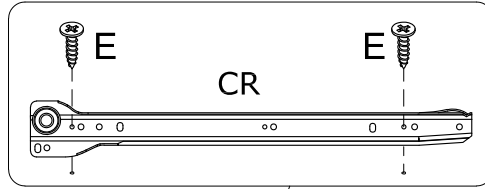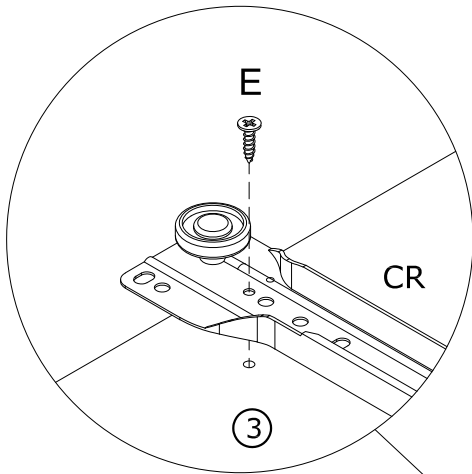x4


CR

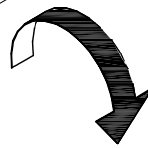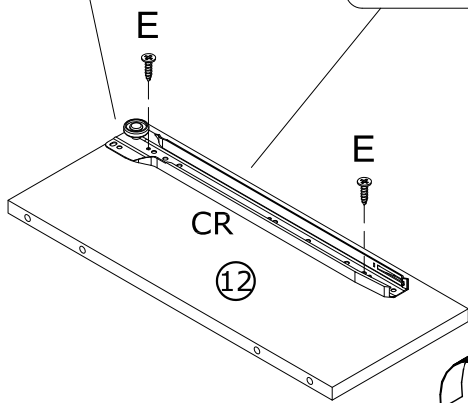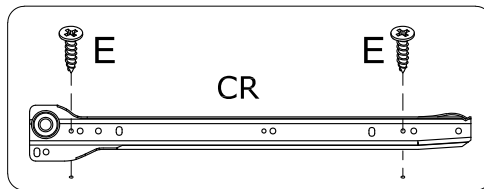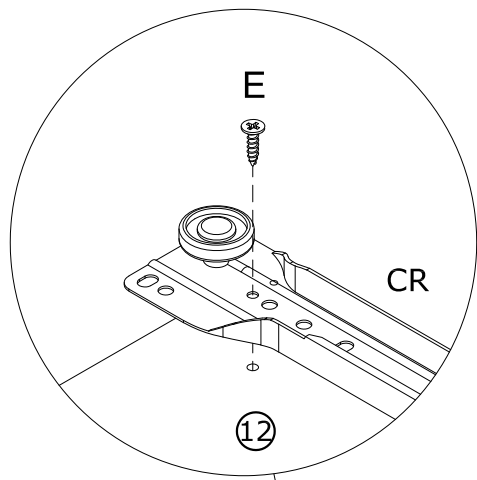x4








3

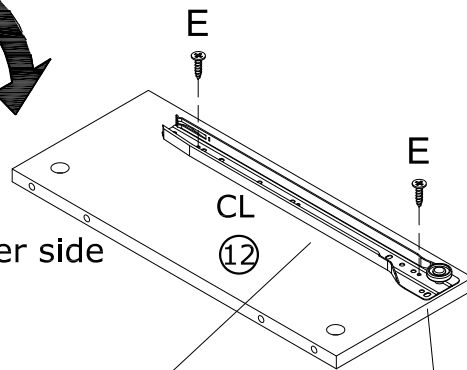



another side



X2

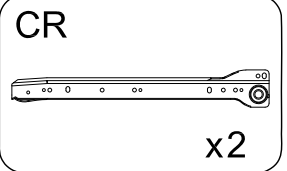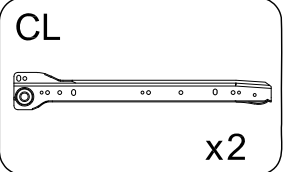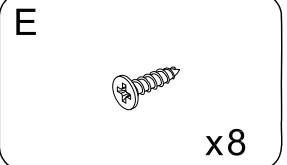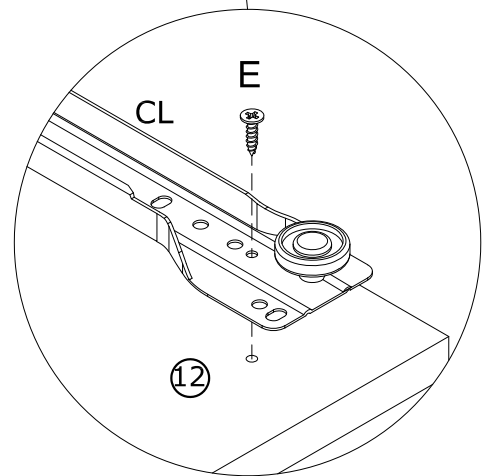
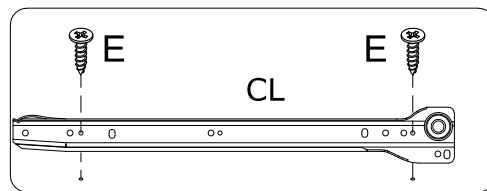


4

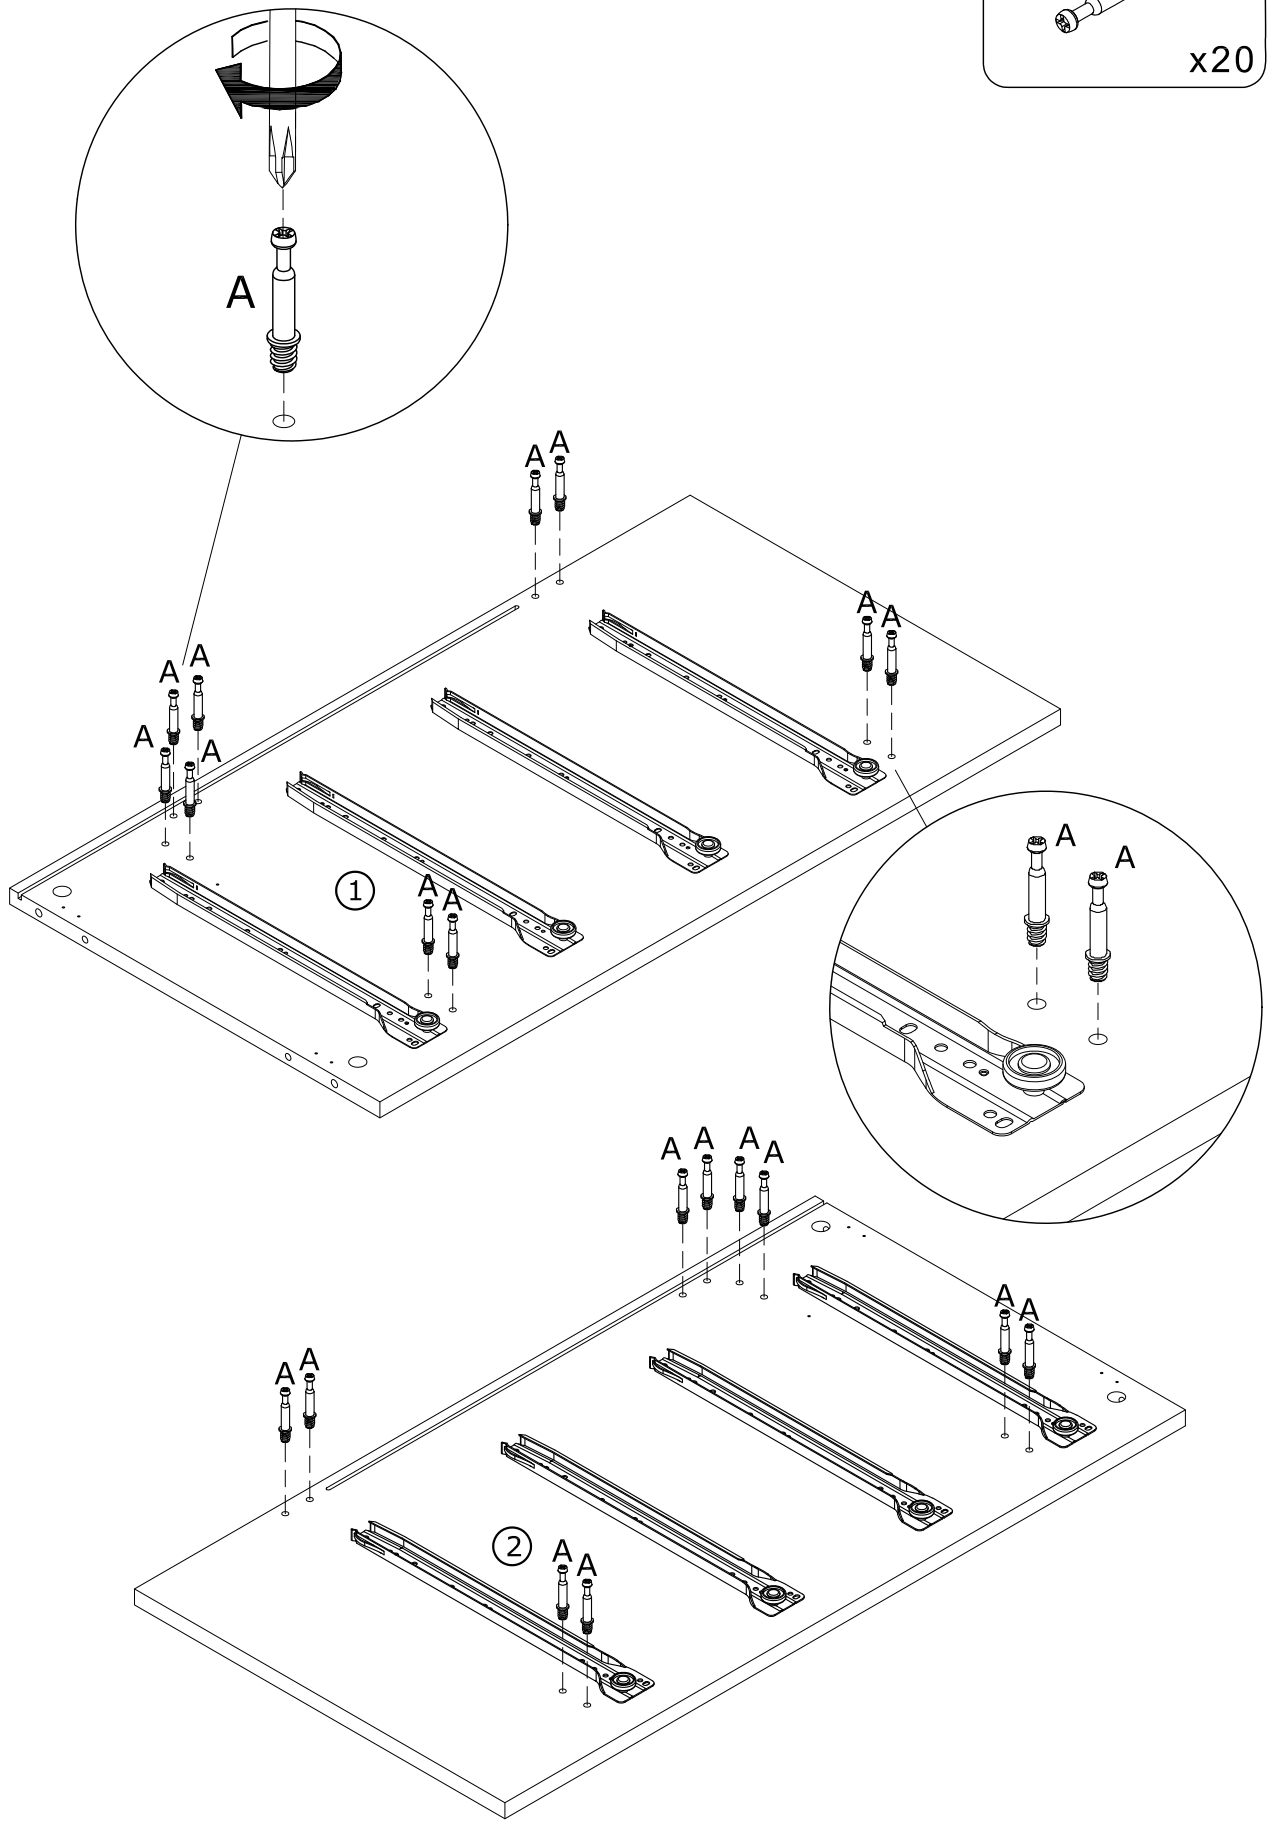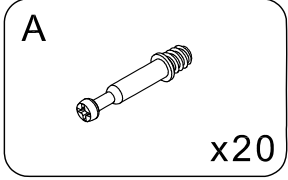


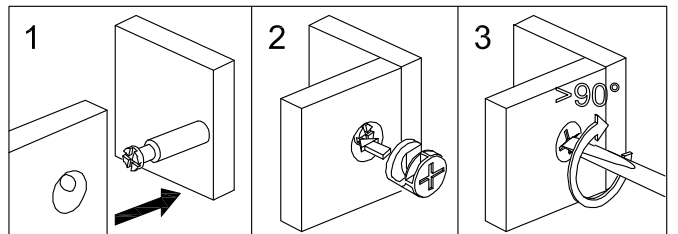
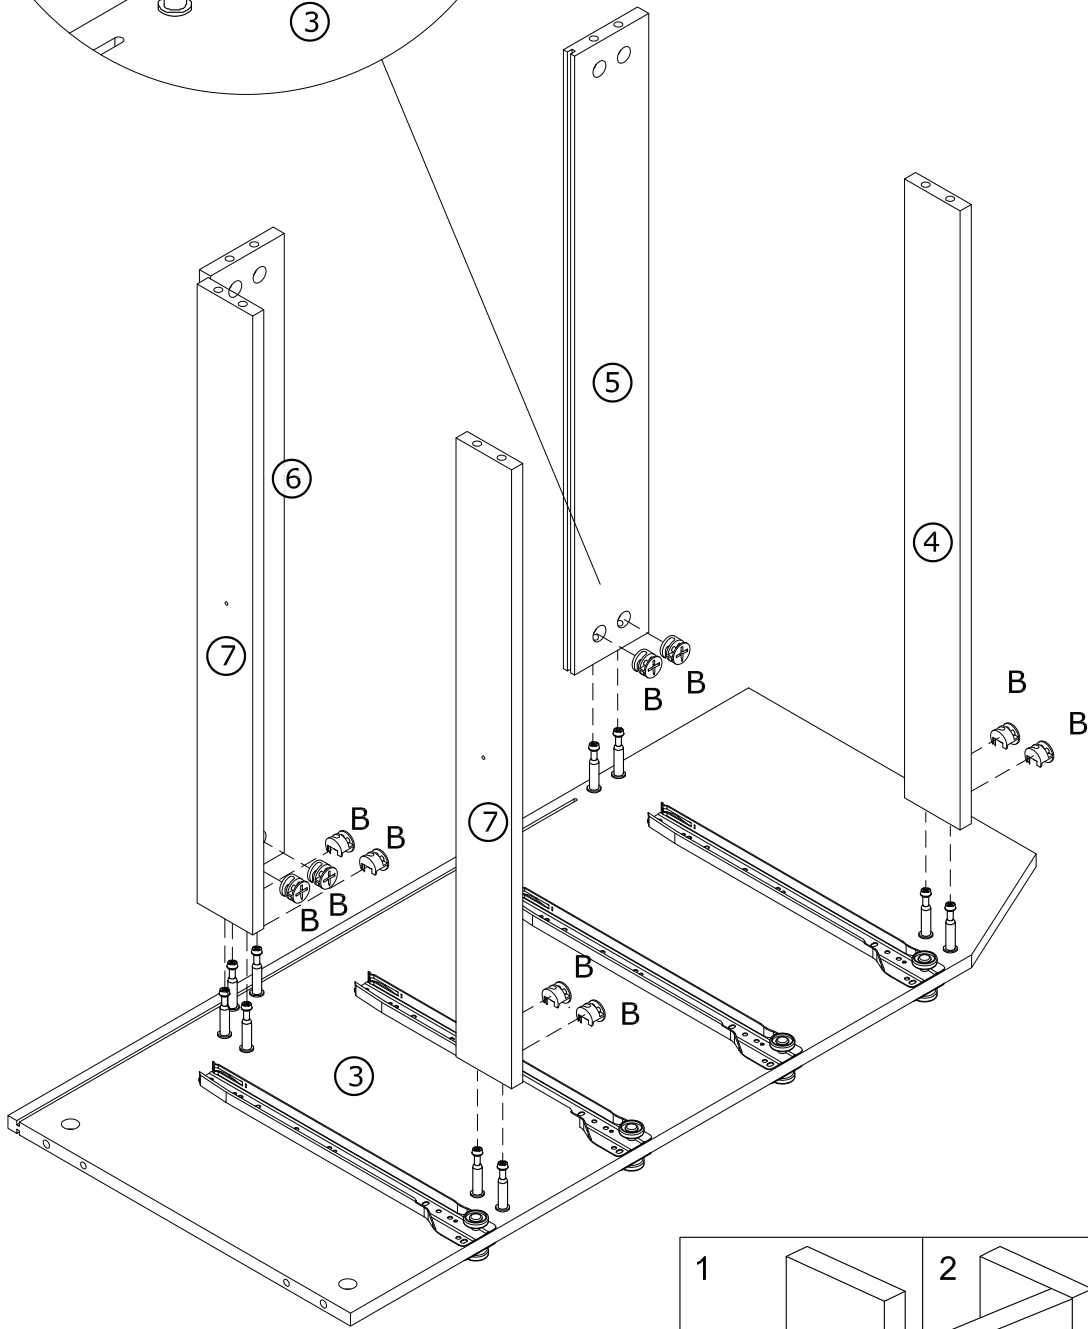
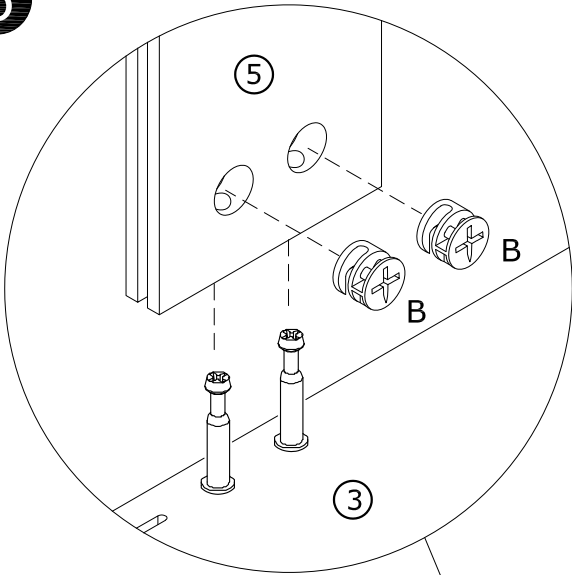
5

⚠ Only 1pc No. ③ panel.

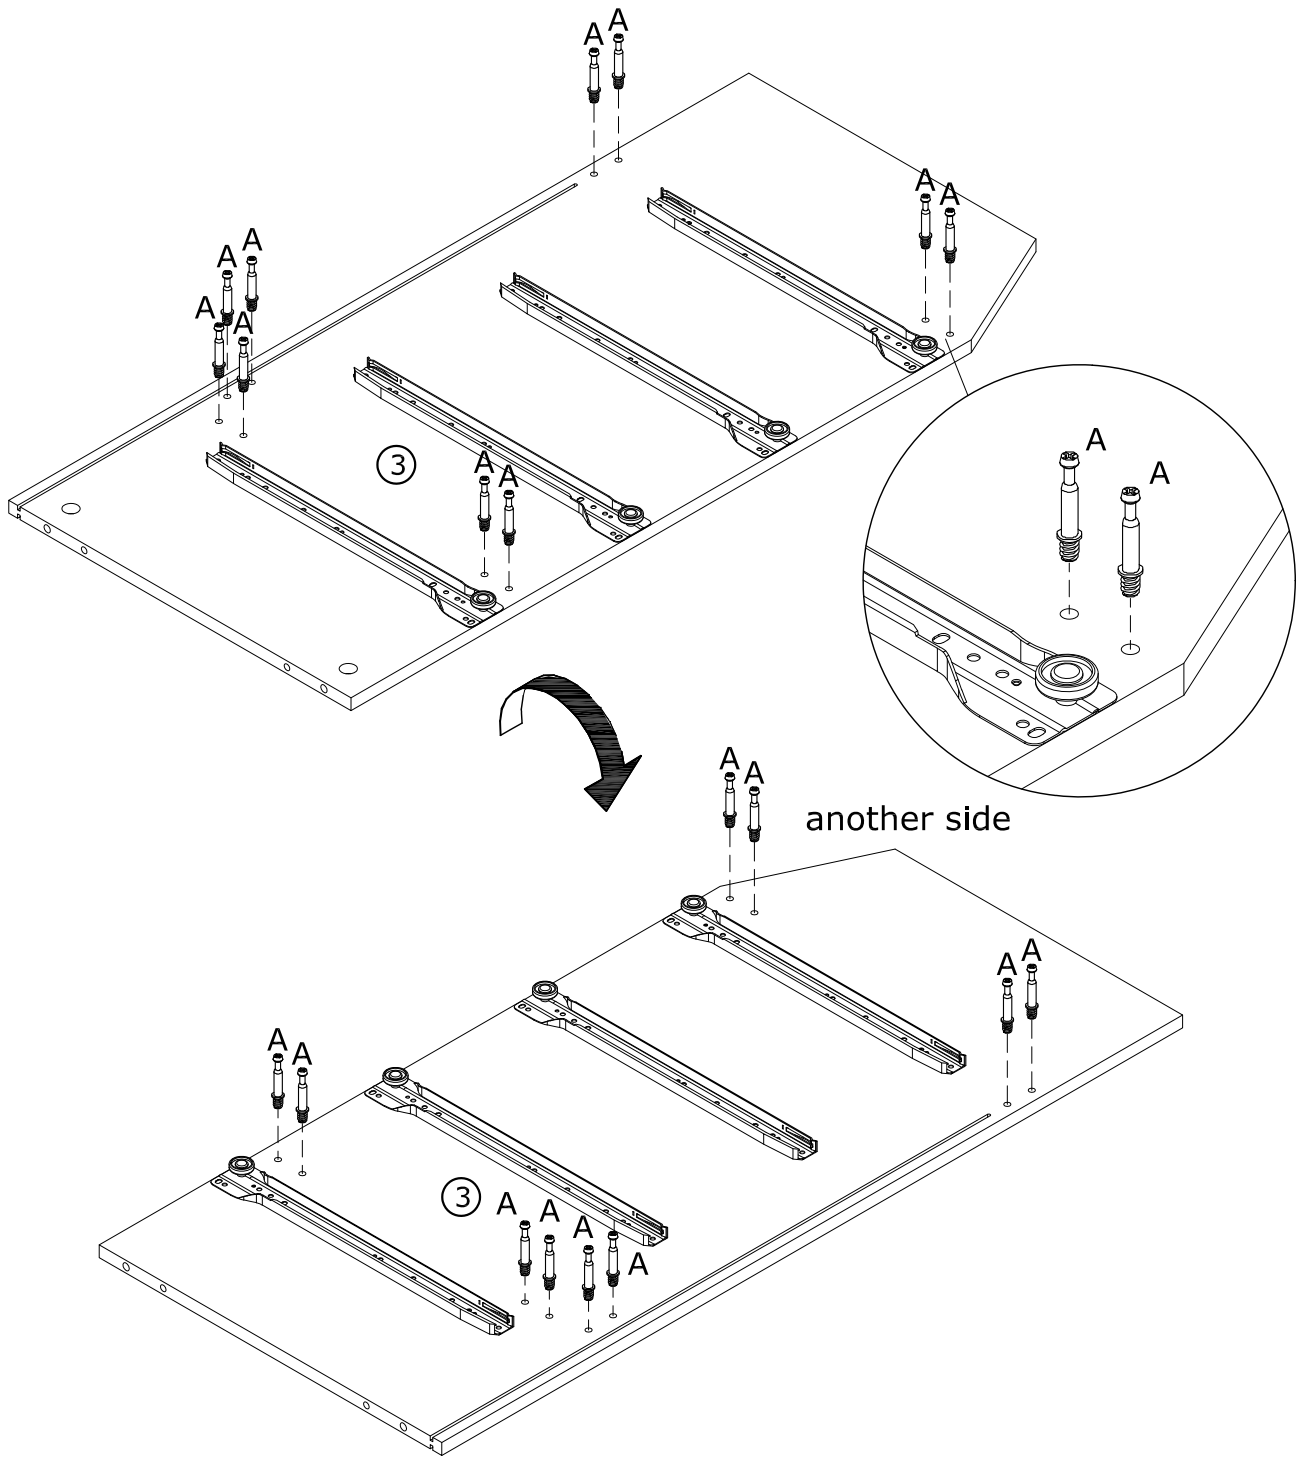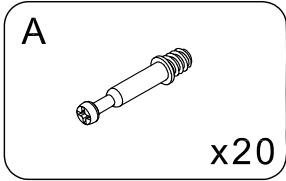

6

B  x10




7

B



x10


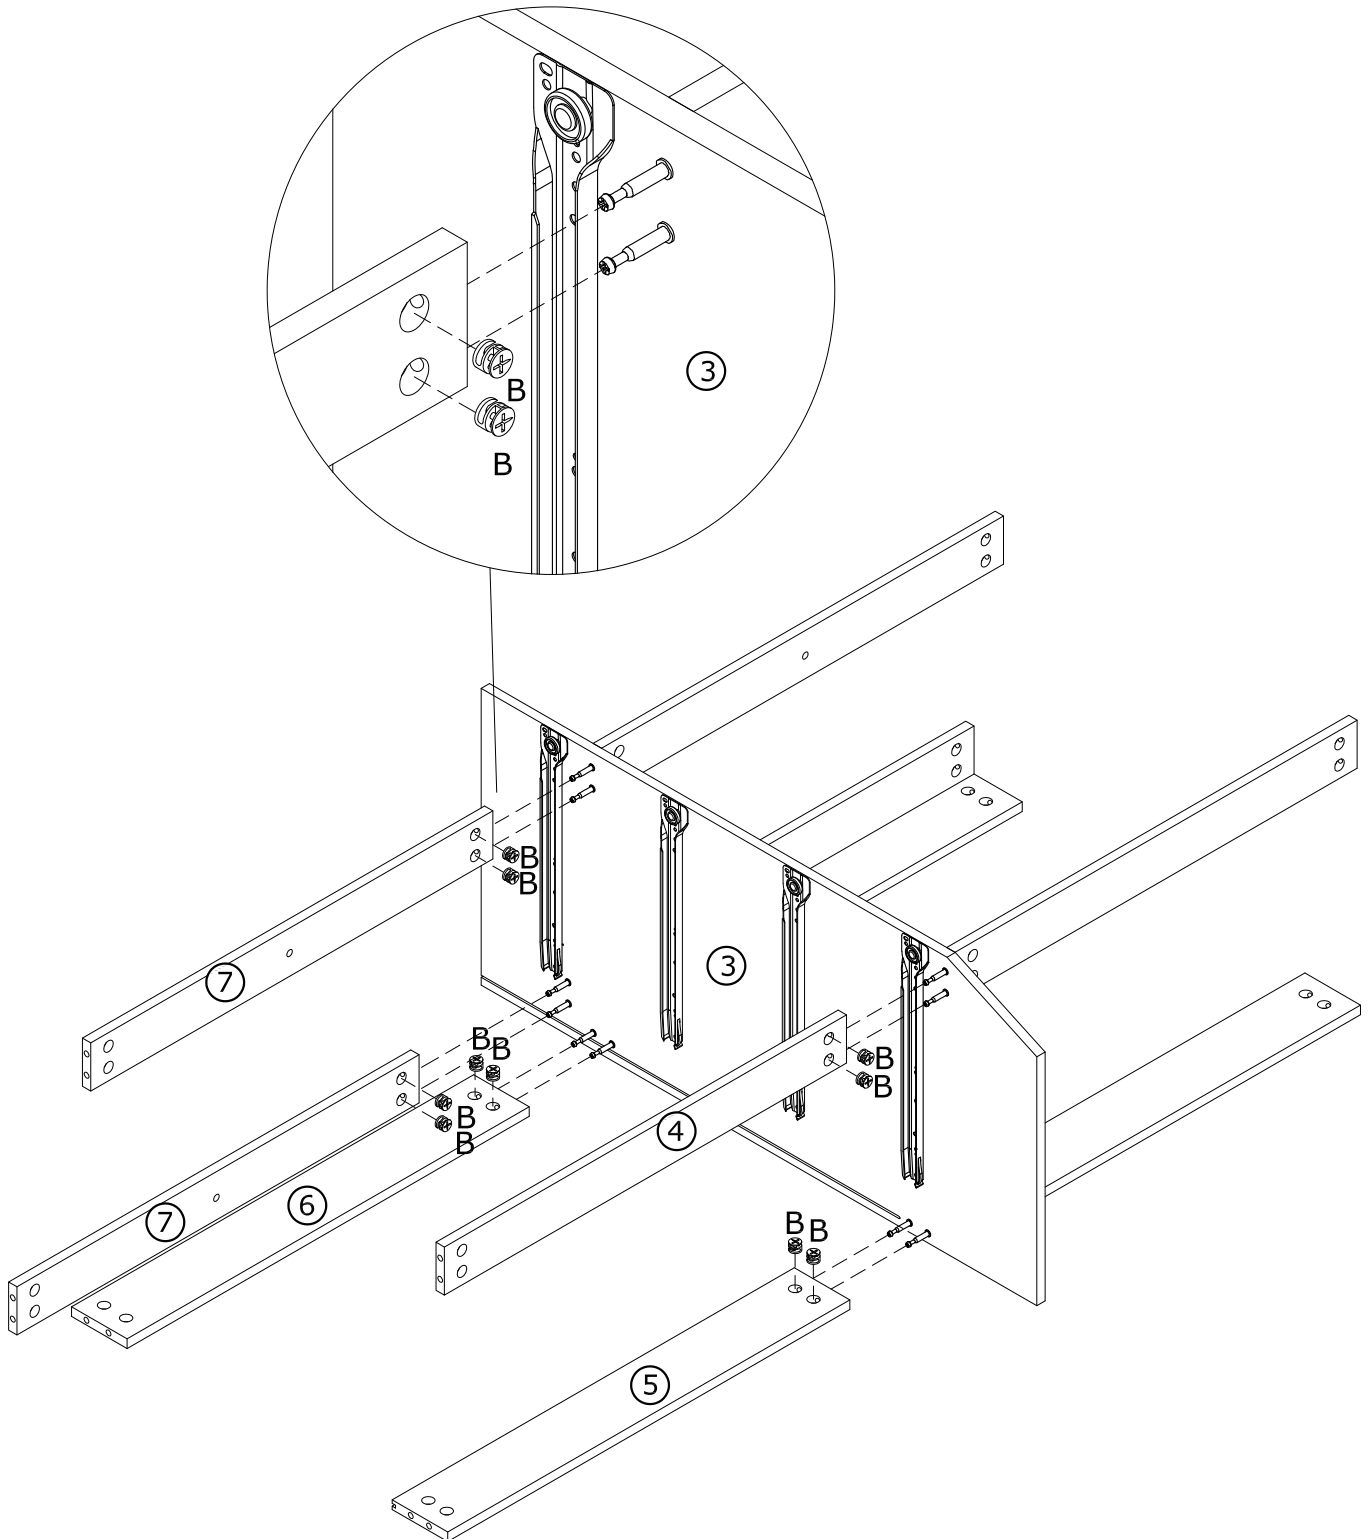


8

B




x10

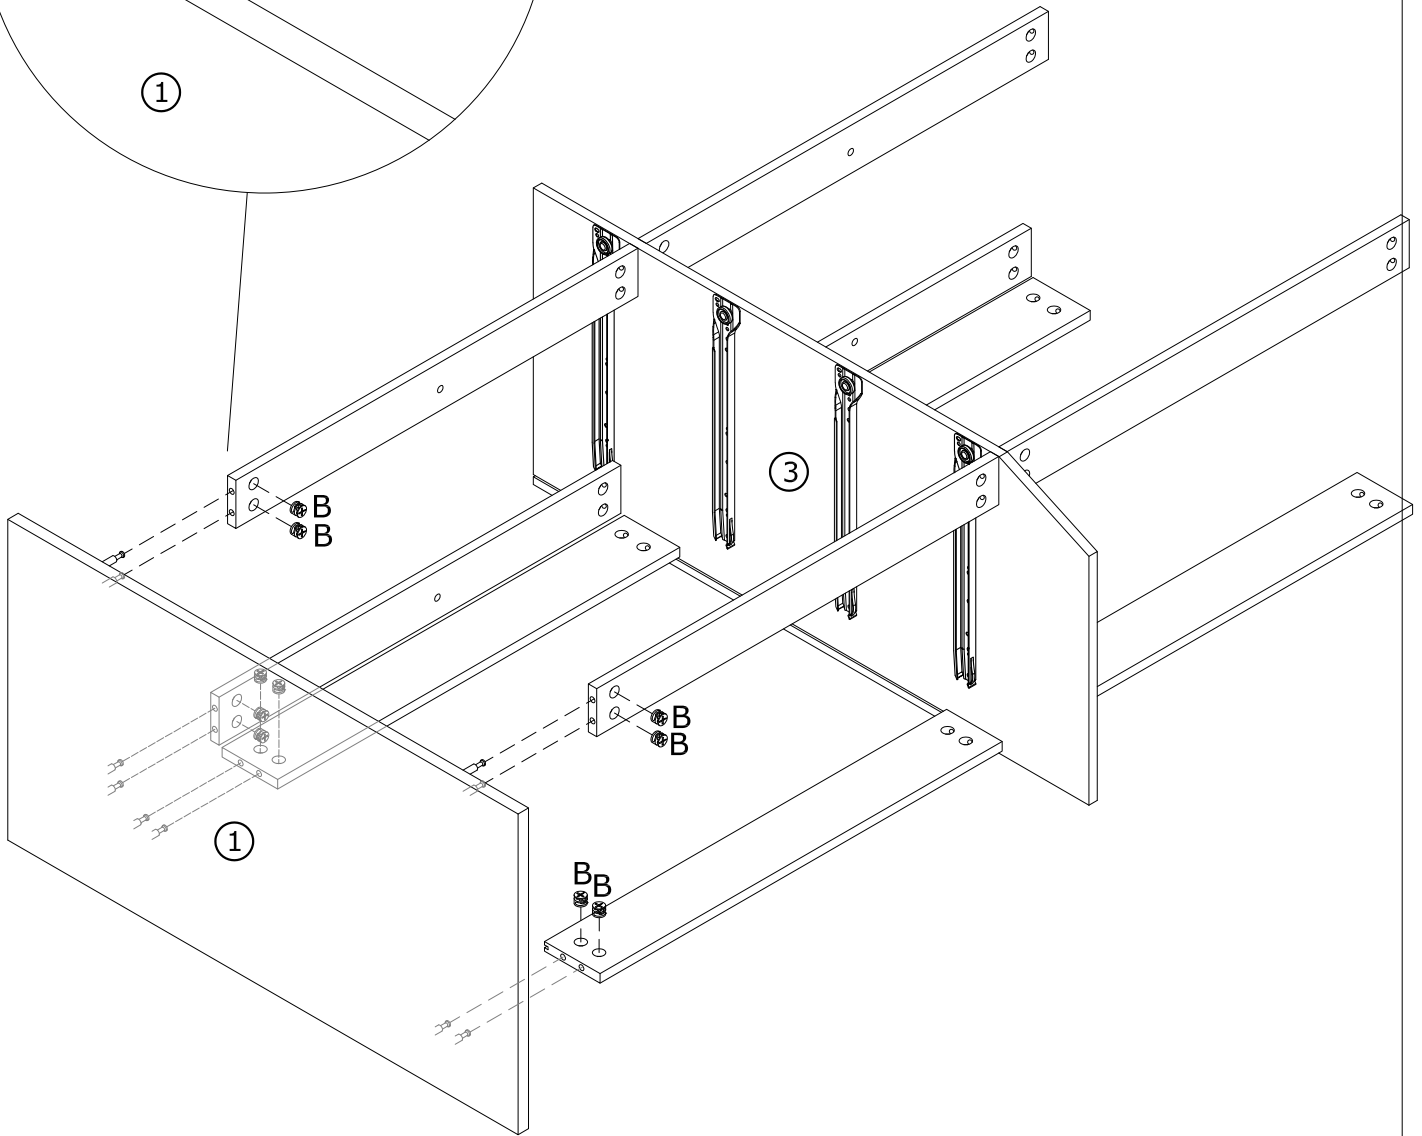
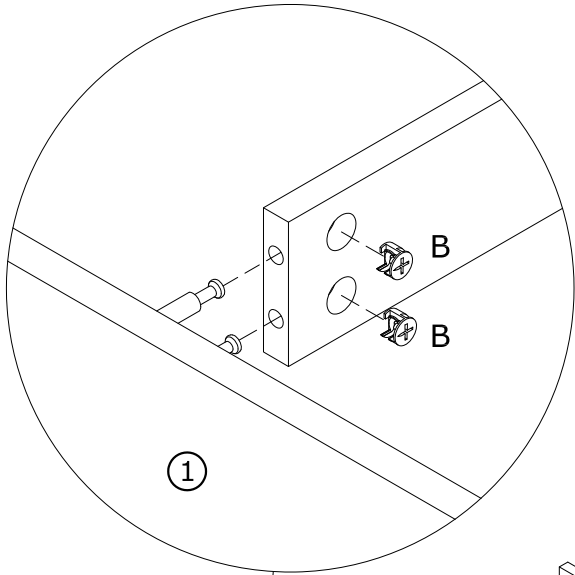


9




B




x10

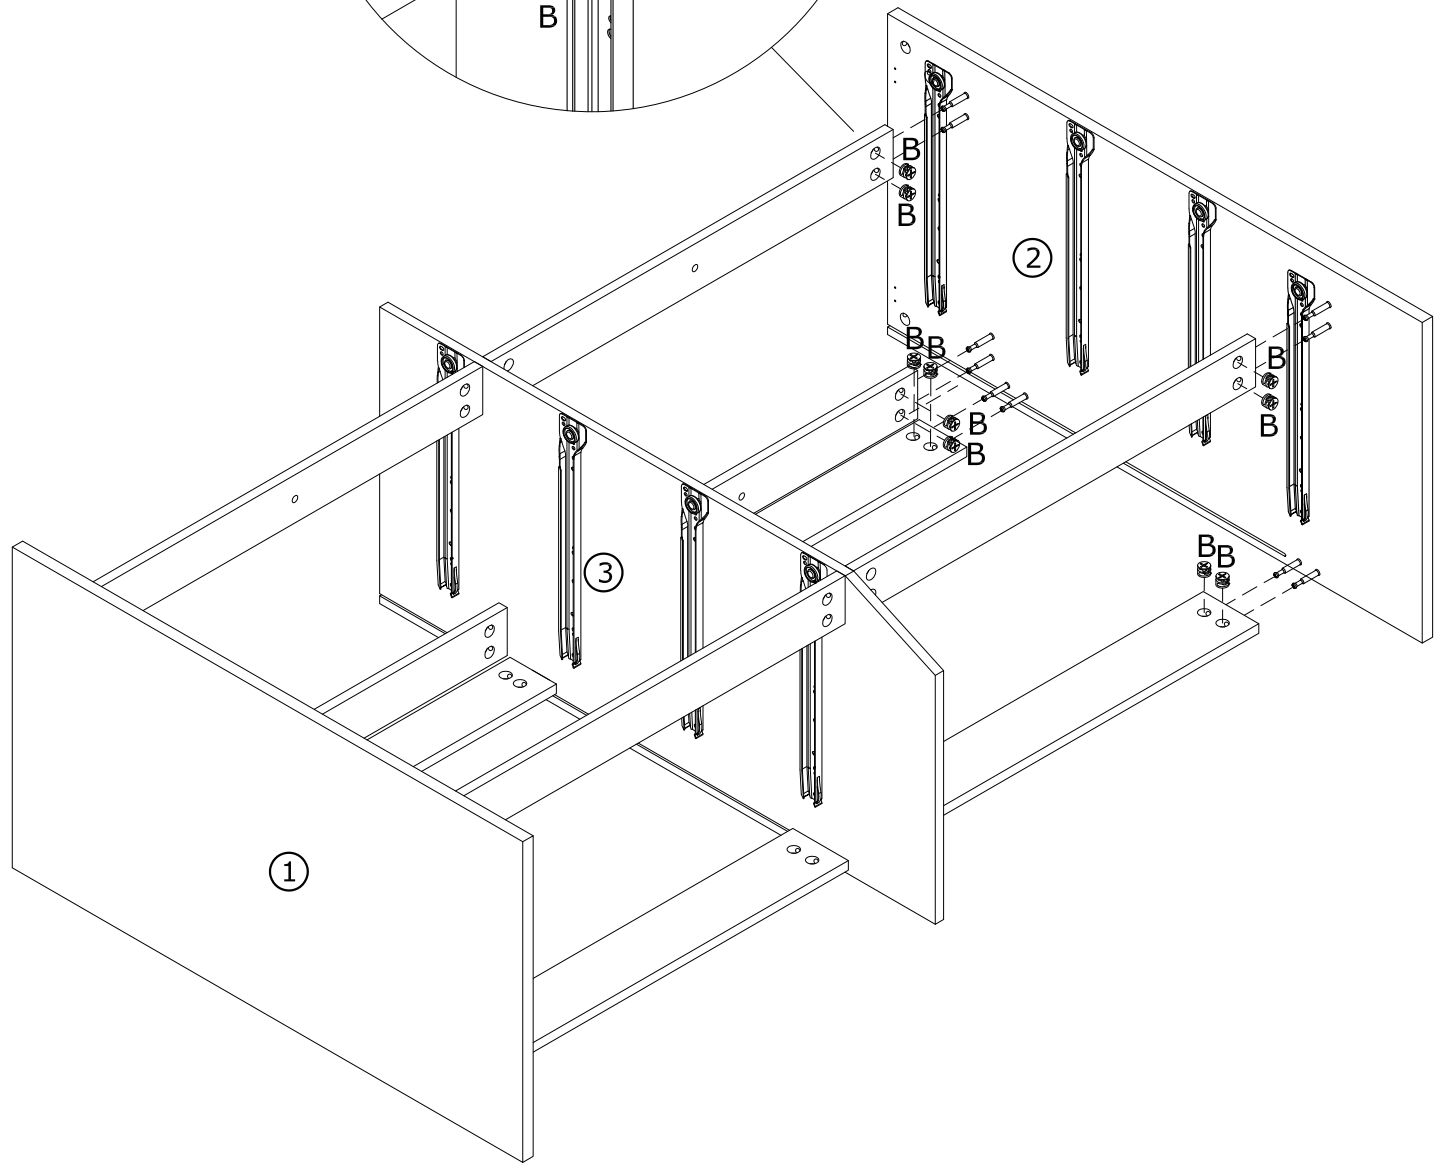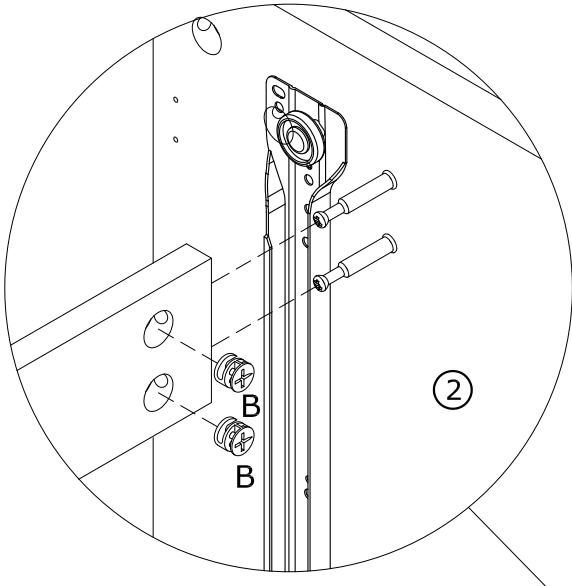




10

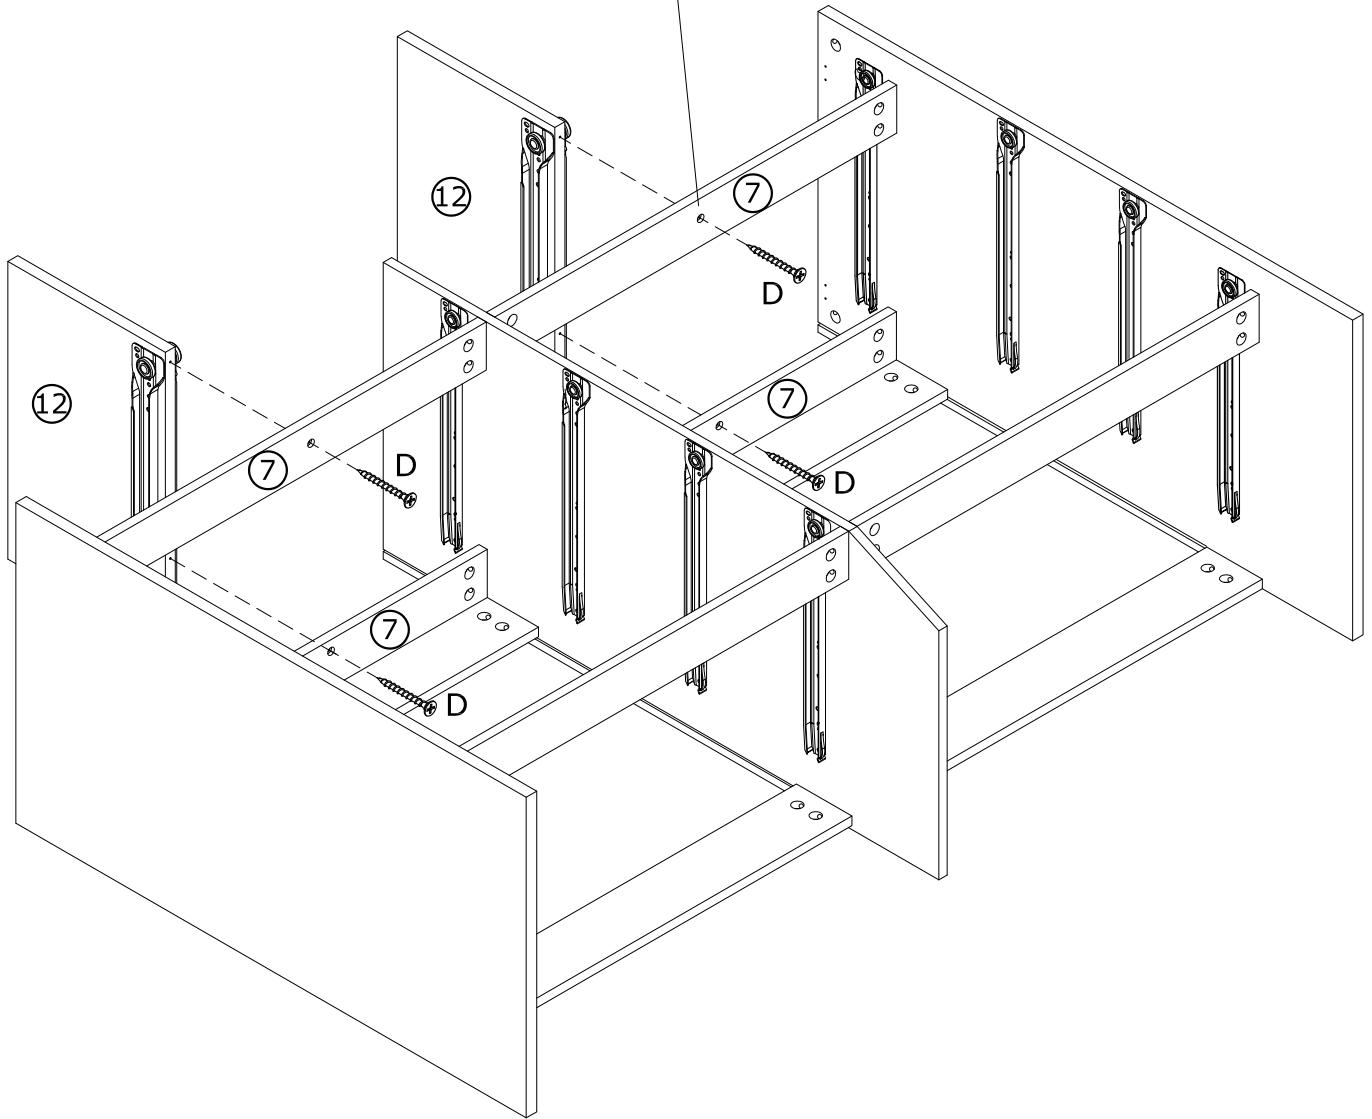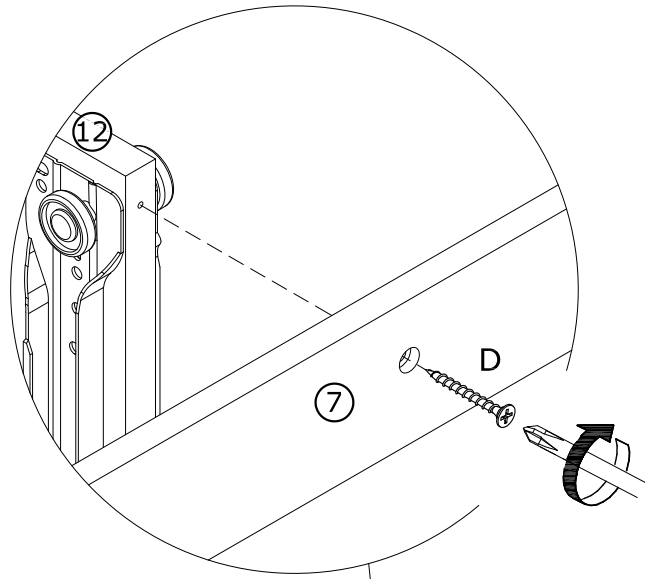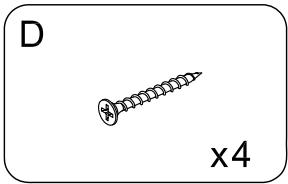


11

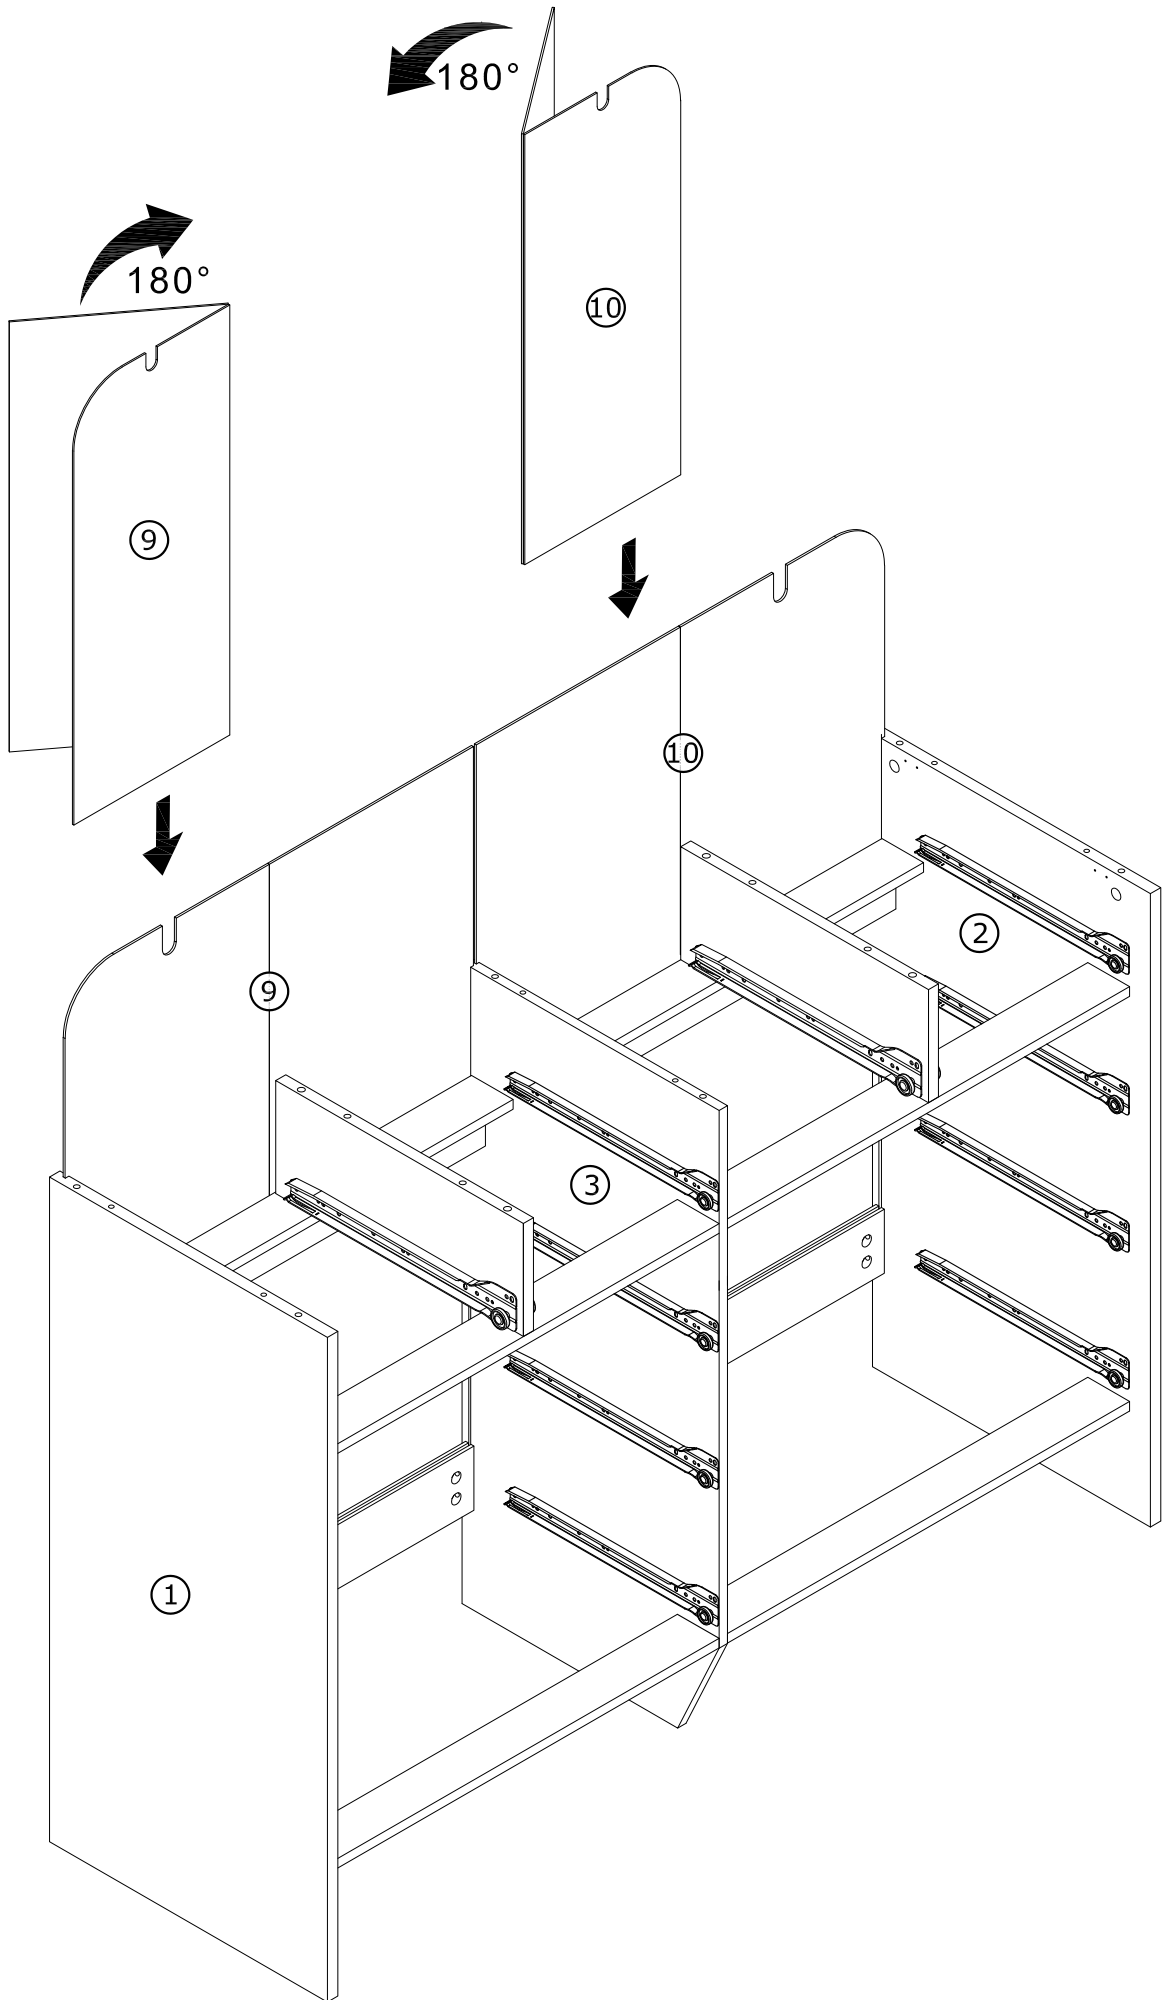





12

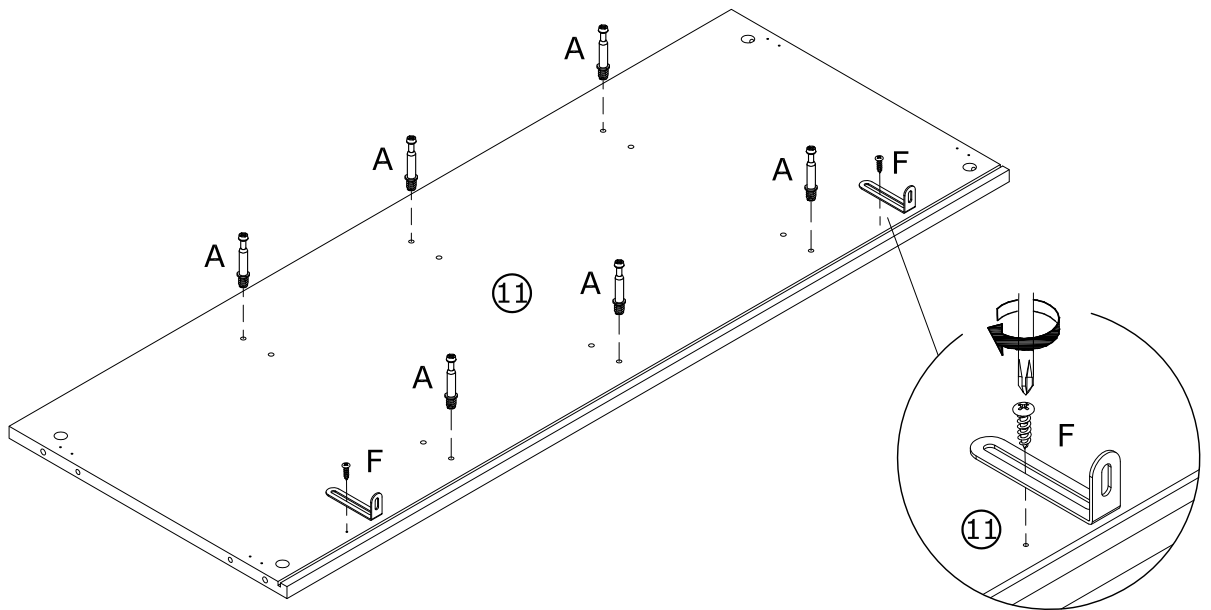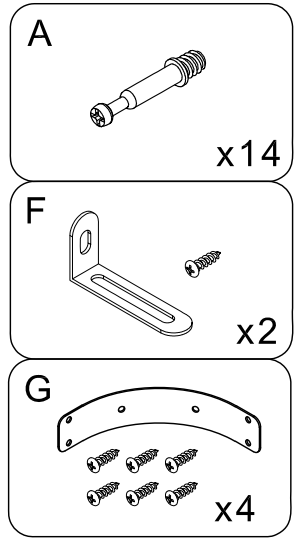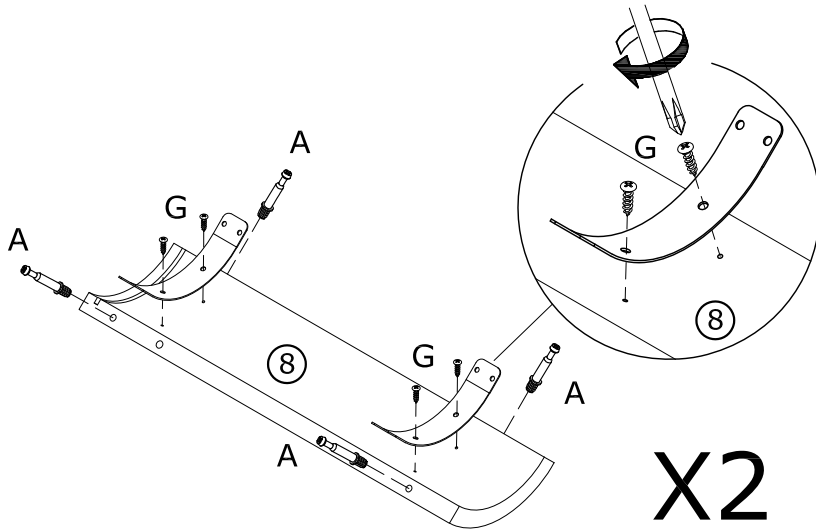




13

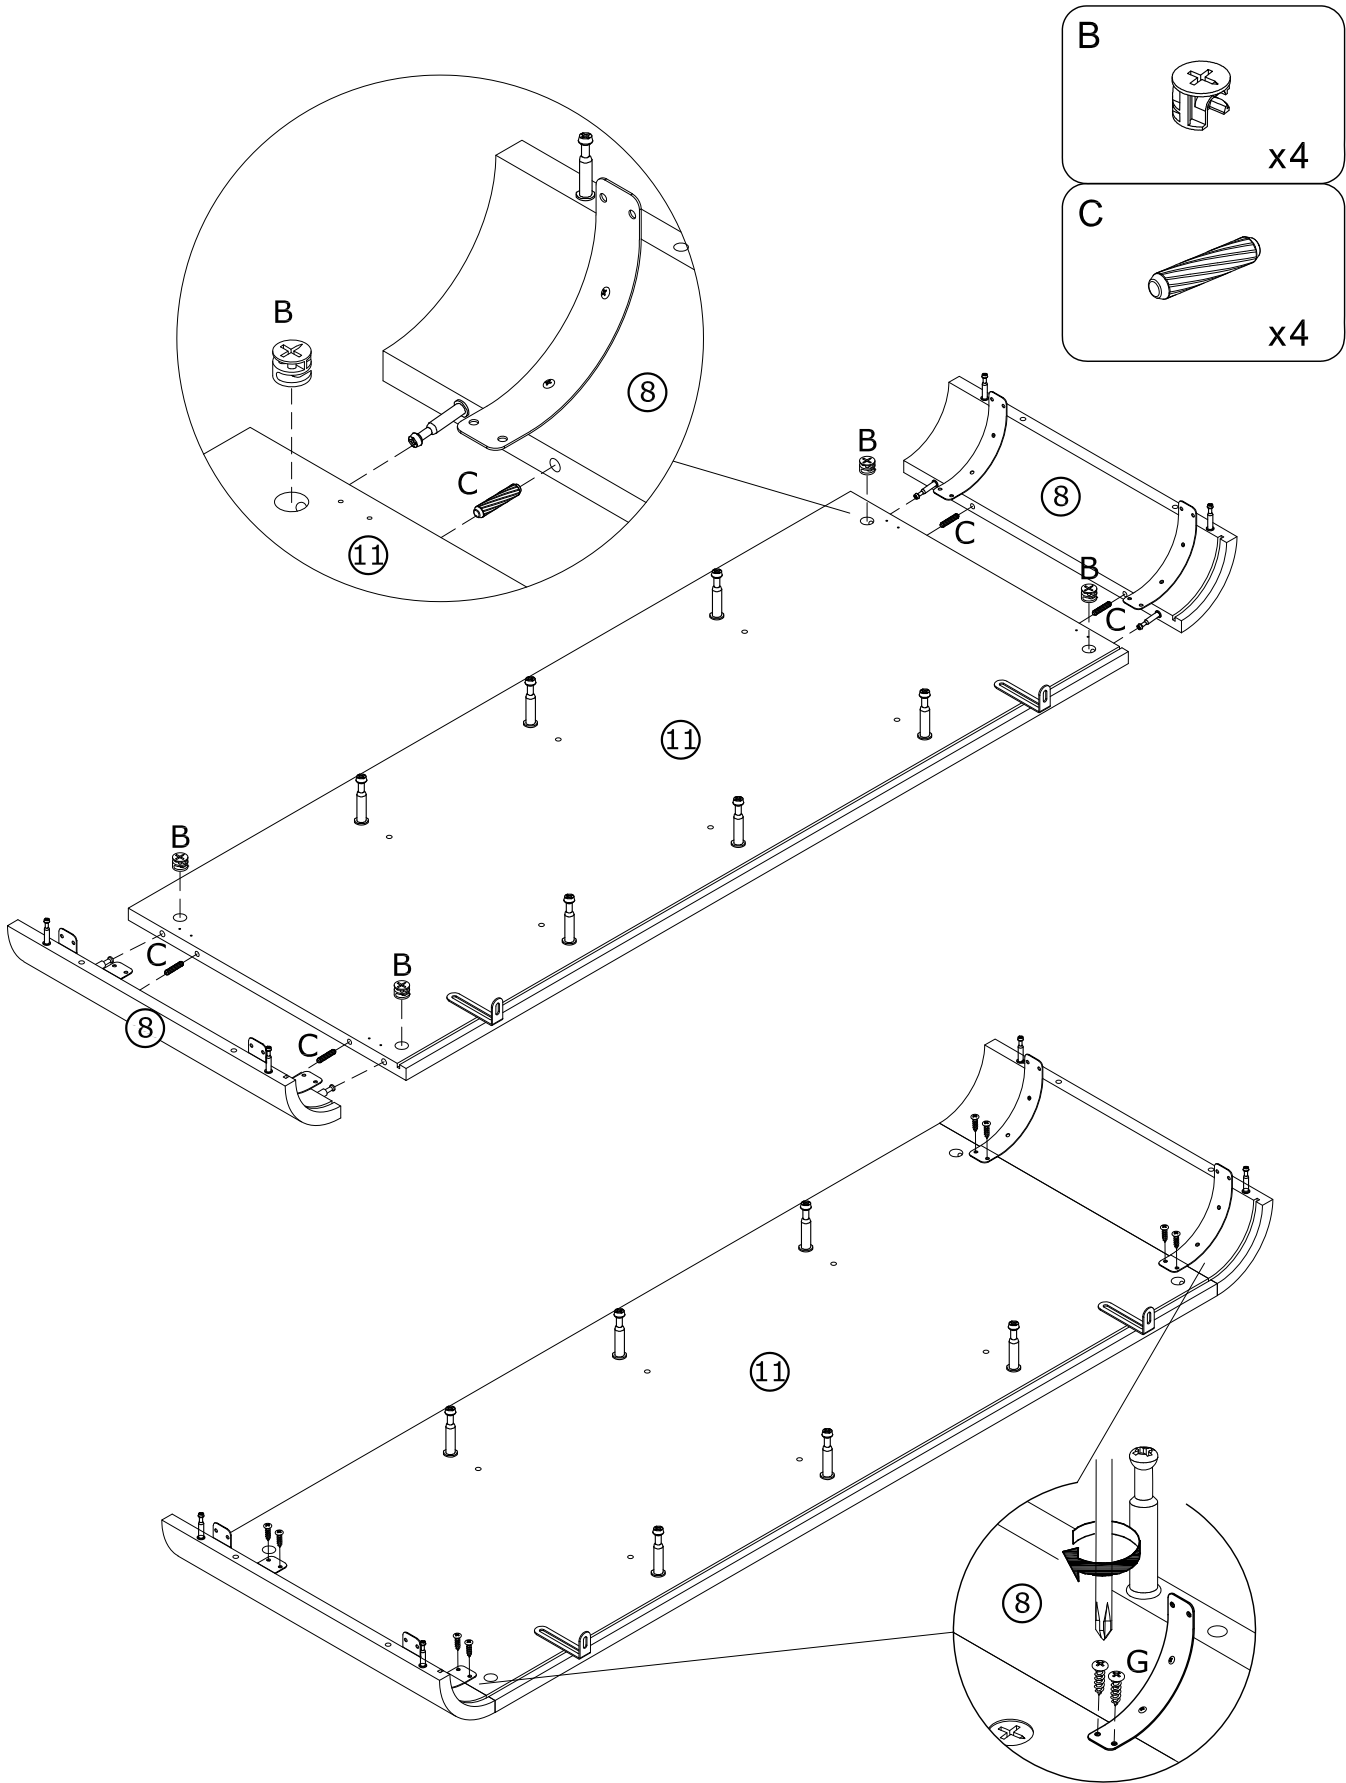





14

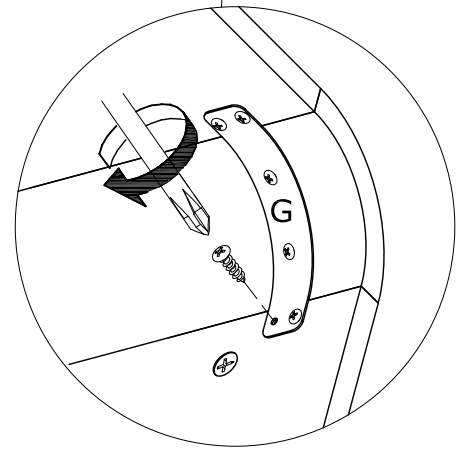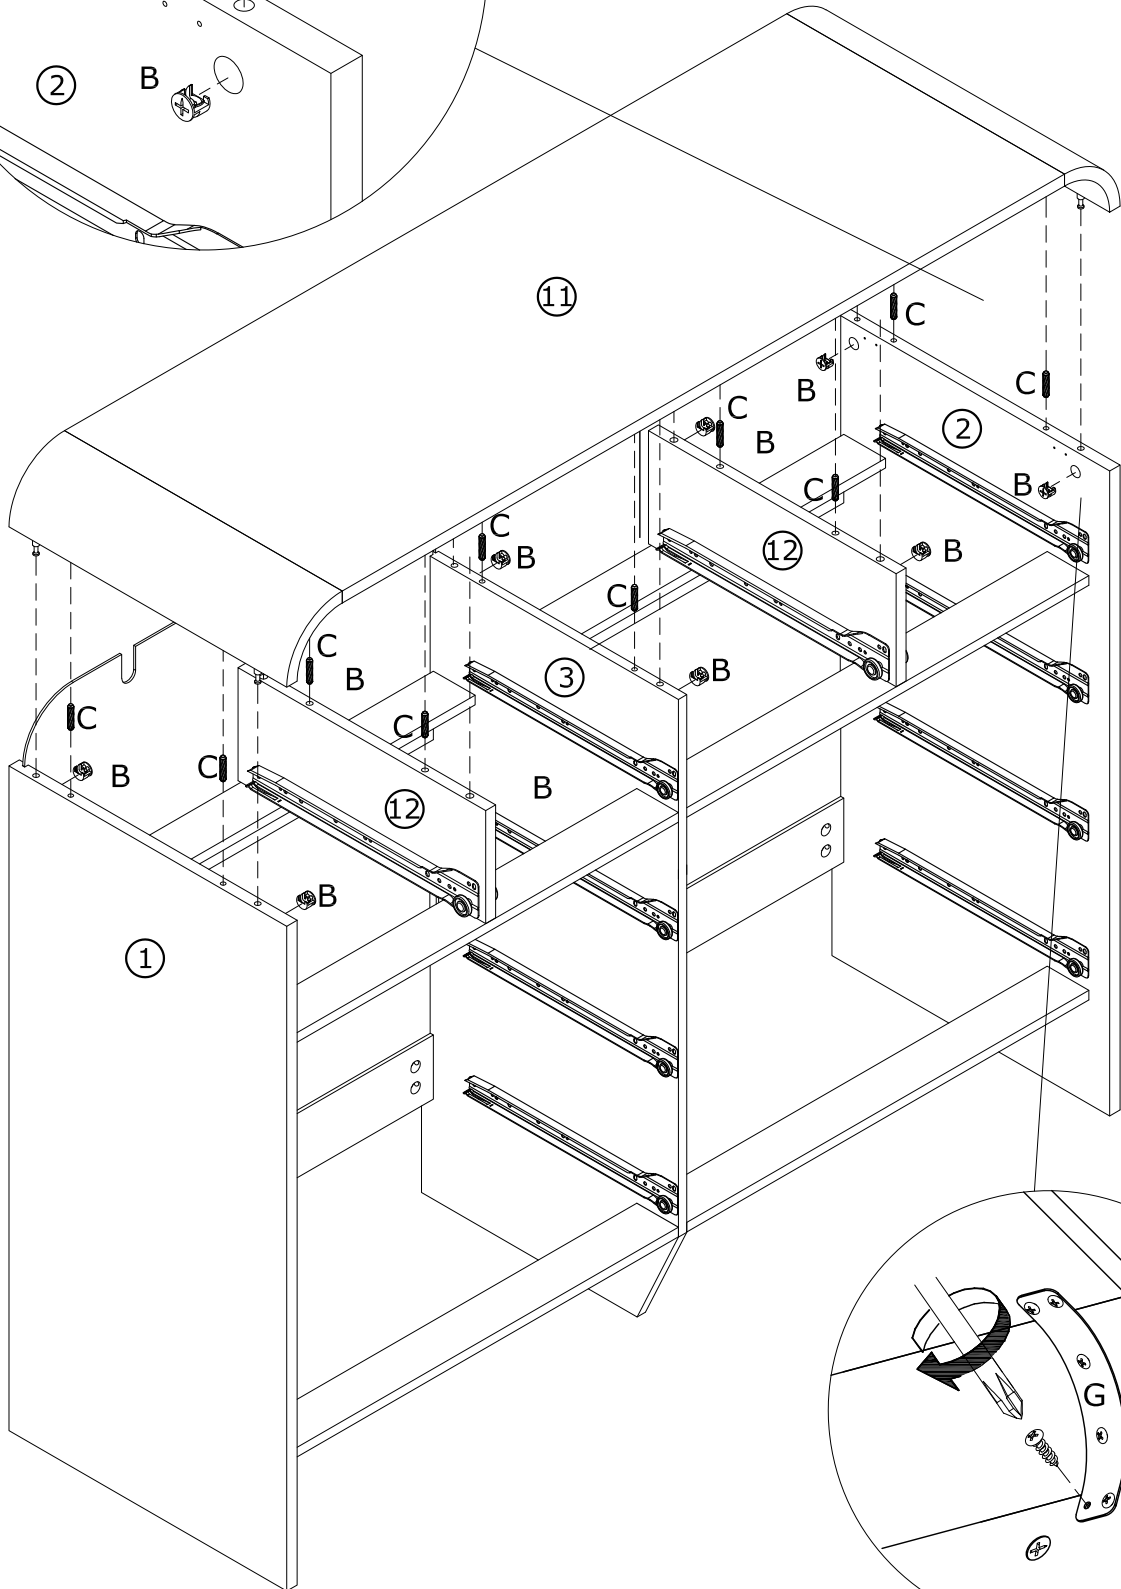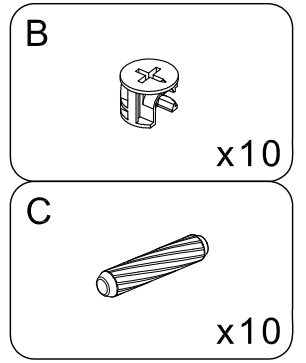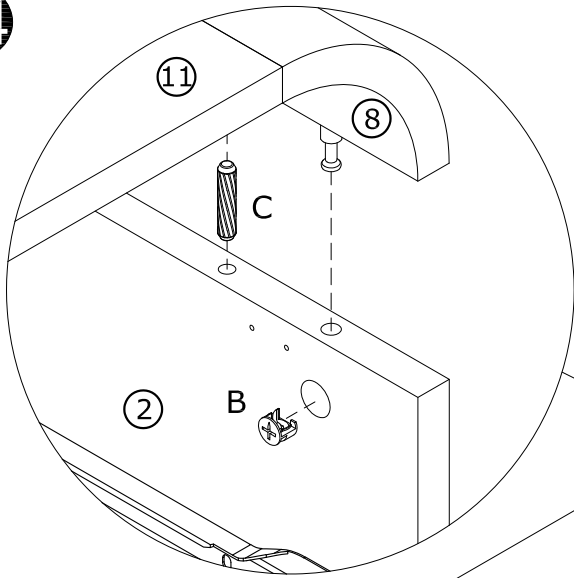









15

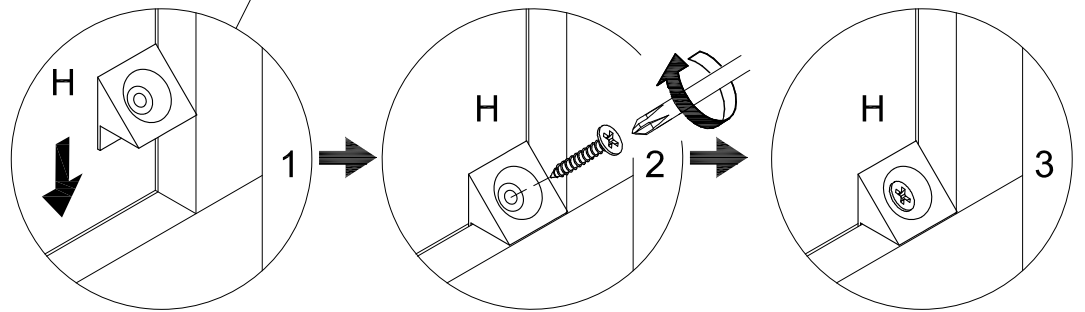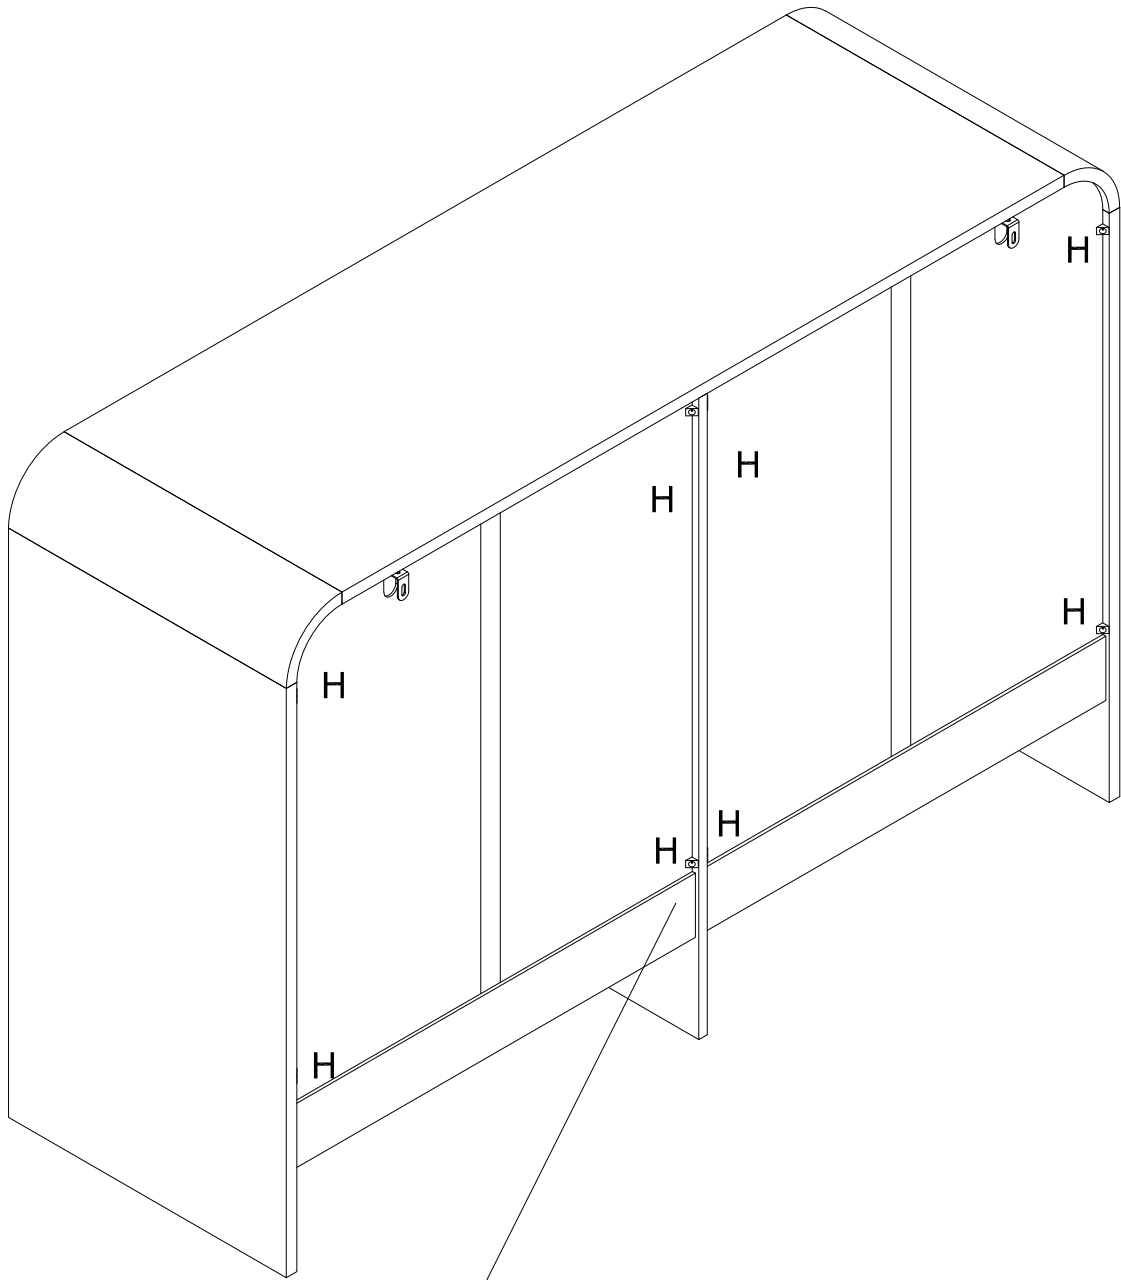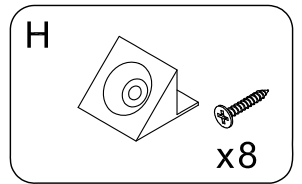




16

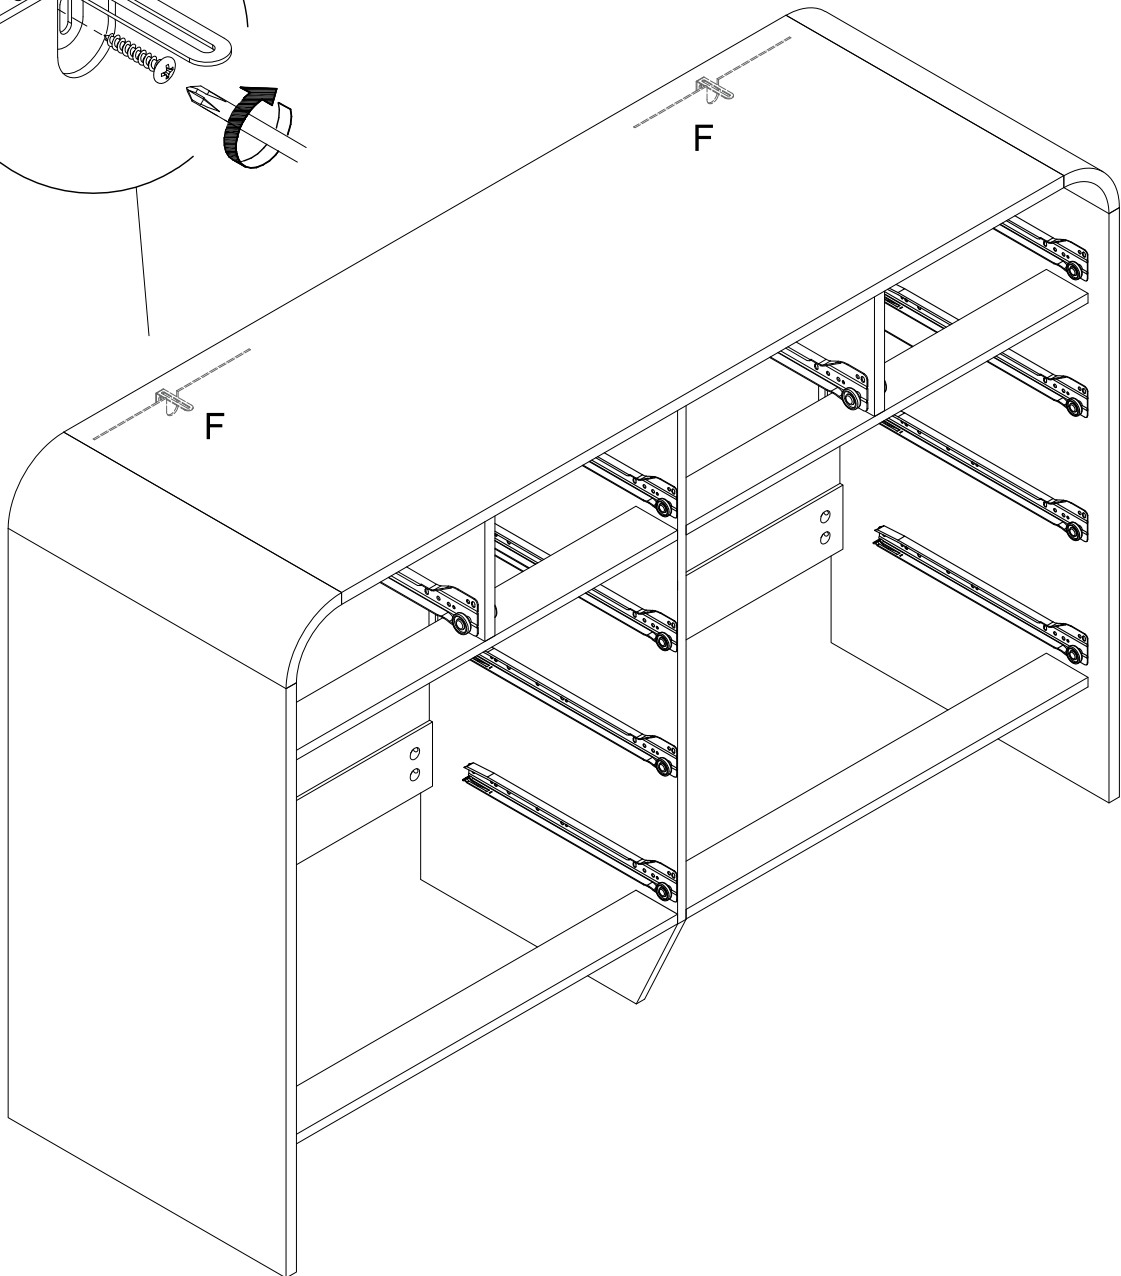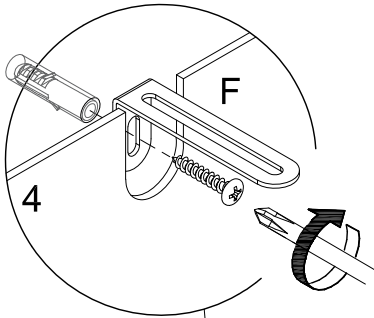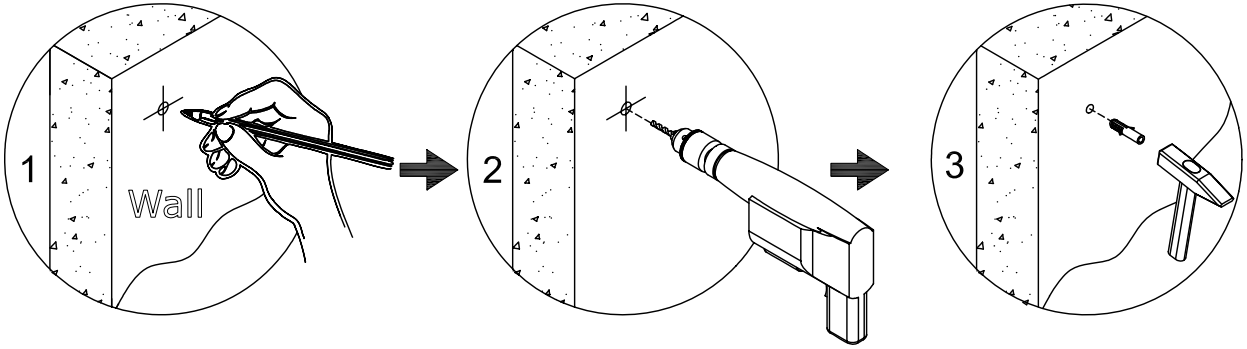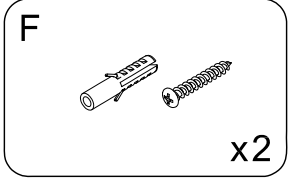

17

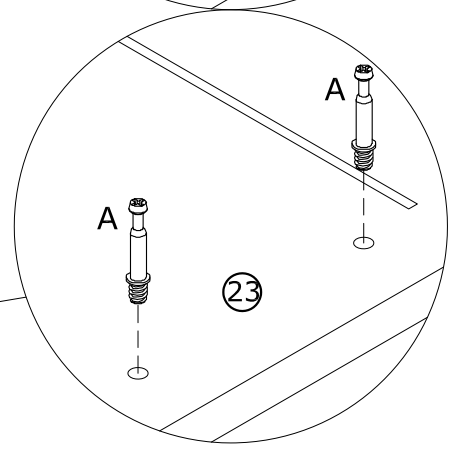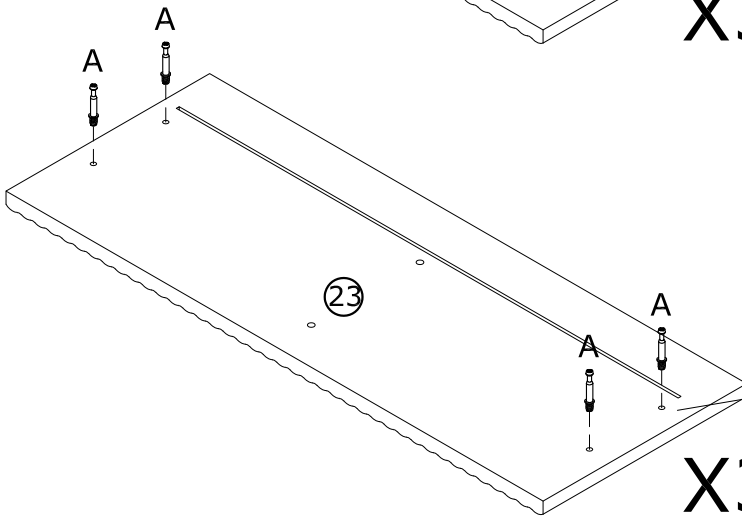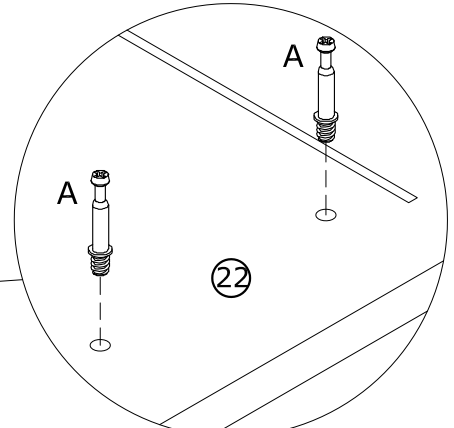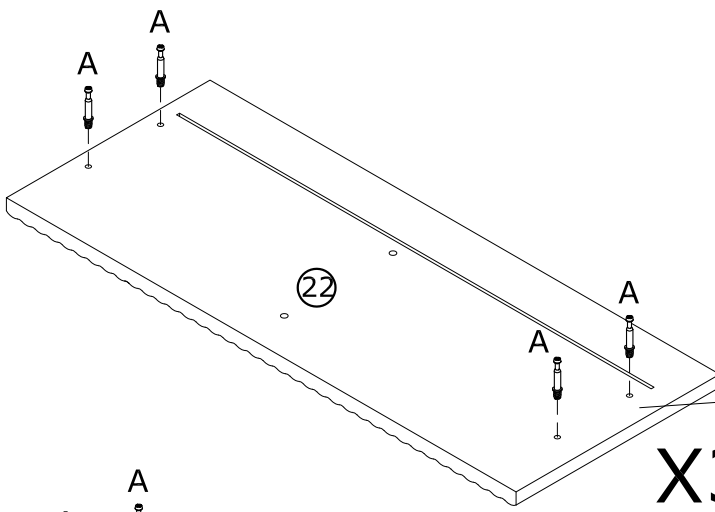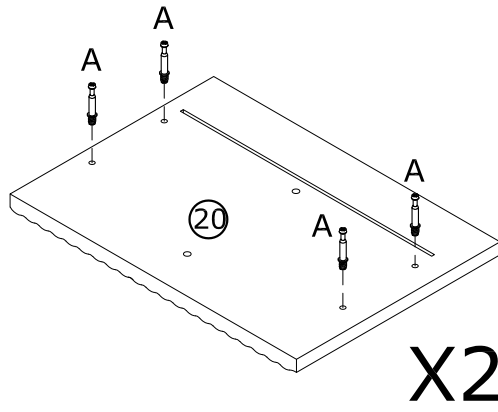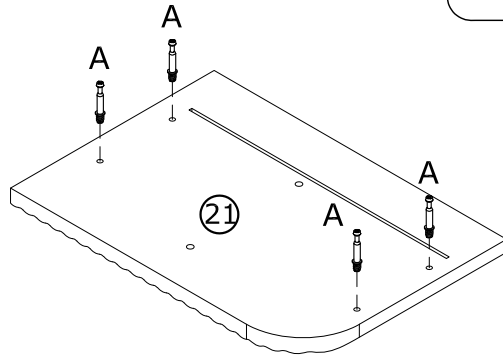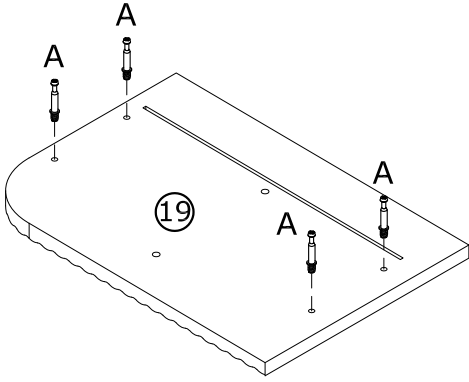
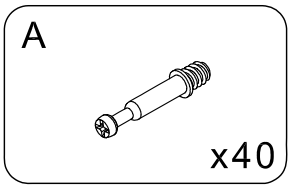


18

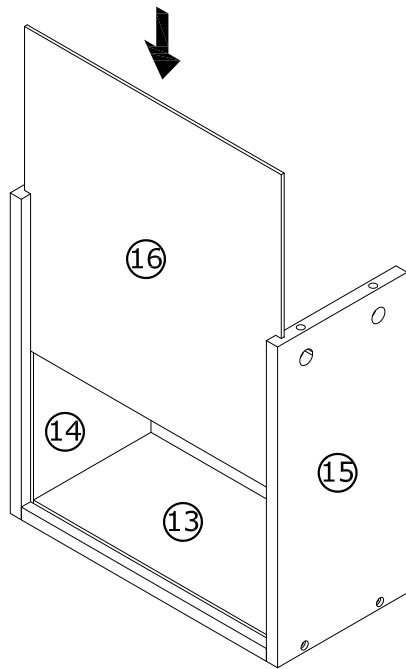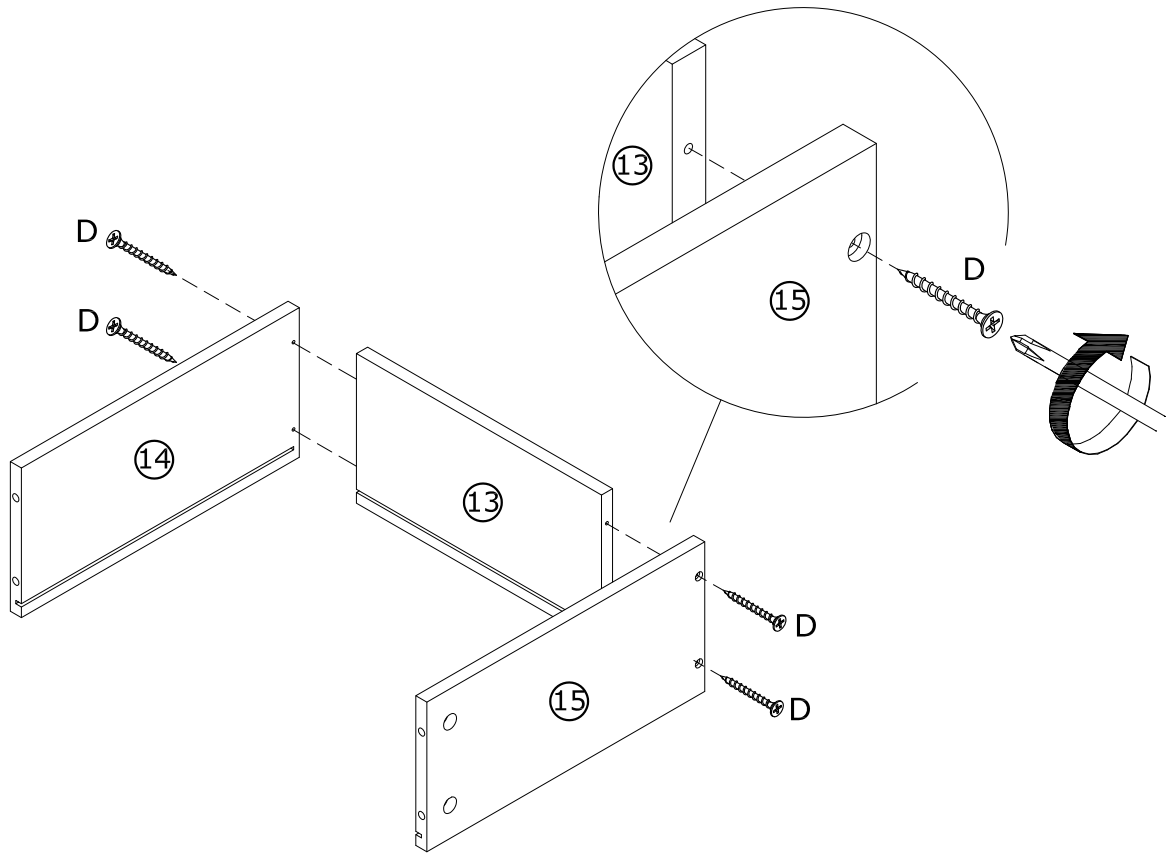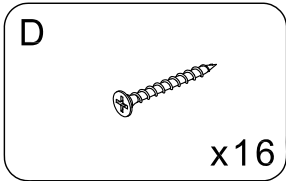









X4

19

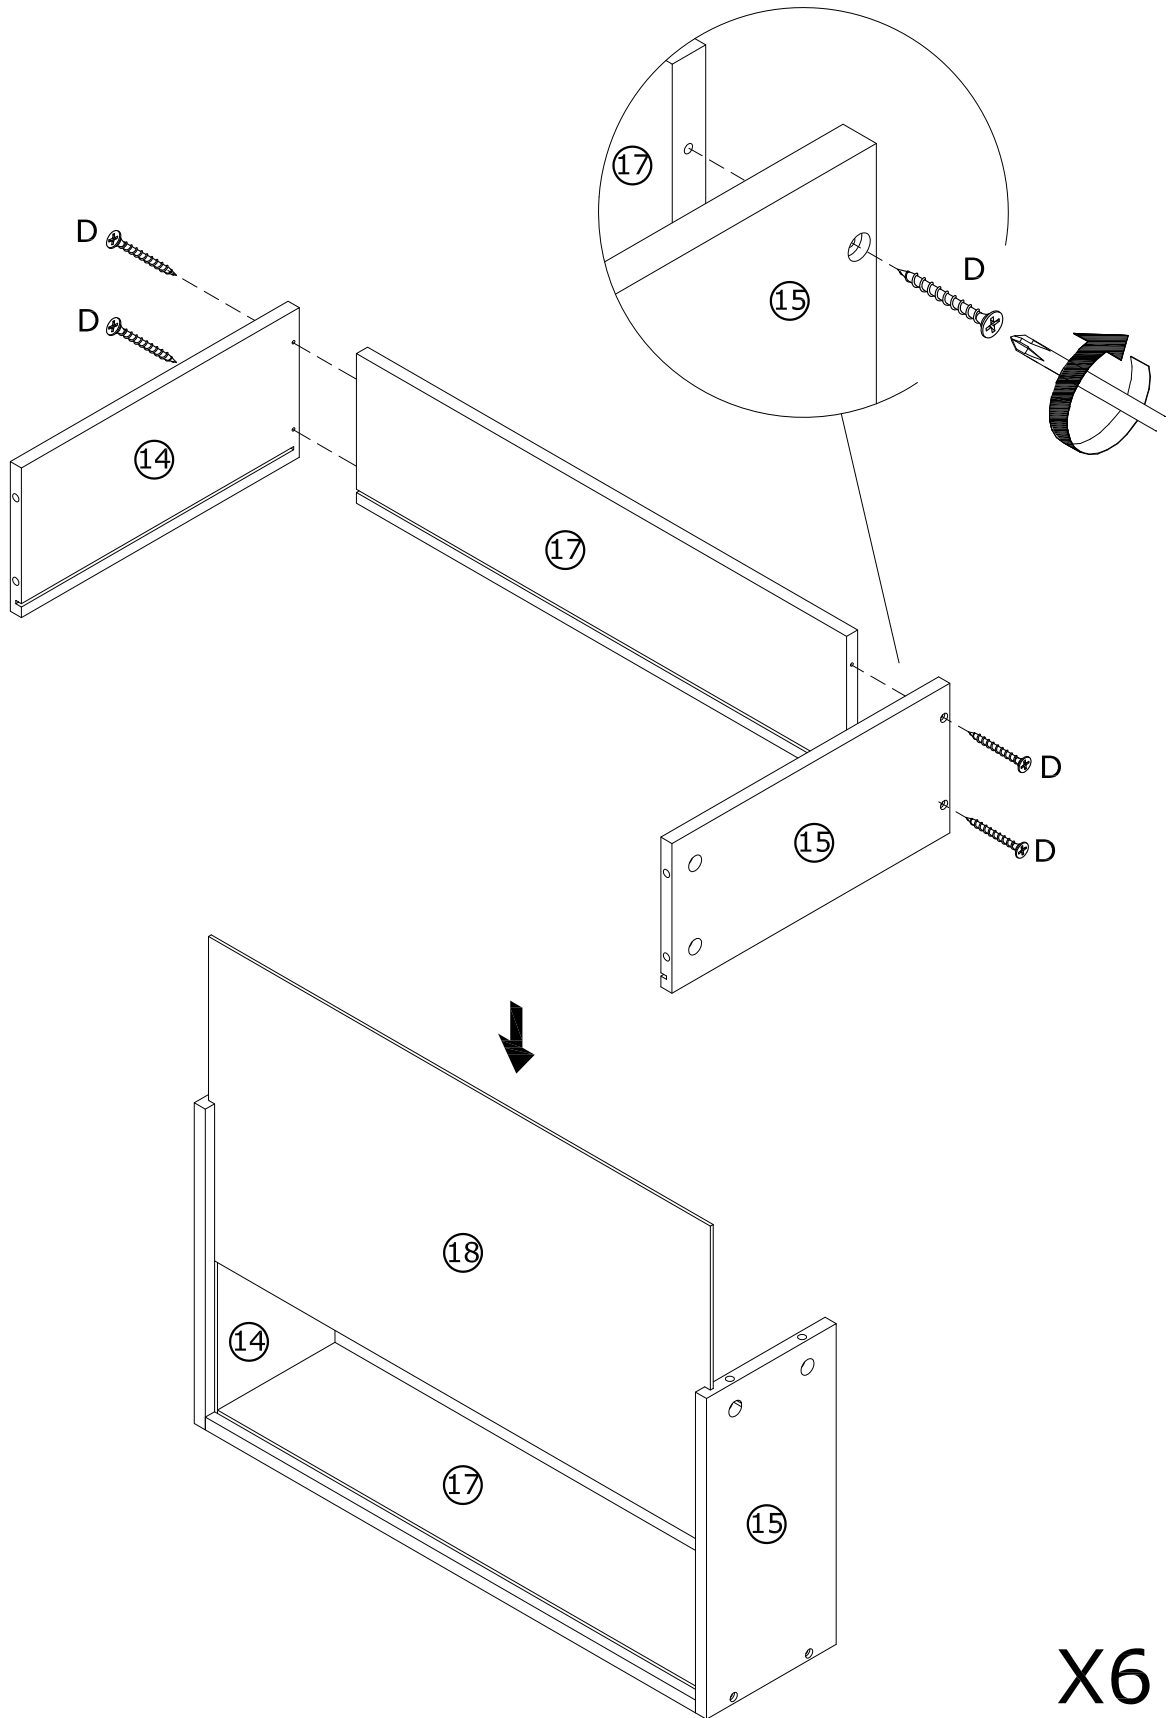
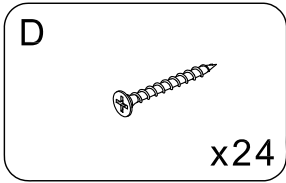


X6



20

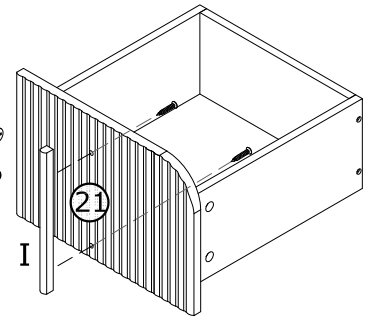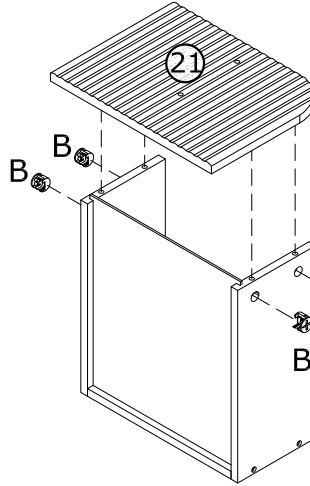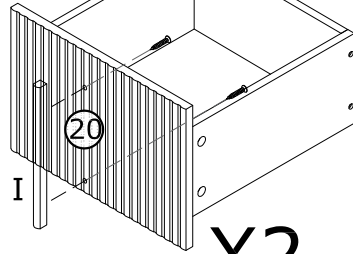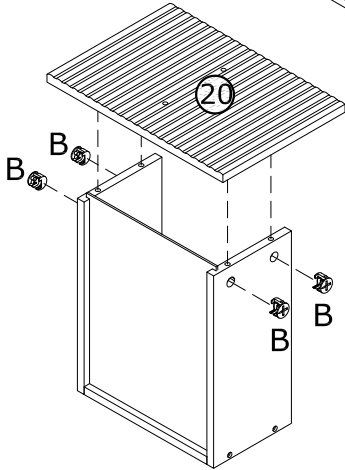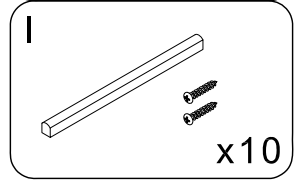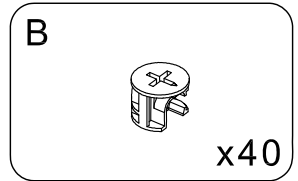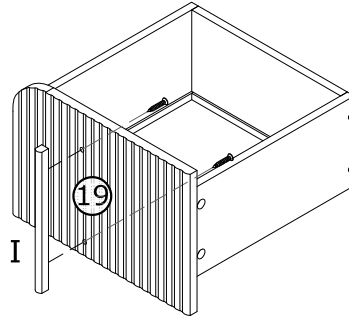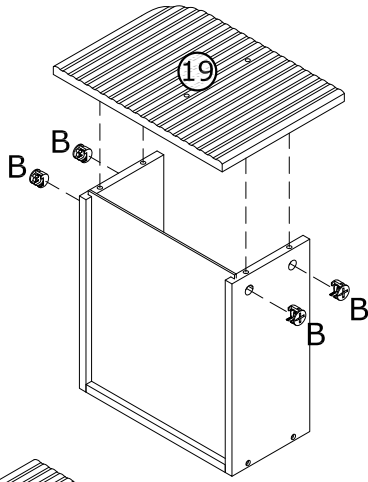

X2




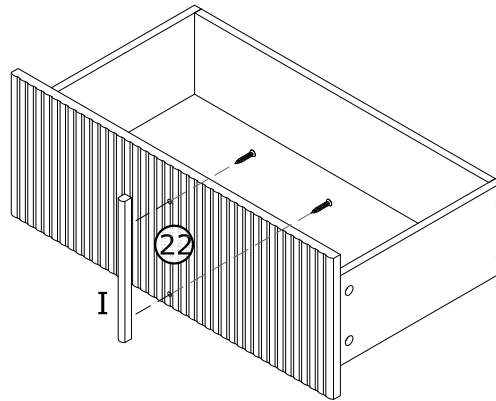
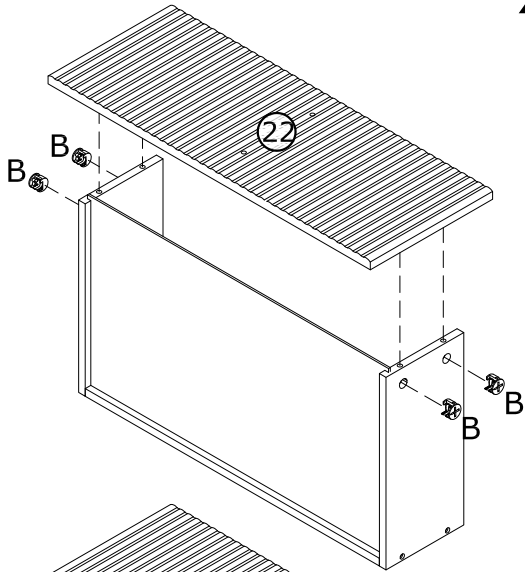


X3

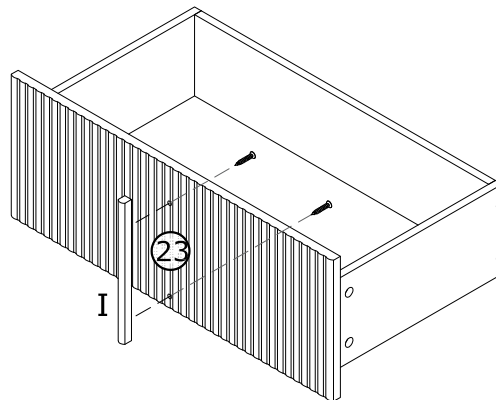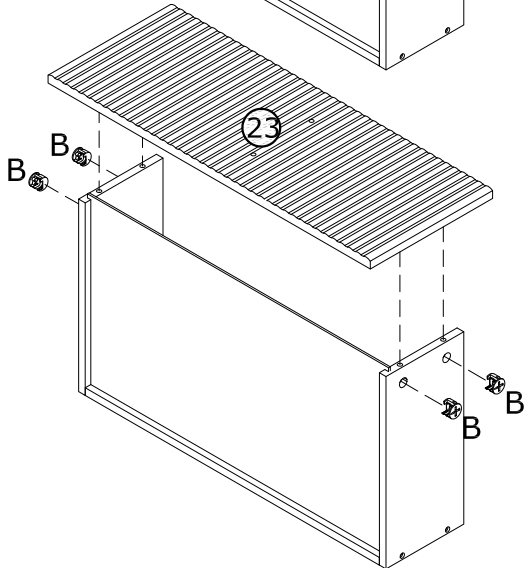

X3

21

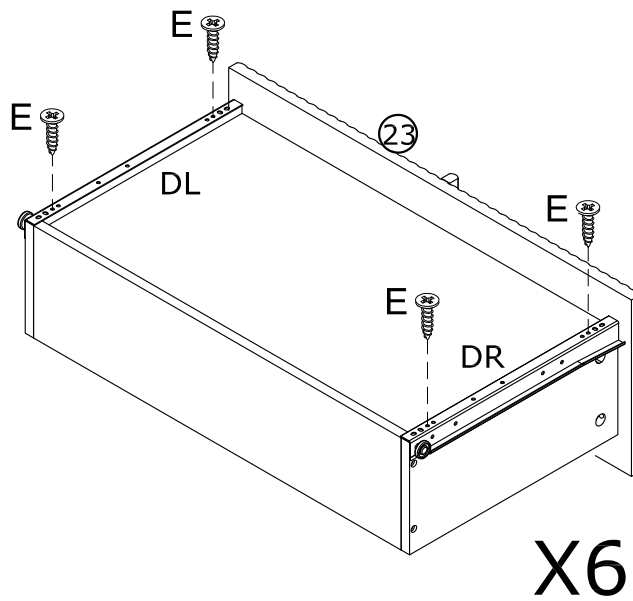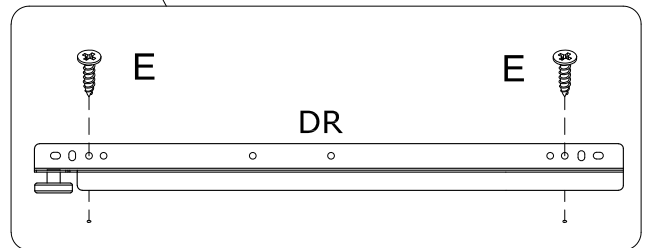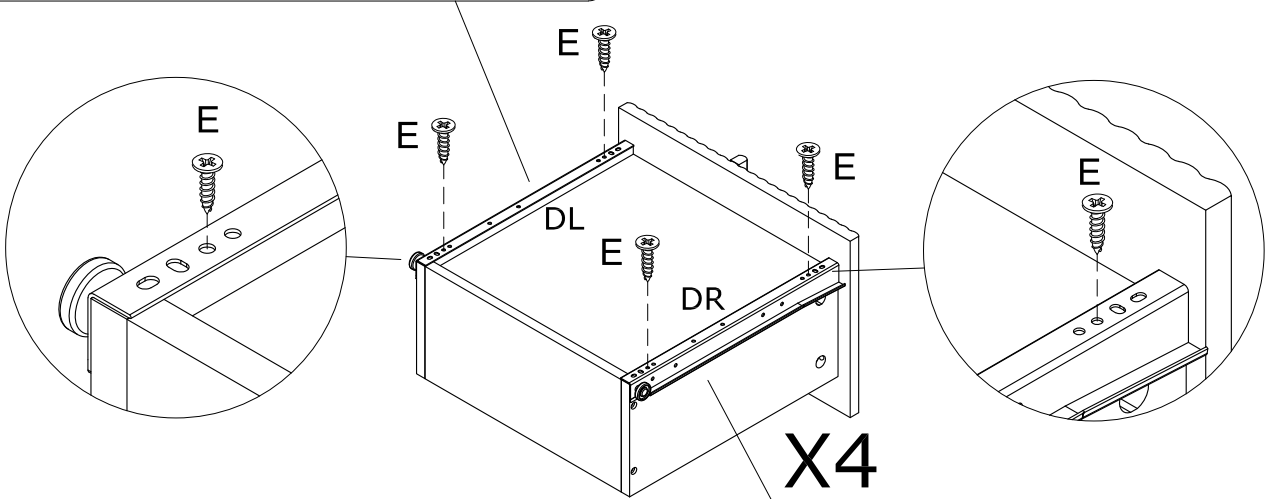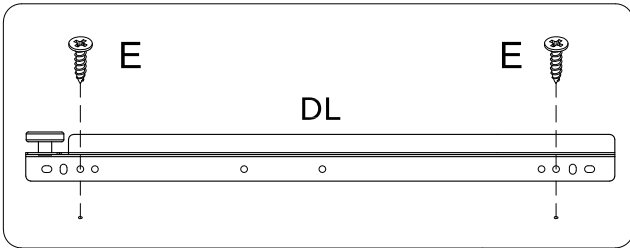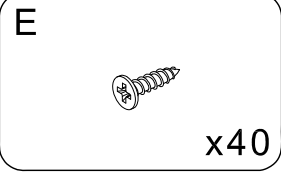

22



Pay attention to the drawer number; do not place items incorrectly

