
SANNWSG
Outdoor Products

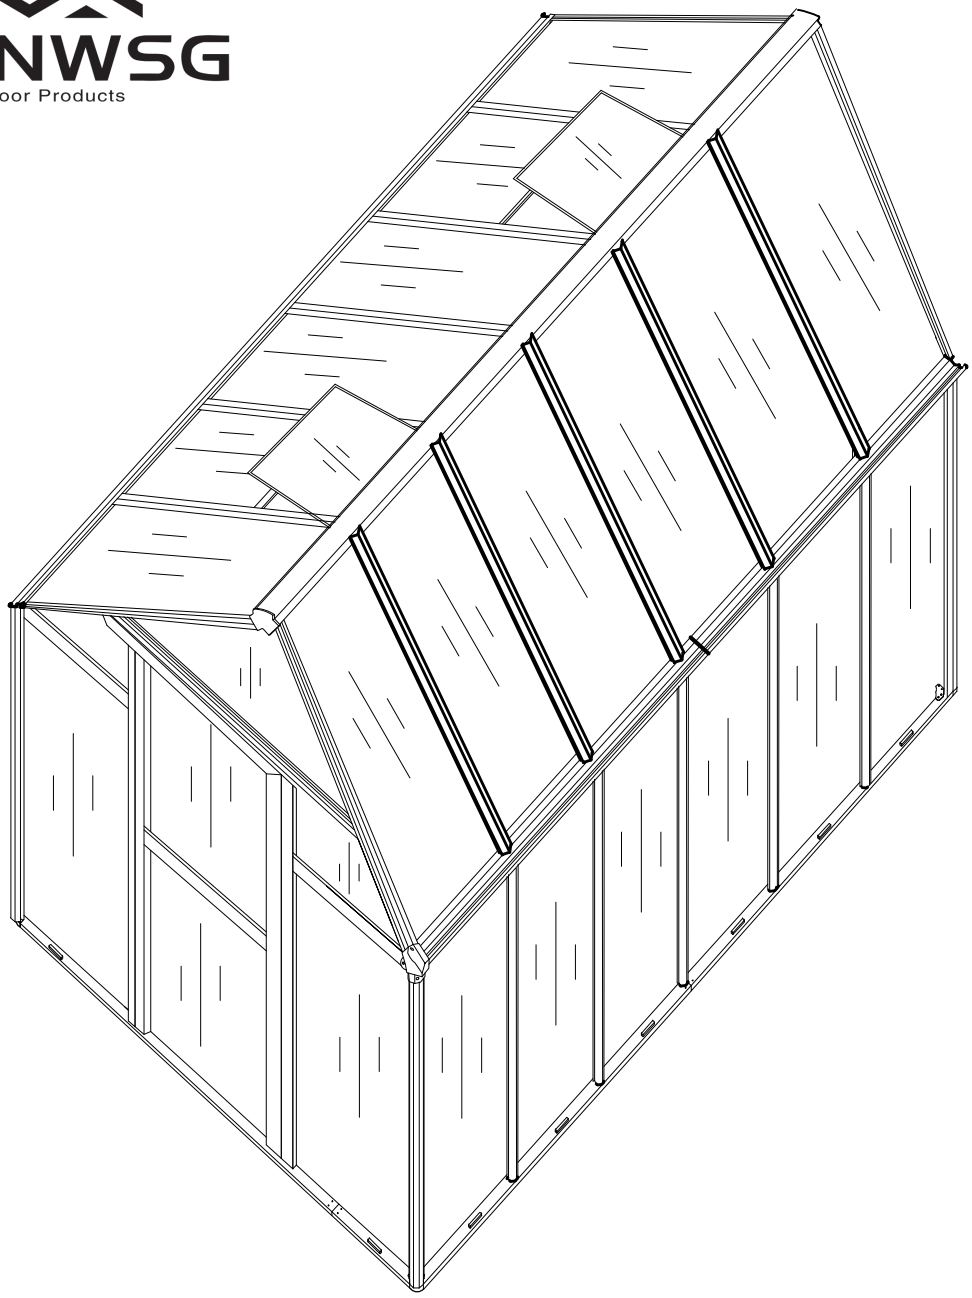









Greenhouse 6 X12ft Manual







Dear customer,
Thank you for your support.If you have any questions or concerns,please don't hesitate to contact us. Our customer service team is always here to help and assist you in any way we can. Thank you again for choosing our greenhouse.

Street: 8 The Green Suite A
City: Dover
State: DE
Post code:19901
Phone:3022415039/6605538327
Email:mail@sannwsg.com
Scan the code on your phone and contact us via email

sannwsg.com

After-sales phone service hours:
US CentralTime: 19:00-23:00
Seattle time: 17:00-21:00
US EasternTime: 20:00-00:00
Toronto time: 20:00-00:00
Germany time: 8:00-11:00
After-sales mailbox service time: 7*24 hours


A1		1	Z1		4
A2		1	Z2		2
A3		2	Z3		1
A4		2	Z4		34
B		4	Z5		1
C1		10	Z6		1
C2		2	Z7		2
C3		2	Z8		4
C4		2	Z9		2
C5		6			
D1		2	W1	 M5*8	28
D2		1	W2	 M5*16	172
D3		1	W3	 M3*8	8
D4		1	W4	 M3	8
E1		2	W5	 M5*35	4
E2		2	W6	 M5	4
F		2	W7	 M4*8	8
G		4	W8	 M4.2*16	4
H		2			
I1		1	X1		4
I2		1	X2		4
I3		2	X3		2
I4		2	X4		2
I5		2	X5		2
J1		2	X6		4
J2		2	X7		1
K1		6	X8		1
K2		4	X9		1
K3		8	X10		2

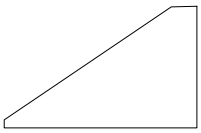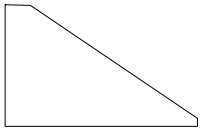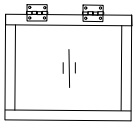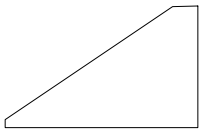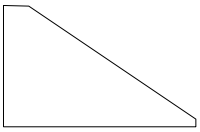
Y1		15	Y8		1
Y2		10	Y9		1
Y3		2	Y10		2
Y4		1	Y11		2
Y5		1	Y12		1
Y6		1	Y13		2
Y7		1			

IMPORTANT !

Please read all instructions carefully before assembly. It is best to familiarize yourself with the parts and collate the appropriate parts for each step.


The red lettering side of the sun panel faces inside the product and the white lettering side faces the sun.

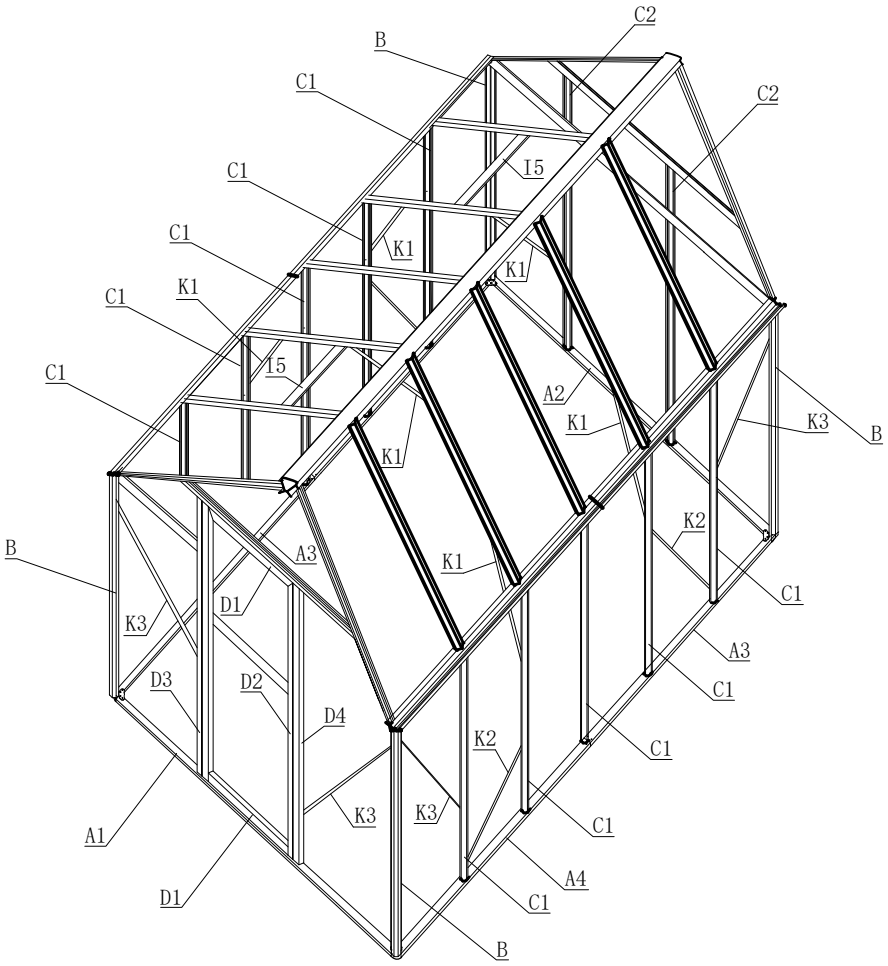
C2
B
C1
C2
I5
C1
K1
K1
C1
K1
C1
I5
A2
K1
K3
B
K1
K2
B
A3
K1
C1
K3
D1
A3
C1
D3
D2
D4
K2
C1
K3
K3
C1
A1
A4
D1
C1
B

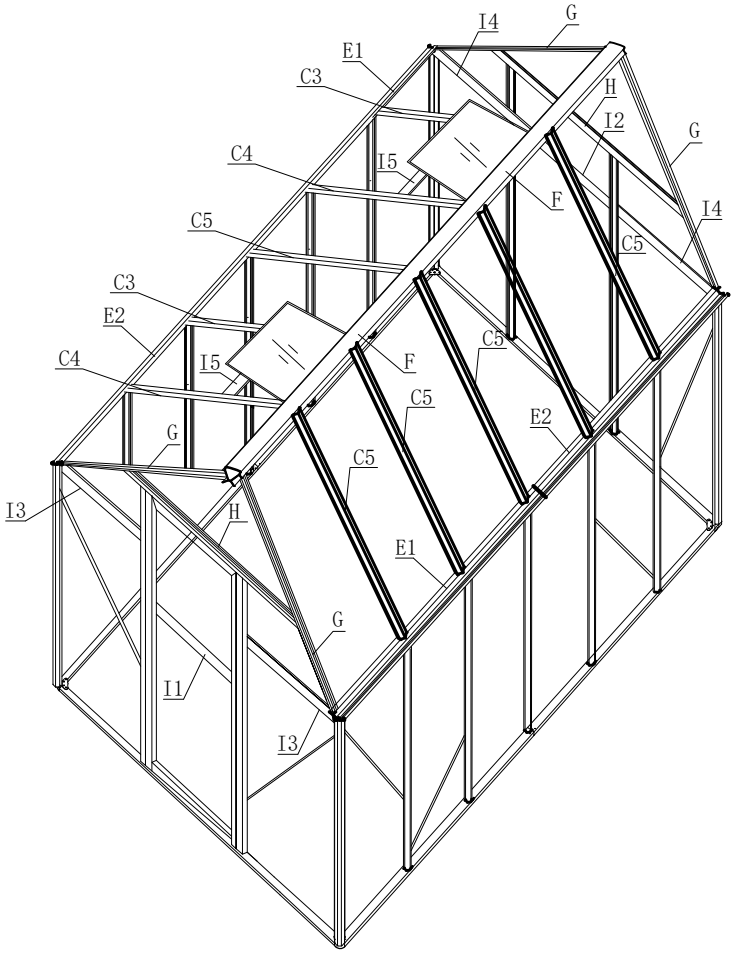

I4
G
E1
C3
H
I2
G
C4
I5
F
I4
C5
C5
C3
E2
C5
I5
F
C4
C5
E2
G
C5
C5
I3
H
E1
G
I1
I3

1. Connect door frame D1 with corner part X2 and tighten the screws W1

2. Connect door frame D1 with D3 and D2 and tighten screws W1

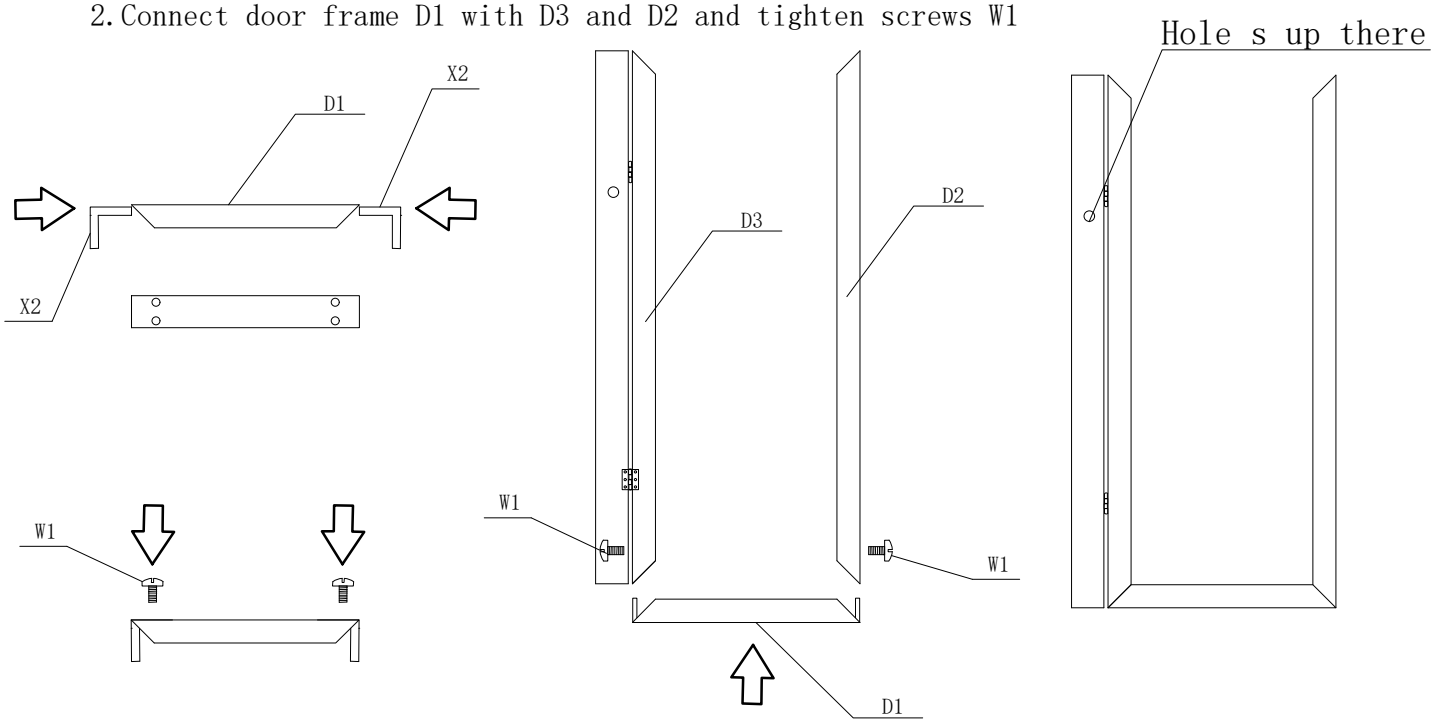


1

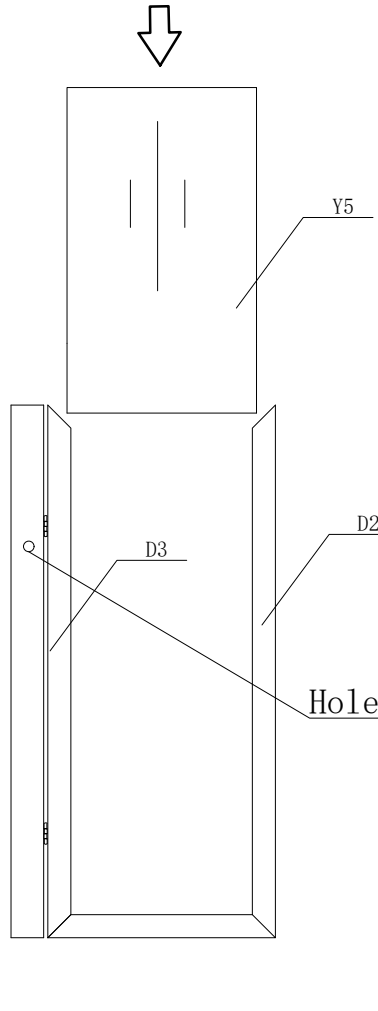

1. nsert the sunlight panel (transparent plastic board) Y5 into the slot of the door frame D2

2. Insert the partition board of sunlight panel I1 into the slot of D2 and D3, as shown in Figure 1

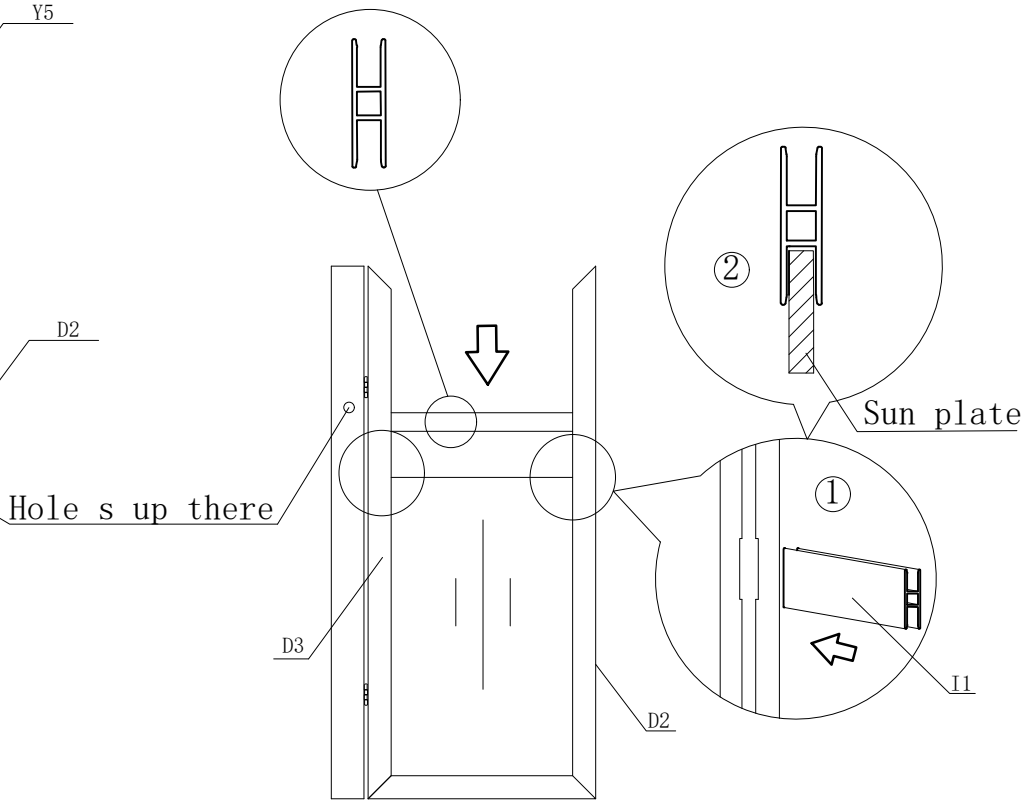


2

1. Press the door lock Z7 into the door frame hole, tighten the tapping screw W8, as shown in Figure 1


2. nsert the sunlight panel (transparent plastic board) Y4, as shown in Figure 2

3.Insert door frame D1 and tighten screw W1, as shown in Figure 3

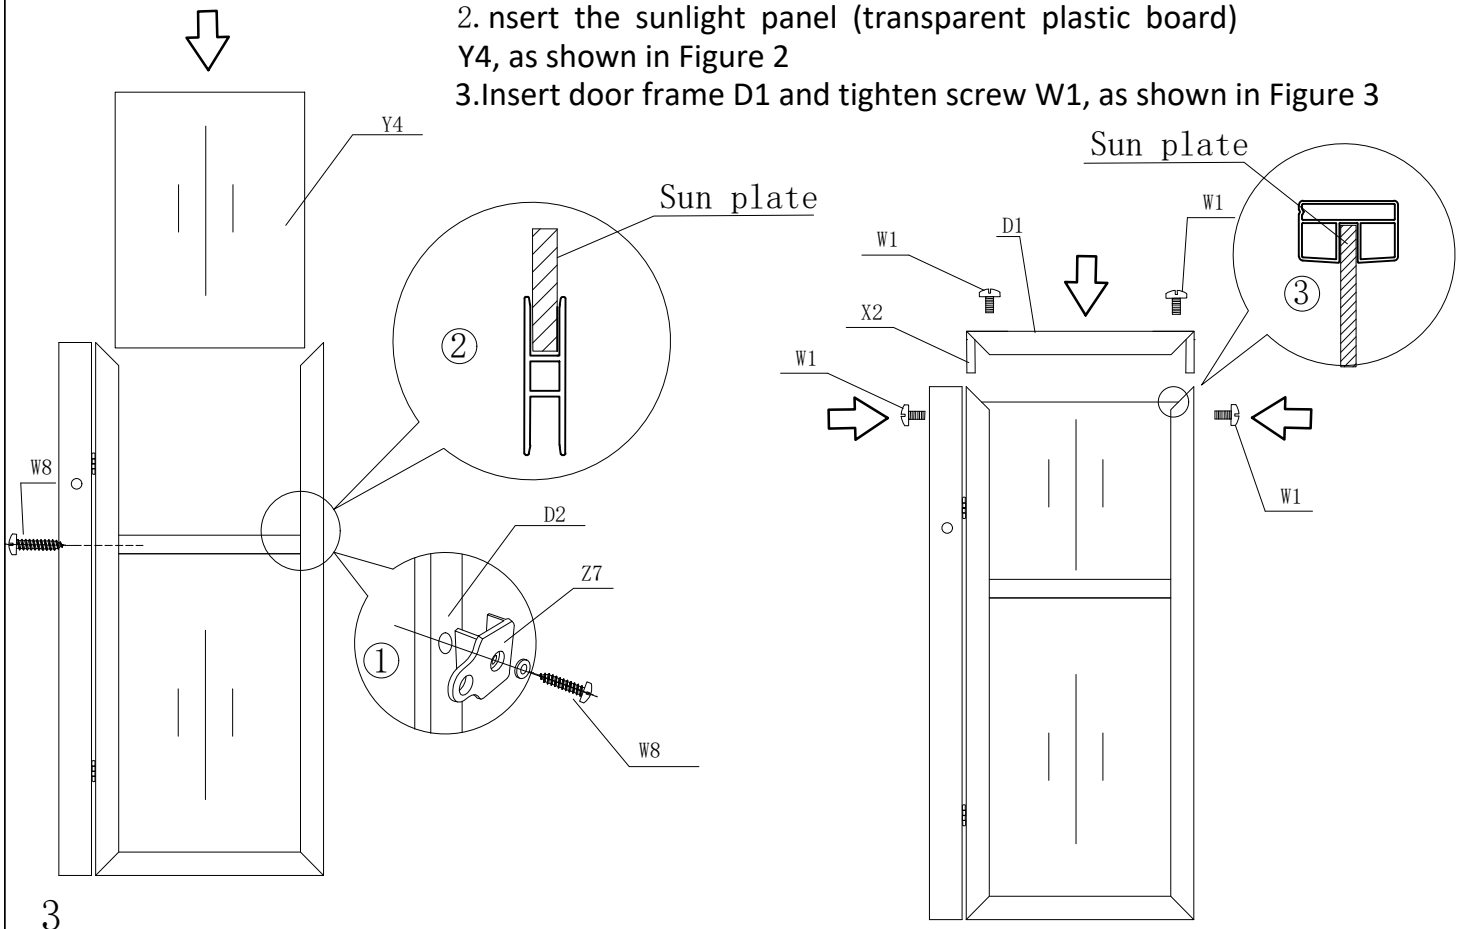


3

Connect bottom beams A1 and A3 to corner part Z1

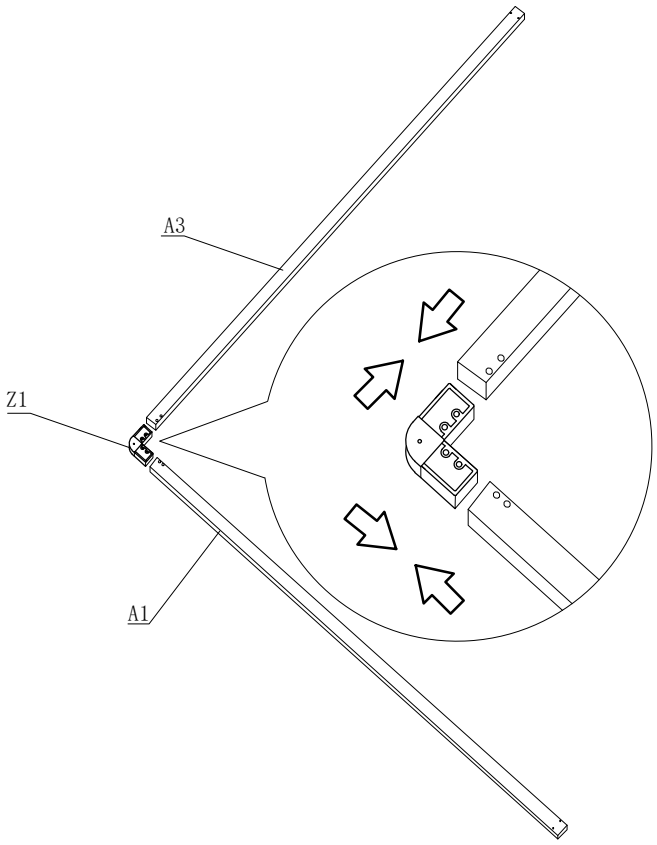


4

Connect corner pillar B to corner part X1

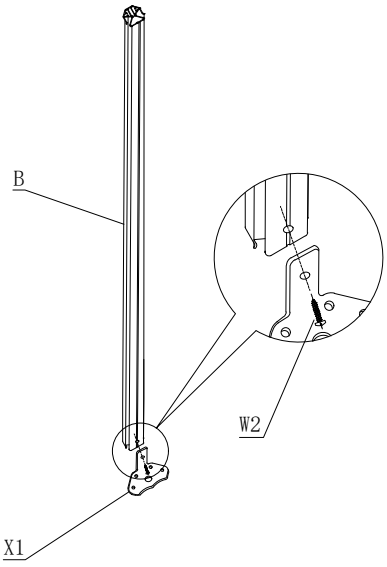


Connect corner pillar to bottom beam

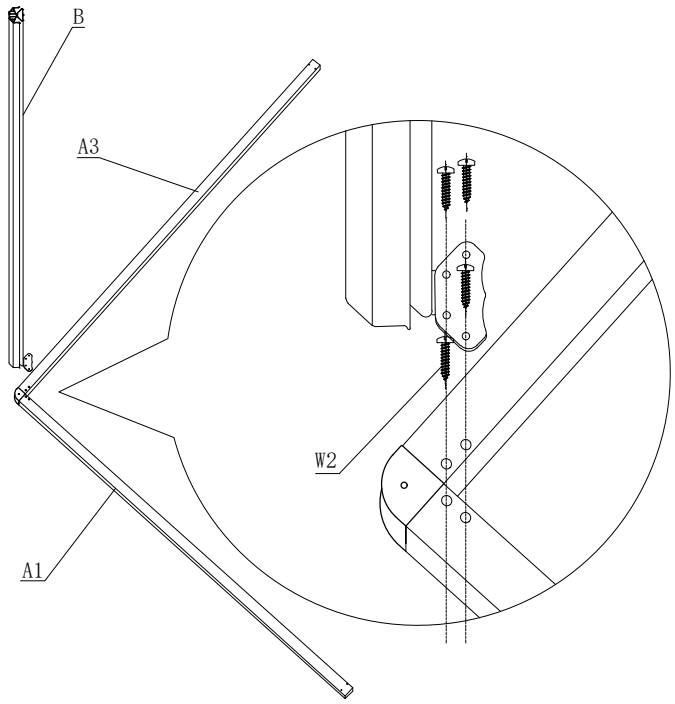


5

Connect corner pillar to bottom beam

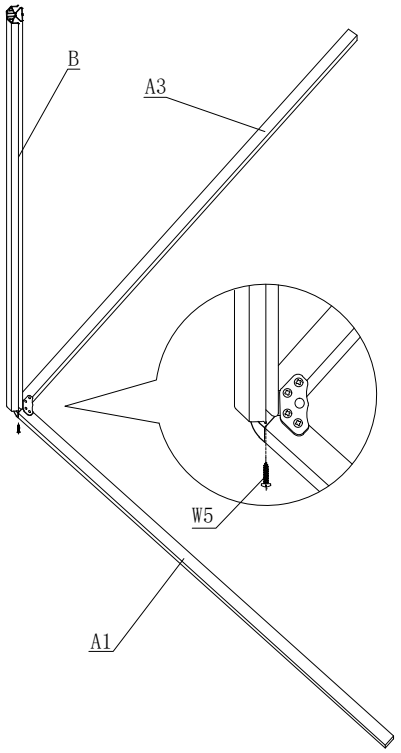


Connect bottom beams A3, A4 through Z2

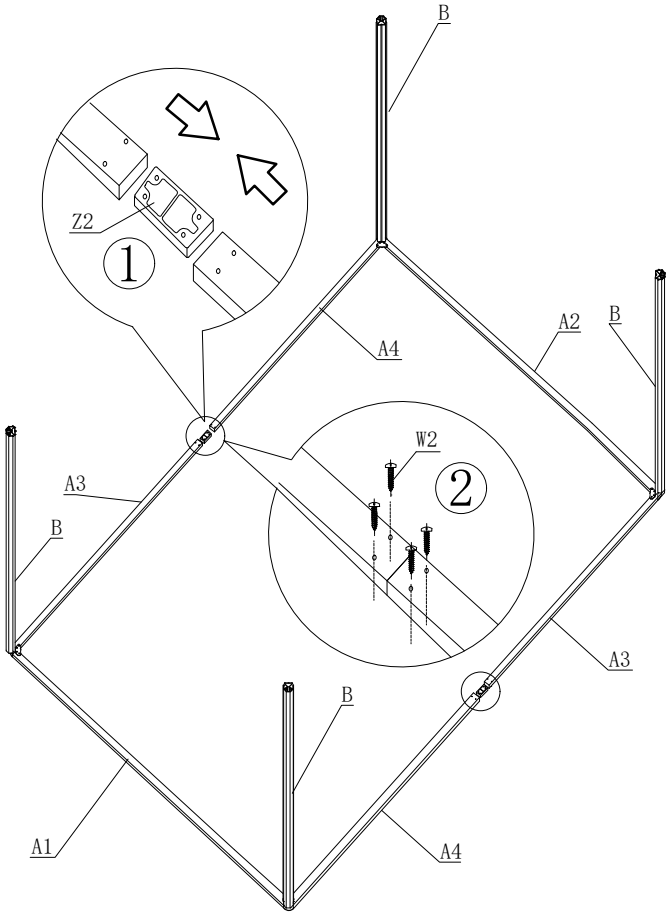


6

Connect side pillar C1 to the bottom beam
Anchor X10 is inserted into the interior of the link out of the middle of the sill

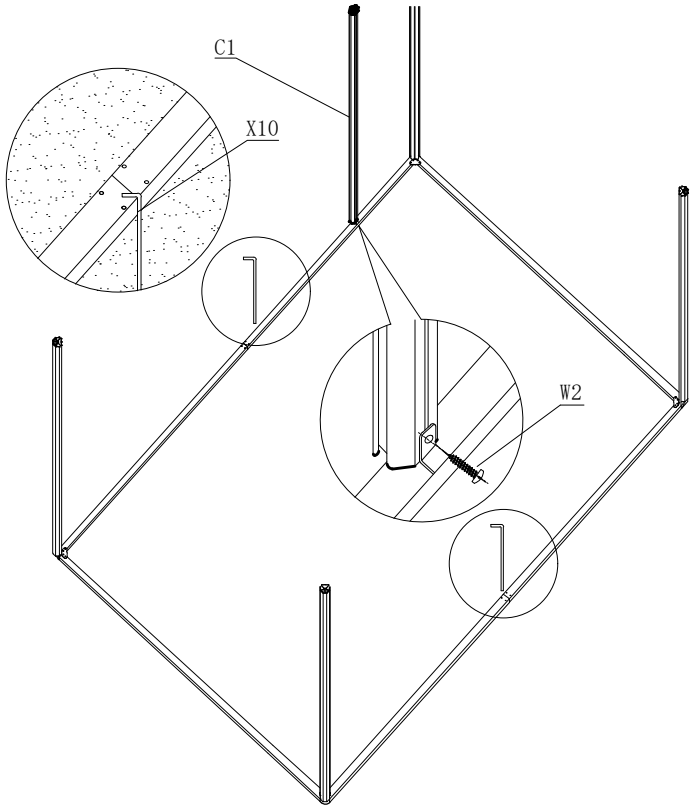


Connect side pillars C1, C2, to bottom beam

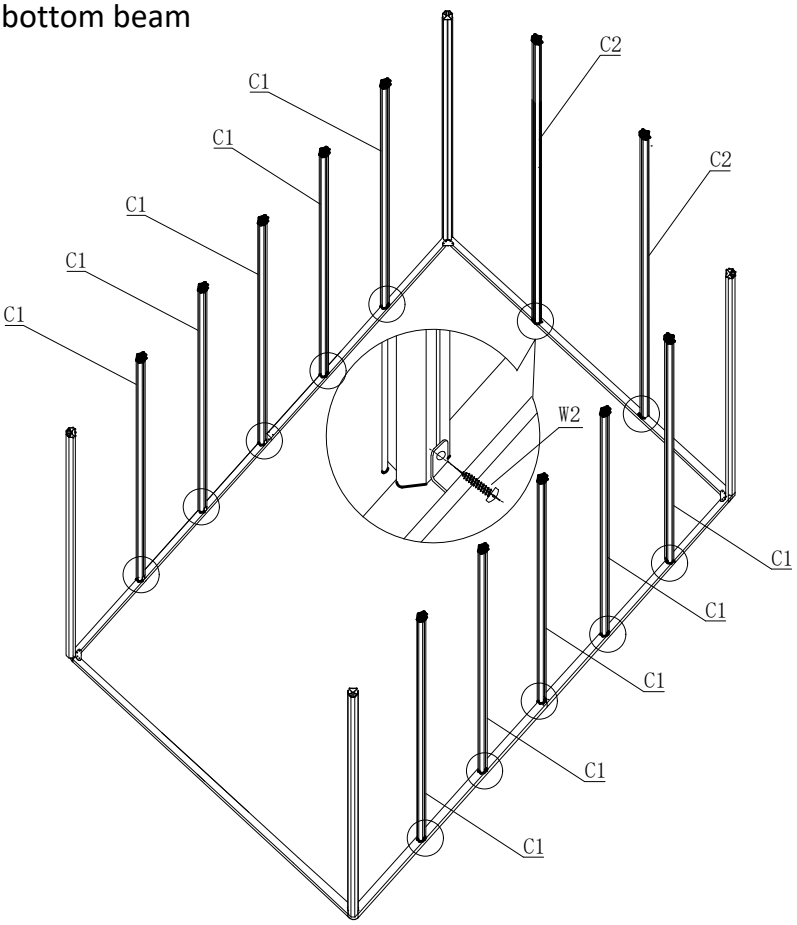


7

Connect the corner pillar B opposite the door to the side pillars C1 and C2 by K3

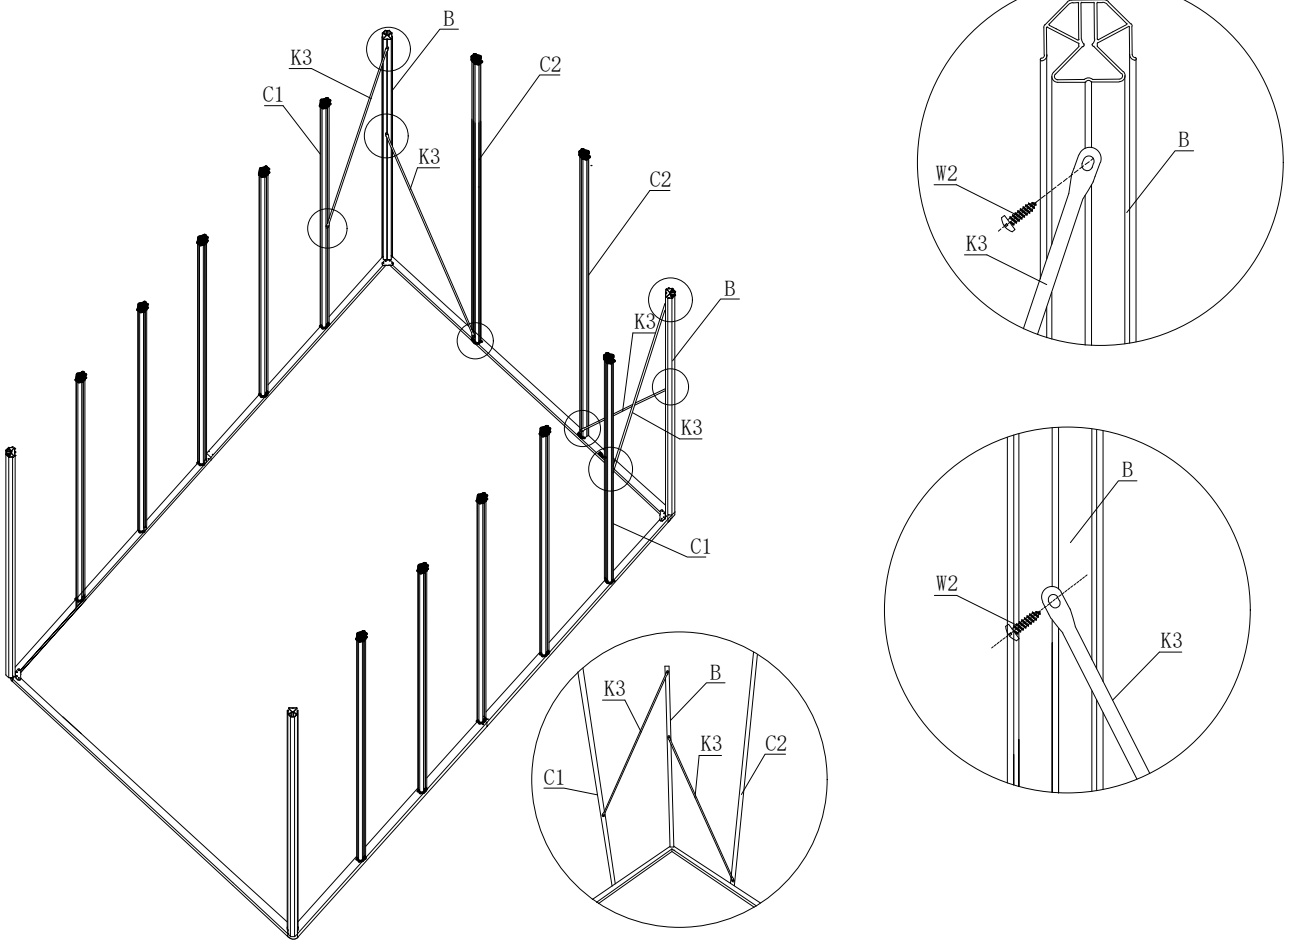


8

Connect side pillars D3, D4 to bottom beam

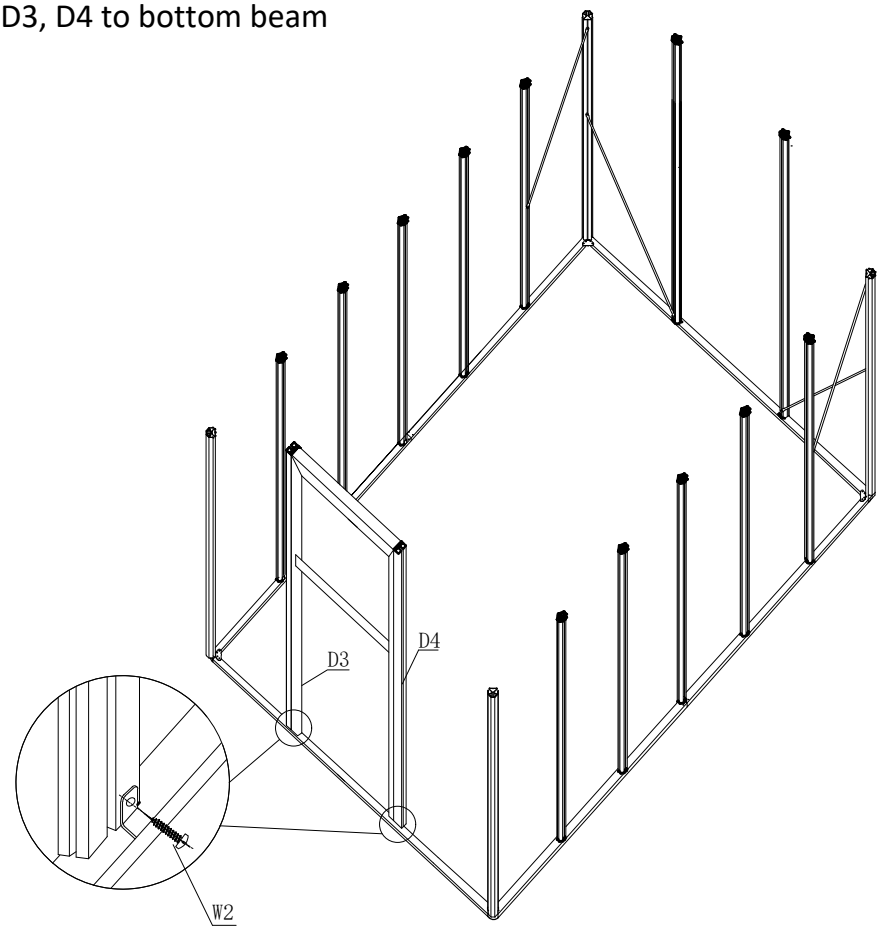


9

Press the door lock Z7 into the door frame hole, tighten the tapping screw W8

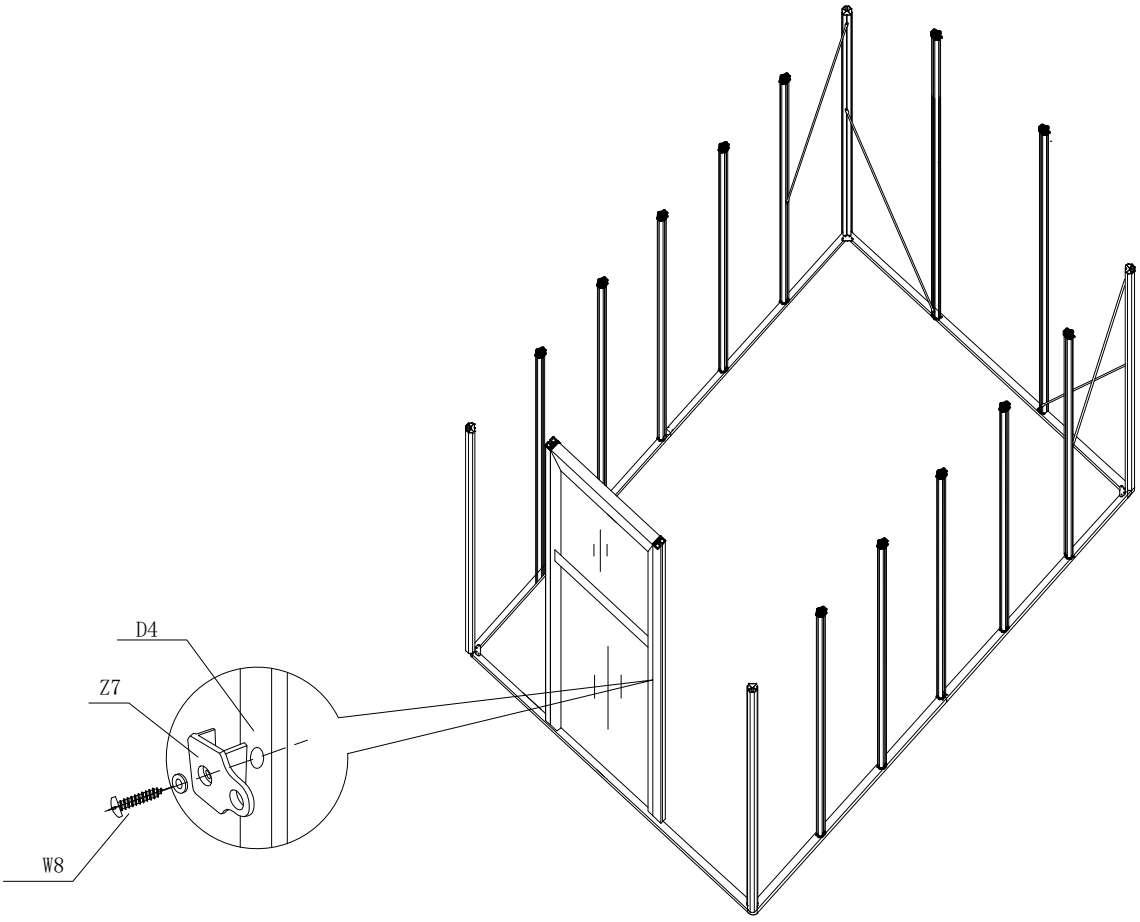


10

Connect the pillar B next to the front door to the side pillar C1,D3 and C1,D4 by K3

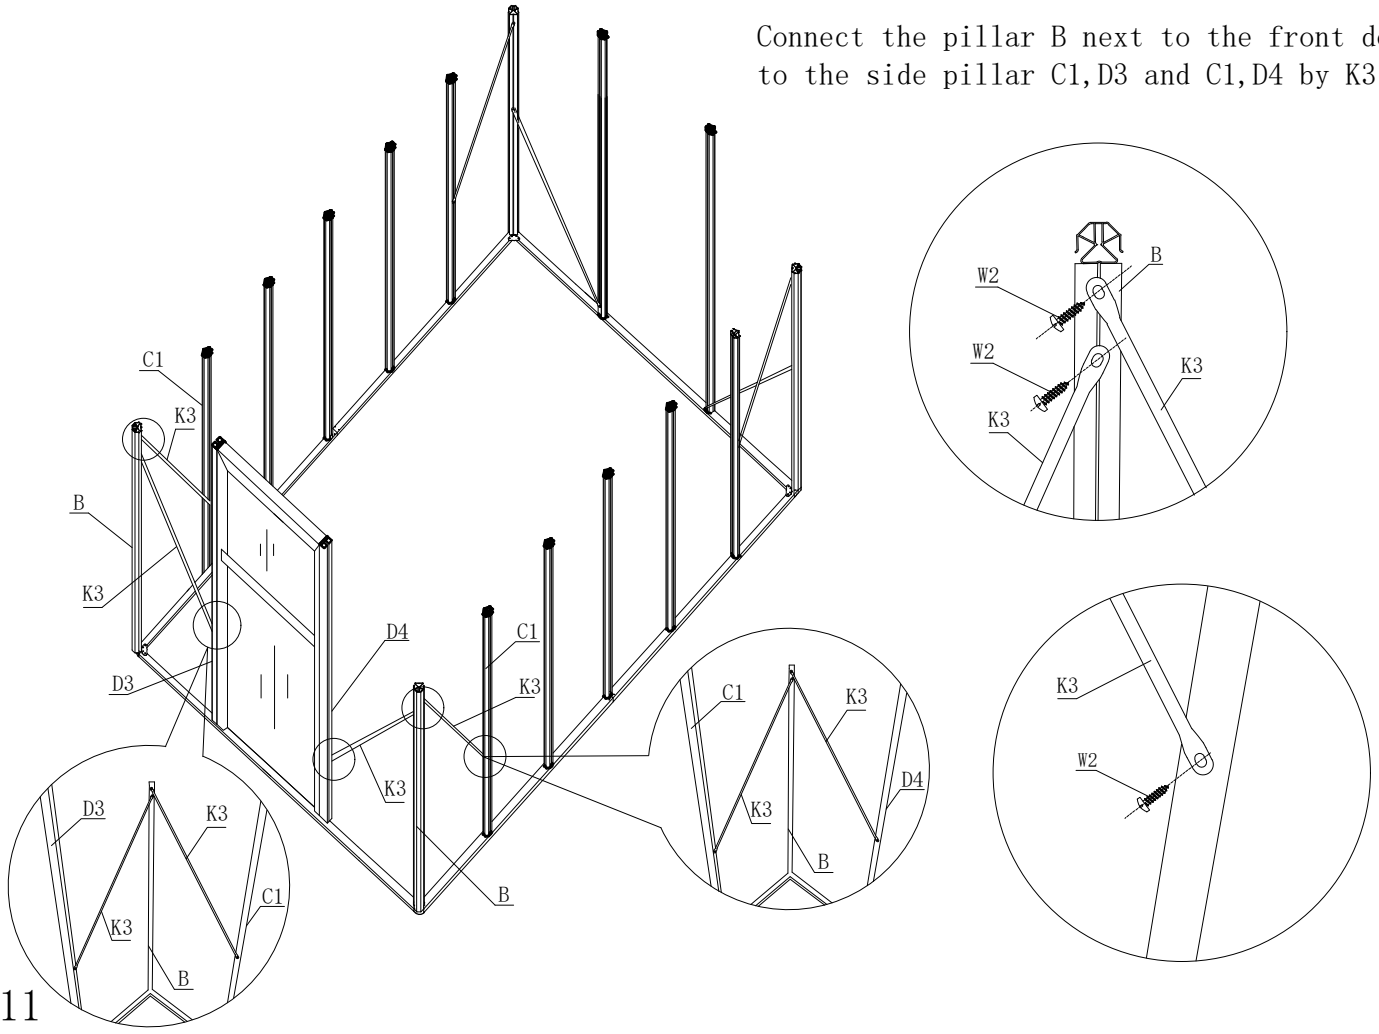

11

Connect the Side pillars C1 by K2

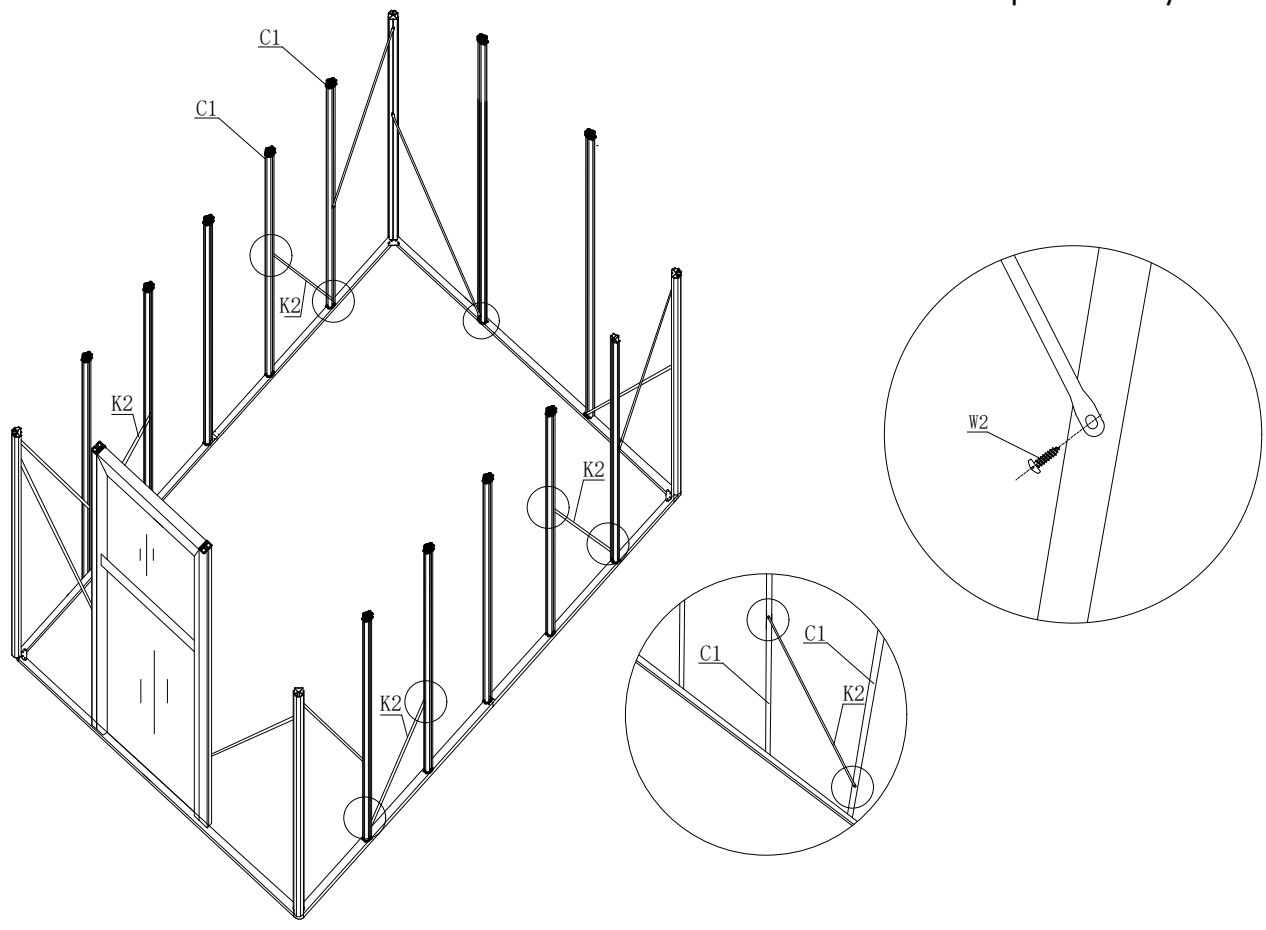


12

1 Knock in the slot Z4 of the sunlight panel (the transparent plastic board) , as shown in Figure 1 and 2


2 Insert the sunlight panel (the transparent plastic board) Y1 in sequence , as shown in Figure 4

And ensure the sunlight panel (the transparent plastic board) has been inserted into the slot as shown in Figure 3

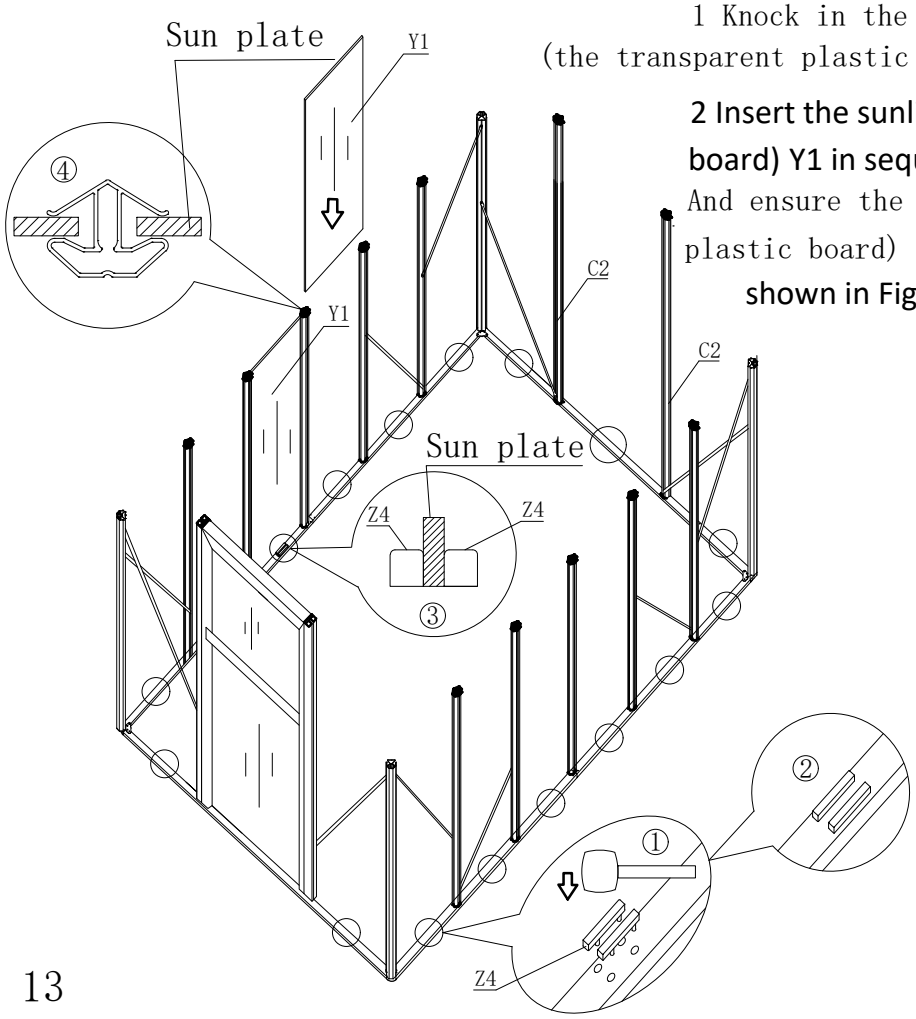


13

Use the slot of the drainage ditch E to press down on the sunlight panel (the transparent plastic board) , as shown in Figure 1 and tighten the screw W2

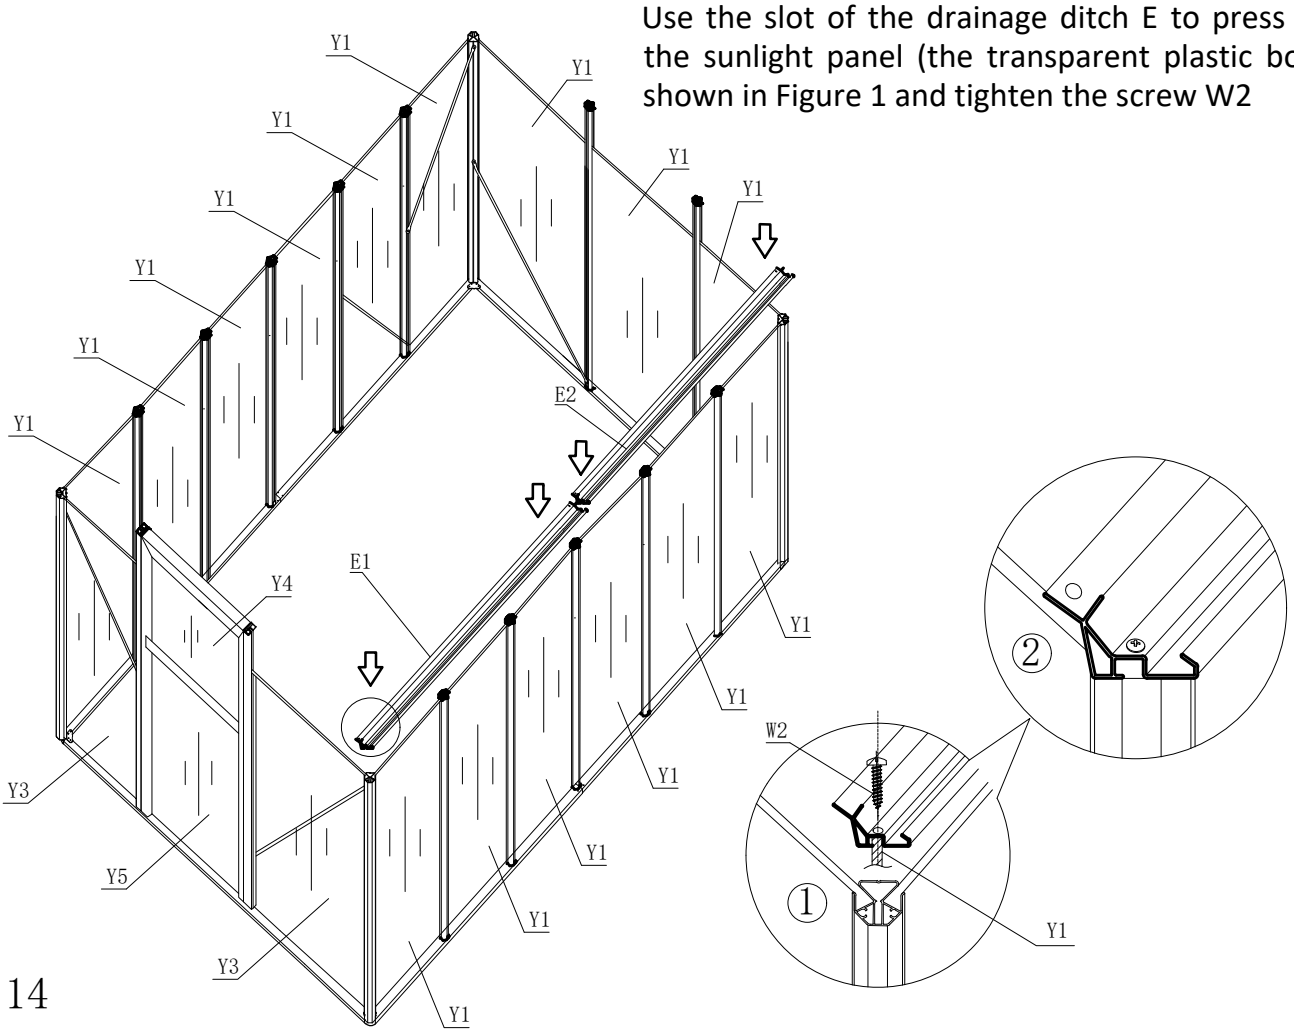


14

Connect the drainage ditch E1 to the side pillars C1
And tighten screws W2 in sequence

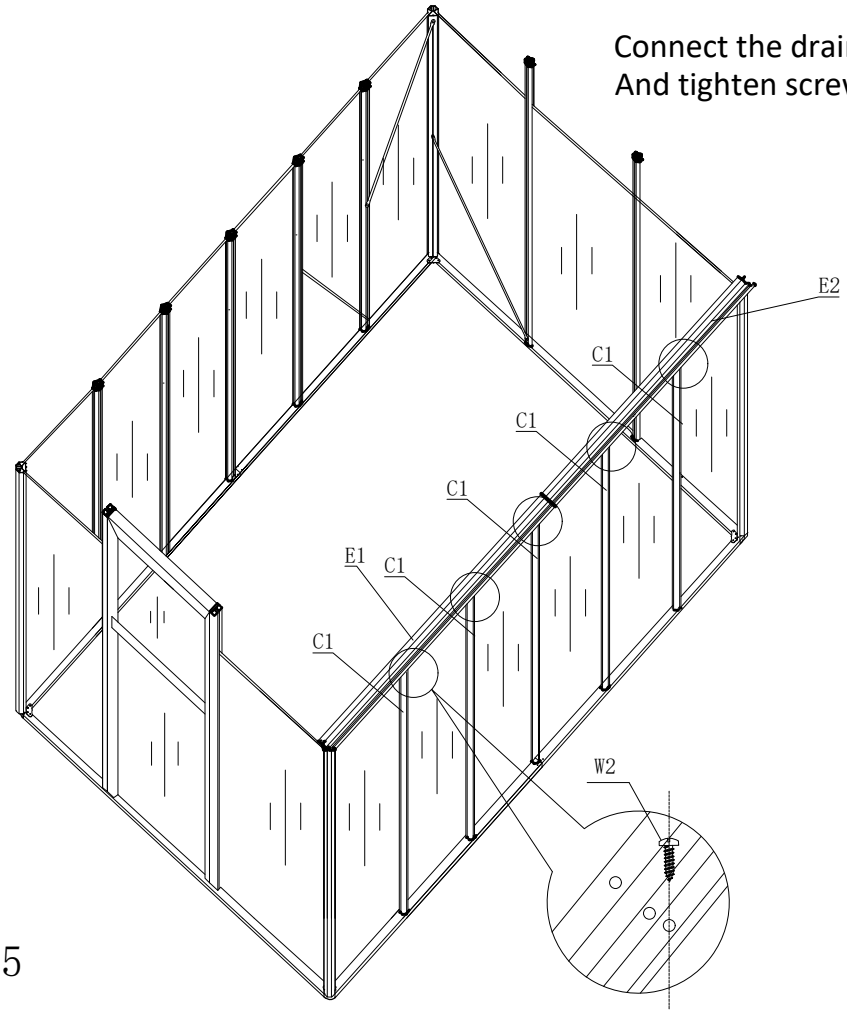


15

Use the slot of the drainage ditch E to press down on the sunlight panel (the transparent plastic board) , as shown in Figure 1 and tighten the screw W2

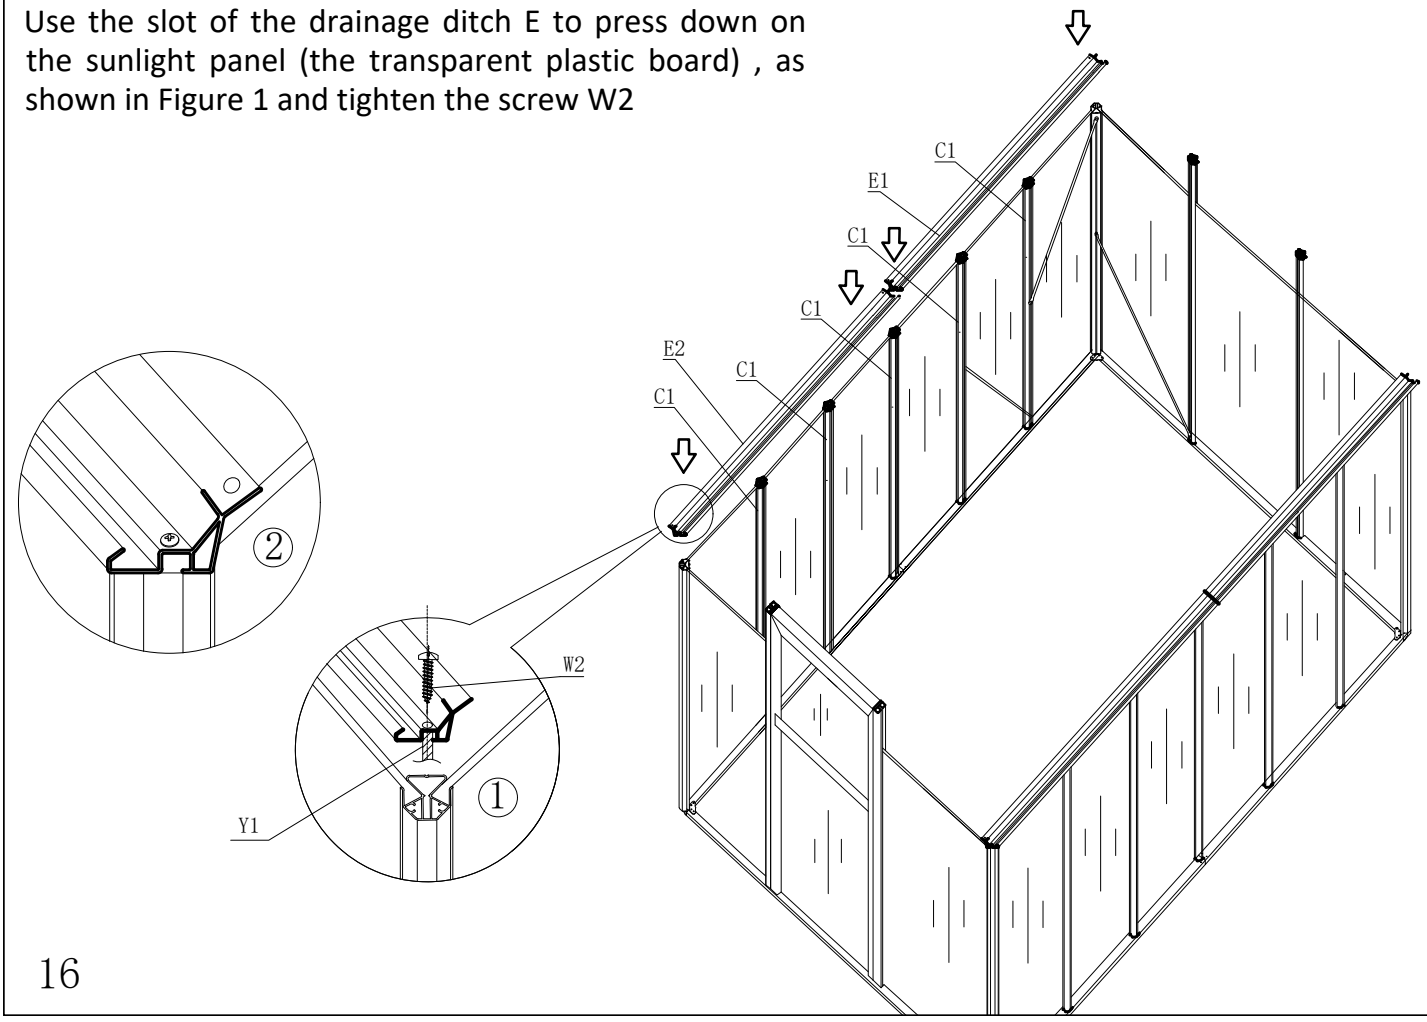


16

Connect the drainage ditch E1 to the side pillars C1
And tighten screws W2 in sequence

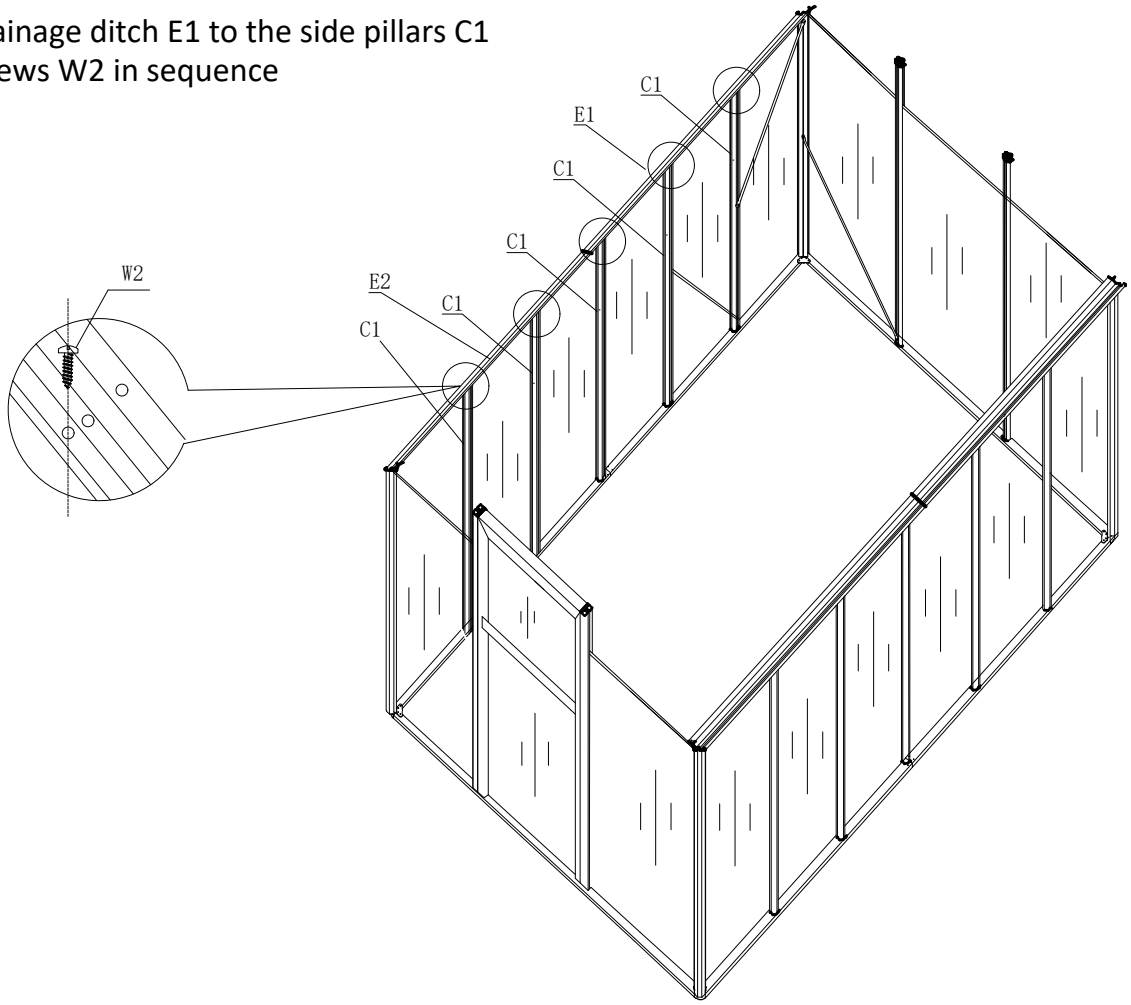


17

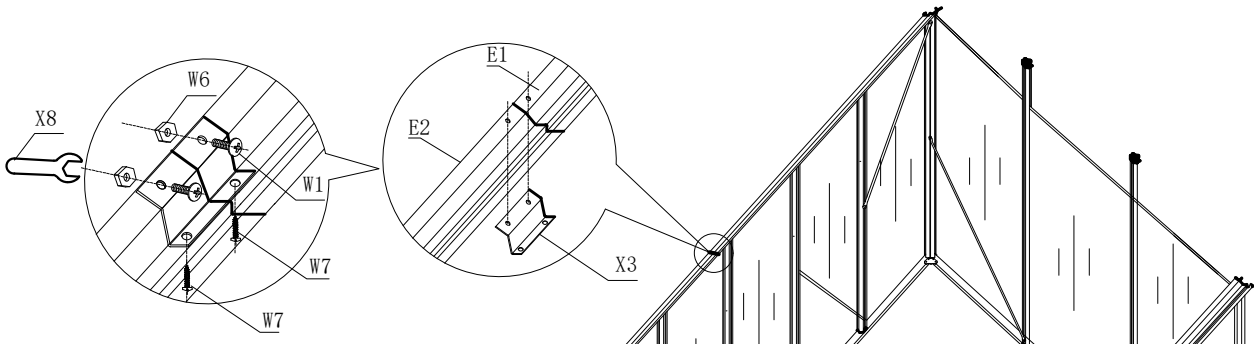

Connect drainage ditch E1 and E2 with part X3


18

1. Connect the partition board of sunlight panel I2 to the side pillar C2
2. Connect the partition board of sunlight panel I4 to the side pillar C2

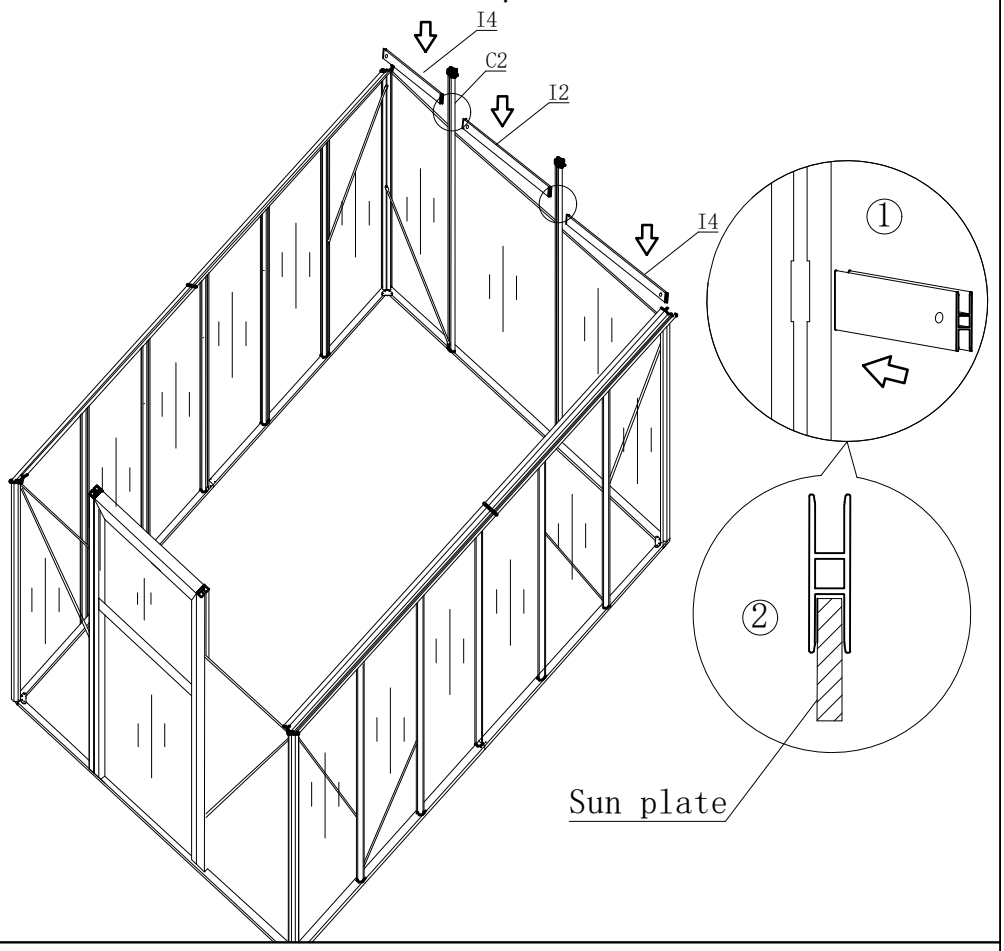


19

Connect the partition board of sunlight panel I3 to the door frame pillar D3, D4

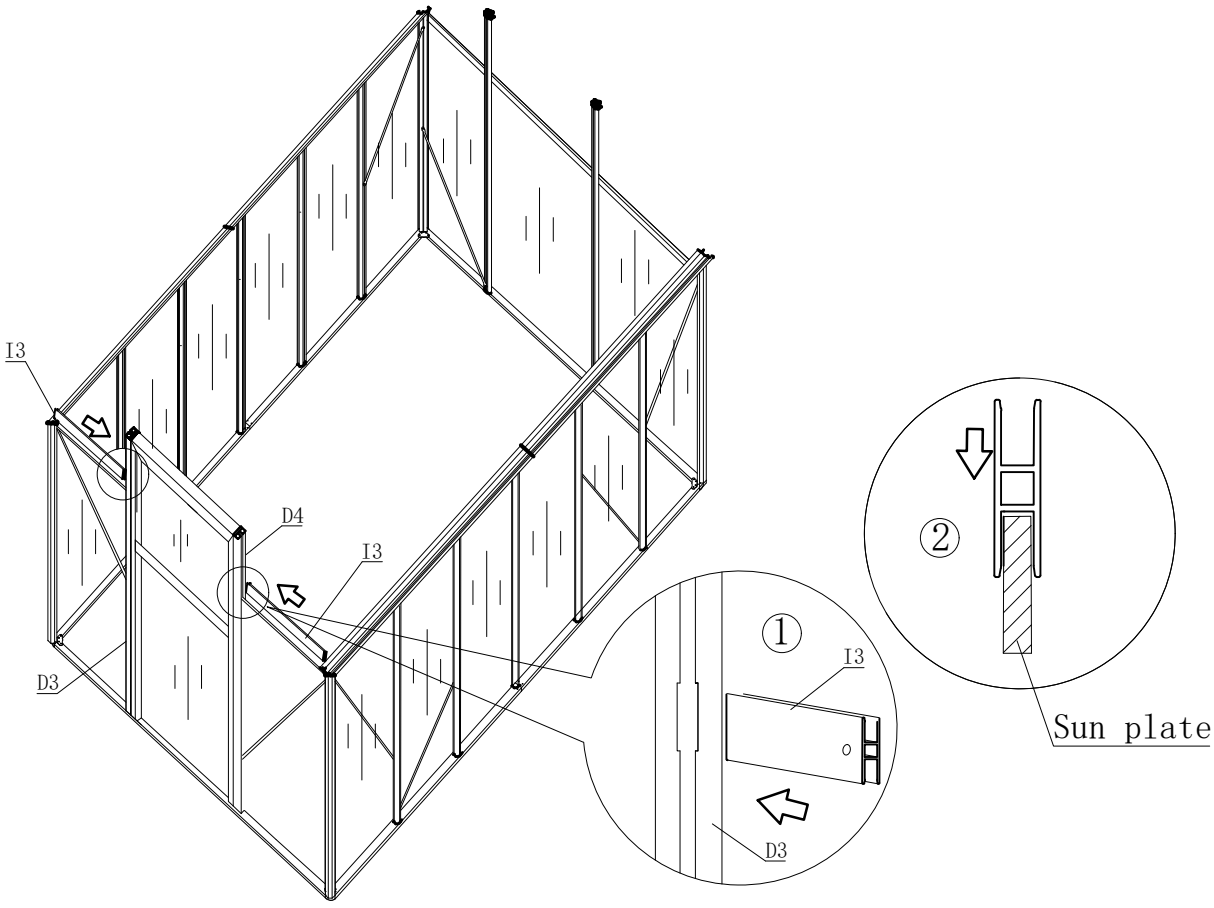


20

1. Insert sunlight panel Y12 into the slot of the side pillar
2. Tighten the W8 screws on both sides of the door

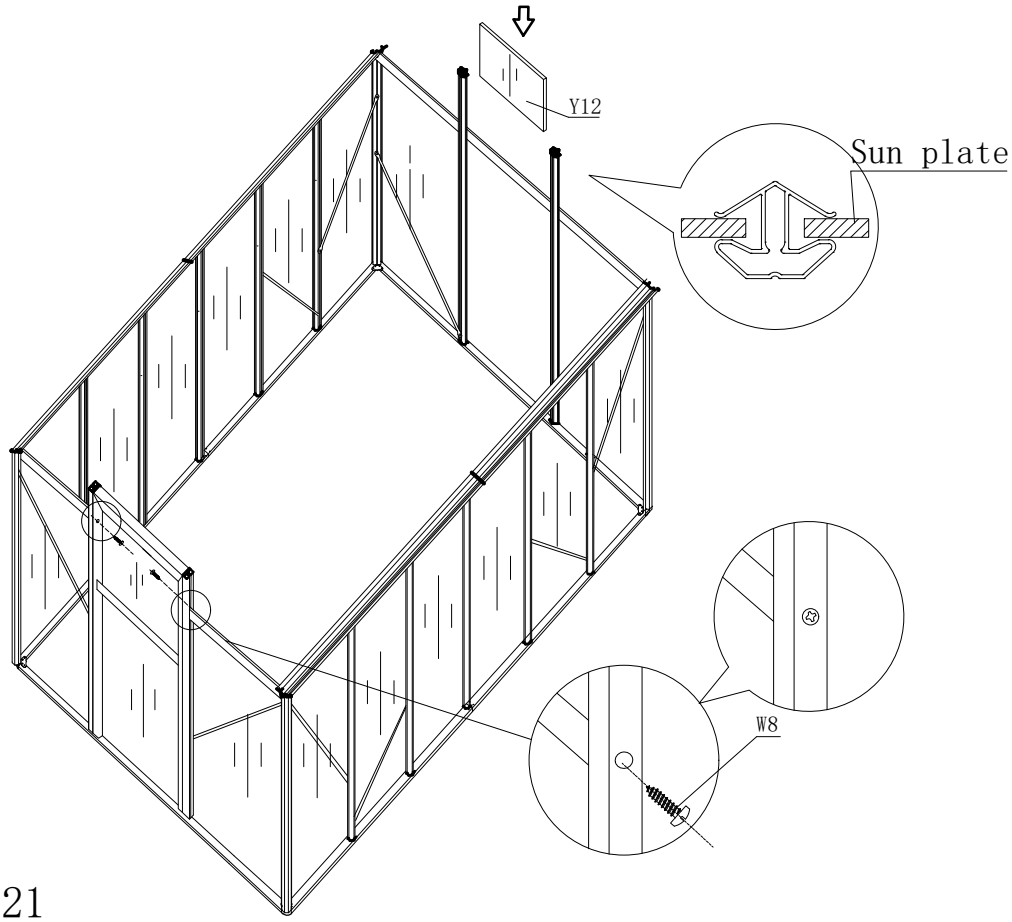


21

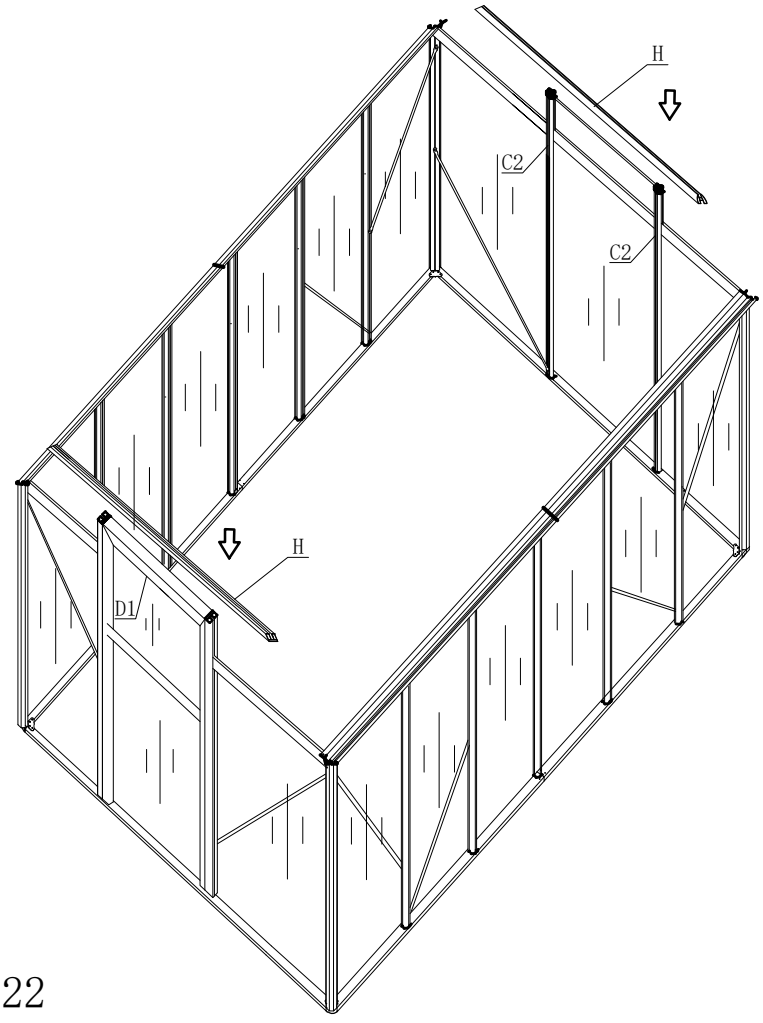

Place the crossmember H on the pillar C2 of the door frame D1


22

Connect the front door frame to the triangle joint

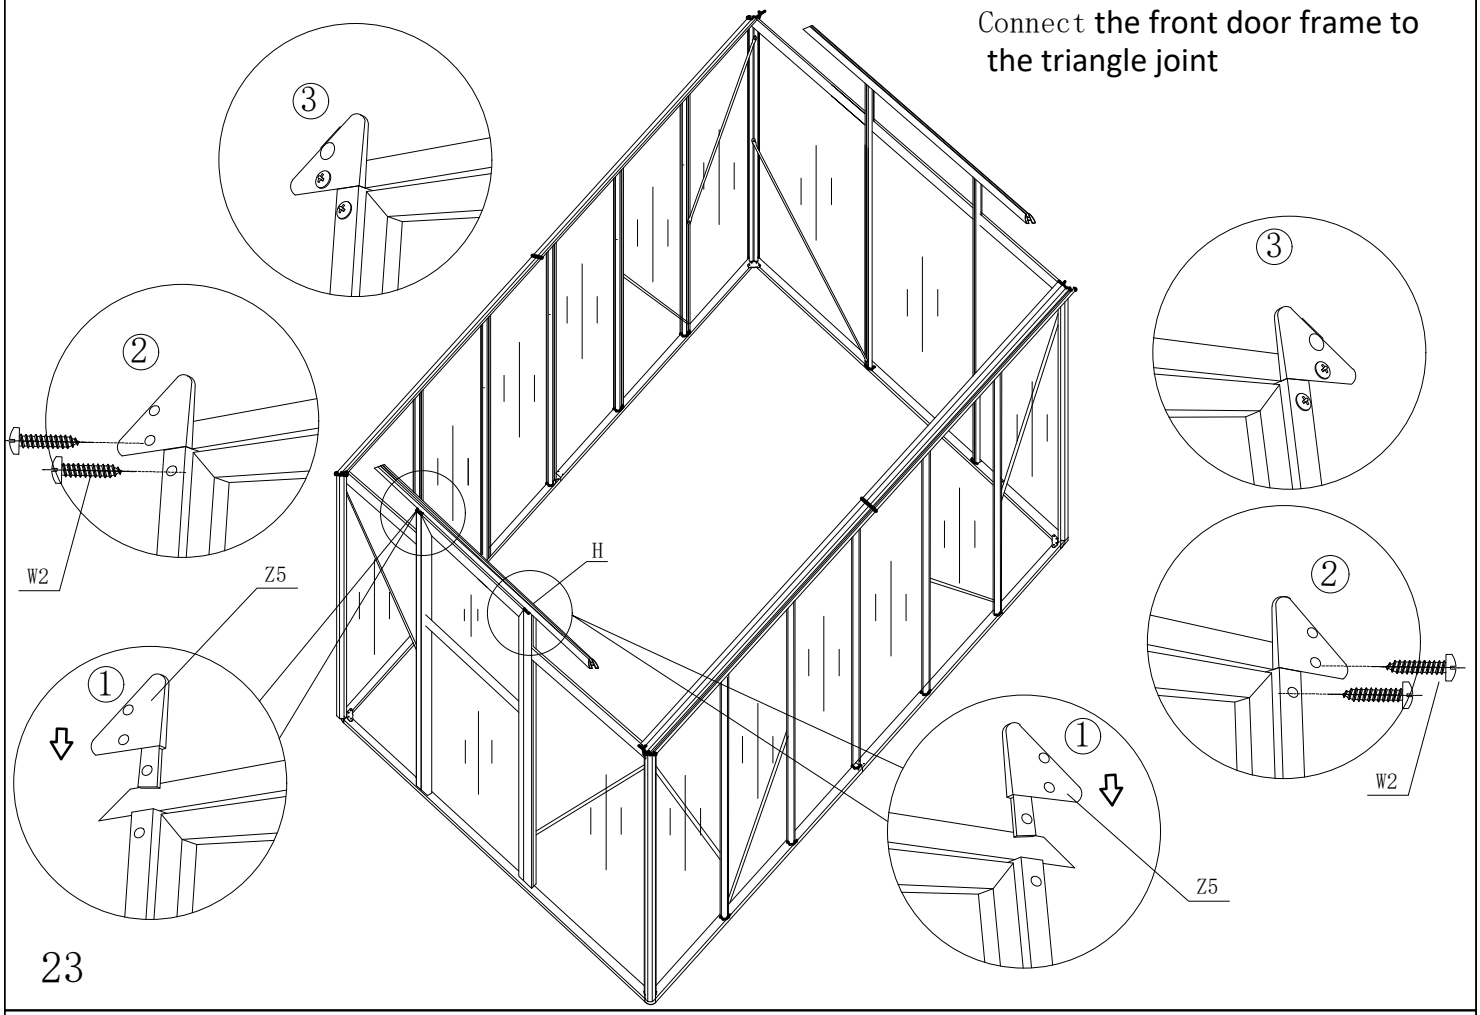

23


Connect the back door frame to the triangle joint

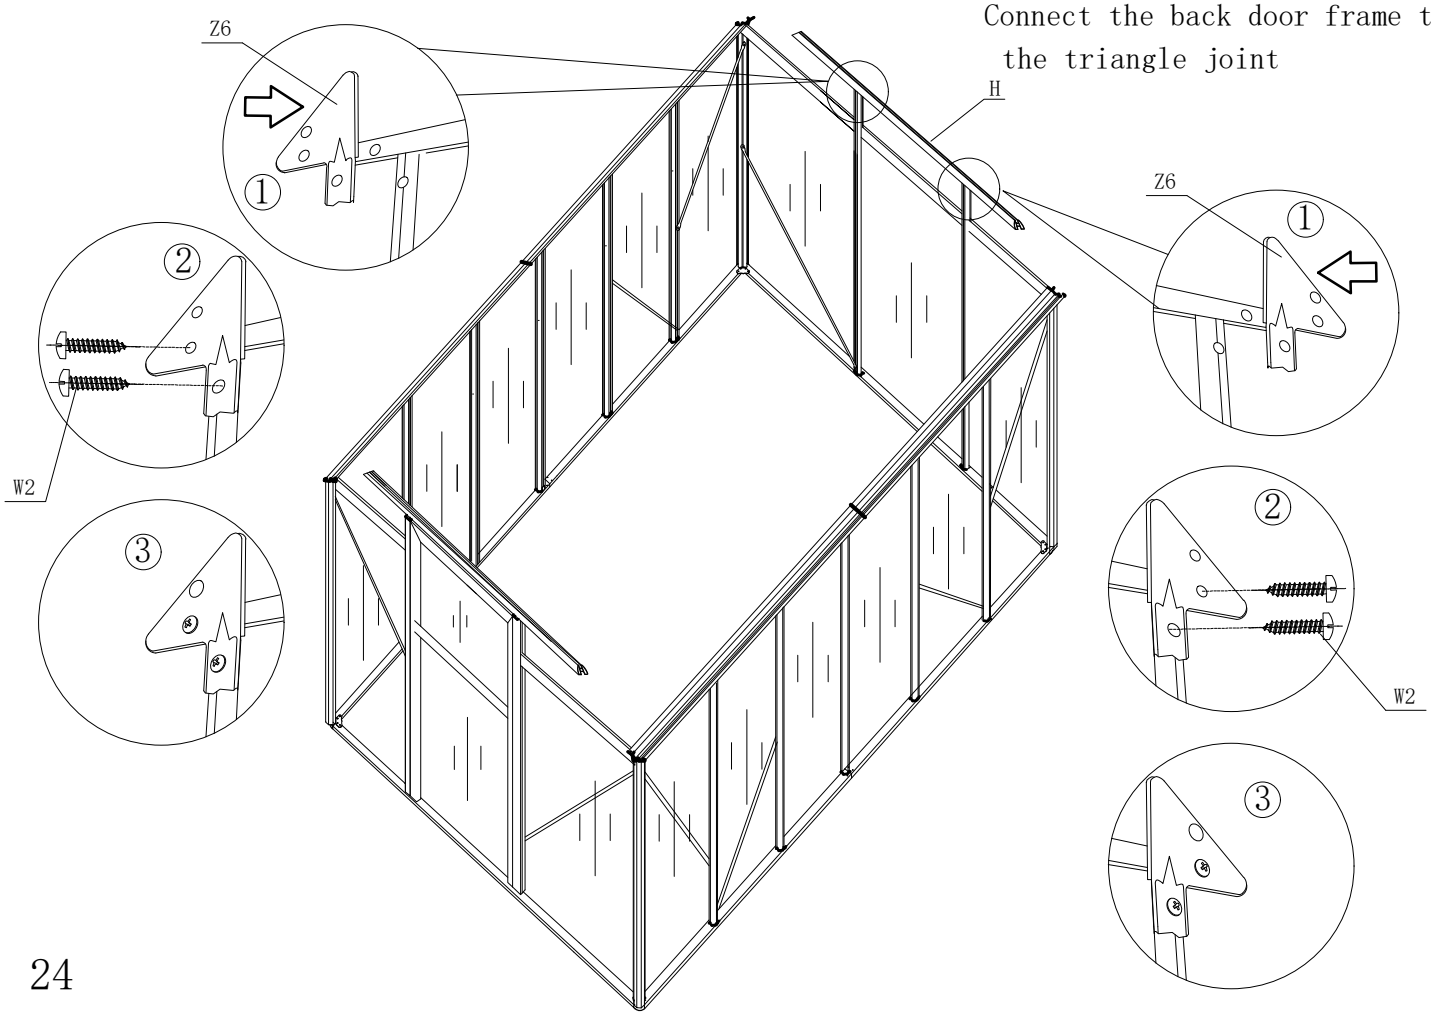

24


1 Connect bracing piece of Skylight Plastic Sheet X5 with Skylight Plastic Sheet Y10

2.Connect Skylight Plastic Sheet Y10 to the top crossbeam F

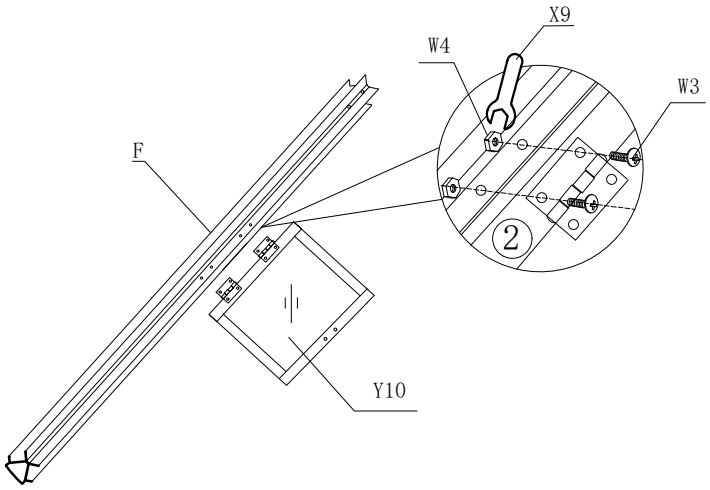


25

Connect top crossbeams

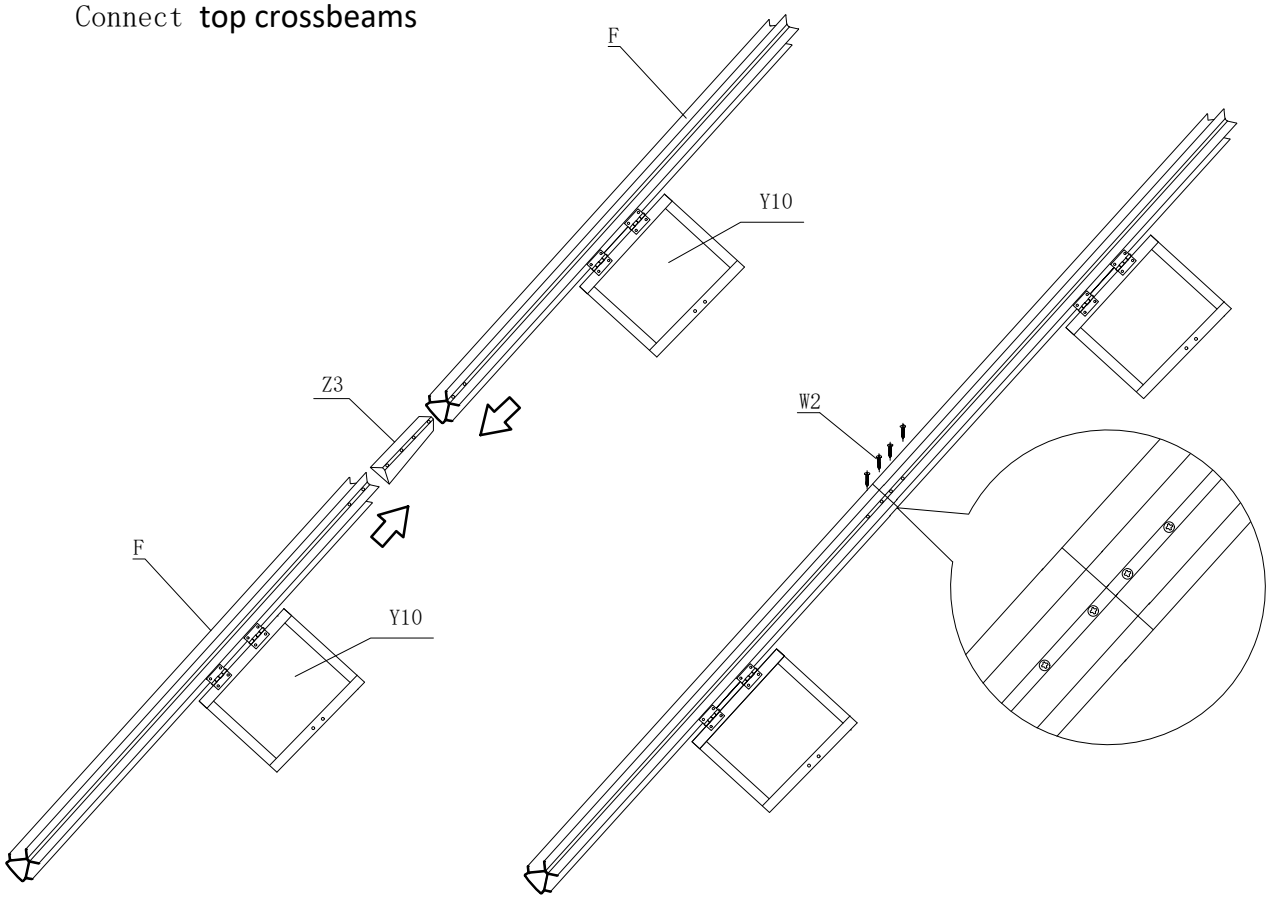


26

1. Connect and tighten skylight panel crossbar I 5 to skylight supporting seat X4
2. Insert the skylight panel crossbar I 5

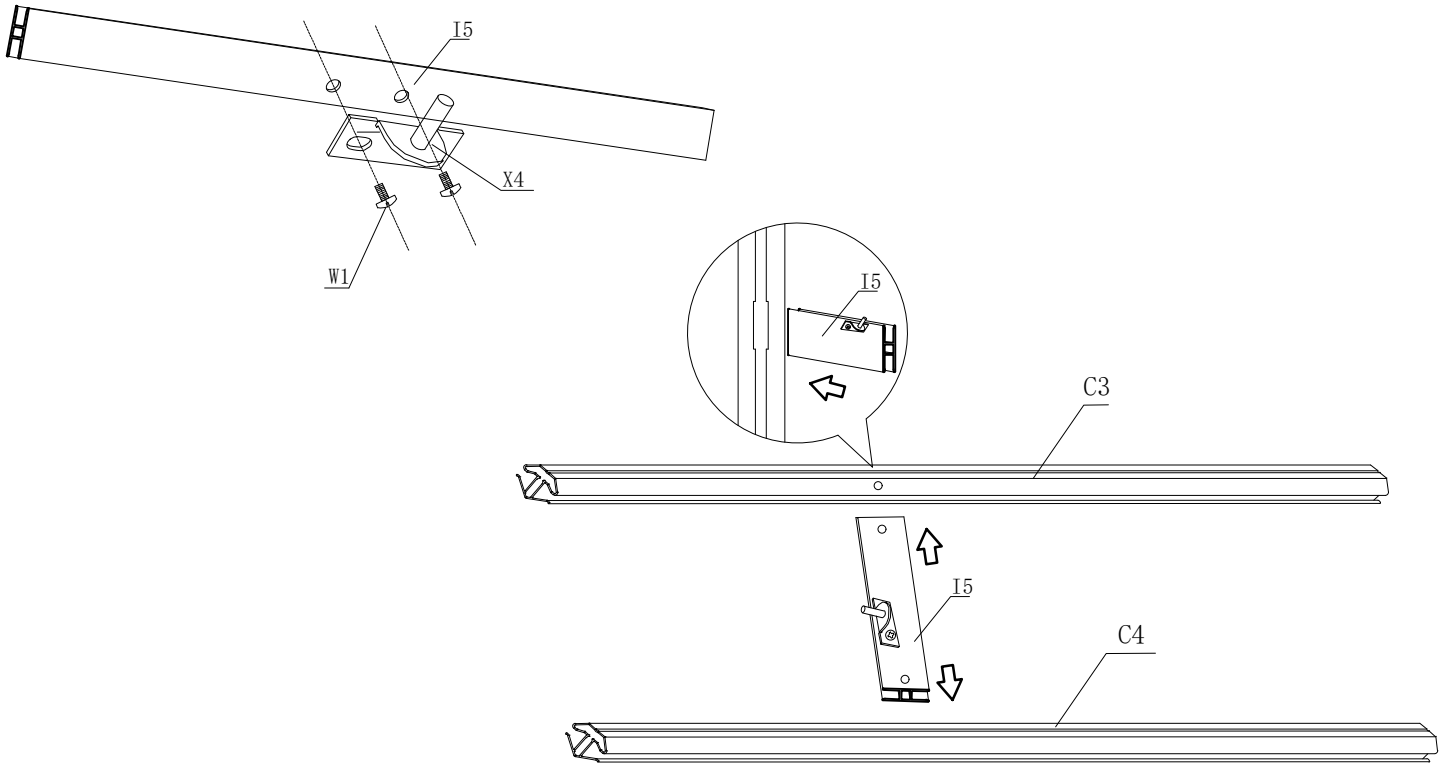


27

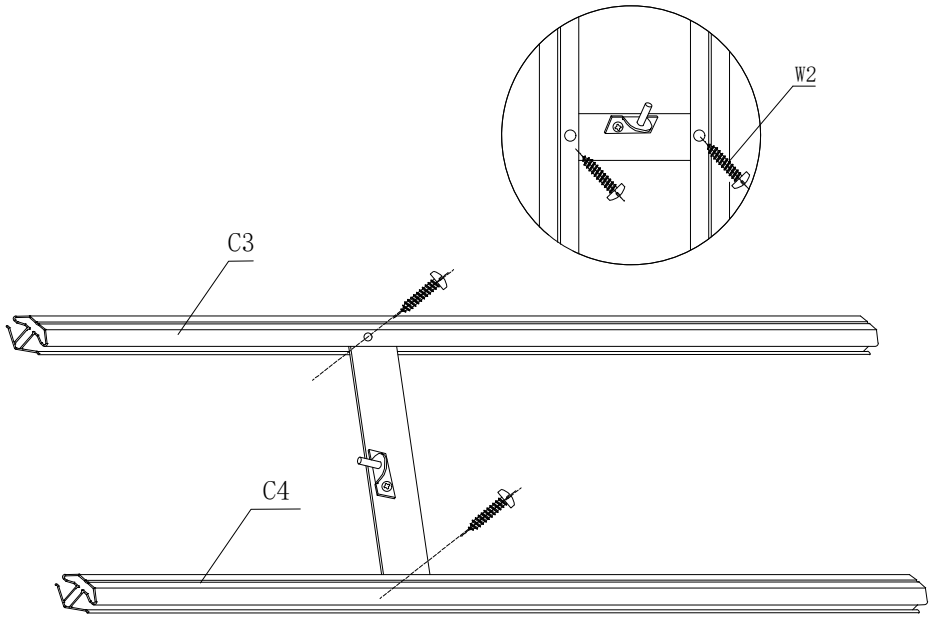


28

Connect inclined pillars C5 to top crossbeam E1

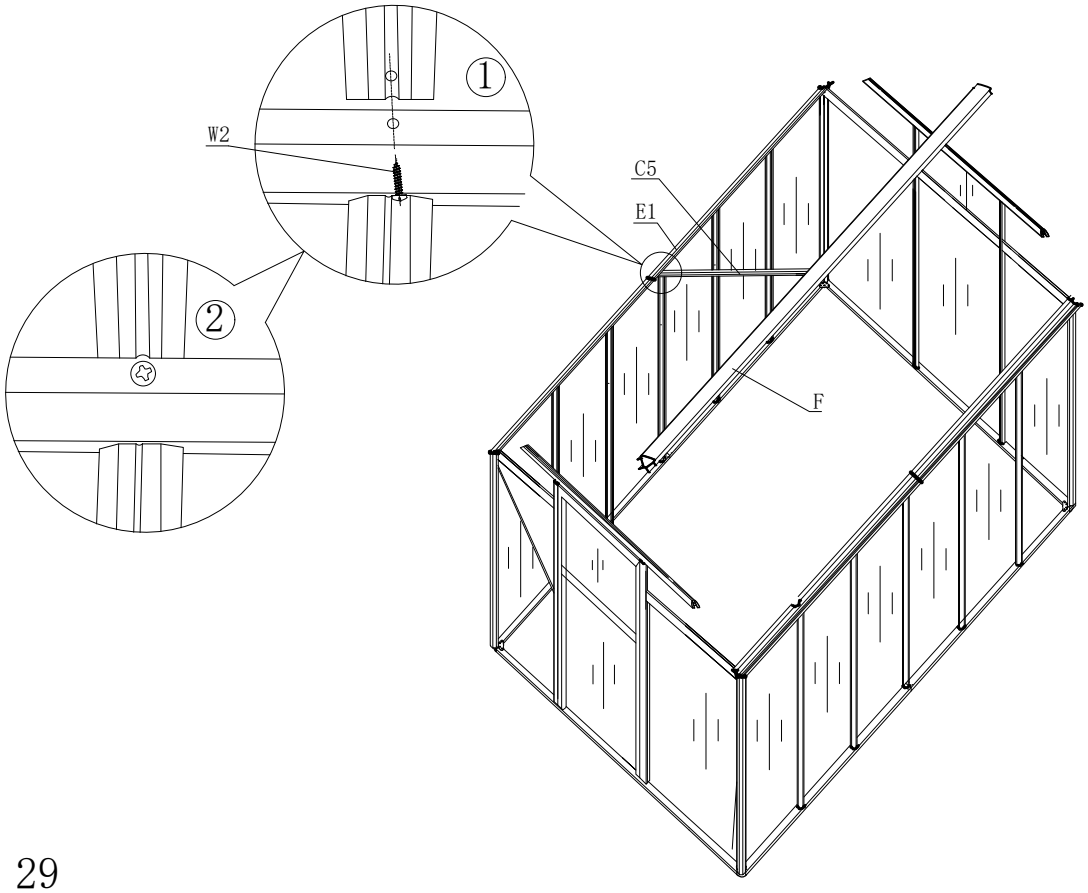


29

Connect inclined pillars C5 to top crossbeam F

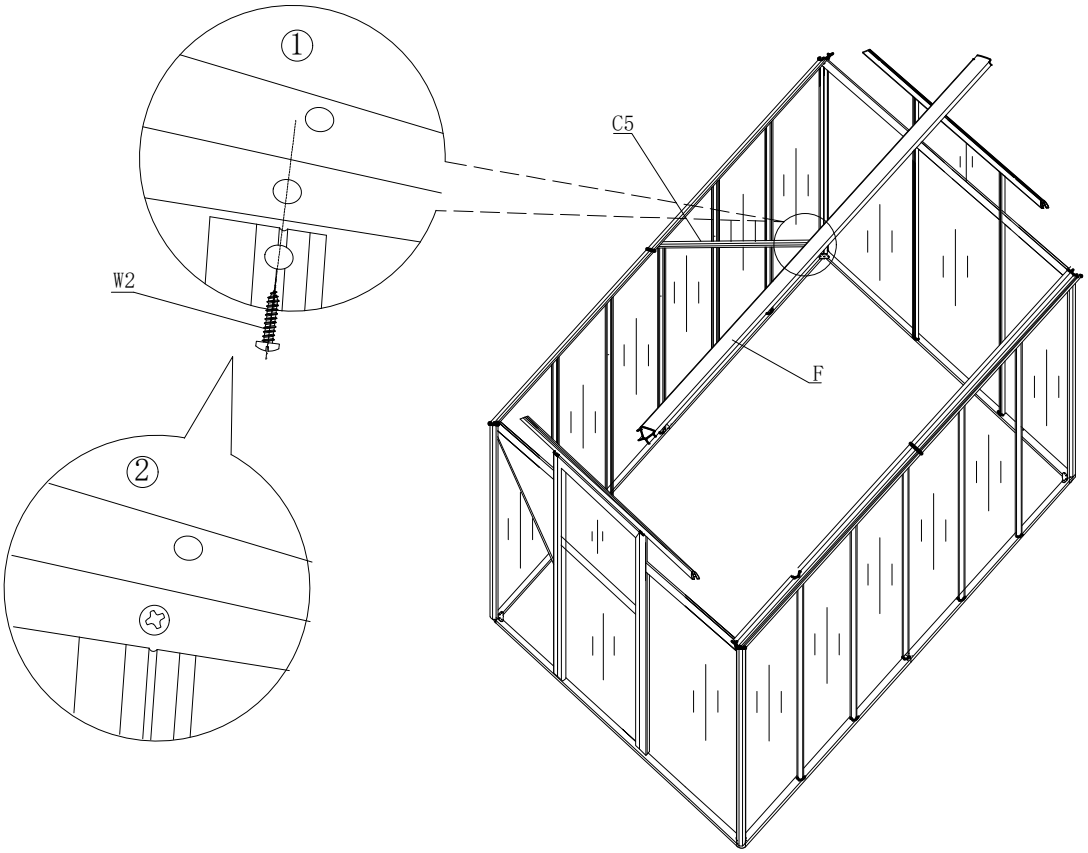


30

Connect the inclined pillar C5 to the drainage ditch E1,E2

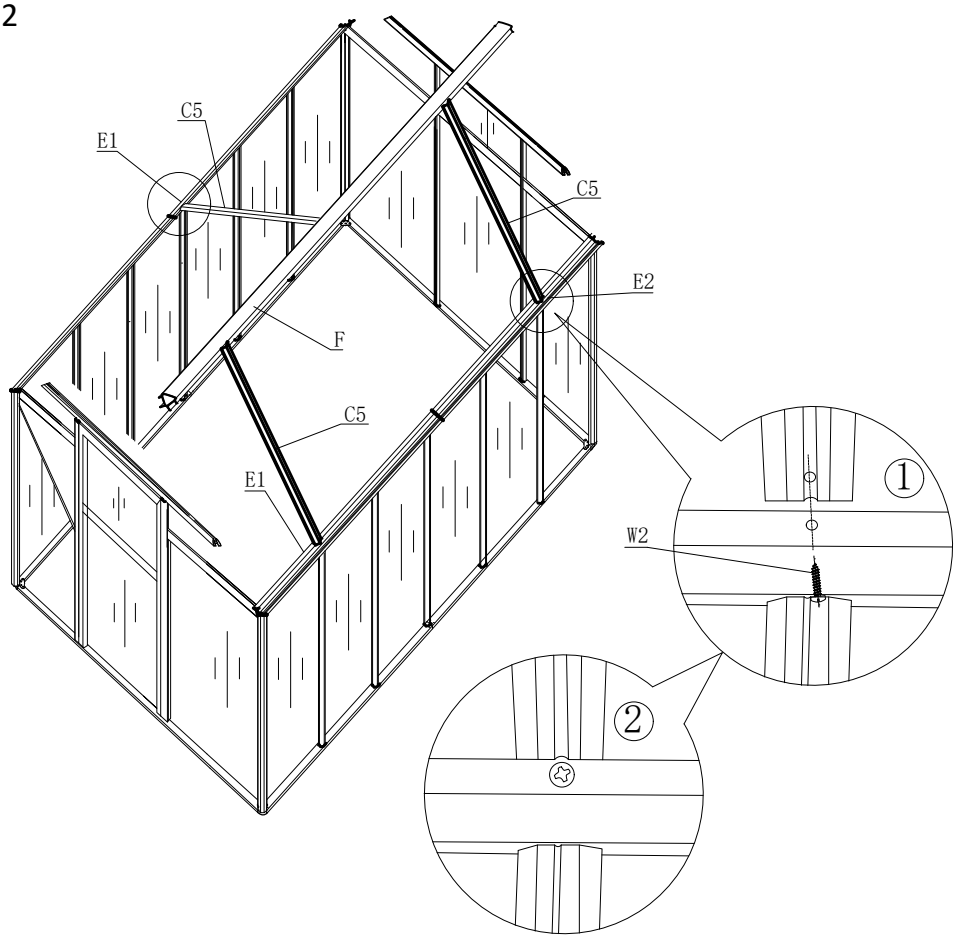


31

Connect inclined pillars C5 to top crossbeam F

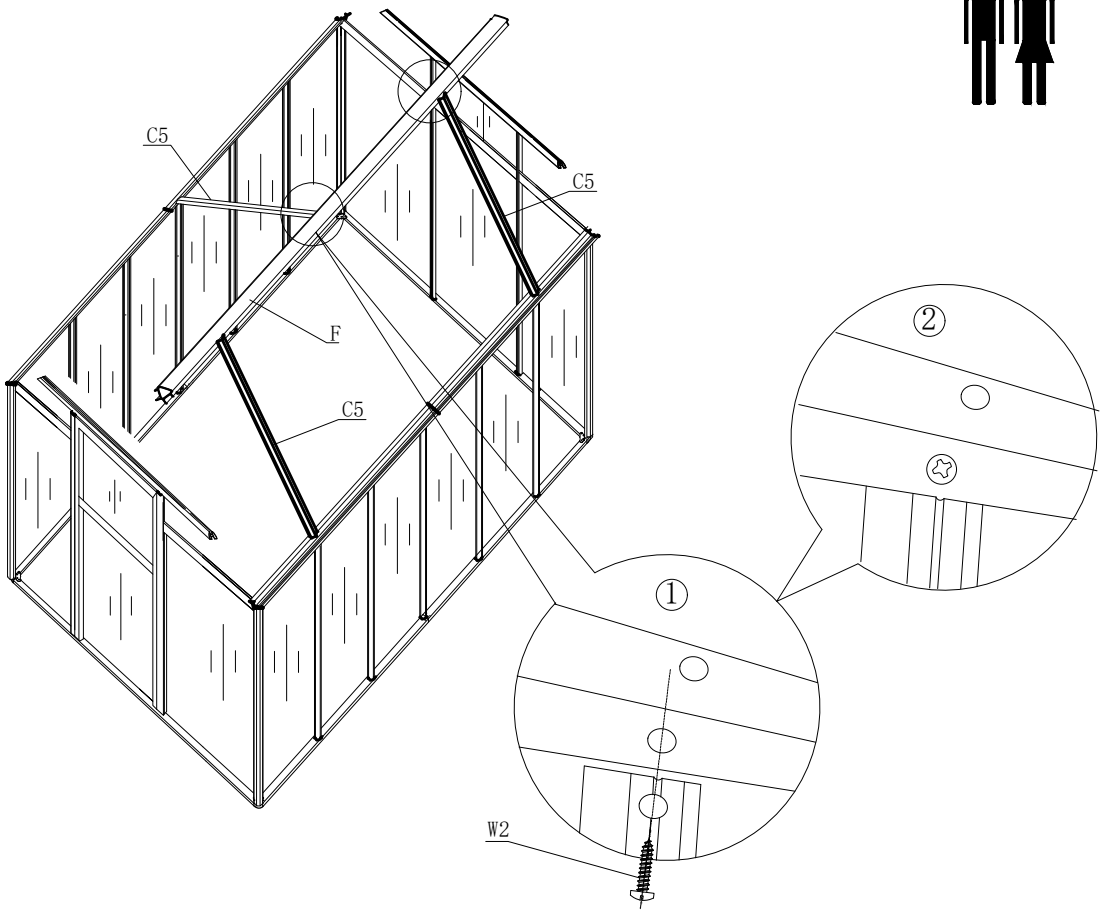


32

Link all inclined beams C3 C4 C5

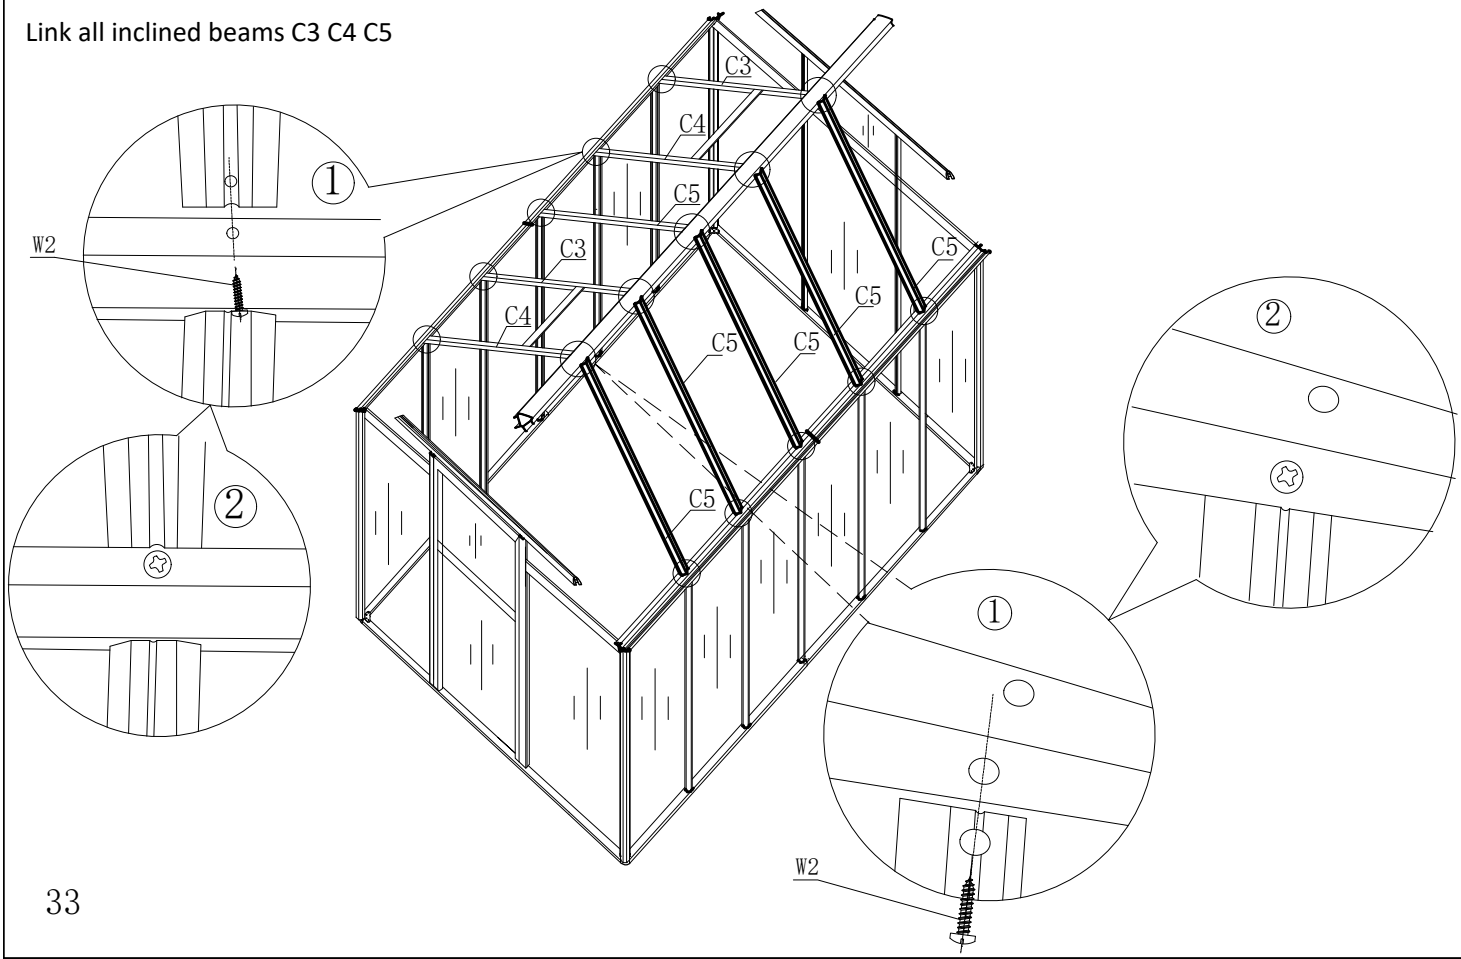


33

Insert Trapezoid Plastic Sheet into slot, as shown in 4

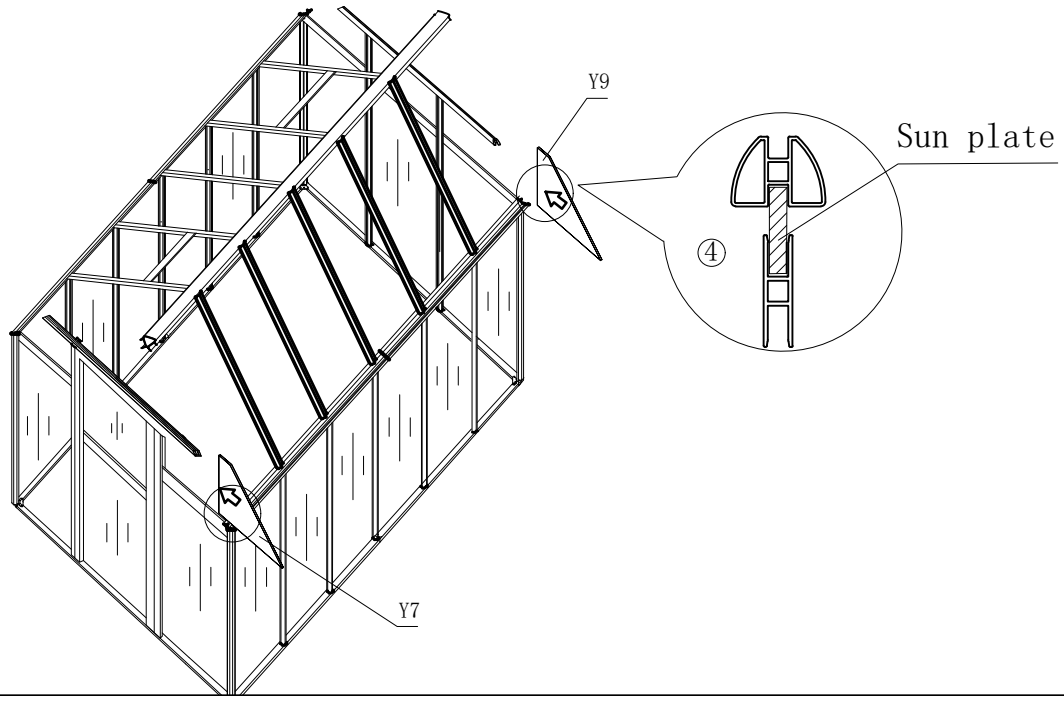


34

Connect the inclined pillars of the four corners G with drain E1 E2

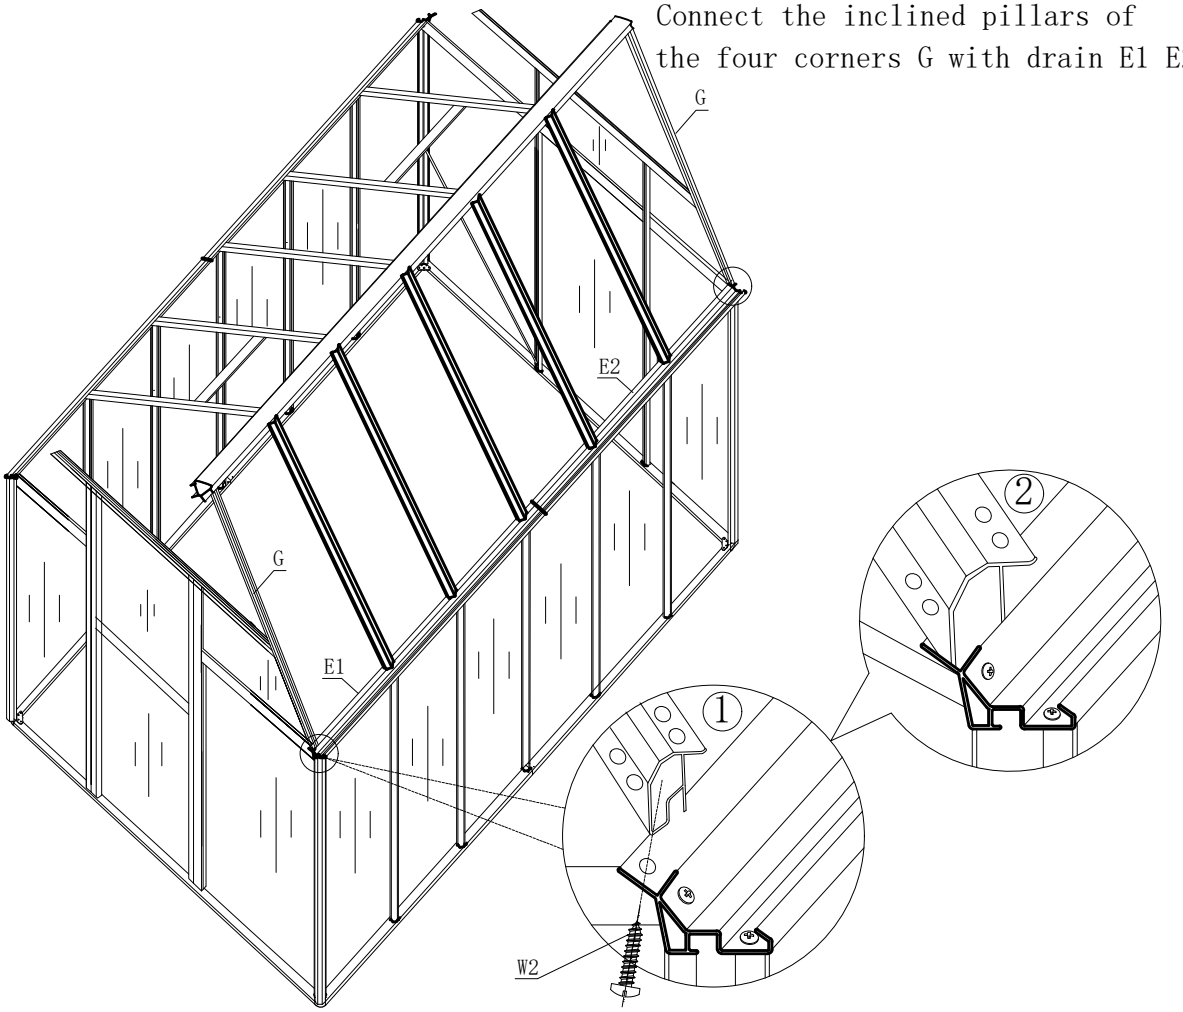


35

Connect the inclined pillars of the four corners G to the top crossbeam F

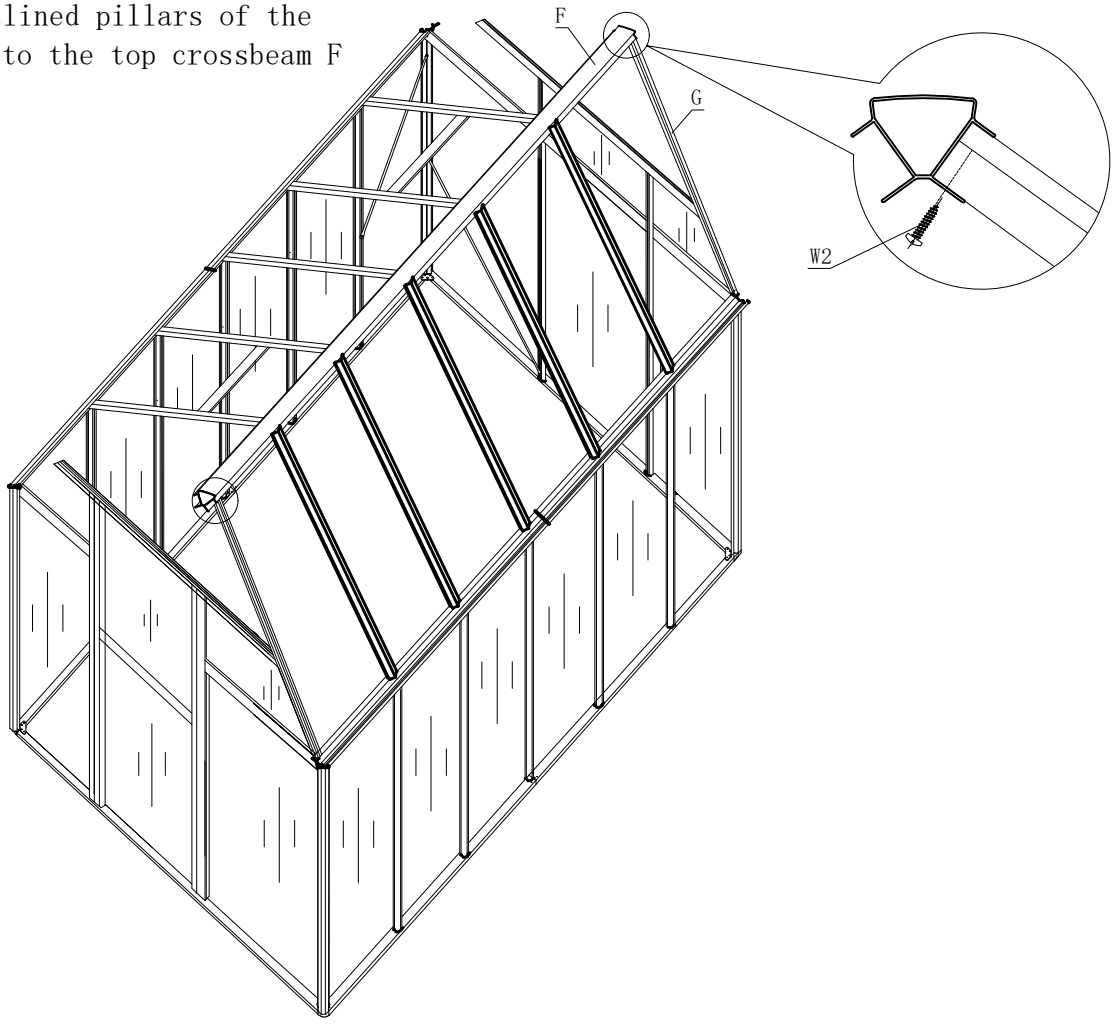


36

Inset trapezoid plastic panels into slots

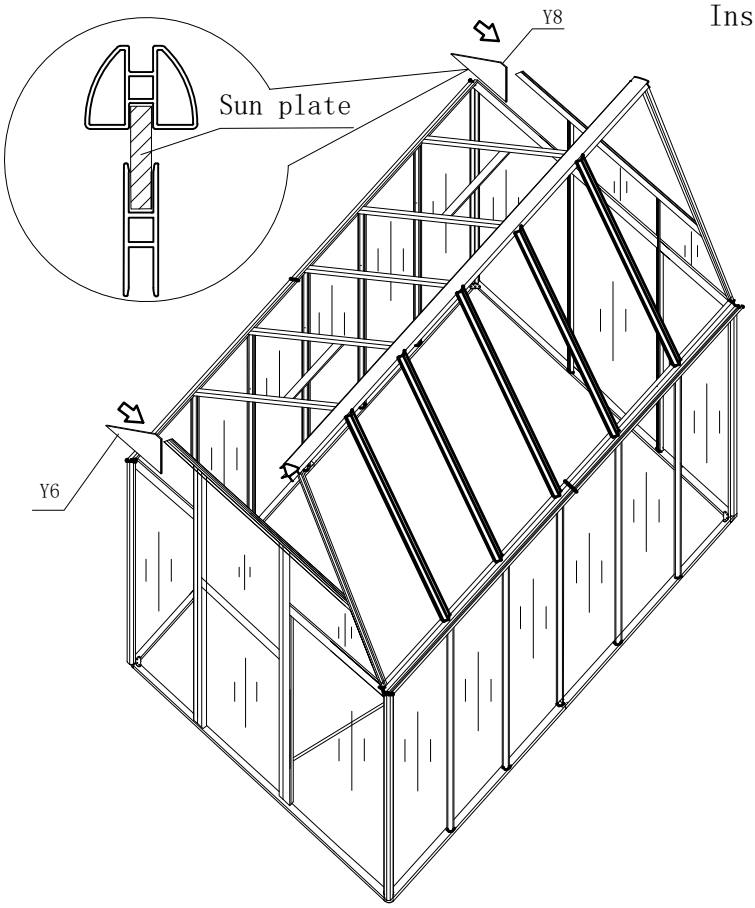

37


Inset the top triangle plastic panels into the slots

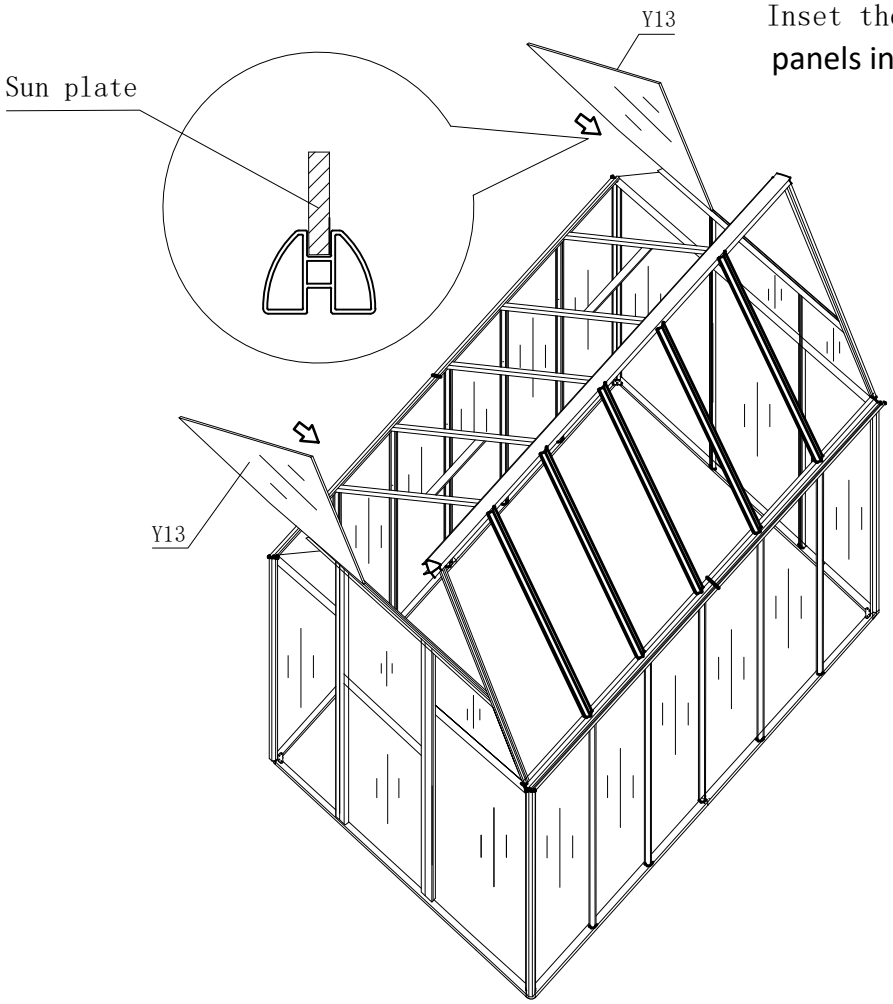

38


1.Connect four angled inclined pillars G with drain E1, as shown in Figure 2

2.Connect four angled inclined pillars G to the top crossbeam F, as shown in Figure 1

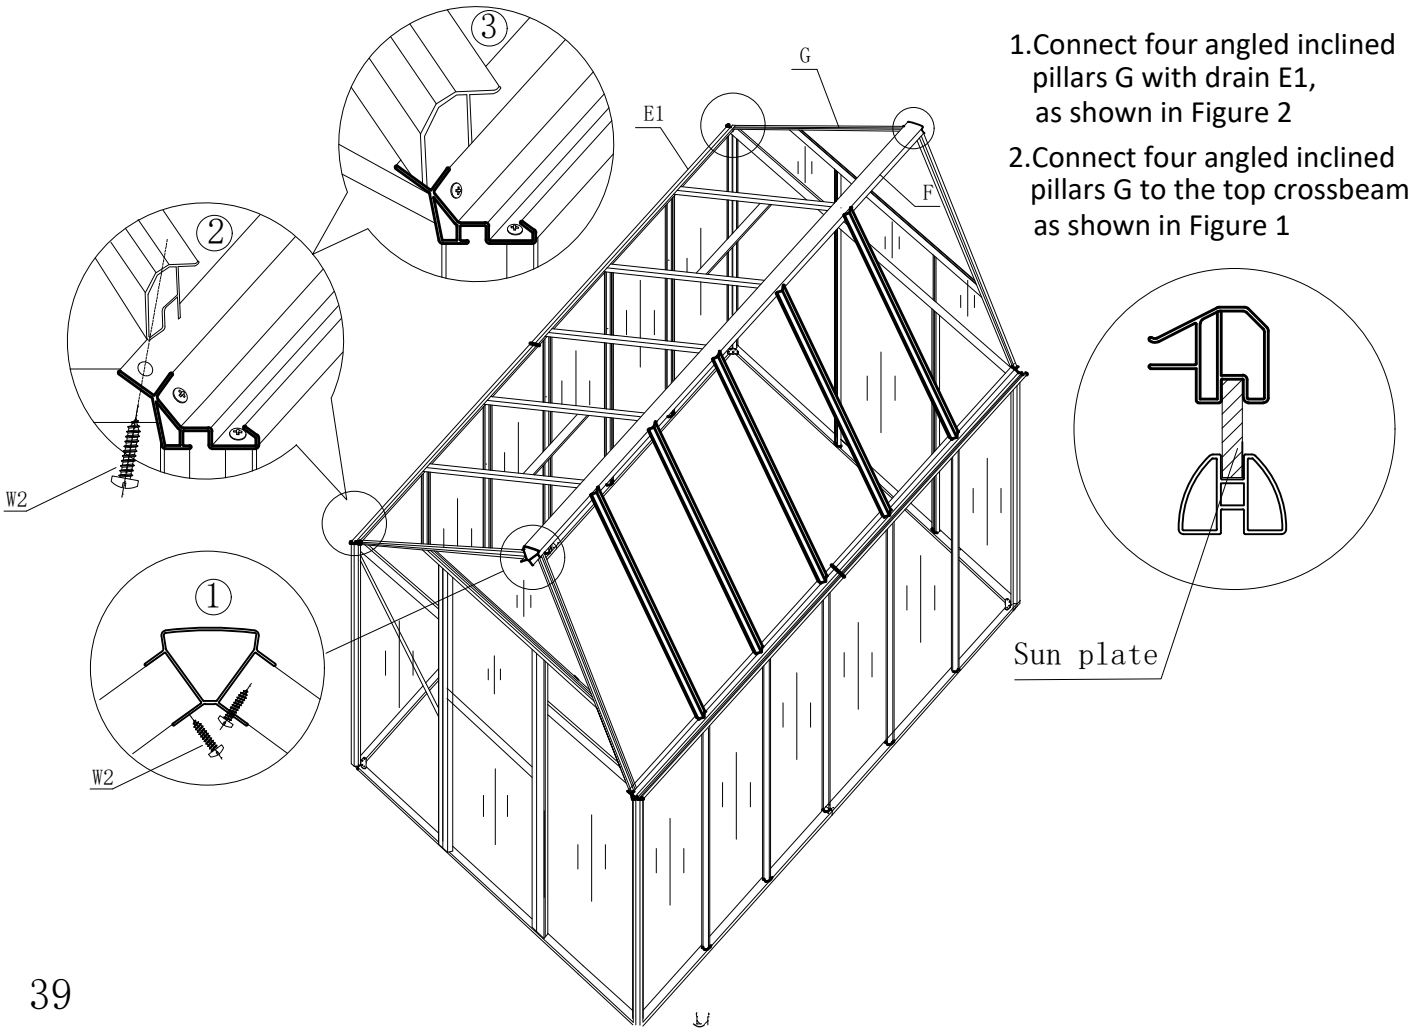


39

Connect the front door frame to the triangle joint

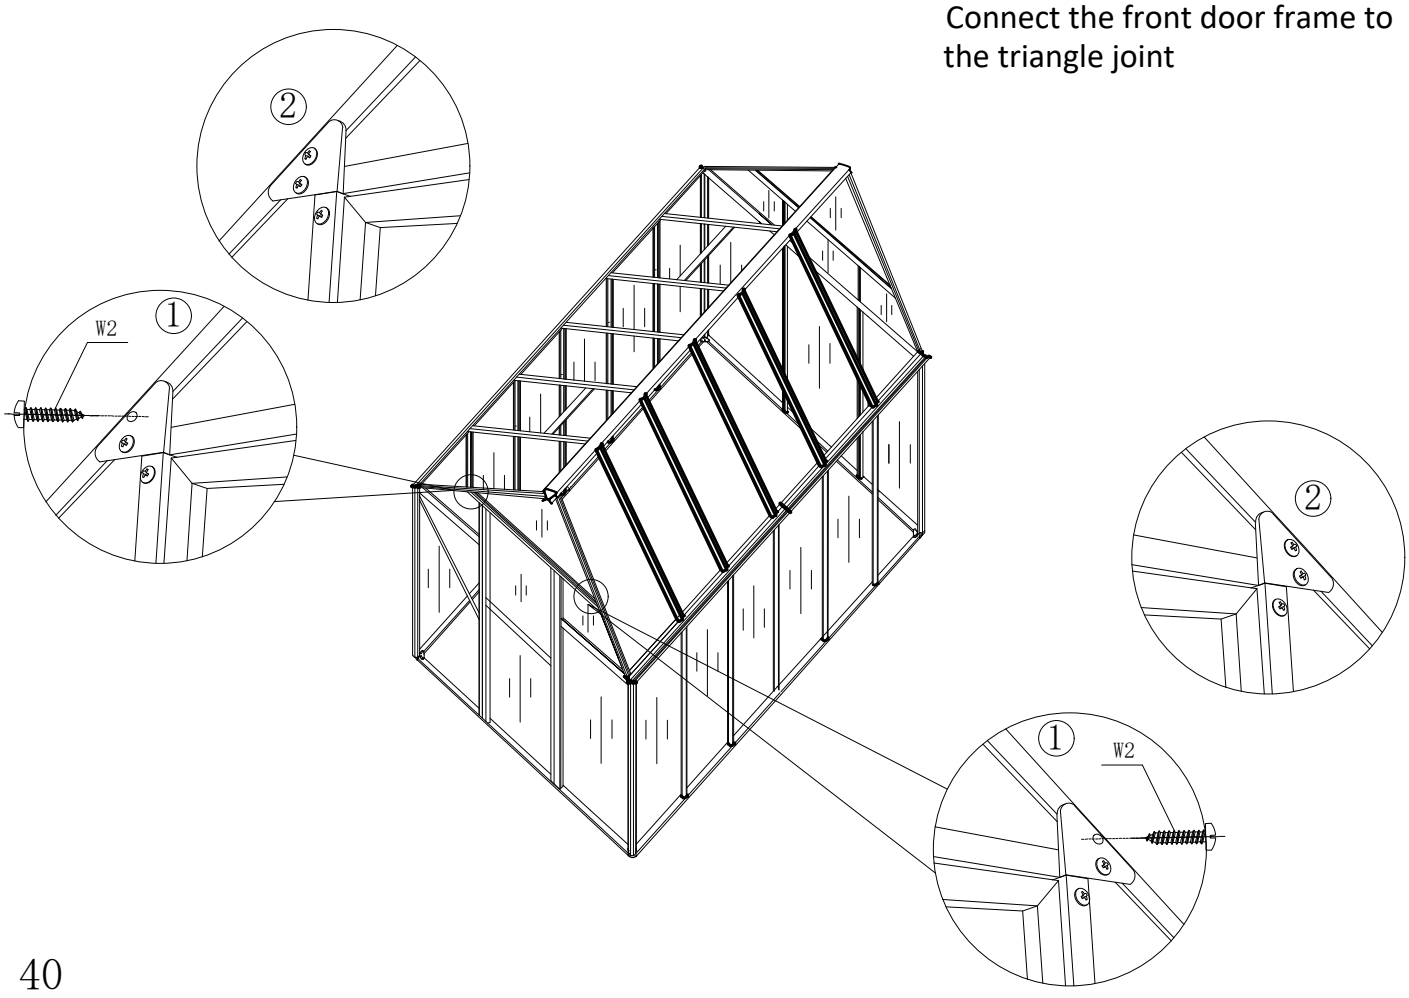


40

Connect the back door frame to the triangle joint

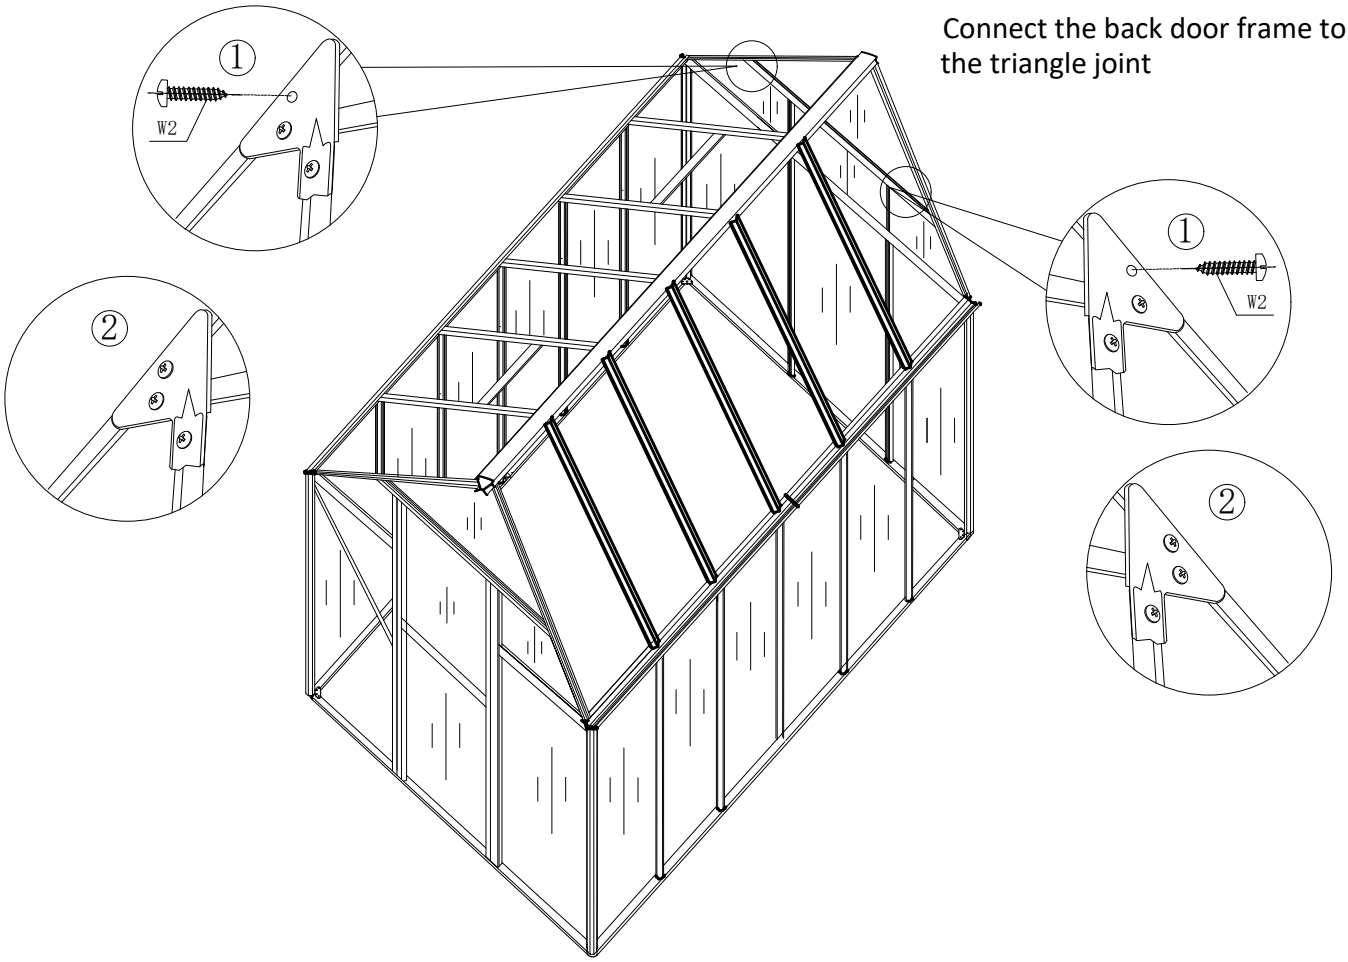

41


Install the inclined supporting bars K1 on the side pillars and inclined pillars.

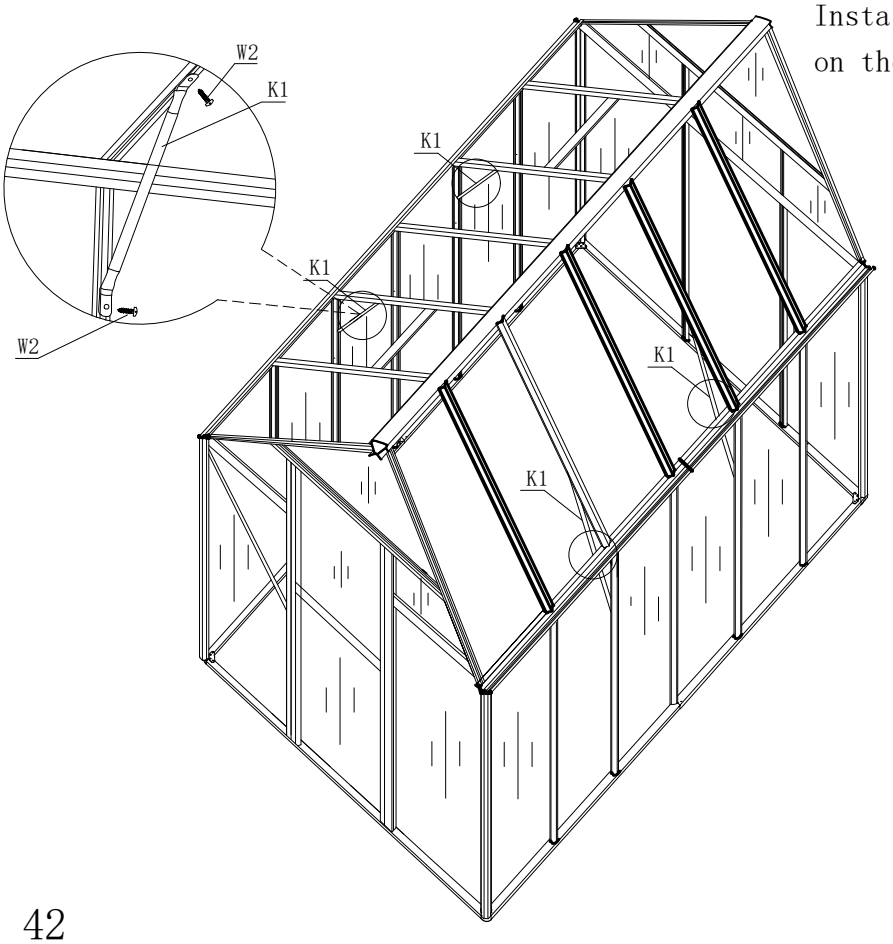

42


Connect the top inclined pillars with the supporting bars K1

Connect bracing piece of Skylight Plastic Sheet X5 with Skylight Plastic Sheet Y10

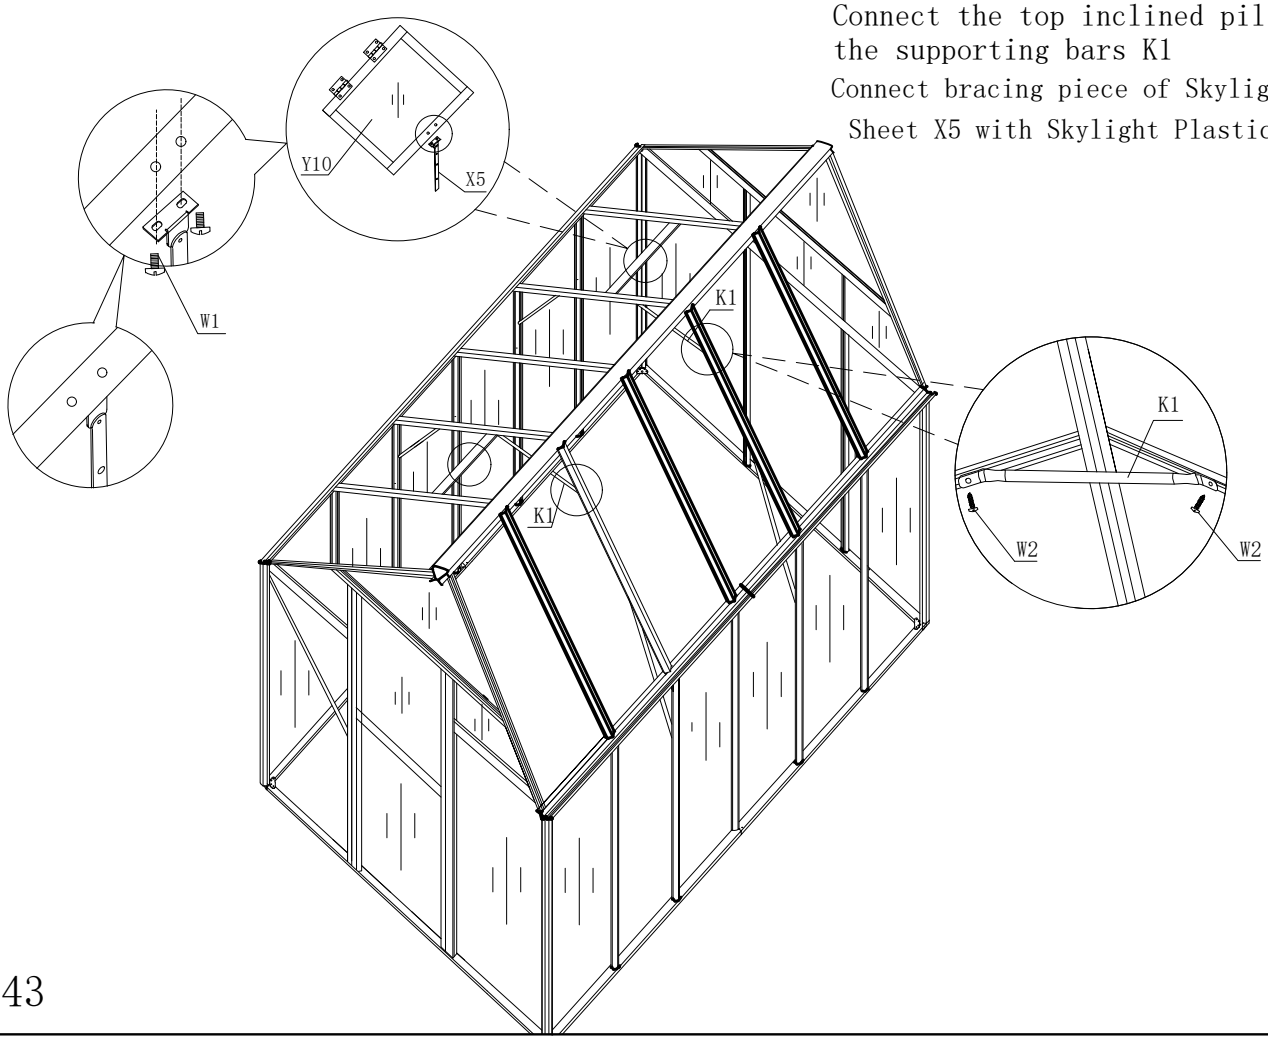


43


Insert skylight plastic panels Y2 in sequence

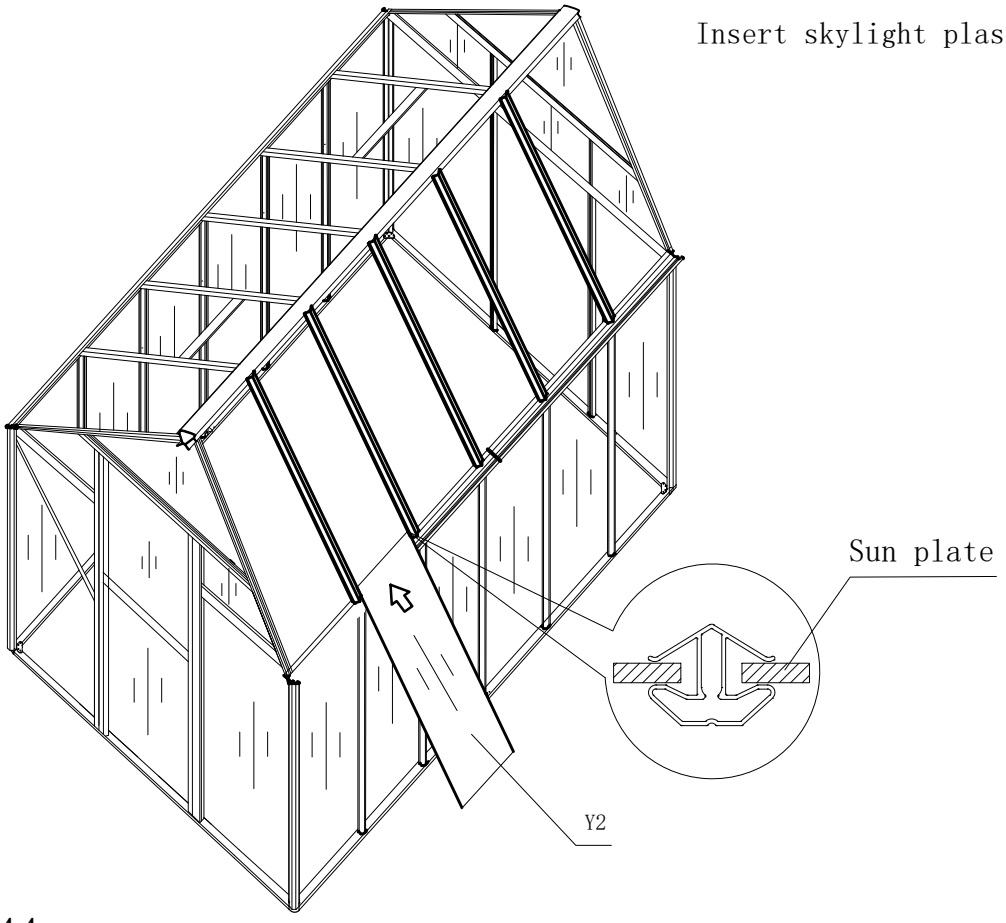


44

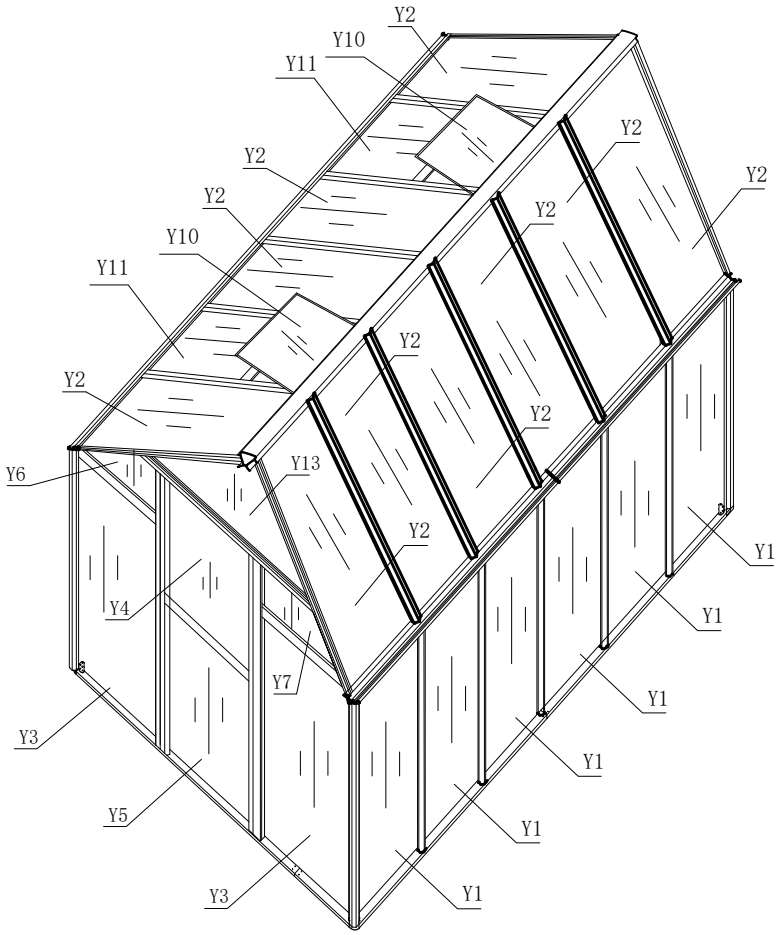

45

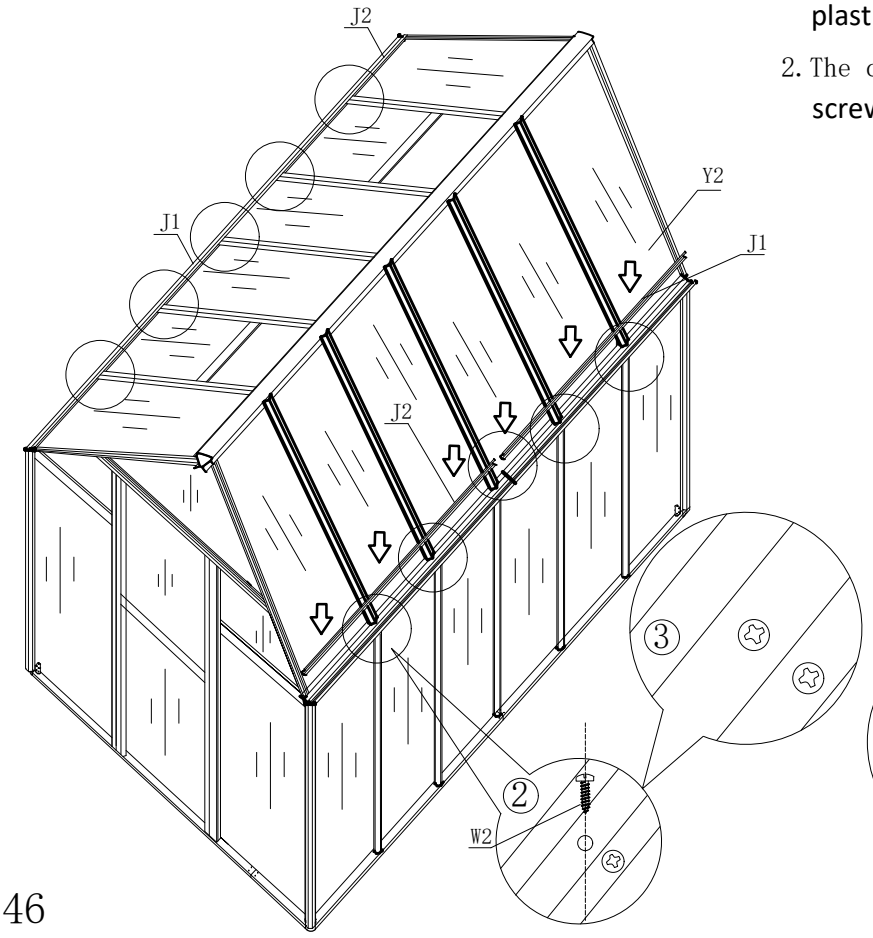


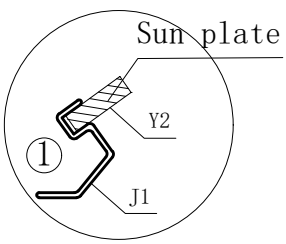

1. Insert pressing plate of drain into skylight plastic panel, as shown in Figure 1
2. The connection between pressing plate and screw of drain, as shown in Figure 2


46

Connection of pressure plate and drainage ditch W7

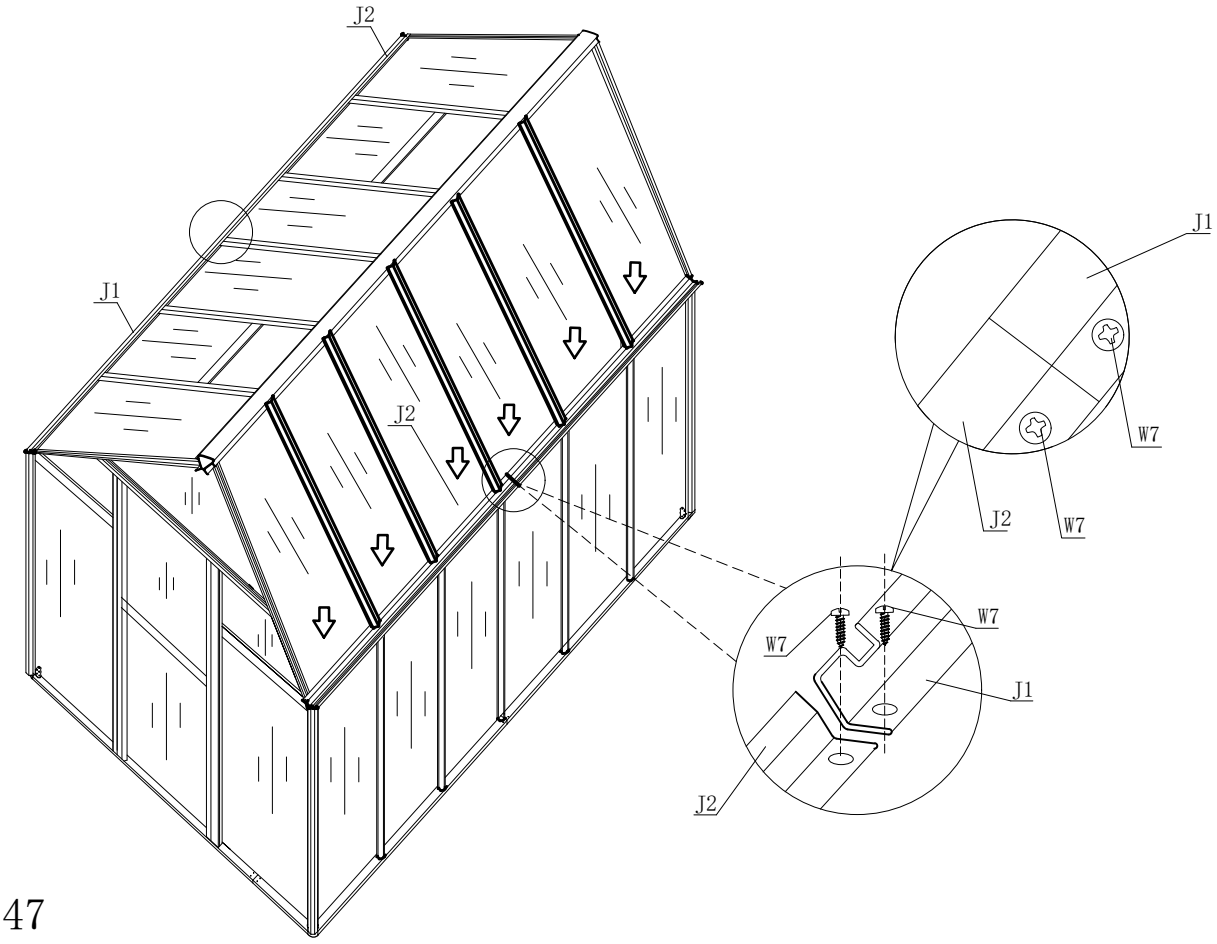


47

Fix the plugs onto drainage ditches at the four corners by secrew

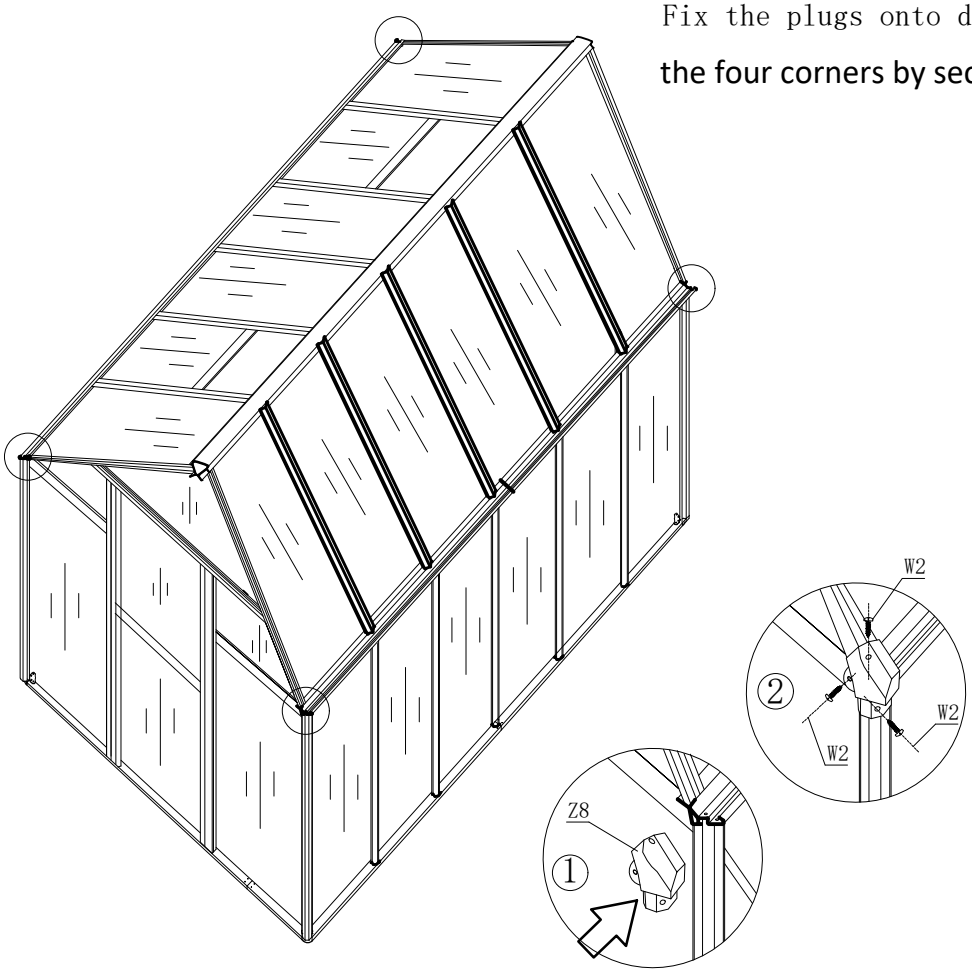


48

Knock and fix two side plugs of the top crossbeam

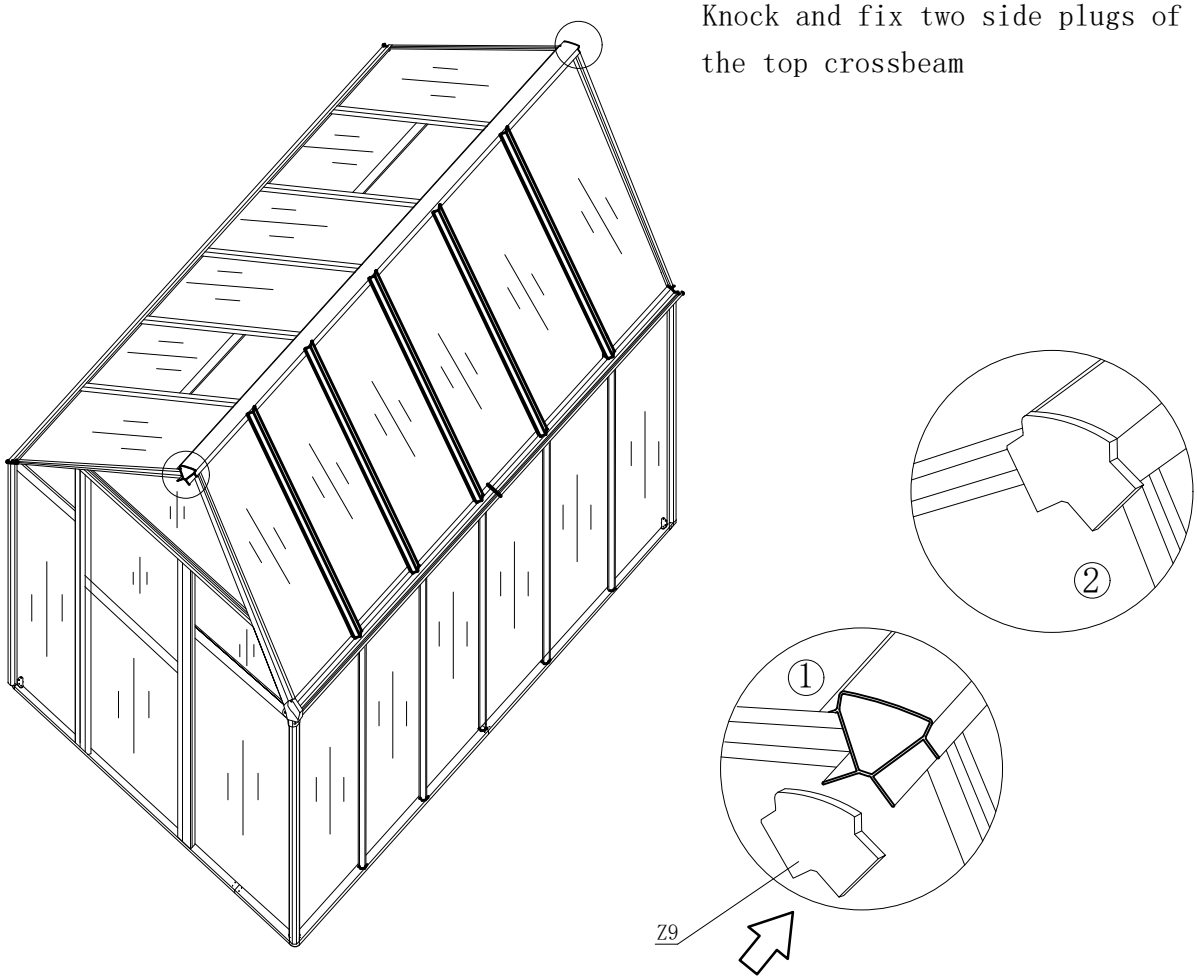

49

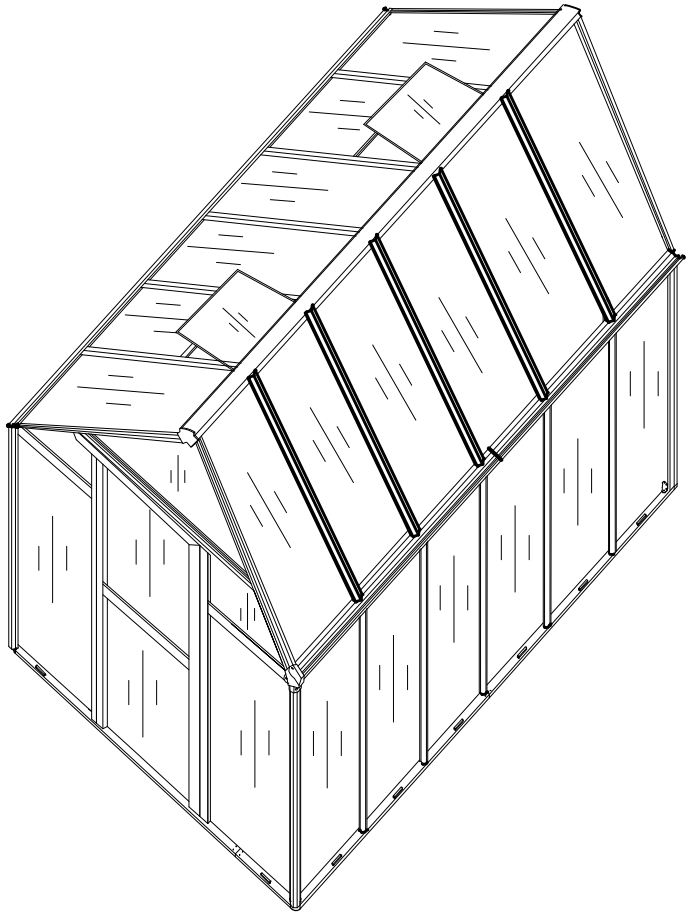

50