


Assembly Instructions

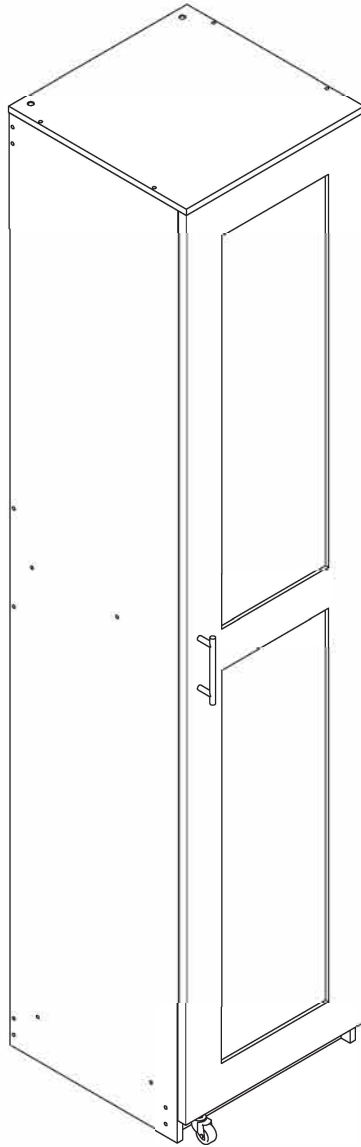


**DESIGN
TRANSFORMS
LIFE**


Installation of Cams and Pins

Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

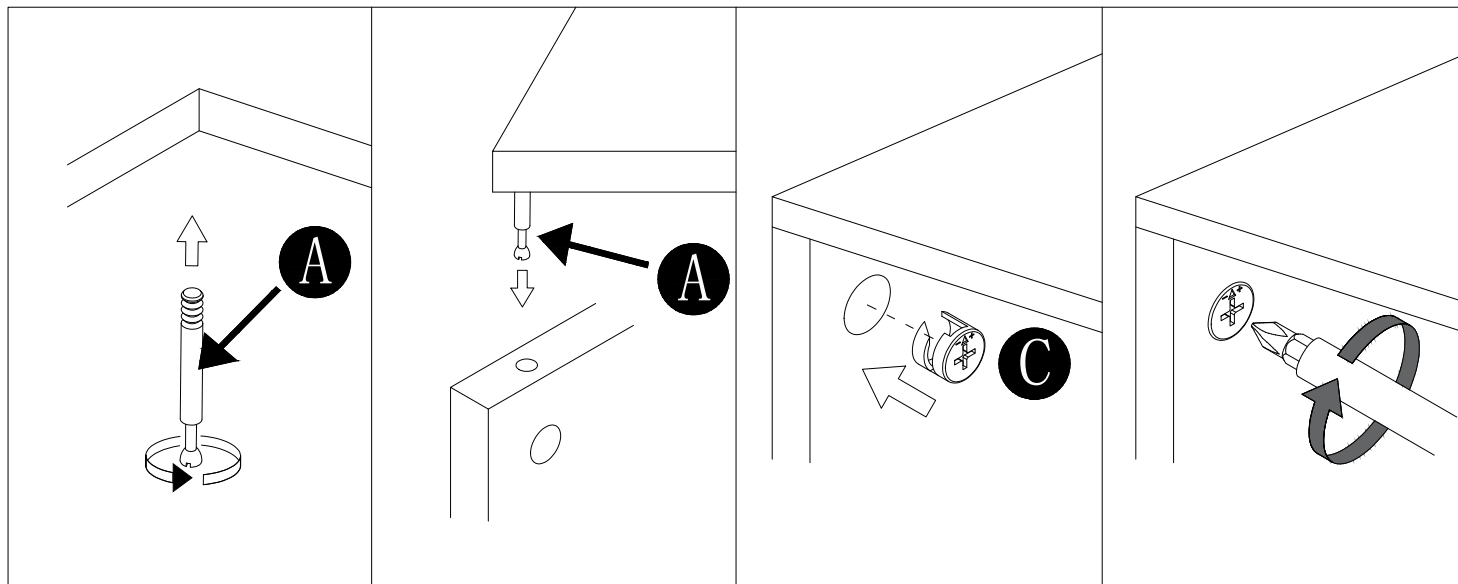


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

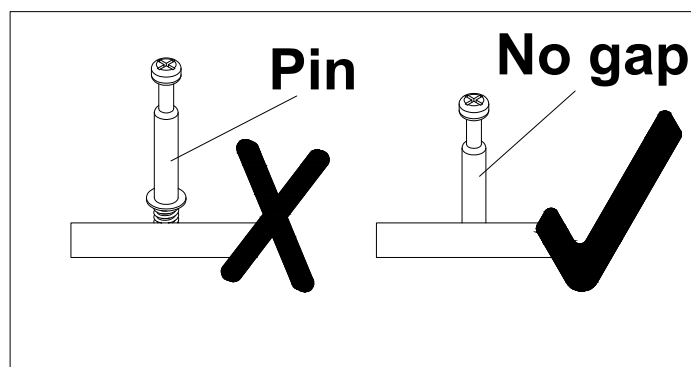


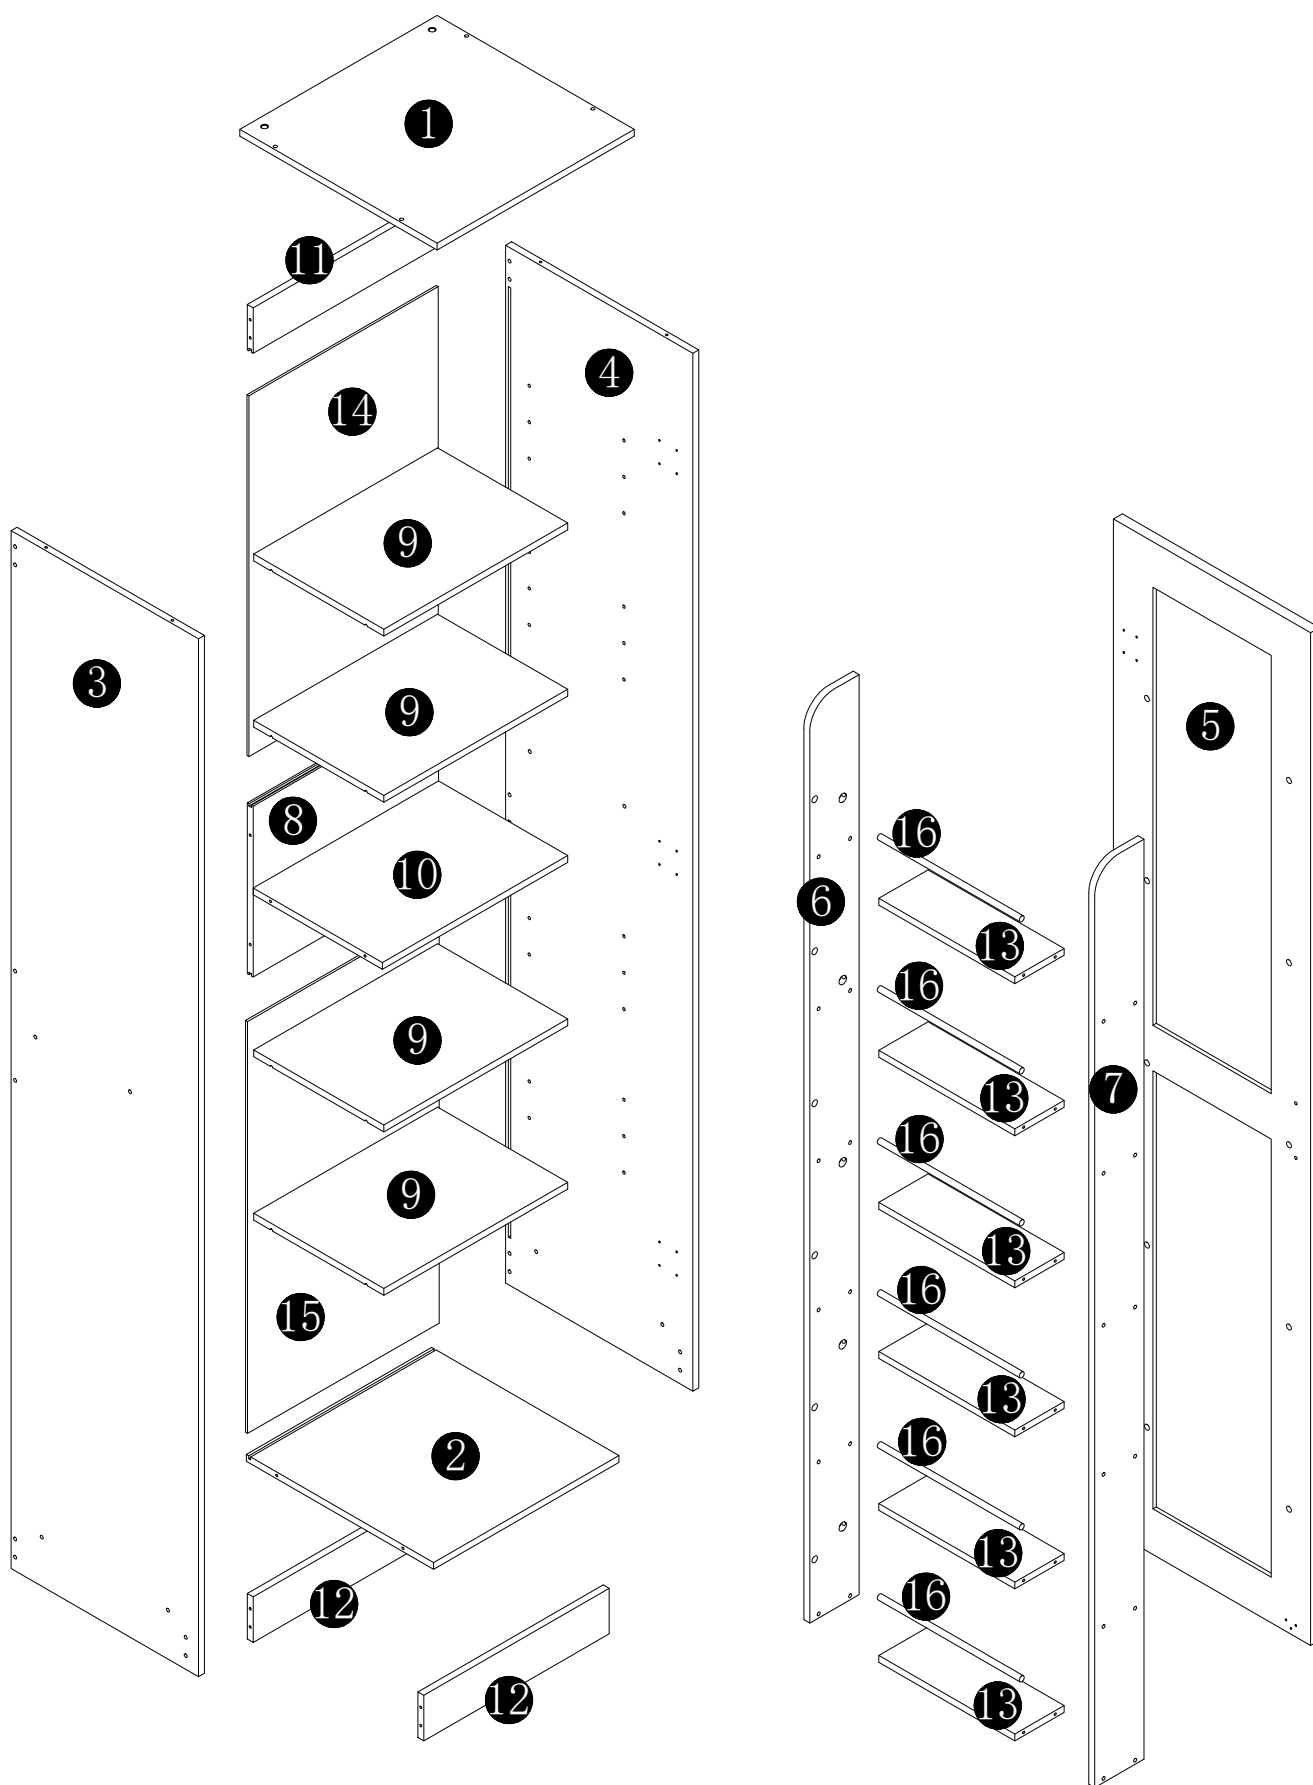


Parts & Hardware List

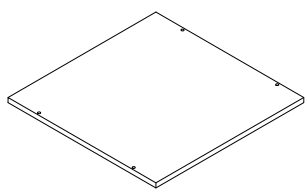


① 1pc

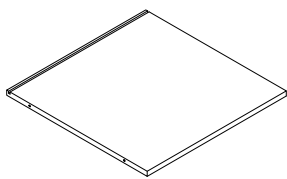


② 1pc

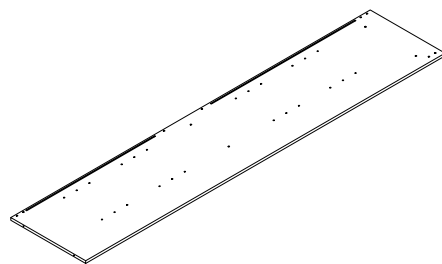


③ 1pc

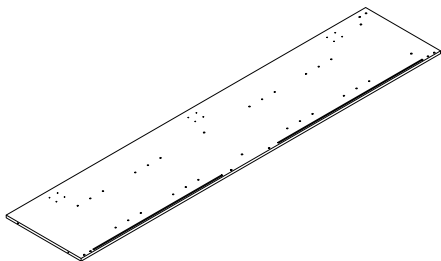


④ 1pc

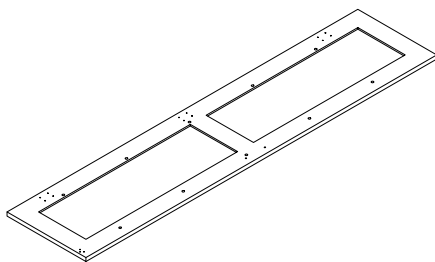


⑤ 1pc

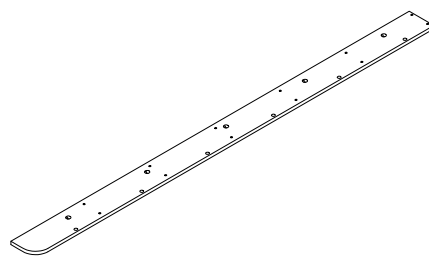


⑥ 1pc

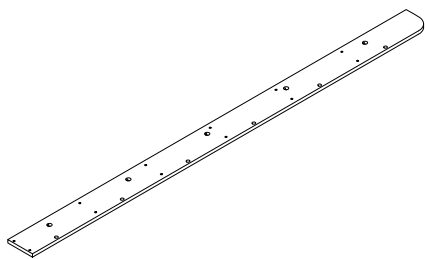


⑦ 1pc

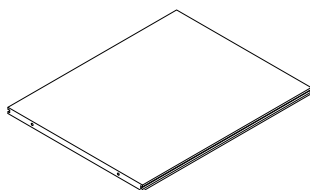


⑧ 1pc

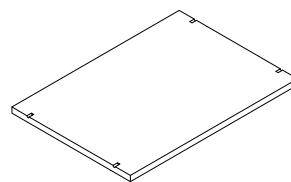


⑨ 4pcs

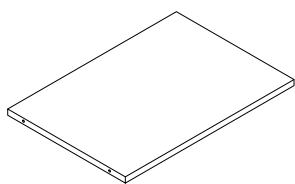


⑩ 1pc

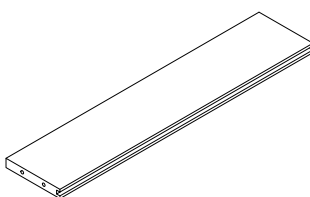


⑪ 1pc

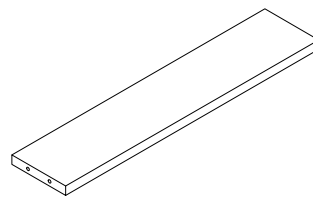


⑫ 2pcs

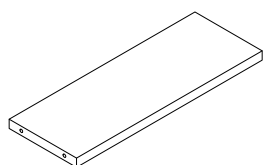

⑬ 6pcs

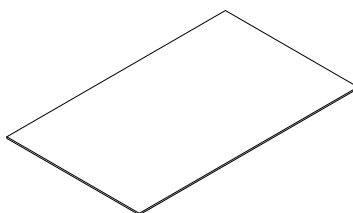


⑭ 1pc



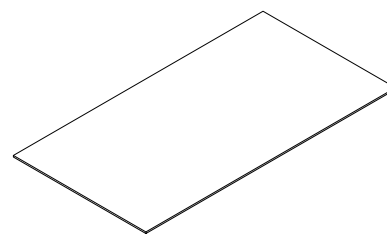


⑮ 1pc



Parts & Hardware List

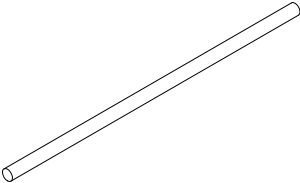 16 6pcs		
---	--	--



Parts & Hardware List

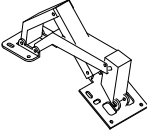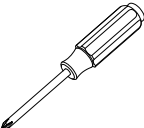 A 10pcs	 B 52pcs	 C 10pcs	 D 2pcs	 H 12pcs
 J 2pcs	 K 1pc	 M 2pcs	 N 2pcs	 O 4pcs
 Q 39pcs	 S 2pcs	 T 16pcs	 W 3pcs	 Y 1pc
 ø9.8 8pcs	 M3	 M4		


1

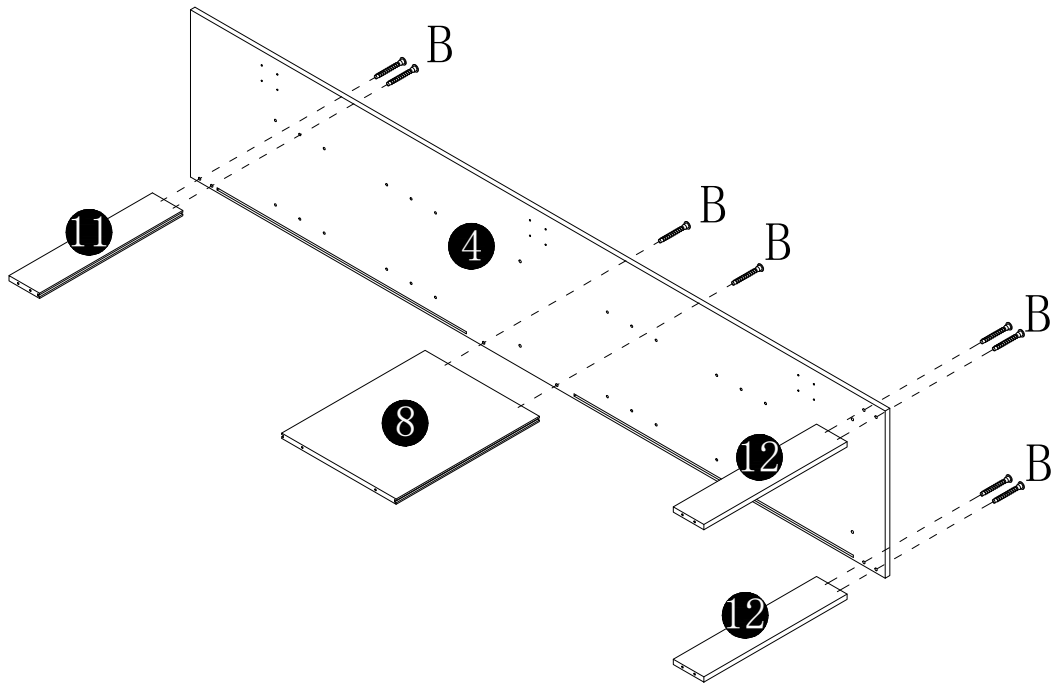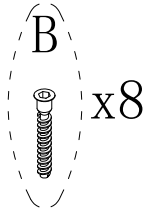


2

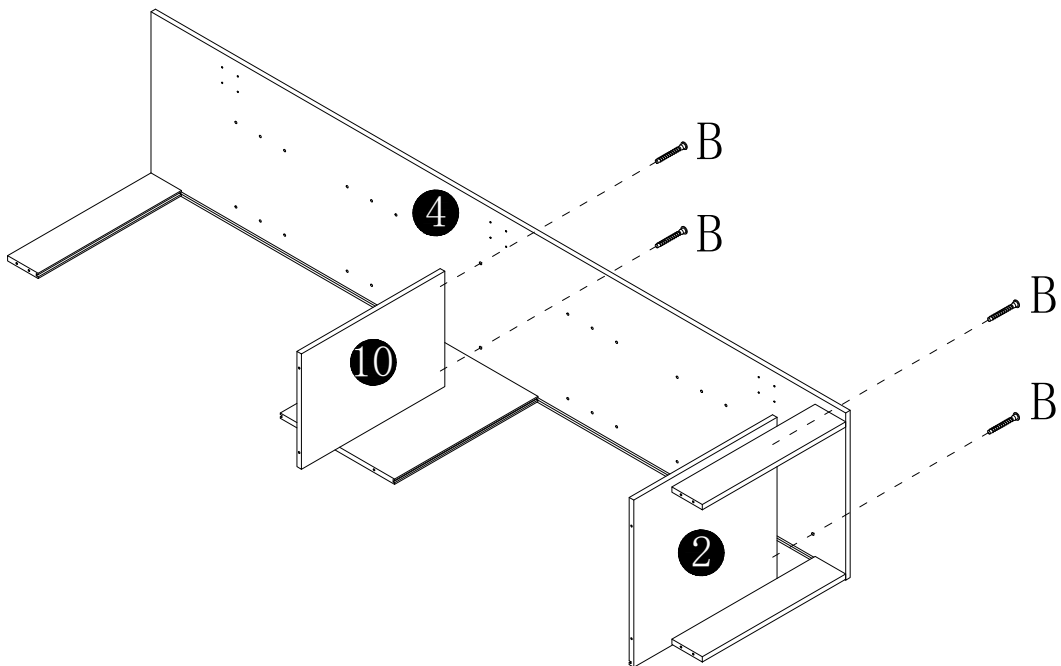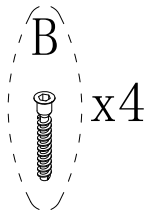



3

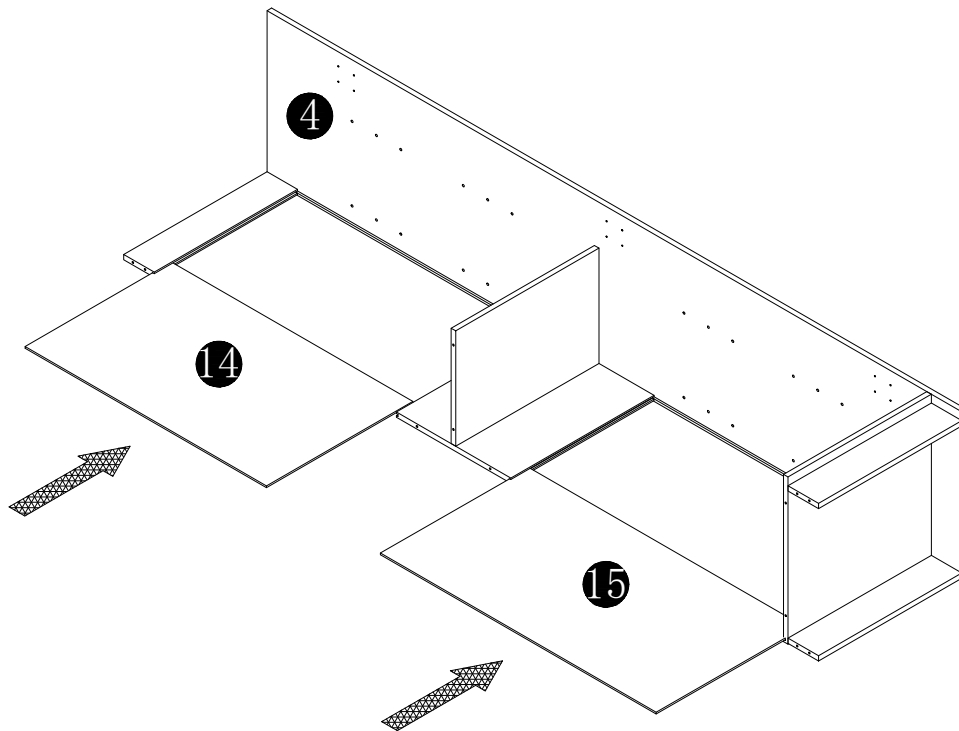




4

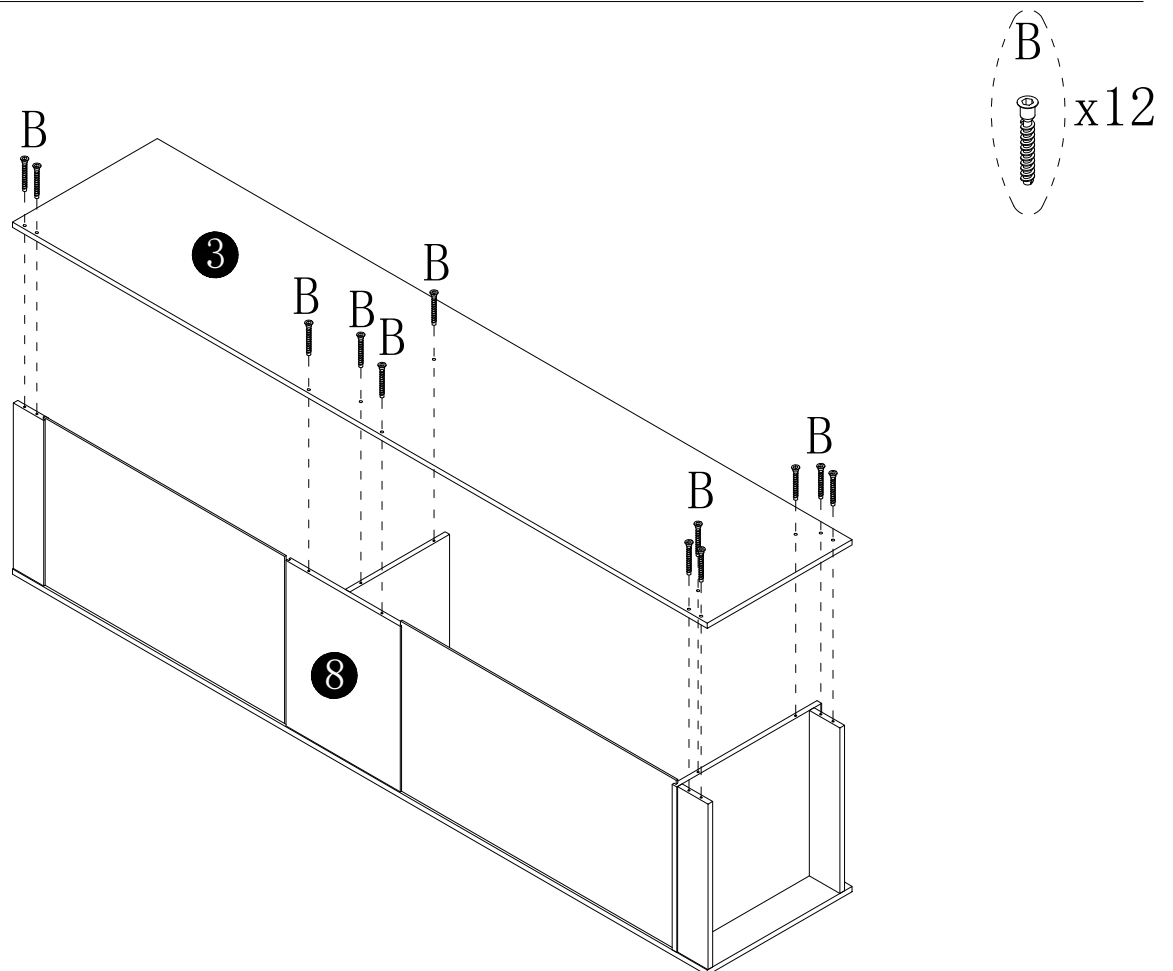

5

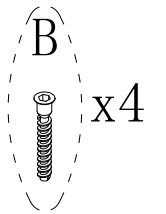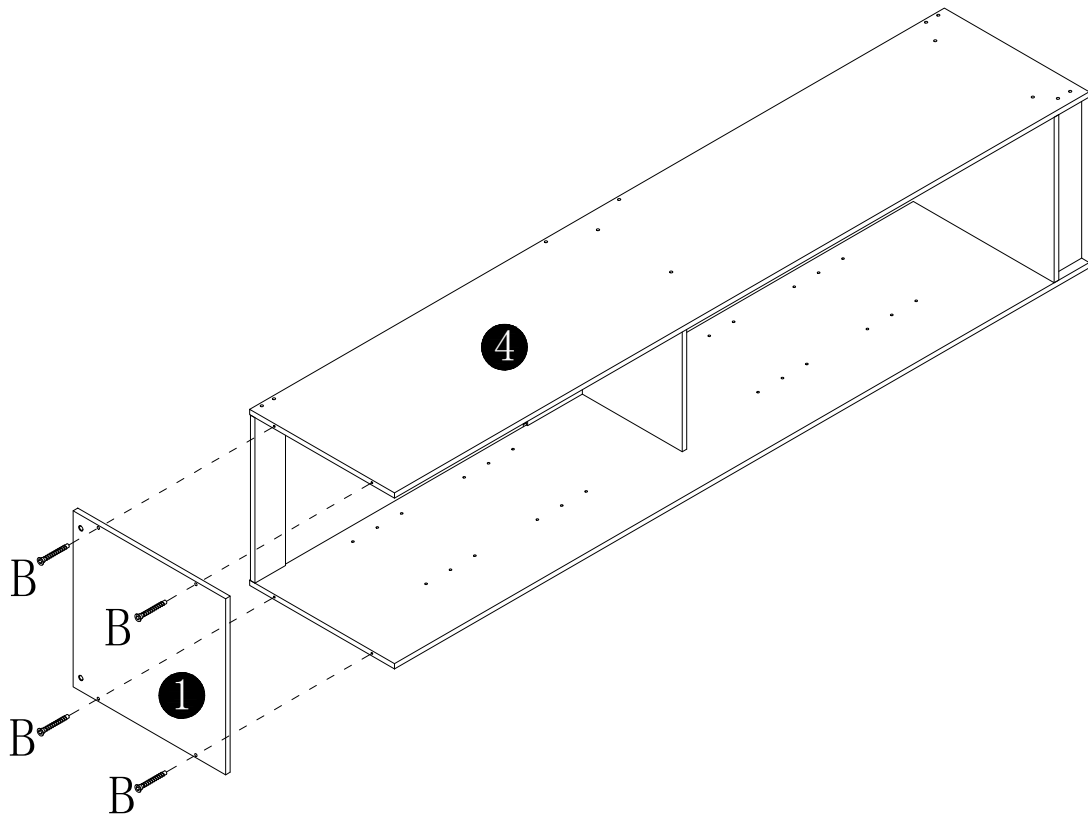


6

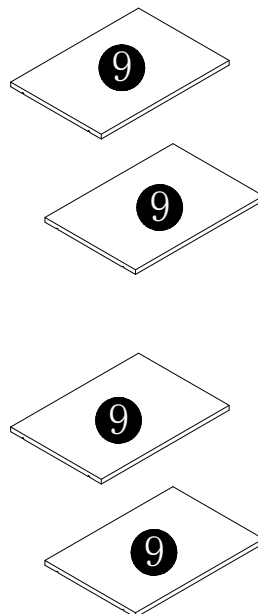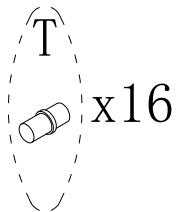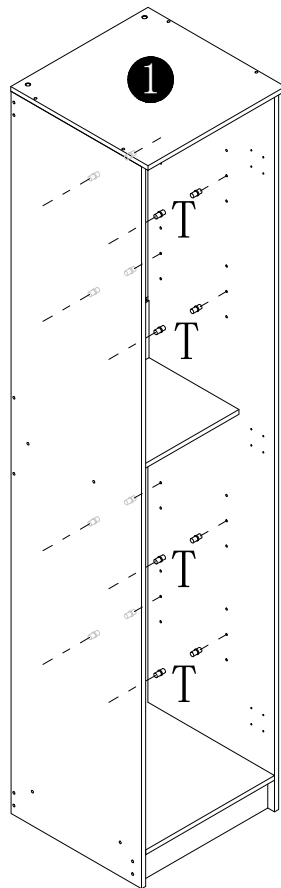


7

B
x12

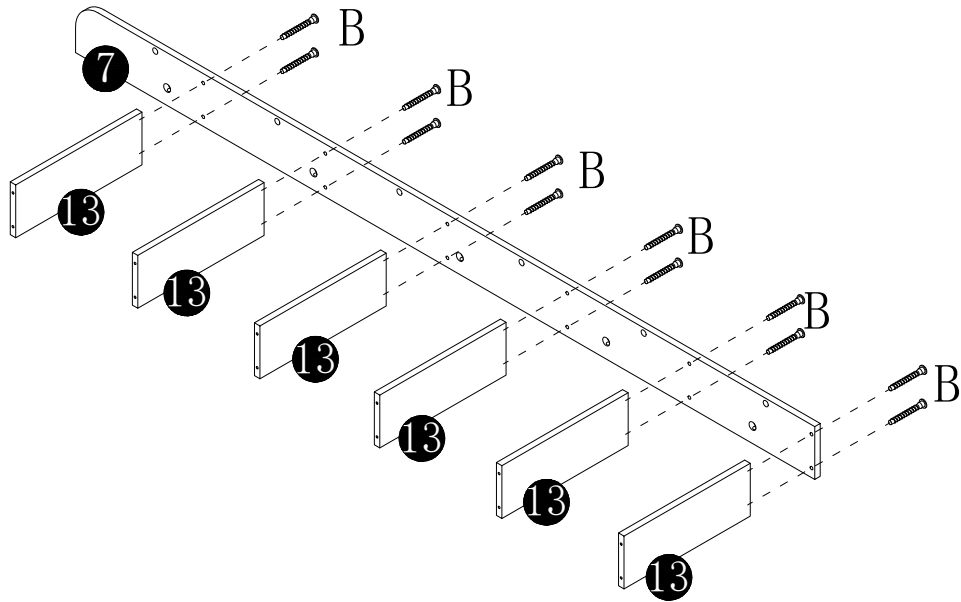


8

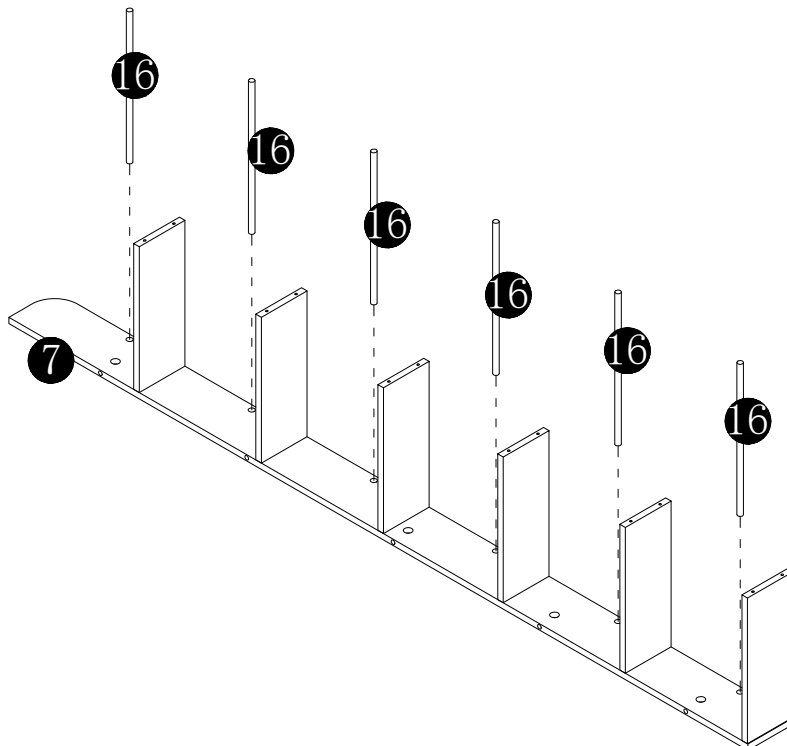


9

B
x12

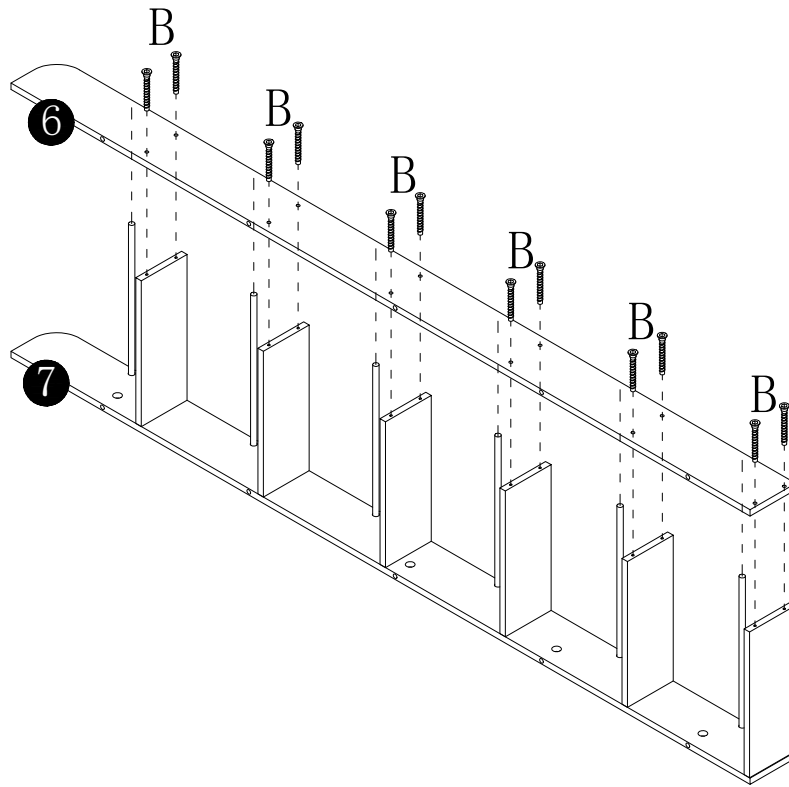


10

A
x10

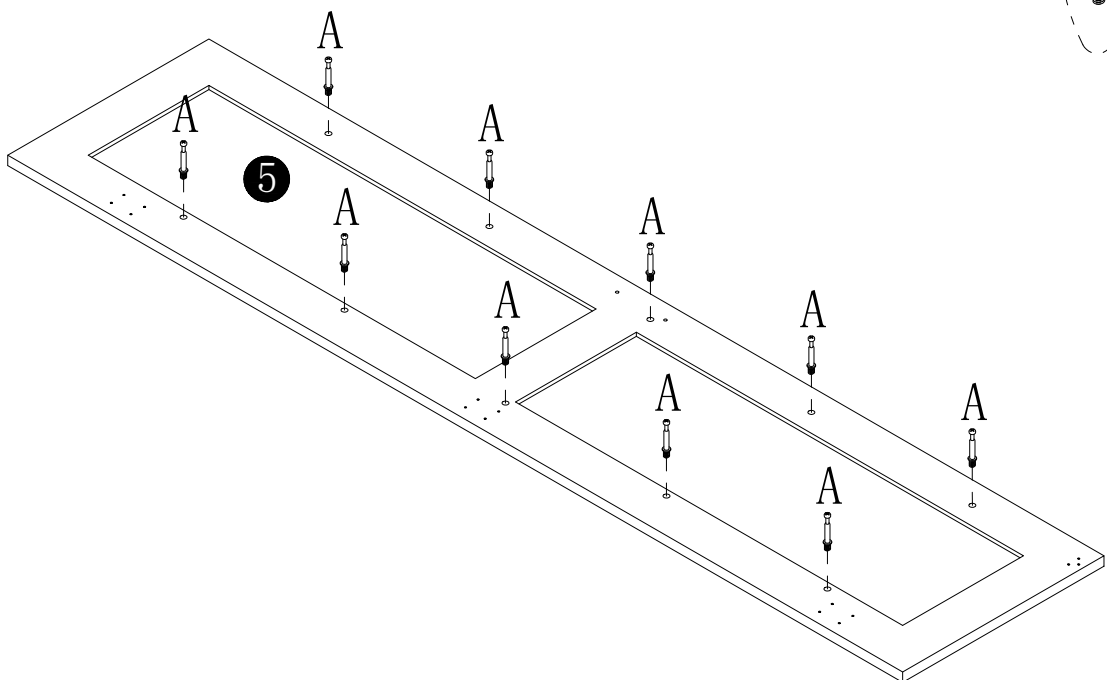


11

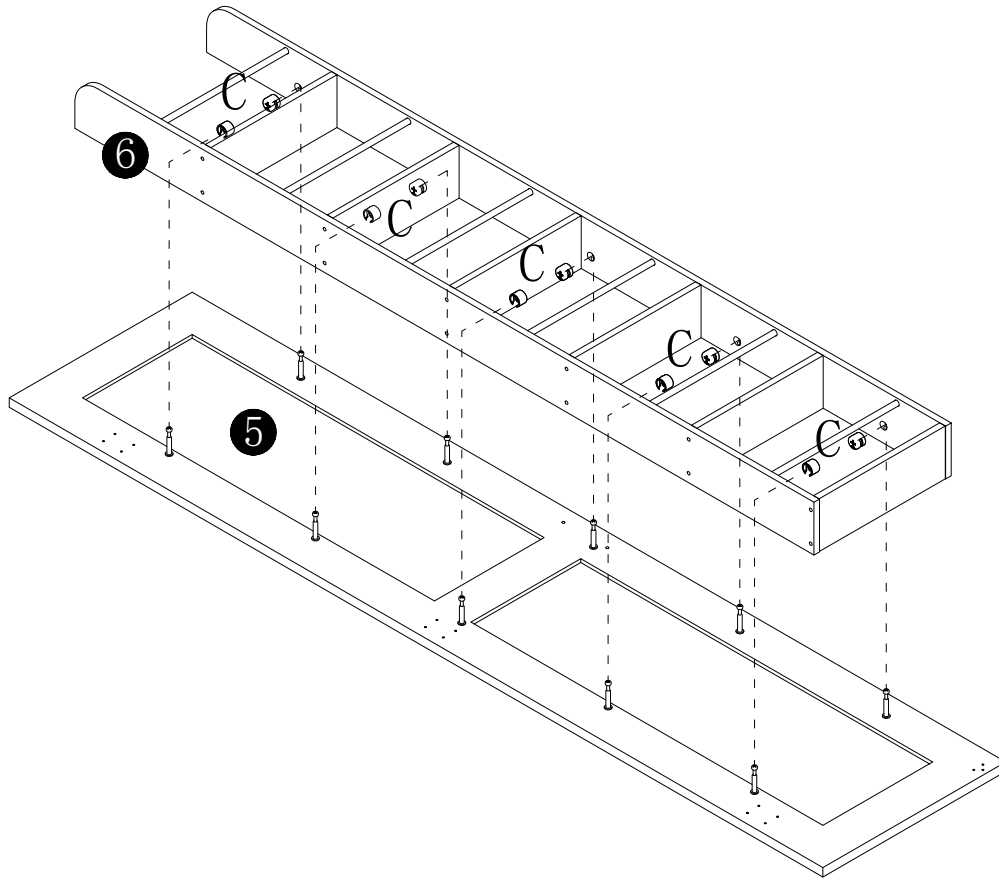


C
x10

12

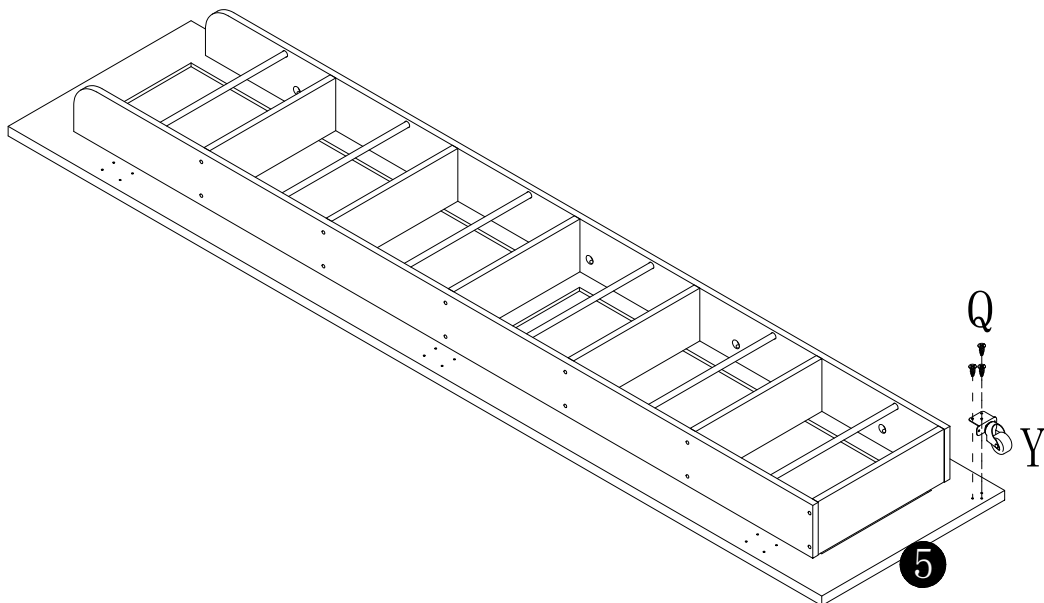


Q
x3
Y
x1

13

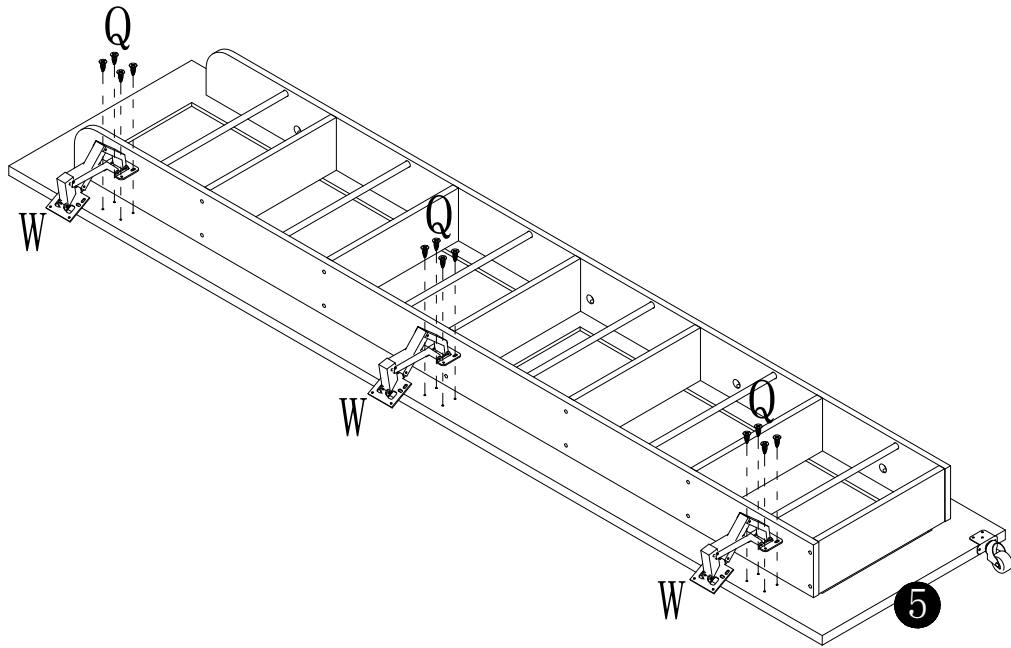



- Q x12
- W x3

14

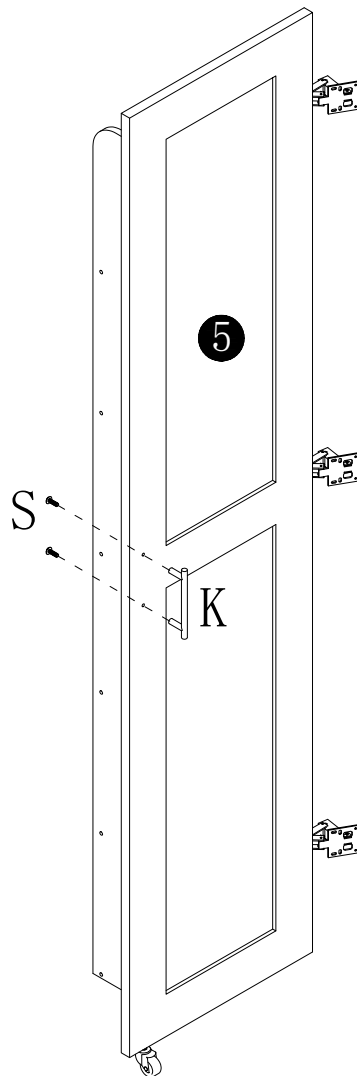



- S x2
- K x1

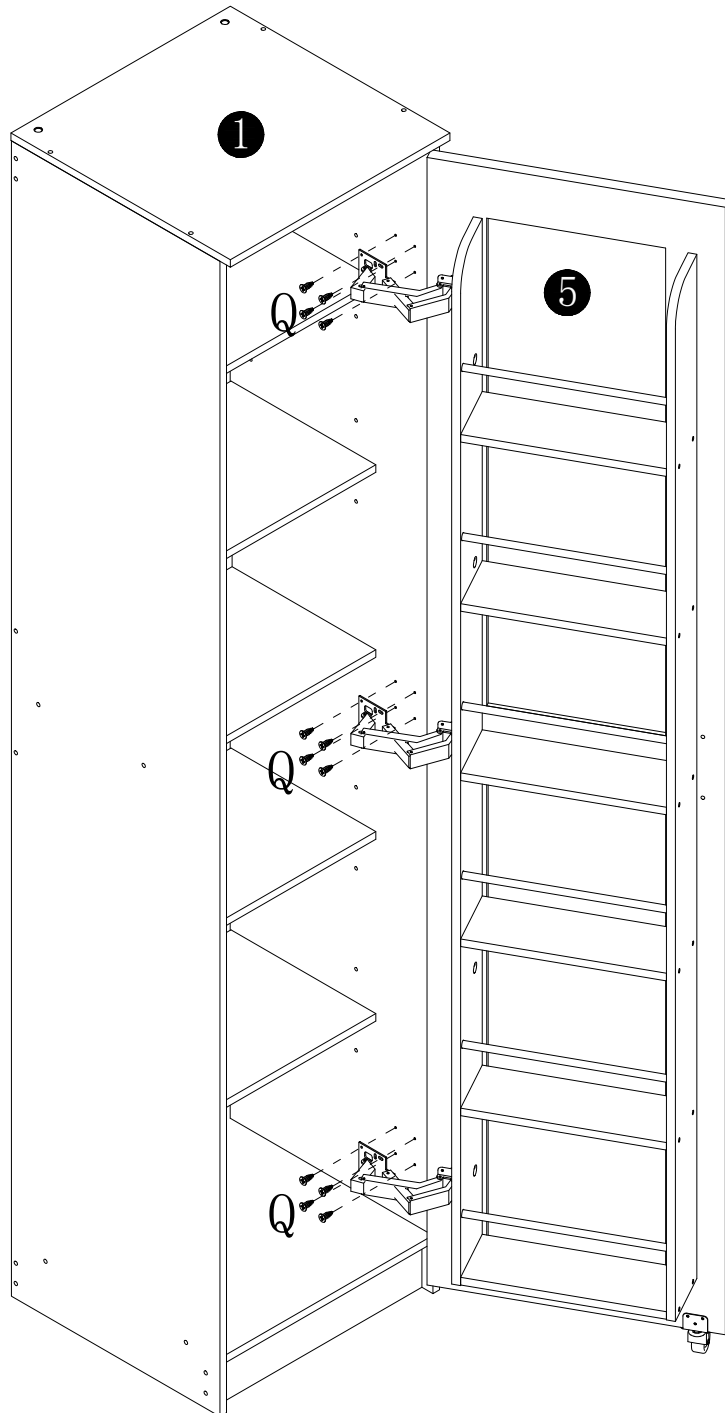

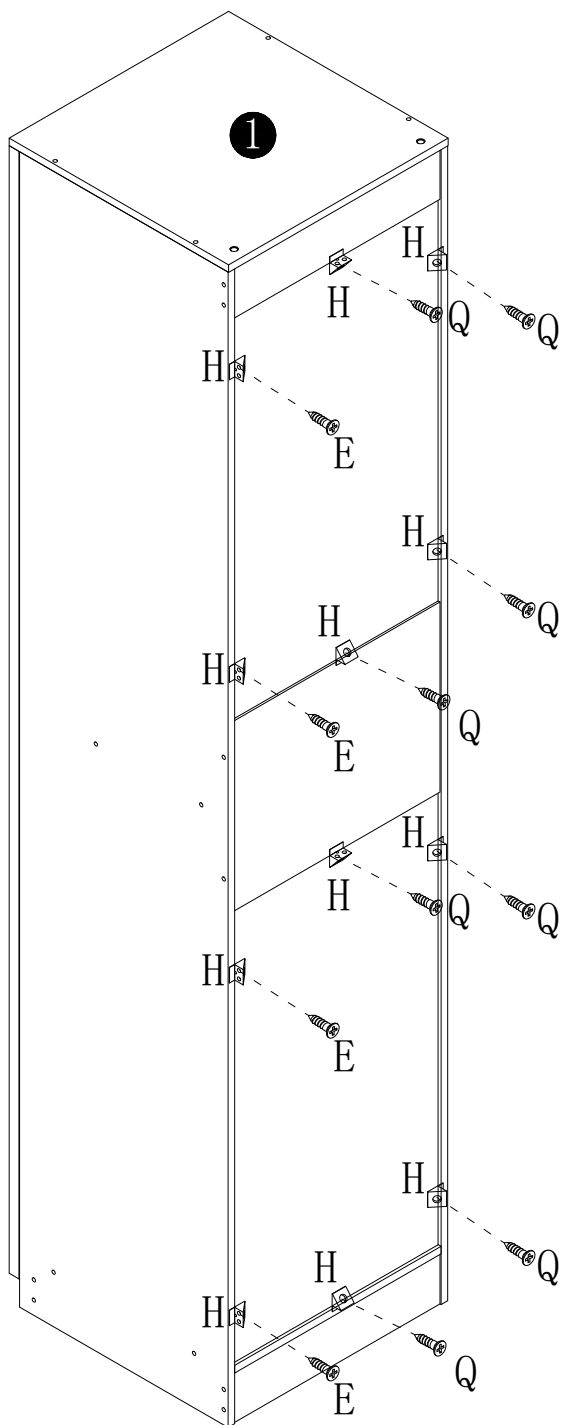


- Q x12
- H x12

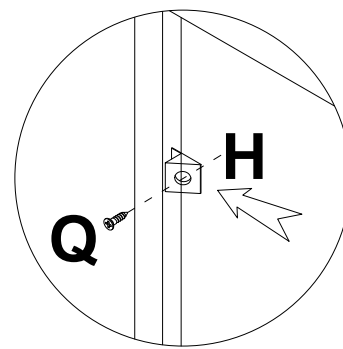

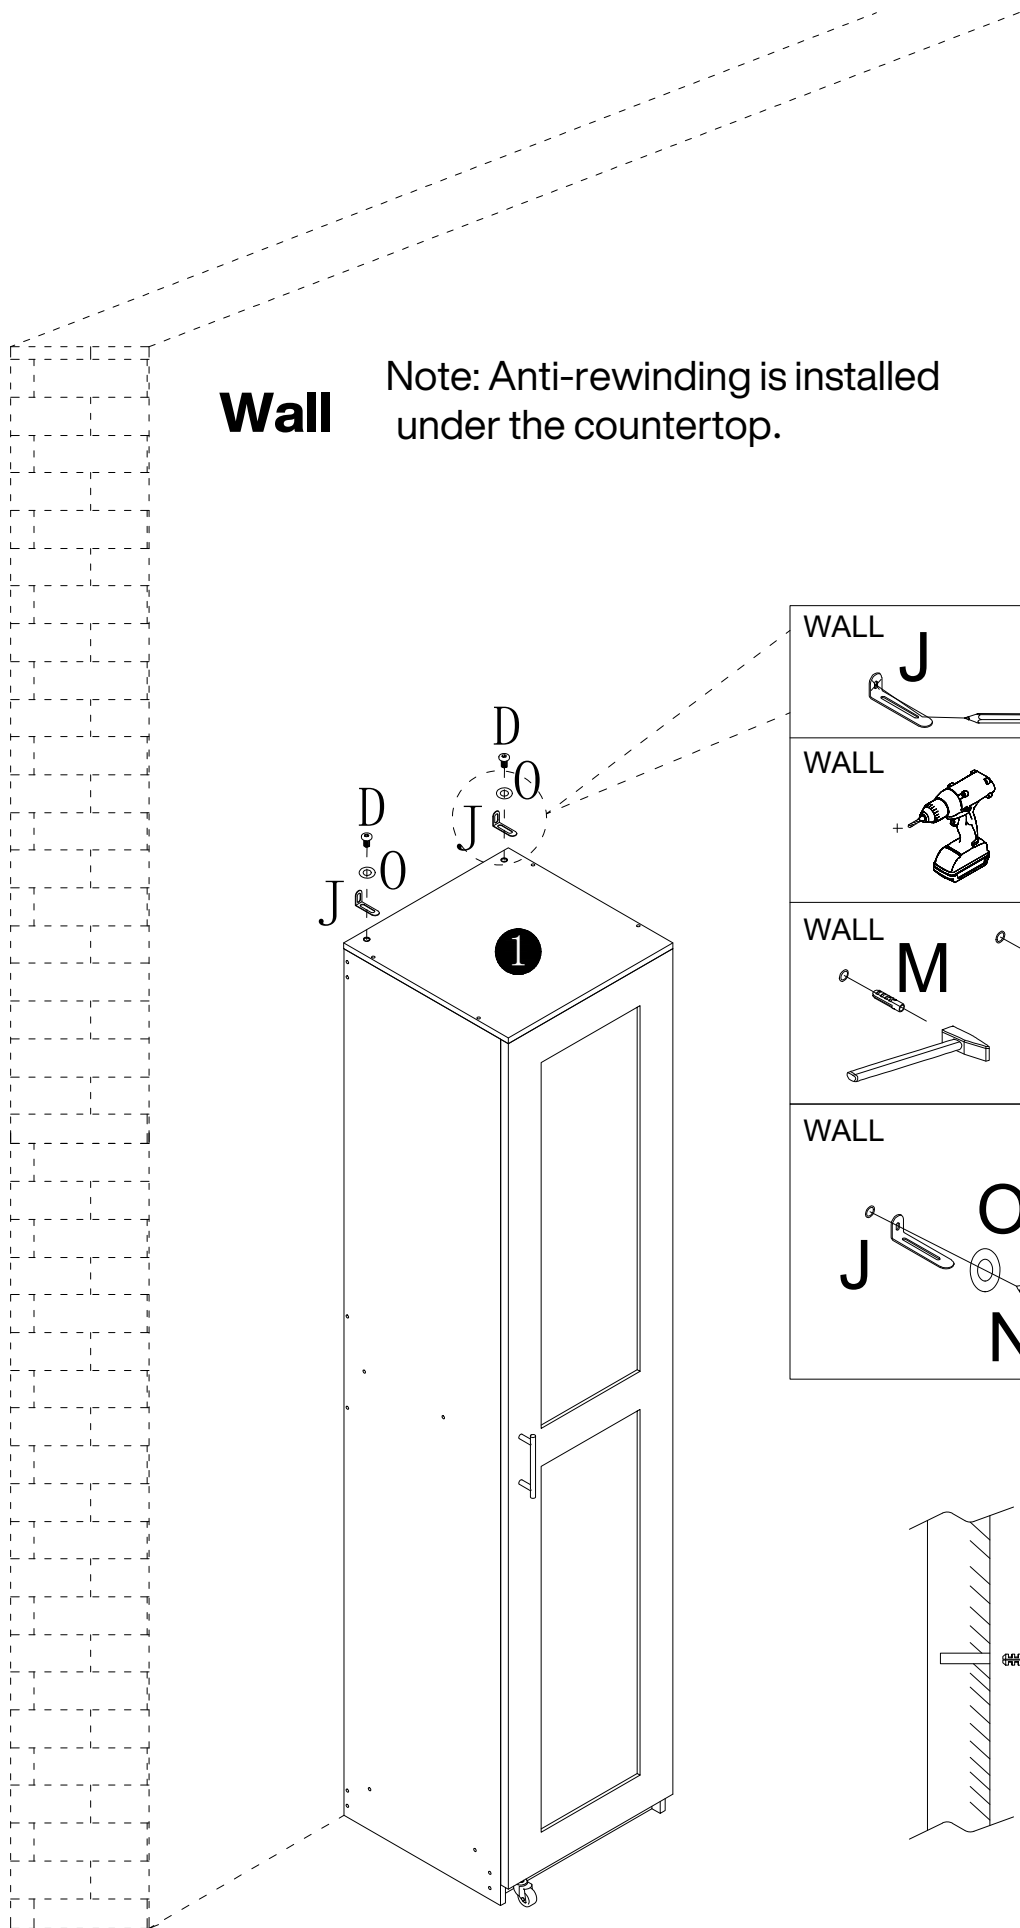

Wall

Note: Anti-rewinding is installed under the countertop.

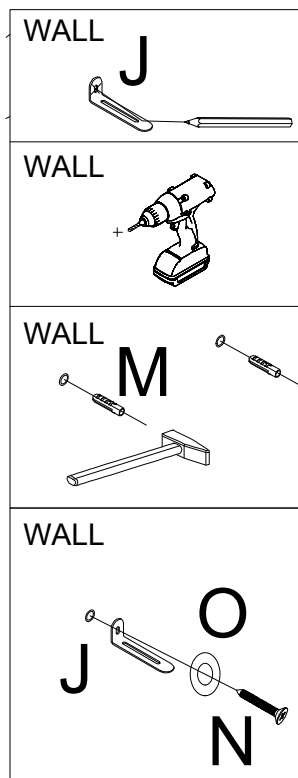

- D x2
- J x2
- O x4
- M x2
- N x2

