INSTRUCTION MANUEL ENCLOSED


ATTENTION

IF YOU HAVE ANY PROBLEMS OR QUESTIONS, EMAIL OR CALL CUSTOMER SERVICE <u>BEFORE</u> YOU RETURN THIS PRODUCT TO THE STORE WHERE IT WAS PURCHASED.


INSTRUCTION MANUEL ENCLOSED

PATIO SEATING 5PC

PATIO SEATING 5PC ASSEMBLY INSTRUCTION

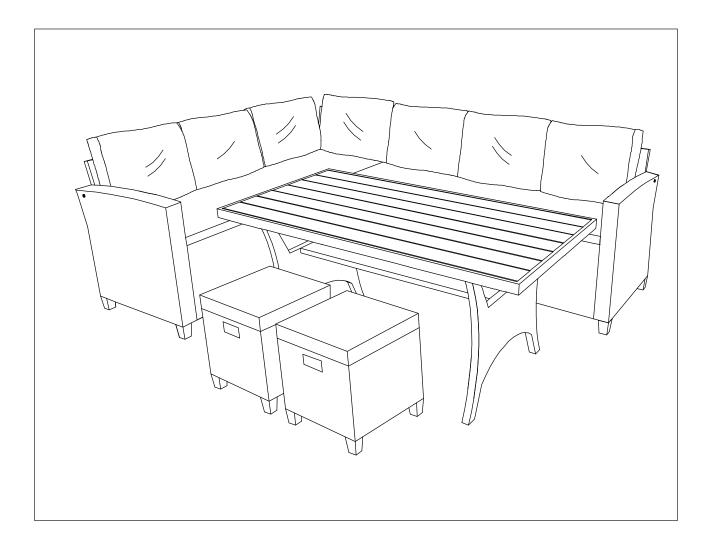

Part	PARTS LIST Description	Quantity
	PARTS	,
А	Left arm	1
В	Left seat base	1
С	Left small backrest	1
D	Left backrest	1
Е	Bench cushion	2
F	Pillow	7
G	Right arm	1
н	Right base seat	1
1	Right backrest	1
Q	Stool	2
т	Stool cushion	2
Х	Table leg	2
Y	Table shelf	1
Z	Polywood table top	1
	HARDWARE	
1	Bolt M6x40 mm	18
2	Bolt M6x35 mm	7
3	Bolt M6x110 mm	2
4	Bolt M6x55 mm	20
5	Washer Ø6x14x1 mm	27
6	Plastic leg 48x48x65 mm	20
7	Connection 62x40x32 mm	2
8	Allen key 4x60 mm	4
9	Bolt M8x20 mm	8
10	Washer Ø8x16x1 mm	8

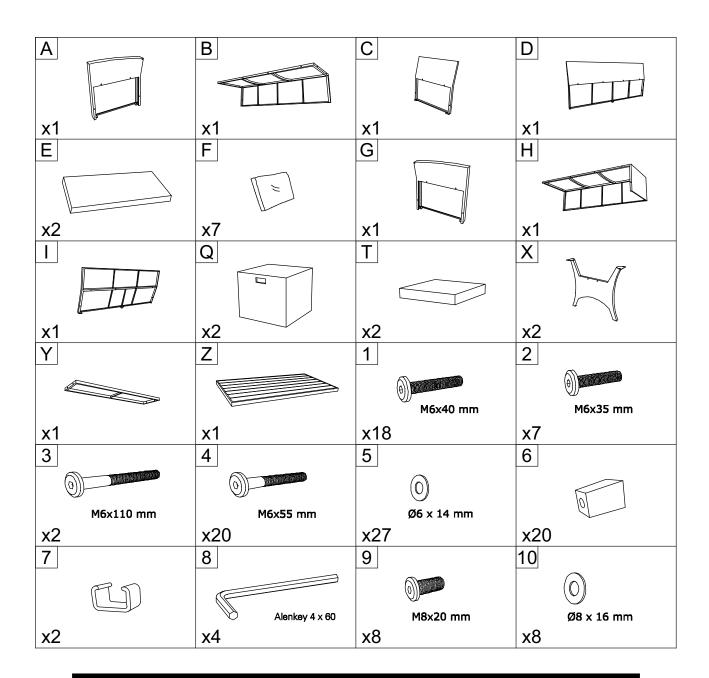

PLEASE READ AND FOLLOW ALL SAFETY TIPS

1. Before assembly, CAREFULLY use scissors or utility knife to cut and unwrap all parts. Make sure you do not discard the hardware.

2. Make sure that you have all the parts listed. If you are missing any parts, please contact Customer Service. Please identify the parts you need and model number. Make sure to include your name and address.


Warm Tips:

1. The plastic covers on some metal parts are just for product protection, Please remove it before assembly.

2. Please follow the sequence of AI during assembly.


3. Do not tighten the screws until all of them are in right positions.

 Locate Left arm (A) and Left small backrest (C) to the Left seat base (B) by the pre-drilled threads.
Use Allen Key (8) to fasten Bolts (1) and Bolts (2) with Washers (5).
Each arm should have 6 bolts fastened. Only fixed bolts 50% (Photo 1).

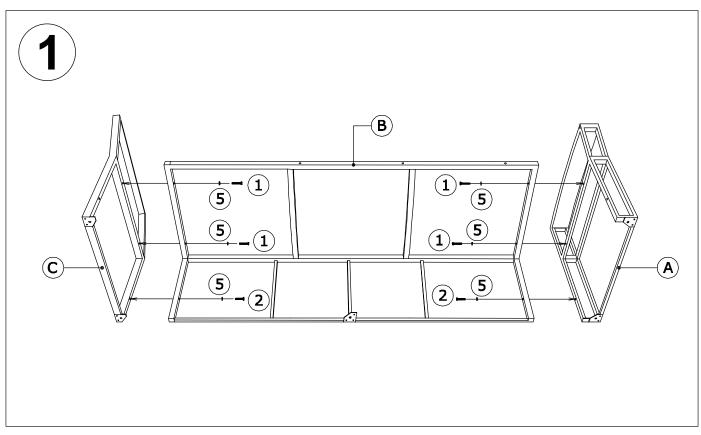


 Locate Left backrest (D) to the Left base seat (B) and Left arm (A), Left small backrest (C) by the pre-drilled threads.
Use Allen Key (8) to fasten Bolts (1), Bolts (2) and Bolt (3) with Washers (5).


Should have 7 bolts fastened. Only fixed bolts 50% (Photo 2).

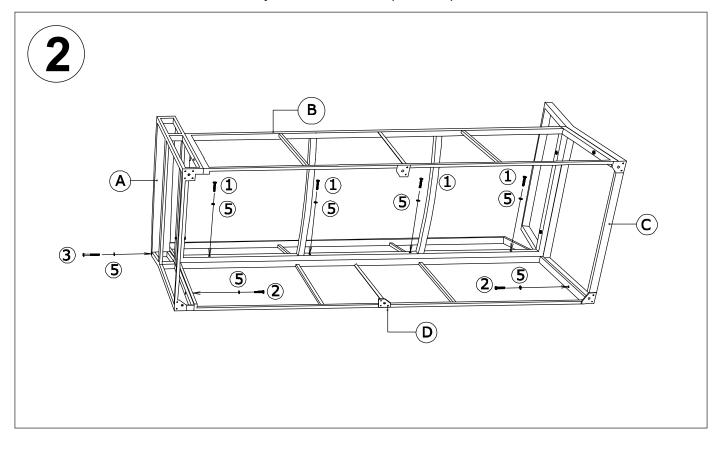


3. Use Allen Key (8) to fasten Bolts (4) with Plastic leg (6). Should have 6 bolts fastened. Fixed bolts 100% (Photo 3).

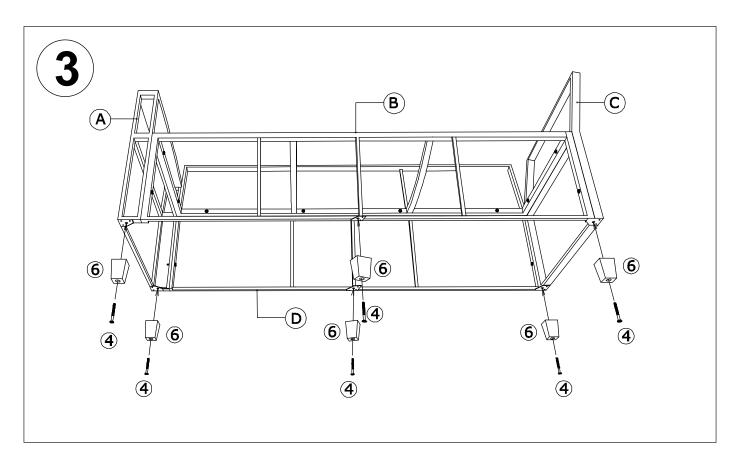


 Locate Right arm (G) to the Right seat base (H) by the pre-drilled threads. Use Allen Key (8) to fasten Bolts (1) and Bolt (2) with Washers (5). Each arm should have 3 bolts fastened. Only fixed bolts 50% (Photo 4).

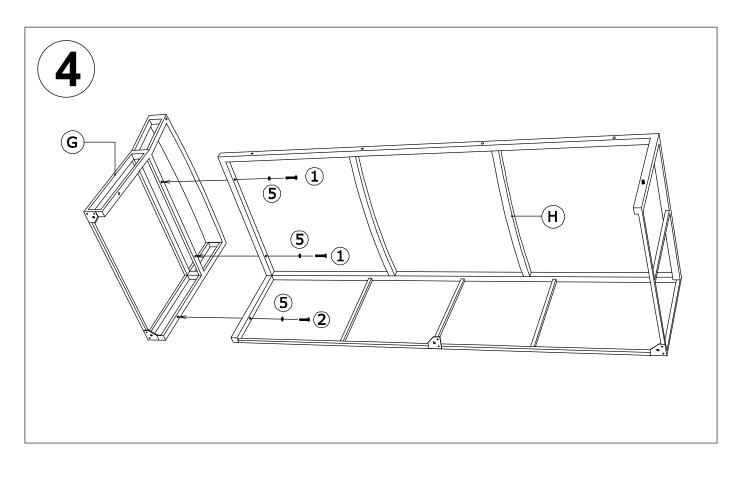


 Locate Right backrest (I) to the Right base seat (H) and Right arm (G) by the pre-drilled threads. Use Allen Key (8) to fasten Bolts (1), Bolts (2) and Bolt (3) with Washers (5). Should have 7 bolts fastened. Only fixed bolts 50% (Photo 5).

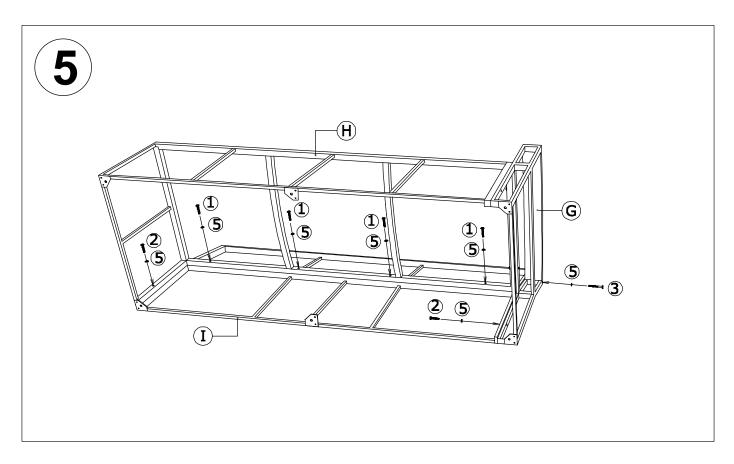


6. Use Allen Key (8) to fasten Bolts (4) with Plastic leg (6). Should have 6 bolts fastened. Fixed bolts 100% (Photo 6).

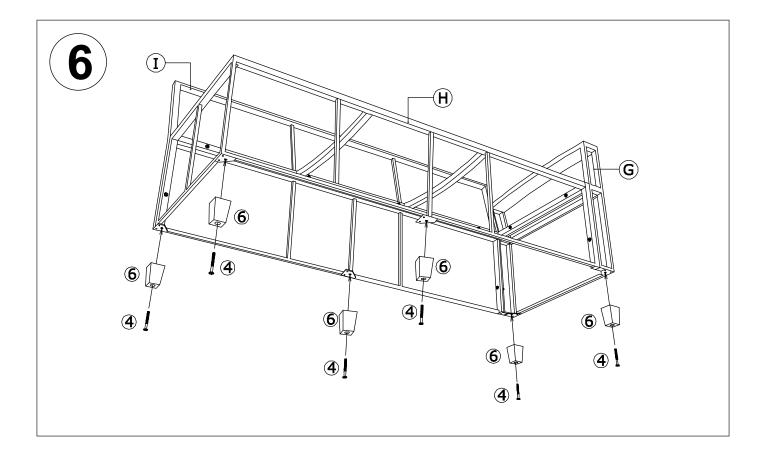


7. Locate Left bench and Right bench with Connection (7). Fixed connection 100% (Photo 7).

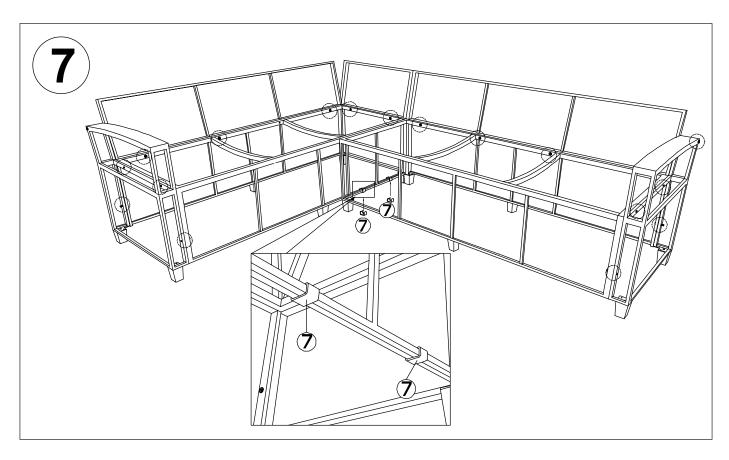


8. Place 2 Bench cushion (E) on the top bench first, and then place 7 Pillow (F) above it (Photo 8).

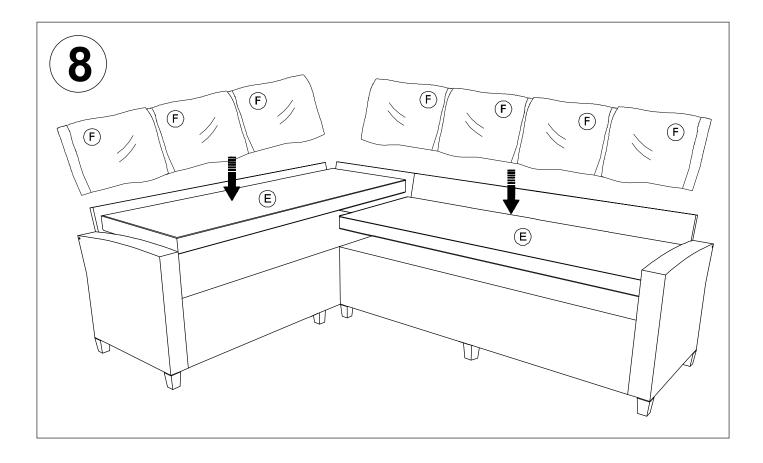


 Use Allen Key (8) to fasten Bolts (4) with Plastic leg (6) to the stool. Should have 4 bolts fastened. Fixed bolts 100% (Photo 9).

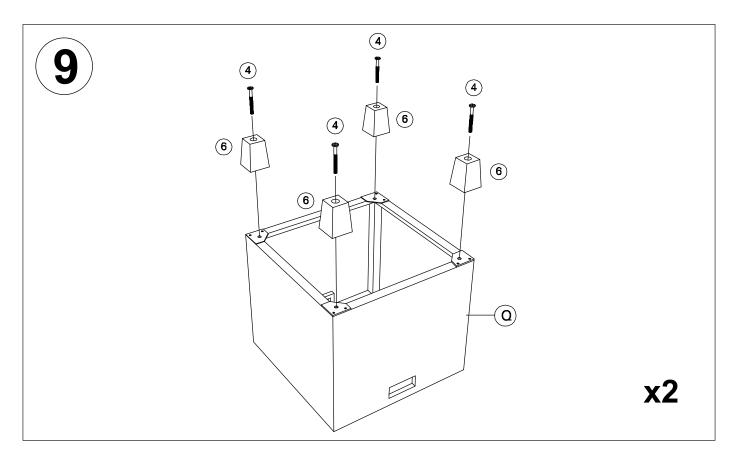

 Locate Table leg (X) to the Table shelf (Y) by the pre-drilled threads. Use Allen Key (8) to fasten Bolts (1) with Washers (5). Should have 4 bolts fastened. Only fixed bolts 50% (Photo 10).

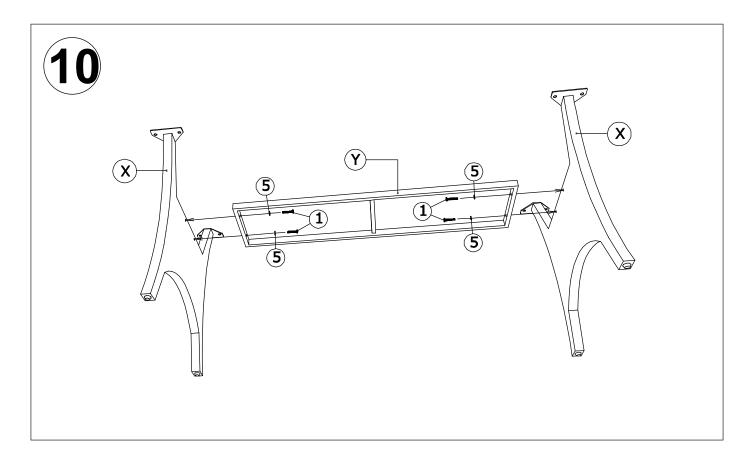

 Locate Polywood top table (Z) to the Table leg (X) by the pre-drilled threads. Use Allen Key (8) to fasten Bolts (9) with Washers (10). Should have 8 bolts fastened. Only fixed bolts 50% (Photo 11).

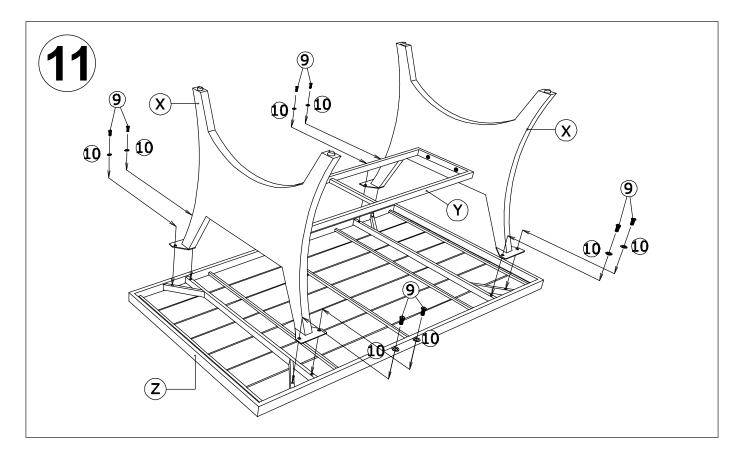

12. Fixed all bolts 100% (Photo 12).

