
Keystone


SHOWER KIT DIMENSIONS AND PARTS

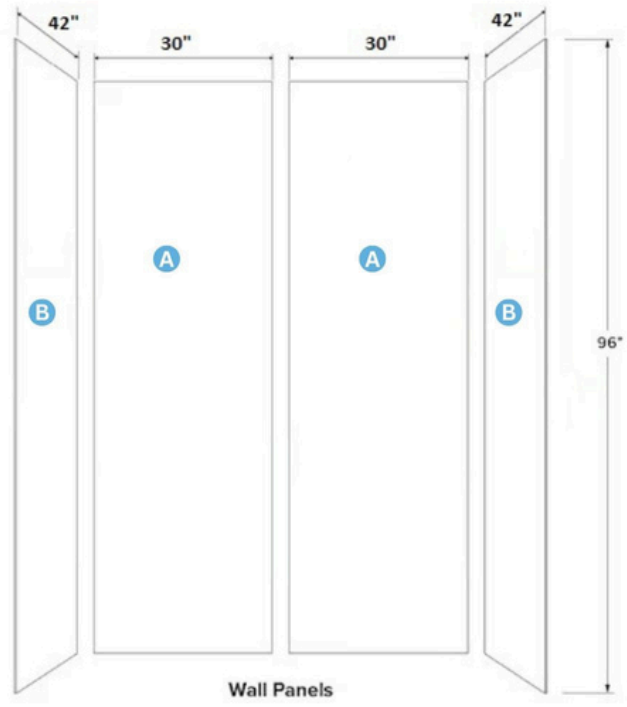


Overall Dimensions: 60"L x 42"W x 96"H
Back Wall (Panel A) : 2PCS 30"W x 96"H
Side Wall (Panel B): 2PCS 42"W x 96"H

Installation Instructions:

1. Apply polyurethane construction adhesive in a point pattern (10–20 cm intervals) on the back of the panel, ensuring symmetry and even distribution.
If the wall is uneven, apply foam adhesive in an “S” pattern for leveling, then use point gluing for the remaining areas.

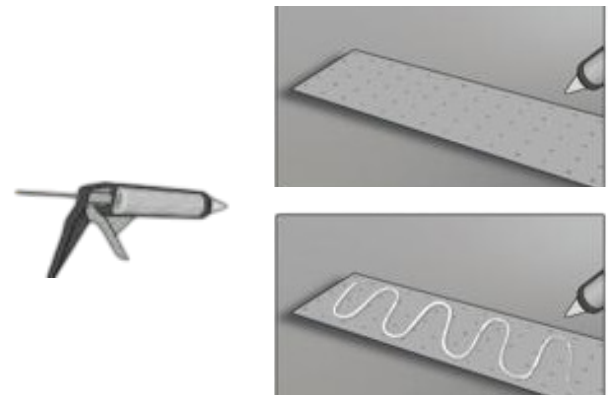

2. Install Panel A:
a. Fix the first panel A on the wall, with the groove side outward.
b. Position the second panel at a 30° angle, with the tongue facing inward. Insert the tongue into the groove of the first panel.
c. Press the panel against the wall, ensuring a tight and seamless joint.
d. Tap the panel gently with a rubber mallet, from top to bottom, to secure it firmly.

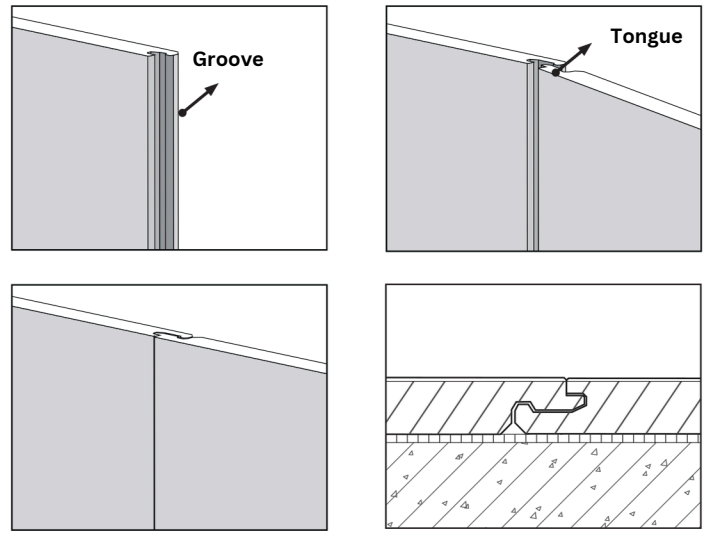

3. Continue on with the same approach for the B panels

Important Note: Keep the area dry for at least 24 hours to allow the adhesive to cure.