


## PARTS:

## ASSEMBLY INSTRUCTIONS


(2) Side Piece

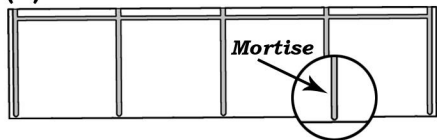

(2) Top/Bottom Piece



(3) Shelf Piece (back grooves both sides)

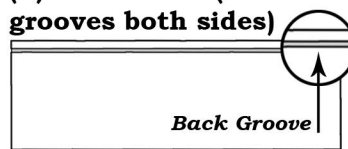


**Notice - KEEP BACK GROOVES ALIGNED**

(2) Center Back Piece




(2) Outer Back Piece

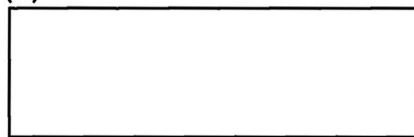


(20) Hex Screws (1) allen wrench




**Step 1:** Insert edge of **bottom** piece into mortise of **side** piece as shown, making sure to align back grooves. Insert hex screws into each of (2) pre-drilled holes in **side** piece and tighten down halfway.

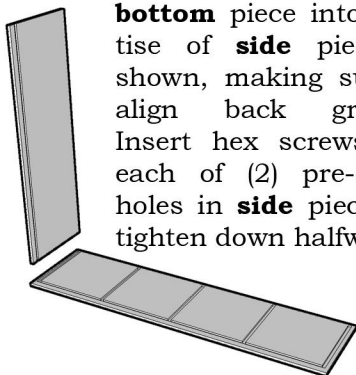


**Step 2:** Insert edge of **top** piece into opposite mortise of **side** piece, making sure to align back grooves. Insert hex screws into each of (2) pre-drilled holes in **side** piece and tighten down halfway.

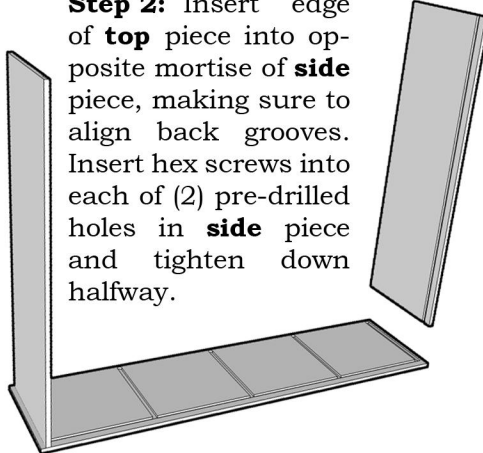

**Step 3:** Insert edge of **shelf** piece into mortise of **side** piece, making sure to align back grooves. Insert hex screws into each of (2) pre-drilled holes in **side** piece and tighten down halfway.

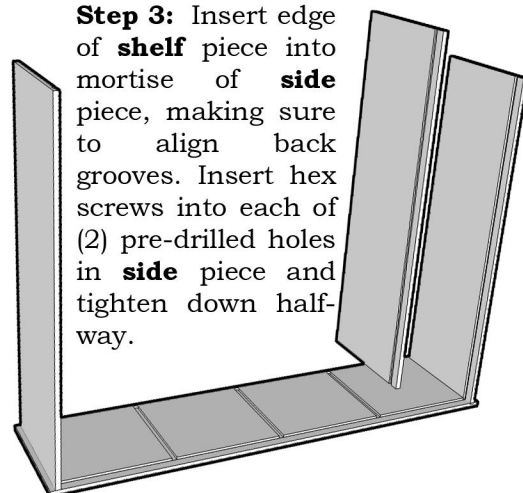


**Step 4:** Insert edge of **shelf** piece into mortise of **side** piece, making sure to align back grooves. Insert hex screws into each of (2) pre-drilled holes in **side** piece and tighten down halfway.

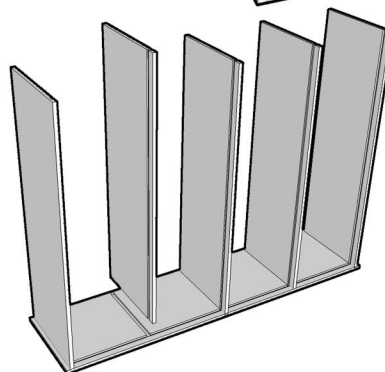


**Step 5:** Insert edge of **shelf** piece into mortise of **side** piece, making sure to align back grooves. Insert hex screws into each of (2) pre-drilled holes in **side** piece and tighten down halfway.

**Step 6:** Insert sides of one **center back** piece into back grooves of two **shelf** pieces. Slide down until edge rests firmly in back groove of **side** piece.

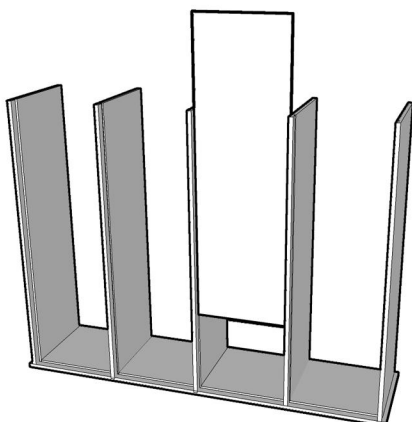


**Step 7:** Insert sides of remaining **center back** piece into back grooves of **shelf** pieces as shown. Slide down until edge rests firmly in back groove of **side** piece.

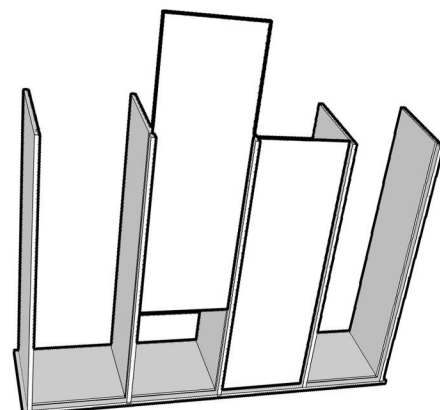



# ASSEMBLY INSTRUCTIONS

**Notice - KEEP BACK GROOVES ALIGNED**


**Step 6:** Insert sides of one **center back** piece into back grooves of two **shelf** pieces. Slide down until edge rests firmly in back groove of **side** piece.

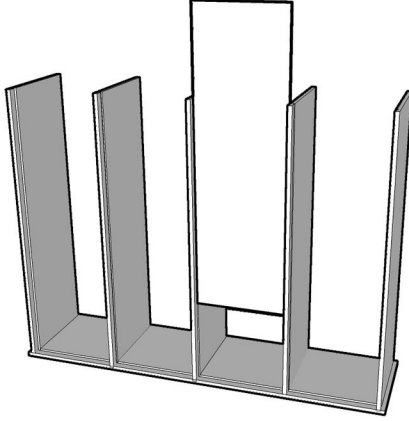

**Step 7:** Insert sides of remaining **center back** piece into back grooves of **shelf** pieces as shown. Slide down until edge rests firmly in back groove of **side** piece.

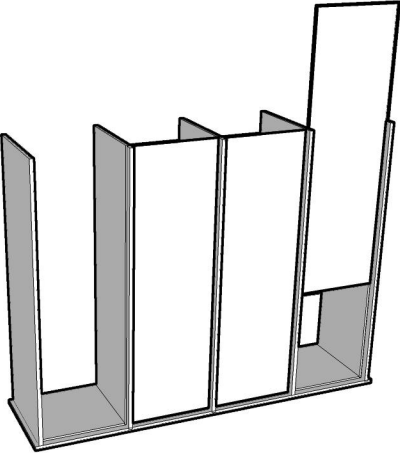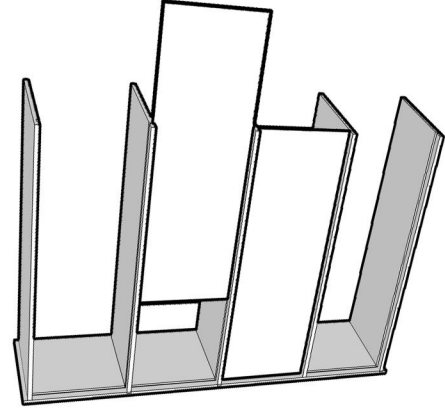


**Step 8:** Insert sides of one **outer back** piece into back grooves of **shelf** and **bottom** piece as shown. Slide down until edge rests firmly in back groove of **side** piece.

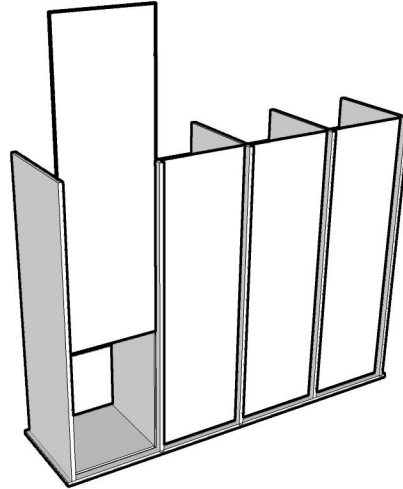

**Step 9:** Insert sides of remaining **outer back** piece into back grooves of **shelf** and **top** piece. Slide down until edge rests firmly in back groove of **side** piece.

**Step 10:** Insert edges of assembled pieces into mortises and back grooves of remaining **side** piece. Insert hex screws into each of (10) pre-drilled holes in **side** piece and tighten down halfway.

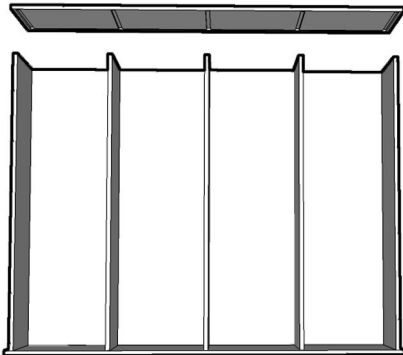

**Step 11:** Tighten all screws until snug. DO NOT OVER TIGHTEN. DO NOT DRILL. Rotate unit so that it rests on **bottom** piece and edges of **side** pieces. **Assembly is now complete.**

