


Domi outdoor living

domi
outdoor living

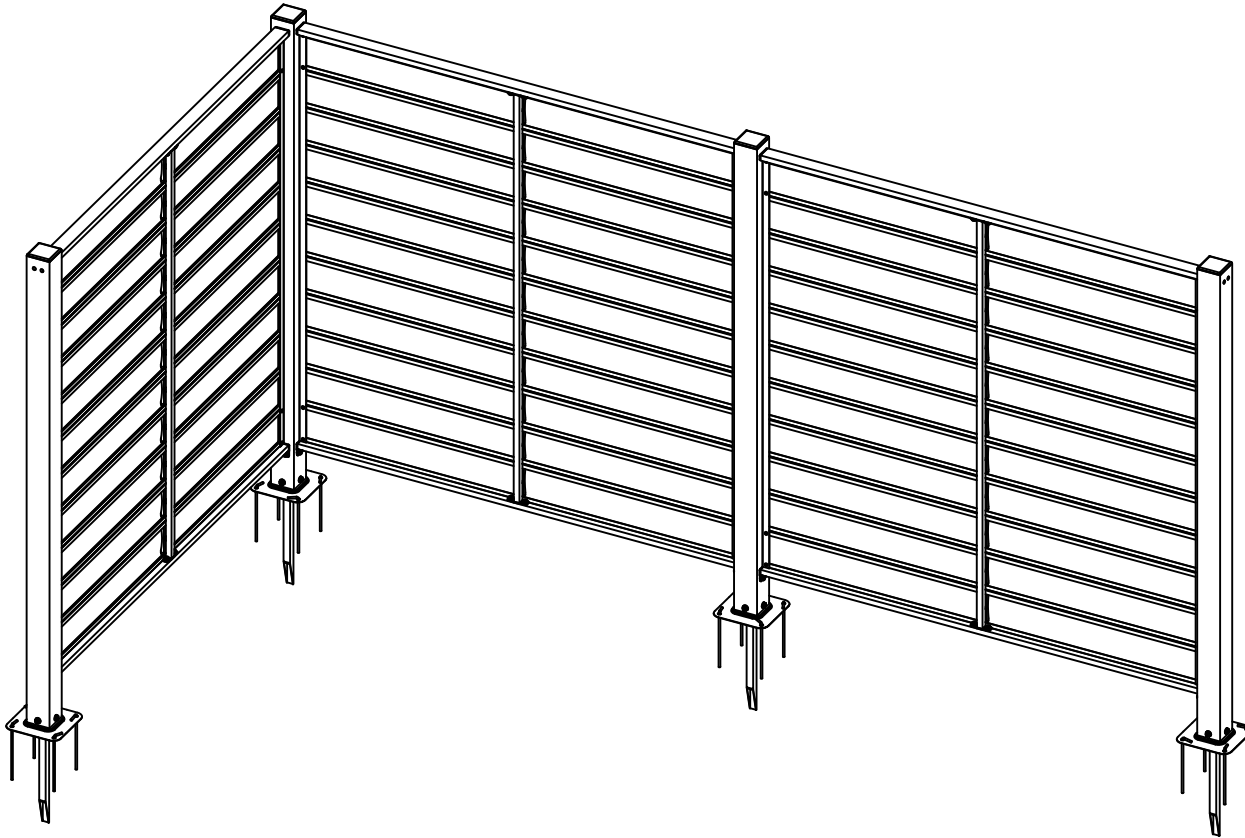


SKU: LNCF0622-3pcs

Outdoor Privacy Screen


Assembly Manual

READ & SAVE BELOW INSTRUCTIONS BEFORE ASSEMBLY

1. PLEASE SEPARATE AND IDENTIFY ALL PARTS, MAKING SURE THAT YOU HAVE ALL OF THE PARTS LISTED.
2. TO AVOID ANY SCRATCH DURING ASSEMBLY, PLEASE ASSEMBLE ON A SOFT MAT OR SIMILAR.
3. PLEASE ASSEMBLE STEP BY STEP AND FOLLOW THE INSTRUCTIONS.
4. WASHERS MUST BE USED.
5. WHILE EACH SCREW AND NUT IS PROPERLY FASTENED, DO NOT OVER FASTEN IT.
6. DO NOT COMPLETELY FASTEN EACH SCREW AND NUT UNTIL ALL THE SCREWS ARE PROPERLY FIXED.
7. WEARING PROTECTIVE GLOVES IS RECOMMENDED.











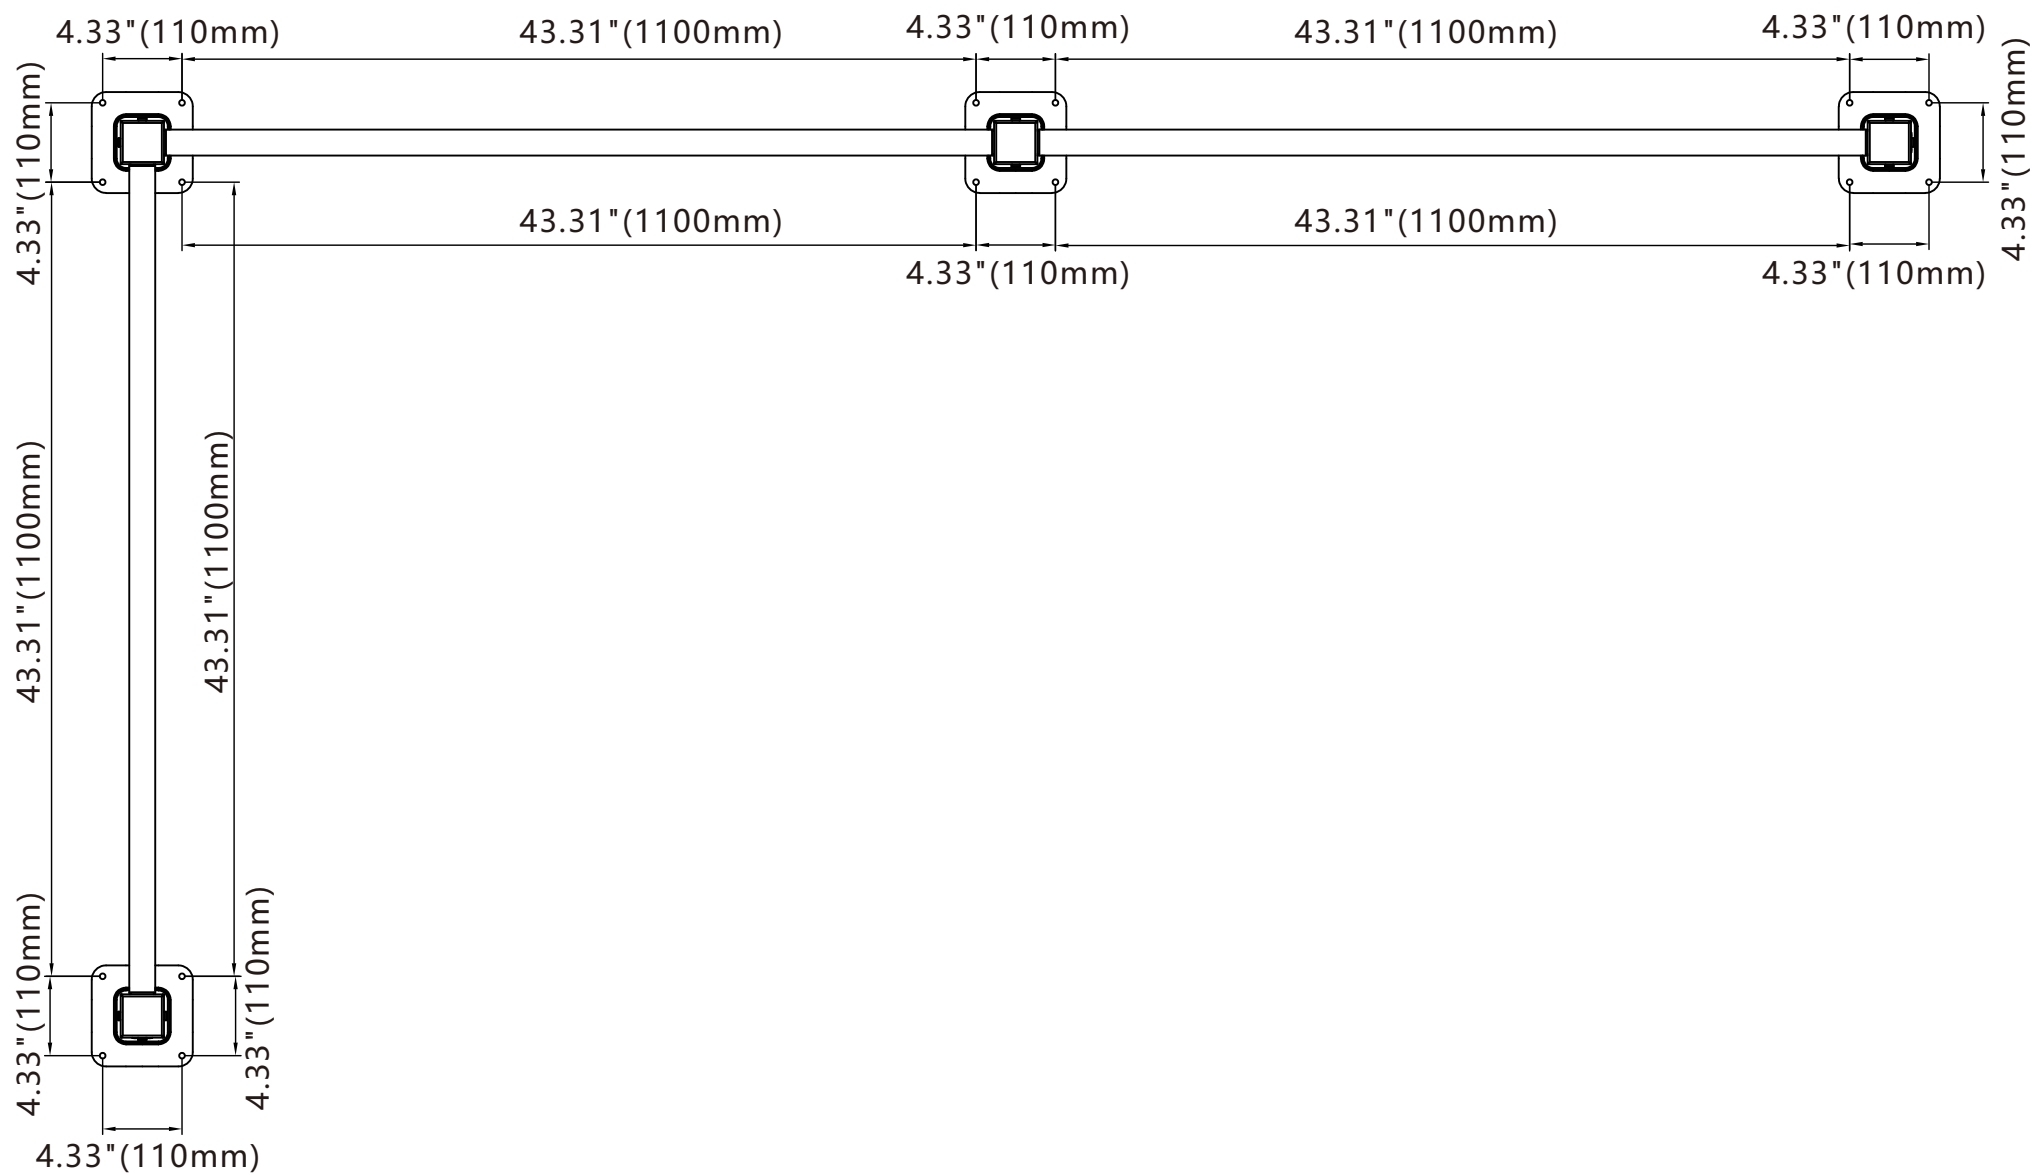




1

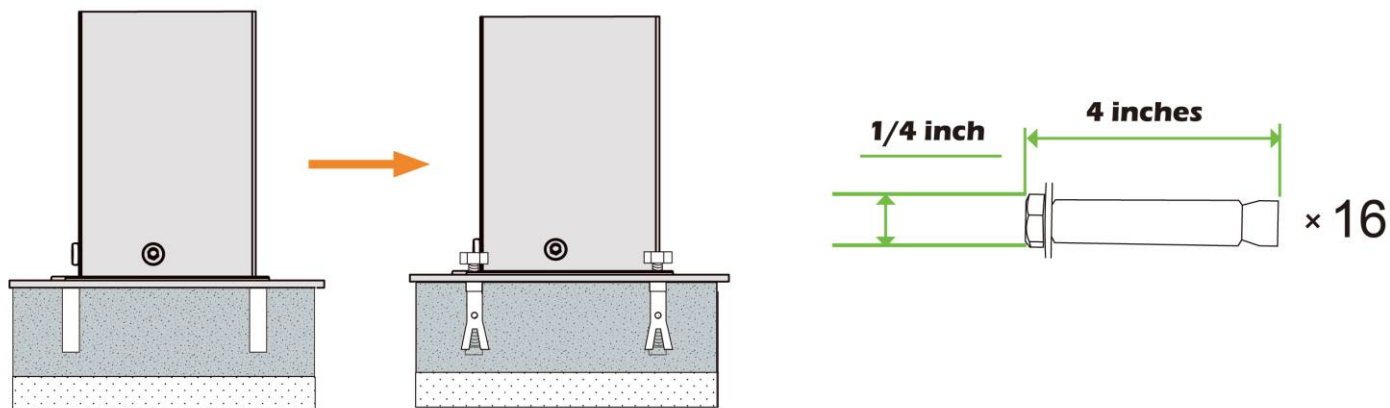

If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the Outdoor Privacy Screen.


If the ground is grassy, you can use ground stakes to mount the Outdoor Privacy Screen. Make sure to drive the ground stakes deep enough into the soil to ensure stability.

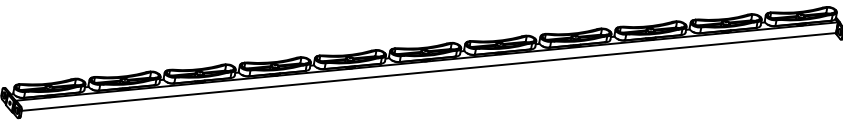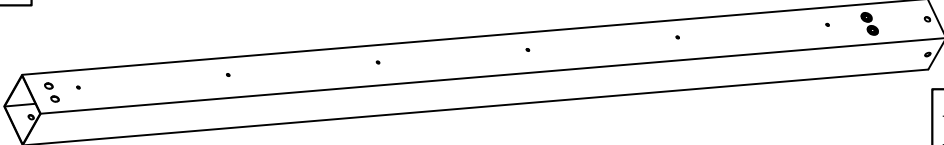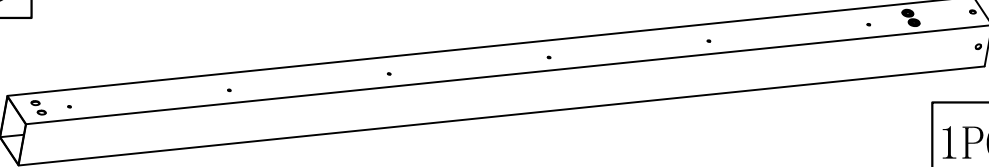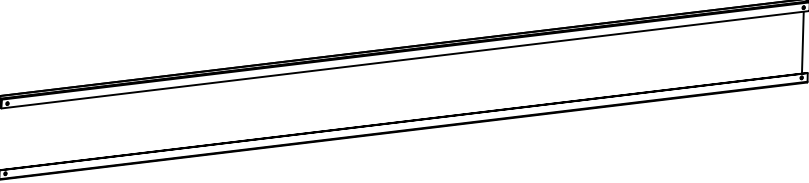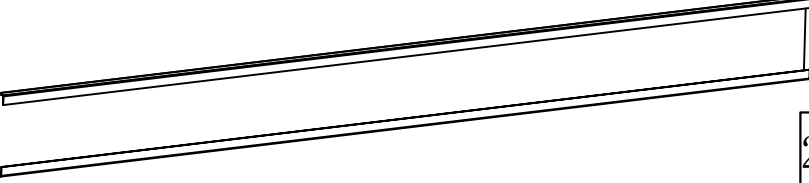A  1PC	G  3PCS
B  1PC	H  3PCS
C  1PC	I  3PCS
D  6PCS	J  4PCS K  4PCS L  16PCS M  4PCS N  68PCS O  52PCS
E  6PCS	P  60PCS Q  4PCS R  1PC S  1PC T  2PCS
F  27PCS	U  1PC

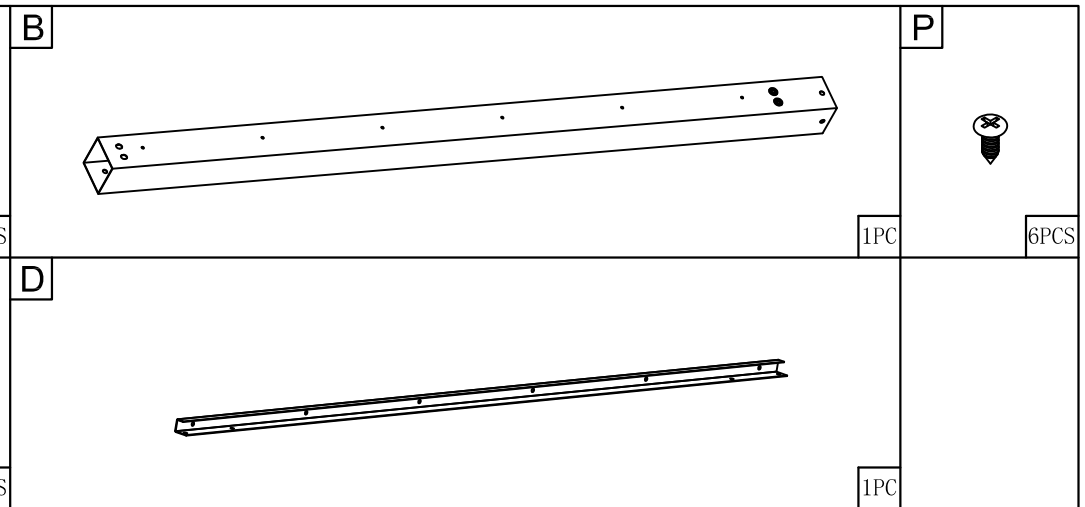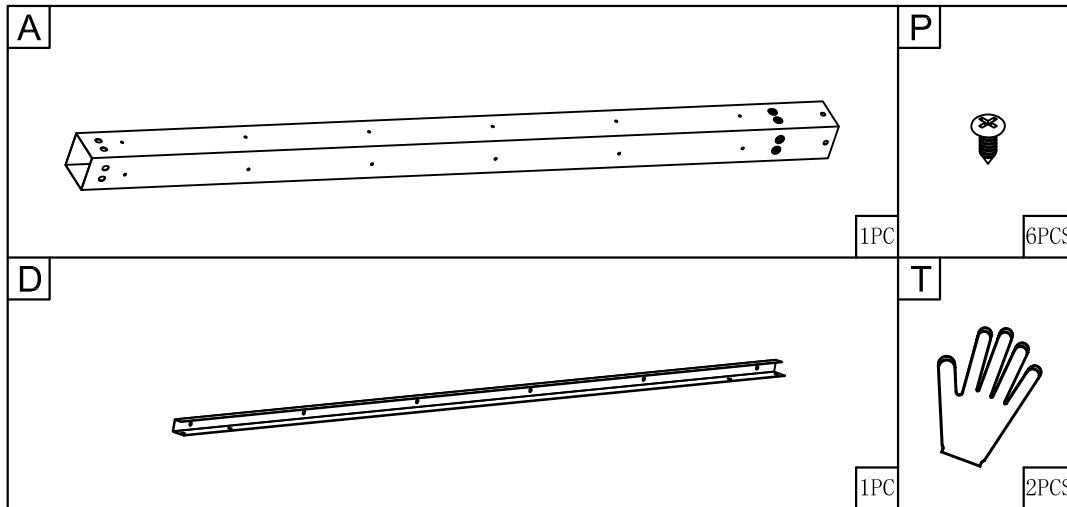

1


⚠ MAKE SURE TO WEAR PROTECTIVE GLOVES.


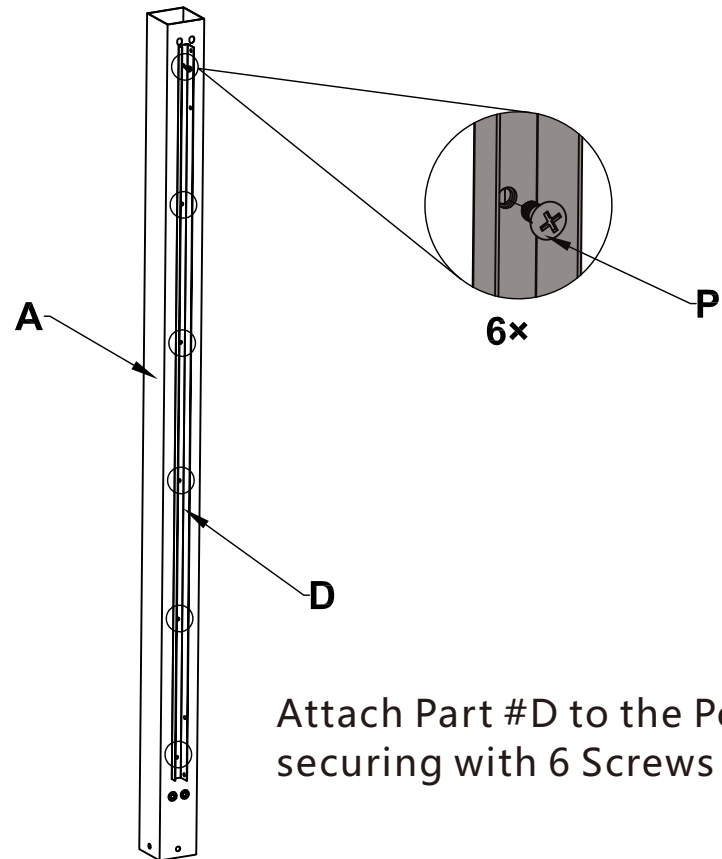


Attach Part #D to the Post #A by securing with 6 Screws #P.

2

Attach Part #D to the Post #B by securing with 6 Screws #P.

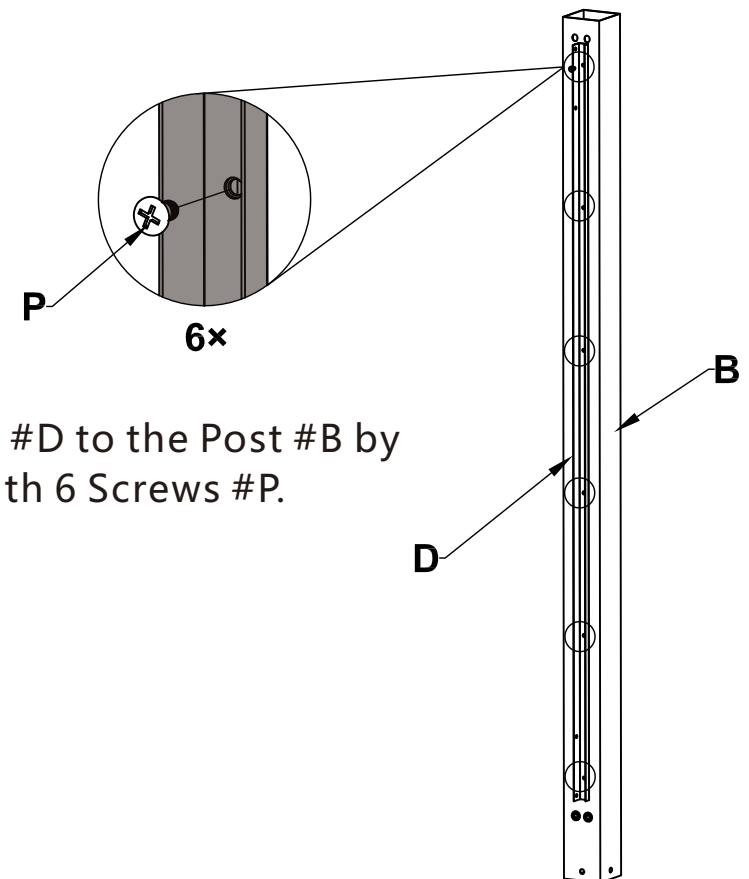


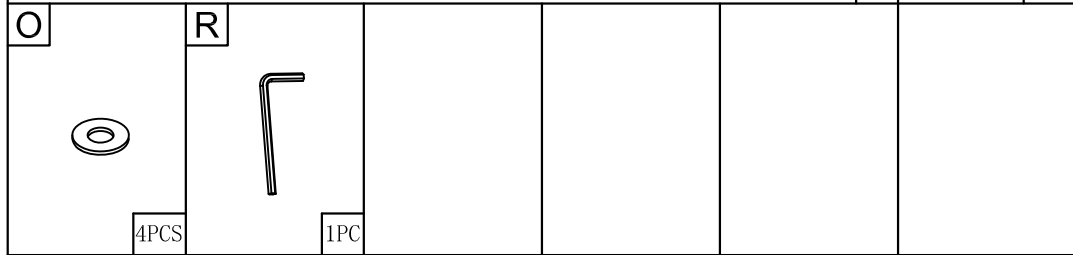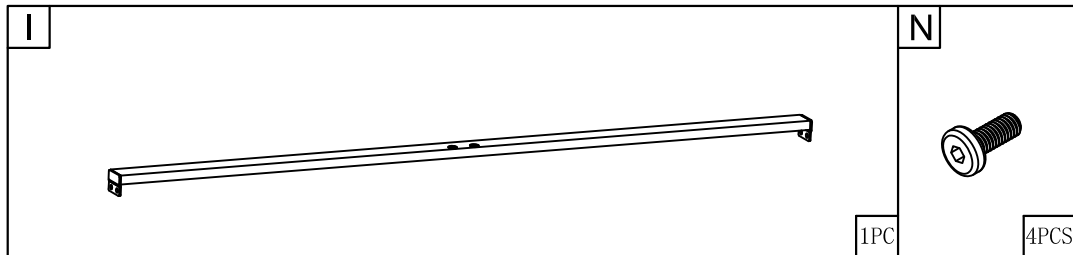

3


⚠ DO NOT TIGHTEN THE SCREWS COMPLETELY IN THIS STEP.

Use Part #I to connect the Post #A and #B, securing with 4 Bolts #N and 4 Washers #O.

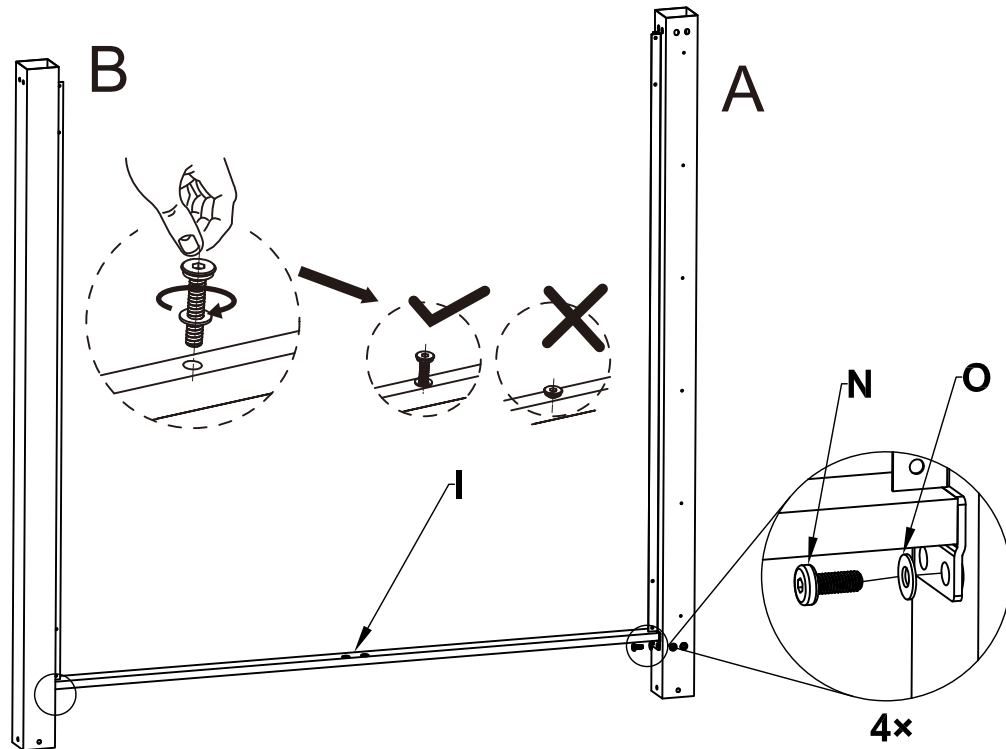


4

Please pay attention to the front and back sides.

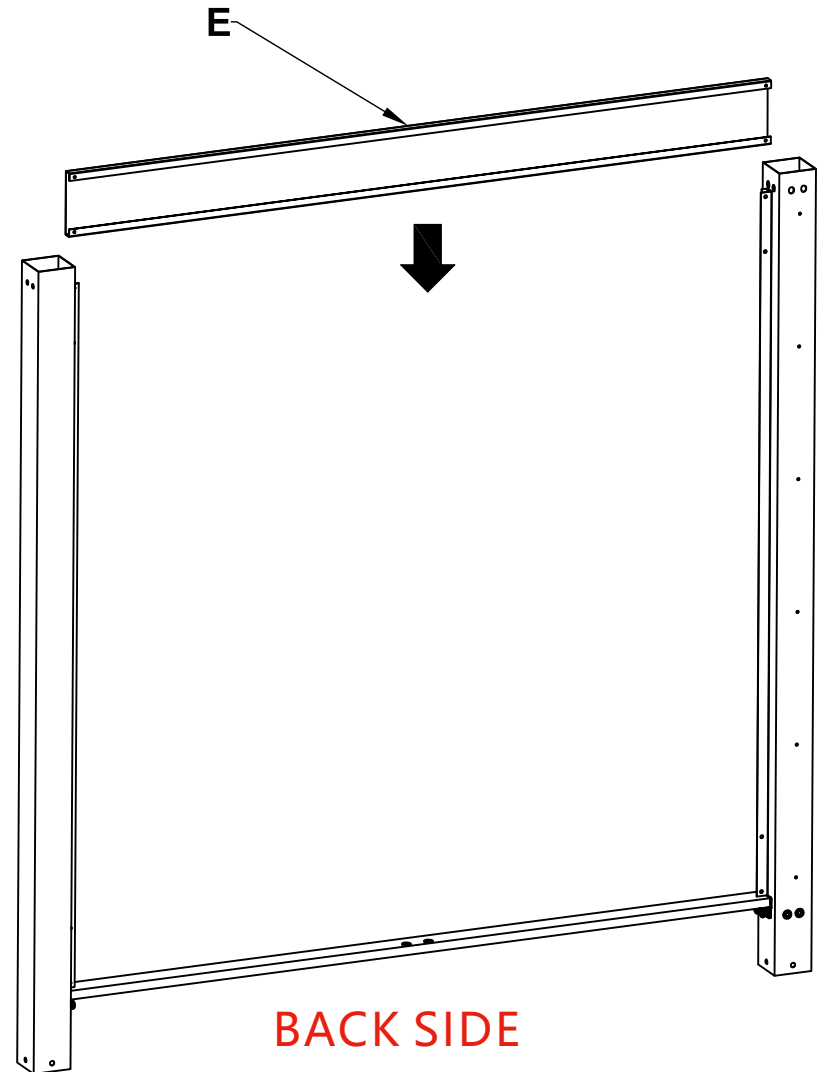


F

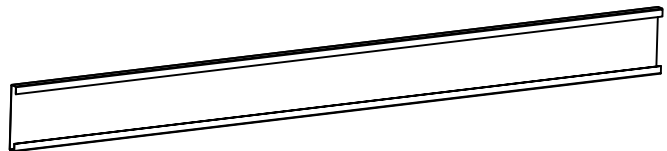


9PCS

E

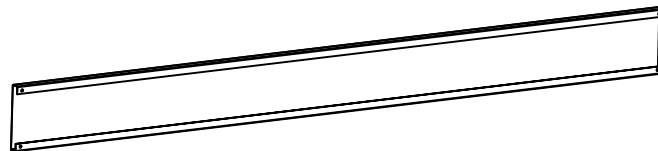


1PC

5

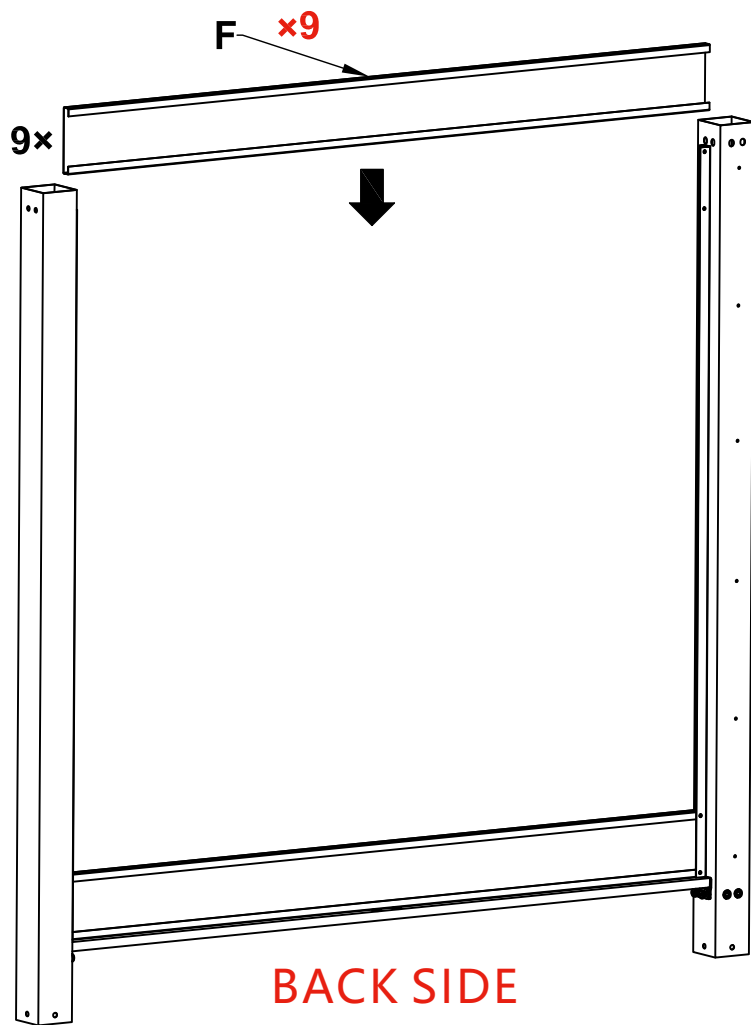

BACK SIDE

6

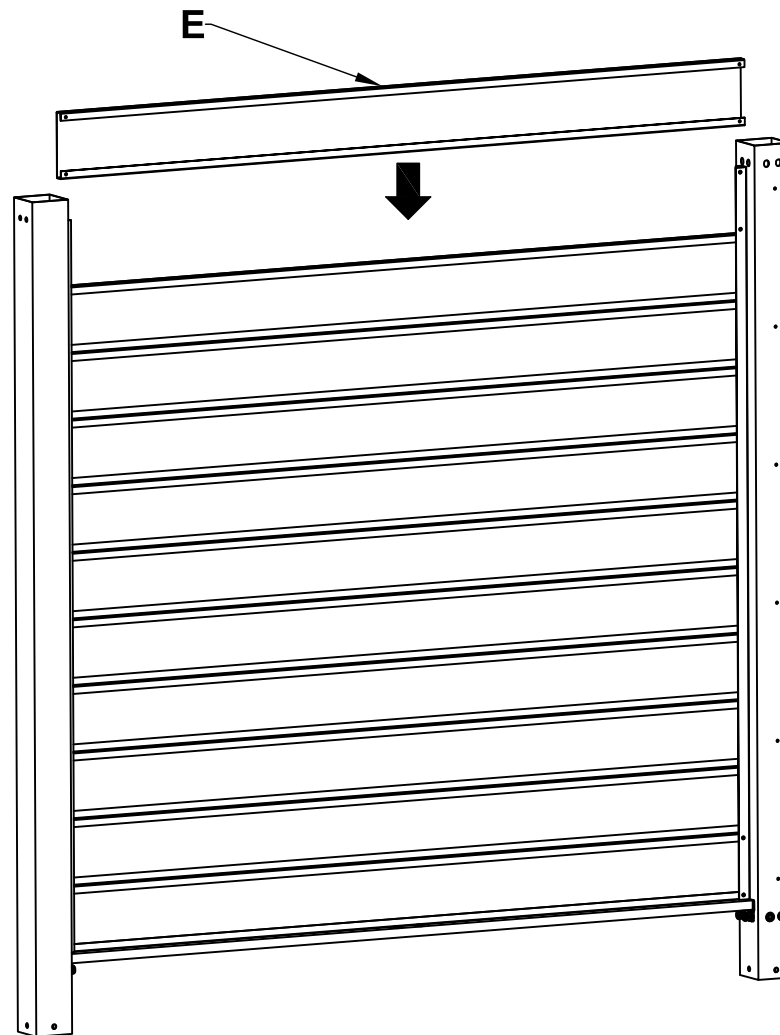

BACK SIDE

H



N



1PC

4PCS

G



1PC

O




4PCS

R



1PC


S



1PC

7


(1) Insert the Panel Edge Banding #H to fit the panel, use 4 Bolts #N and 4 Washers #O to fix the Panel Edge Banding #H onto the Posts.

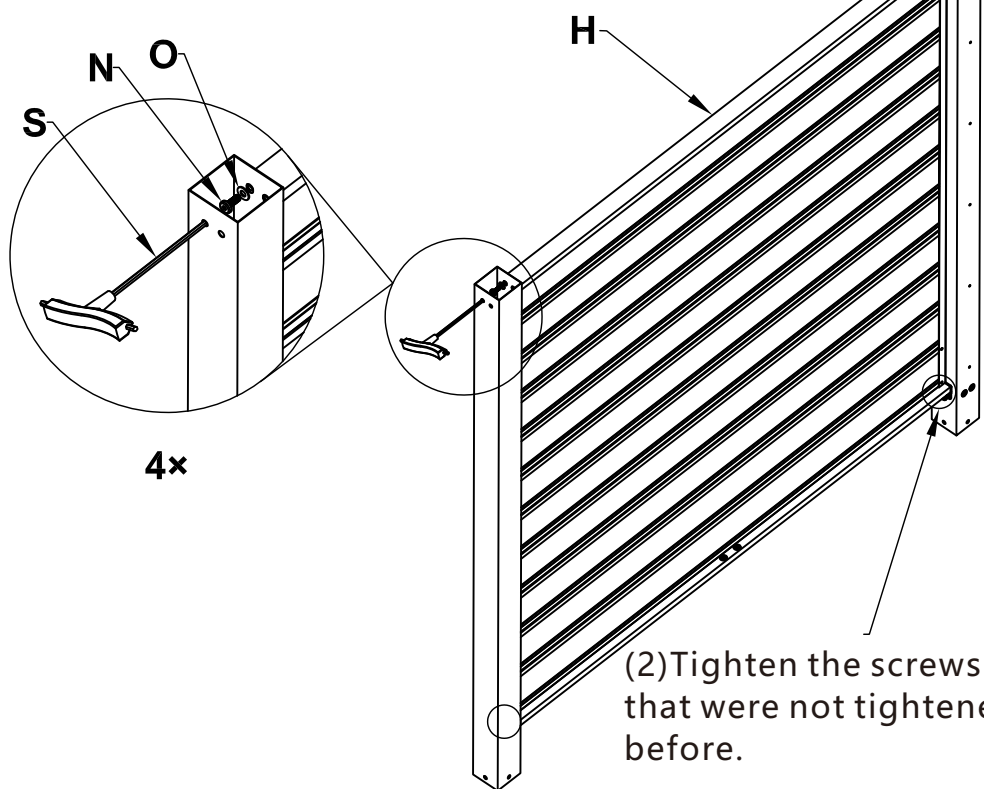

(2) Tighten the screws that were not tightened before.

8


Before installation, rotate each plastic clip 90° clockwise so that it is perpendicular to the connecting rod as shown.

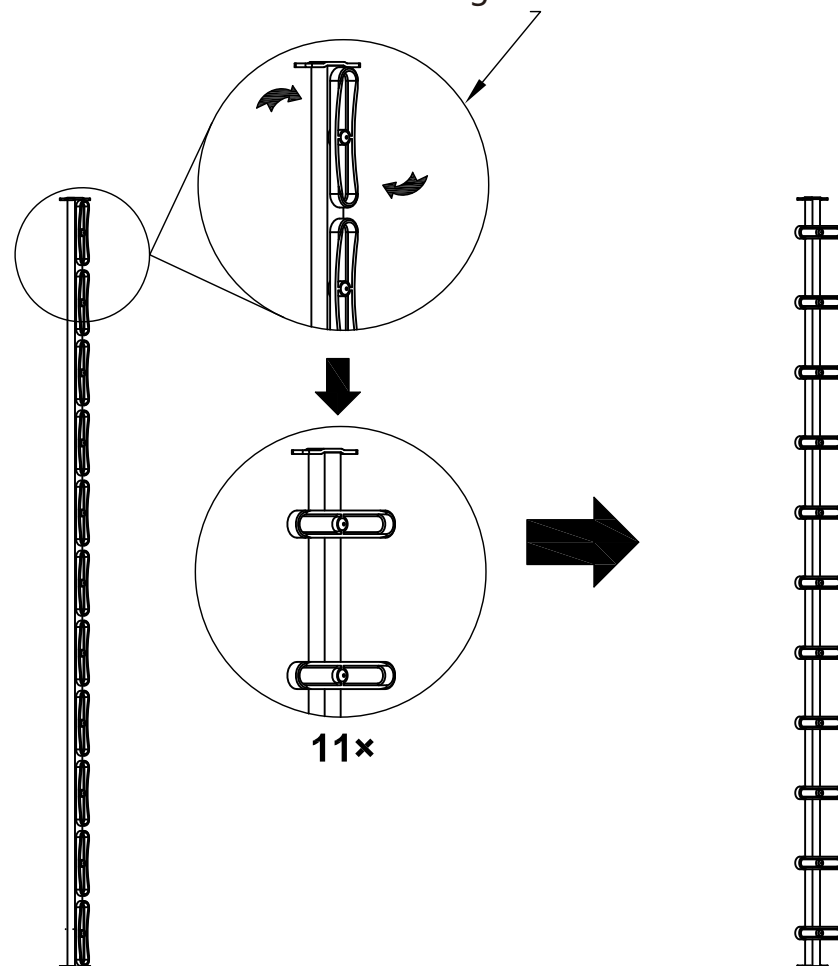

N	O	R			
					
4PCS	4PCS	1PC			


9

Secure Part #G with 4 Bolts #N and 4 Washers #O.

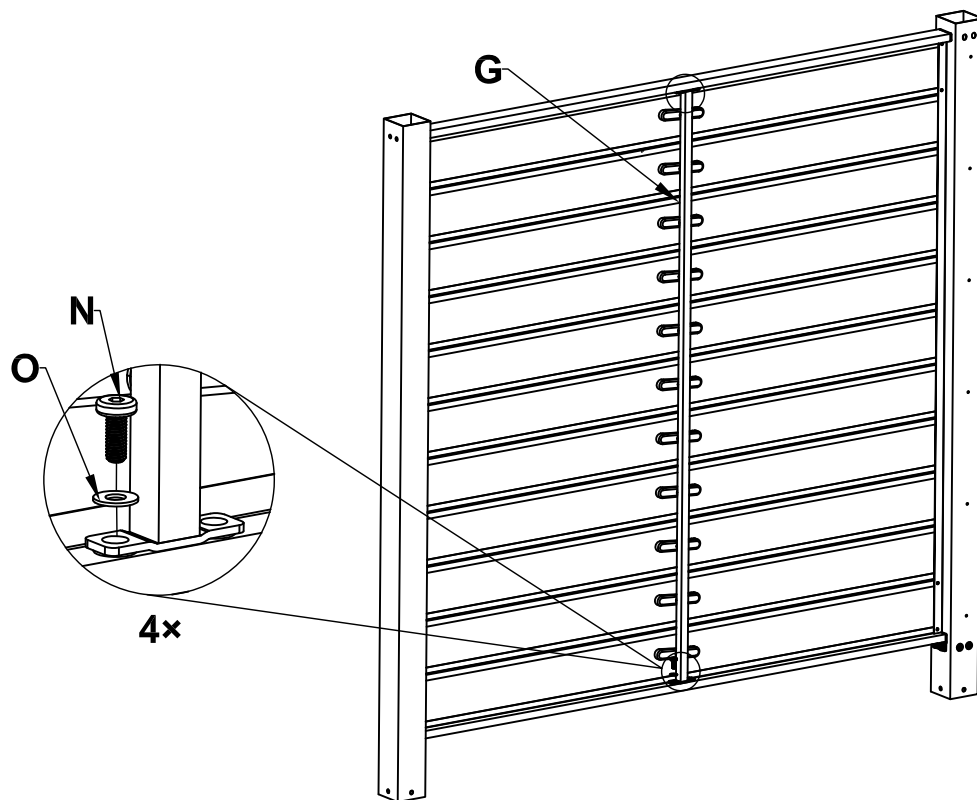


10

After installation, rotate each plastic clip for 90° to reset as shown.
Please wear protective gloves.

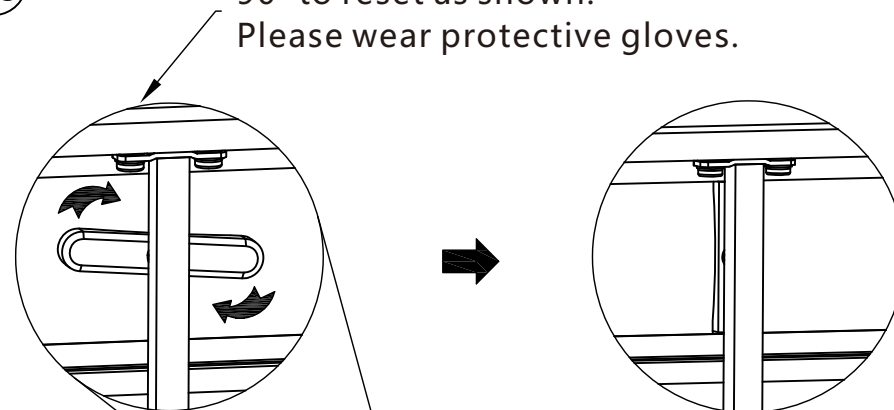

11x

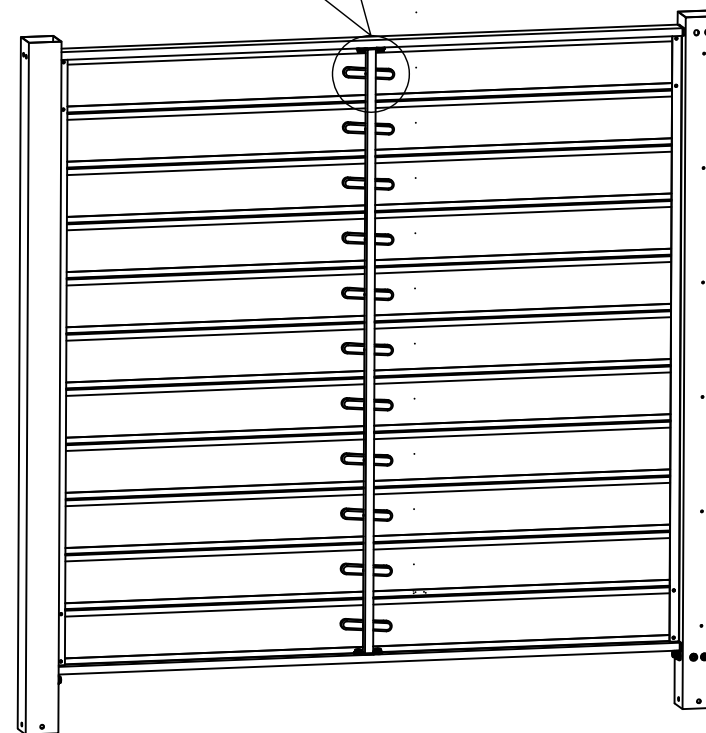

P



8PCS

D



P




1PC

6PCS


11



Use 8 Screws #P to secure Panels to the Posts.

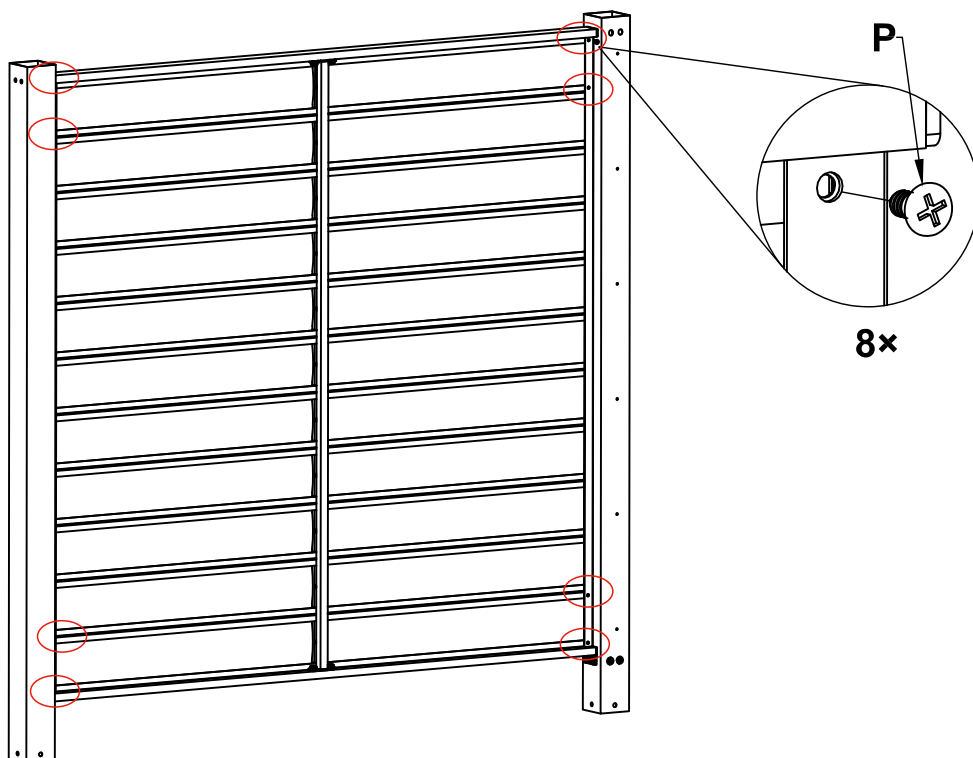


12

Attach Part #D to the Post #A, secure with 6 Screws #P.

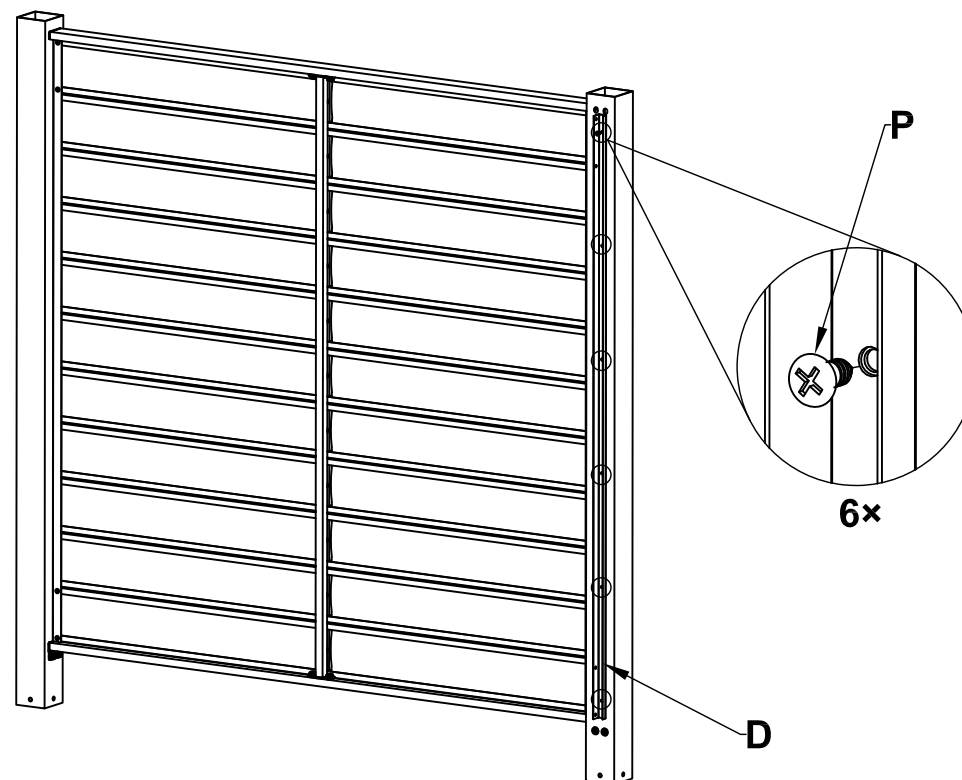


U  1PC	P  6PCS	I  1PC	N  4PCS				
D  1PC		O  4PCS	R  1PC				


- 13** Attach Part #D to the Post #U, secure with 6 Screws #P.

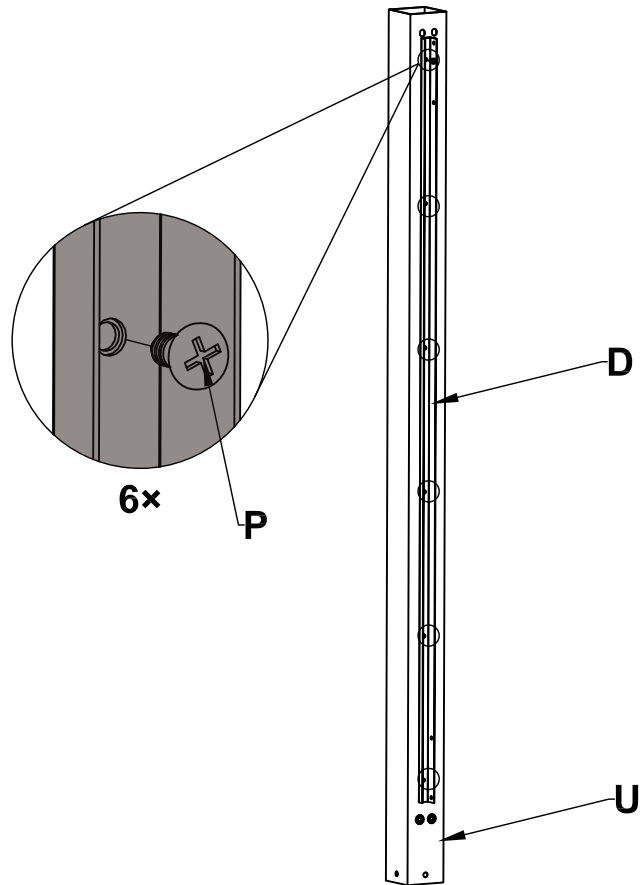

- 14** **⚠ DO NOT TIGHTEN THE SCREWS COMPLETELY IN THIS STEP.**
- Use Part #I to connect the Post #A and #U, securing with 4 Bolts #N and 4 Washers #O.

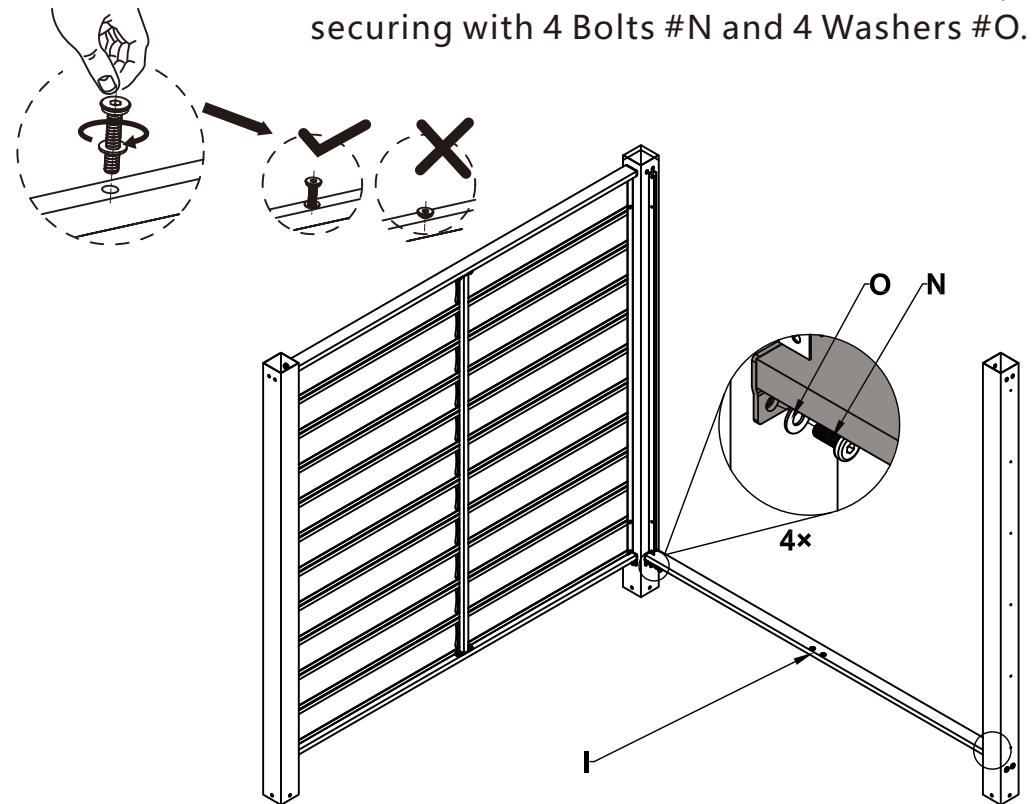


E

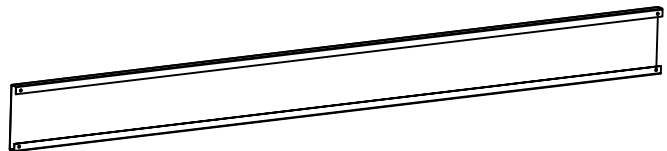

1PC


F

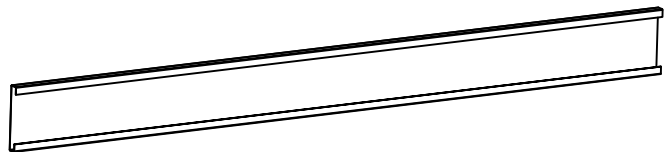


9PCS

15

Please insert Part #E and #F in the order as is shown.

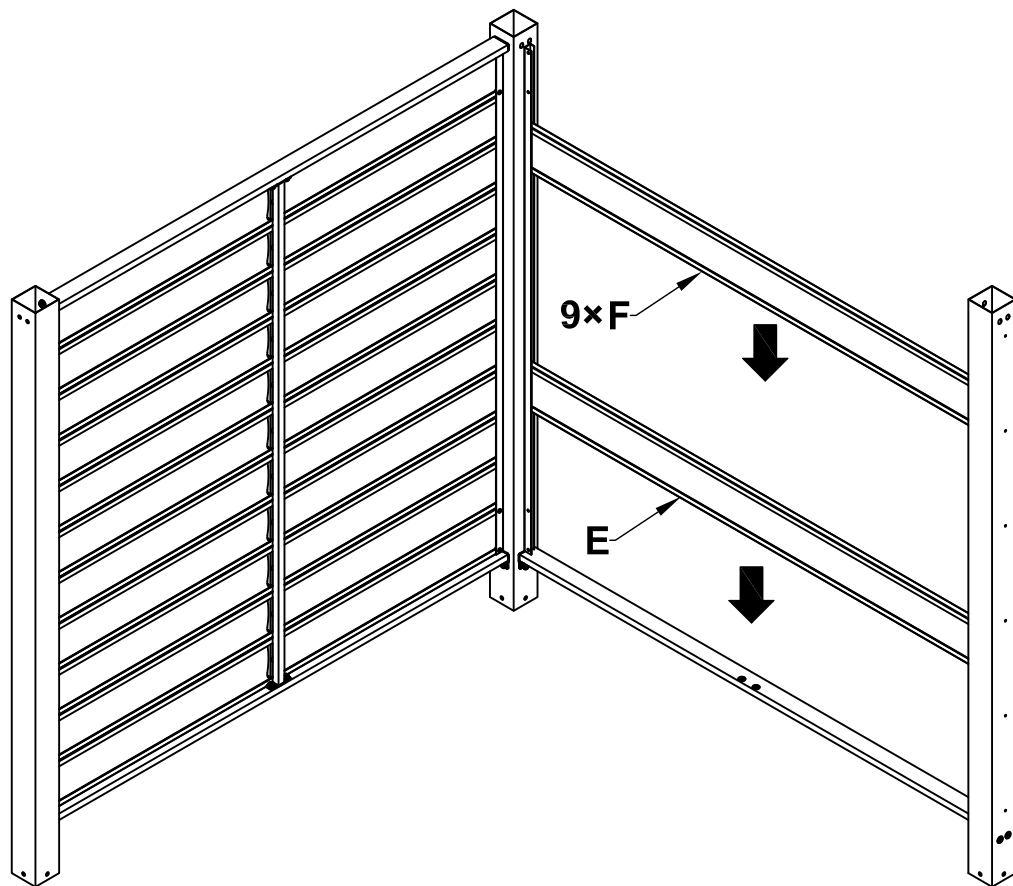


E

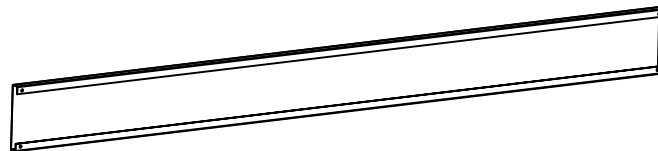

1PC

16

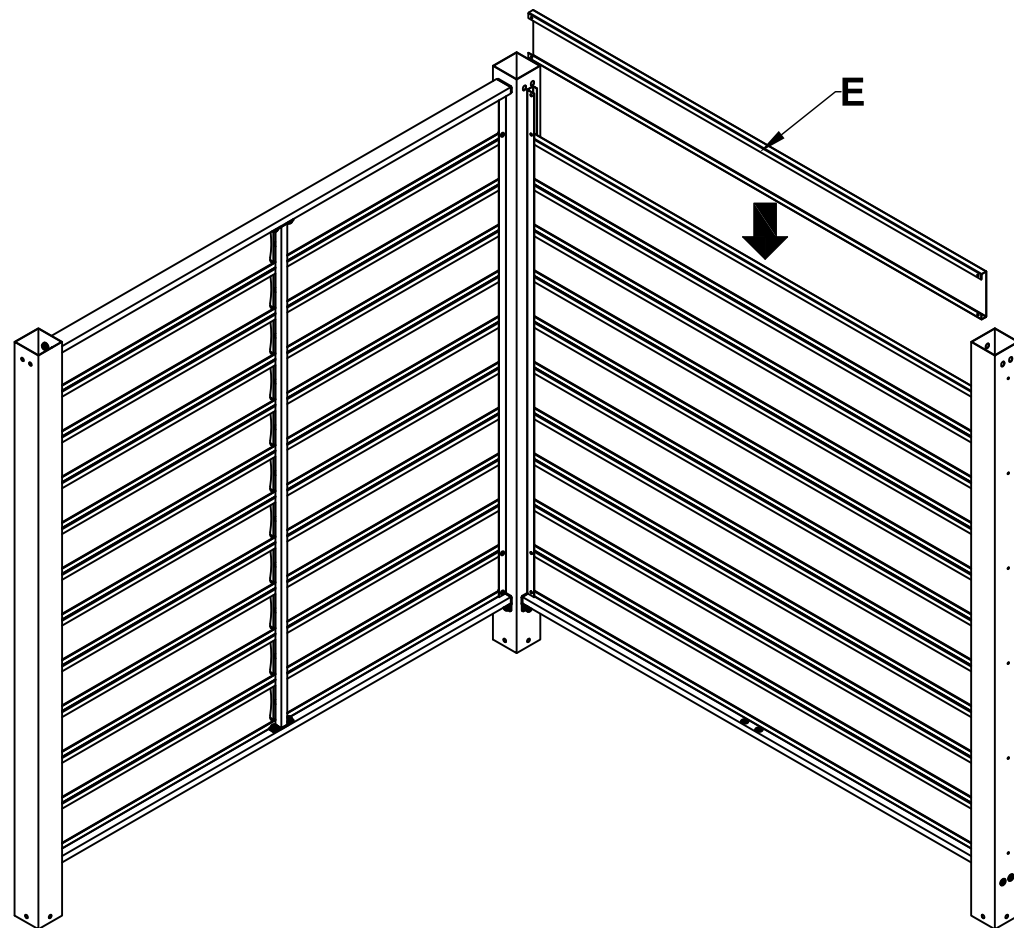

H




1PC

N



4PCS

G



1PC

O



4PCS

R



1PC


S



1PC

17


(1) Insert the Panel Edge Banding #H to fit the panel, use 4 Bolts #N and 4 Washers #O to fix the Panel Edge Banding #H onto the Posts.

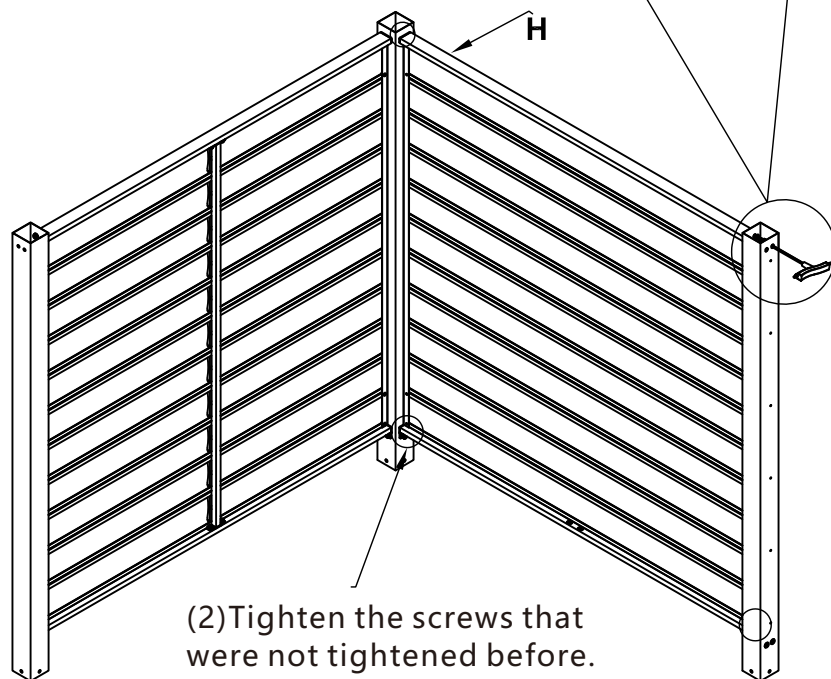

(2) Tighten the screws that were not tightened before.

18


Before installation, rotate each plastic clip 90° clockwise so that it is perpendicular to the connecting rod as shown.

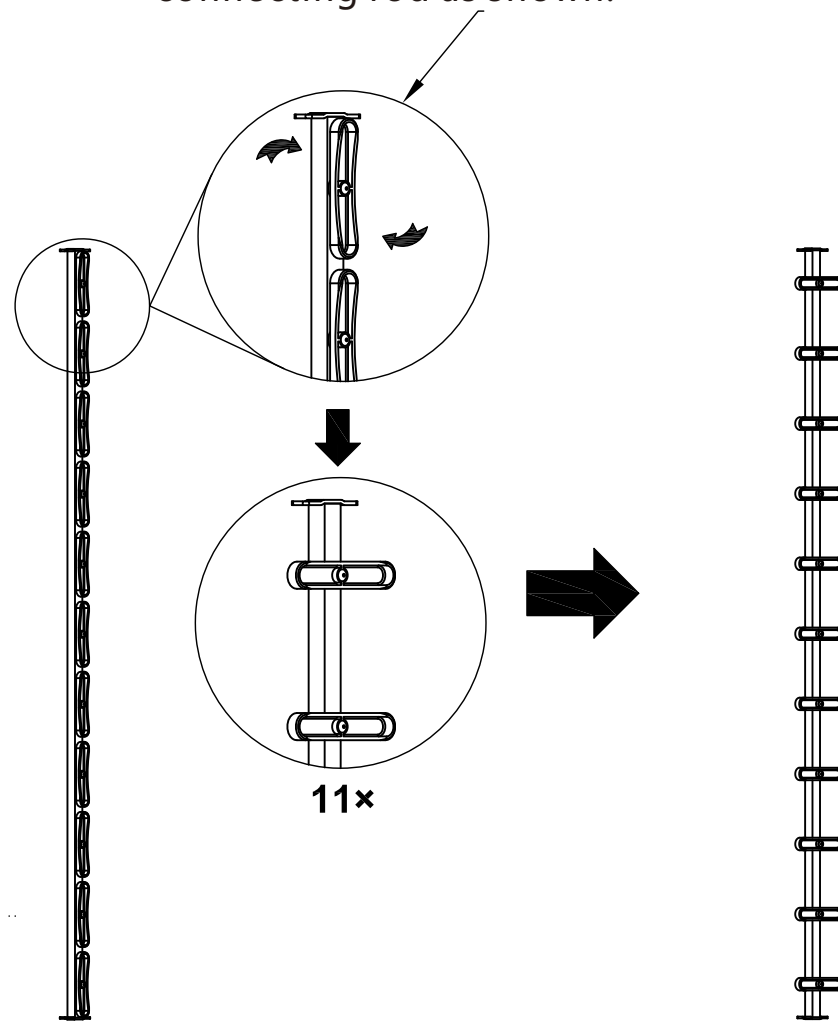

11x



O	R	N			
					
4PCS	1PC	4PCS			

19 Secure Part #G with 4 Bolts #N and 4 Washers #O.

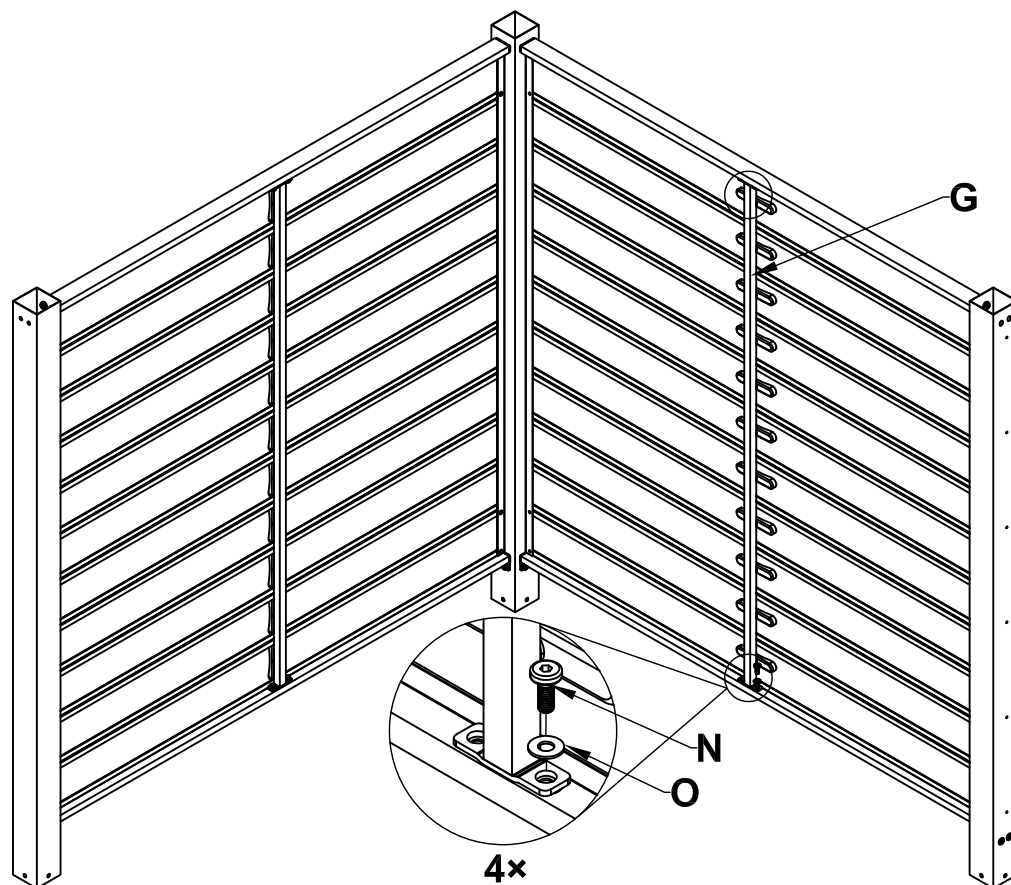

20

After installation, rotate each plastic clip for 90° to reset as shown.
Please wear protective gloves.

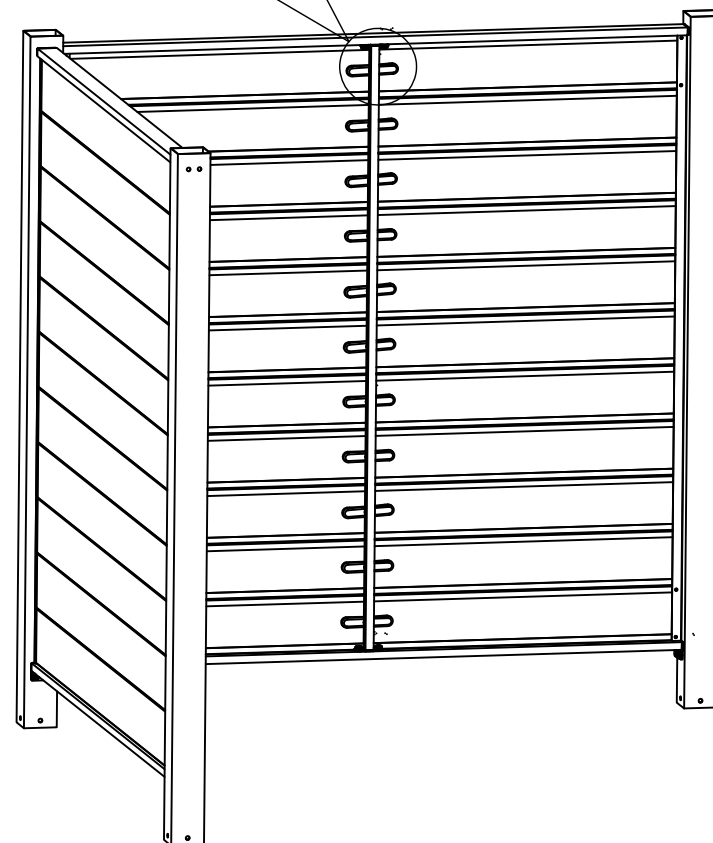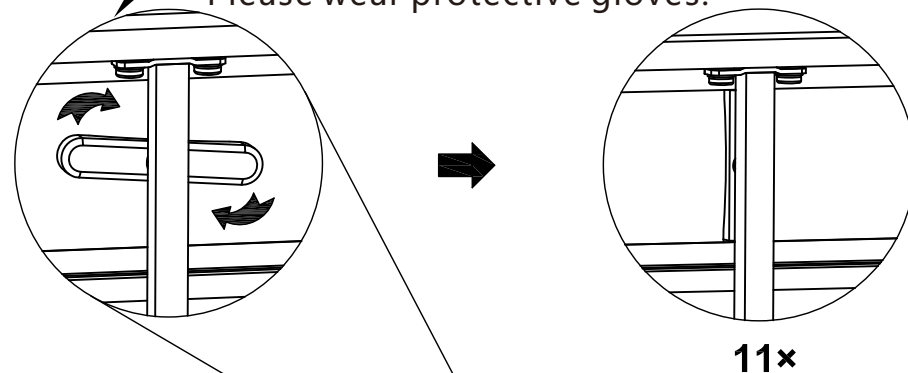


P



8PCS

21

Use 8 Screws #P to secure Panels to the Posts.

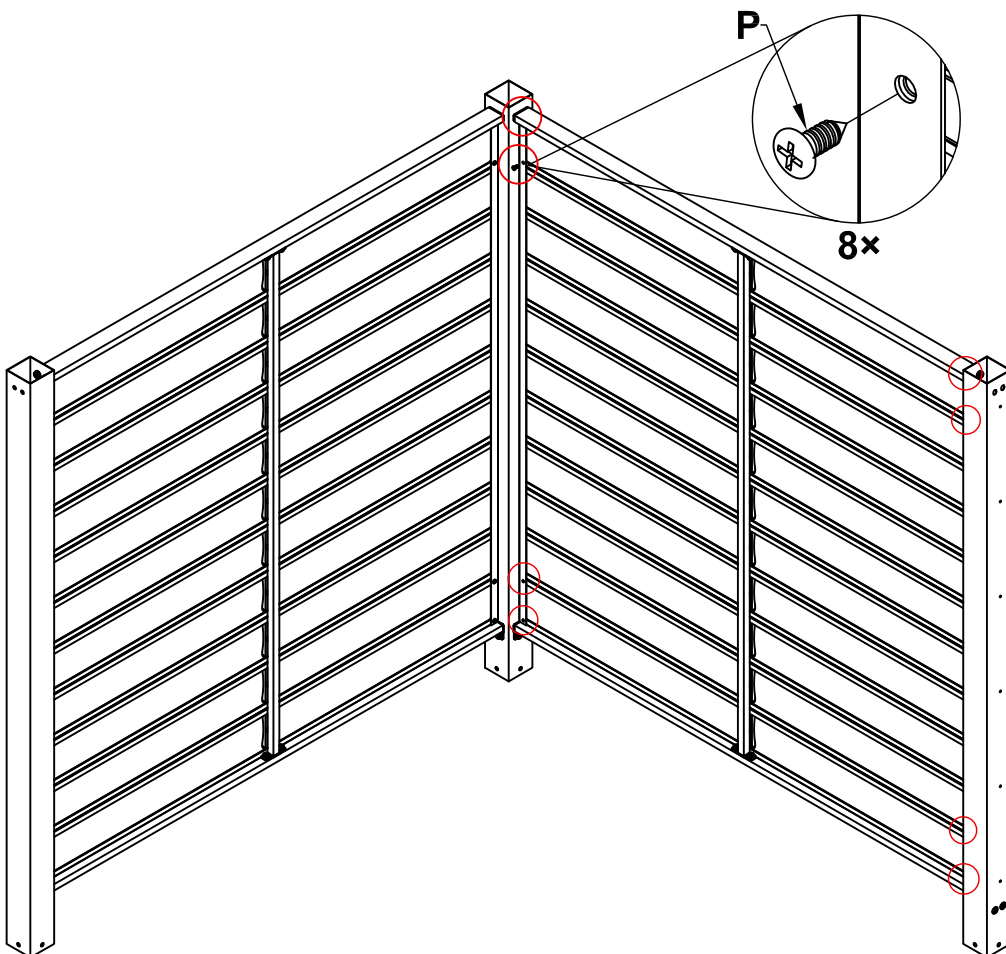

D



P




1PC


6PCS

22

Attach Part #D to the Post #U, secure with 6 Screws #P.

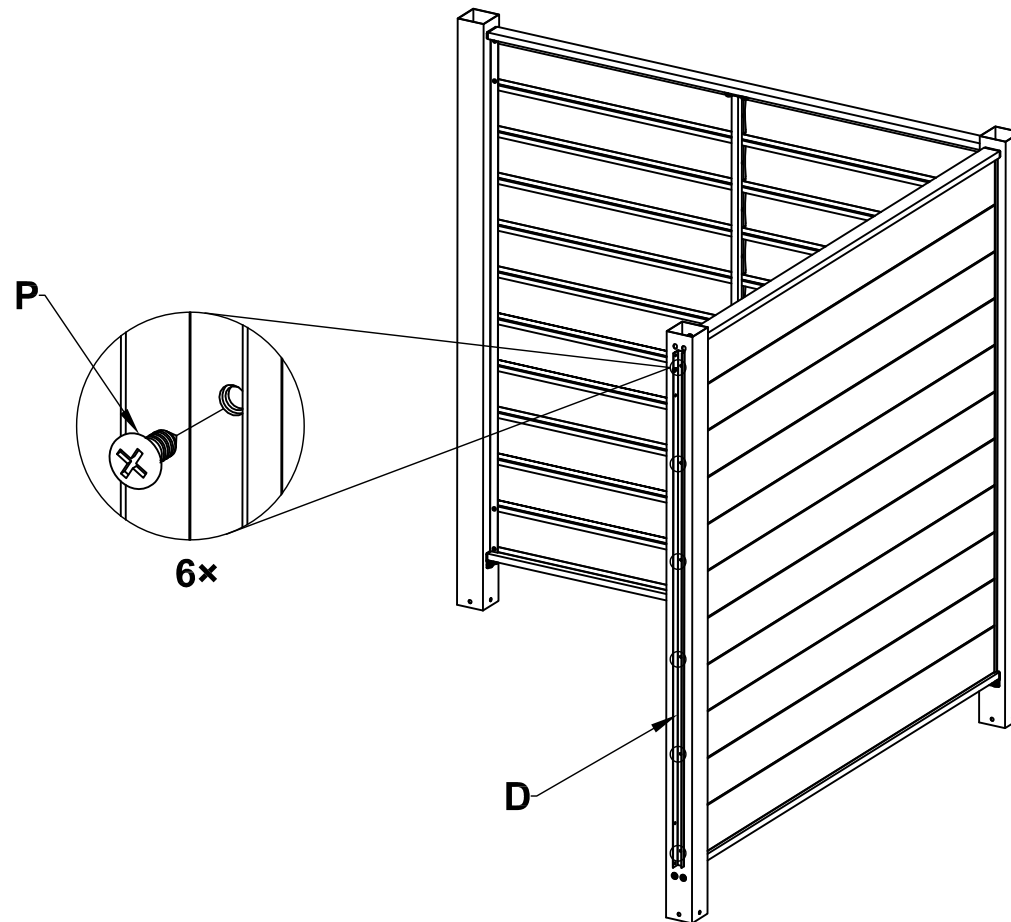

C

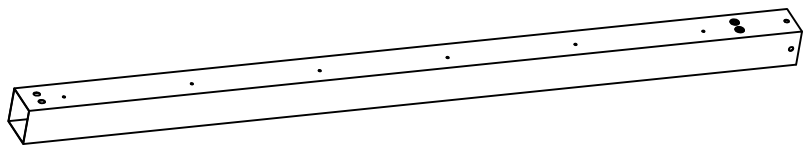

1PC

P



6PCS

I



1PC

N



4PCS

D



1PC

O



4PCS


R



1PC

23




Attach Part #D to the Post #C, secure with 6 Screws #P.

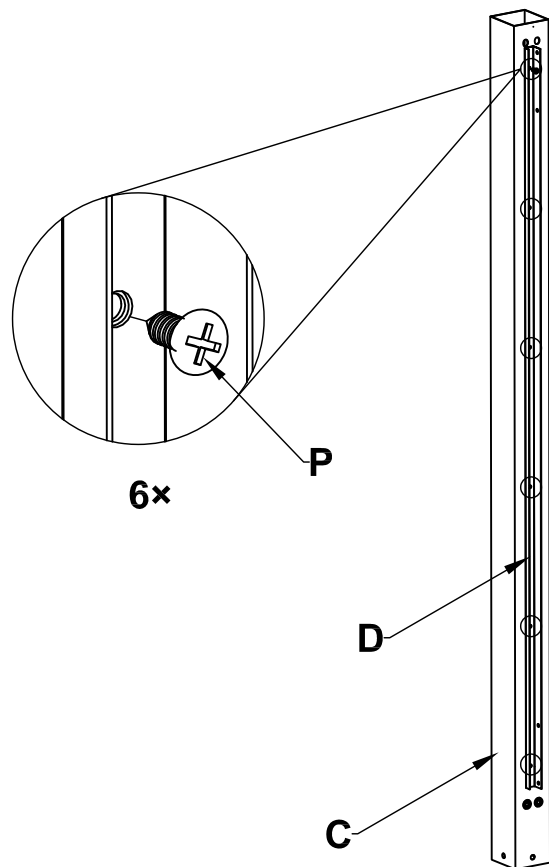


24

⚠ DO NOT TIGHTEN THE SCREWS COMPLETELY IN THIS STEP.


Use Part #I to connect the Post #U and #C, securing with 4 Bolts #N and 4 Washers #O.

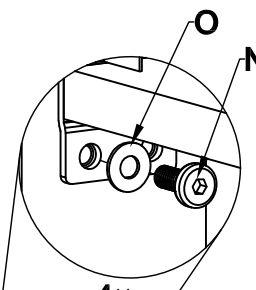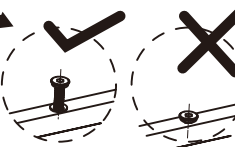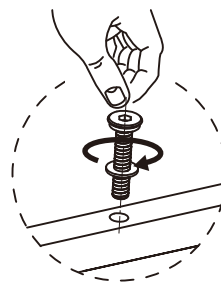

4x

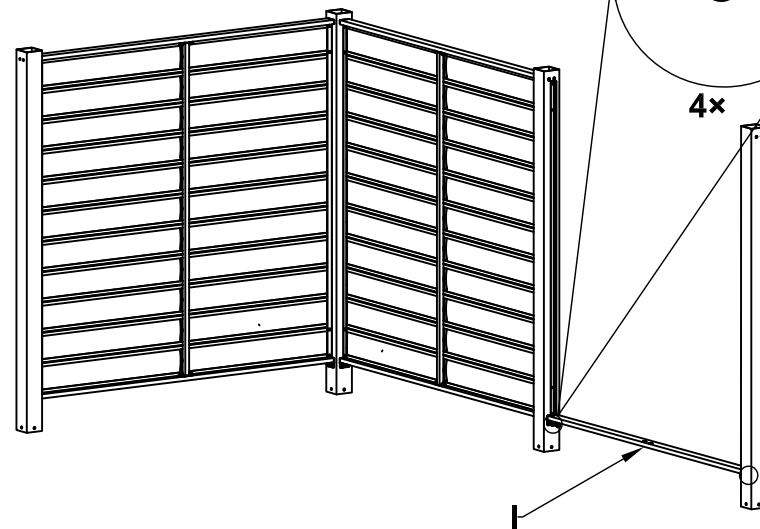


E

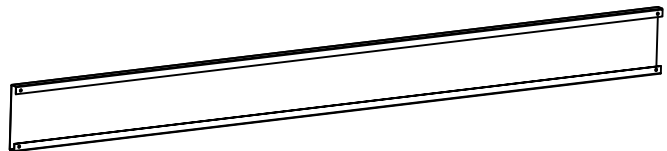

1PC


F

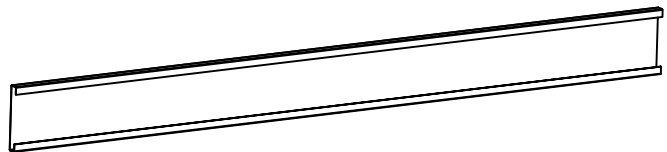


9PCS

25

Please insert Part #E and #F in the order as is shown.

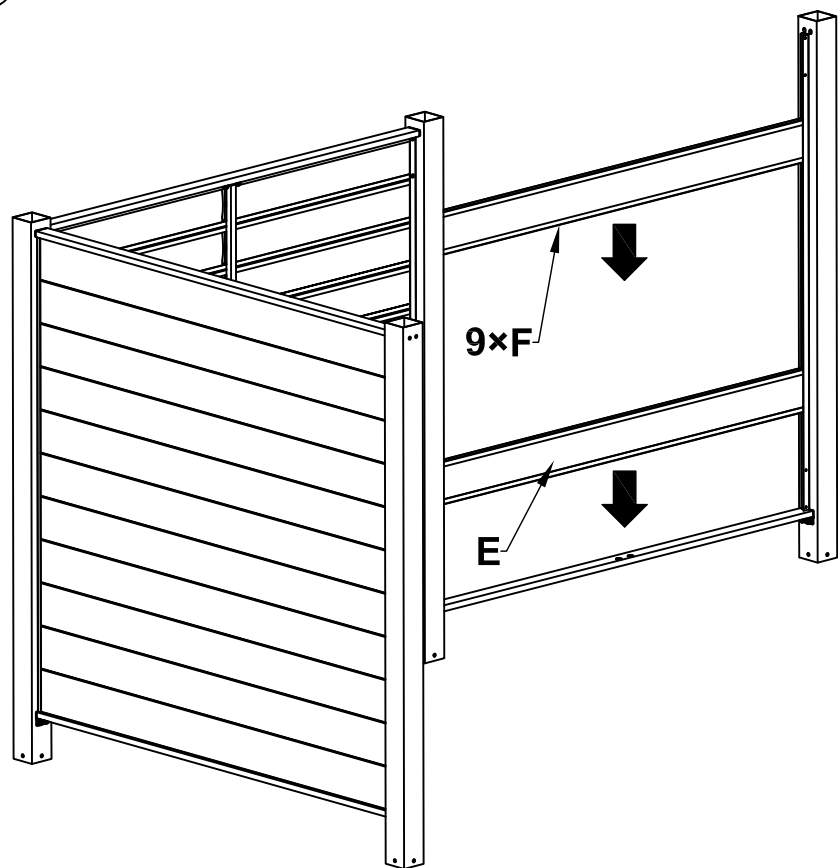


E

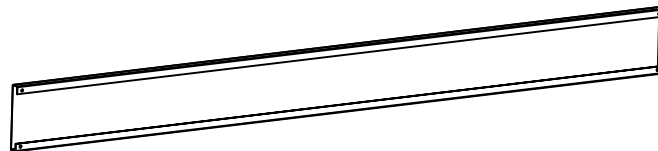

1PC

26

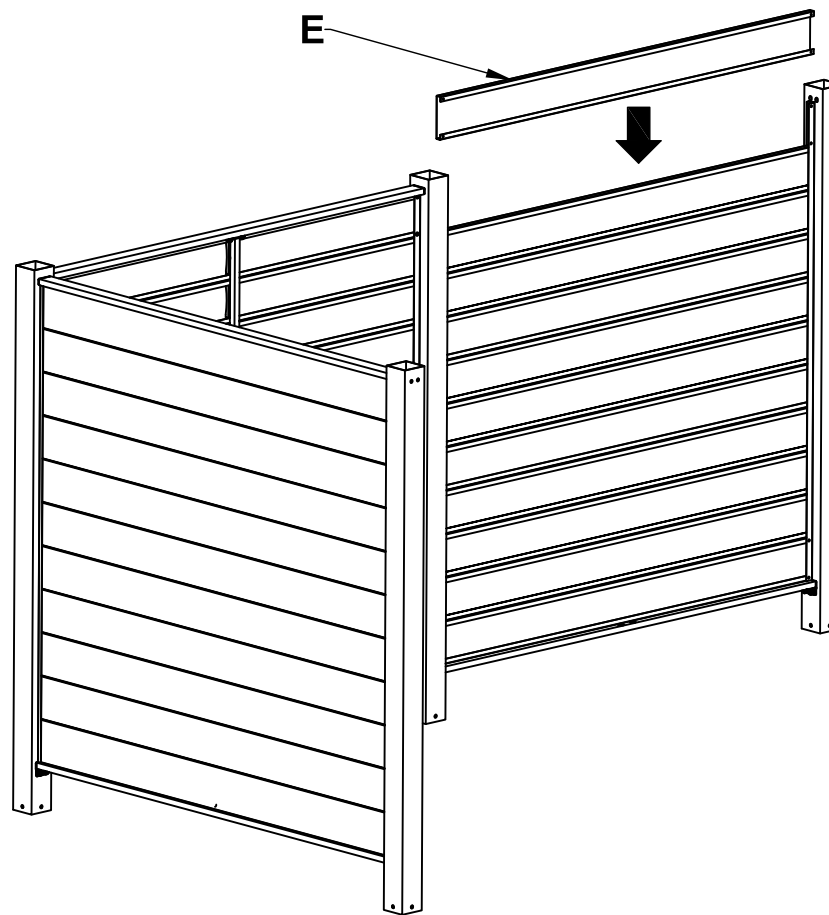

H



N



1PC

4PCS

G



1PC

O




4PCS

R



1PC


S



1PC

27


(1) Insert the Panel Edge Banding #H to fit the panel, use 4 Bolts #N and 4 Washers #O to fix the Panel Edge Banding #H onto the Posts.

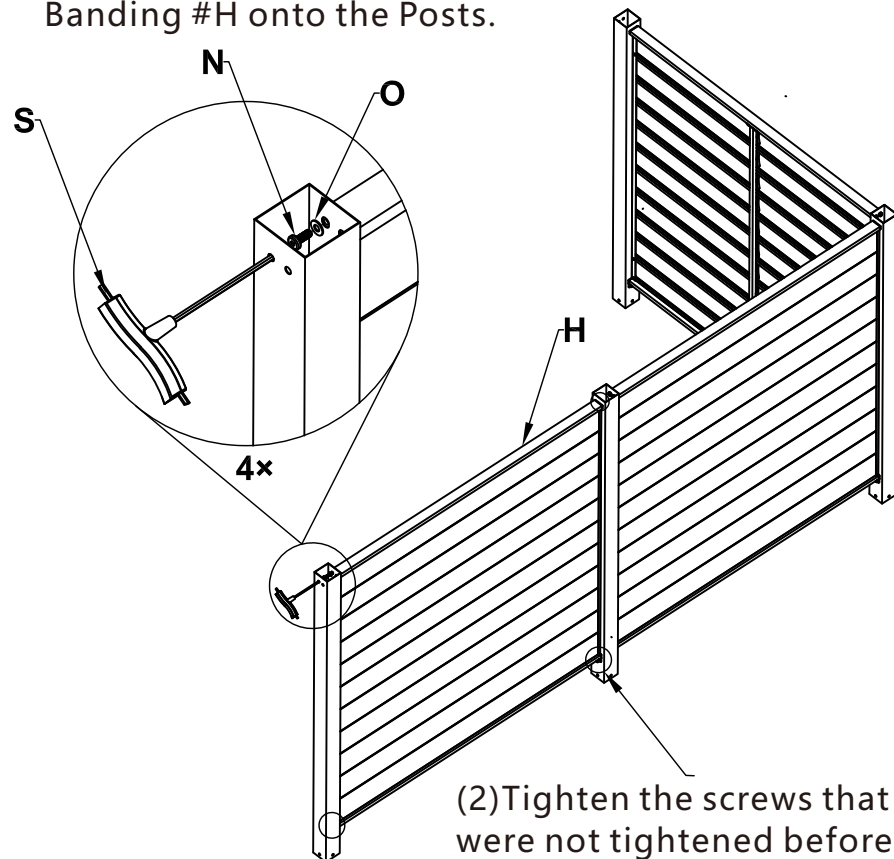

(2) Tighten the screws that were not tightened before.

28

Before installation, rotate each plastic clip 90° clockwise so that it is perpendicular to the connecting rod as shown.

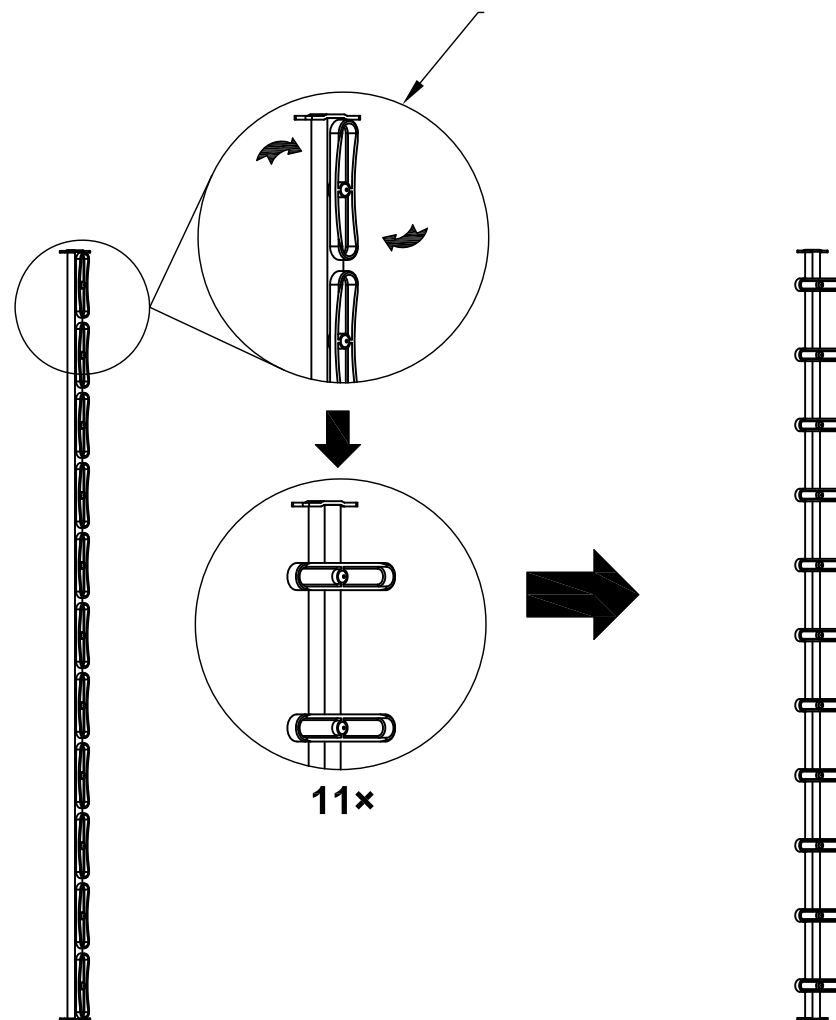

N



4PCS

O



4PCS


R



1PC


29

Secure Part #G with 4 Bolts #N and 4 Washers #O.

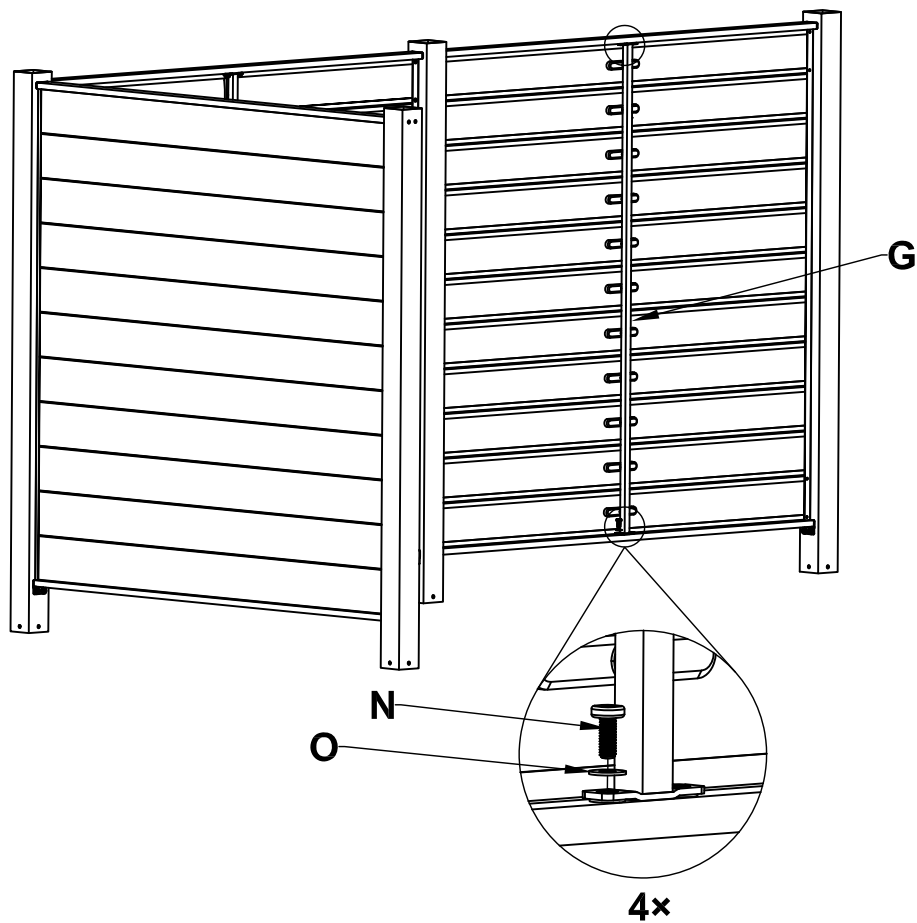

30

After installation, rotate each plastic clip for 90° to reset as shown.
Please wear protective gloves.

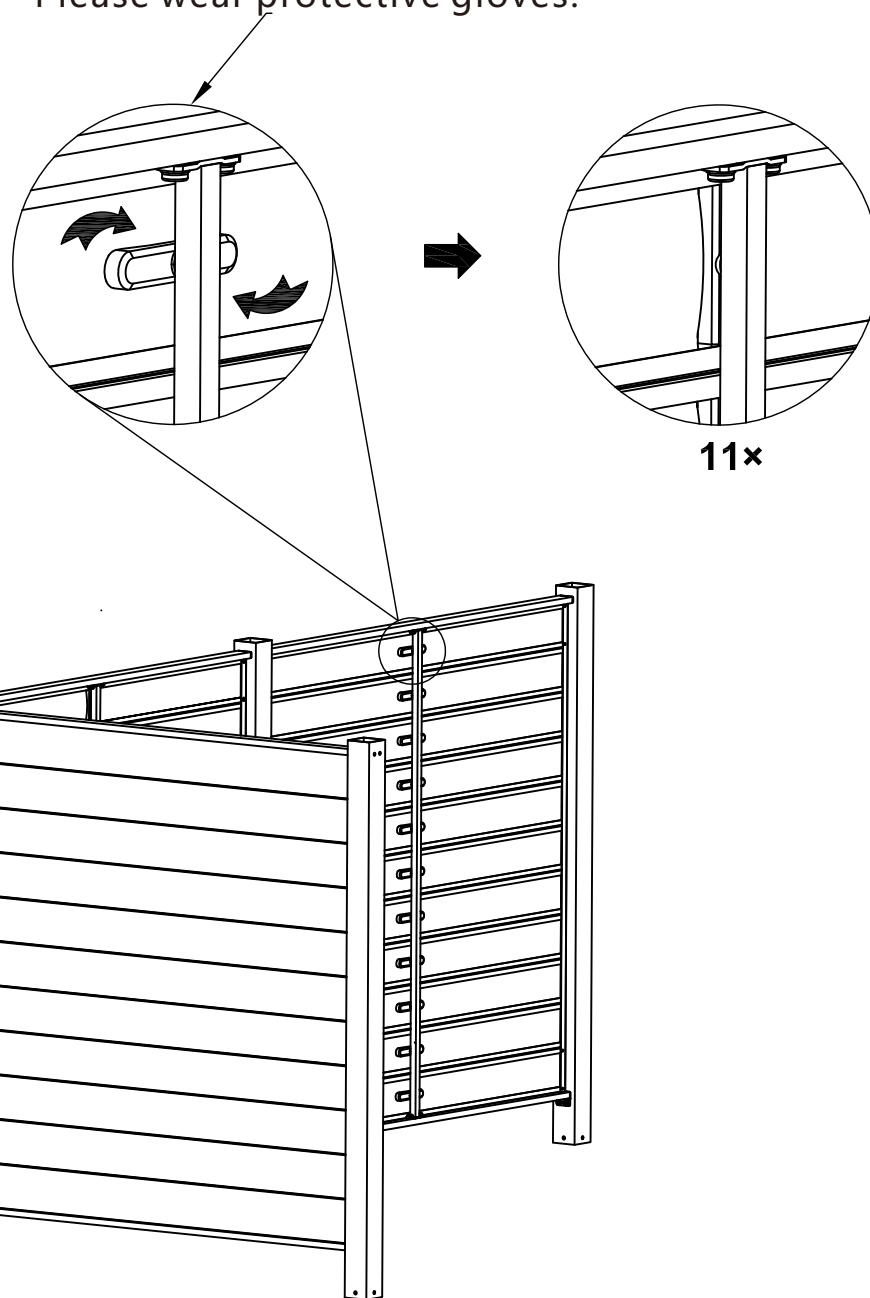

P



8PCS


M



4PCS


31

Use 8 Screws #P to secure Panels to the Posts.

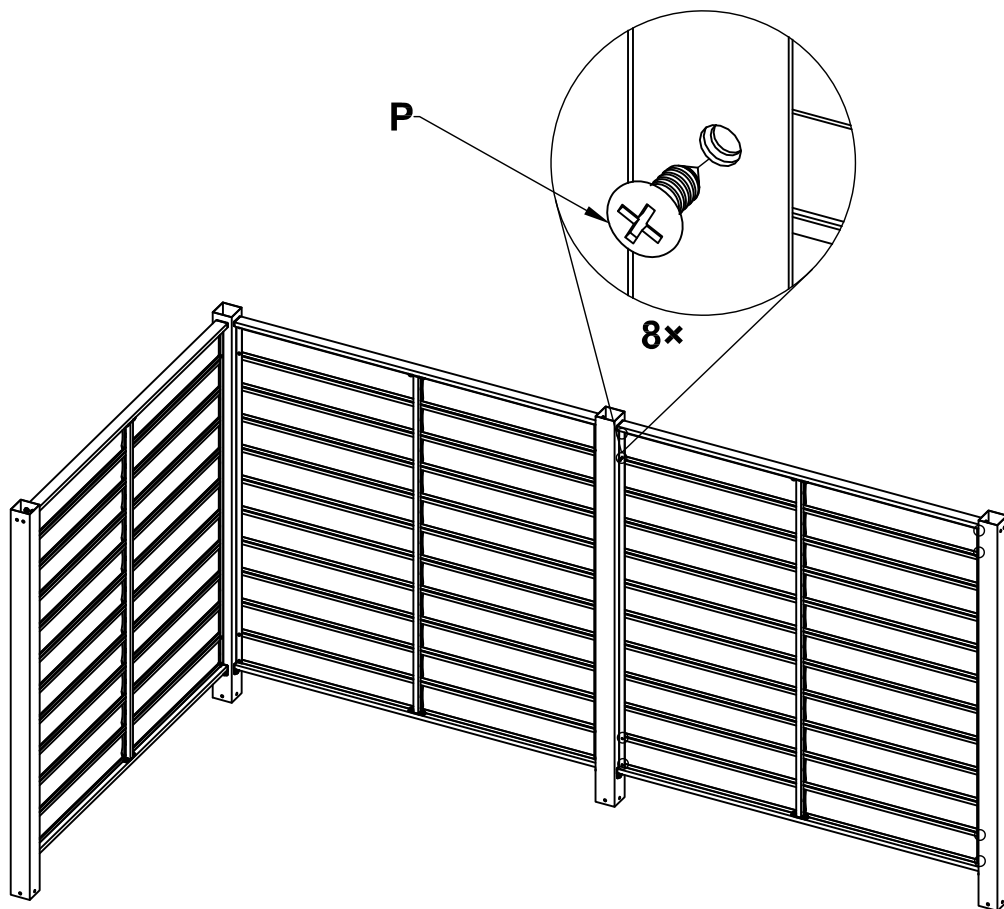

32

Install the 4 Plastic Cover #Monto the Posts.

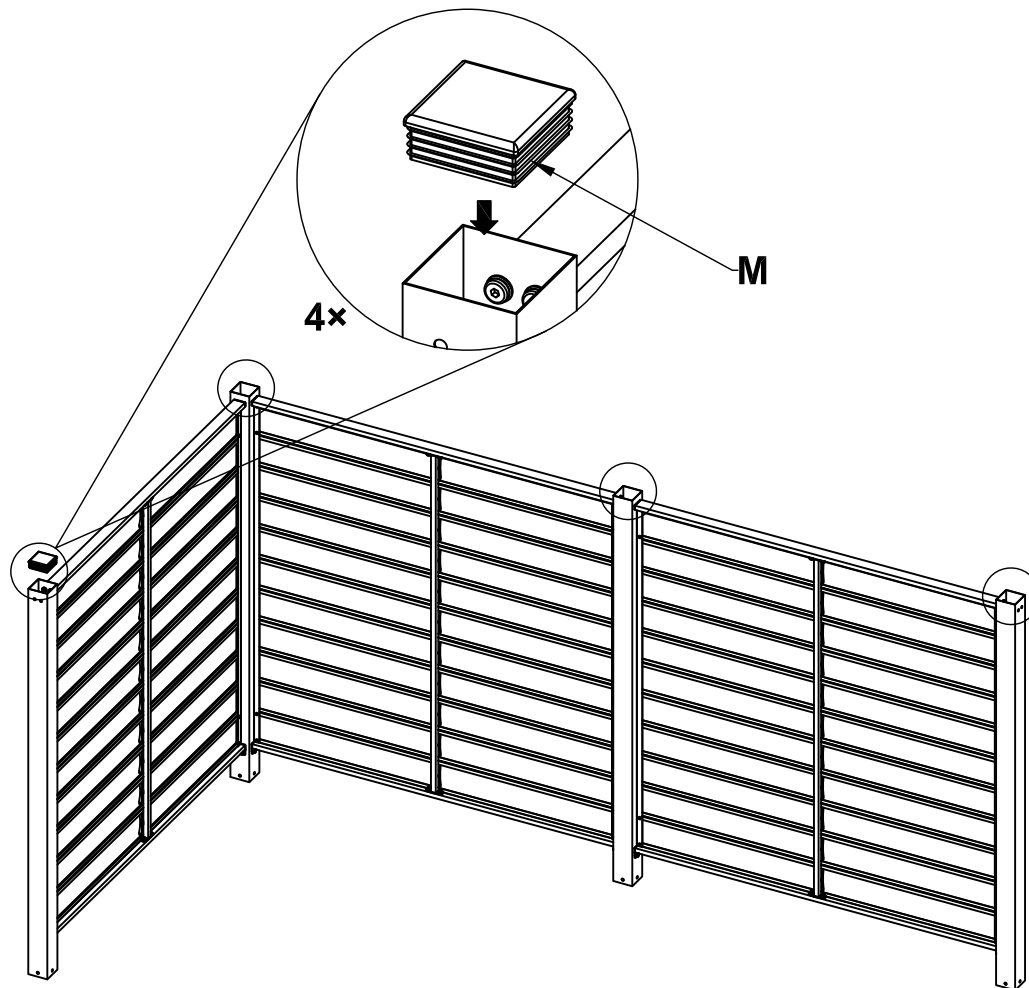

Q




4PCS

J



4PCS

K



4PCS

N



16PCS

R




1PC

33

Insert the 4 Plastic Caps #Q to the Post #B and #C.

4x


Q

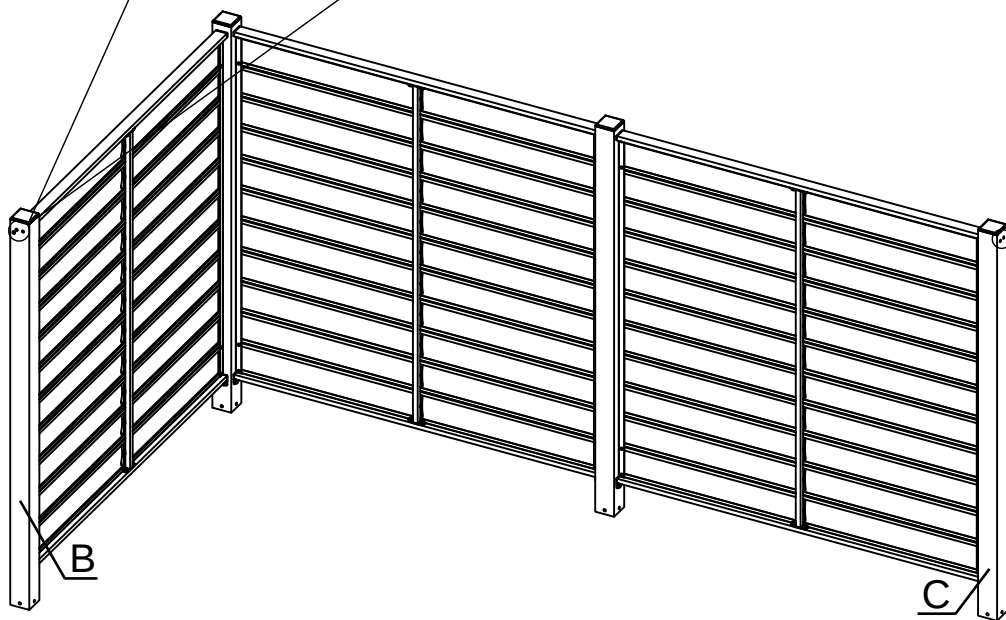

34


! Install this step if you need to fix it to the grassland. Otherwise please skip this step.

Insert Part #K into Part #J, secure with 4 Bolts #N.

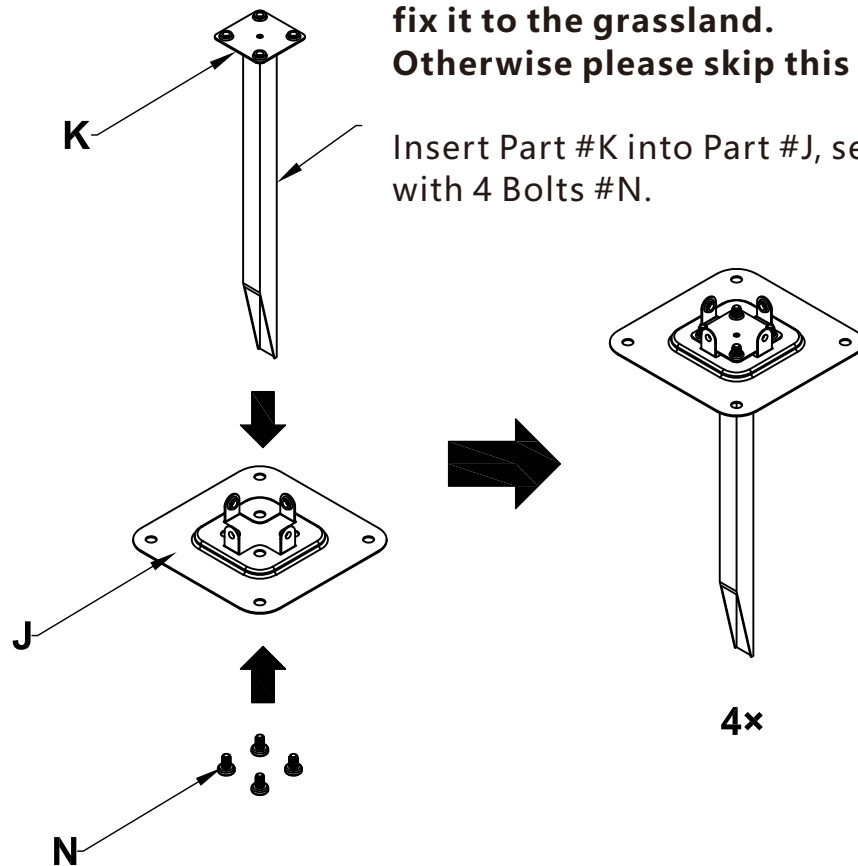

35


Based on the Posts positions, hammer the assembled Ground Stake into the grassland, then insert the assembled Panels into the Ground Stake (or Part #J).

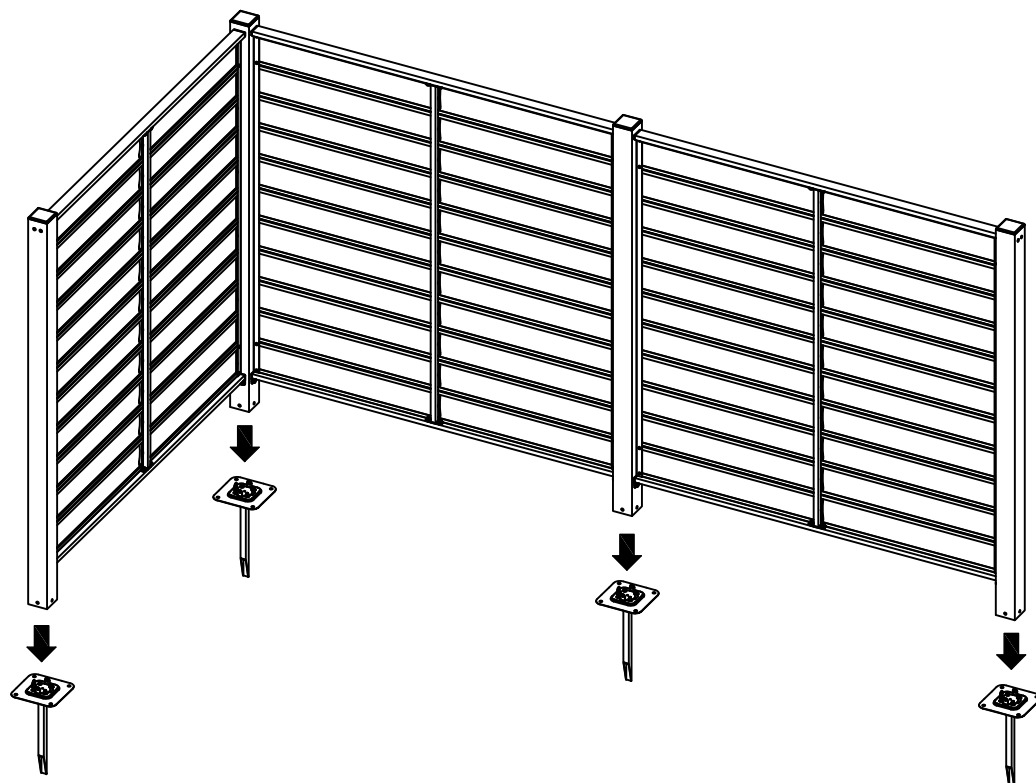

N	O	R			
					
16PCS	16PCS	1PC			

36

Use 16 Bolts #N and 16 Washers #O to secure the Poles to the Ground Stake (or Part #J).

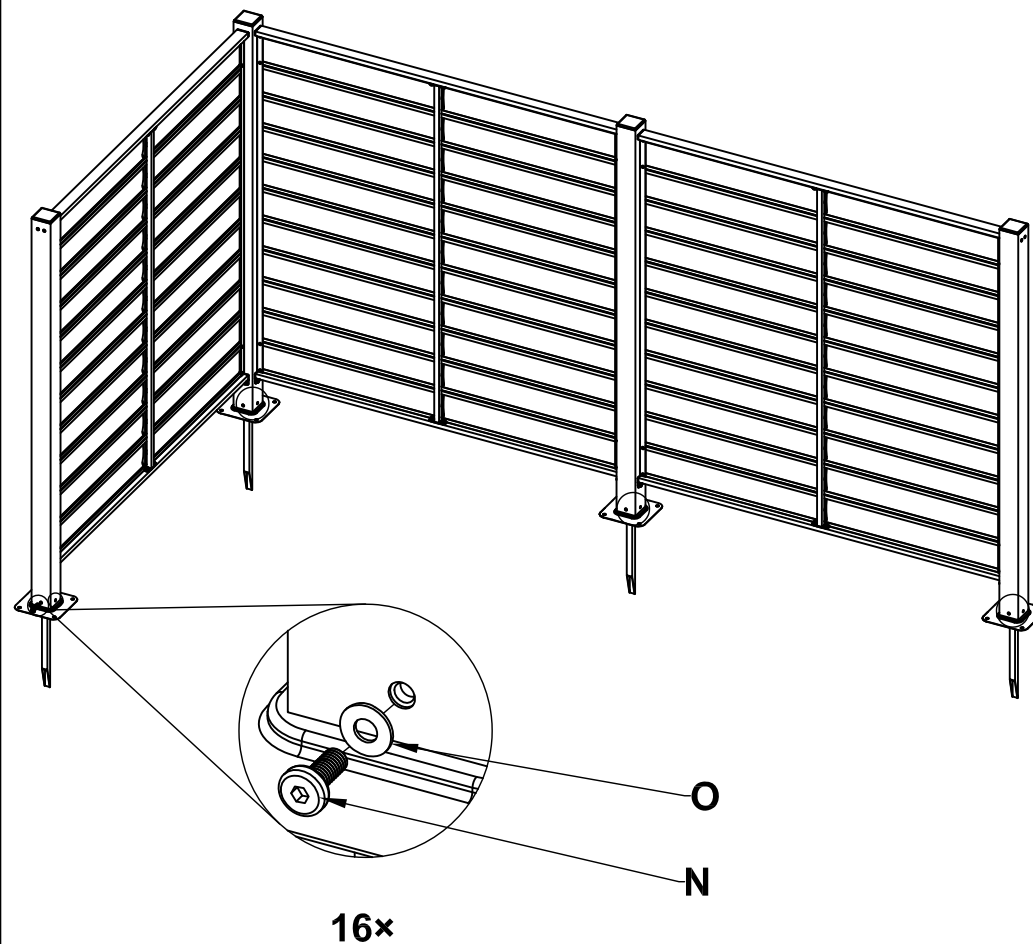


L



16PCS

37

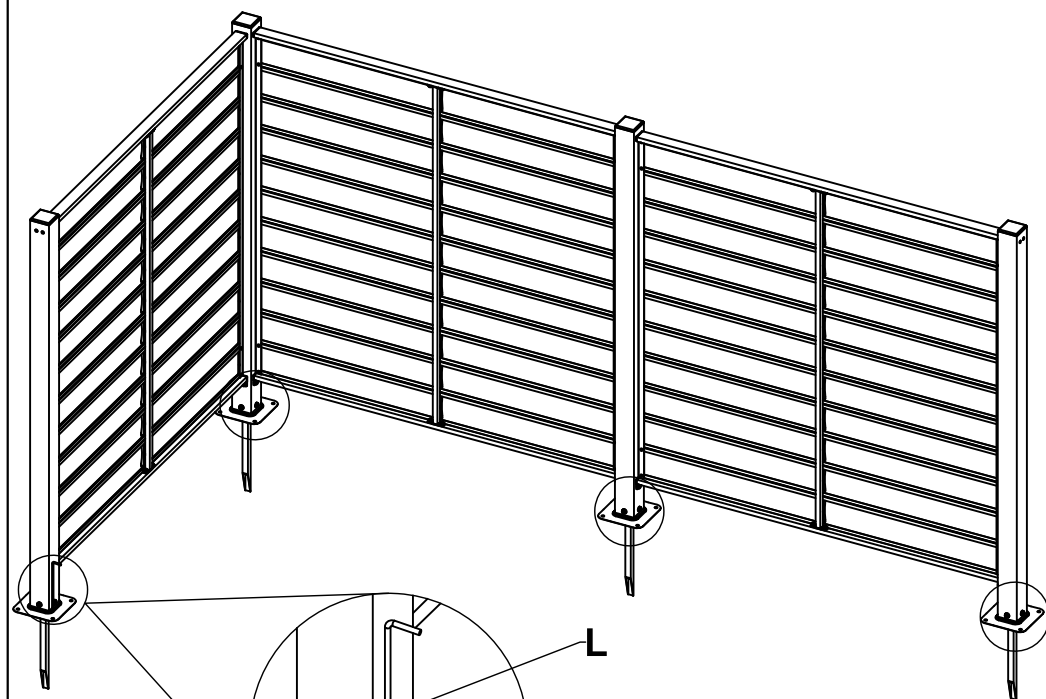


L

If it is installed on the
grassland, add 16 Ground
Nails #L for fixation.

16x

38

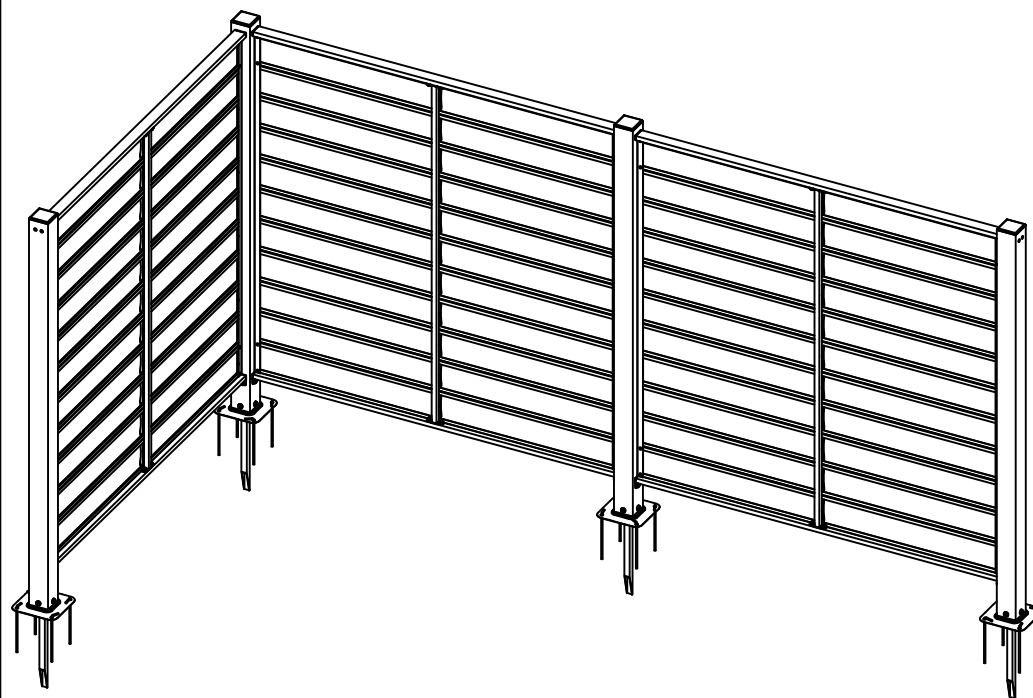



RESORT COMFORT IN YONR
OWN BACKYARD

Support:



Business cooperation contact email:

marketing@domioutdoorliving.com

After-sales contact email:

service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.