


Assembly Instructions

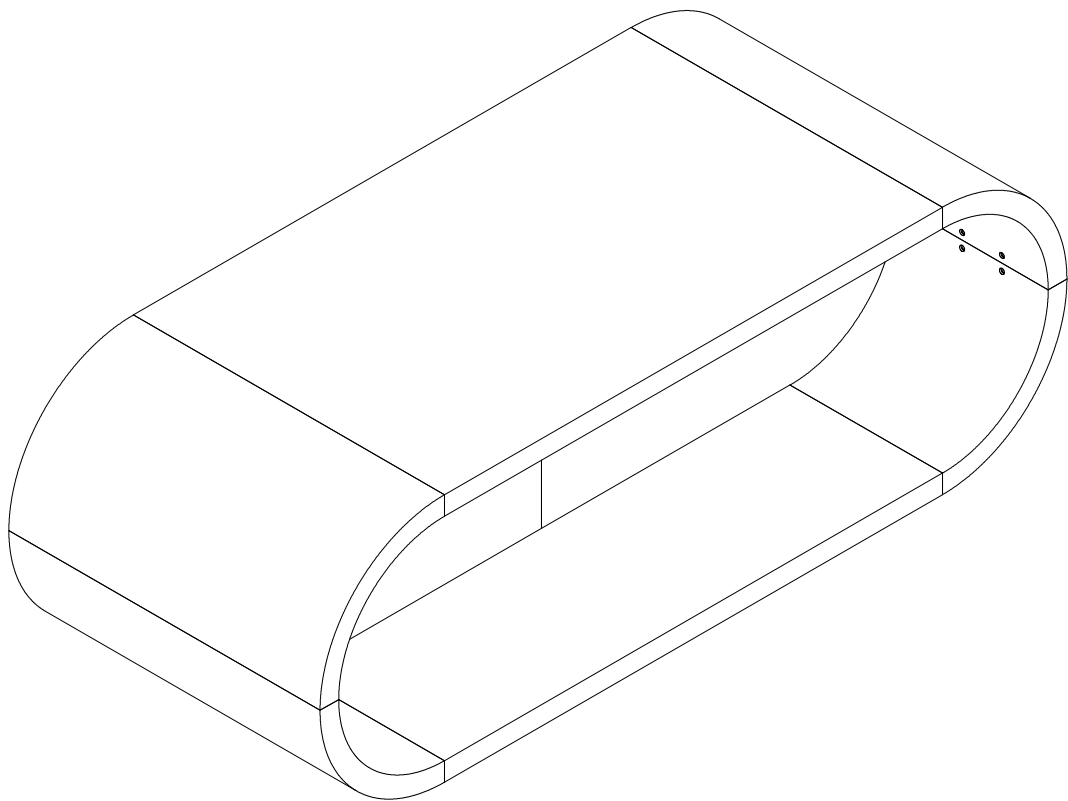

“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

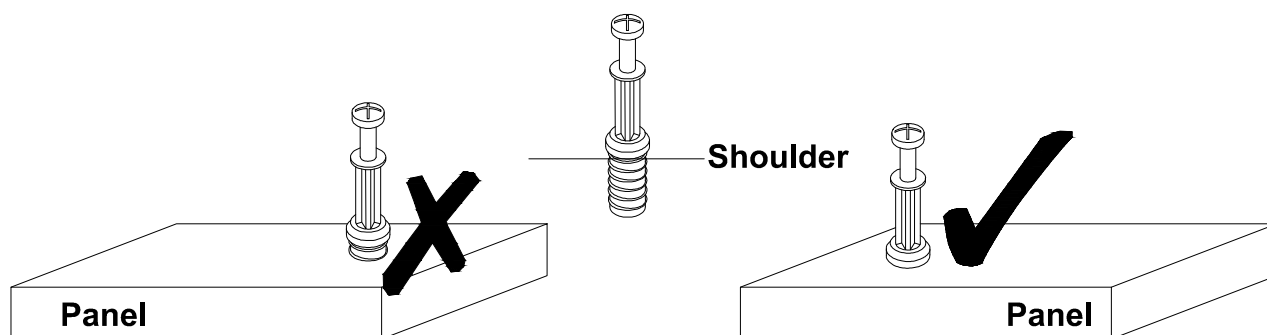


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

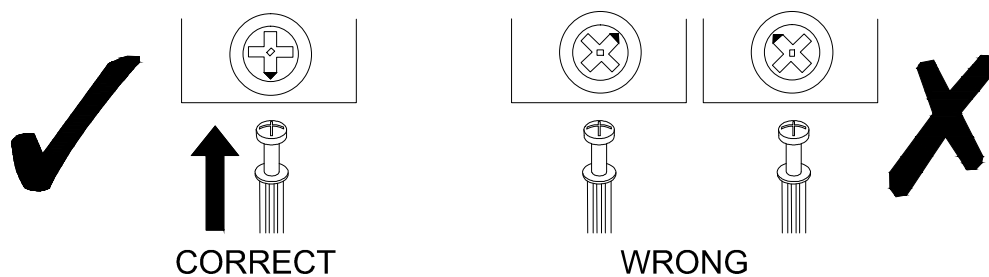


When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

"Ensure the arrow on the Cam Lock (B) is pointing towards the hole for the Cam Lock Dowel (A) before inserting."

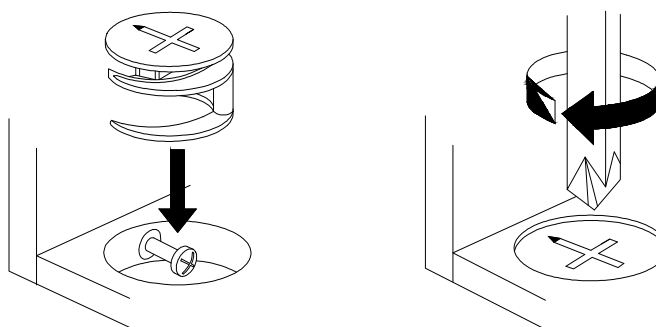

Turn cam lock clockwise to tighten.

Product structure

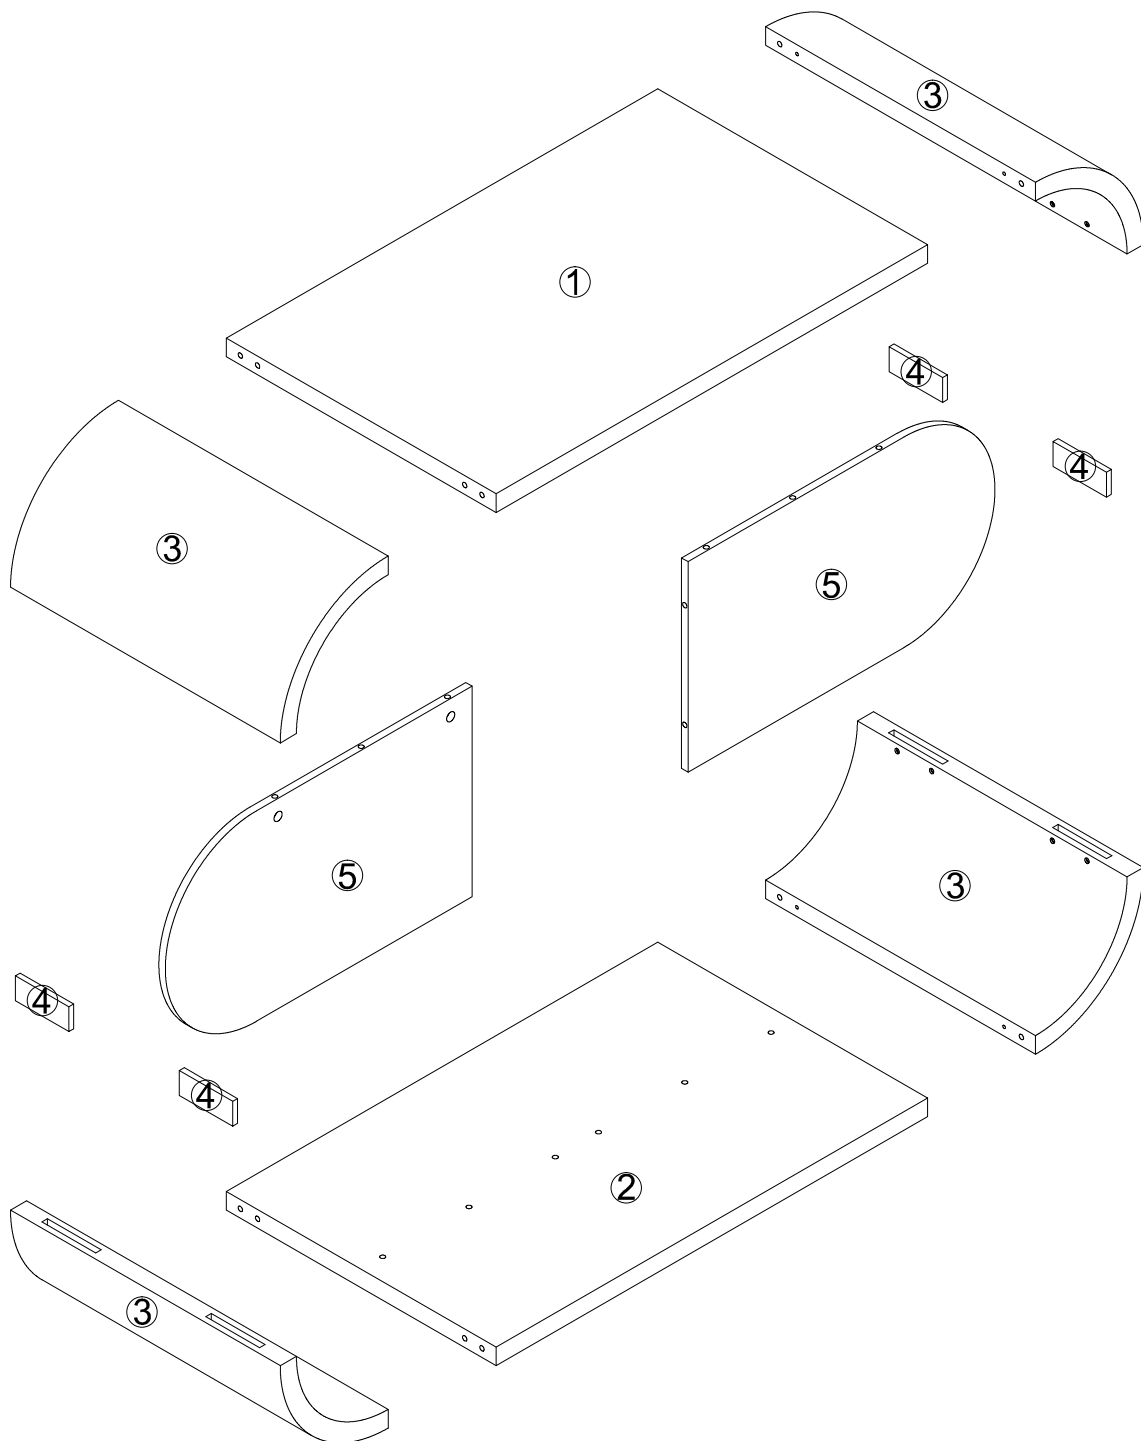

“Assemble on a soft surface, such as a carpet or the original packaging box, to avoid scratches to the panels.”


Part List



“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”


No. A

Quantity: 12 Pcs
Cam Lock Dowel
8*28mm



No. B

Quantity: 12 Pcs
Cam
φ15




No. C

Quantity: 12 Pcs
Sticker
Ø20




No. D

Quantity: 14 Pcs
Dowel
8*30mm



No. E

Quantity: 16 Pcs
Screw
M4*25mm




No. F

Quantity: 4 Pcs
Screw
M6*40mm



No. G

Quantity: 1 Pc
Allen Key
4#





No. H

Quantity: 4 Pcs
Foot Pad
Ø20




STEP 1

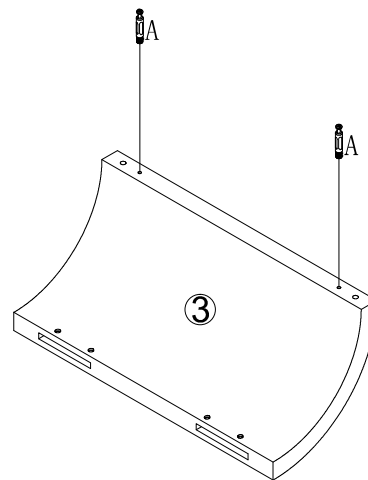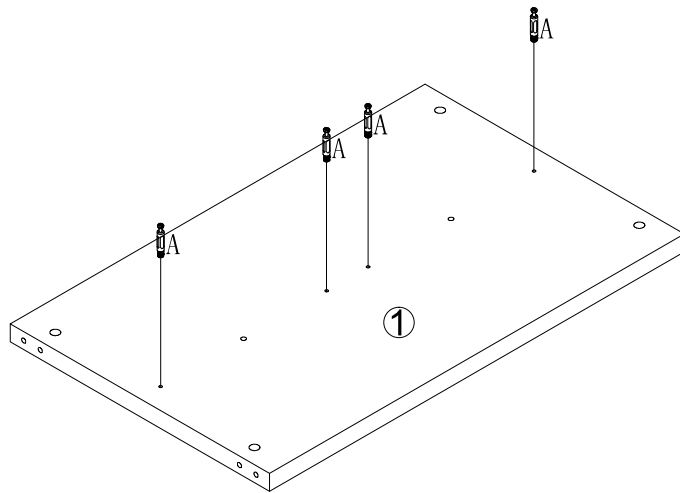


×4

No. A
Quantity: 12 Pcs
8*28 mm



STEP 2

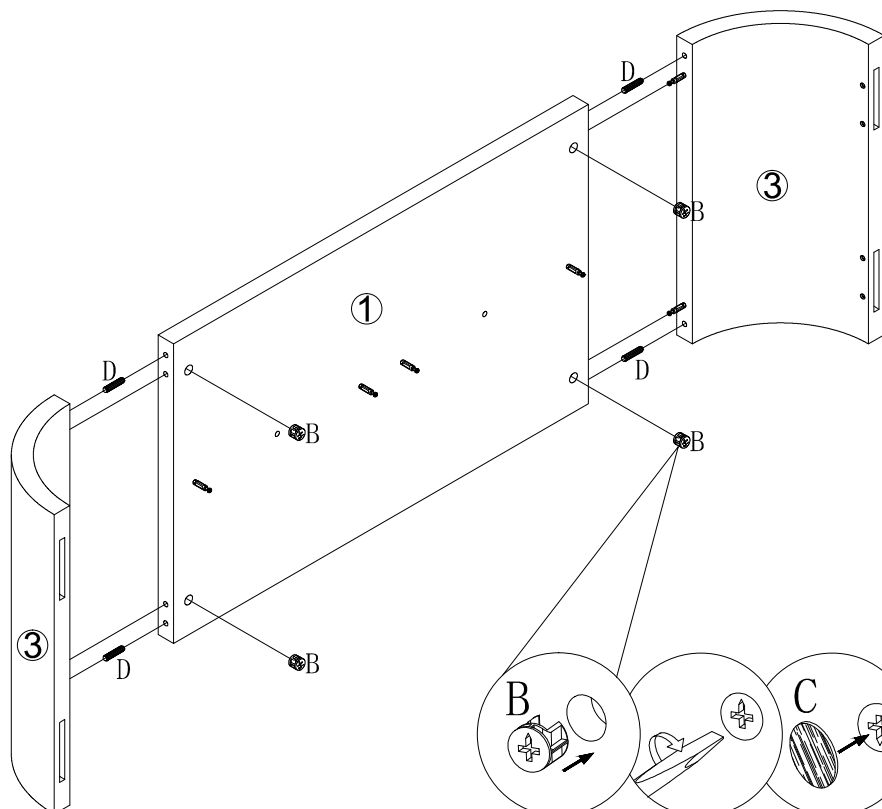


No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20



No. D
Quantity: 4 Pcs
8*30mm



STEP 3



No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20




No. D
Quantity: 4 Pcs
8*30mm

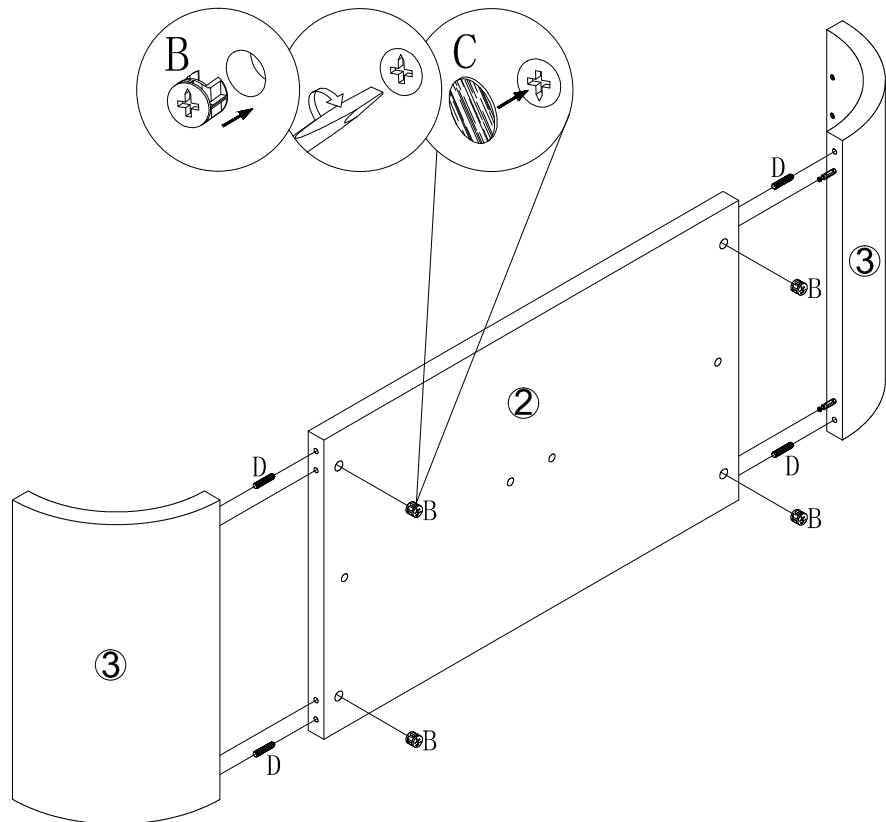

STEP 4

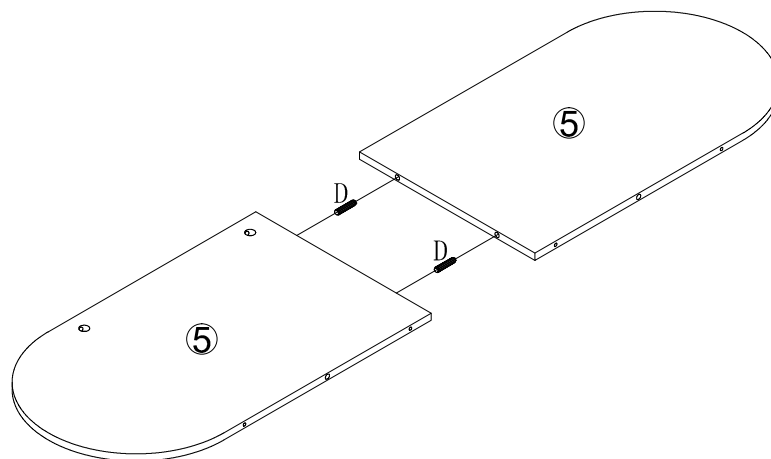

No. D
Quantity: 2 Pcs
8*30mm



STEP 5



No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20




No. D
Quantity: 2 Pcs
8*30mm

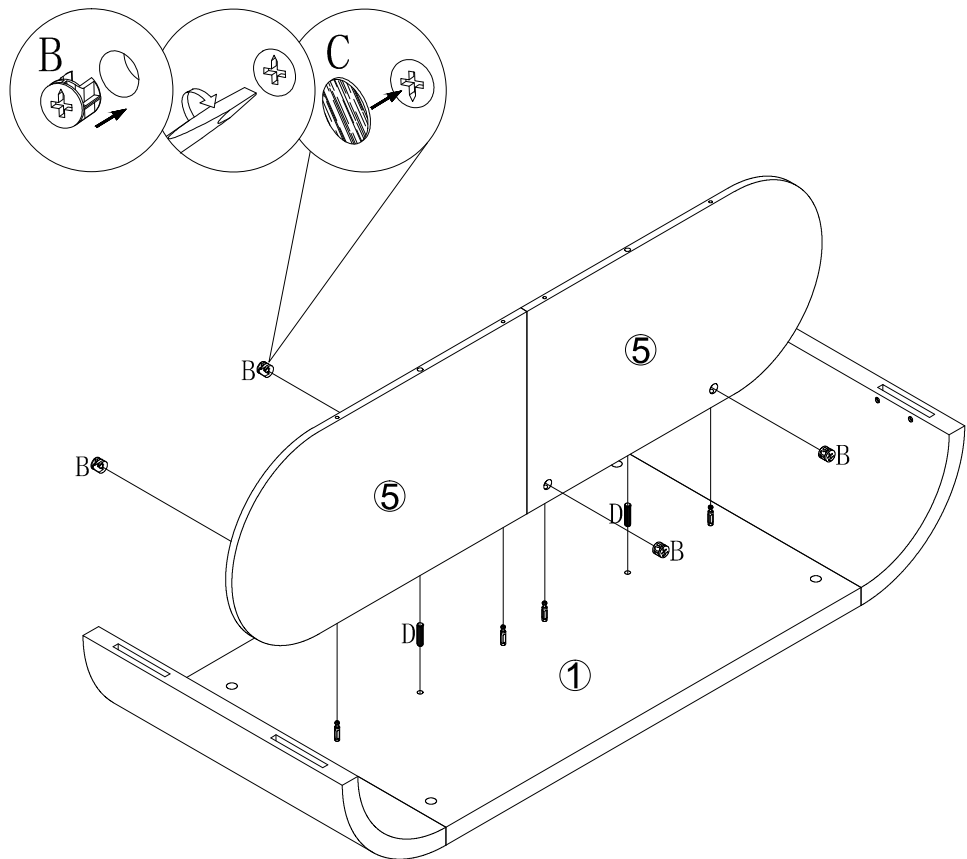

STEP 6



No. D
Quantity: 2 Pcs
8*30mm




No. F
Quantity: 4 Pcs
M6*40mm




No. G
Quantity: 1 Pc
4#

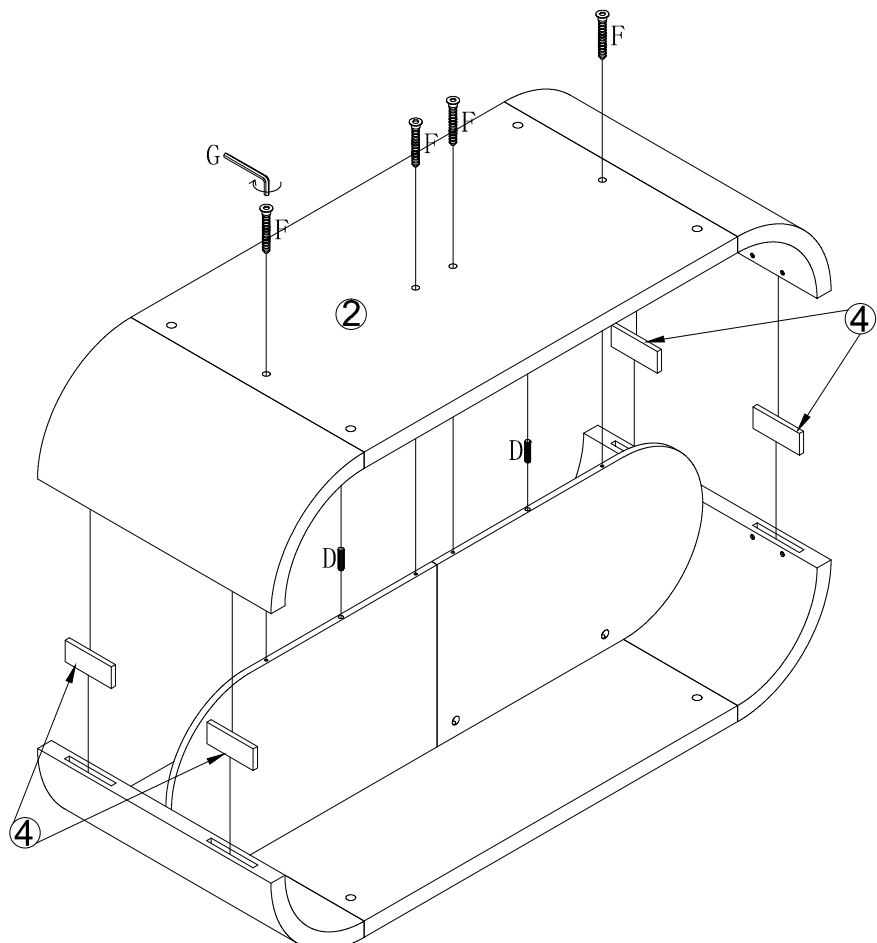


STEP 7

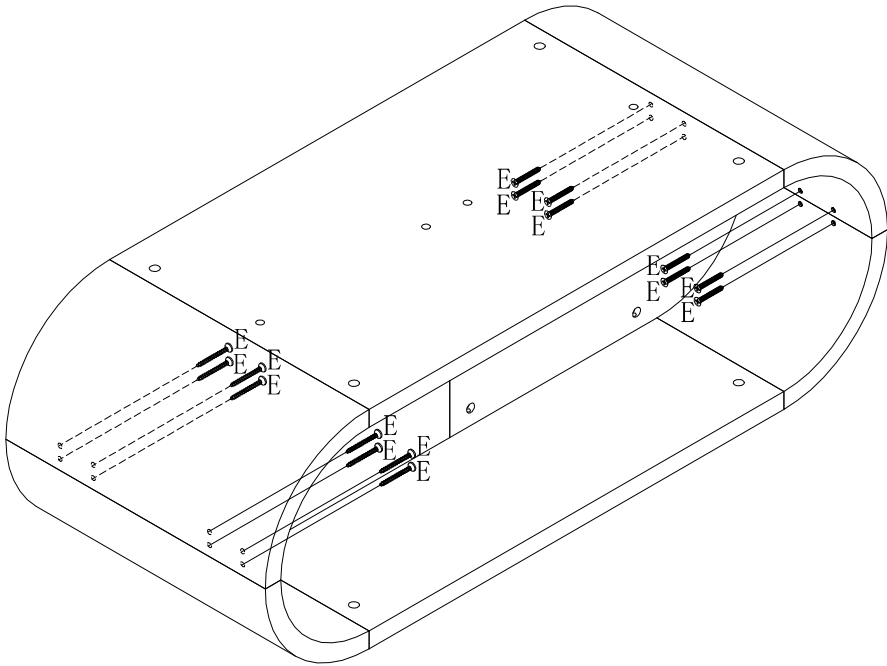

No. E
Quantity: 16 Pcs
M4*25mm



STEP 8

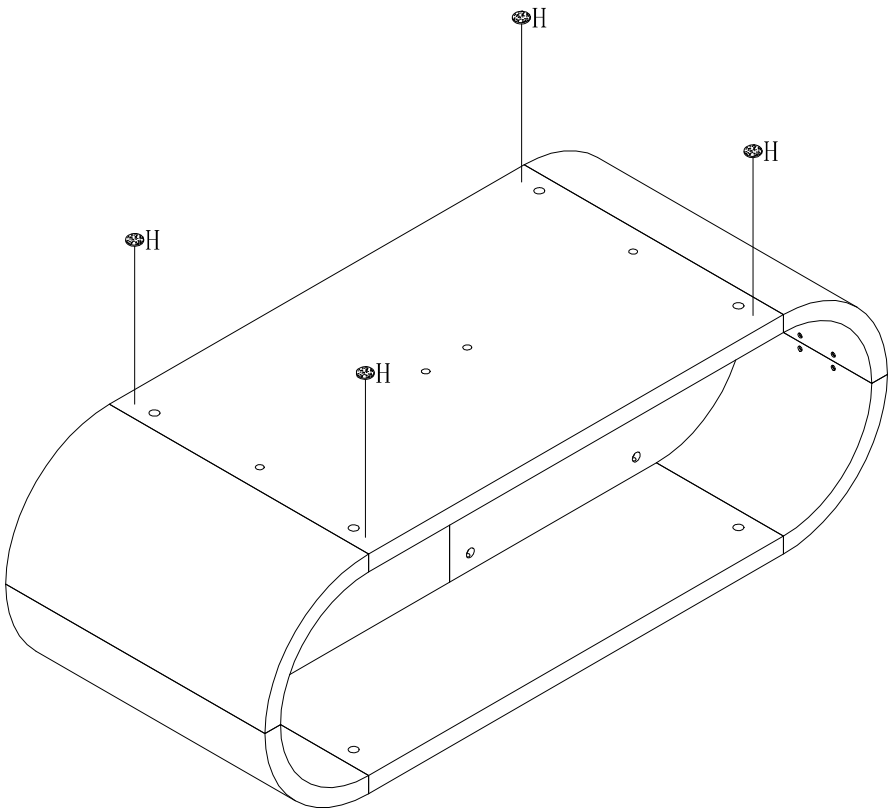

No. H
Quantity: 4 Pcs
Ø20

