


Assembling Guide

Thank you for choosing our product!

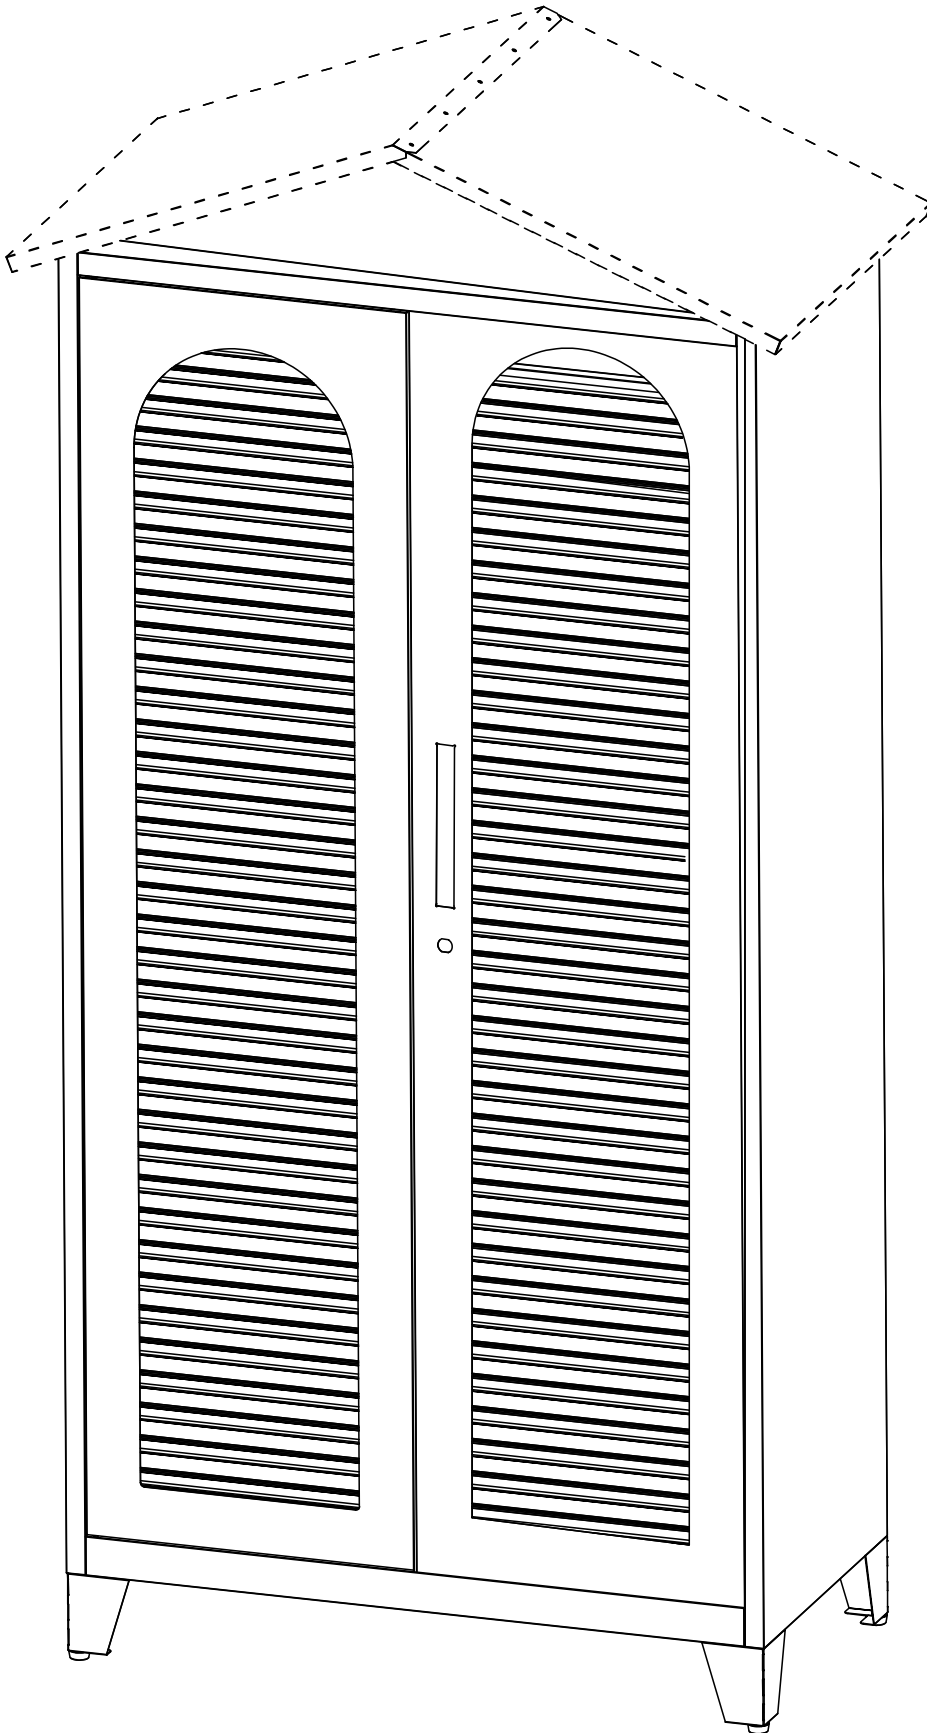

Assembling video



This is package A

This product comes in two packages. Please do not miss the other package.

Package A: Main Cabinet

Package B: Pointed Top



2 PERS



40 MINS



Thank you for lighting up another coordinate of our product on the map. We are committed to creating high-quality home living, making every household filled with warmth and comfort.






WARNING!







If furniture is tipped over, it may cause serious injury or even death. To prevent tip-over of this furniture, be sure to use it with the wall attachment devices provided. Use the appropriate screws and plugs for your wall.












If the supplied wall attachment devices do not match the walls in your home, consult your local professional to use screws and plugs that fit your walls. Please read and follow each step in the instructions carefully.

Please pay attention to the iron corner protectors and cabinet parts inside the package. If the iron corner guard is damaged, you can just discard it; if you find any broken or damaged cabinet parts, please contact customer service

immediately for replacement. Sharp edges of metal parts can cause serious injury.

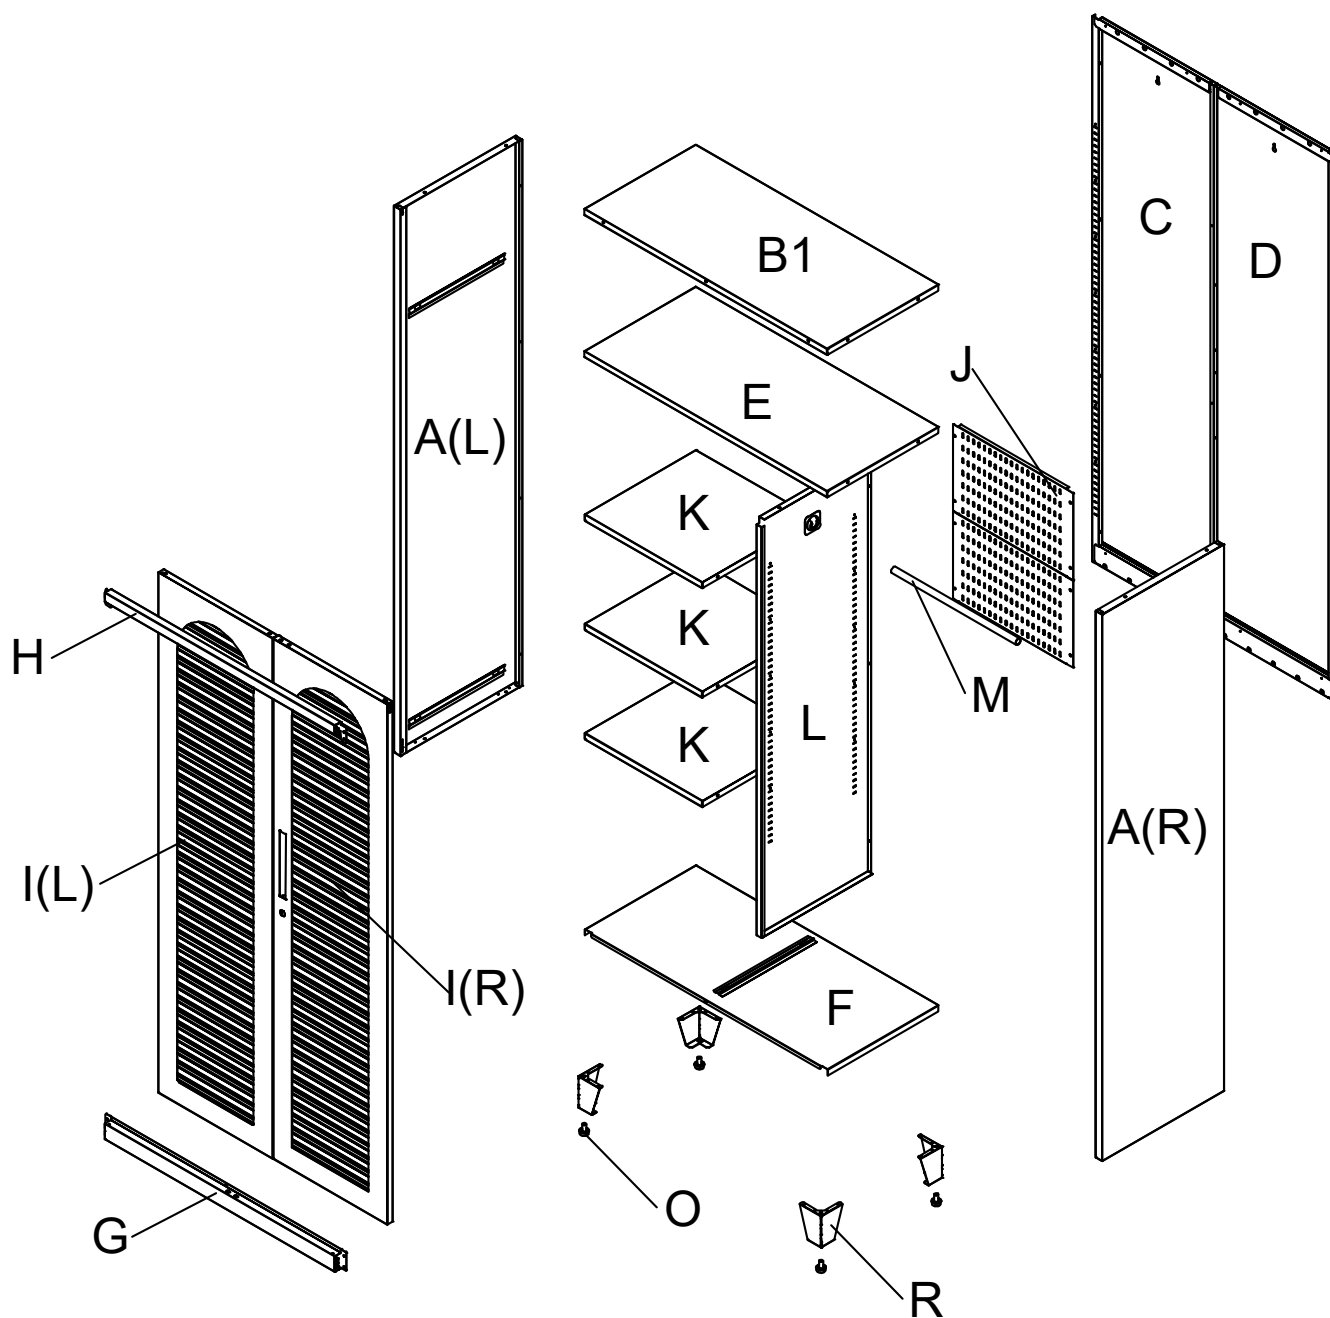

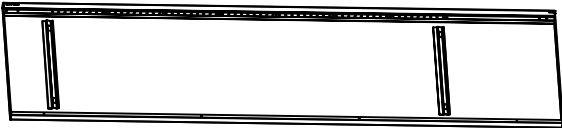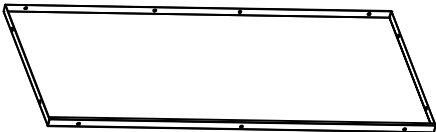
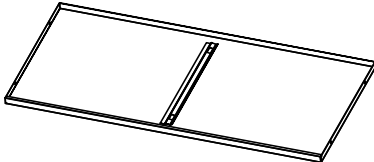
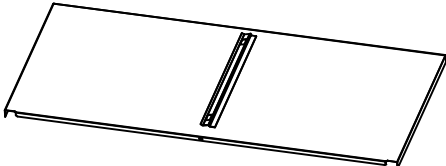
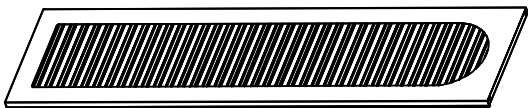
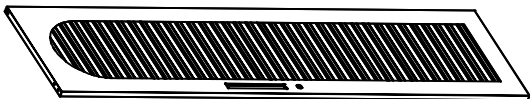
A(L)x1 Left Panel 	A(R)x1 Right Panel 
B1x1 Inner Top Panel 	Cx1 Left Back Panel 
Dx1 Right Back Panel 	Ex1 Upper Middle Shelf 
Fx1 Base Panel 	Kx3 Left Shelf 
Gx1 Bottom Frame Bar (Thicker) 	Hx1 Top Frame Bar (Thinner) 
I(L)x1 Left Door 	I(R)x1 Right Door 

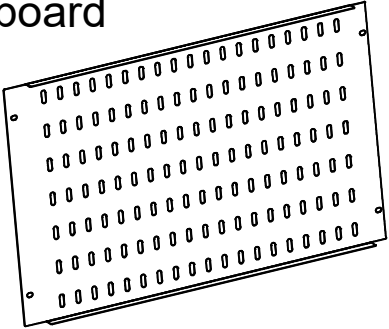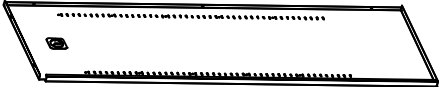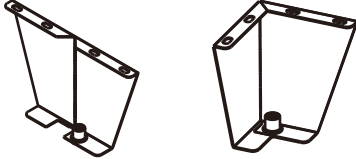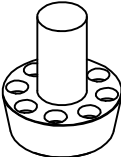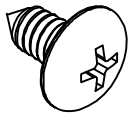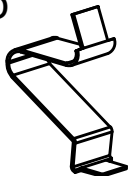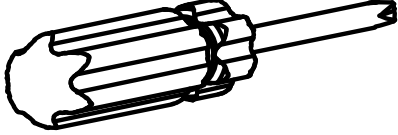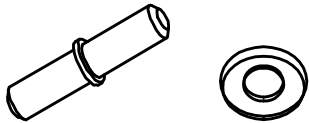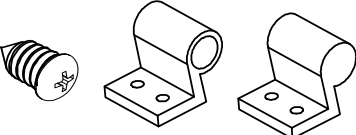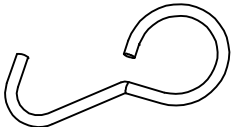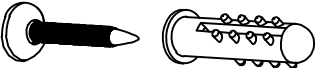Jx2 Pegboard 	Lx1 Middle Panel 	
Mx1 Inner Hanging Rod 	Rx4 Standing Foot 	
Ox4 Adjustable Foot 	Sx63 Screw 	
Tx12 Shelf Clip 	Screwdriver  *It would be better if you could use power tools for installation.	
Yx2 Hinge and Gasket 		
Z1x2 Towel Hanging Rob Slot 	Z2x1 Towel Hanging Rob 	
M1x5 Pegboard Hook 	M2x3 Rob Hook 	Vx2 Expansion screws 

STEP 1 Install the backs.






Attach D to C, and secure with 4 S screws.

Sx4

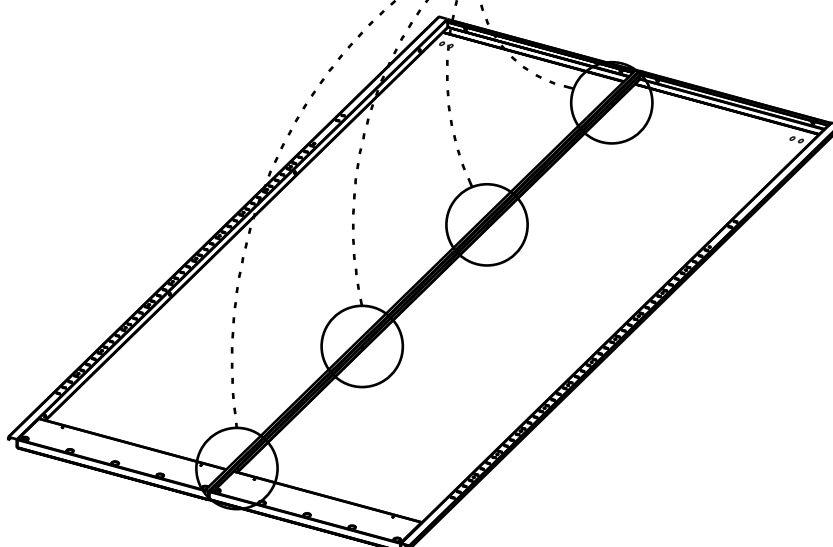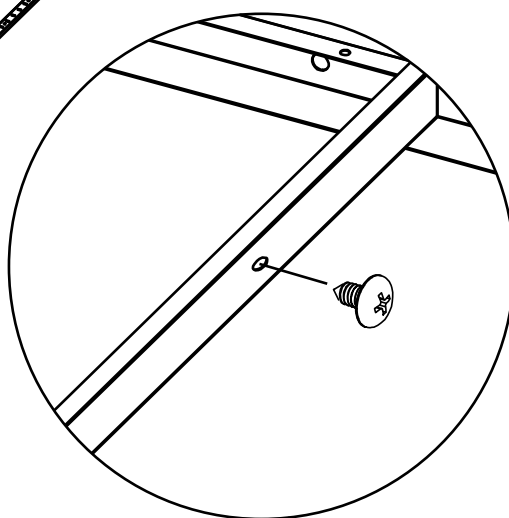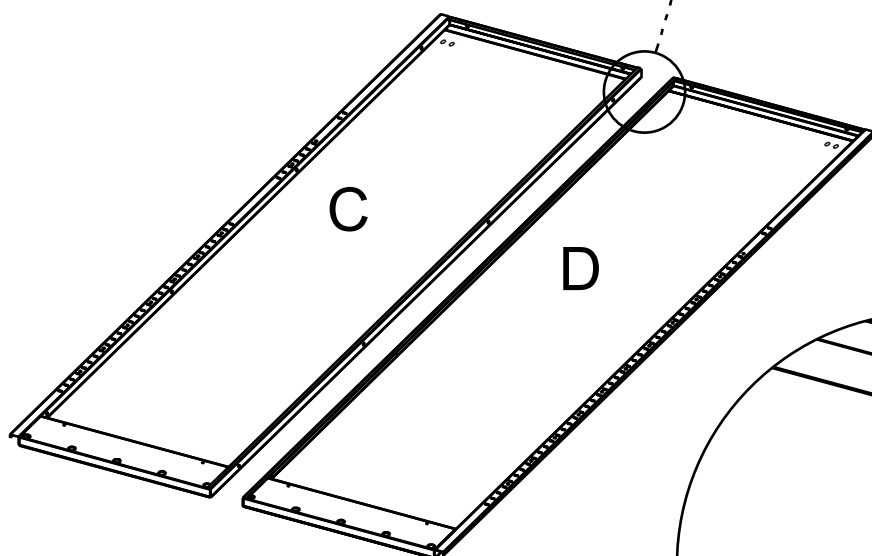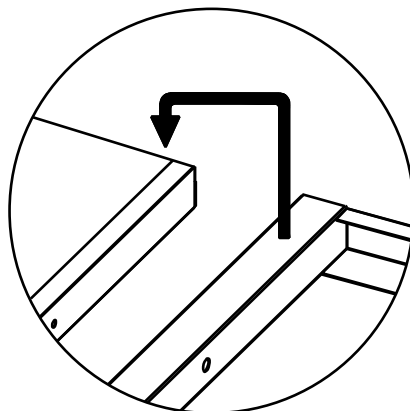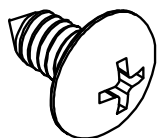


Attach A(L) and A(R) to the back, and secure with 8 S screws.

Sx8

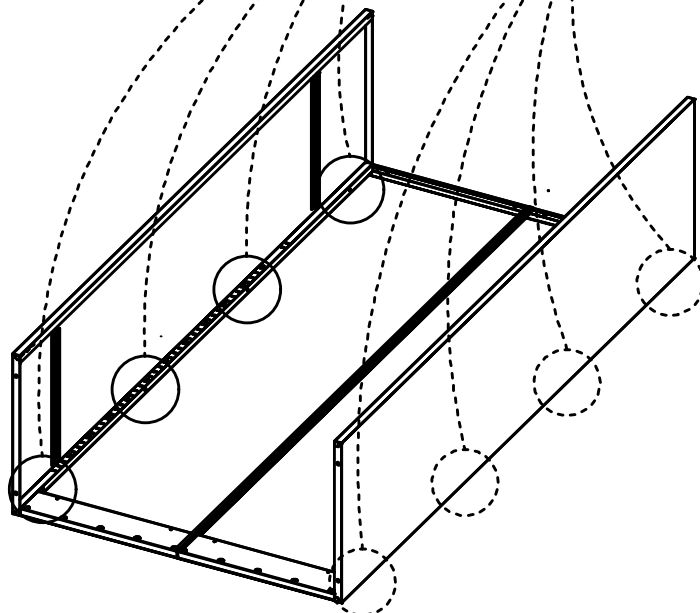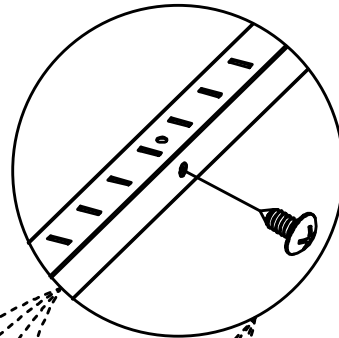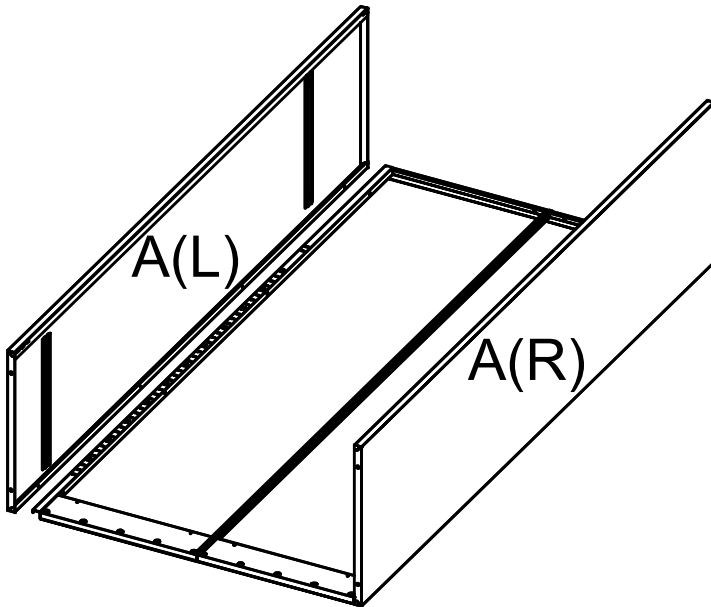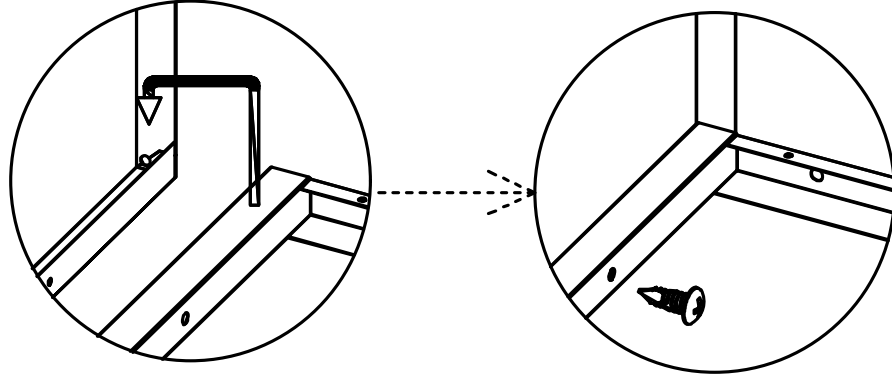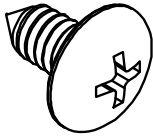


STEP 3 Install the top and bottom frame bar.

Hook in H and G into sides, and secure with 8 S screws.

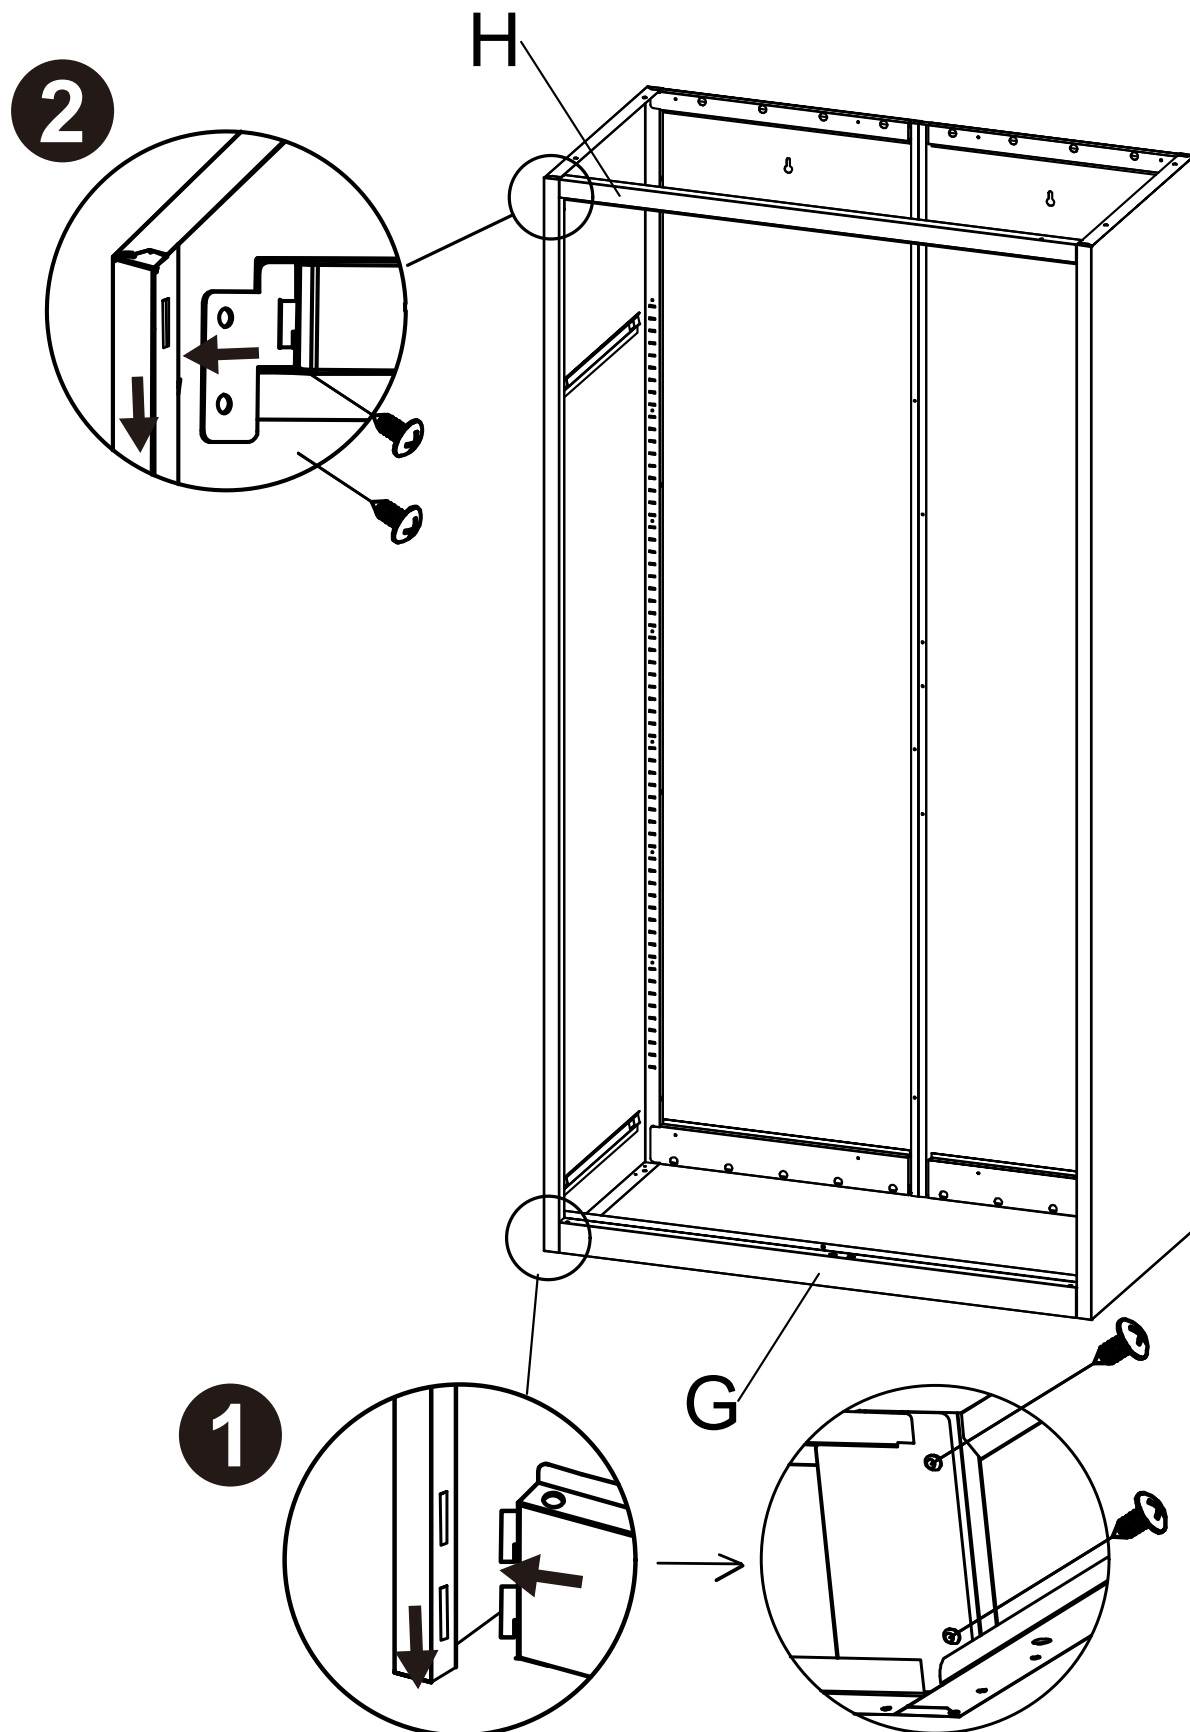


STEP 4 Install the top and bottom panels .

Put F in, lift B1 up and secure with 11 S screws.

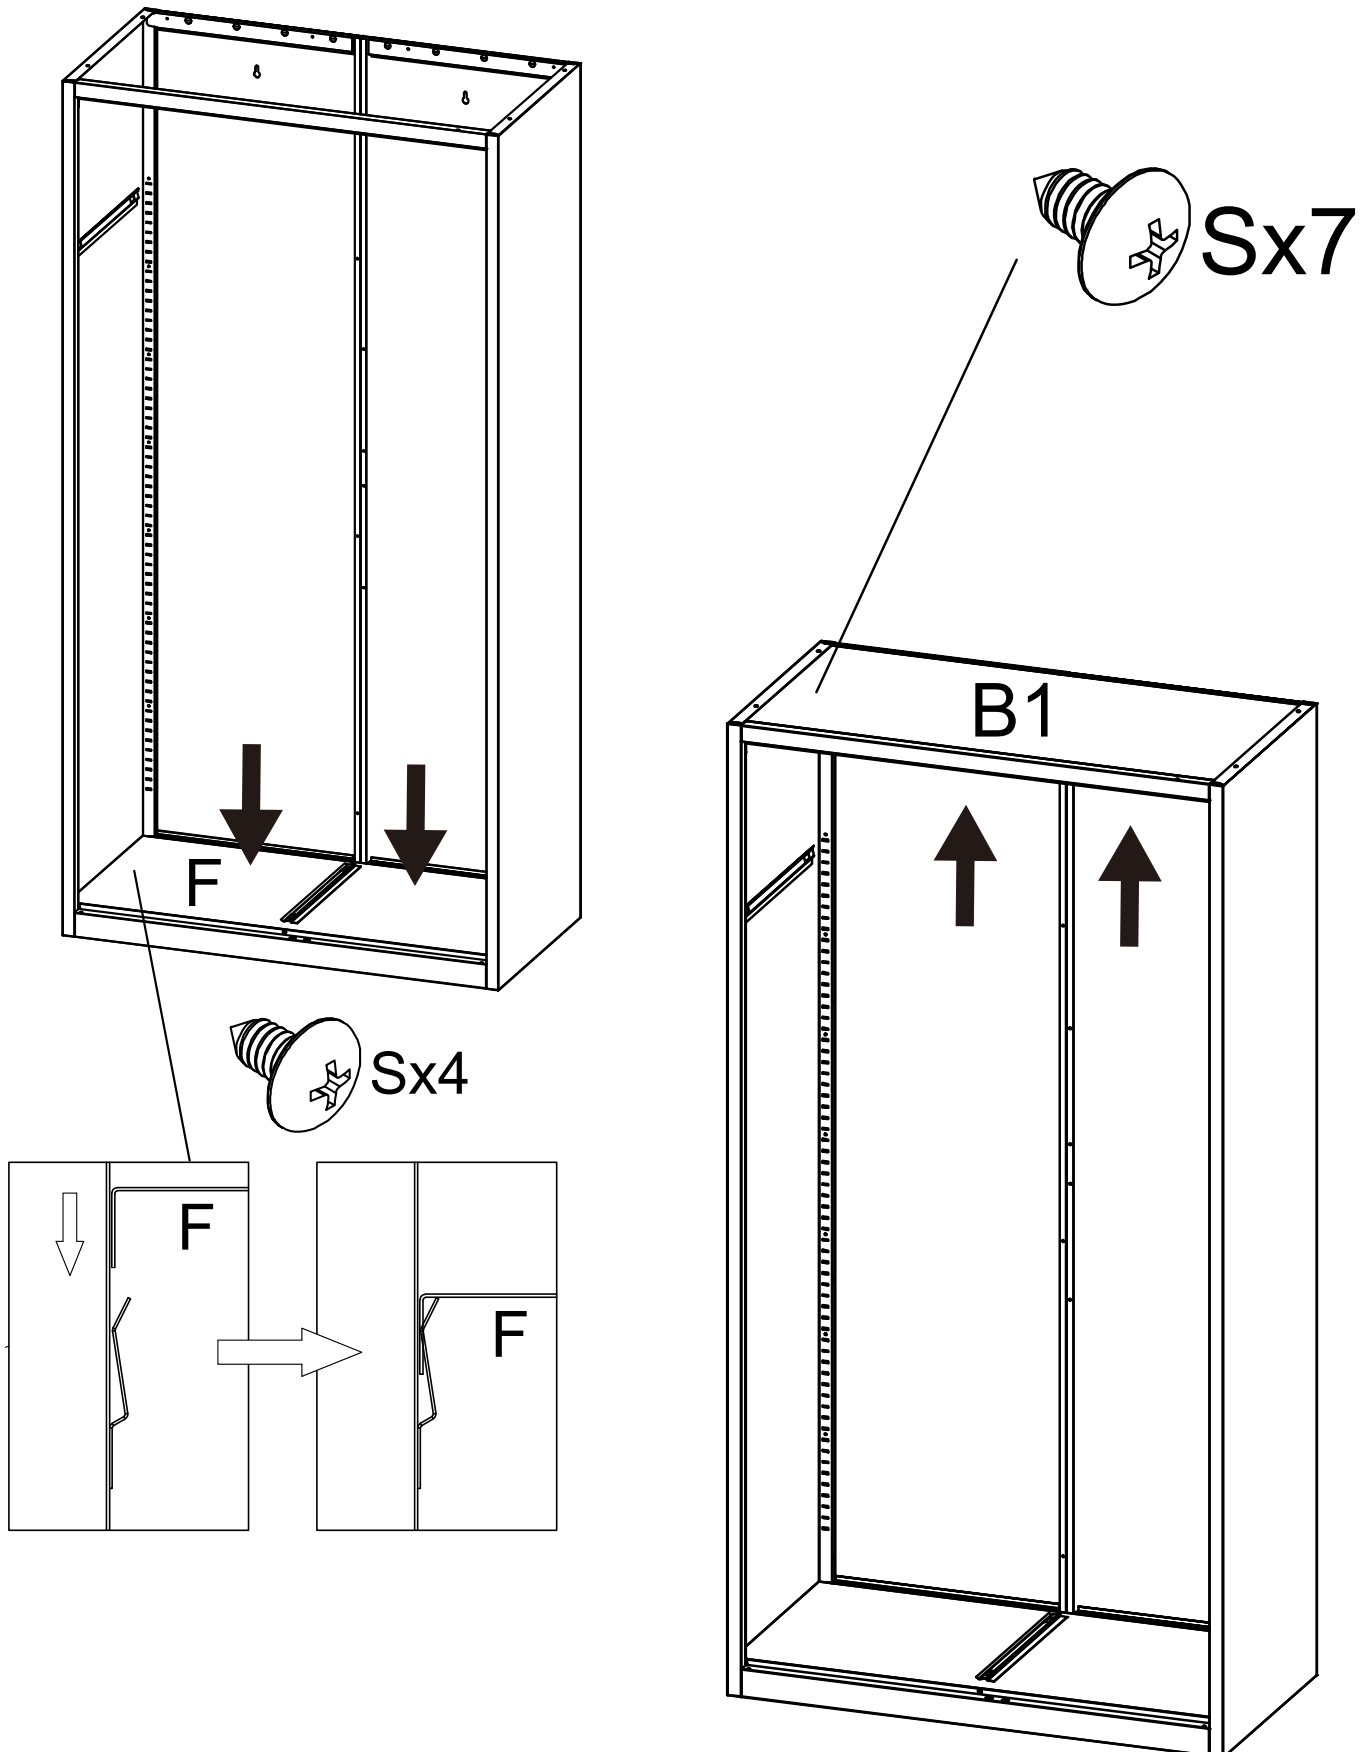





STEP 5 Install the foot stand and adjustable foot.

If the height is perfect for you, then no need to install the feet, you can skip this step.

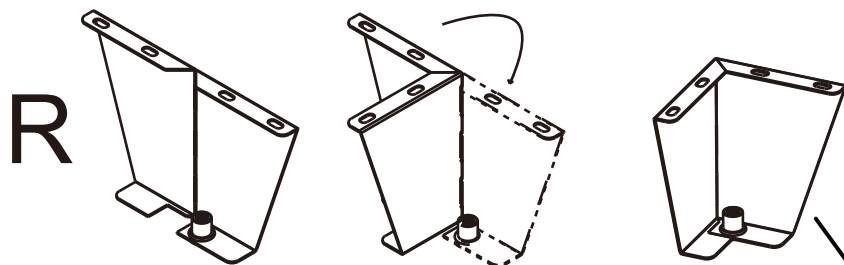

Manually bend the standing foot R into shape and twist the adjustable foot O in.



Sx16

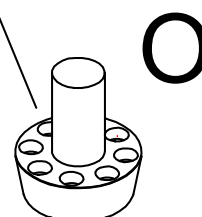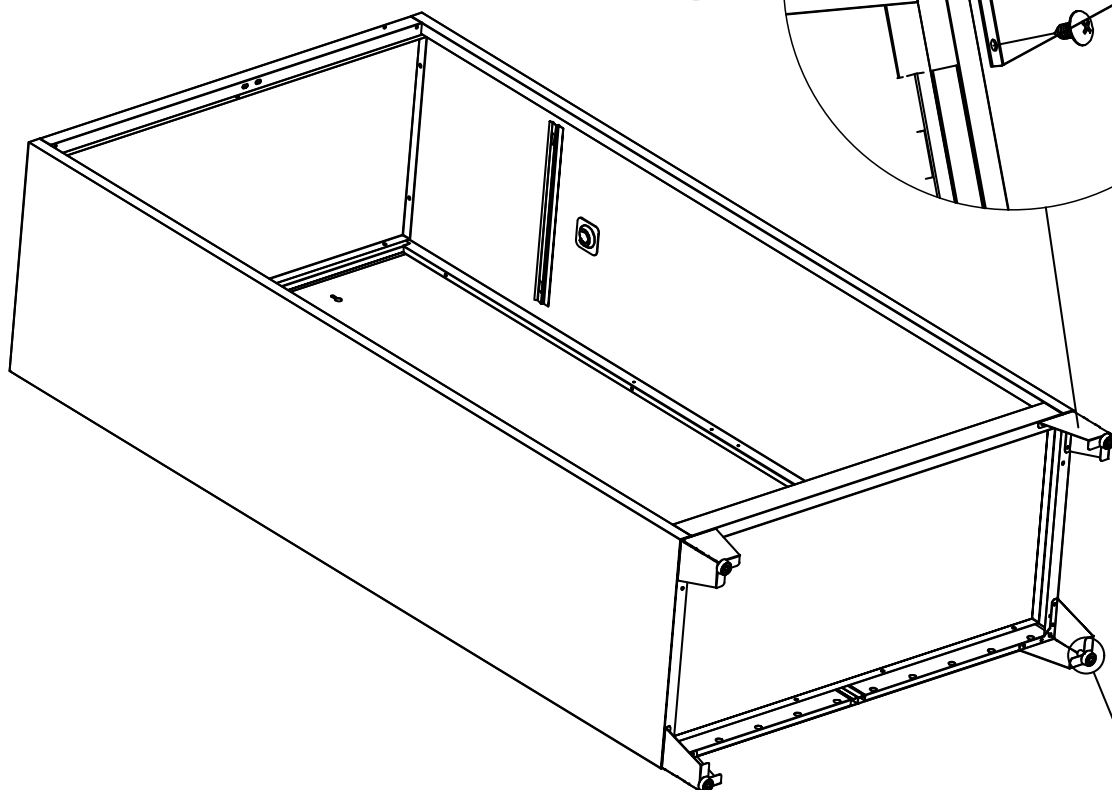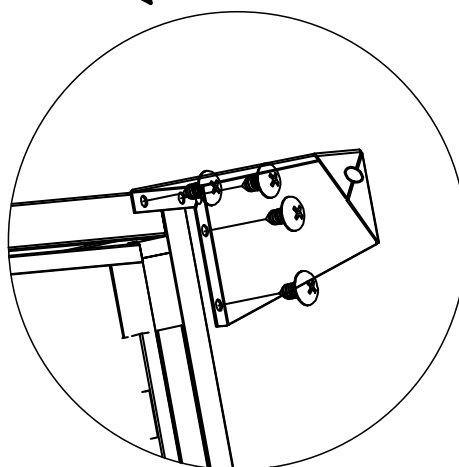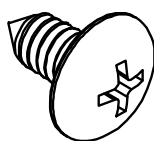



Step 6 Install the upper middle shelf and middle panel.

Hook E into sides, then put L in and secure with 3 S screws.

1

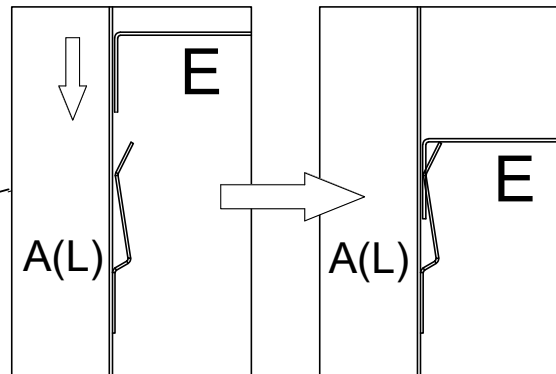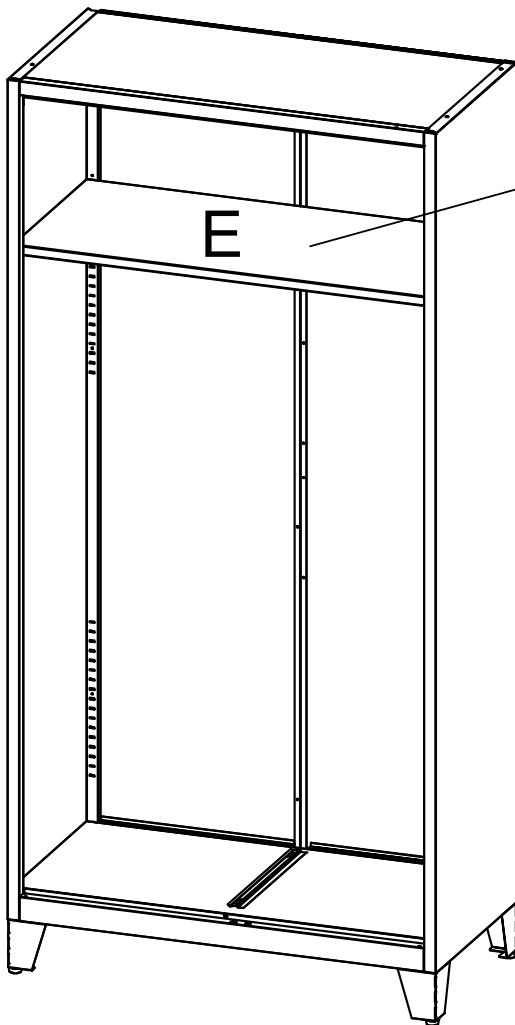


2 Please ensure that the base of the clothes rod is facing to the right.

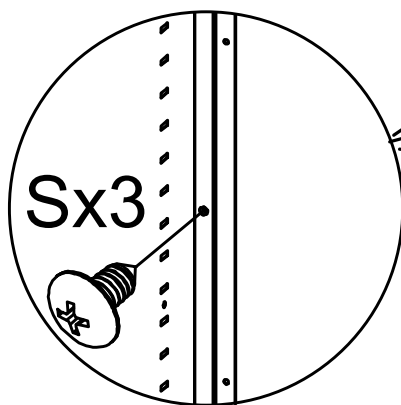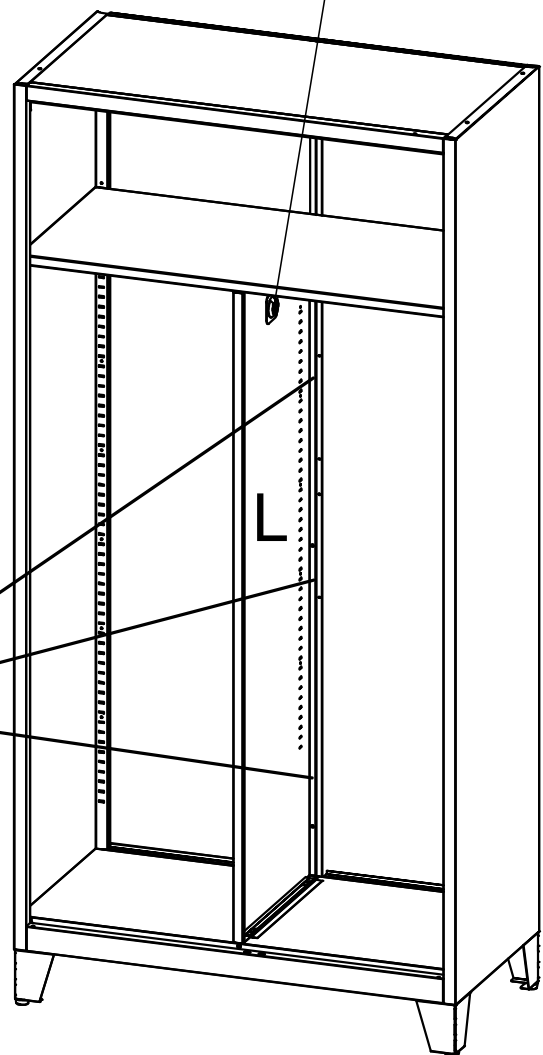


STEP 7 Install the left shelf.




First to clip T in and then put K on it.

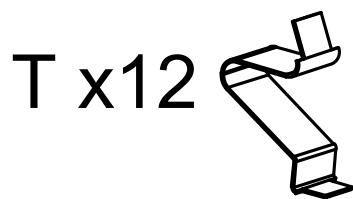

1. Insert bending side first
2. Fall down the flat side to secure

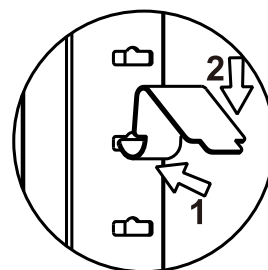


Now shelf can safely sits on it.

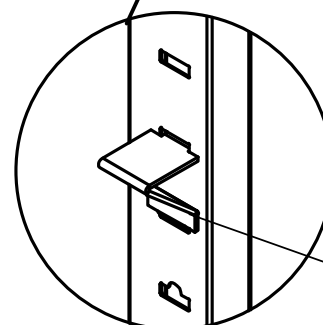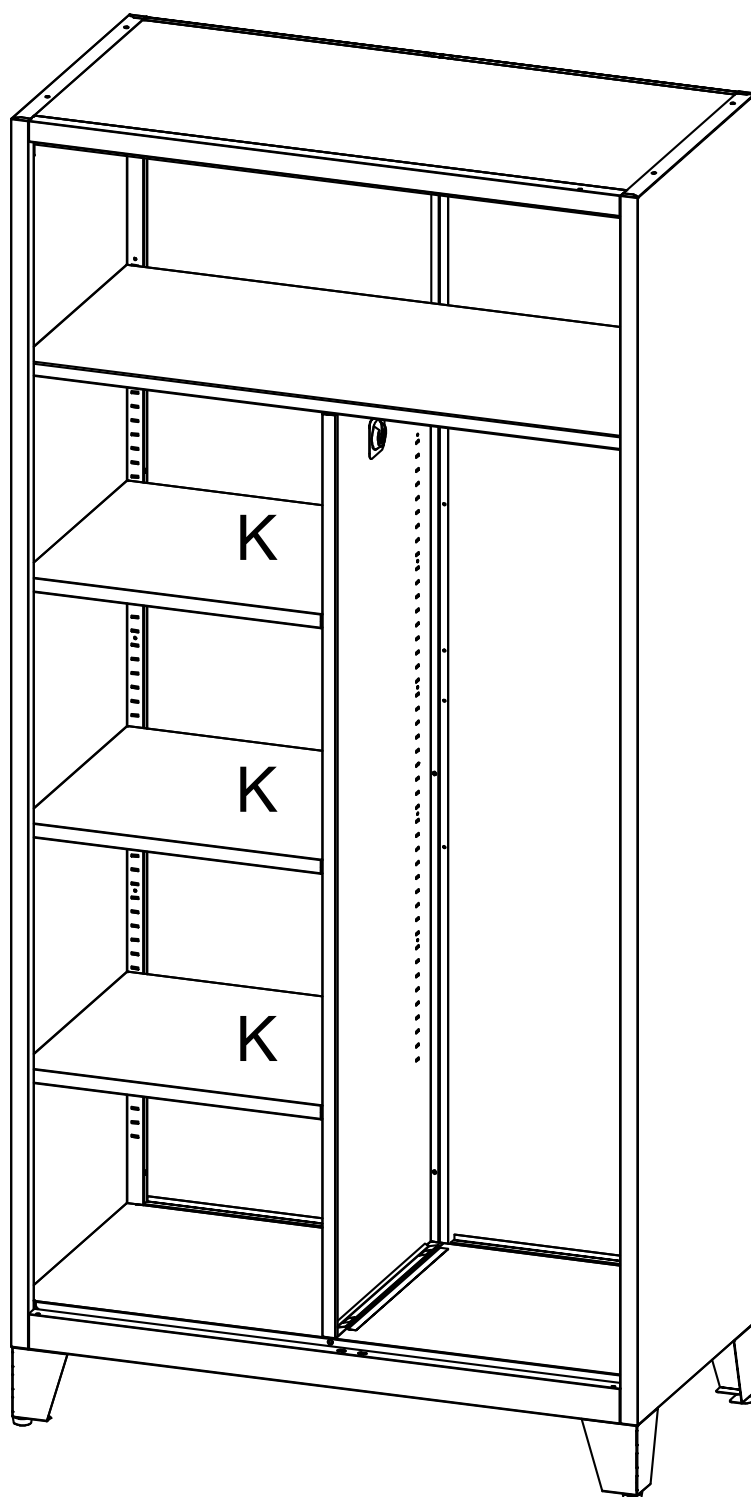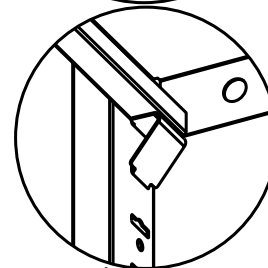

Tx12


Make sure the clips at 4 corners are at the same height.

Sx8

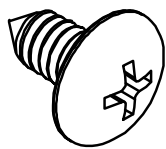



STEP 8 Install the Pegboard.

Put J on the right back panel with 8 S screws.

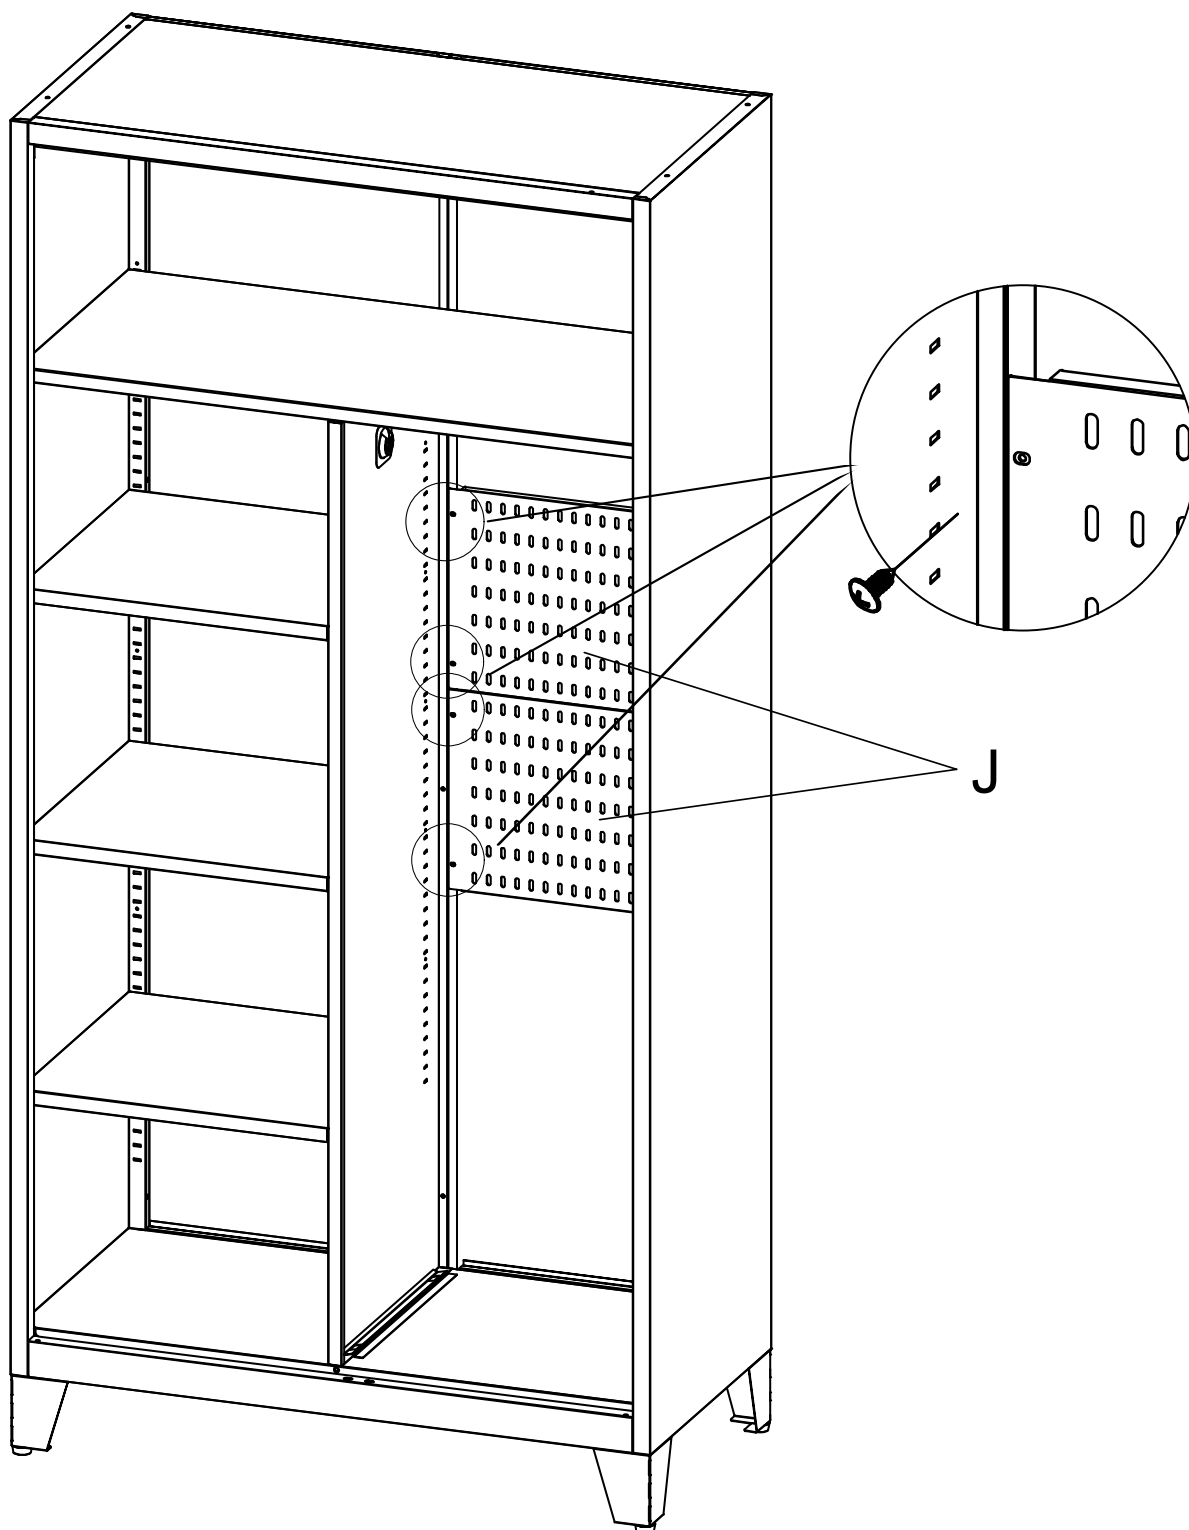

STEP 9 Install the hanging rod and pointed top.



First put M in, then attach B3 to B2 with 5 S screws. Finally, put the pointed top (from package B) on B1.

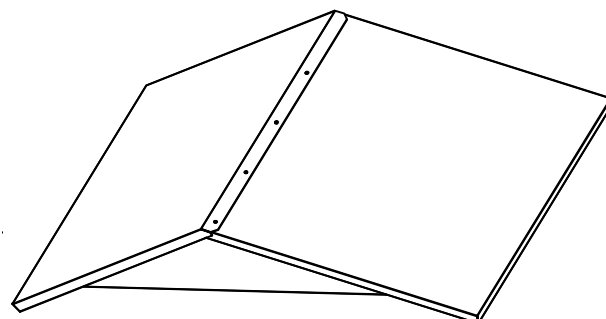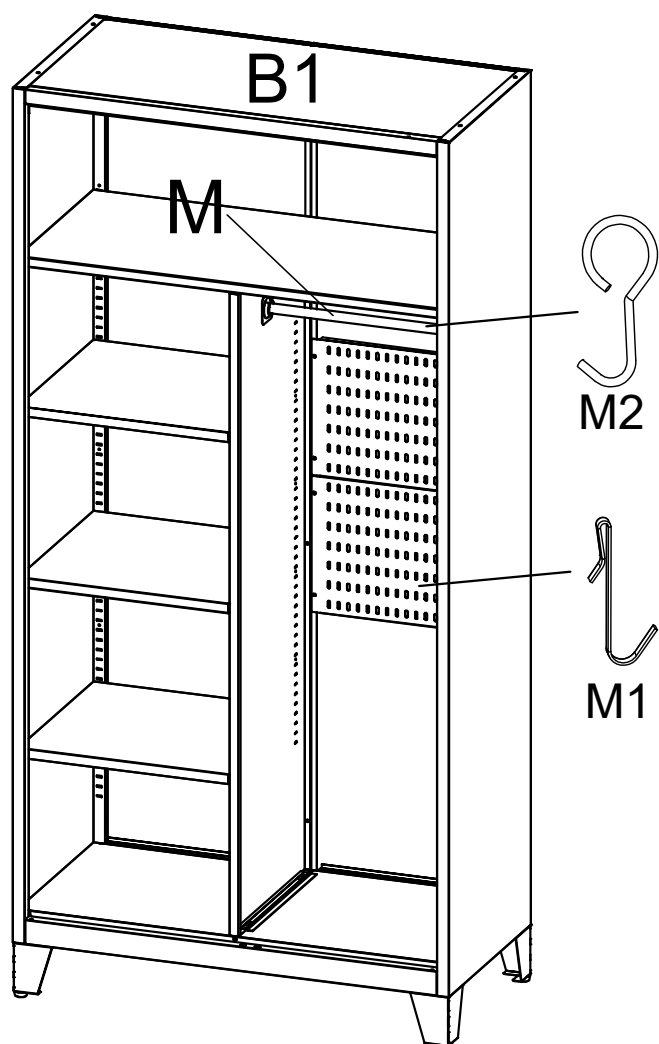

Assemble the pointed top from **package B**



Sx4

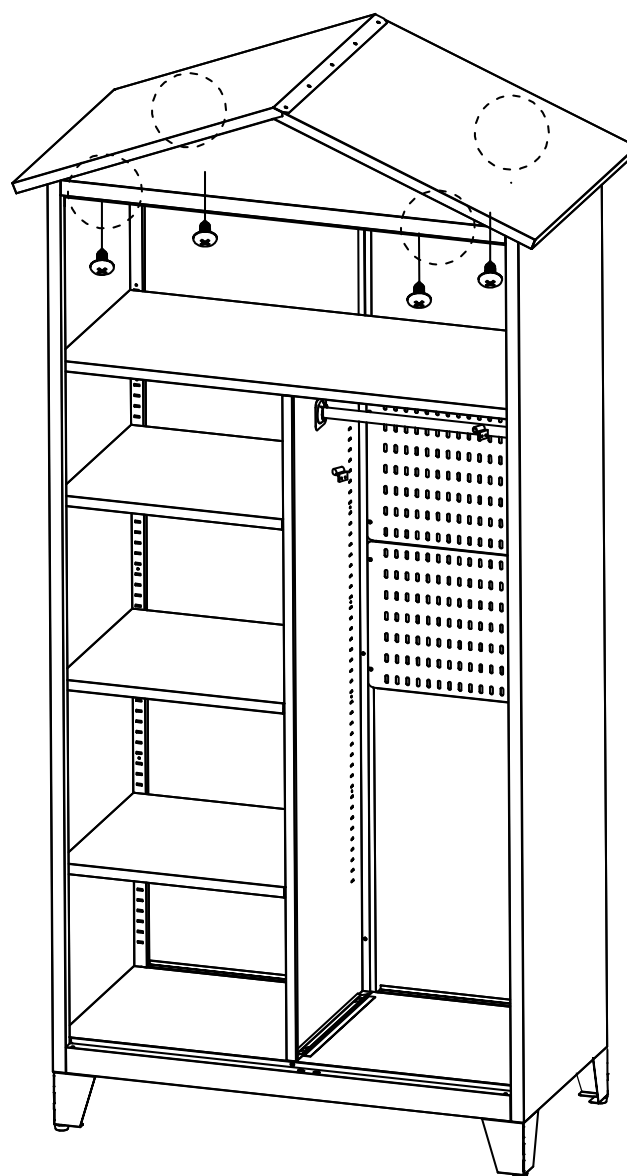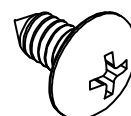


2

STEP 10 Install the doors.


1. First to insert Y (you may need to add 1-2 gaskets) into the holes on bottom frame bar,
2. Then press down the top hinge spring to put the l(L)&l(R) in.
3. Install Z1 and Z2.

If you can't find the top hinge spring, it may have been pressed into the door frame. Simply use a screwdriver to gently pry it out.

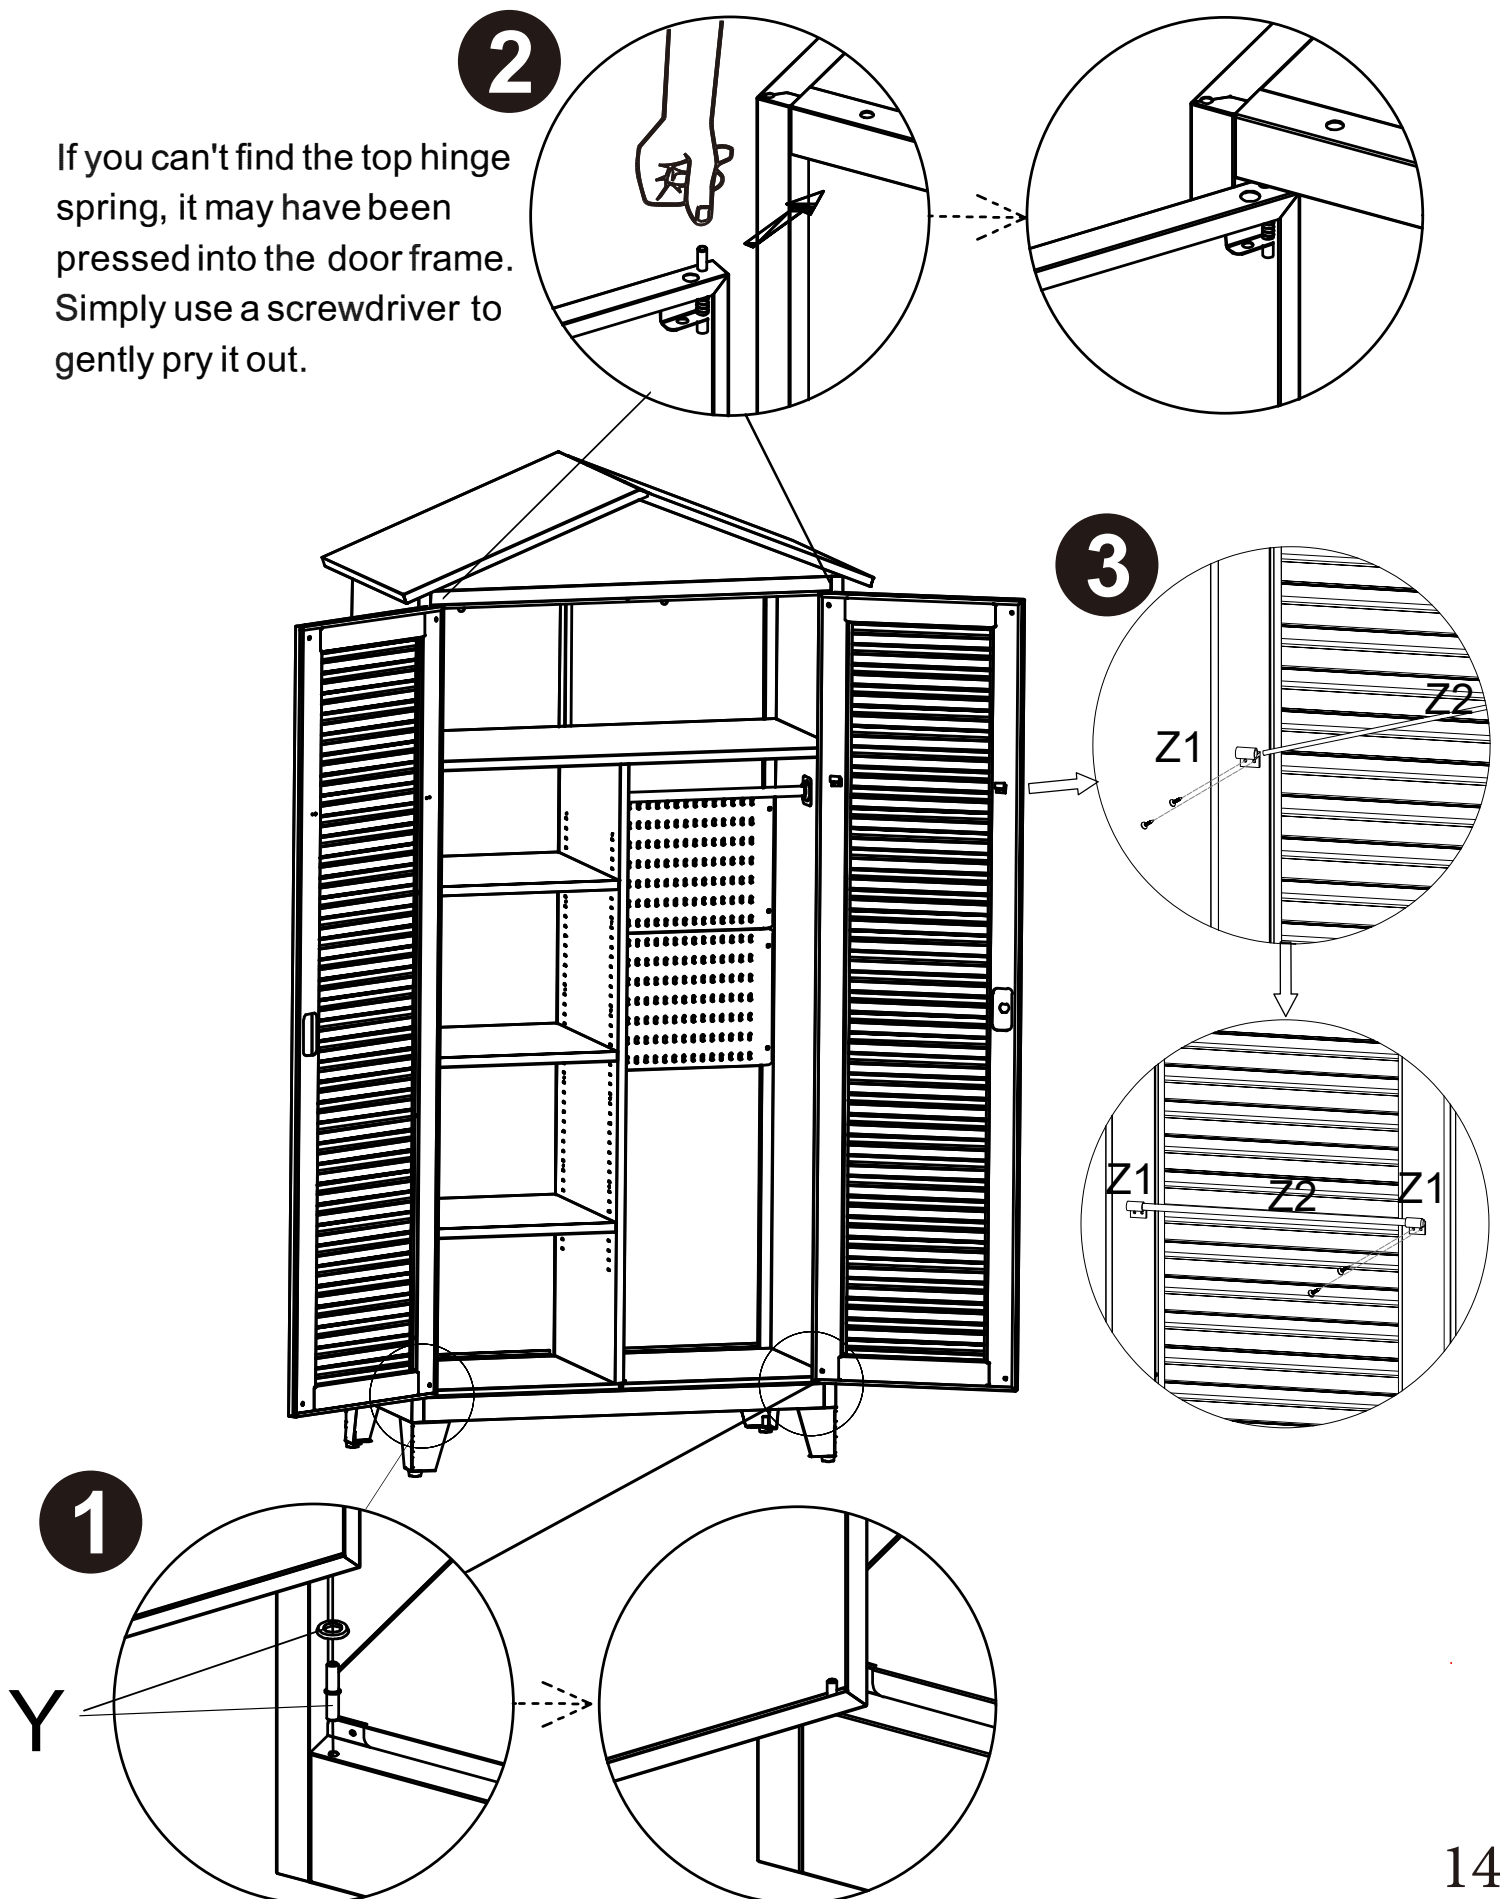


STEP11 Install the Expansion screws.


The cabinet can be fixed to the wall as needed.

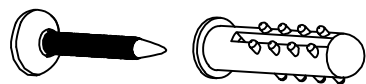


V x2

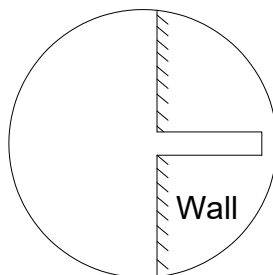

1. Drill holes on the wall

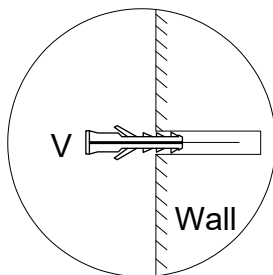

2. Insert V

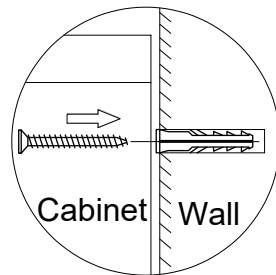

3. Fasten the screw from cabinet

